


# ASSEMBLY INSTRUCTIONS


## T/T Low Loft Bottom Bed

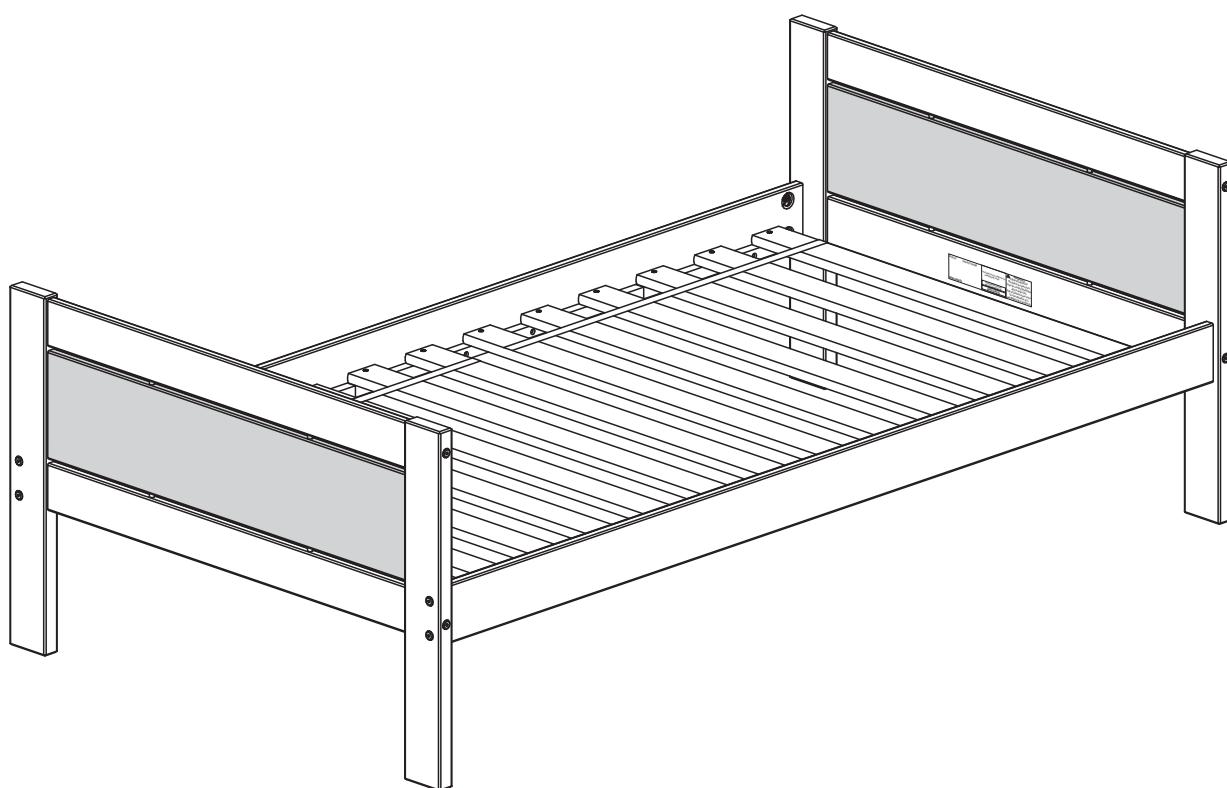



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


**"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"**

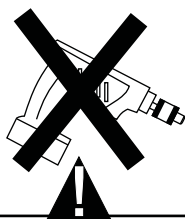


\* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!  
\* Please assemble on a clean soft surface to avoid damage.

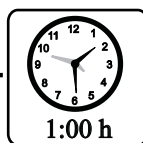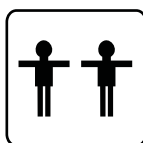

### Tools Required



(Not included)



(Not included)

### IMPORTANT:


**PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY**

Part list: T/T Low Loft Bottom Bed










PRODUCT: T/T LOW LOFT BOTTOM BED MADE IN BRAZIL	CALIFORNIA 130.756 COMPLIANT FOR FORMALDEHYDE PHASE 2	<b>WARNING</b> California Proposition 65 This product can expose you to chemicals, including formaldehyde which is known to the State of California to cause cancer. For more information, go to <a href="http://www.P65Warnings.ca.gov/furniture">www.P65Warnings.ca.gov/furniture</a>
	FOR RESIDENTIAL USE ONLY NOT FOR COMMERCIAL USE	
	MADE IN BRAZIL	

**MANUFACTURER LABEL**

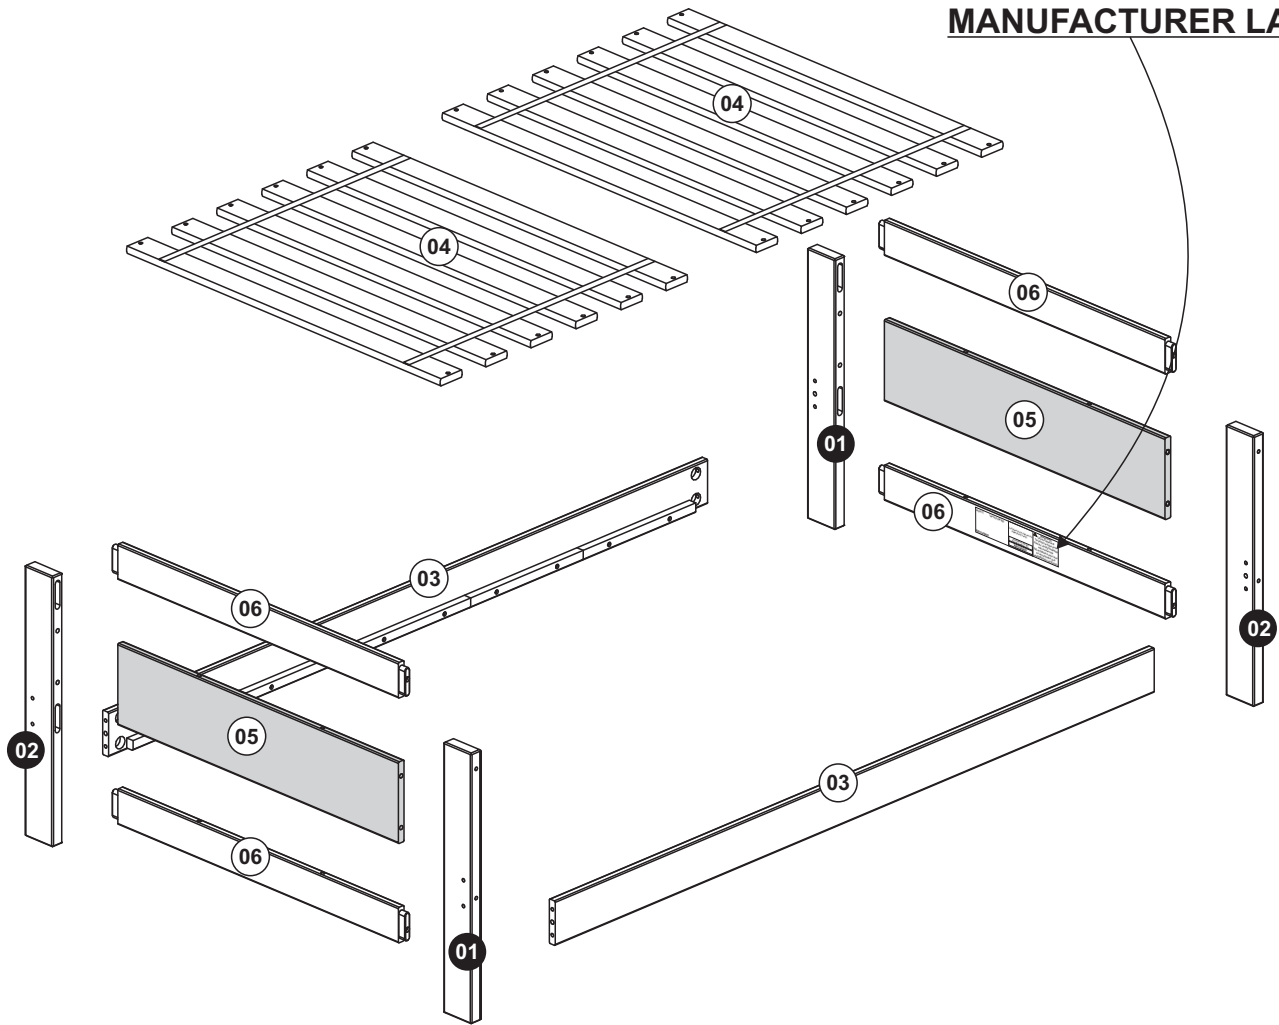

**Identifying the Hardware**-Identify the hardware using the illustrations below.

<b>A</b>	 Ø10x40mm	<b>12</b>	<b>E</b>	 4mm	<b>01</b>
<b>B</b>	 White Connection	<b>08</b>	<b>F</b>	 Ø4x30mm	<b>24</b>
<b>C</b>	 Ø7x110mm	<b>08</b>	<b>G</b>		<b>08</b>
<b>D</b>	 1/4x70mm	<b>08</b>			




# 01

**A**


Ø10x40mm

**12****B**



White Connection

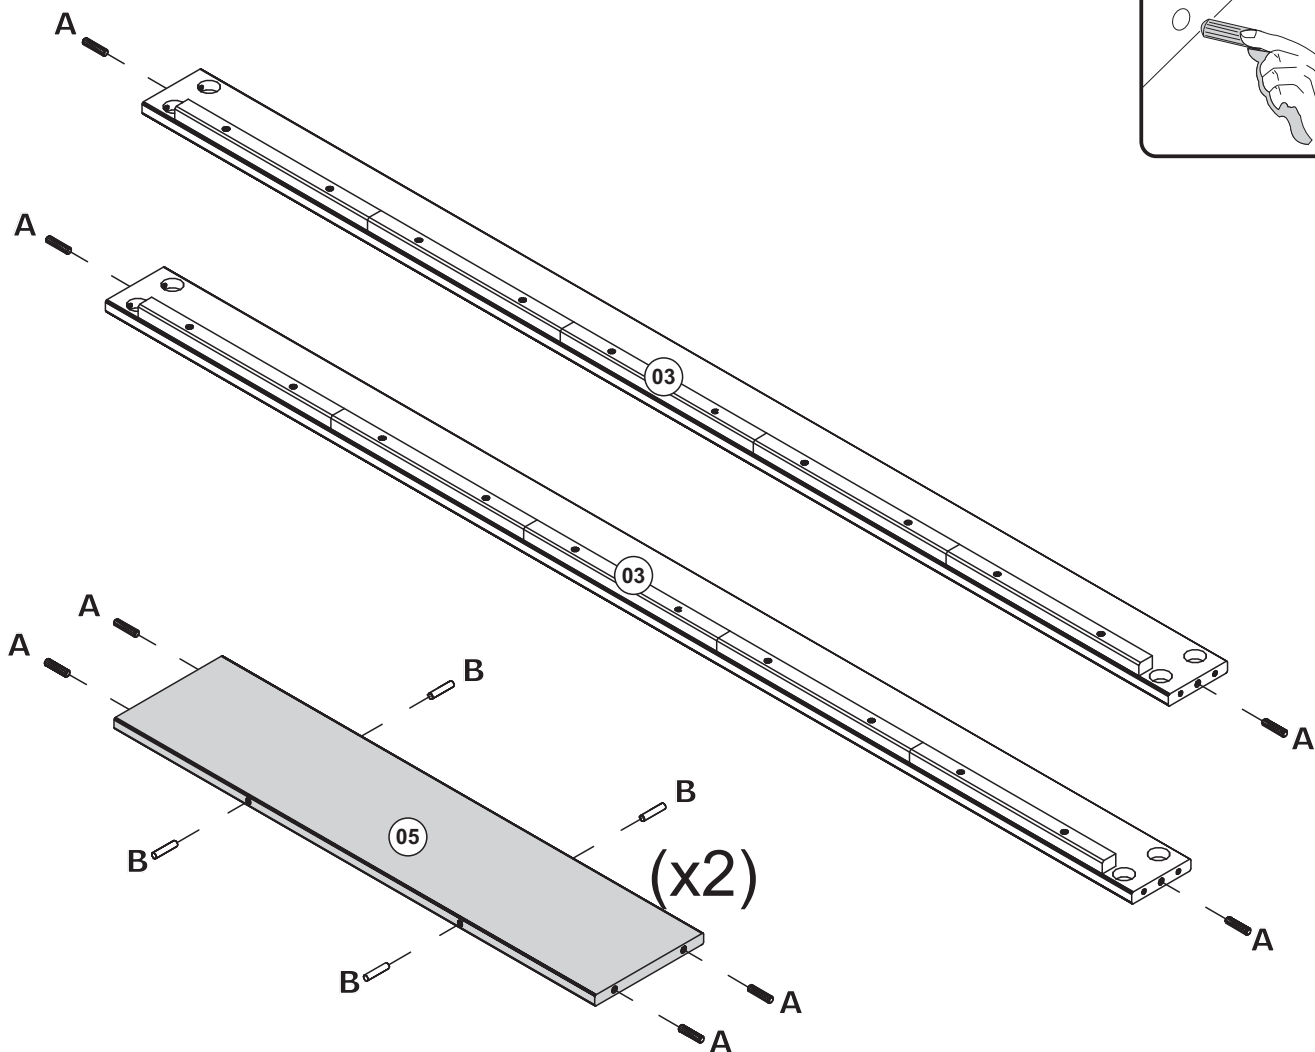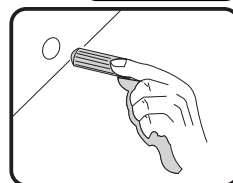
**08**

# 02

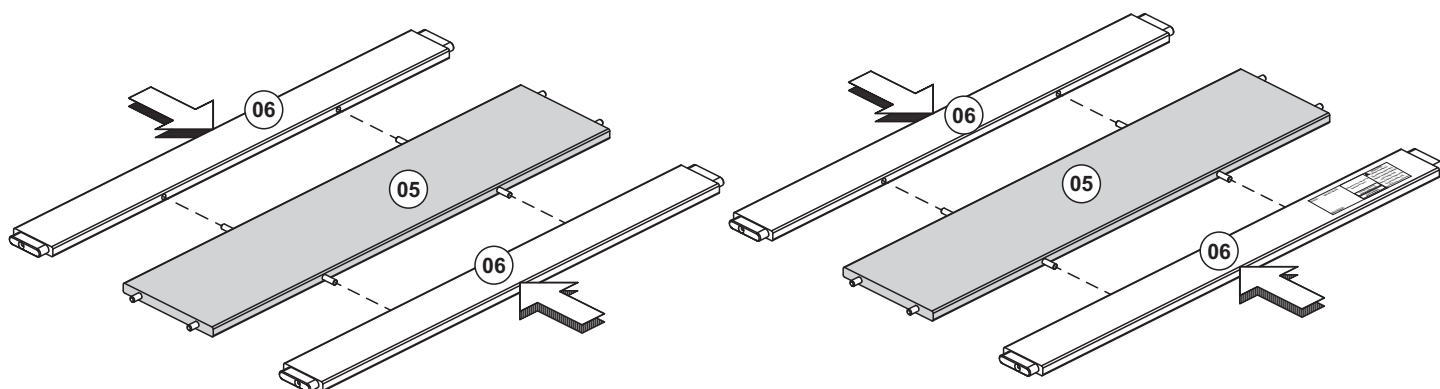





# 03

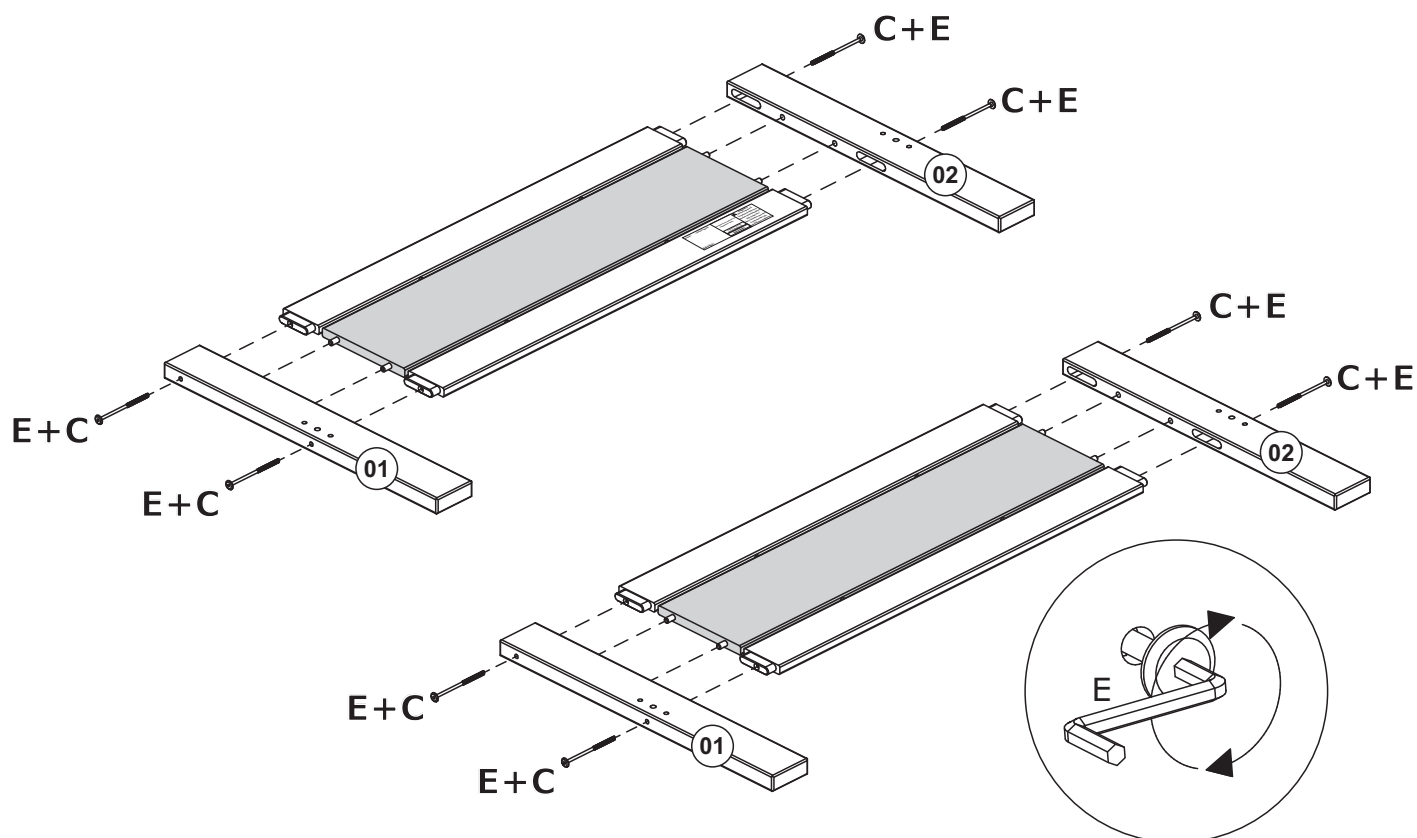
<b>C</b>	 Ø7x110mm	<b>08</b>	<b>E</b>		4mm	<b>01</b>
----------	---	-----------	----------	--	-----	-----------

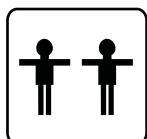

# 04



<b>D</b>	 1/4x70mm	<b>08</b>	<b>G</b>		<b>08</b>
<b>E</b>		<b>01</b>			

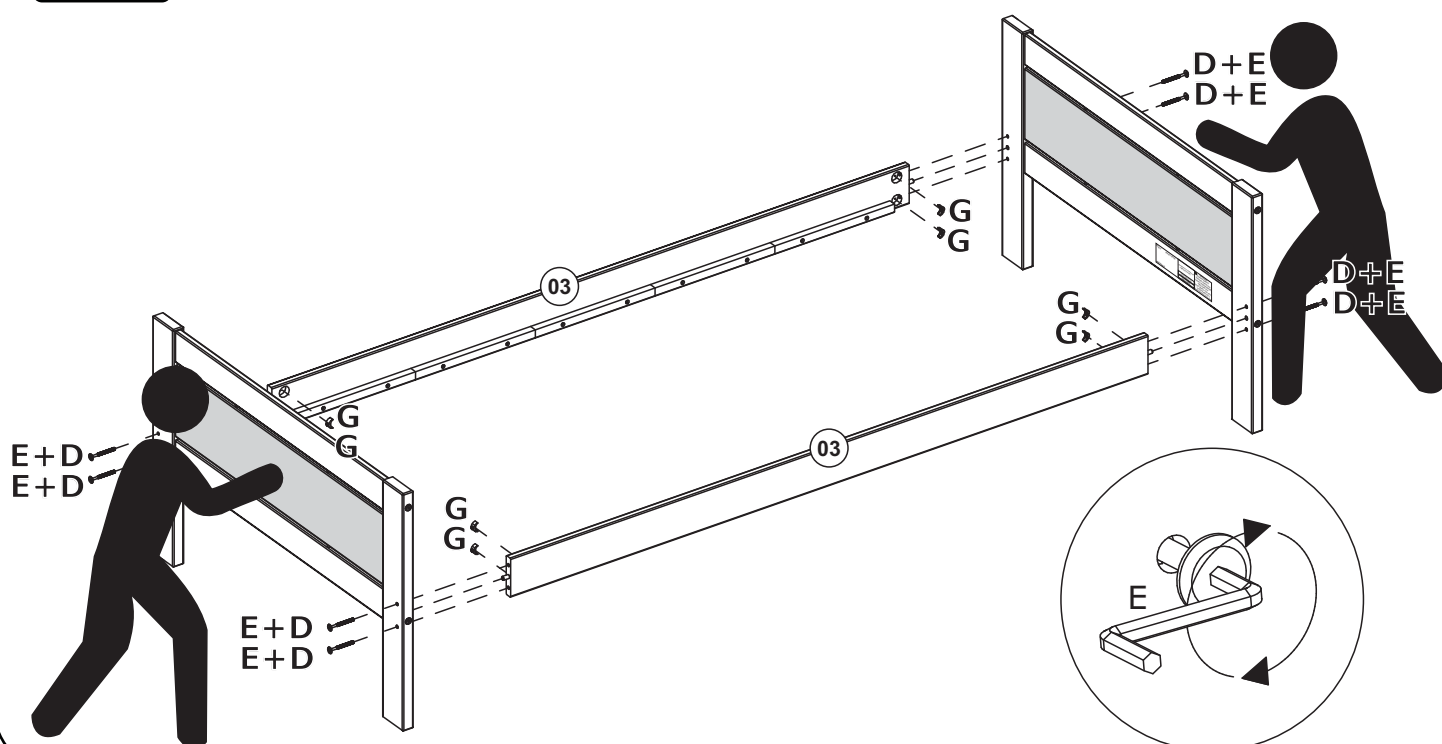





# 05

**F**



Ø4x30mm

**24**

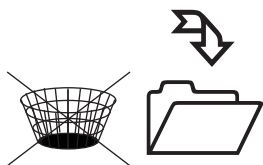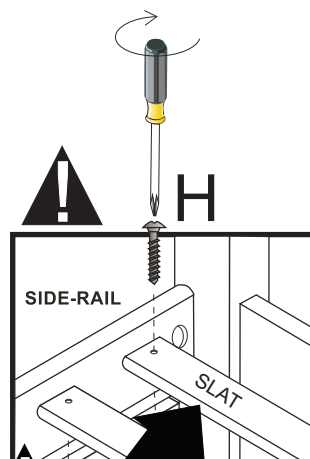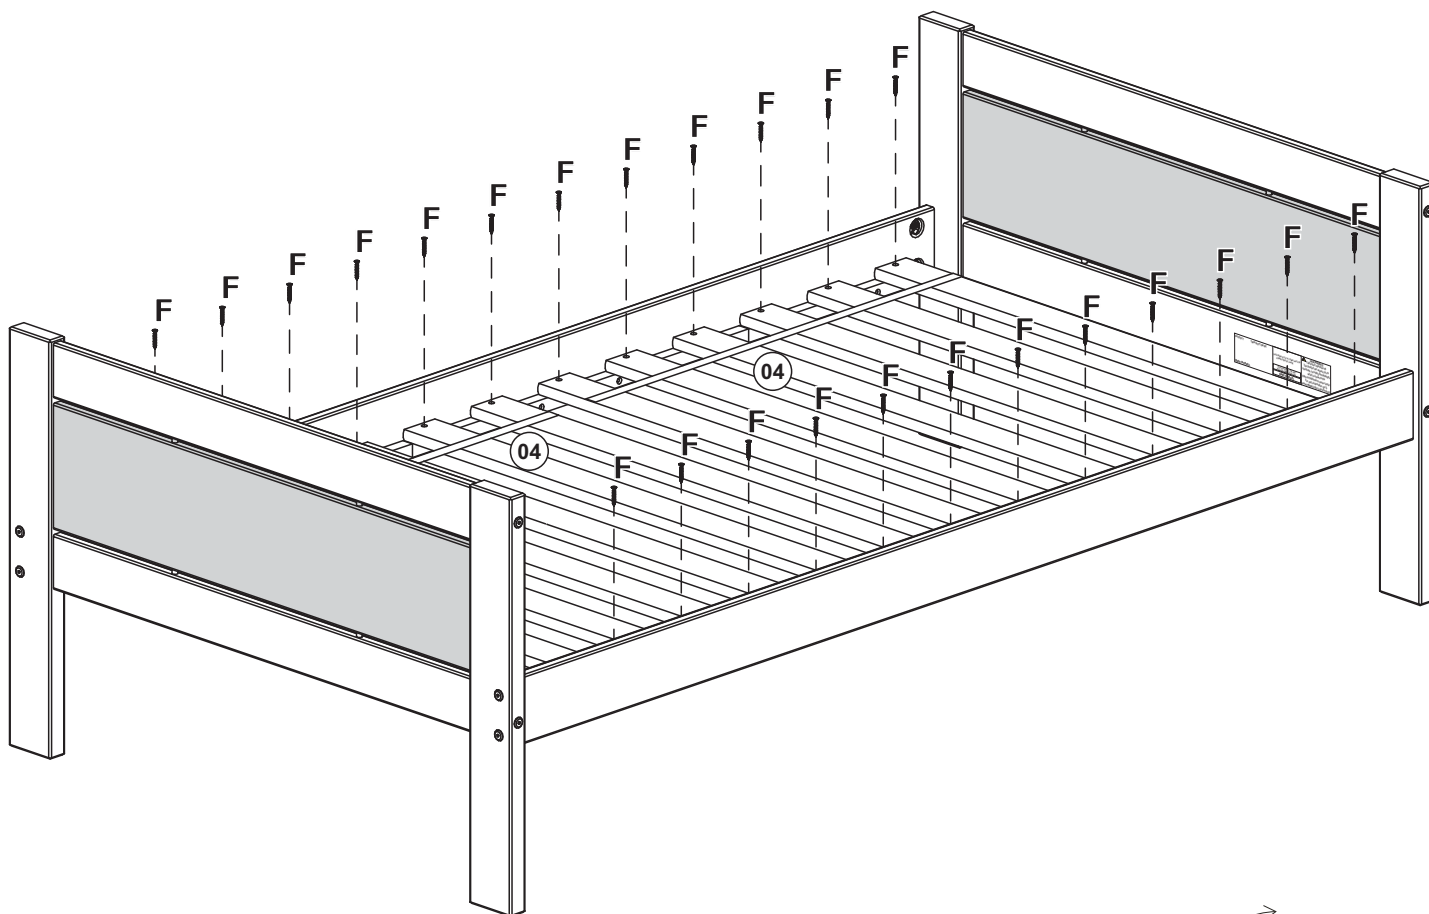


**! INSTALL SLAT KIT WITH SPACER TAPE ON TOP(FACING UP)**

**! The first slats must be fixed at 3" from each headboard end.**

# ASSEMBLY INSTRUCTIONS

## T/T LOW LOFT TOP BED

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.

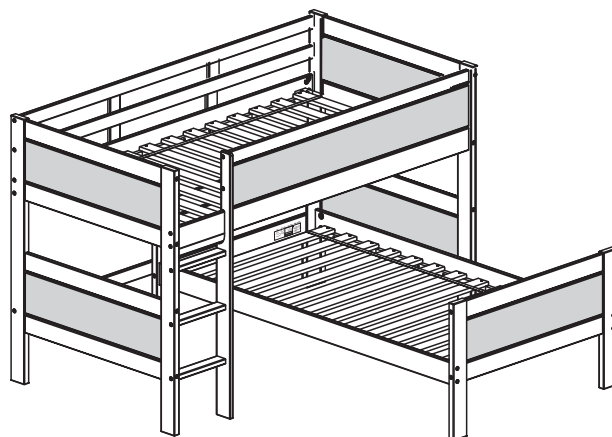

**“DO NOT TIGHTEN SCREWS  
UNTIL COMPLETELY ASSEMBLED”**

### **SIZE OF MATTRESS AND FOUNDATION (SUPPORT)**

This bed is designed to use a twin mattress (37½”-38½”x74-75”) and bunkie board (37½”x74”). The total thickness must not exceed **8”** inches. Do not use mattress without the proper bunkie board of safe foundation.


**Note:** There must be at least **5”** inches from top surface of mattress to top edge of guardrails.

### **REPLACEMENT PARTS.**


Replacement parts, including additional guardrails, may be obtained from place of purchase or original distributor.

## **SAFETY WARNINGS!**


- 1- Follow the information on the warning label appearing on the upper bunk end structure and on the carton. Do not remove warning label from bed.
- 2- Always use the recommended size mattress or mattress support, or both, to help prevent the likelihood of entrapment or falls.
- 3- Surface of mattress must be at least 5 inches below the upper edge of guardrails.
- 4- Do not allow children under 6 years of age to use the upper bunk.
- 5- Prohibit more than one person on upper bunk.
- 6- Periodically check and ensure that the guardrail, ladder and other components are in their proper position free from damage, and that all connectors are tight.
- 7- Do not allow horseplay on or under the bed and prohibit jumping on the bed.
- 8- Always use the ladder for entering and leaving the upper bunk.
- 9- Do not use substitute parts. Contact distributor or dealer for replacement parts.
- 10- Use of a night light may provide added safety precaution for a child using the upper bunk.
- 11- If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.
- 12- Always use guardrails on both long sides of the upper bunk.
- 13- The use of water or sleep flotation mattresses is prohibited.
- 14- Keep these instructions for future reference.
- 15- Strangulation Hazard - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed: for example, but not limited to, hooks, belts, and jump ropes, etc.

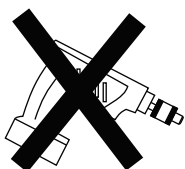


\* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!  
\* Please assemble on a clean soft surface to avoid damage.

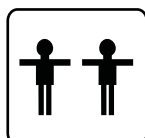


+

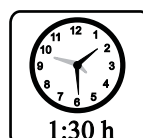

### **Tools Required**



(Not included)



(Not included)



**IMPORTANT: PLEASE READ INSTRUCTIONS BEFORE STARTING THE ASSEMBLY**


Part list: Low Loft Top Bed

**WARNING LABEL  
DO NOT REMOVE!**










**WARNING**  
TO HELP PREVENT SERIOUS OR FATAL INJURIES FROM ENTRAPMENT OR FALLS:  
• Never allow a child under 6 years on upper bunk.  
• Only use mattress which is 74"-75" long and 37 1/2" - 38 1/2" wide and maximum 8" high on upper and lower bunk.  
• Ensure thickness of mattress and foundation combined does not exceed 8" and mattress is at least 2" below upper edge of guardrails.  
• Use guardrails on both sides of upper bunk.  
• Prohibit horseplay on or under bed(s).  
• Prohibit more than one person on the upper bunk.  
• Use ladder for entering and leaving upper bunk.  
**STRANGULATION HAZARD** - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed, for example, but not limited to, hooks, belts, and jump ropes.  
DO NOT REMOVE THIS LABEL.

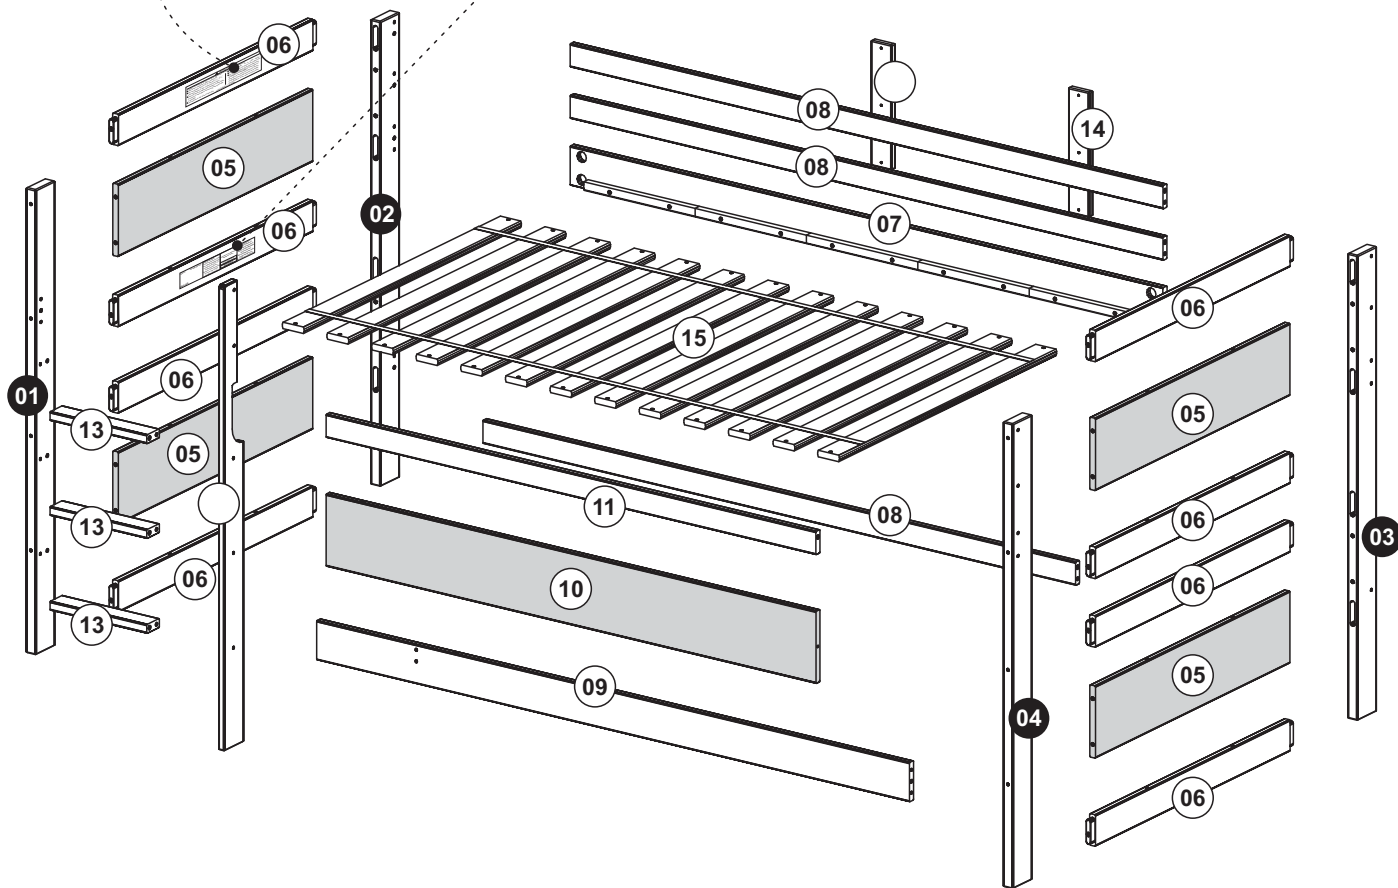**CERTIFICATION LABEL  
DO NOT REMOVE!**

PRODUCT: TIT LOW LOFT TOP BED  
MADE IN BRAZIL  
CERTIFICATION LABEL  
This bunk bed model has been tested by an independent laboratory and is in compliance with ASTM F1427 Standard Consumer Safety Specification For Bunk Beds and the Government Code of Federal Regulations 1210 and 1013  
CALIFORNIA STATE FIRE MARSHAL'S OFFICE  
FORMAL SERVICE PHASE 2  
FOR RESIDENTIAL USE ONLY  
DO NOT REMOVE THIS LABEL  
MADE IN BRAZIL  
WARNING  
California Proposition 65  
This product can expose you to chemicals, including formaldehyde which is known to the State of California to cause cancer. For more information, go to [www.P65Warnings.ca.gov/formaldehyde](http://www.P65Warnings.ca.gov/formaldehyde)



**Identifying the Hardware**-Identify the hardware using the illustrations below.

<b>A</b>	 Ø10x40mm	<b>32</b>	<b>D</b>	 Ø7x70mm	<b>11</b>	<b>G</b>	 4mm	<b>01</b>
<b>B</b>	 White Connection	<b>24</b>	<b>E</b>	 Ø7x50mm	<b>07</b>	<b>H</b>	 Ø4x30mm	<b>32</b>
<b>C</b>	 Ø7x110mm	<b>16</b>	<b>F</b>	 1/4x70mm	<b>08</b>	<b>I</b>		<b>08</b>

# 01


**A**



Ø10x40mm




**32**

**B**



White Connection


**24**

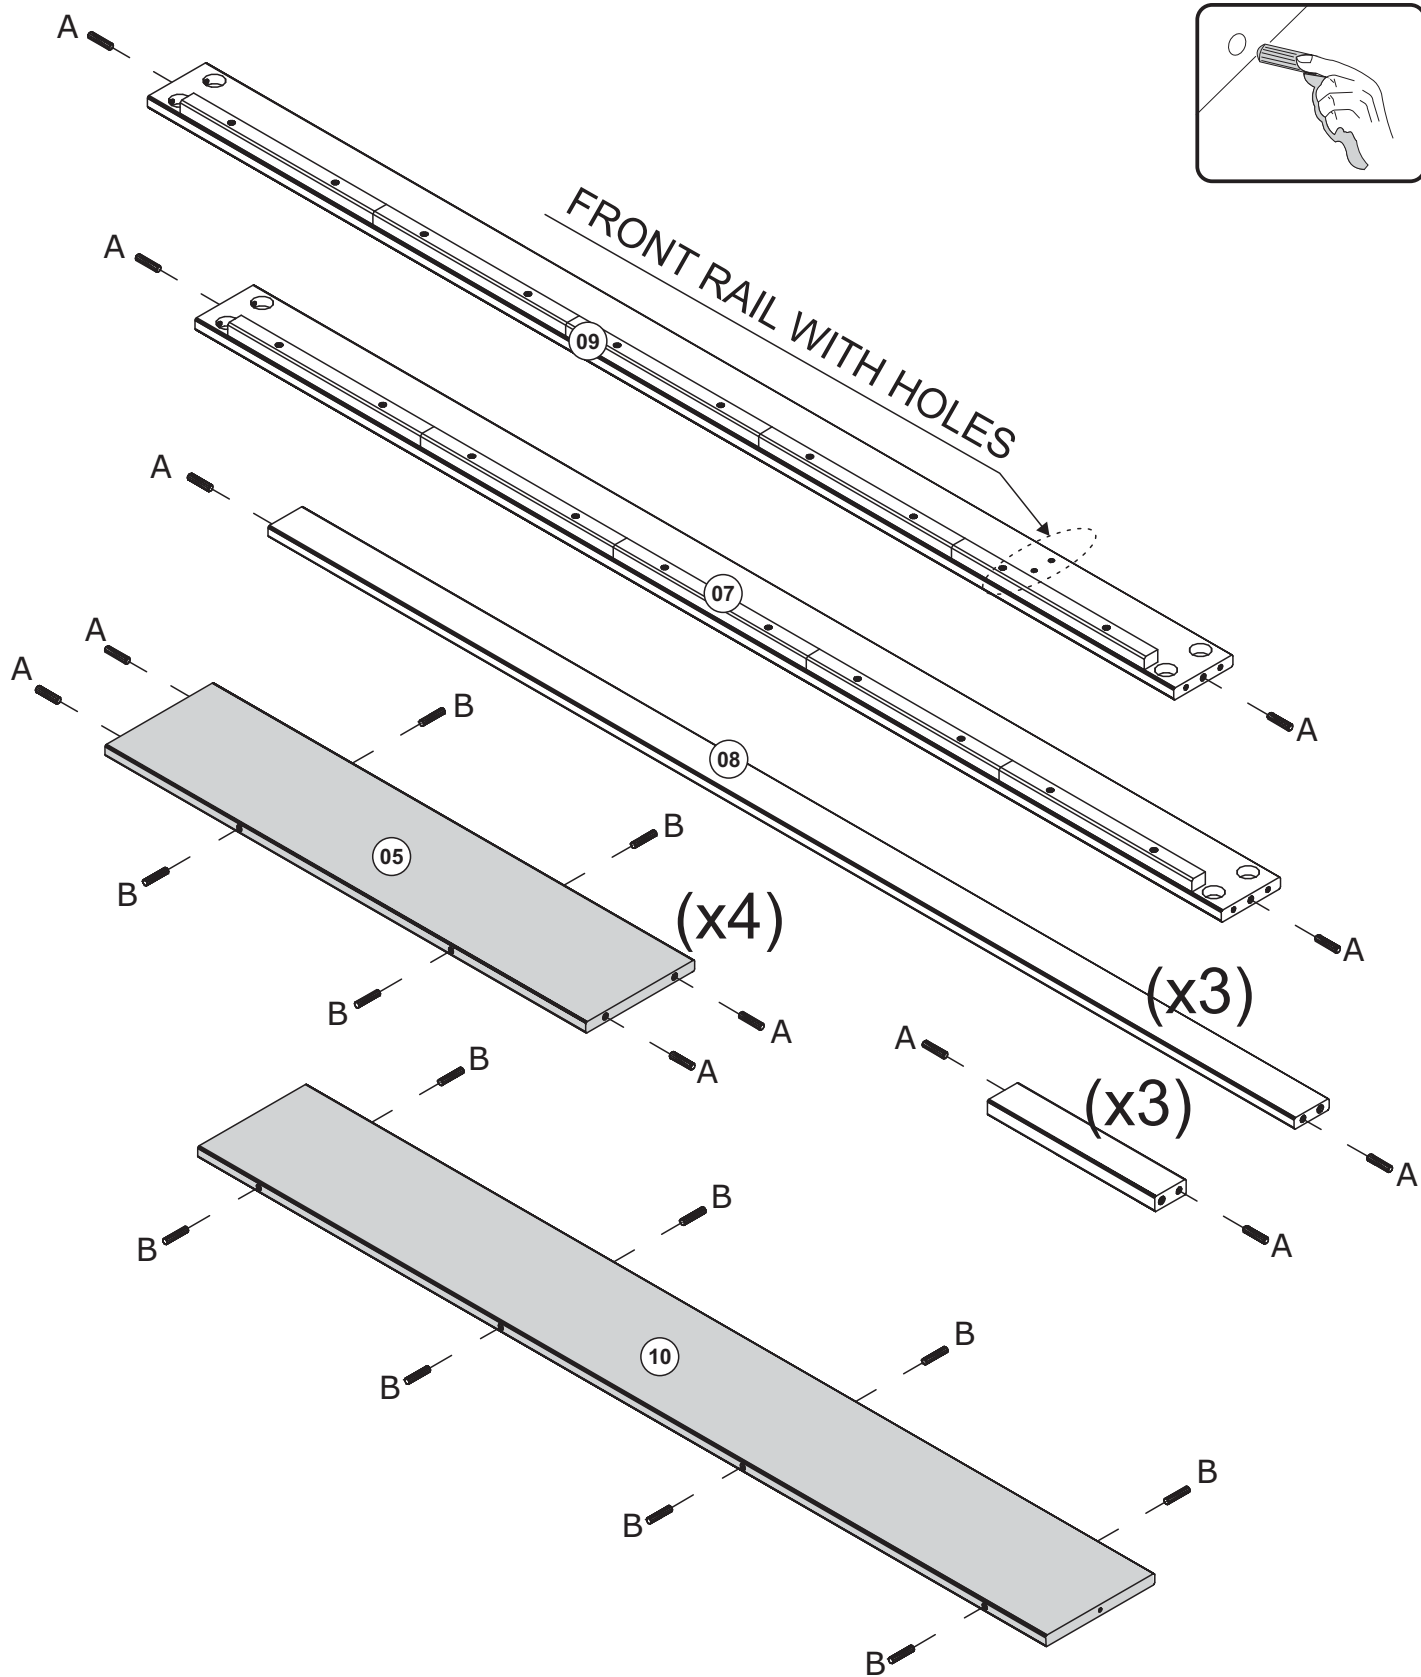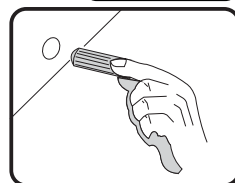



# 02

(x4)

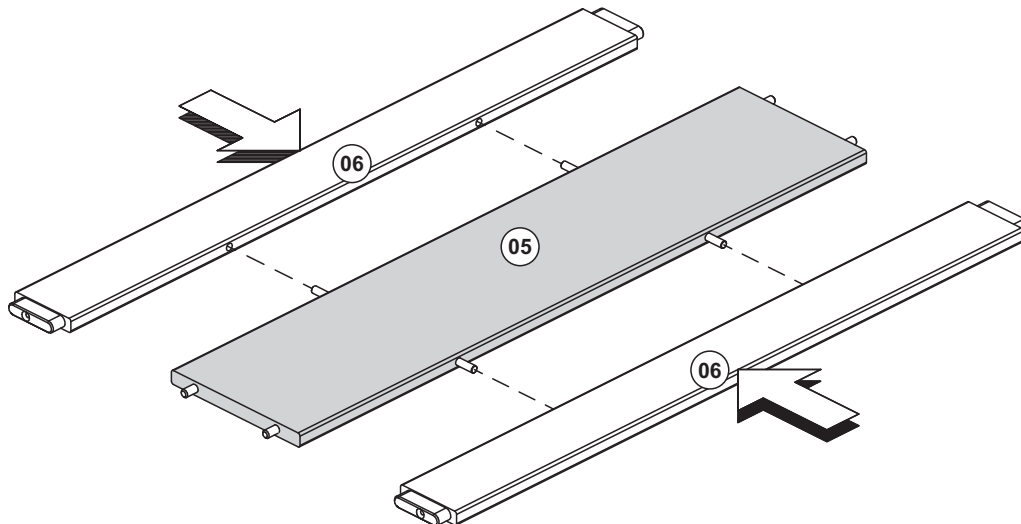


# 03






**WARNING LABEL  
DO NOT REMOVE!**

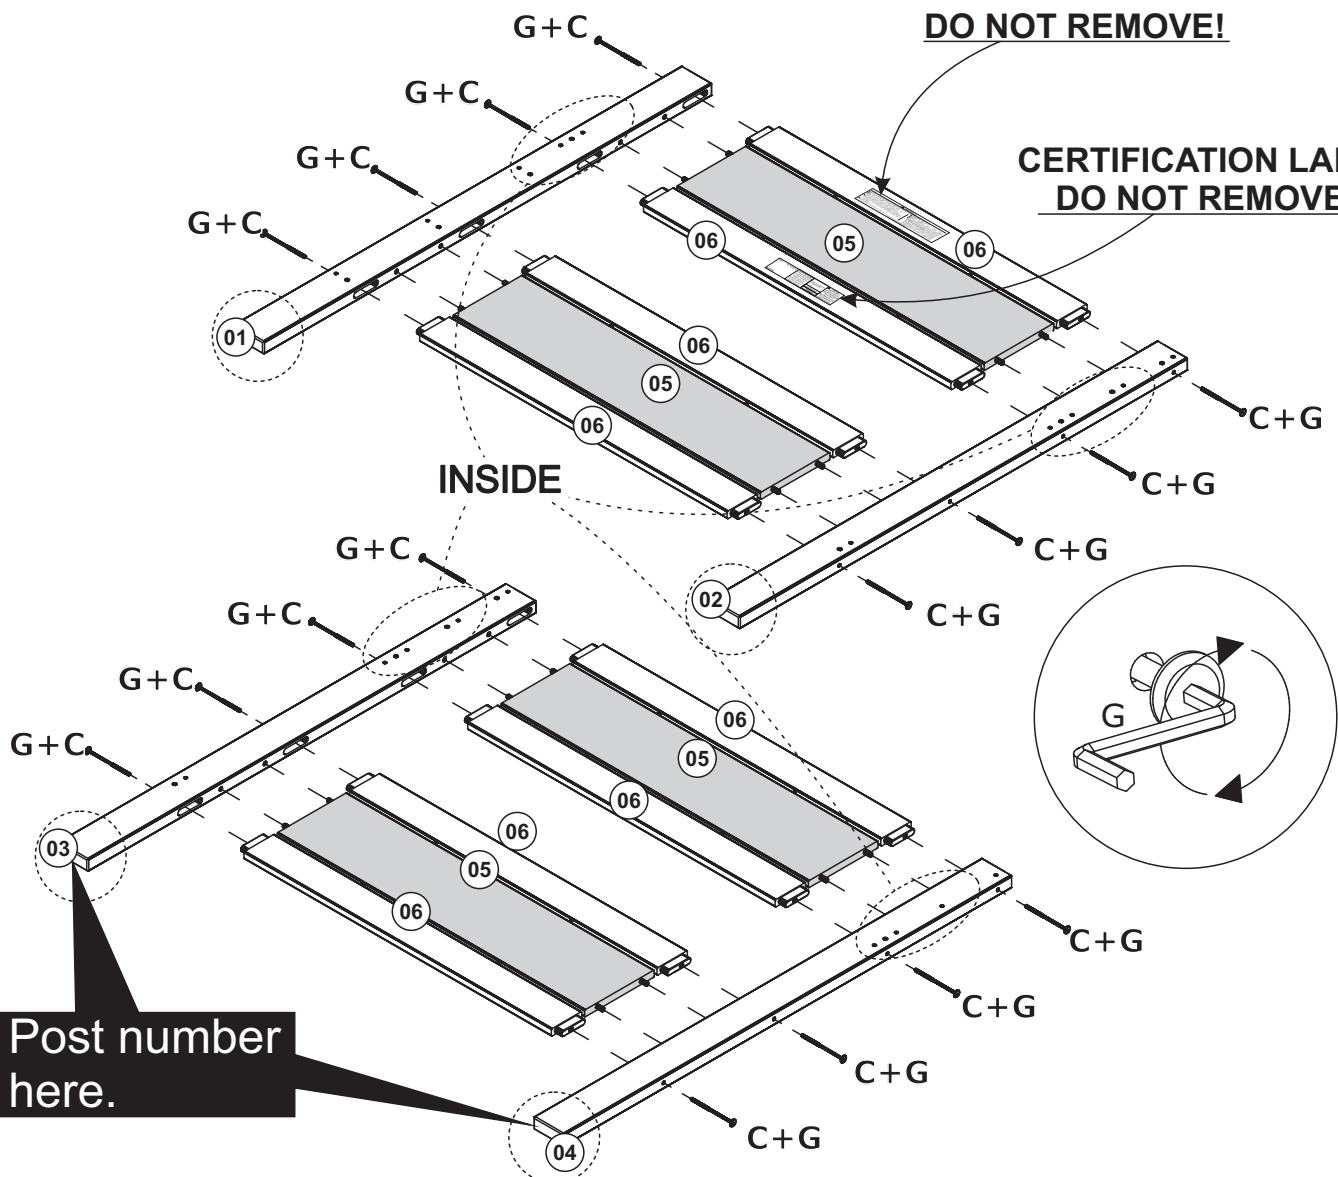**CERTIFICATION LABEL  
DO NOT REMOVE!**




# 04






<b>F</b>	 1/4x70mm	<b>08</b>	<b>I</b>		<b>08</b>
<b>G</b>	 4mm	<b>01</b>			


INSERT AND  
ATTACH SCREWS (F&I),  
BUT DO NOT TIGHTEN UNTIL  
STEP #08

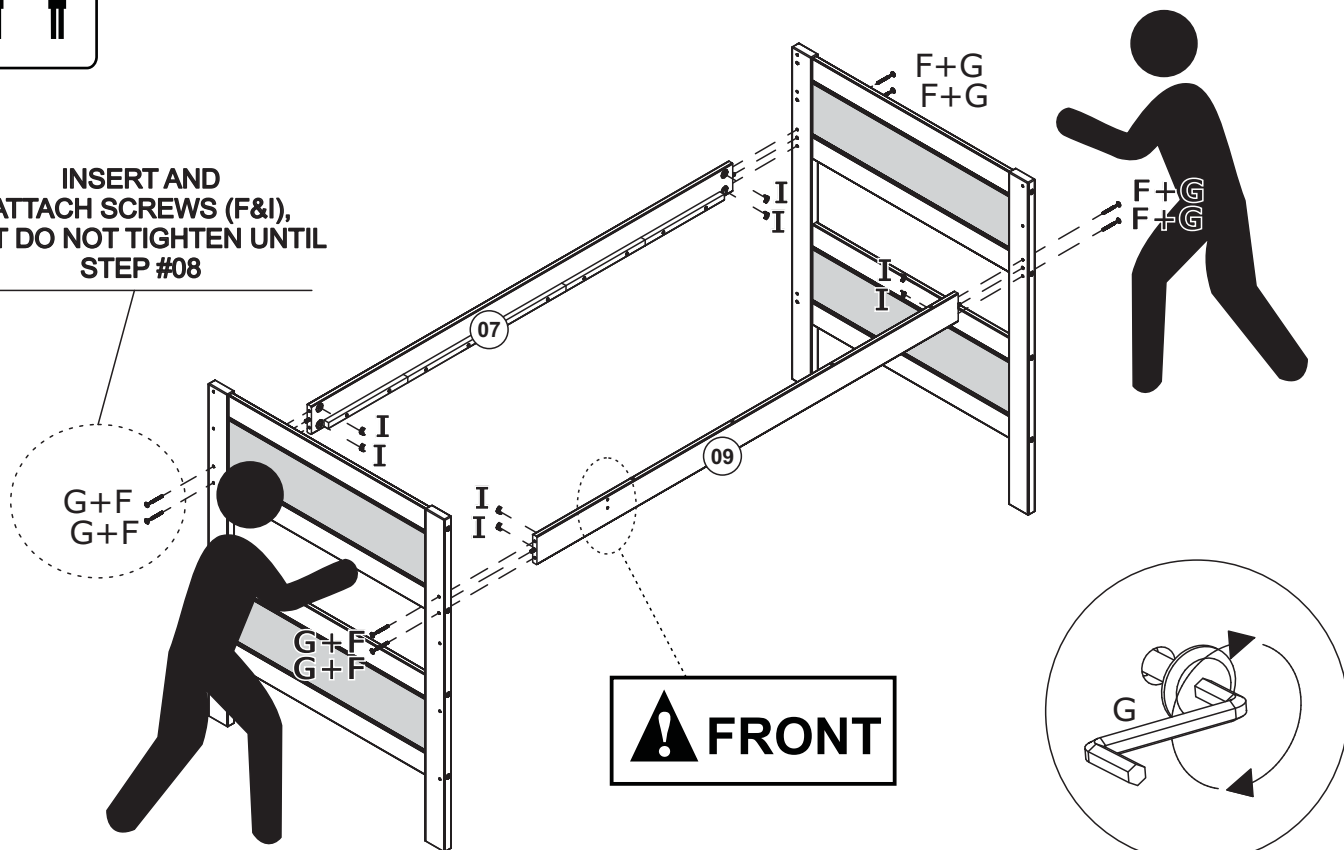



# 05

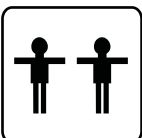


<b>D</b>	 Ø7x70mm	<b>06</b>	<b>G</b>	 4mm	<b>01</b>
----------	--	-----------	----------	--	-----------

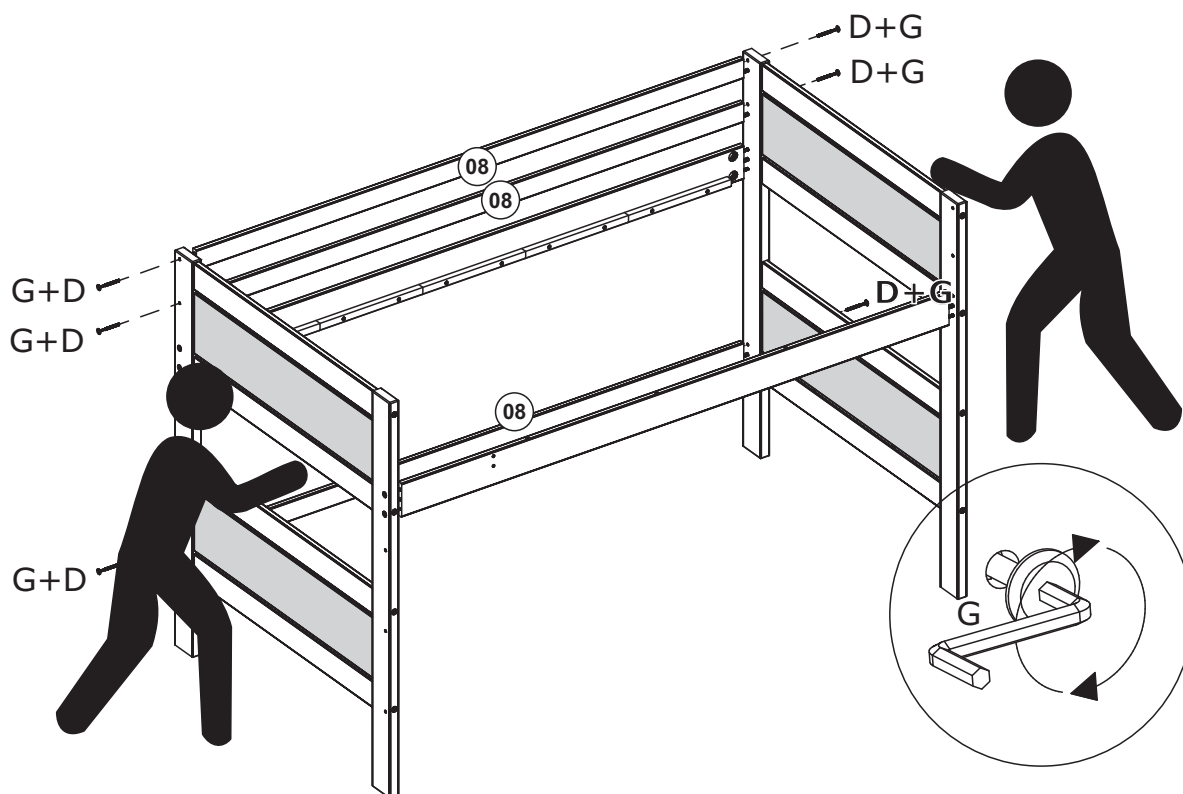





# 06 LADDER
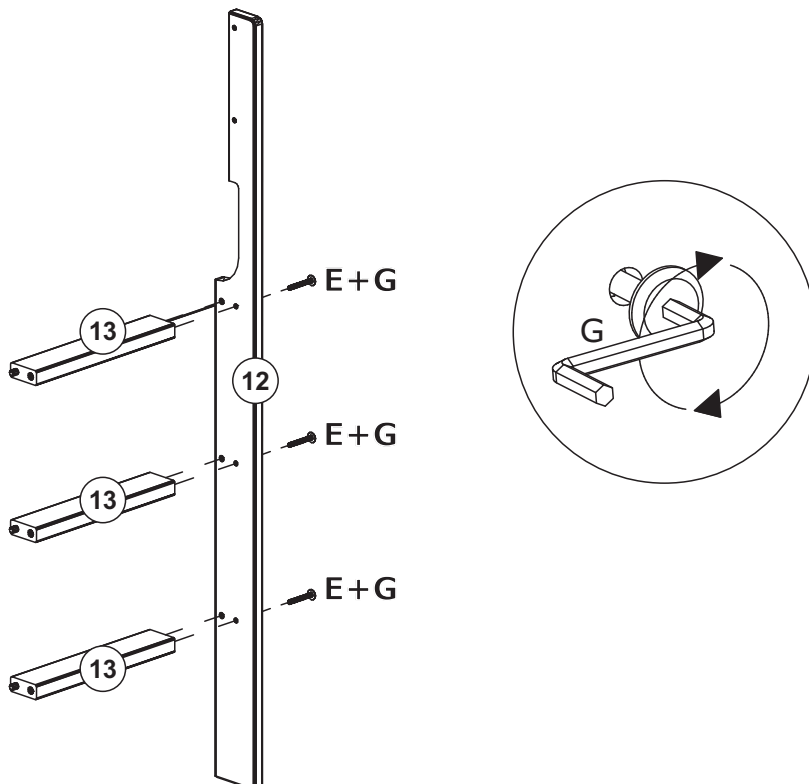
<b>E</b>	 Ø7x50mm	<b>03</b>	<b>G</b>	 4mm	<b>01</b>
----------	---	-----------	----------	---	-----------







# 07




<b>D</b>	 Ø7x70mm	<b>03</b>	<b>G</b>	 4mm	<b>01</b>
<b>E</b>	 Ø7x50mm	<b>02</b>			

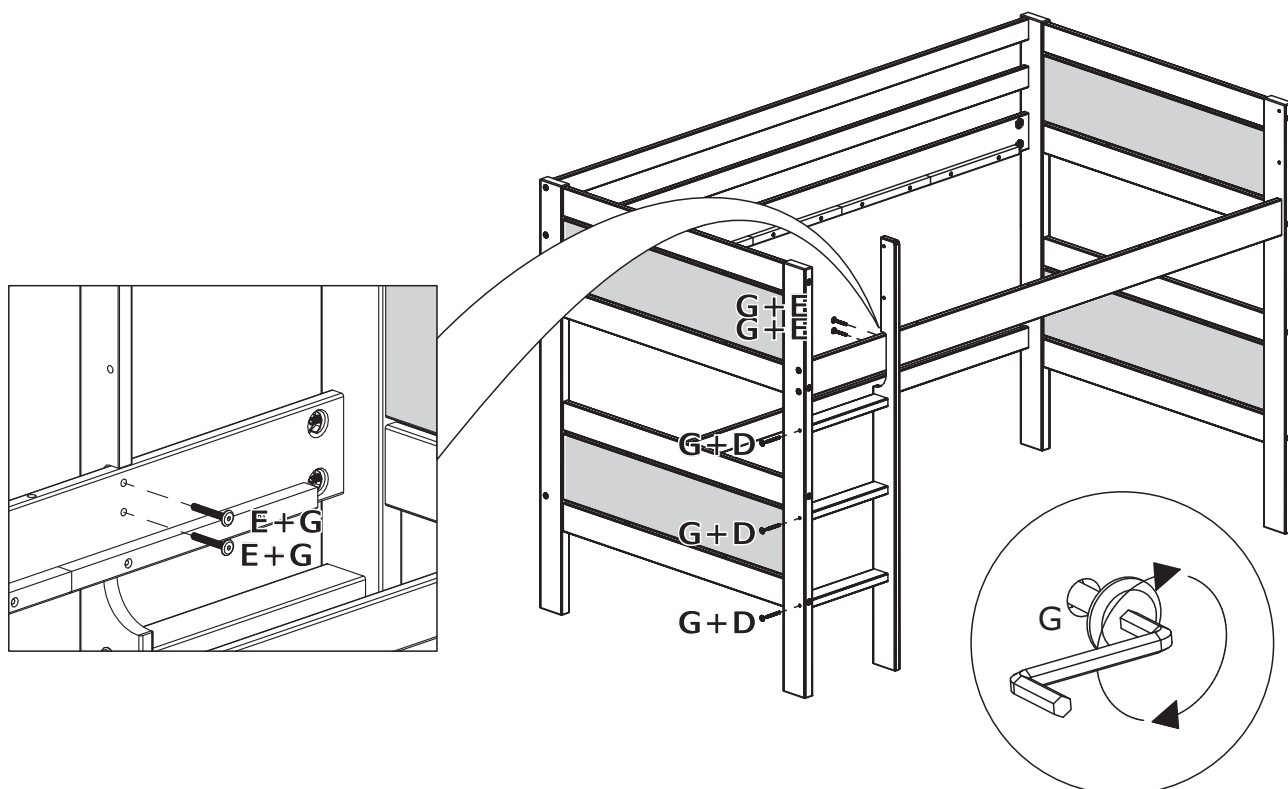

# 08




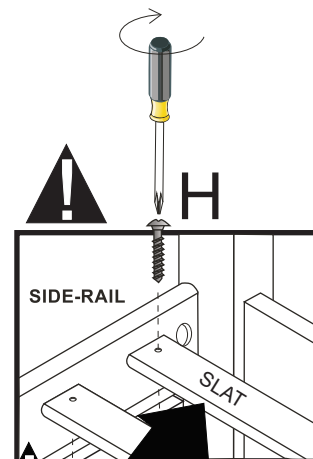
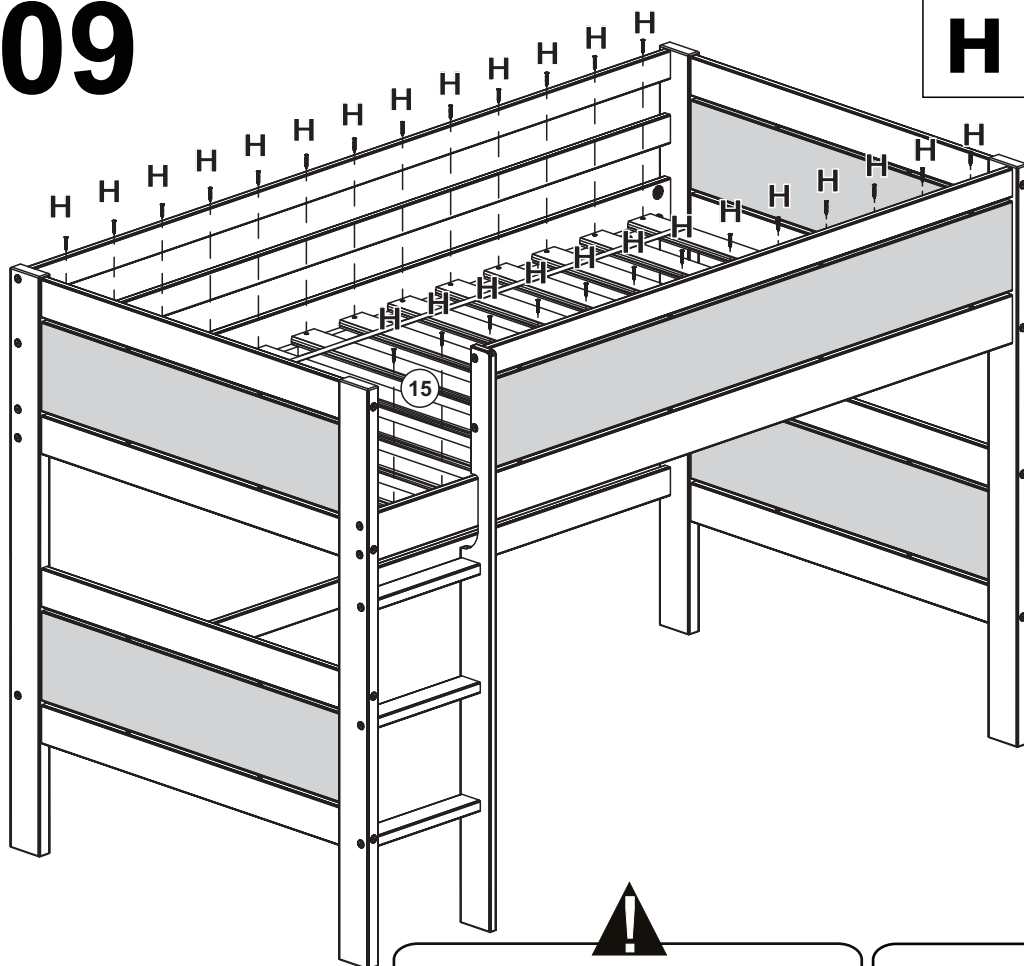

<b>D</b>	 Ø7x70mm	<b>02</b>	<b>G</b>	 4mm	<b>01</b>
<b>E</b>	 Ø7x50mm	<b>02</b>			

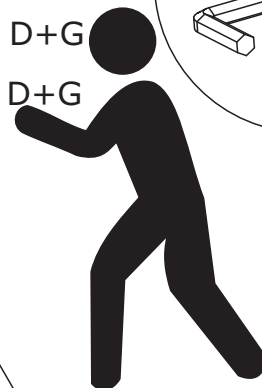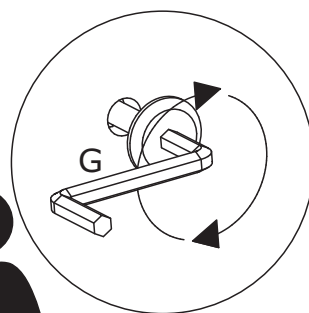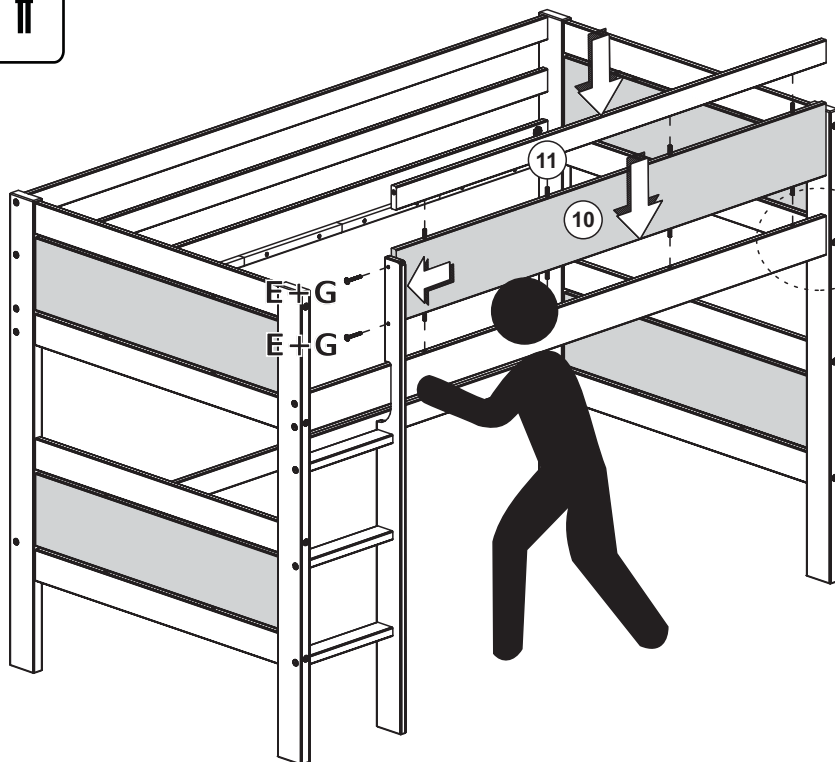

**AFTER ATTACHED  
SCREWS E&D  
AT THIS TIME,  
PLEASE TIGHTEN  
ALL SCREWS!**

# 09

<b>H</b>	 Ø4x30mm	<b>26</b>
----------	--	-----------



**“INSTALL SLAT KIT WITH SPACER  
TAPE ON TOP(FACING UP)”**

**The first slats must be fixed at  
3" from each headboard end.**



# 10

**H**



Ø4x30mm

**06**

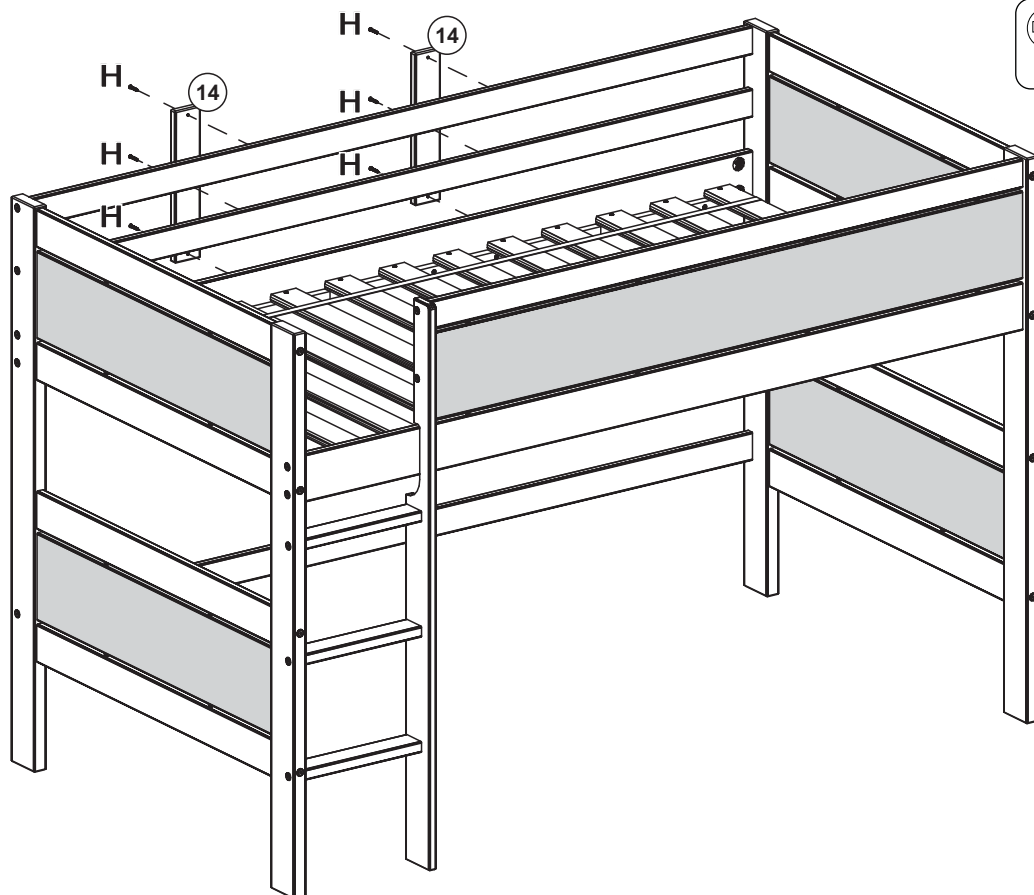

# 11

