


# Extendable Kitchen Island

Assembly Instructions - Please keep for future reference

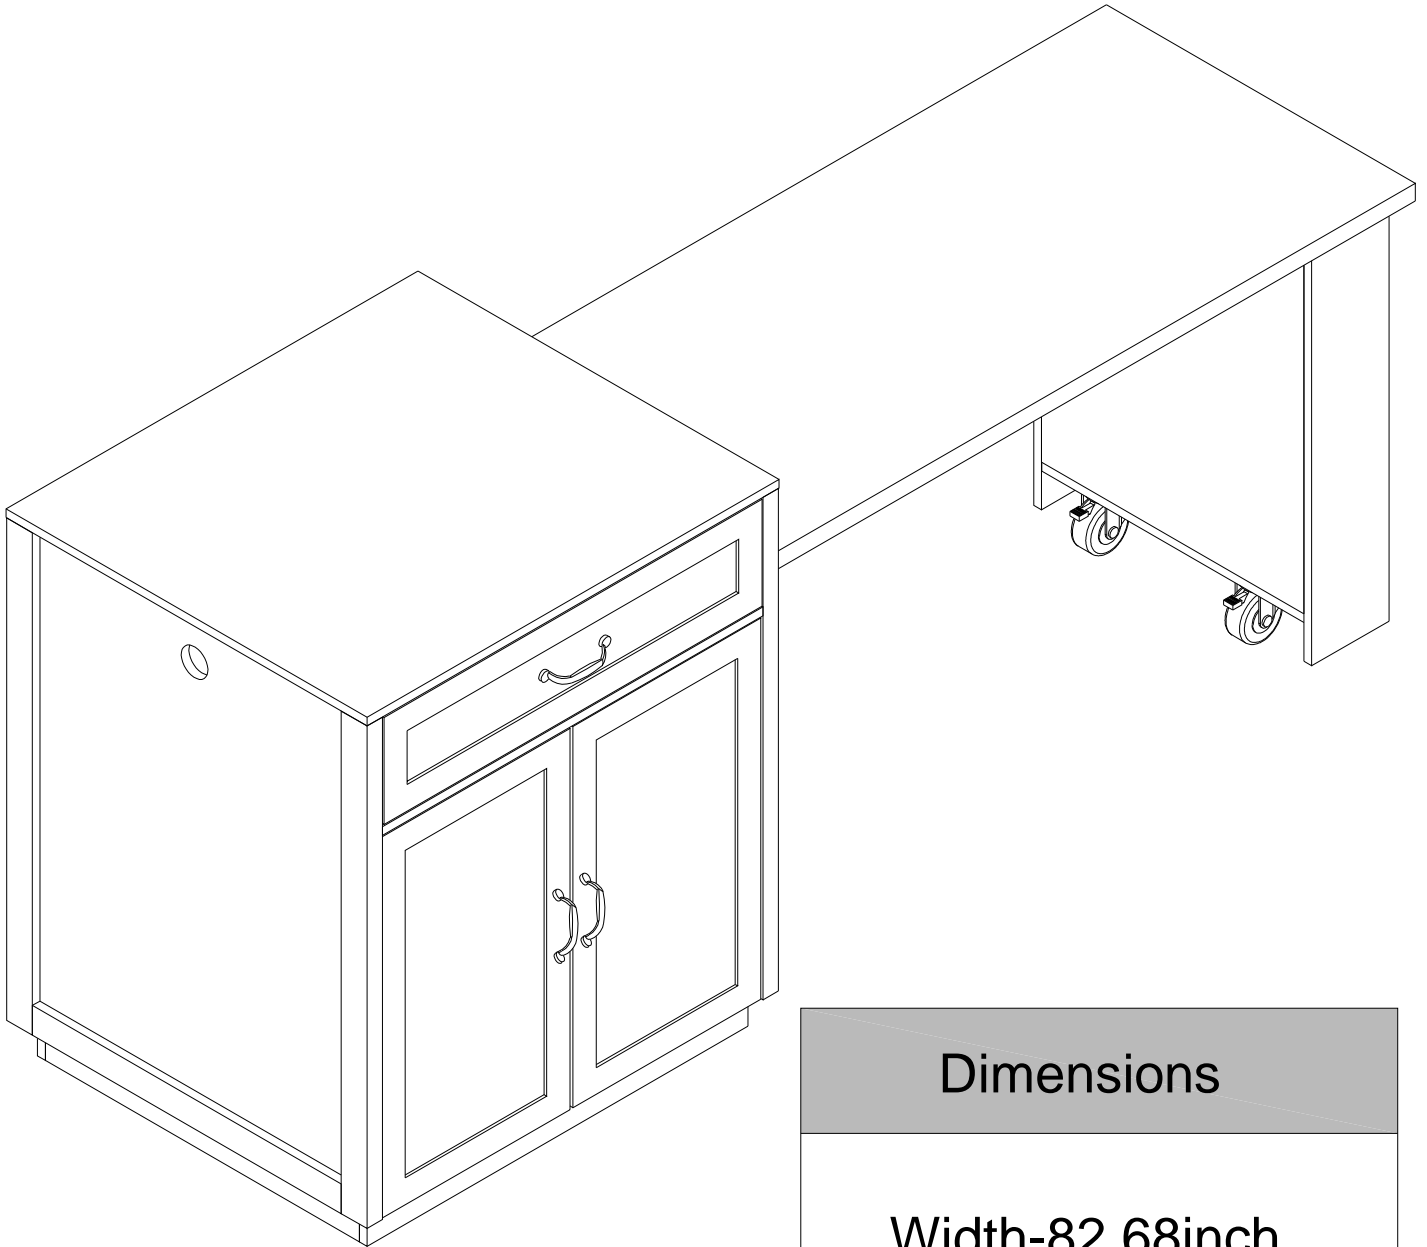

## Dimensions

Width-82.68inch

Depth-27.56inch

Height-36.22inch

Important - please read these instructions fully before starting assembly



# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

**WARNING**  
**In order to help prevent overturning –**  
**please follow these instructions**

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)  
Do not allow children to climb or hang on the furniture  
Do not open more than one drawer at a time  
Do not place heavy items in the top drawers  
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


# Using Camlocks

## Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.  
NE PAS SERRER EXCESSIVEMENT.

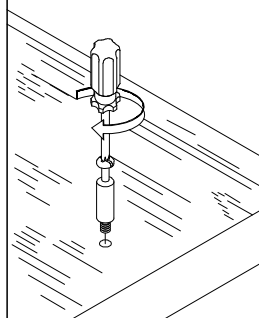

## Step 2

Push the male camlock into the entry hole.

2

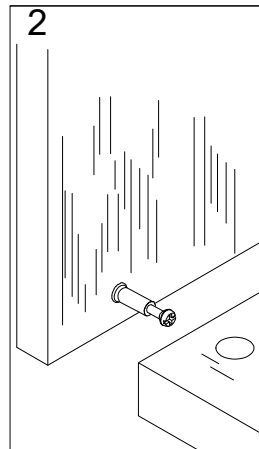


## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

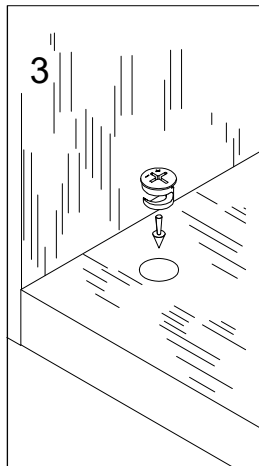


## Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.


4

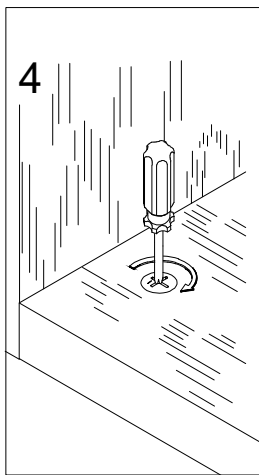

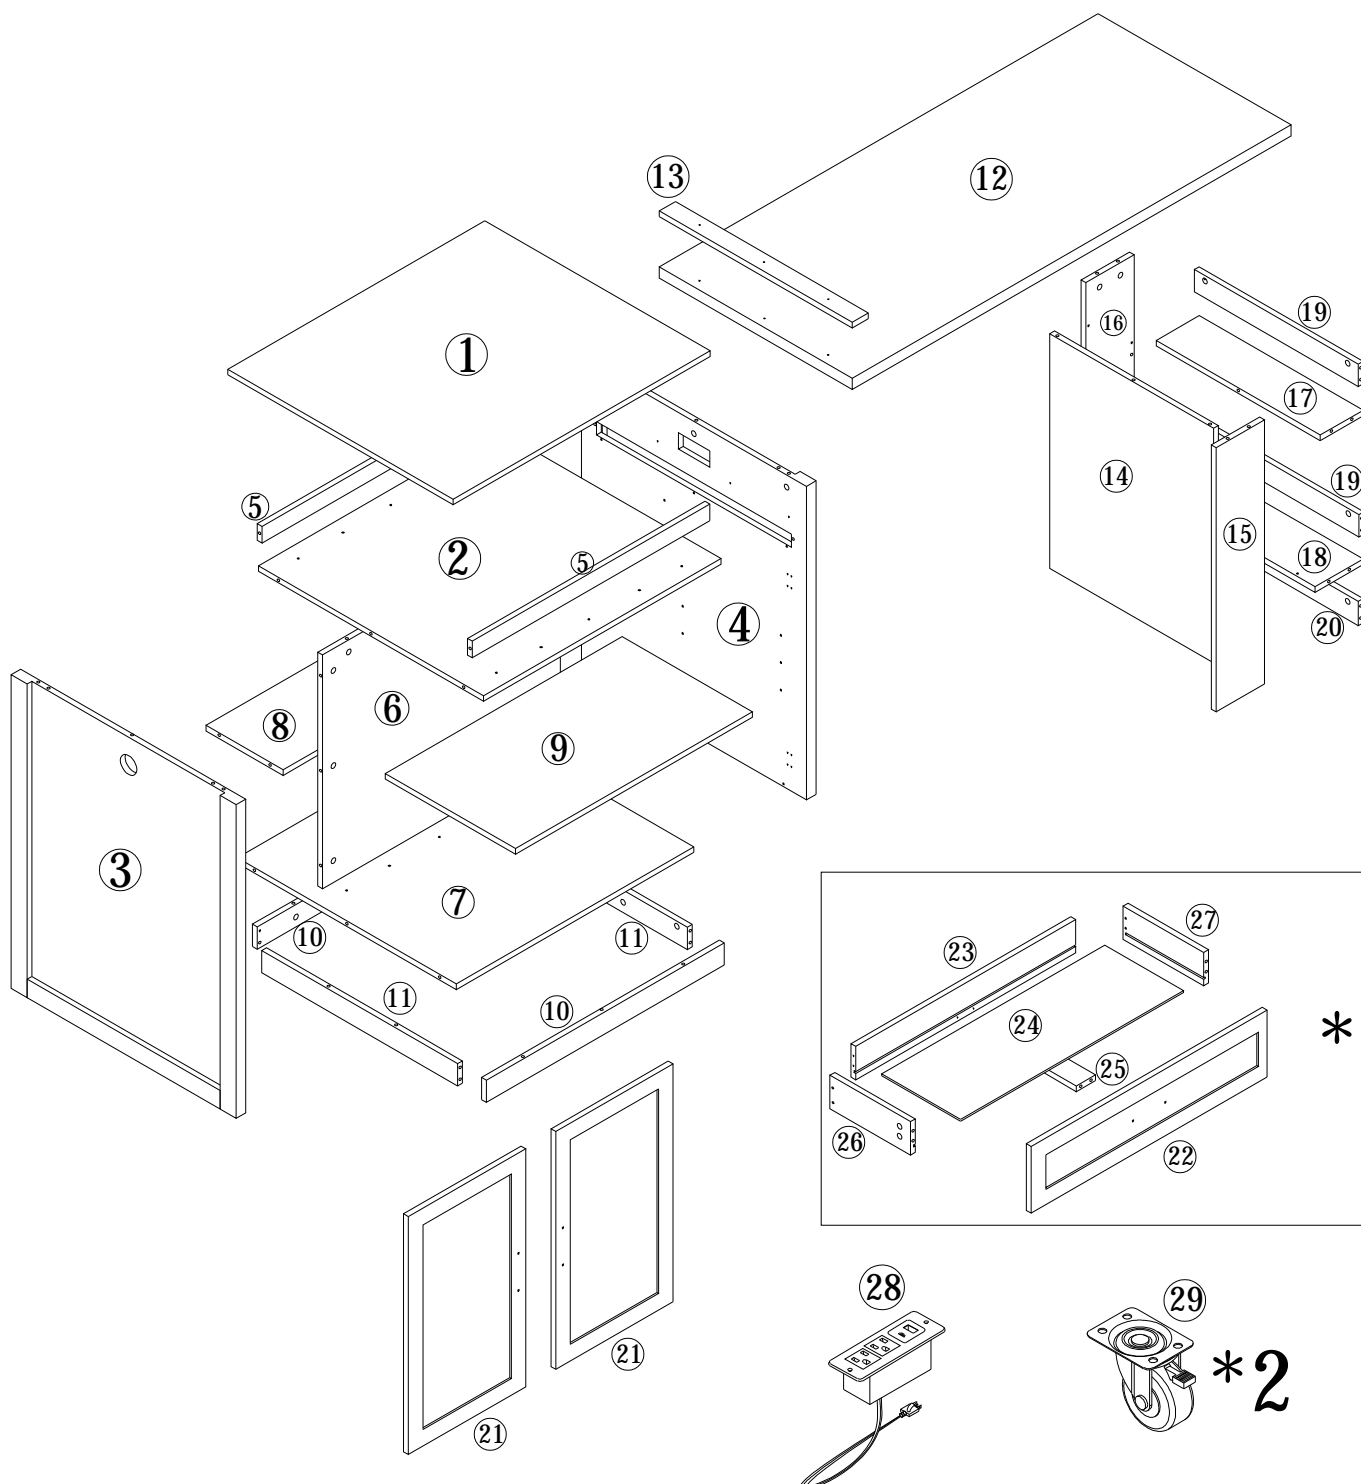


# BOX1:

11x2




610x60x15mm

12x1

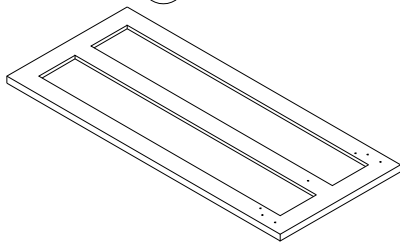

1365x600x30mm

14x1

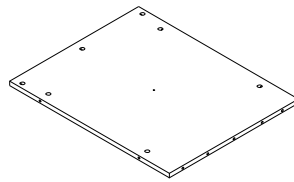


632x510x15mm

19x2




510x60x15mm

23x2

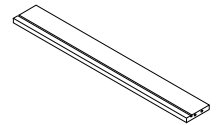


690x90x12mm

26x2



250x90x12mm


27x2



250x90x12mm


# BOX2:

1x1

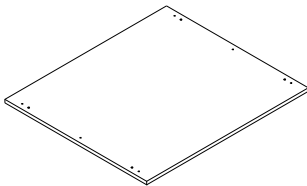


800x700x15mm

2x1

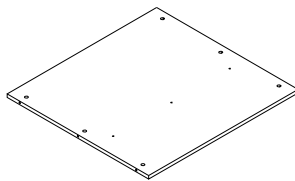


740x700x15mm

3x1

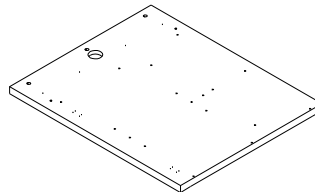


845x700x30mm

4x1

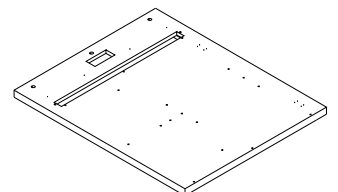


845x700x30mm

5x2

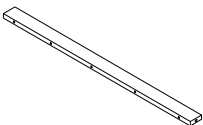


739x45x12mm

6x1

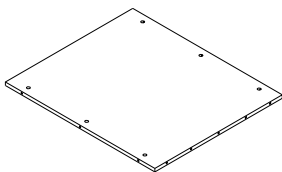


740x630x15mm

7x1

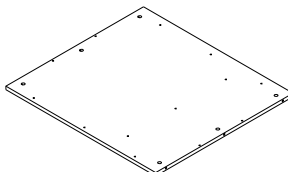


740x680x15mm

8x1

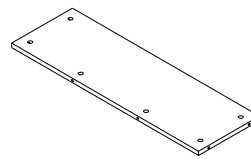


740x240x15mm

9x1

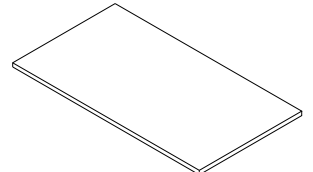


737x405x12mm

10x2

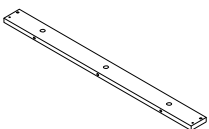


740x60x15mm

13x1




600x50x15mm

15x1

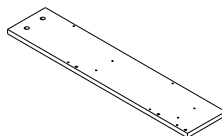


712x150x15mm

16x1

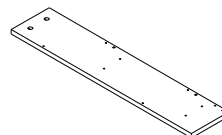


712x150x15mm

17x1




510x135x15mm

18x1




510x150x15mm

20x1




510x65x15mm

21x2

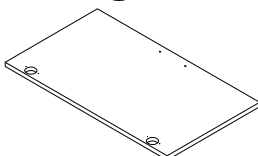


640x365x18mm

22x2

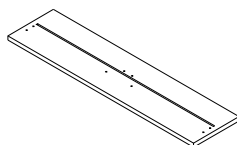

734x180x18mm

24x2

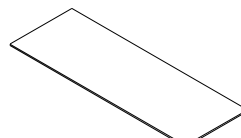


700x248x5mm

25x2







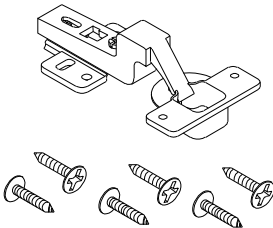

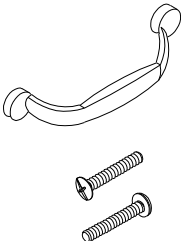




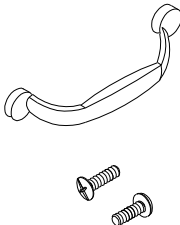




238x60x12mm




28x1




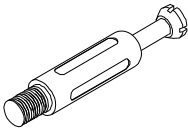
29x2








<p><b>A</b></p>  <p>83PCS</p>	<p><b>B</b></p>  <p>83PCS</p>	<p><b>C</b></p> <p><math>\phi 8*30\text{mm}</math></p>  <p>28PCS</p>	<p><b>D</b></p>  <p>4PCS</p>
<p><b>E</b></p>  <p>4PCS</p>	<p><b>F</b></p>  <p>2PCS</p>	<p><b>G</b></p> <p>MB. 5*14mm</p>  <p>18PCS</p>	<p><b>H</b></p> <p>MB*14mm</p>  <p>8PCS</p>
<p><b>I</b></p> <p>MB. 5*30mm</p>  <p>30PCS</p>	<p><b>J</b></p>  <p>22PCS</p>	<p><b>K</b></p>  <p>2PCS</p>	<p><b>CL</b></p>  <p>2PCS</p>
<p><b>CR</b></p>  <p>2PCS</p>	<p><b>DL</b></p>  <p>2PCS</p>	<p><b>DR</b></p>  <p>2PCS</p>	
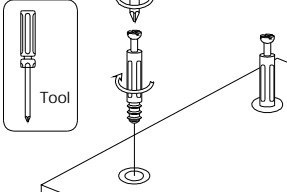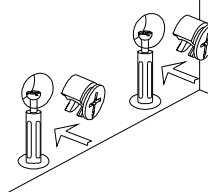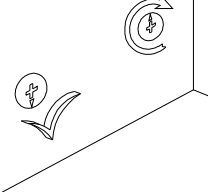
<p>"B" Hardware installation example</p>	<p>I</p> 	<p>II</p> 	<p>III</p> 
--	--	--	--


1. \*2

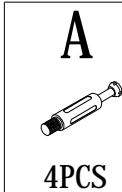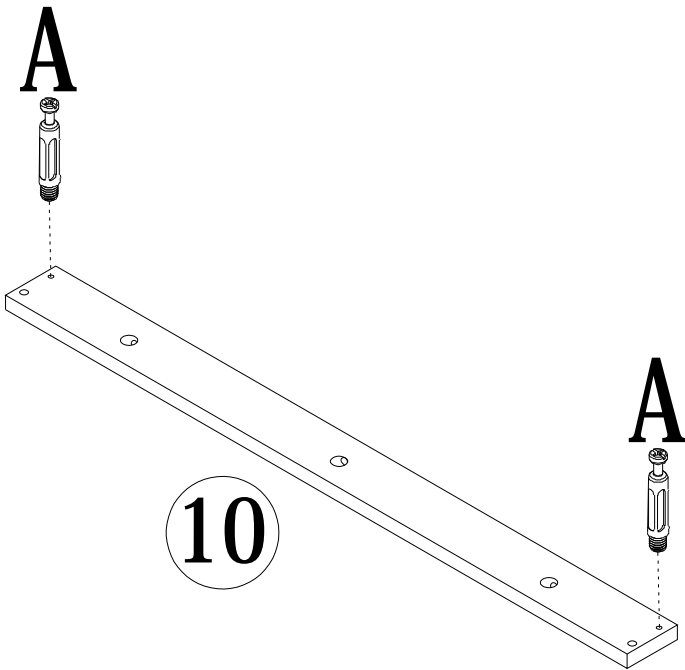

2.

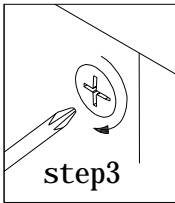
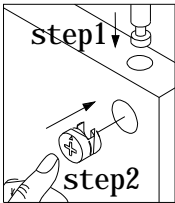
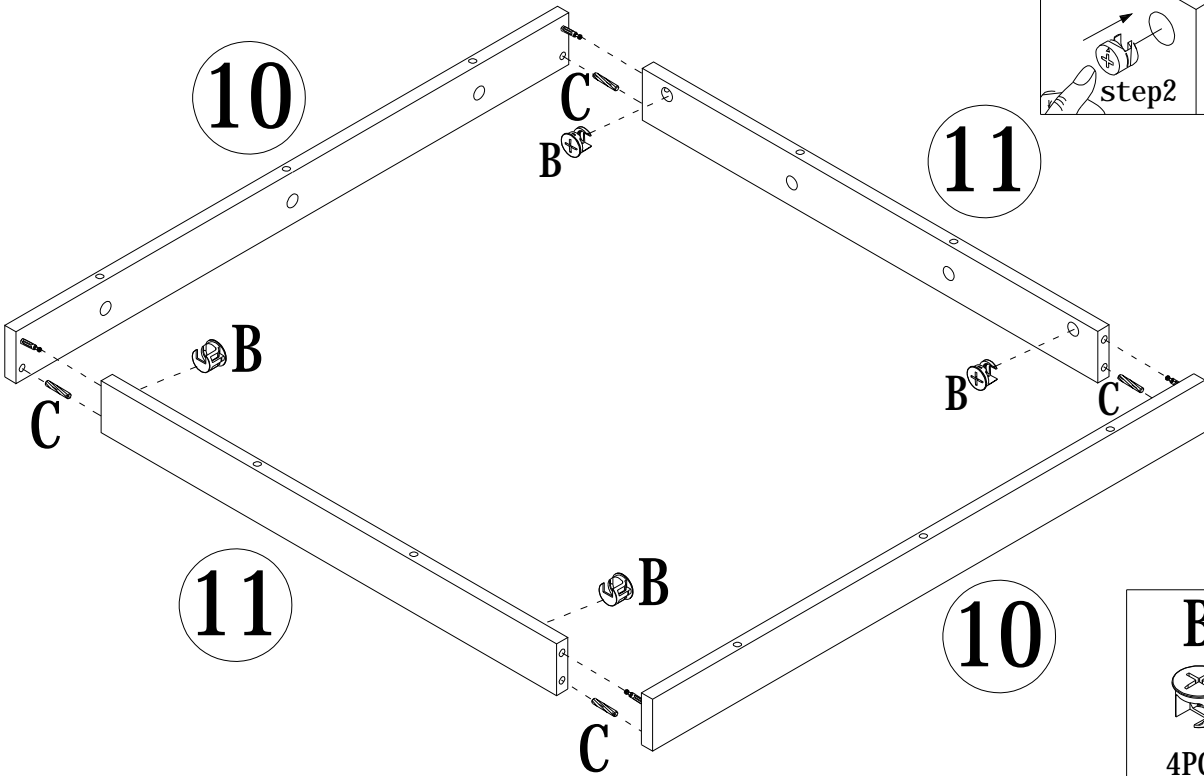


3.

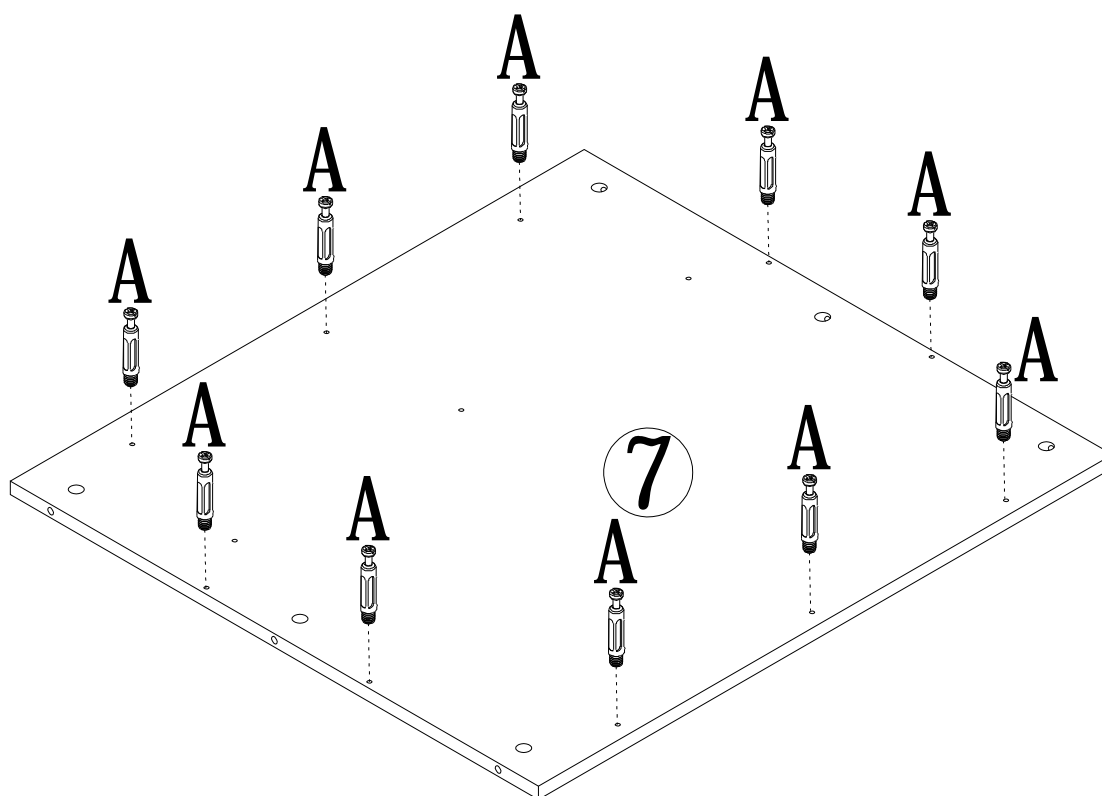


**A**  
  
 10PCS

4.

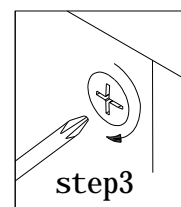
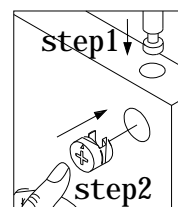
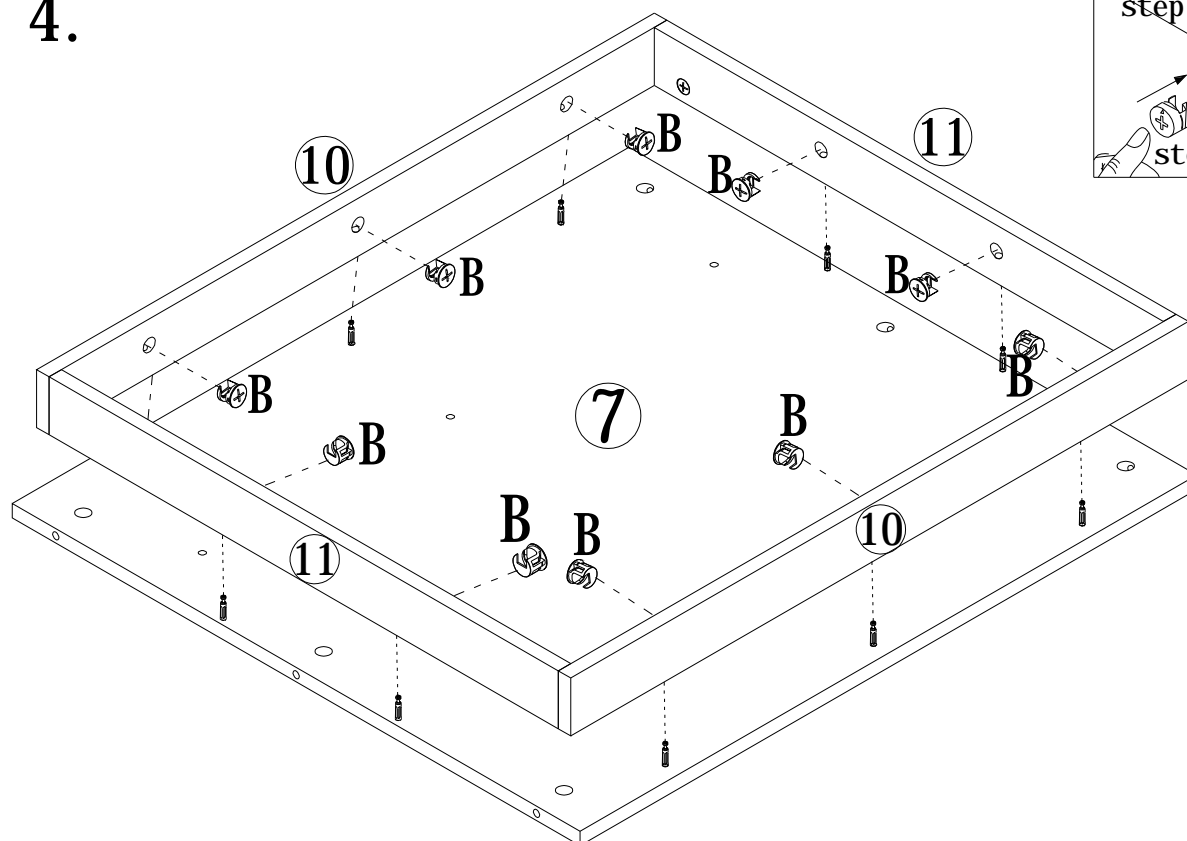


**B**  
  
 10PCS


5.

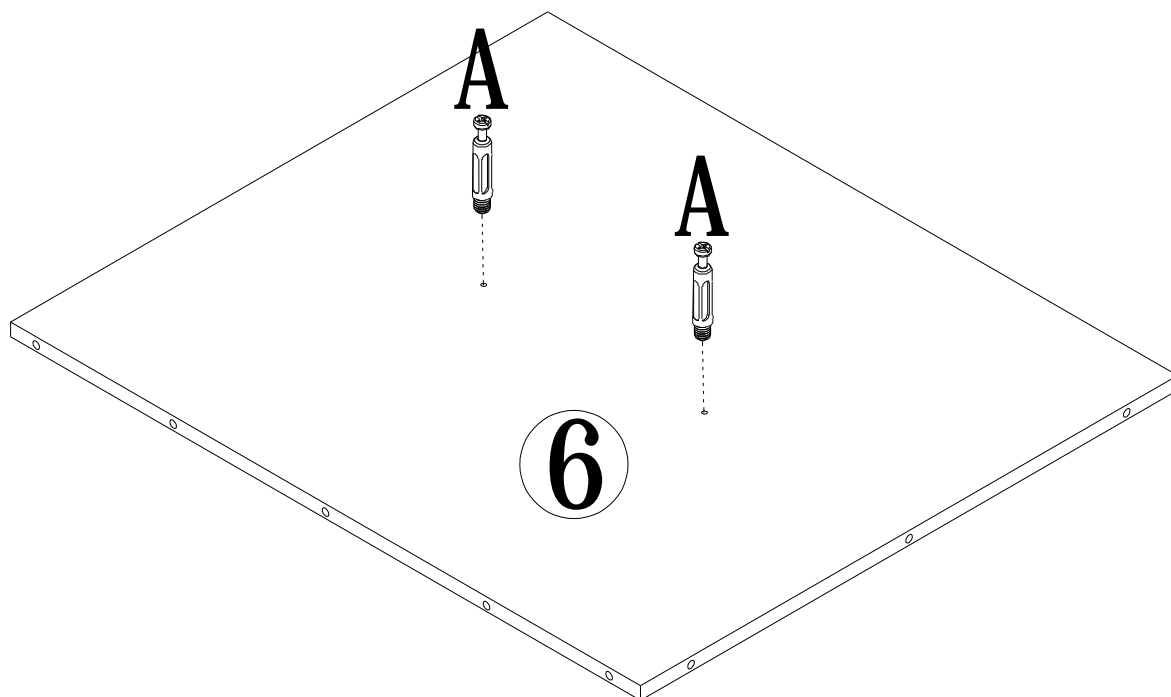

6.

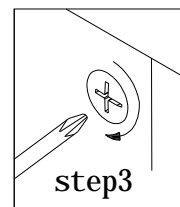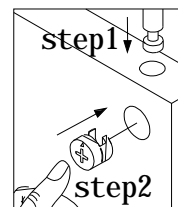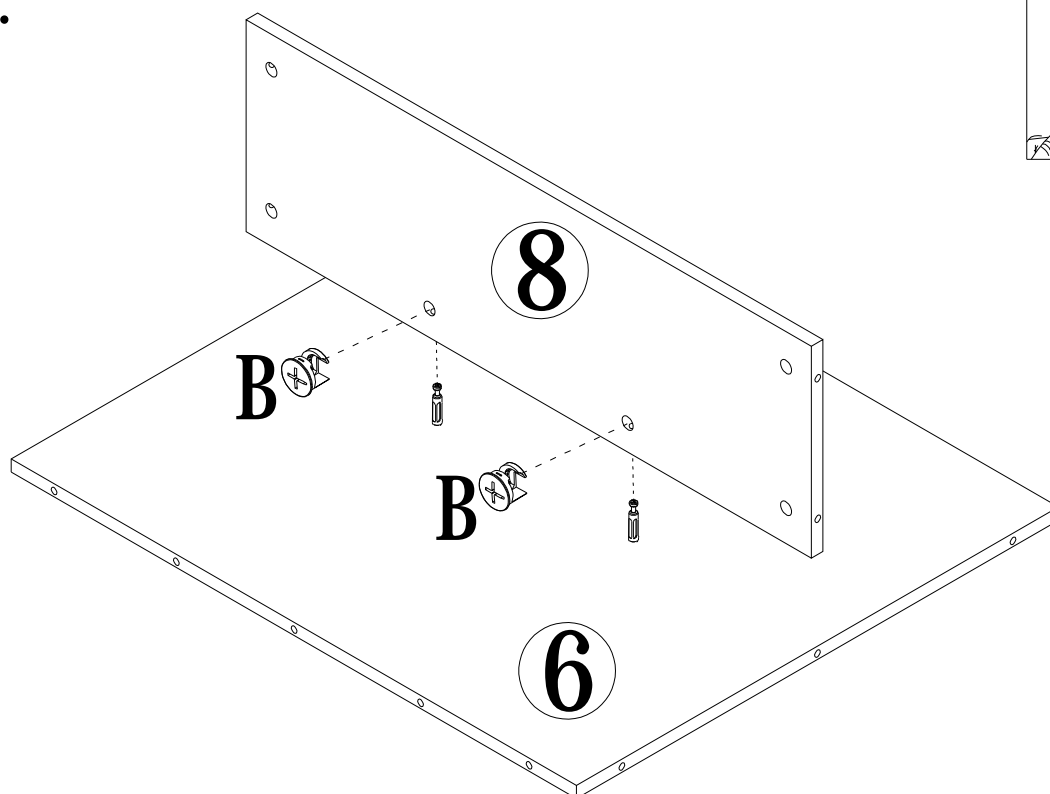


7.

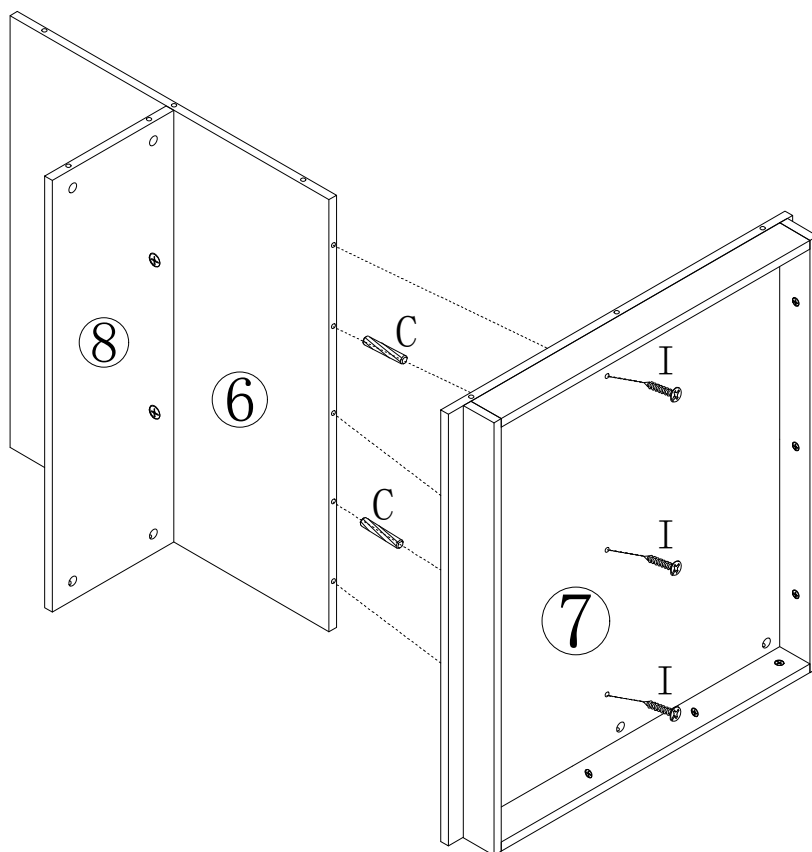


C	I
2PCS	3PCS

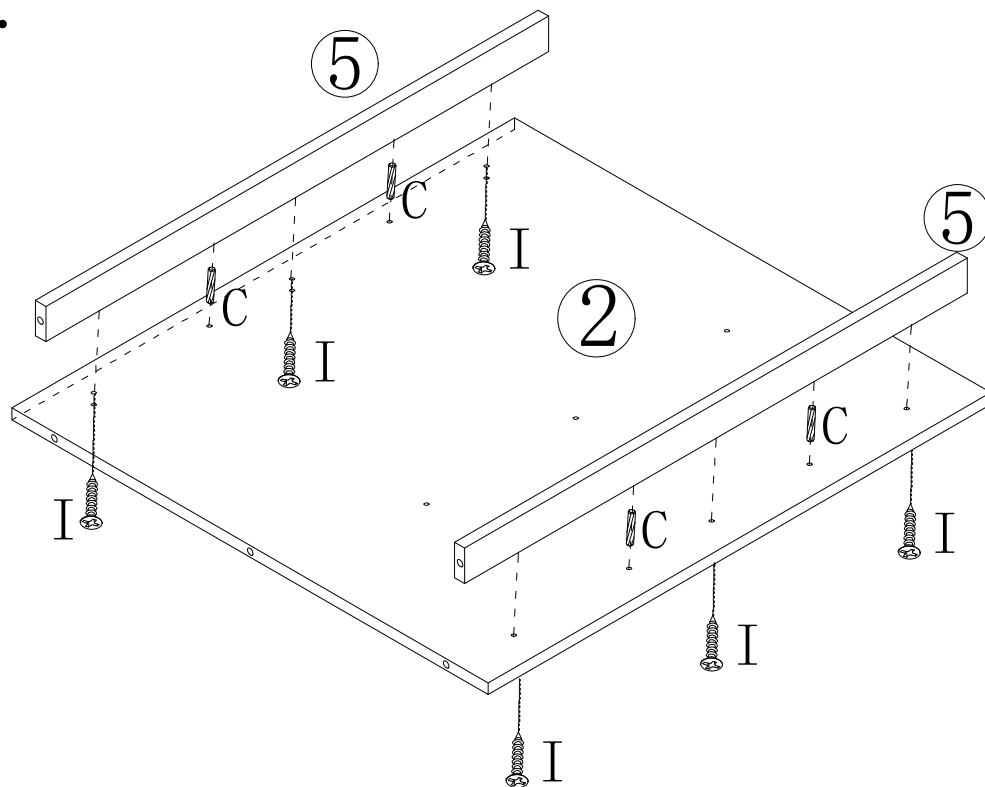

8.




C	I
4PCS	6PCS

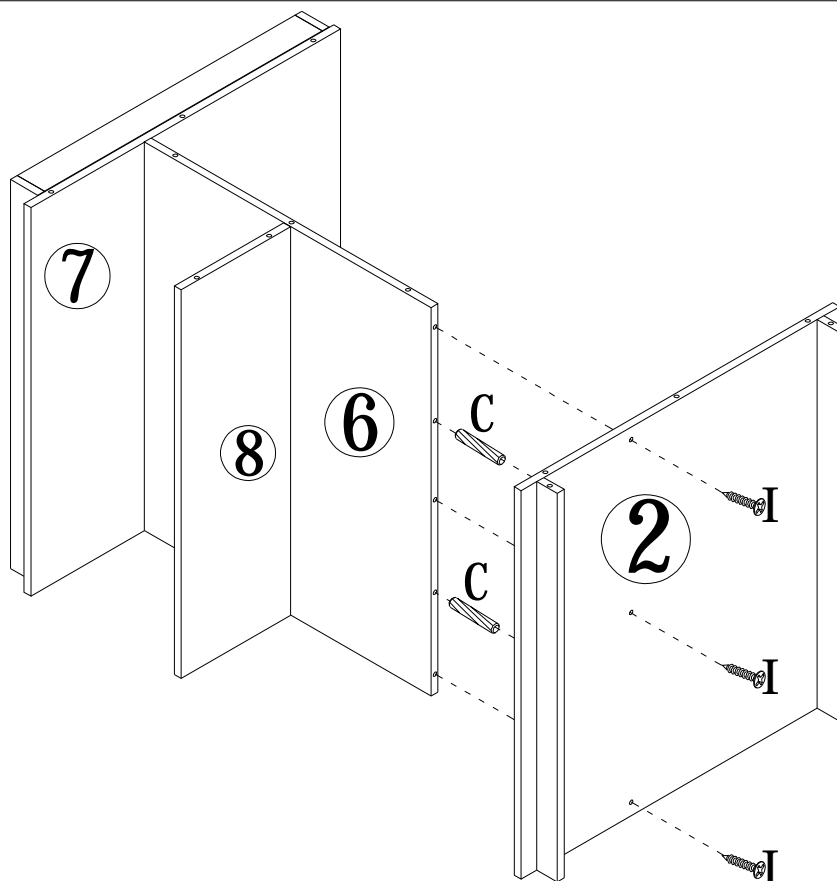



9.




C	I
	
2PCS	3PCS

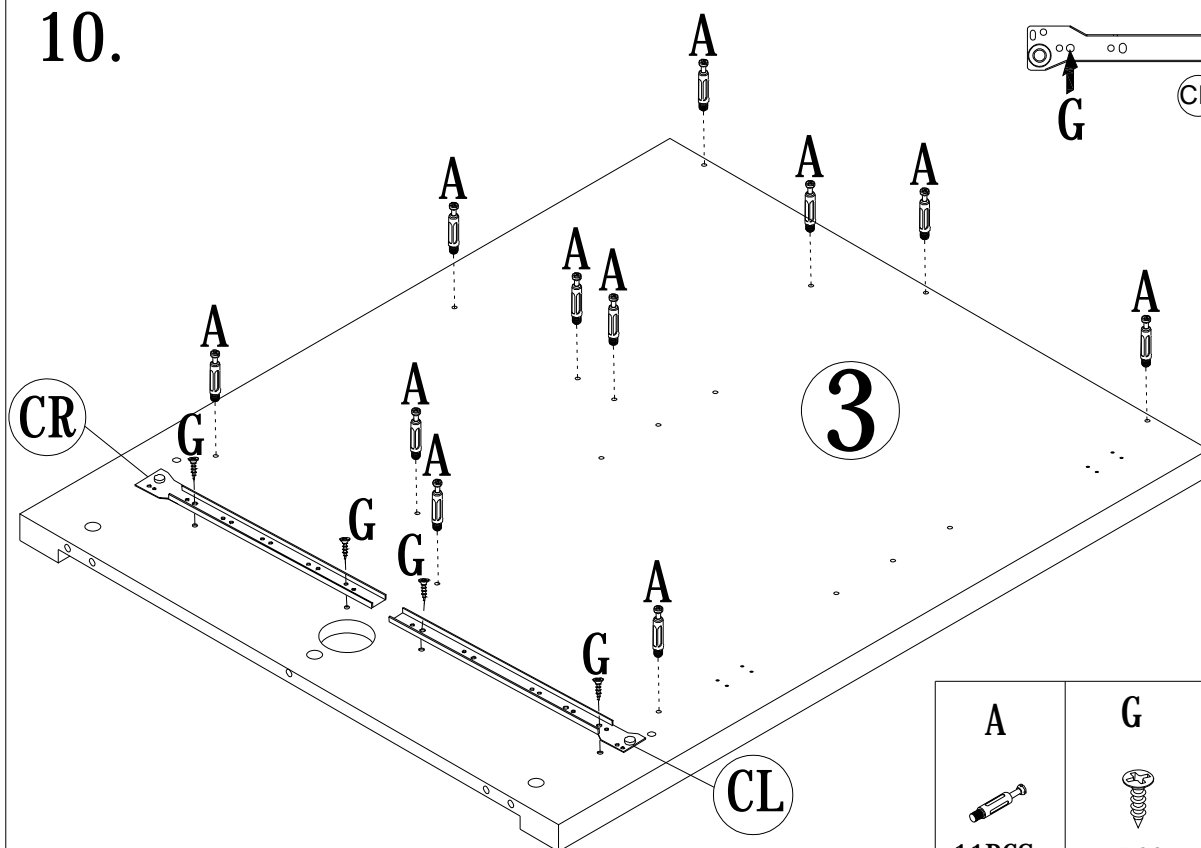10.





A	G	CL	CR
			
11PCS	4PCS	1PC	1PC

11.



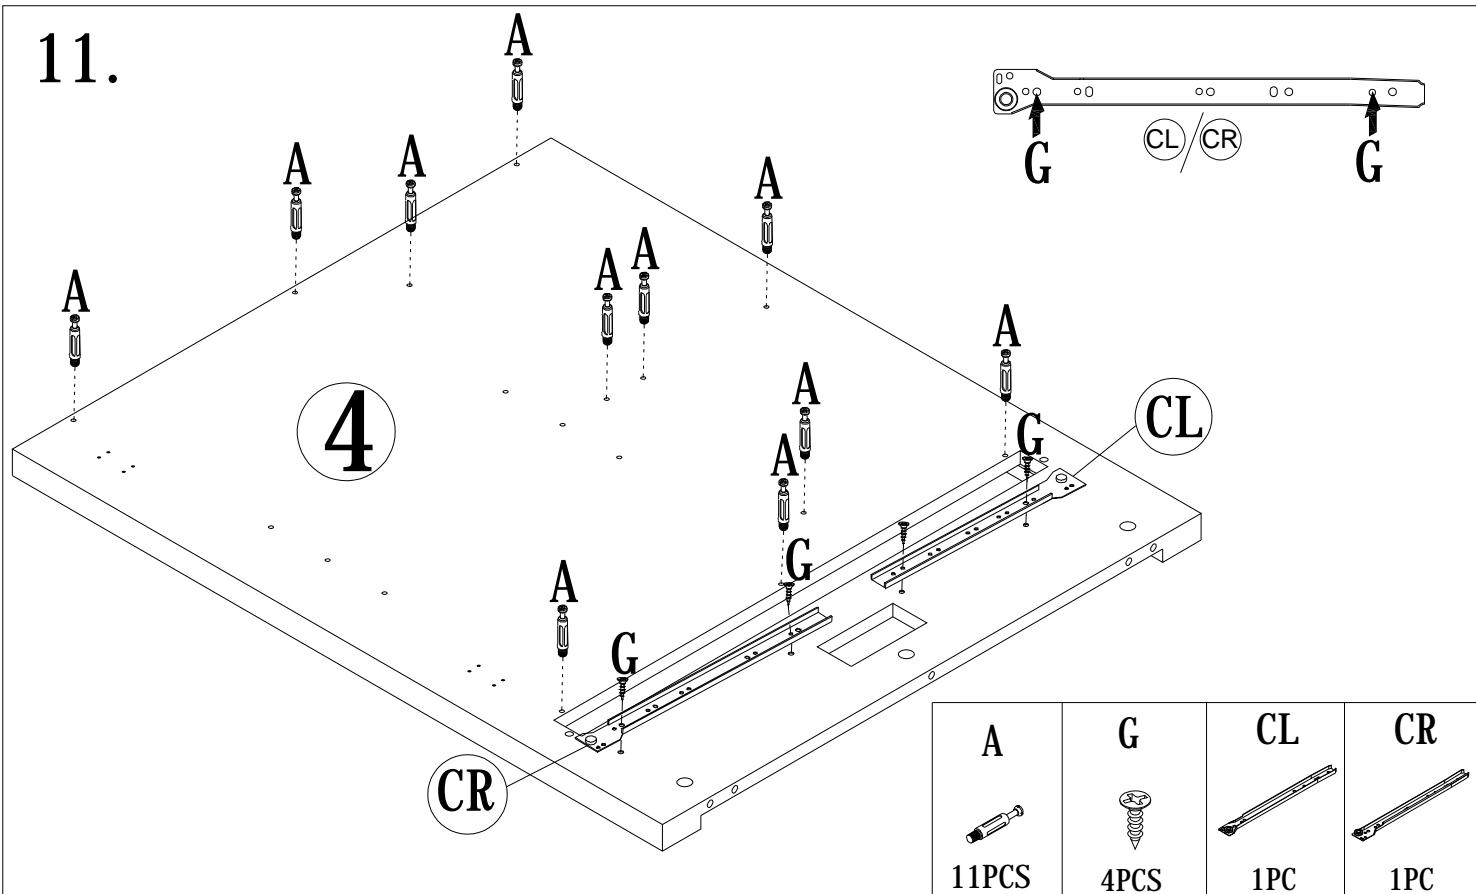


12.

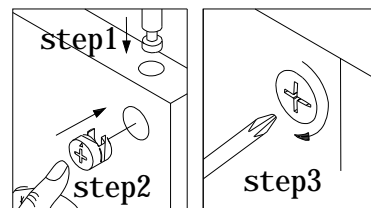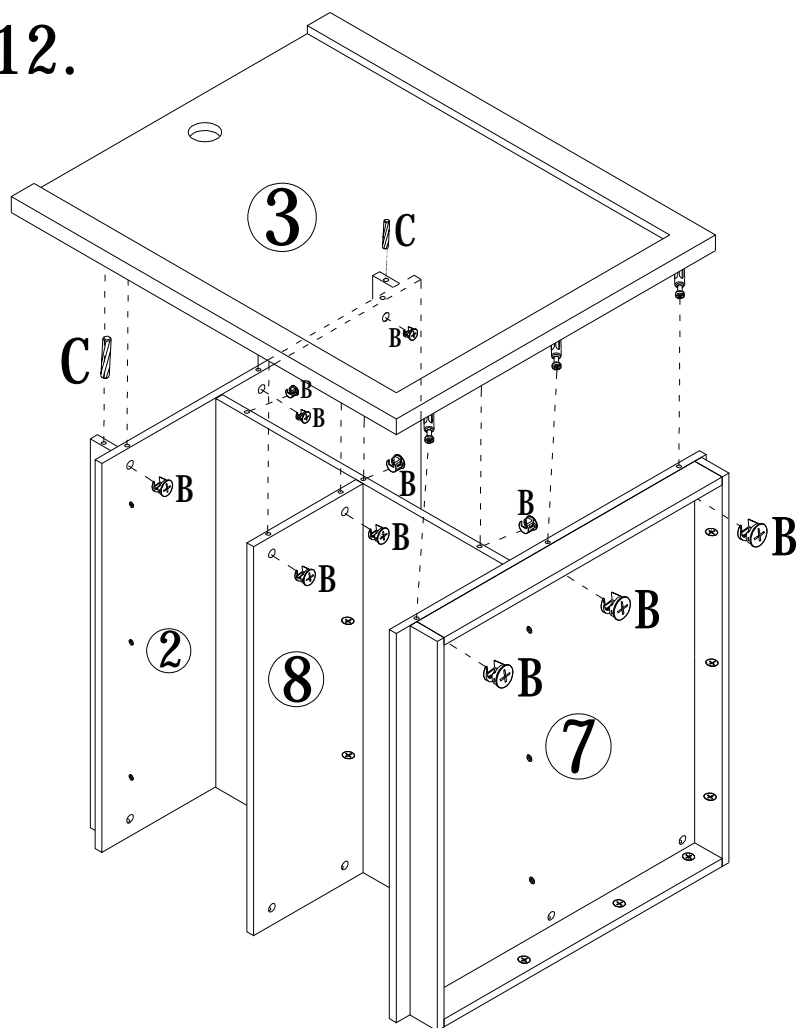


B	C
11PCS	2PCS

13.

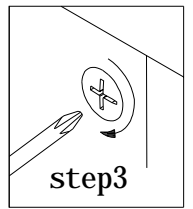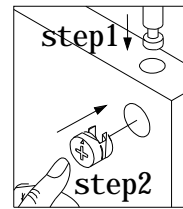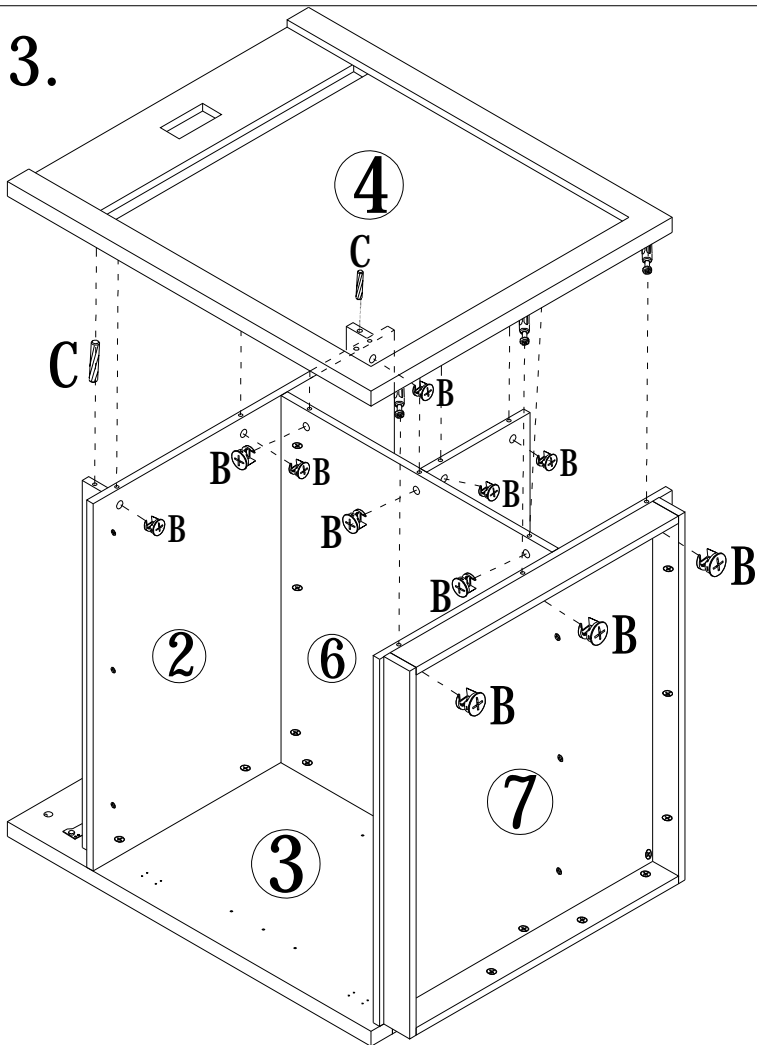




B	C
11PCS	2PCS

14.

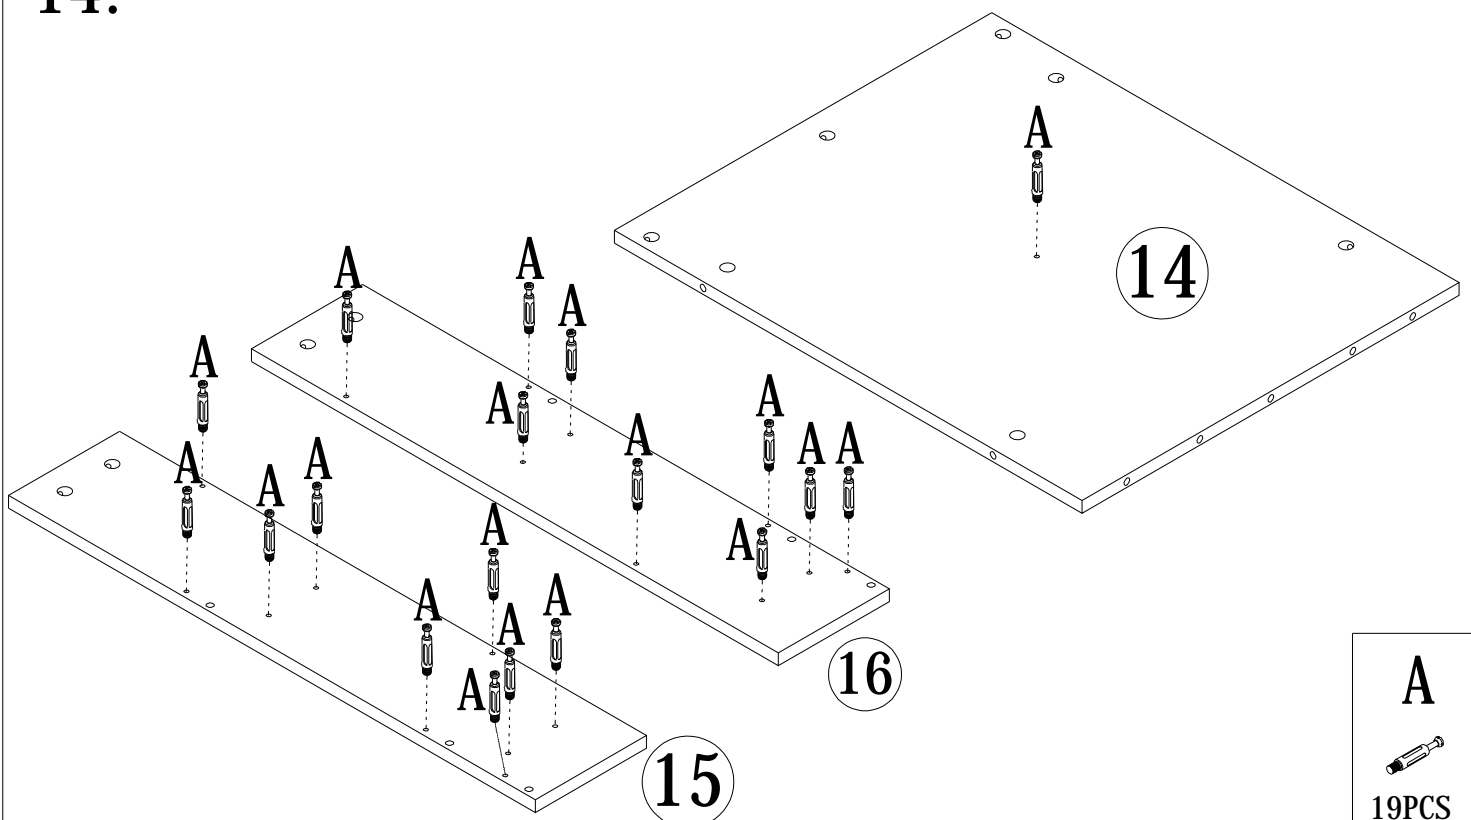

A
19PCS

15.

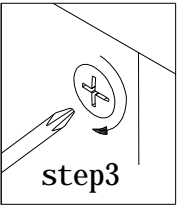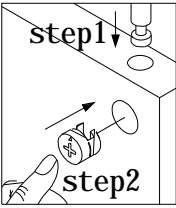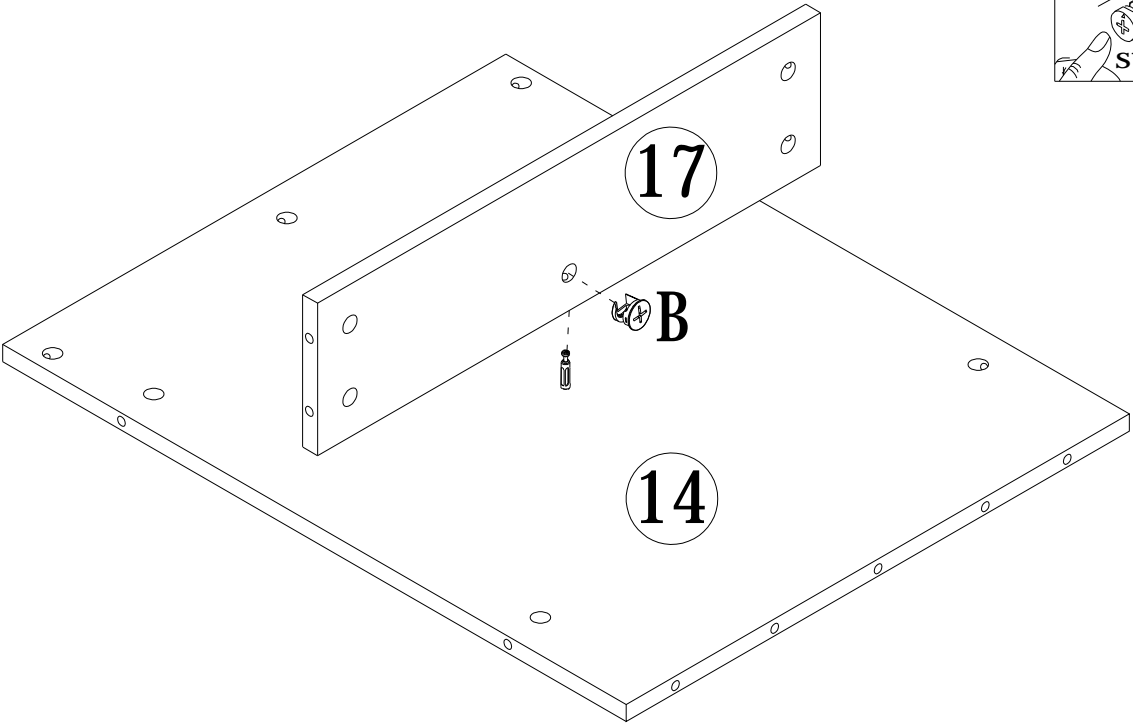


B



1PC

16.



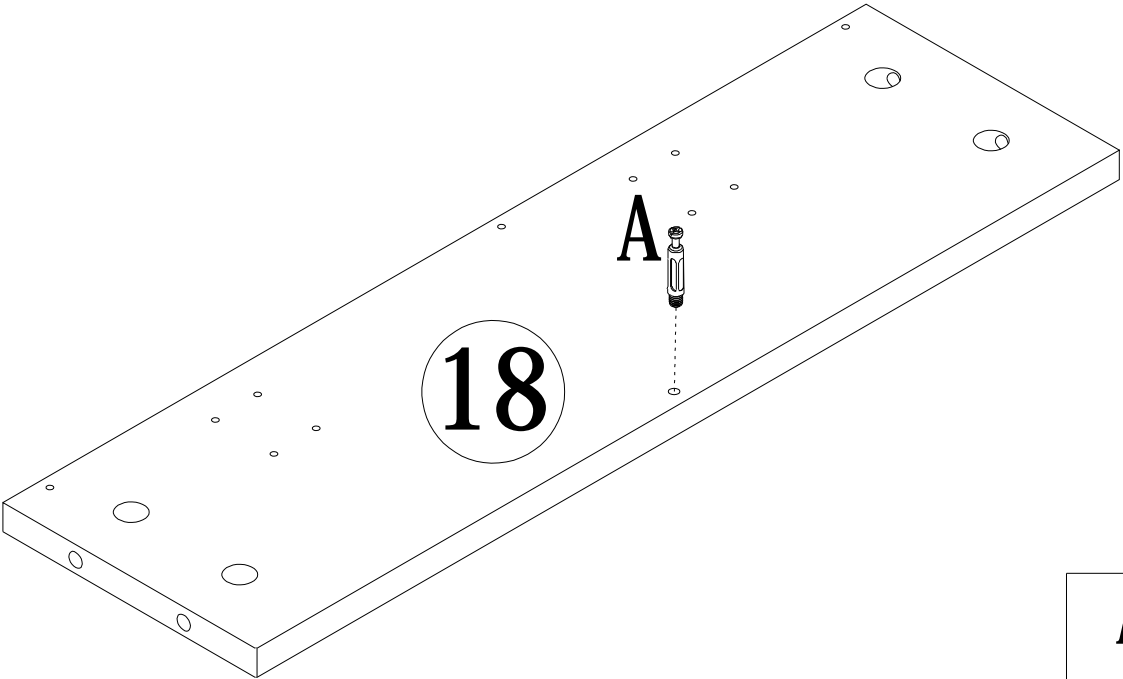


A



1PC

17.

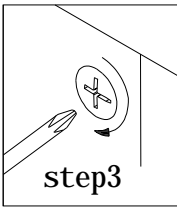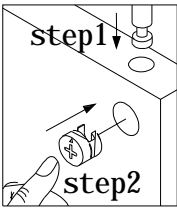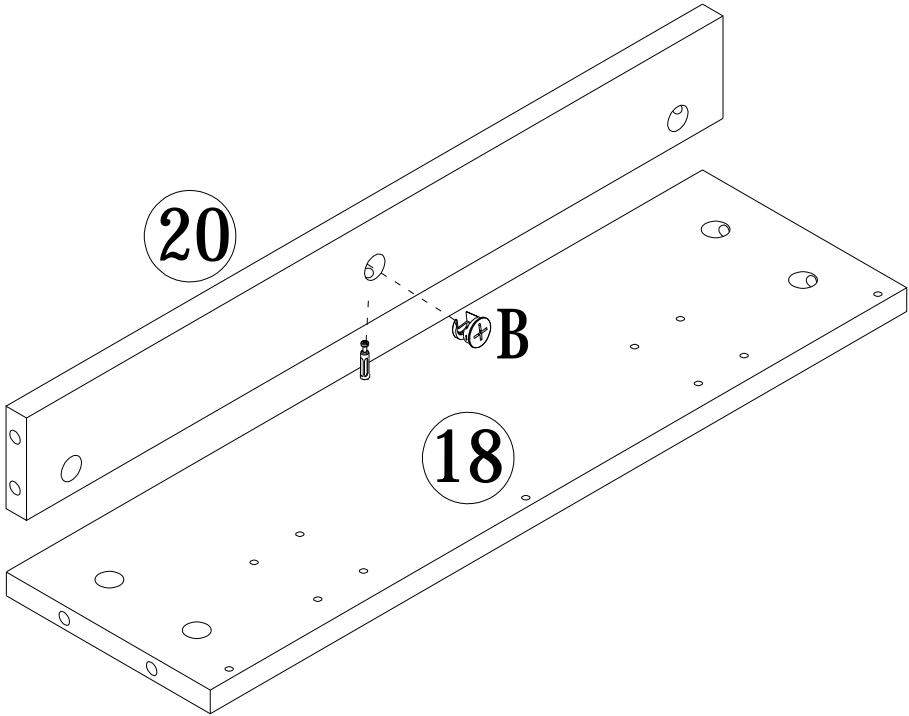


B



1PC

18.

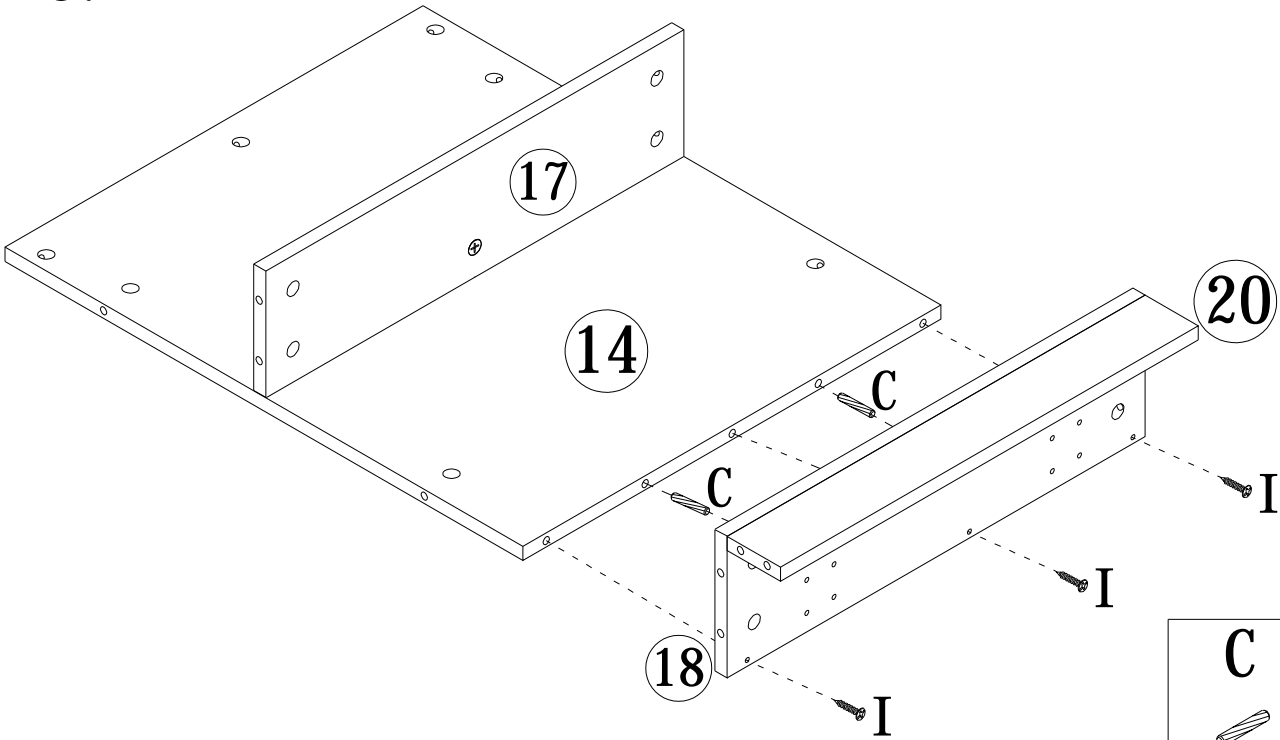

C





2PCS



I





3PCS

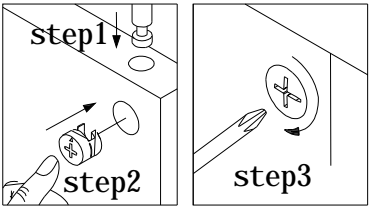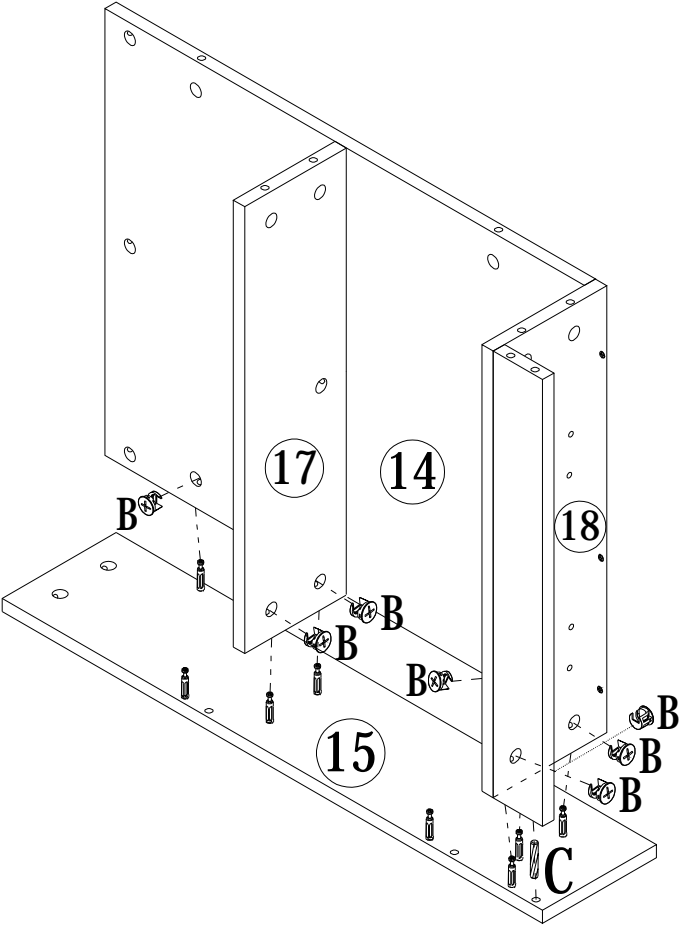

19.






B	C
	
7PCS	1PC

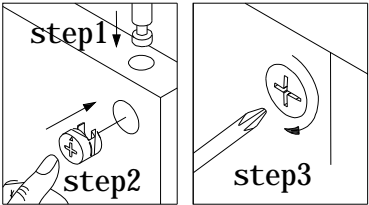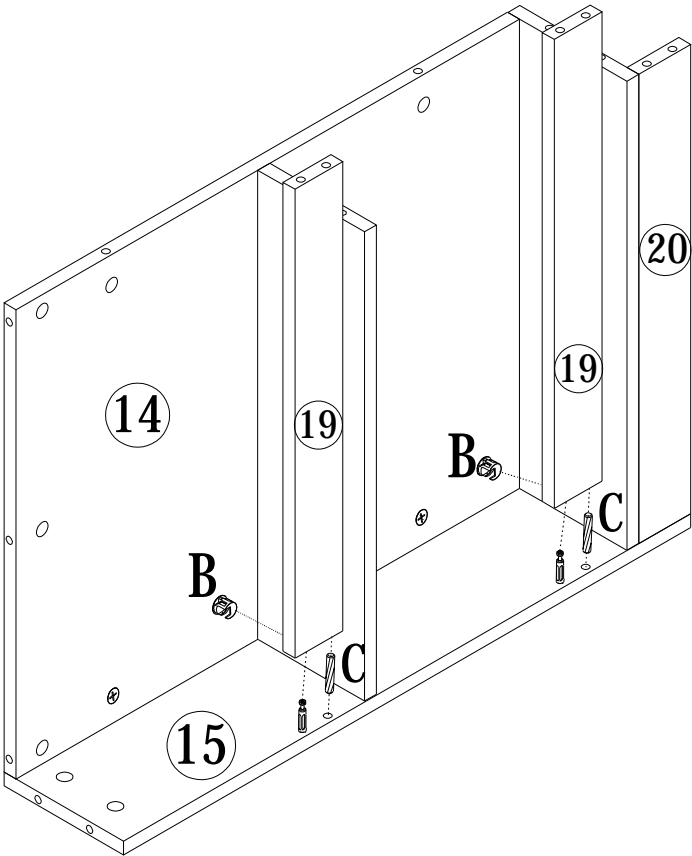

20.




B	C
	
2PCS	2PCS

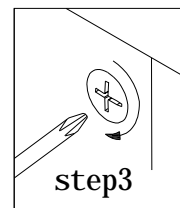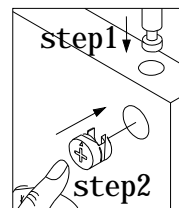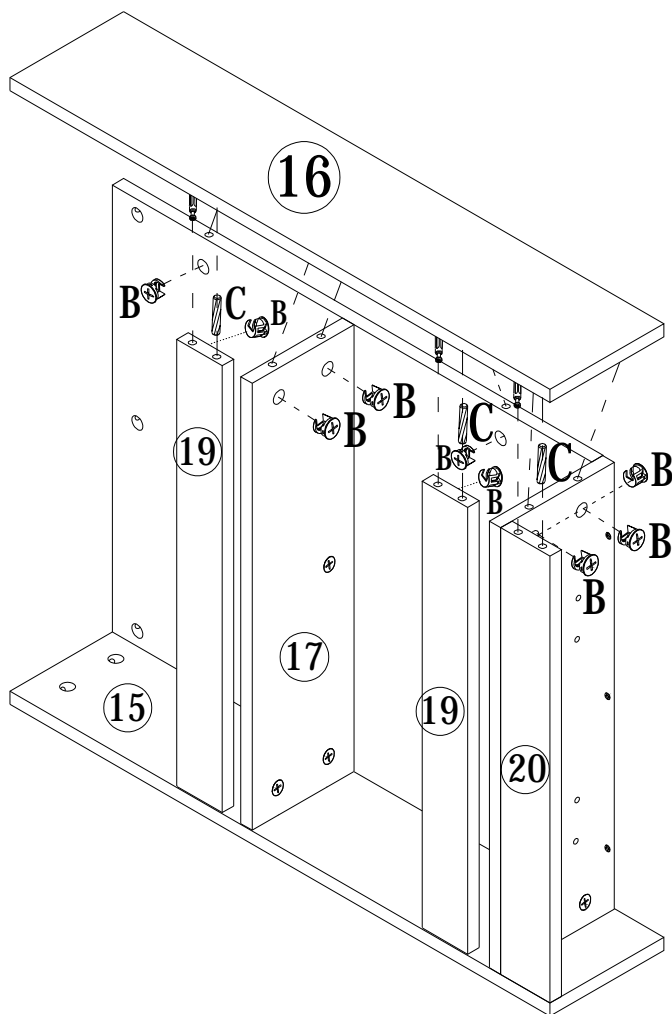
21.




B	C
	
9PCS	3PCS

22.

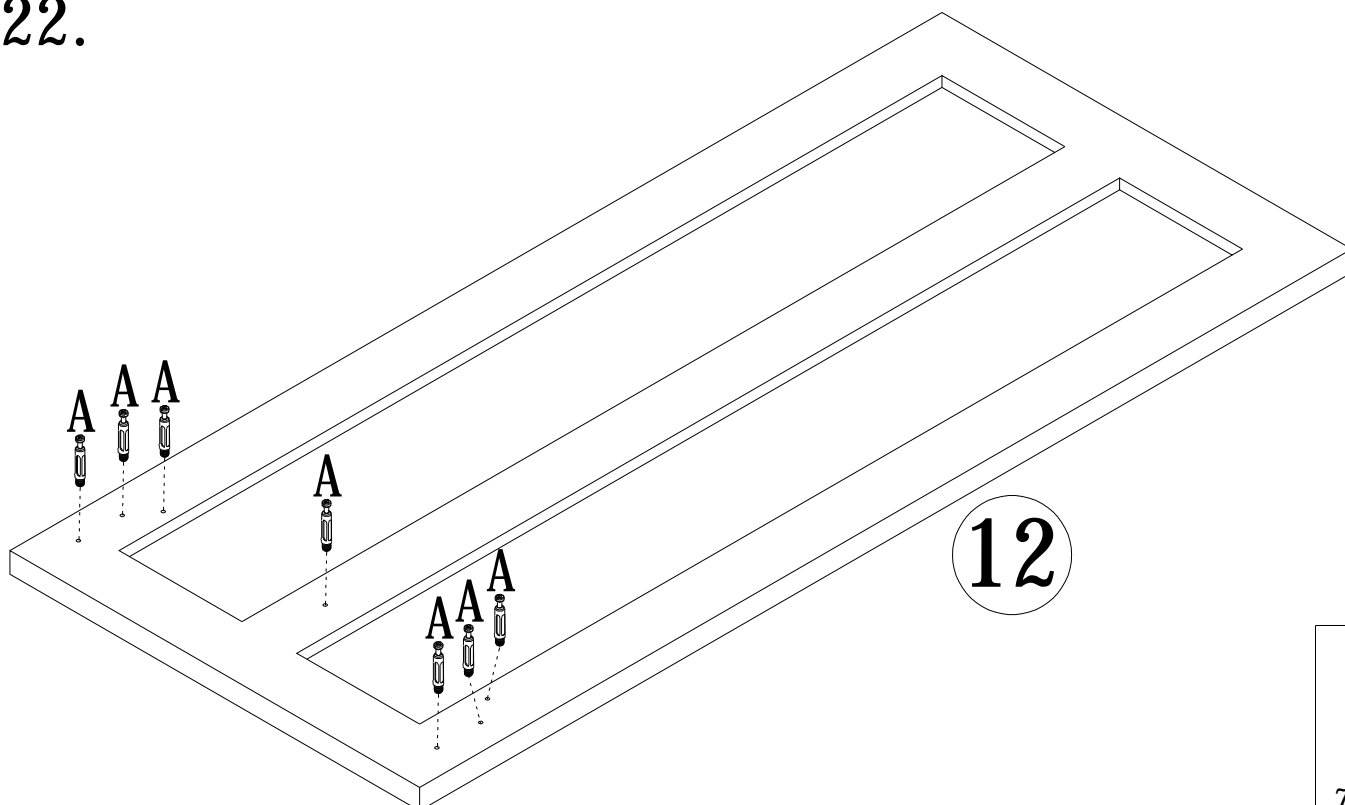


A

7PCS

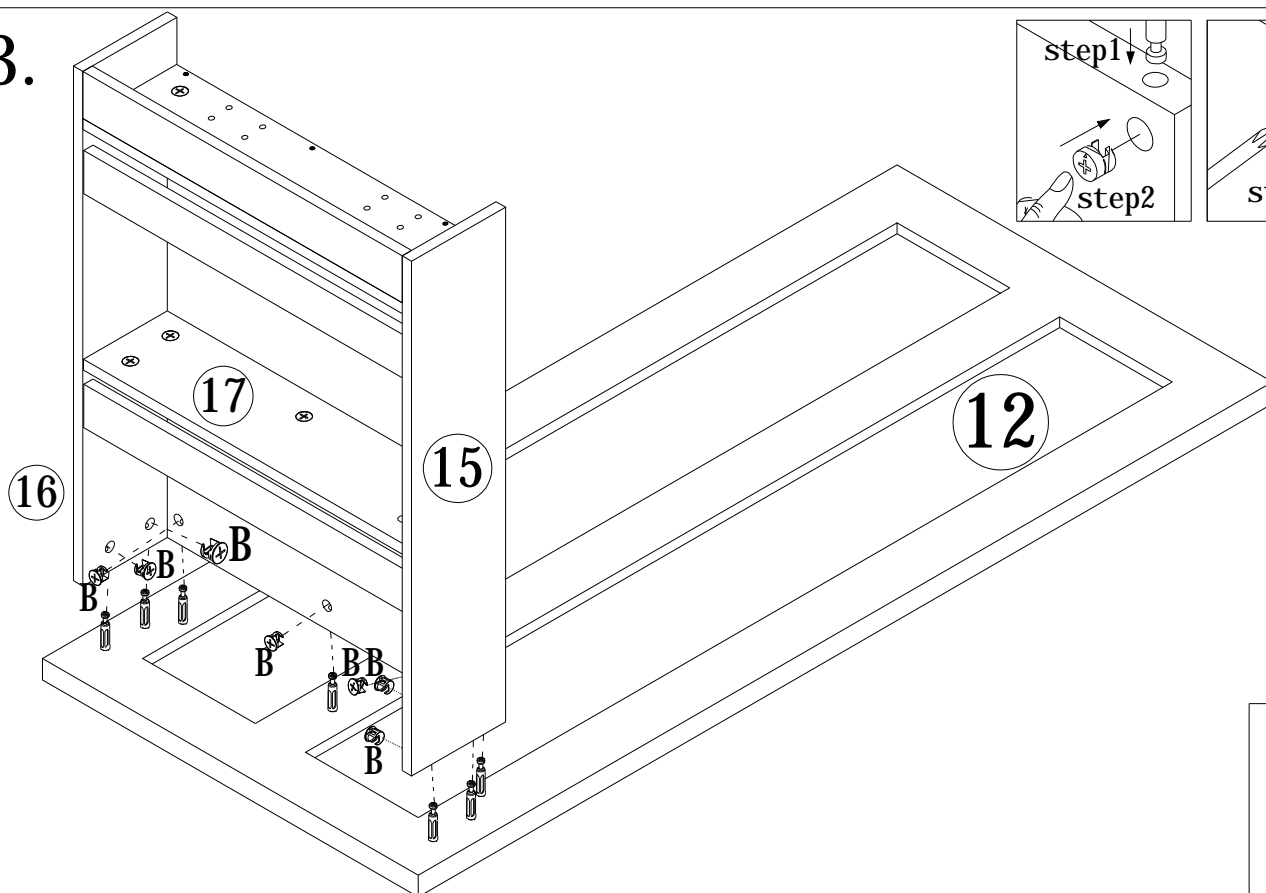23.



**B**  
  
 7PCS

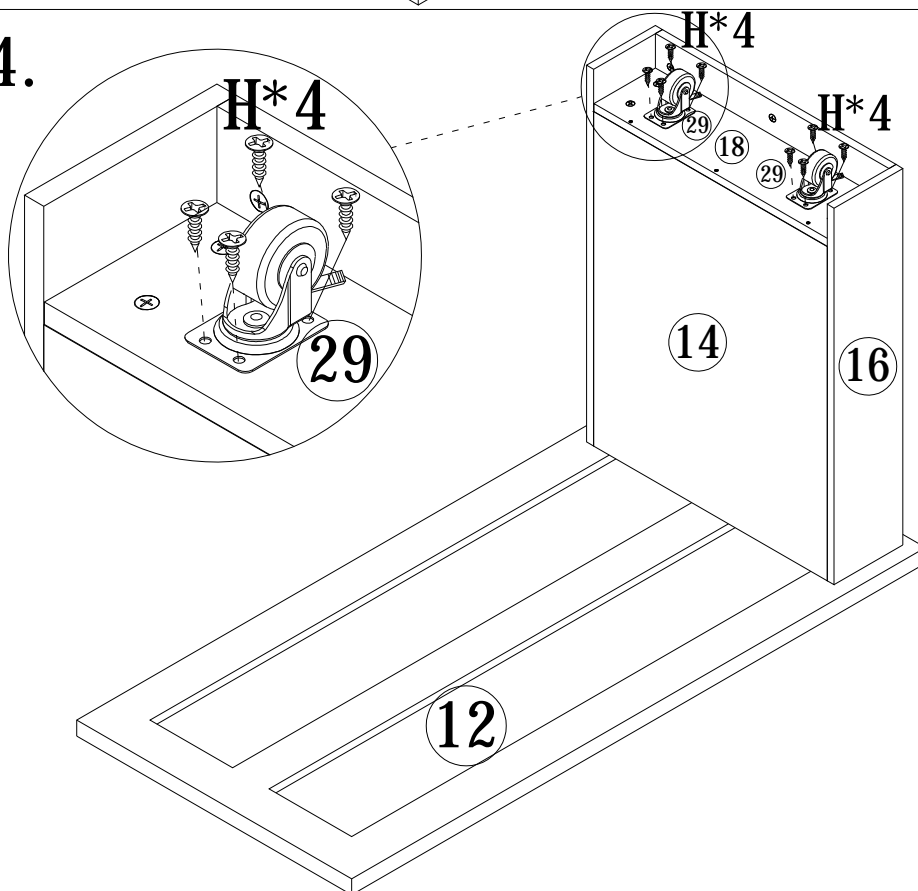
24.






**29**  
  
 2PCS


**H**  
  
 8PCS


25. \*2

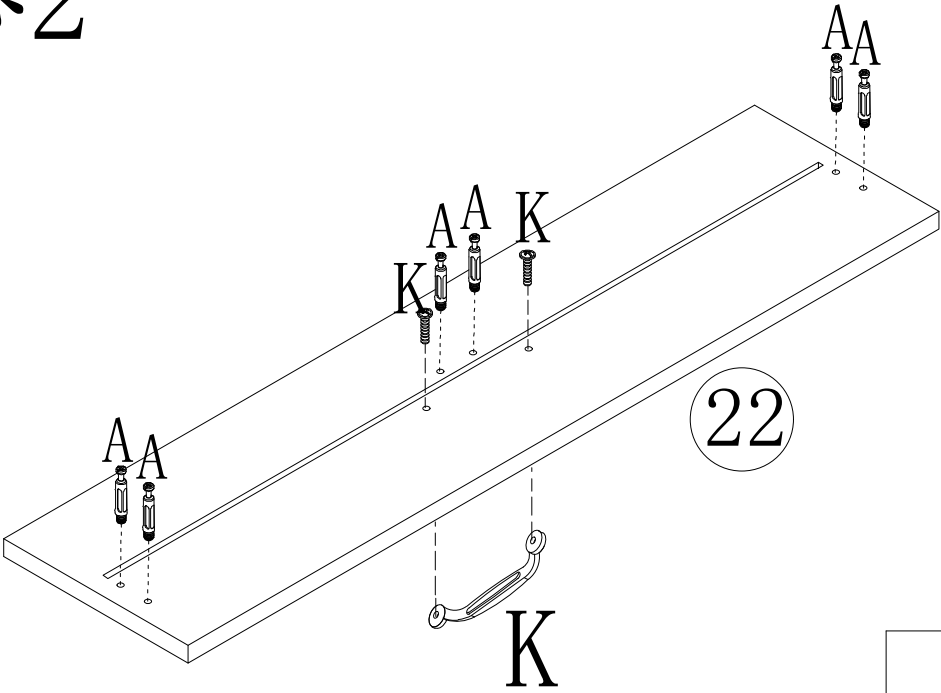


A	K	K
		
12PCS	2PCS	4PCS

26. \*2

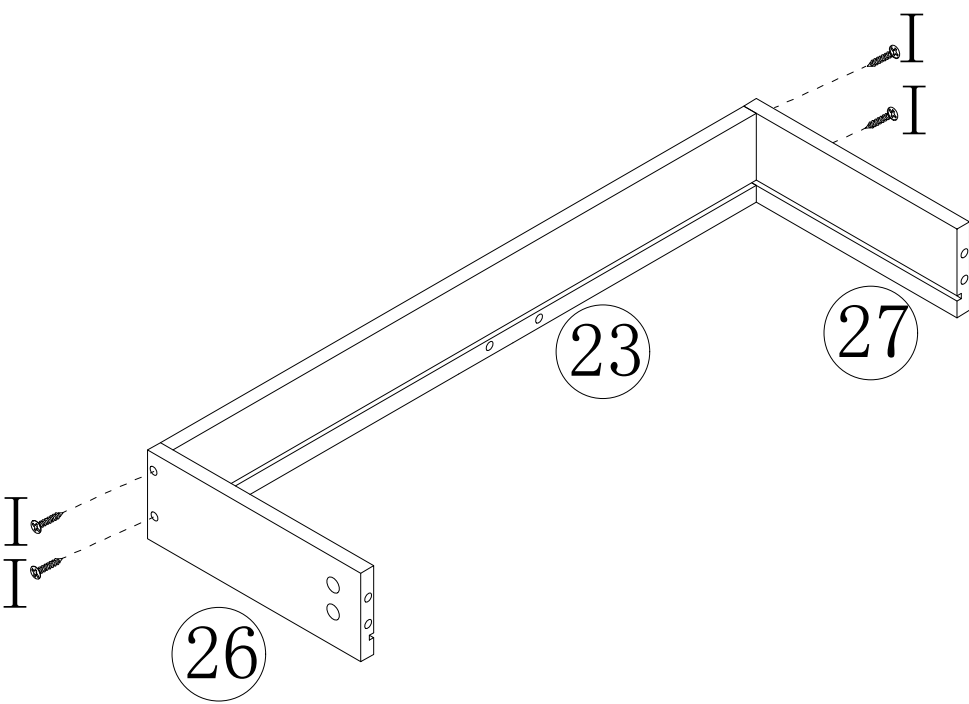




I

8PCS

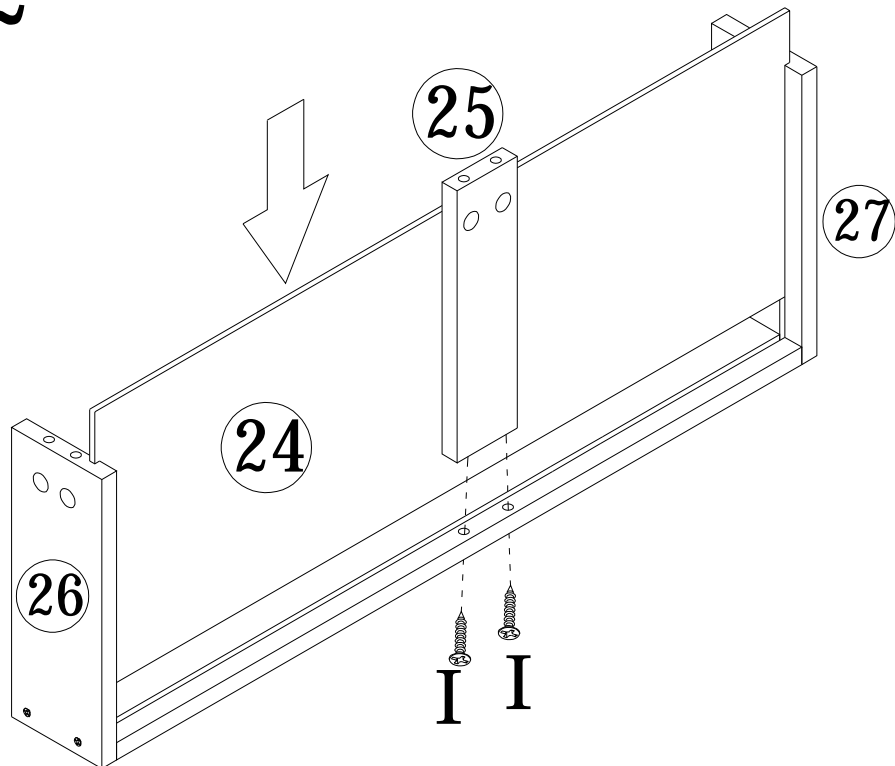27. \*2




I  
4PCS

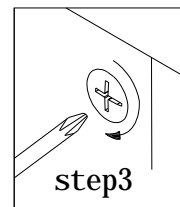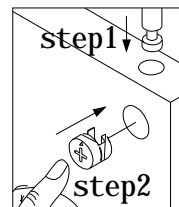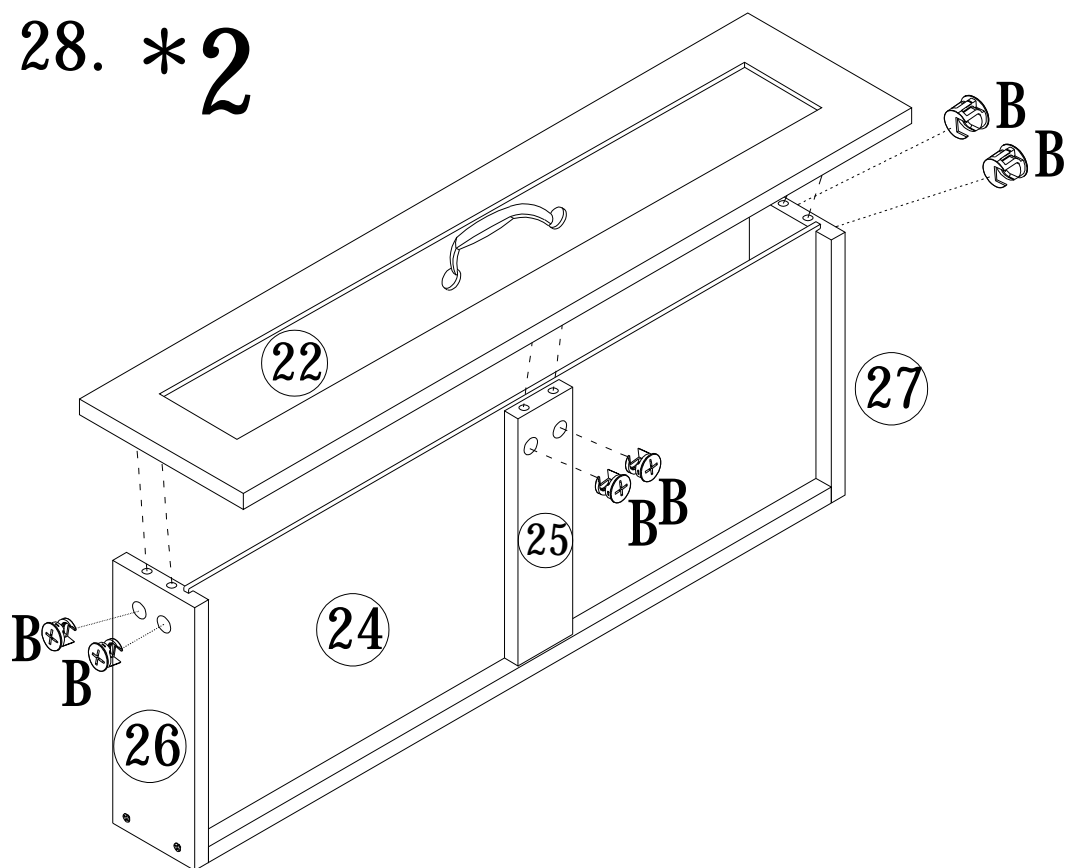28. \*2




B  
12PCS


29. \*2

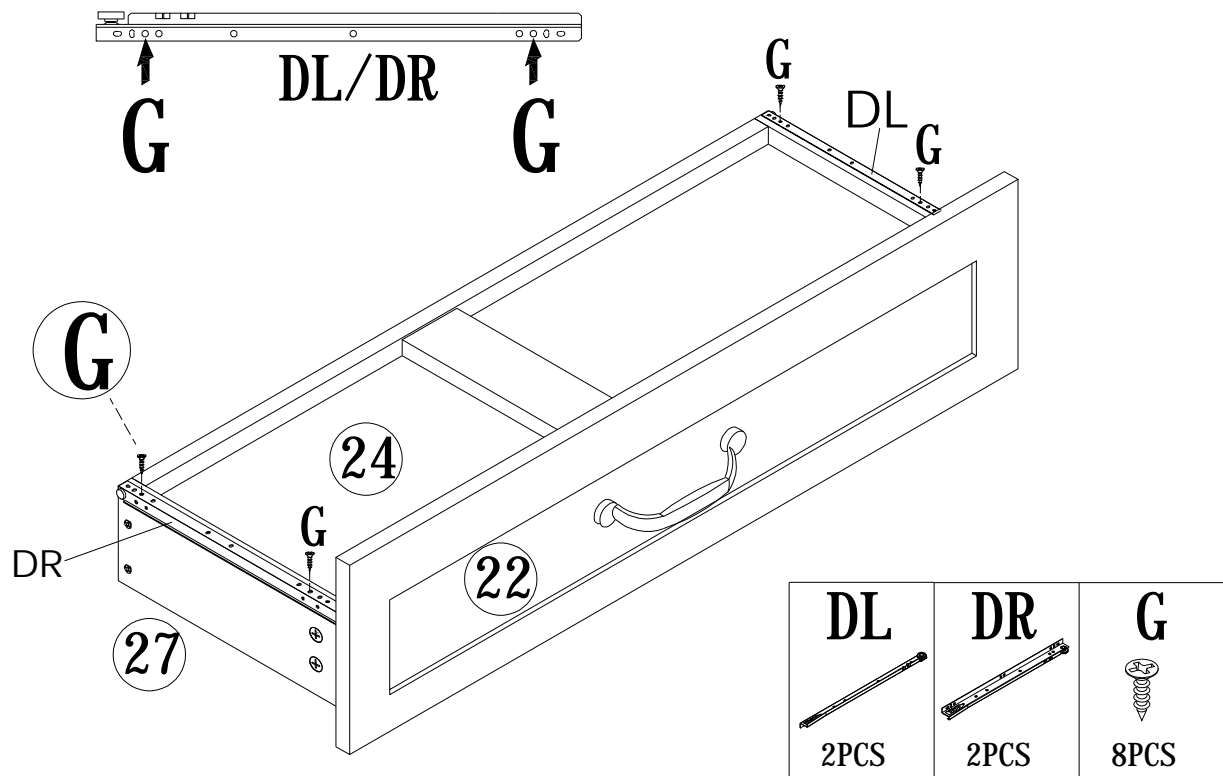

30.


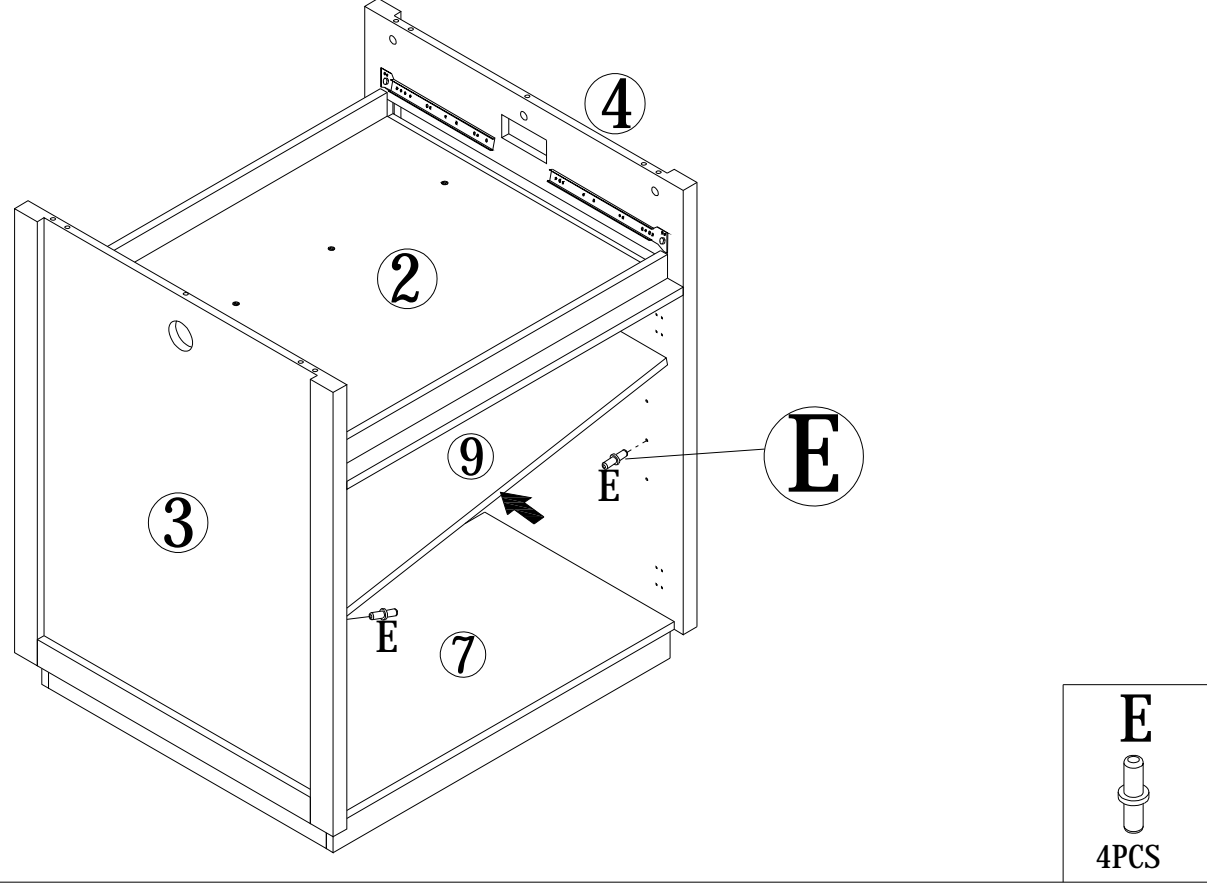


31. \*2

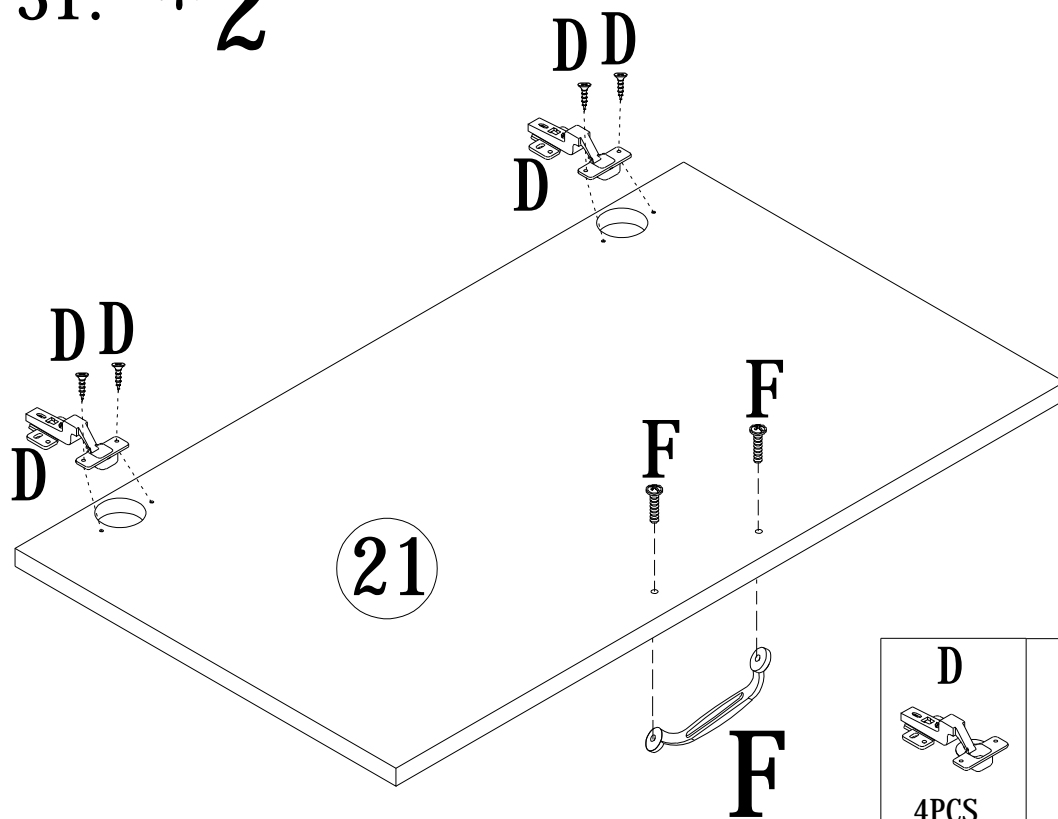


D	D	F	F
4PCS	8PCS	2PCS	4PCS

32.

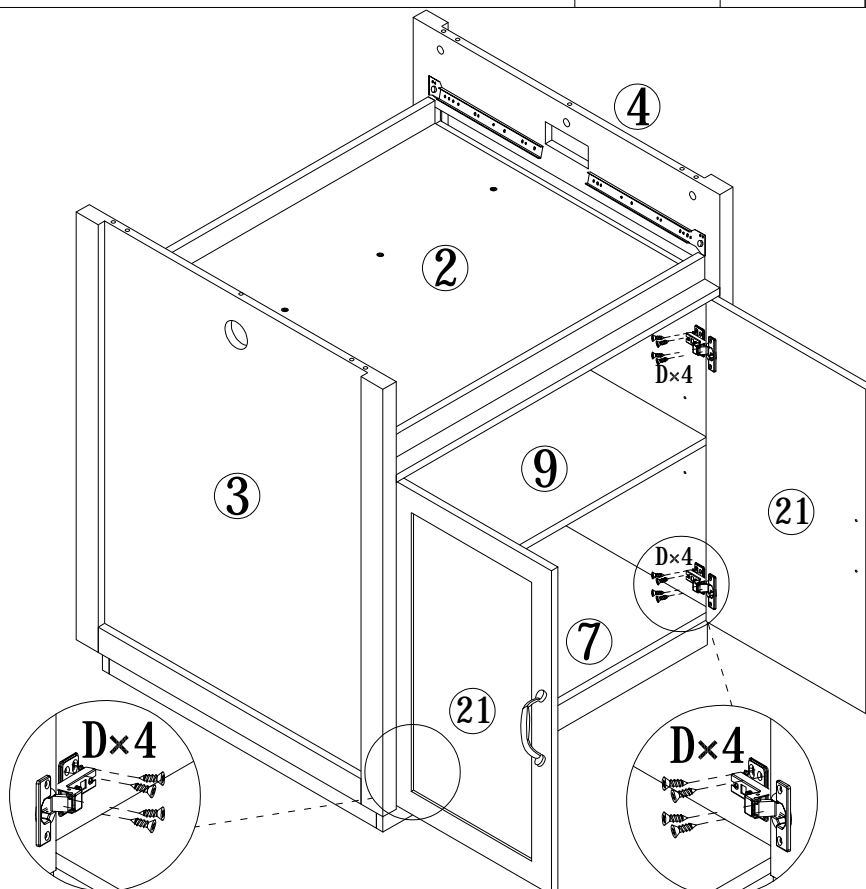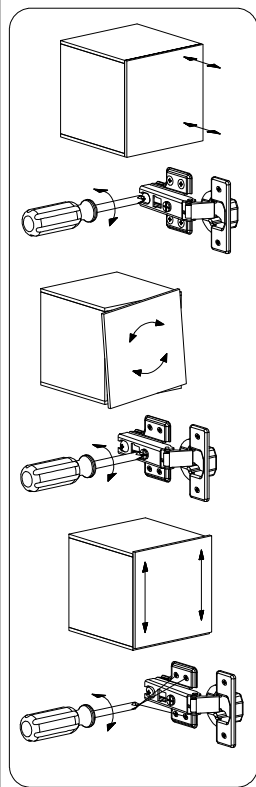


D
16PCS

33.


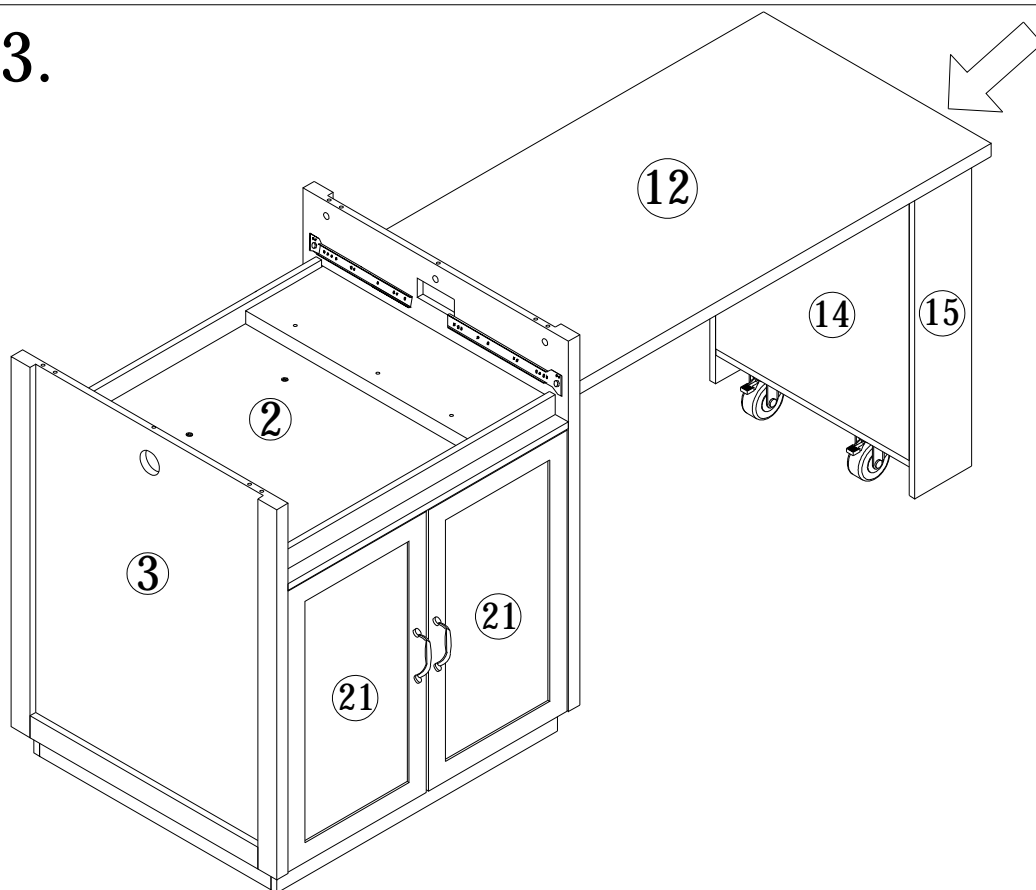


34.


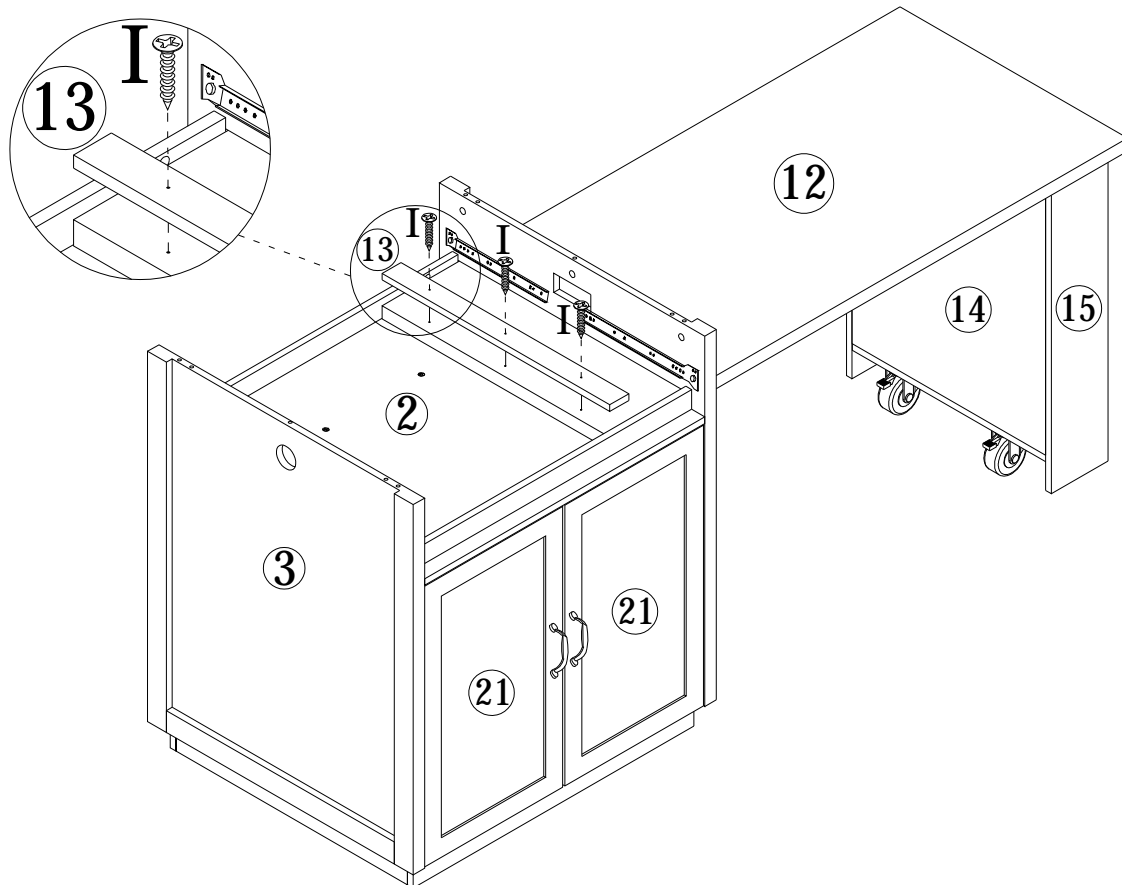


I  
3PCS



35.

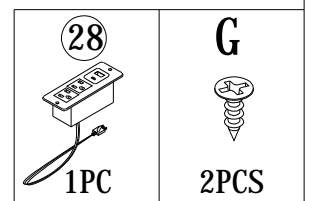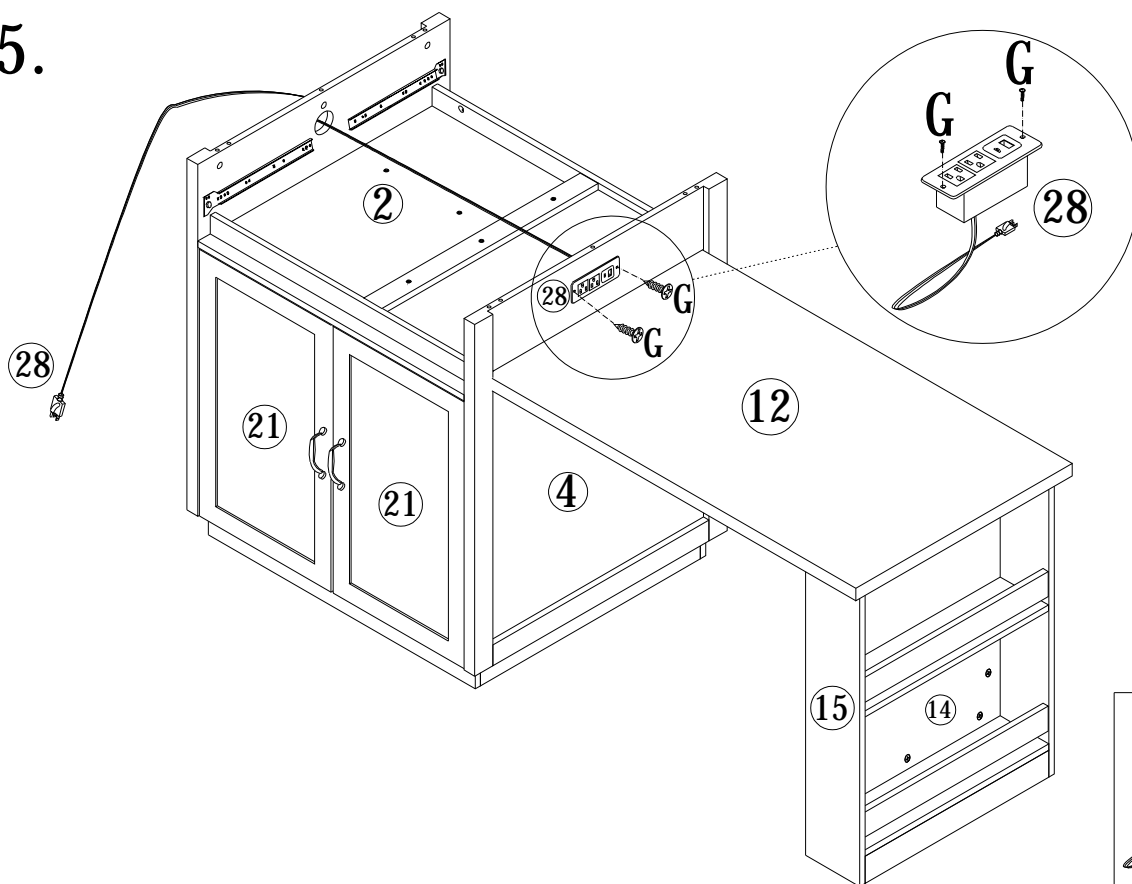

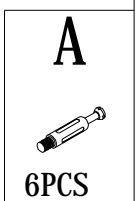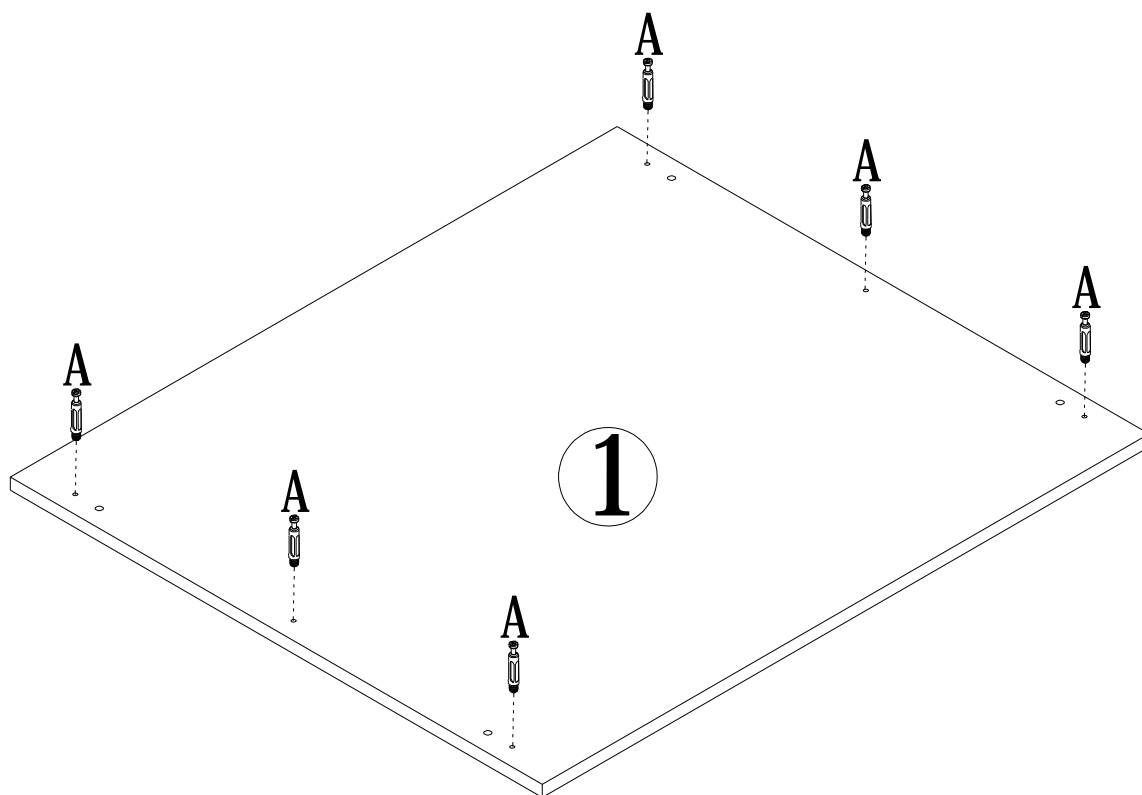

36.

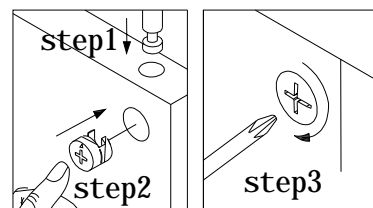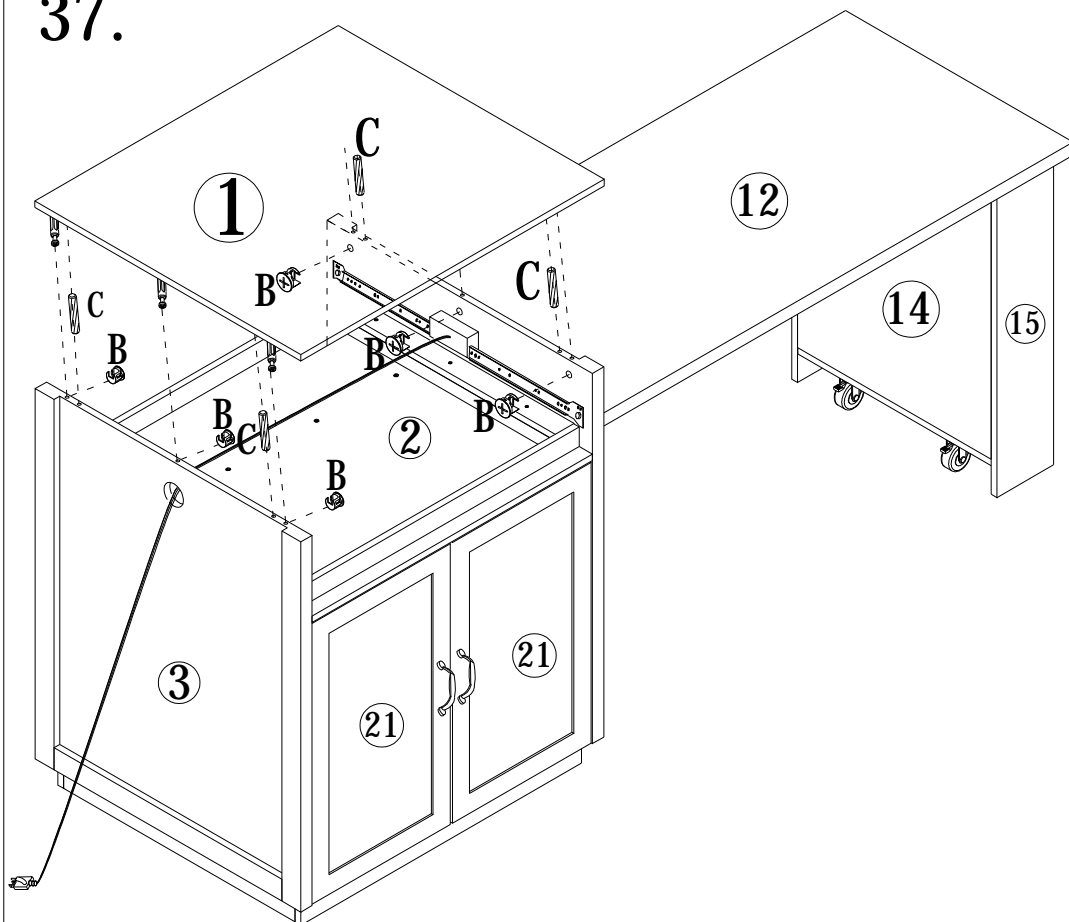


# 37.





B	C
	
6PCS	4PCS

# 38.

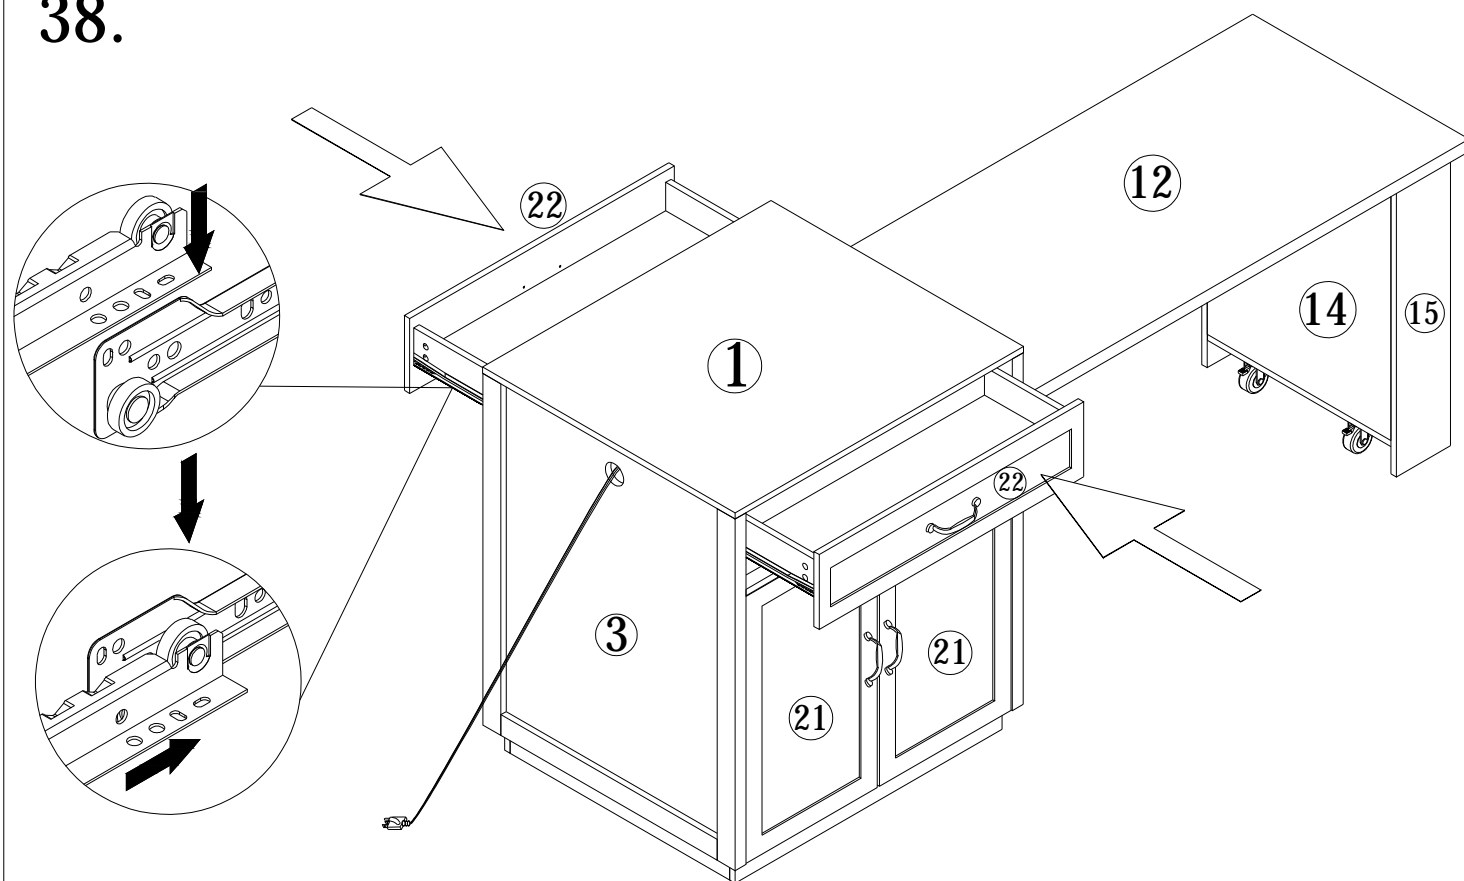

# 39.

In order to make the product more beautiful, please paste hardware J on the exposed holes

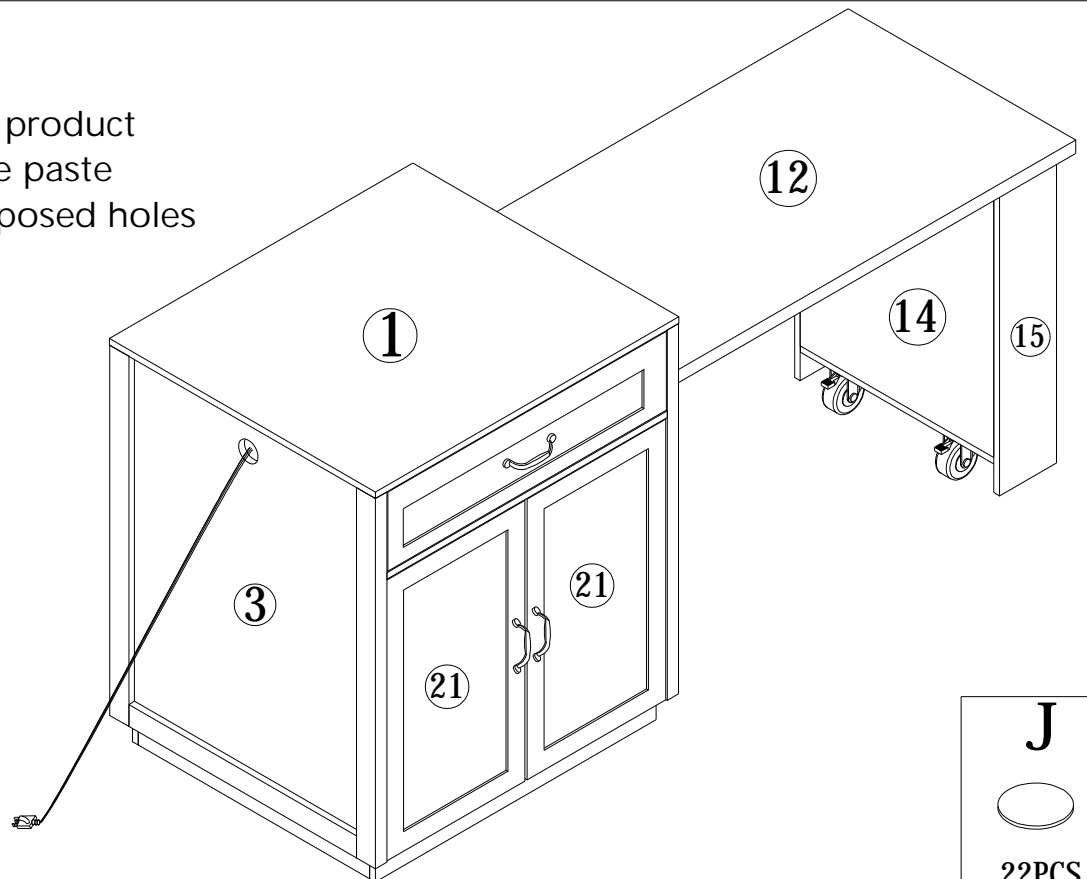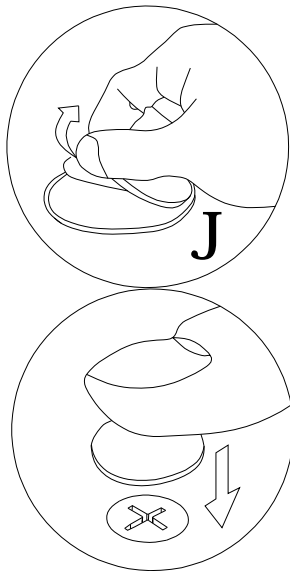

# 40.

