



ASSEMBLY INSTRUCTIONS

ARM CHAIR

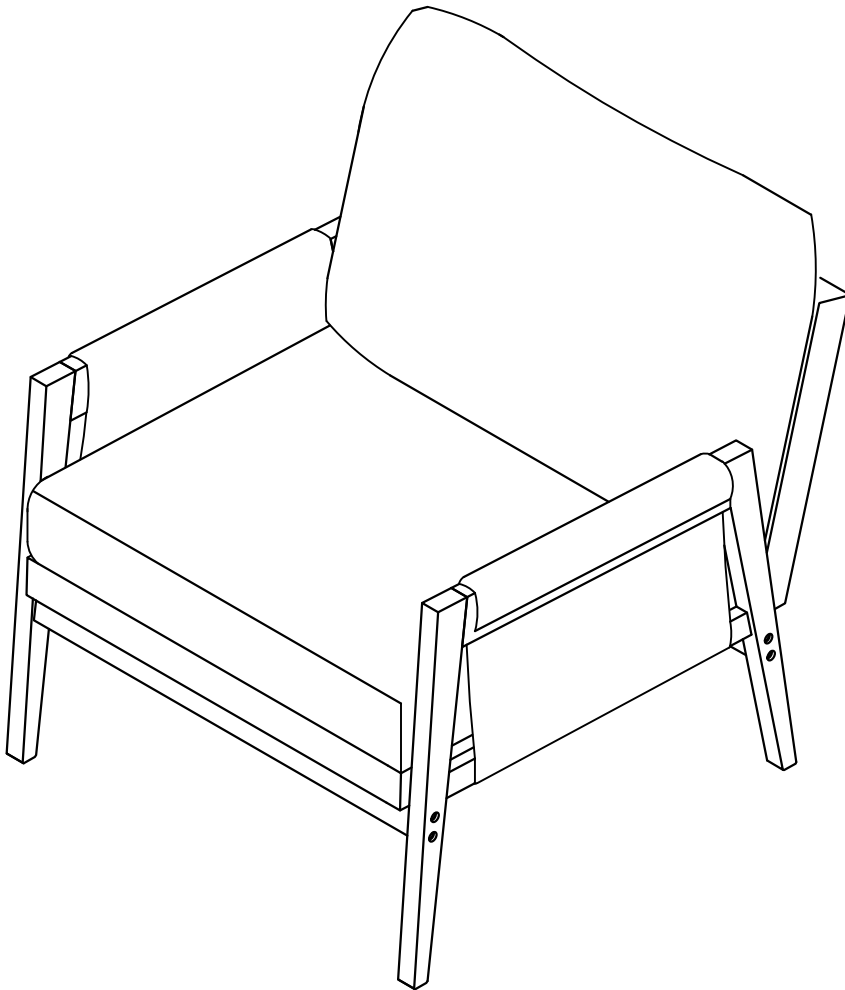







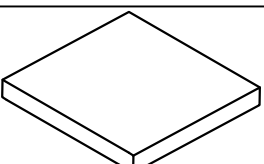





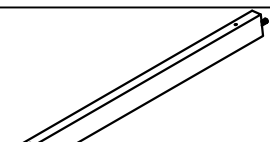

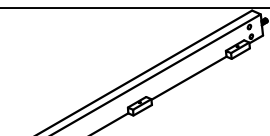

IMPORTANT NOTE:

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.

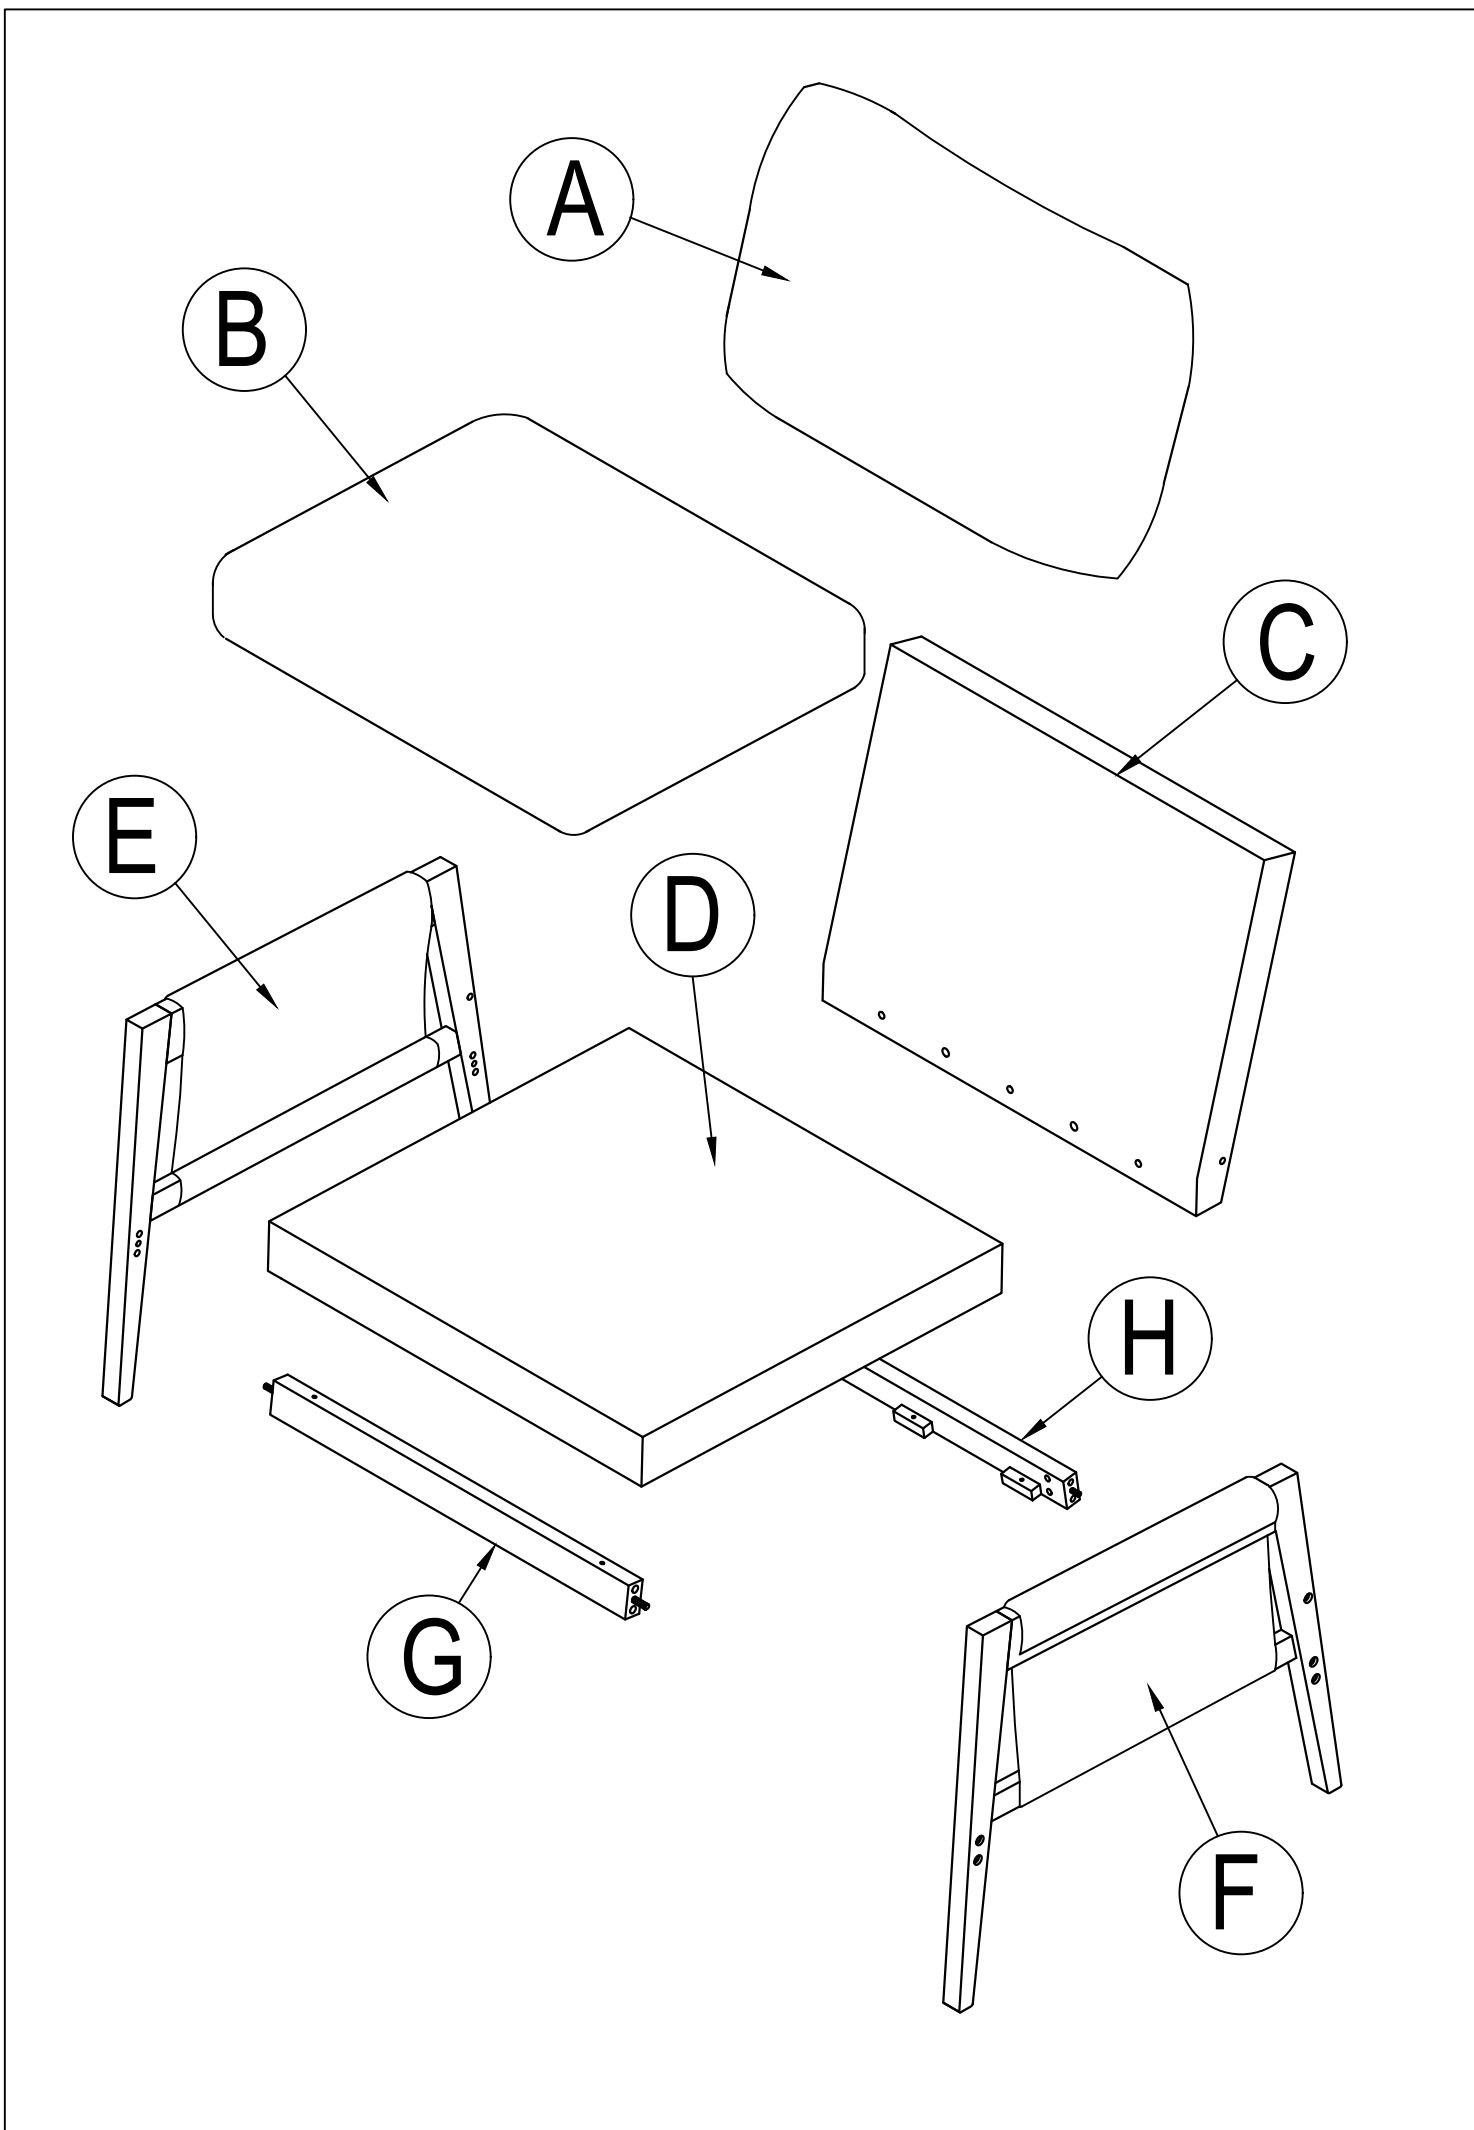


Part List


Hardware List
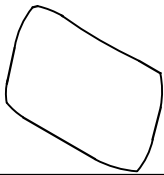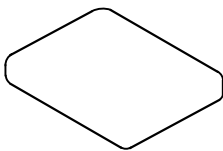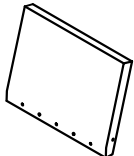
<p>(A)</p> 	<p>(1)</p>  <p>Ø 5/16" x 60mm</p>
<p>BACK CUSHION (1 PC)</p>	<p>BOLT (5 pcs)</p>
<p>(B)</p> 	<p>(2)</p>  <p>Ø 1/4" x 65mm</p>
<p>SEAT CUSHION (1 PC)</p>	<p>BOLT (8 pcs)</p>
<p>(C)</p> 	<p>(3)</p>  <p>Ø 5/16" x 13mm</p>
<p>BACK FRAME (1 PC)</p>	<p>FLAT WASHER (3 pcs)</p>
<p>(D)</p> 	<p>(4)</p>  <p>Ø 5/16" x 19mm</p>
<p>SEAT FRAME (1 PC)</p>	<p>LOCK WASHER (3 pcs)</p>
<p>(E)</p> 	<p>(5)</p>  <p>Ø 1/4" x 12 * 10mm</p>
<p>ARM CHAIR-LEFT (1 PC)</p>	<p>NUT (8 pcs)</p>
<p>(F)</p> 	<p>(6)</p>  <p>Ø 10 x 30mm</p>
<p>ARM CHAIR-RIGHT (1 PC)</p>	<p>WOOD DOWEL (2 pcs)</p>
<p>(G)</p> 	<p>(7)</p>  <p>M4 x 45mm</p>
<p>FRONT STRETCHER (1 PC)</p>	<p>SCREW (5 pcs)</p>
<p>(H)</p> 	<p>(8)</p>  <p>4mm</p>
<p>BACK STRETCHER (1 PC)</p>	<p>ALLEN KEY (1 pc)</p>


STEP 1:

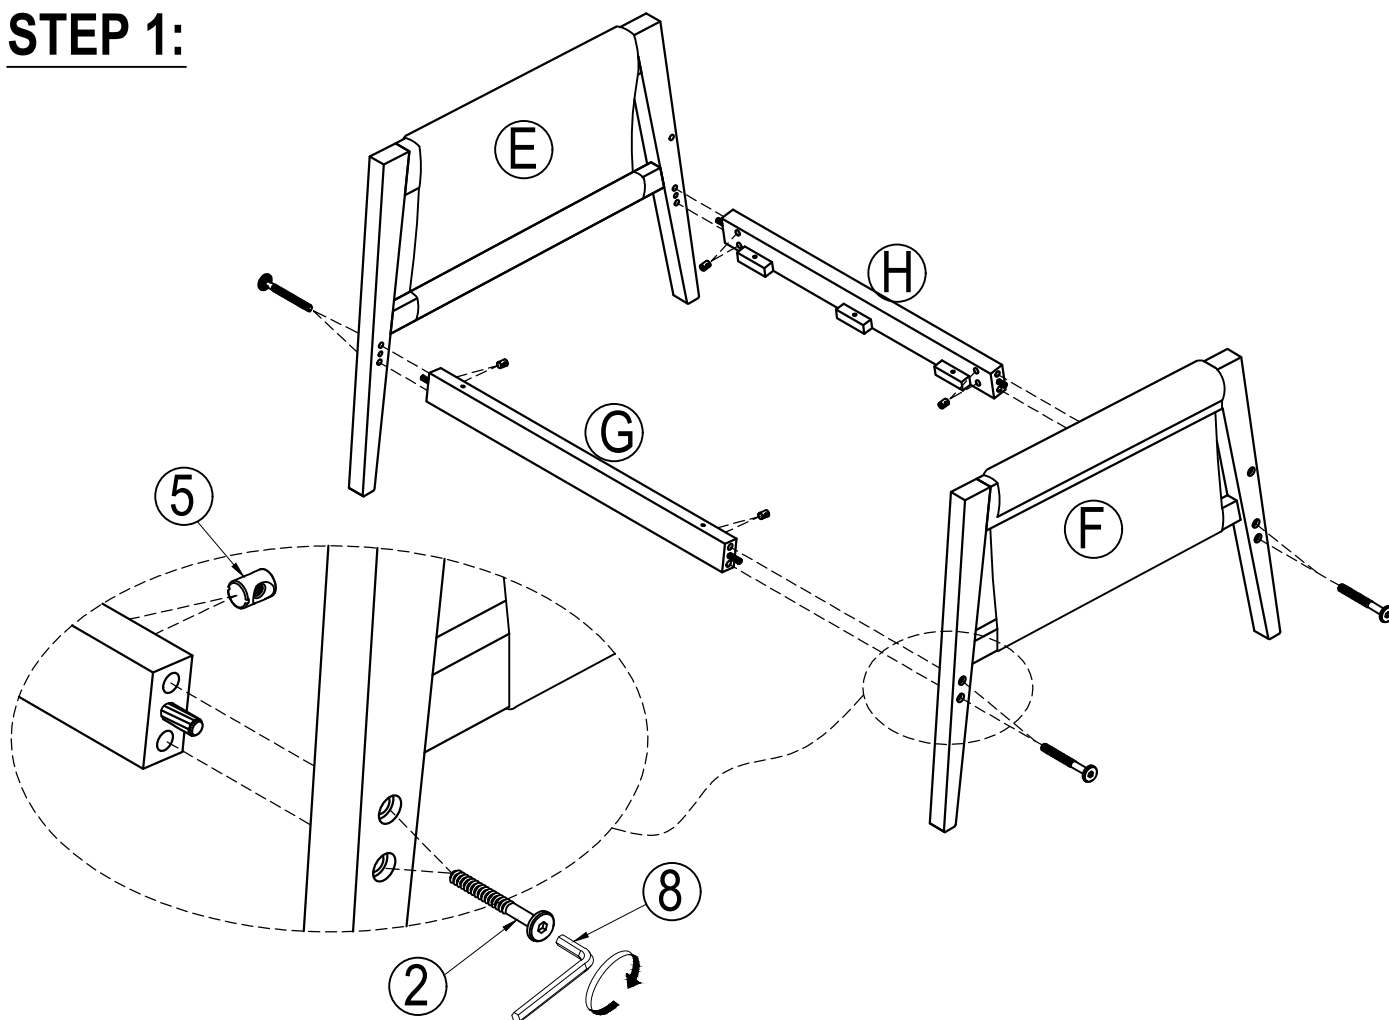

STEP 2:

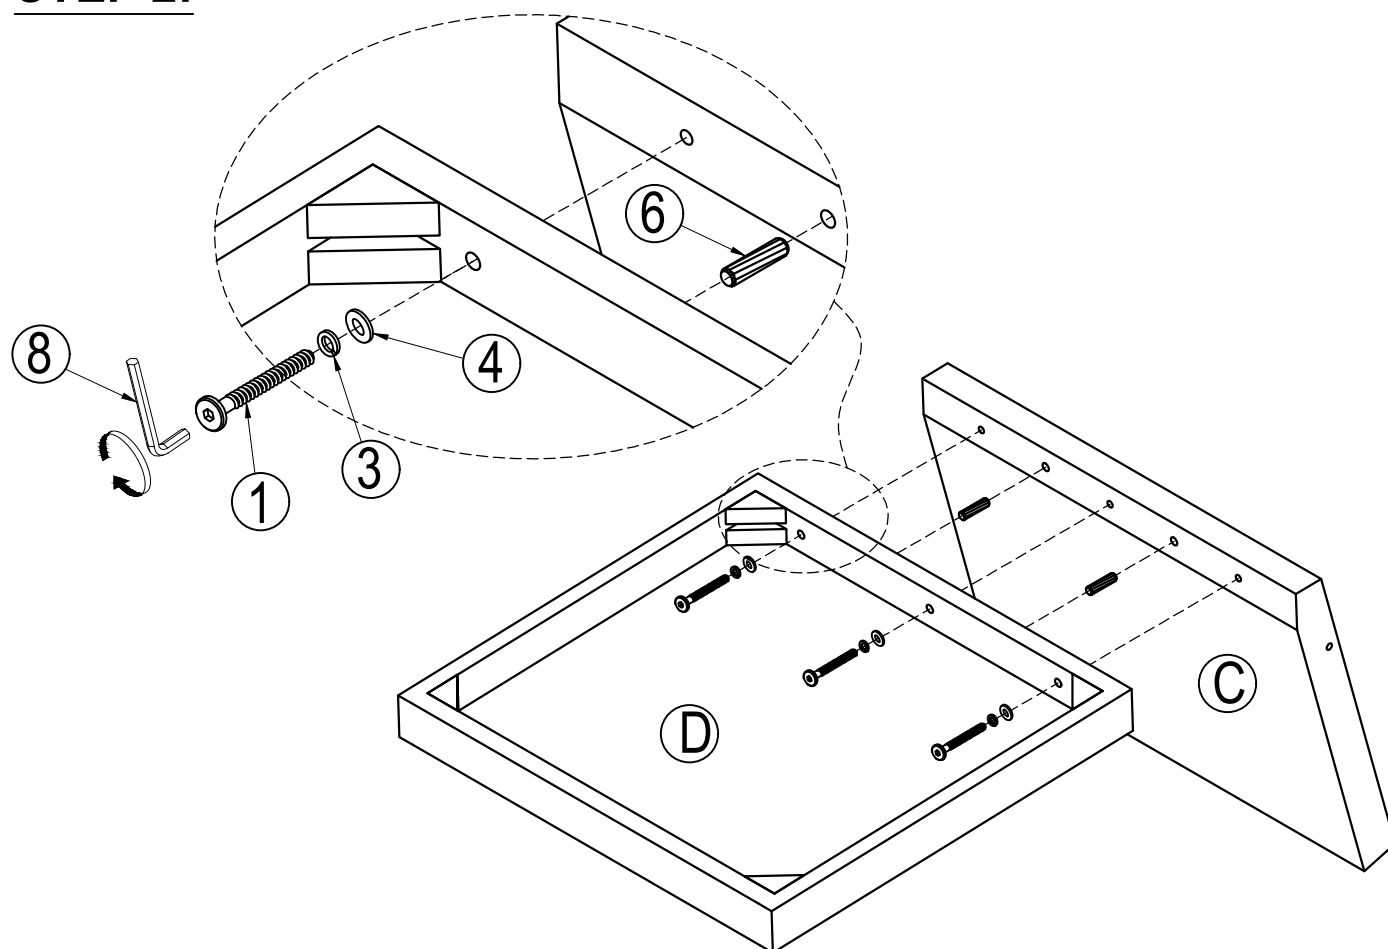

STEP 3:

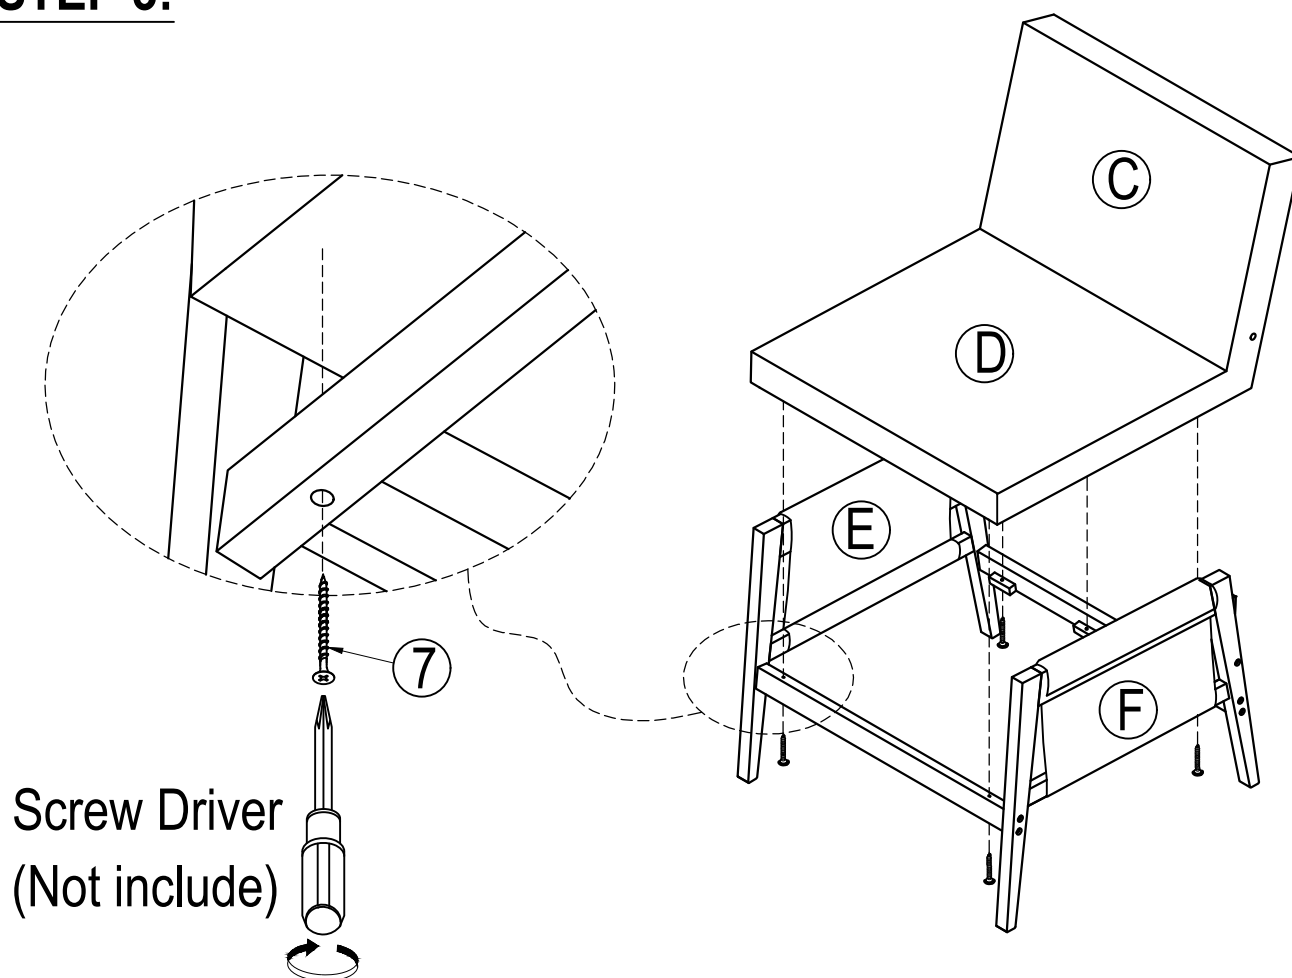

STEP 4:

