














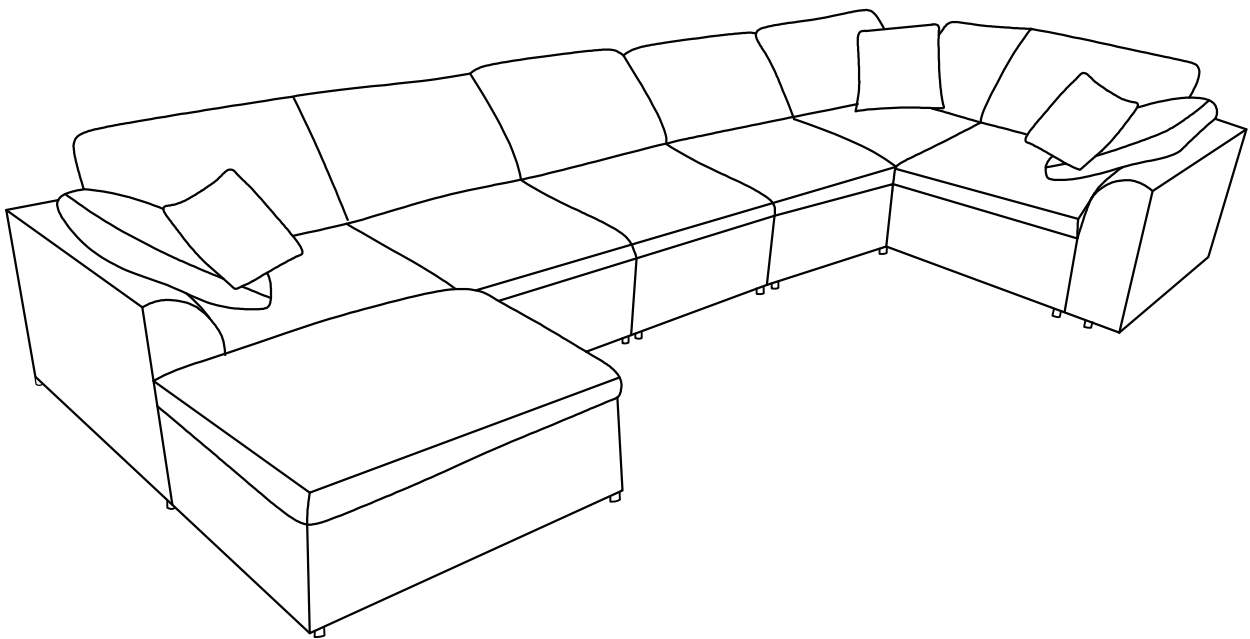







# ASSEMBLY INSTRUCTIONS

Note: No climbing on the back of the sofa!




# HARDWARE LIST:

A		6PCS	9739 01 BOX:A*2 E*2 F*2 J*2
B		1PC	9739 02 BOX:A*2 E*2 G*2 J*2
C		2PCS	9739 03 BOX:A*2 E*2 F*1 G*1 J*2
D		1PC	9739 04 BOX:B*1 C*1 H*1 I*1 L*1
E		6PCS	9739 05 BOX: C*1 D*1 L*2 K*2 M*34 N*34 O*36 P*36 Q*1 R*36 S*36 T*12
F		3PCS	
G		3PCS	
H		1PC	Hardware and legs are packed in the carton 9739 05 BOX.
I		1PC	
J		6PCS	
K		2PCS	
L		3PCS	
M		34PCS	
N		34PCS	
O	 M8* 60MM	36PCS	
P	 M8	36PCS	
Q	 M8	1PC	
R	 M8*22*2MM	36PCS	
S	 M8	36PCS	
T		12PCS	

1


X 3

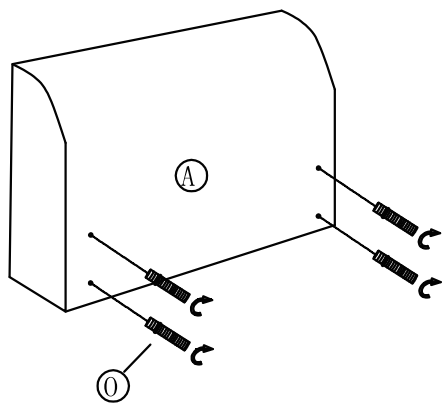

O\*12

2


X 2

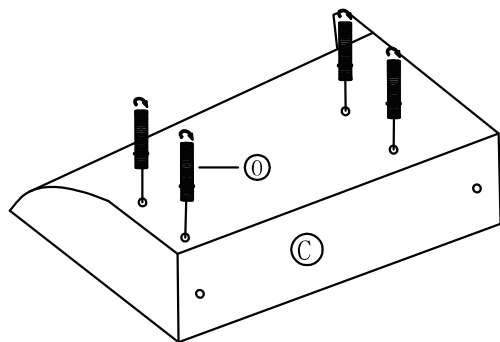

O\*8

3

X 2

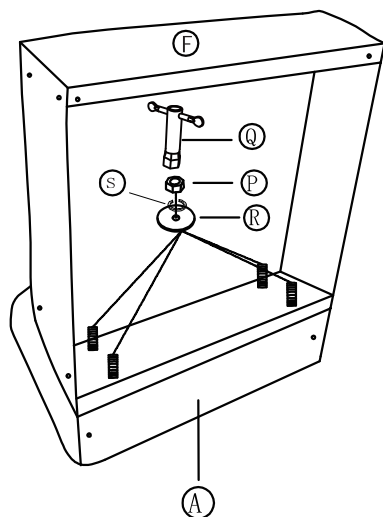


S\*8

P\*8

R\*8

4

X 2

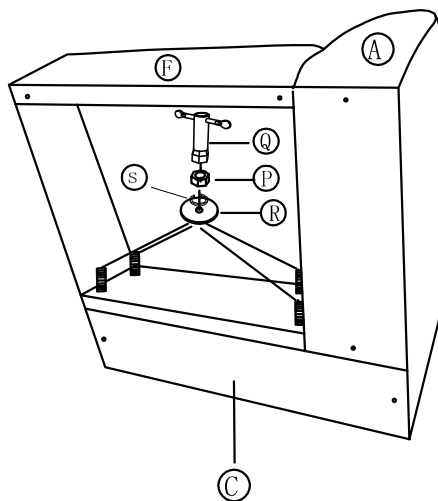


S\*8

P\*8


R\*8

5

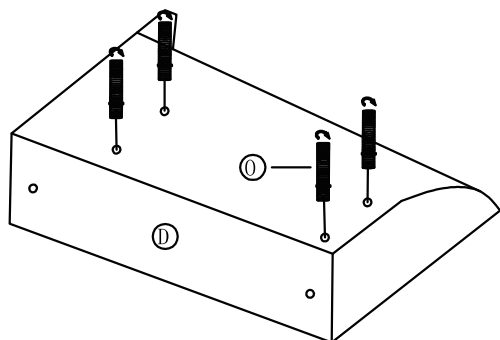

O\*4

6

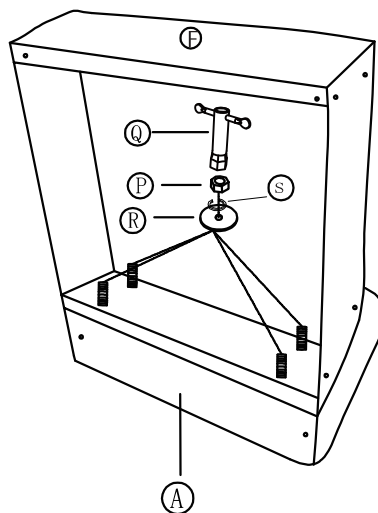


S\*4

P\*4

R\*4


7

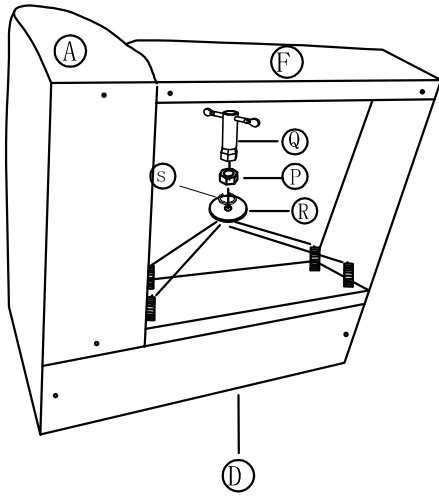

S\*4  
P\*4  
R\*4

8


X 3

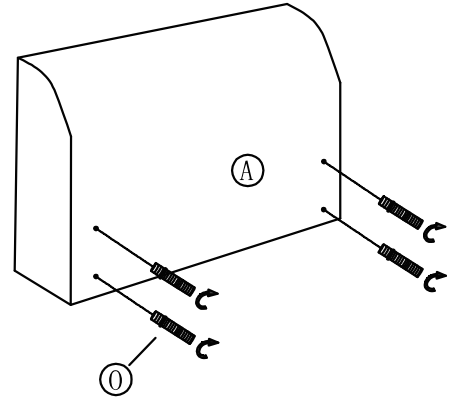

O\*12


9

X 3

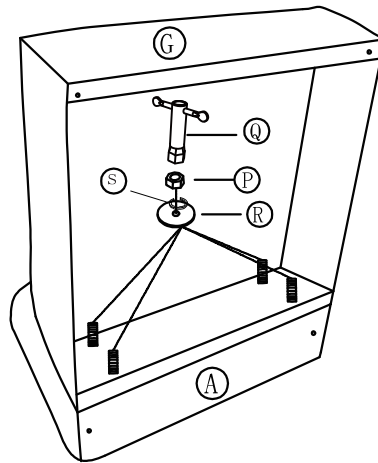


S\*12  
P\*12  
R\*12

10

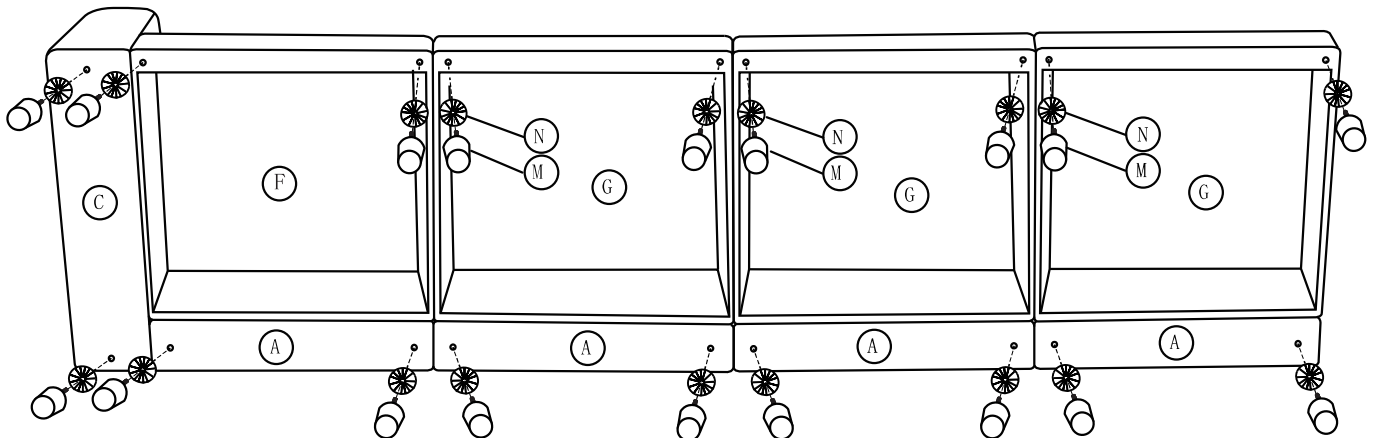

N\*18  
M\*18


11

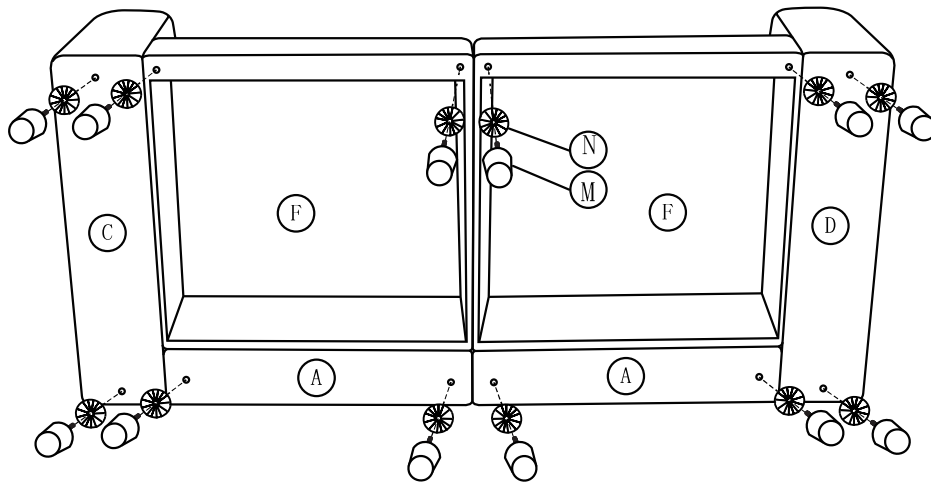

N\*12

M\*12


12

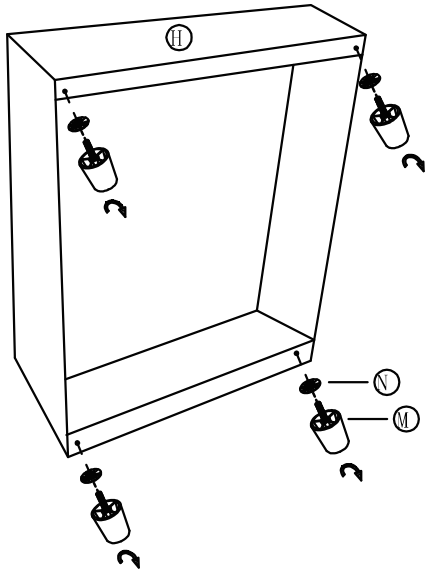

M\*4

N\*4

13


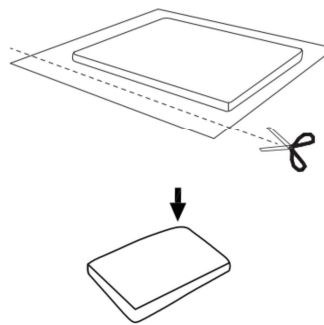


X1





72h

14

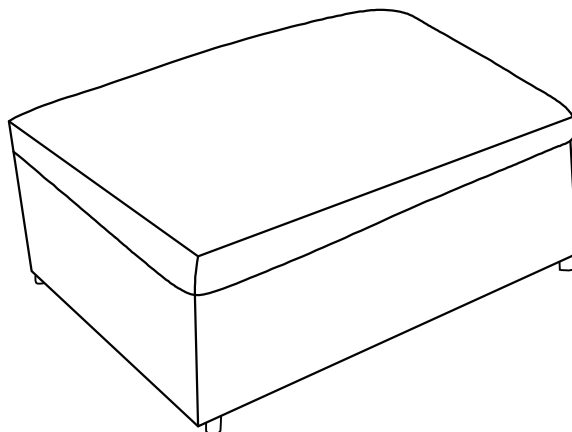
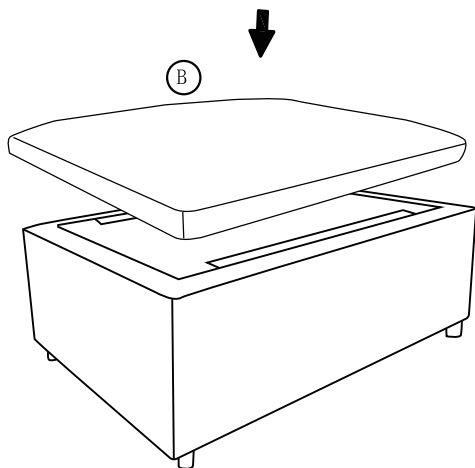


15

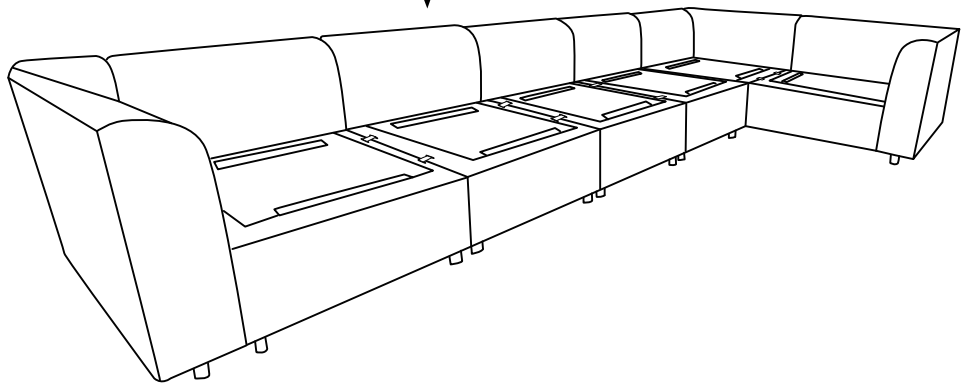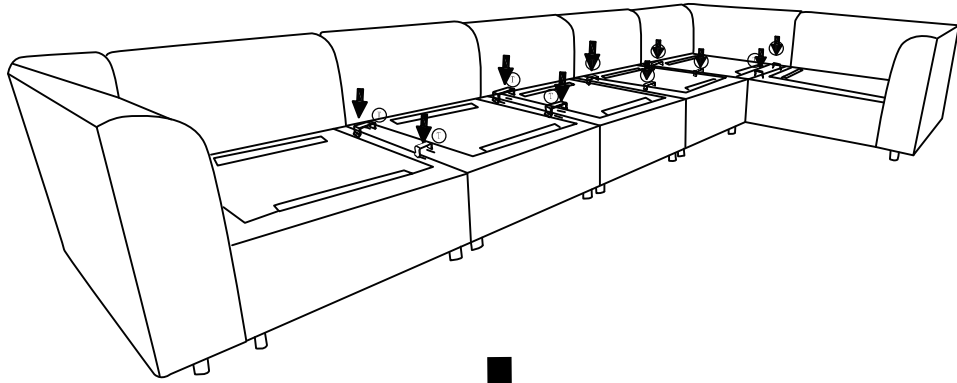


T\*10


16

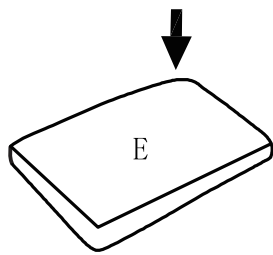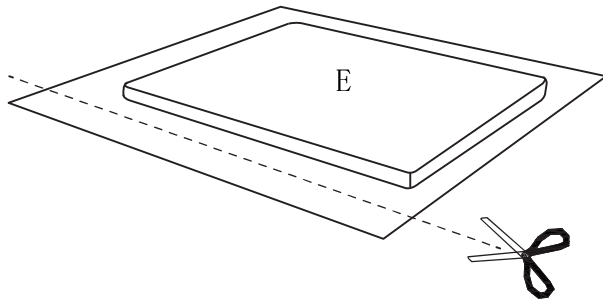



X6

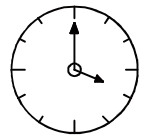

72h

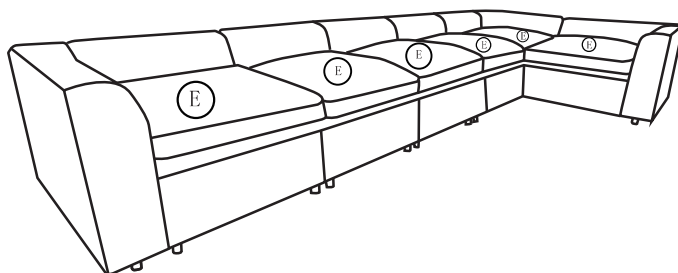

17

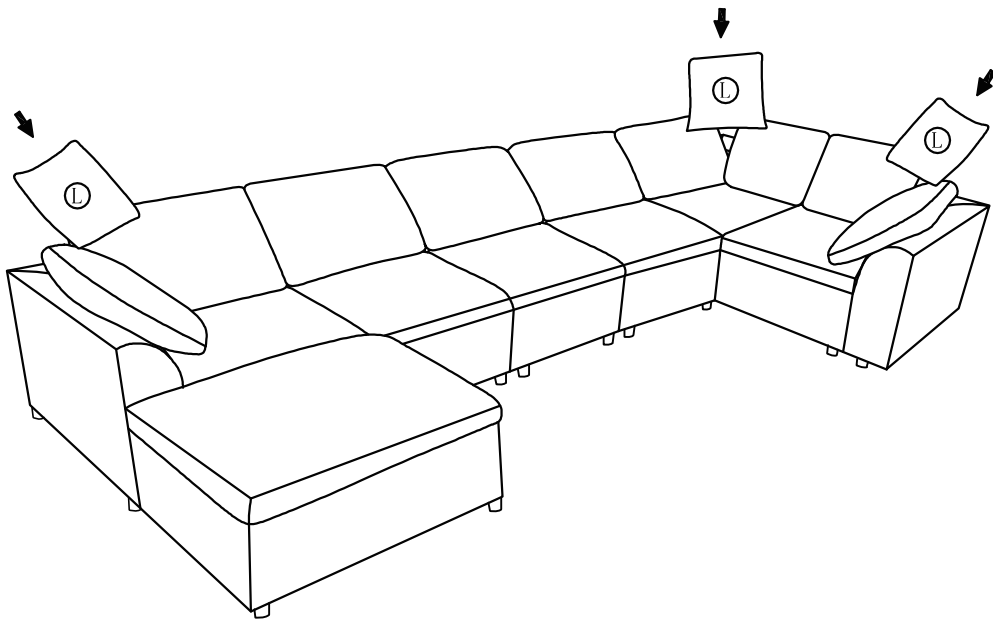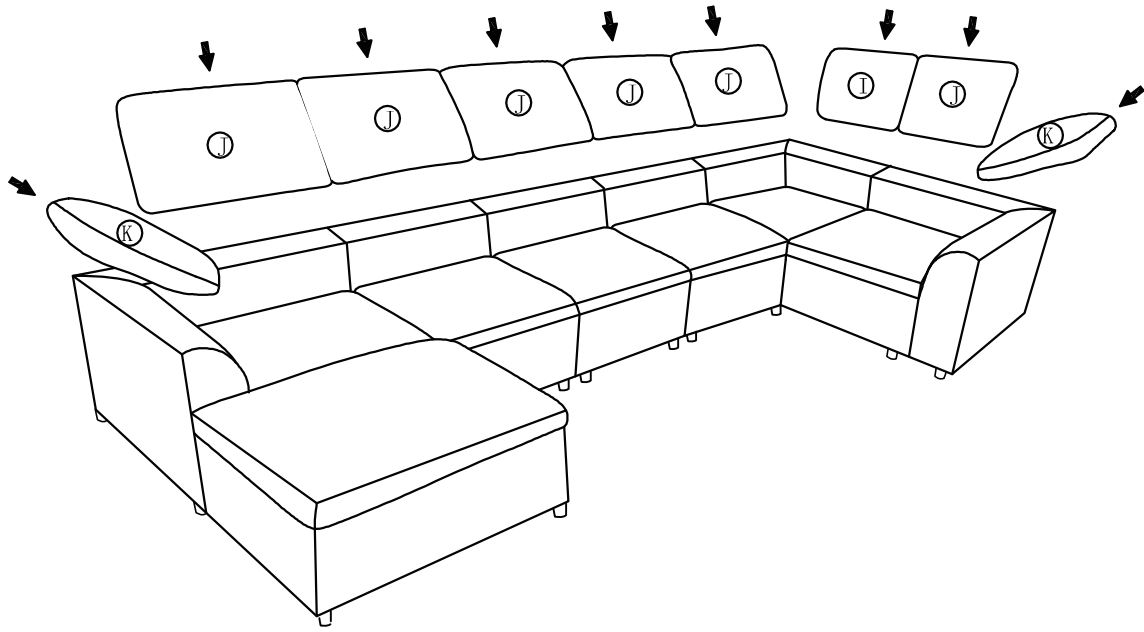

Complete

