







ASSEMBLY INSTRUCTION


ITEM NO: RYS33A

PAGE 1 OF 6

PARTS AN HARDWARE				A	M8x100 	16PCS
 Armrest x2	 Body A x1	 Body B x1	B	M8x19x2 	32PCS	
			C	M8 	16PCS	
			D		1PC	
 Back x3	 Seat cushion A x1	 Seat cushion B x2	E	M8x35 	16PCS	
			F	5# 	1PC	
 Armrest pad x2	 Back cushion x3	 Leg x8	 Leg x1			

Step1:


Please take out the arms, back cushion, arm cushion, back, legs and hardware from bottom of the sofa

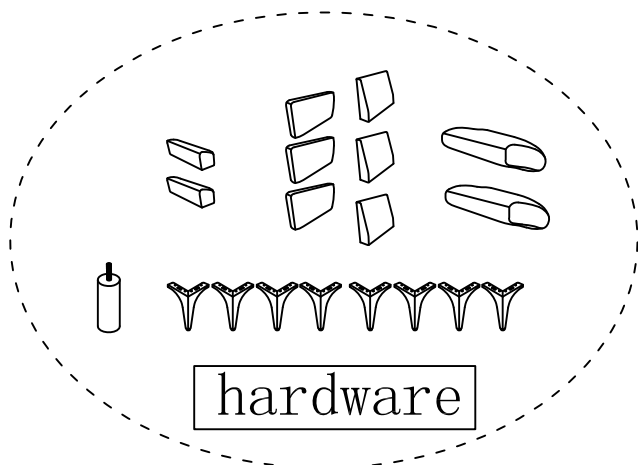

hardware

Step2:

Screw into back about 2cm

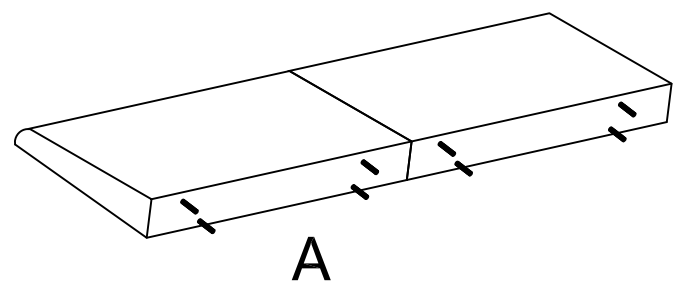


ASSEMBLY INSTRUCTION

ITEM NO: RYS33A

PAGE 2 OF 6


Step3:

Insert the back with screws on into the top of seat frame

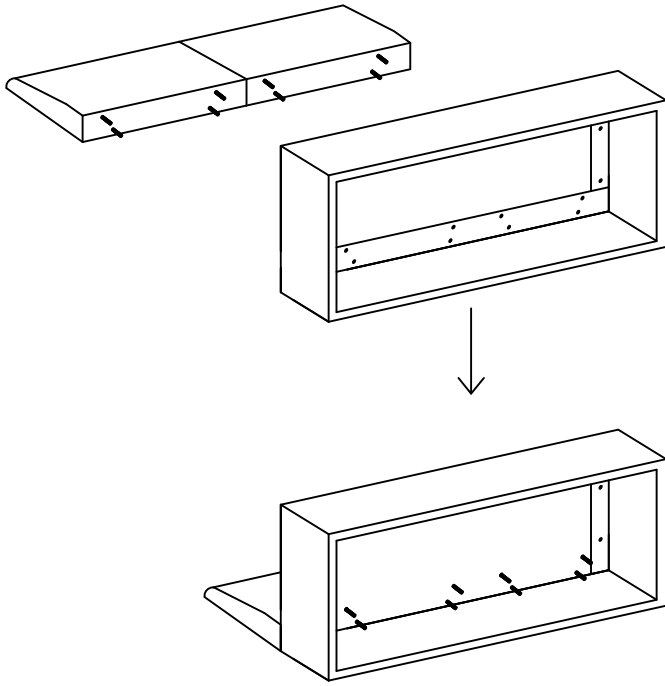


Step4:

Put the washers, then tighten the nuts with wrench from inside

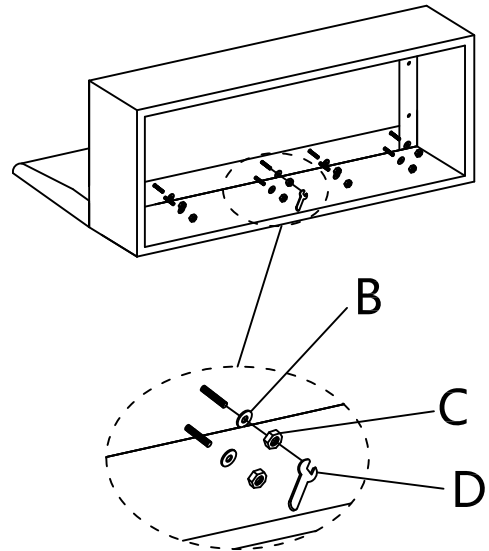


Step5:

Screw into arms about 2cm

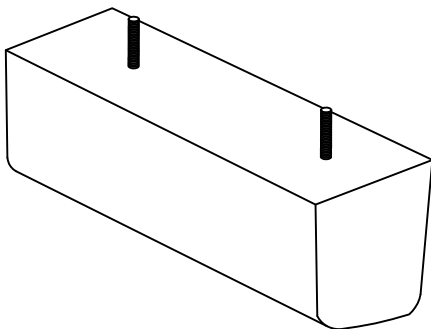

Step6:

Insert the arm with screws on into the top of seat frame

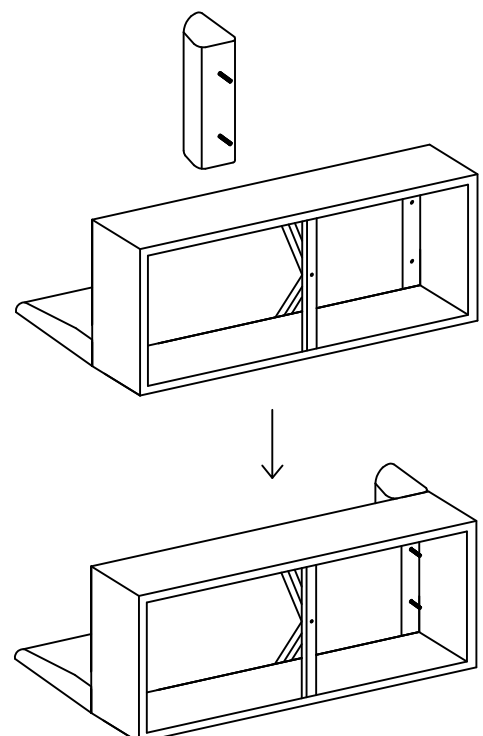


ASSEMBLY INSTRUCTION

ITEM NO: RYS33A

PAGE 3 OF 6


Step7:

Put the washers, then tighten the nuts with wrench from inside

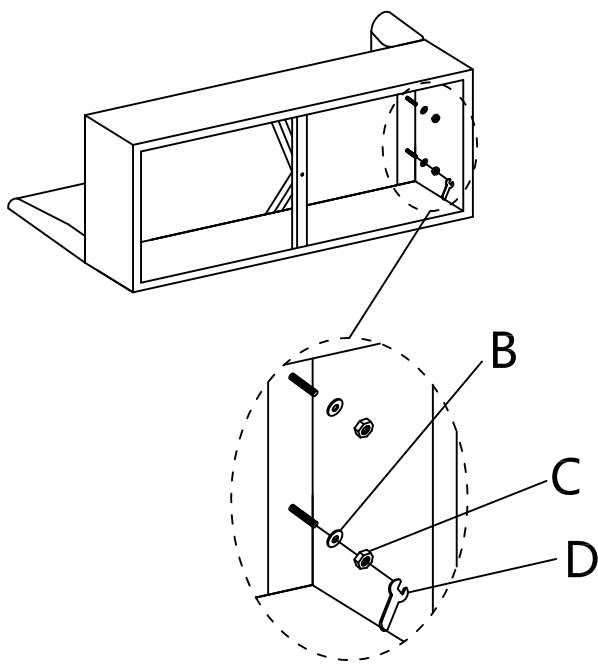


Step8:

Assemble the legs

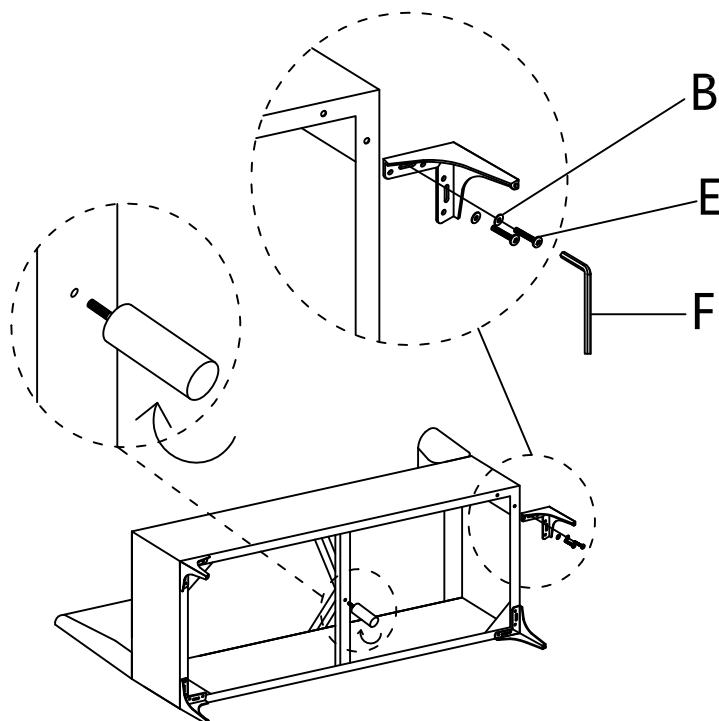


Step9:

Screw into back about 2cm

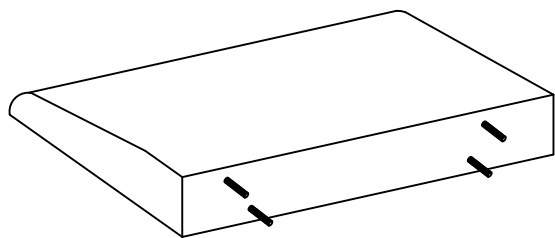

Step10:

Insert the back with screws on into the top of seat frame

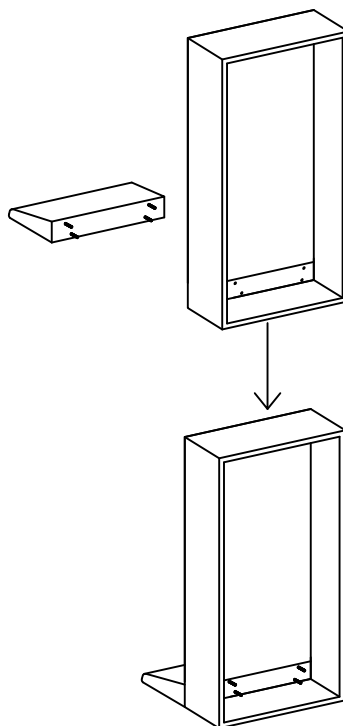


ASSEMBLY INSTRUCTION

ITEM NO: RYS33A

PAGE 4 OF 6


Step11:

Put the washers, then tighten the nuts with wrench from inside

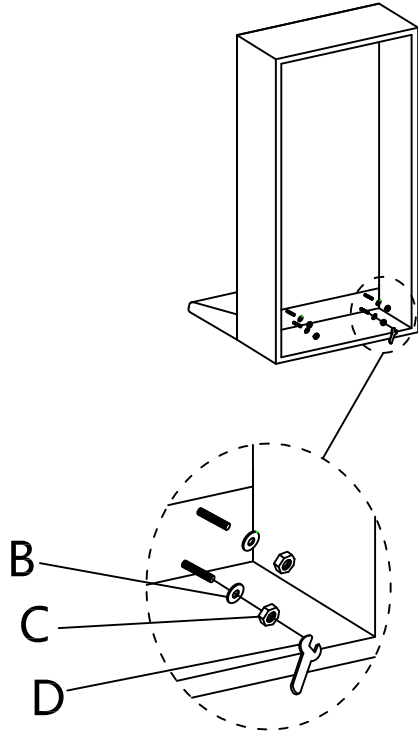


Step12:

Screw into back about 2cm

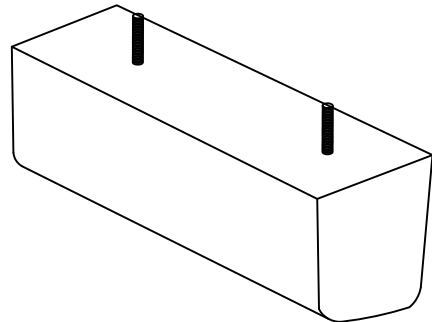


Step13:

Insert the arm with screws on into the top of seat frame

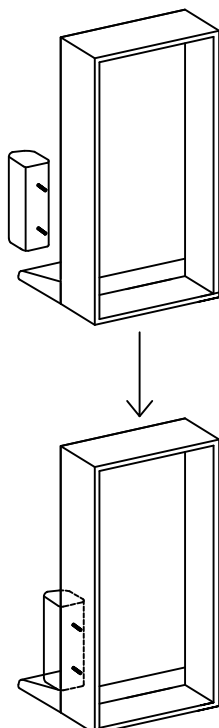

Step14:

Put the washers, then tighten the nuts with wrench from inside

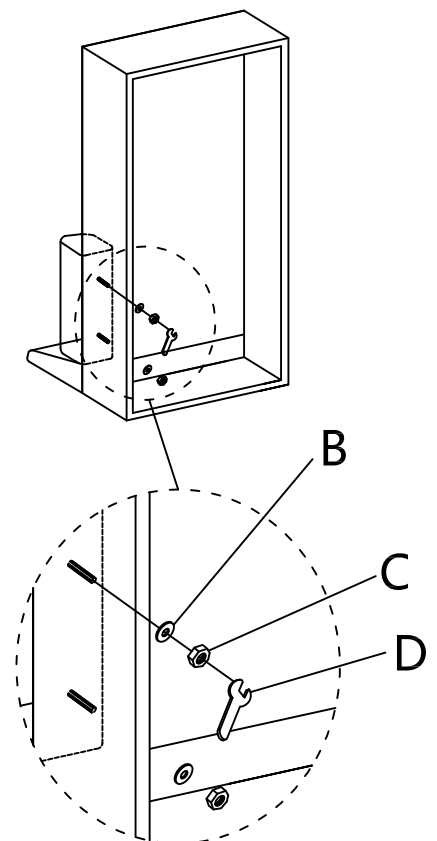


ASSEMBLY INSTRUCTION

ITEM NO: RYS33A

PAGE 5 OF 6


Step15:

Assemble the legs

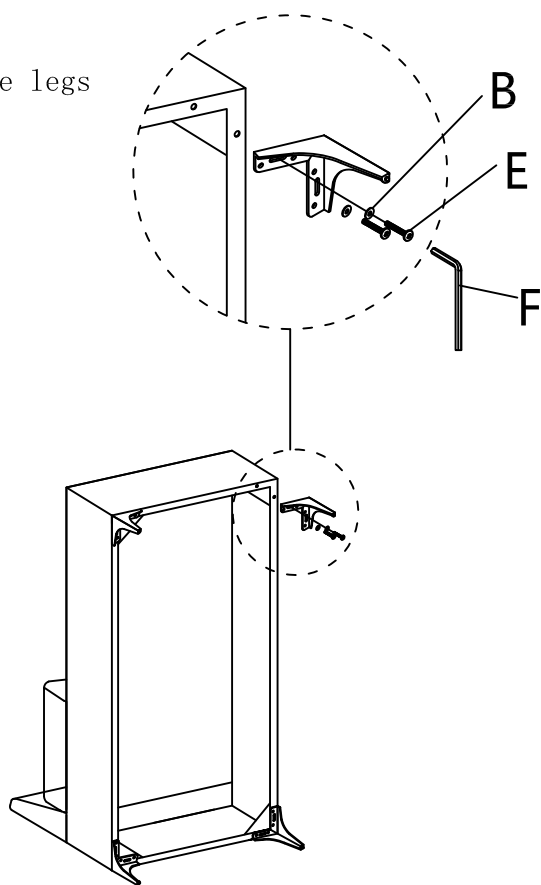


Step16:

Connect the sofa & chaise, insert the right bracket to the left

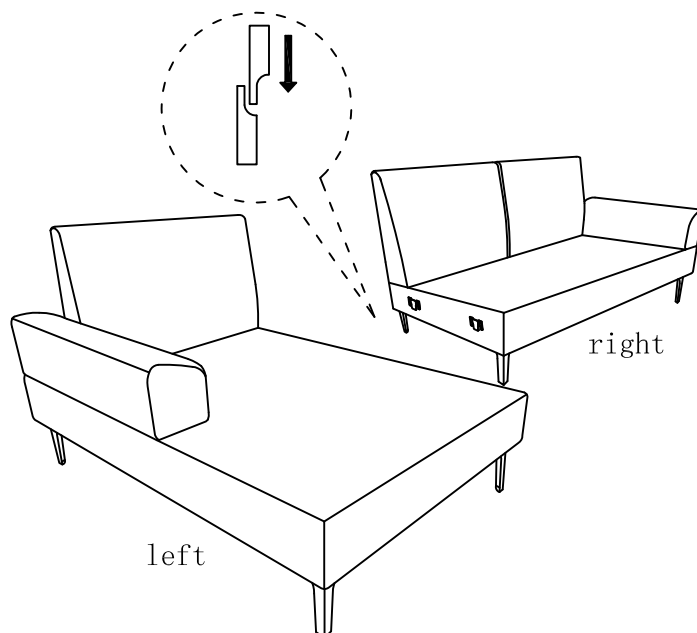


Step17:

Zip the arm cushion

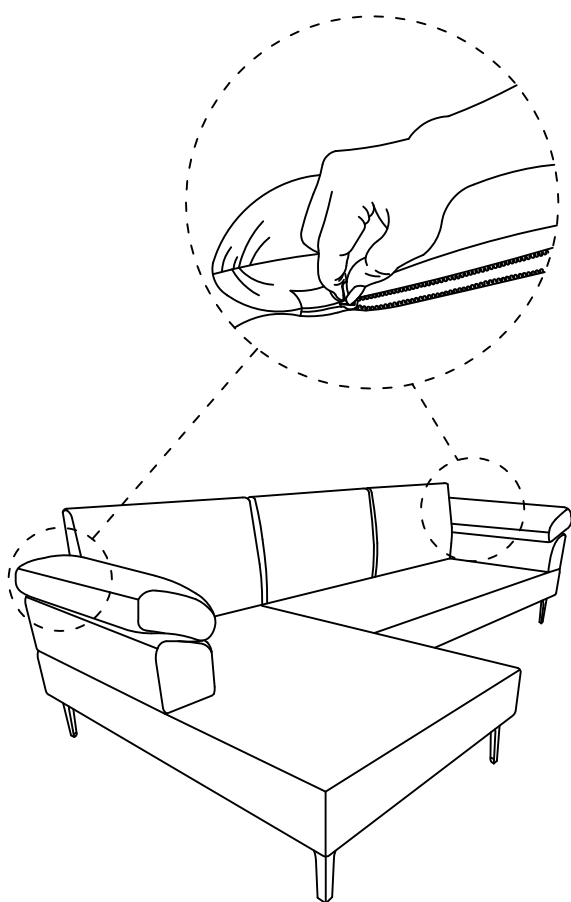

Step18:

Remove the black strip on seat frame, put the seat cushion on sofa, press it to stick with the velcro.

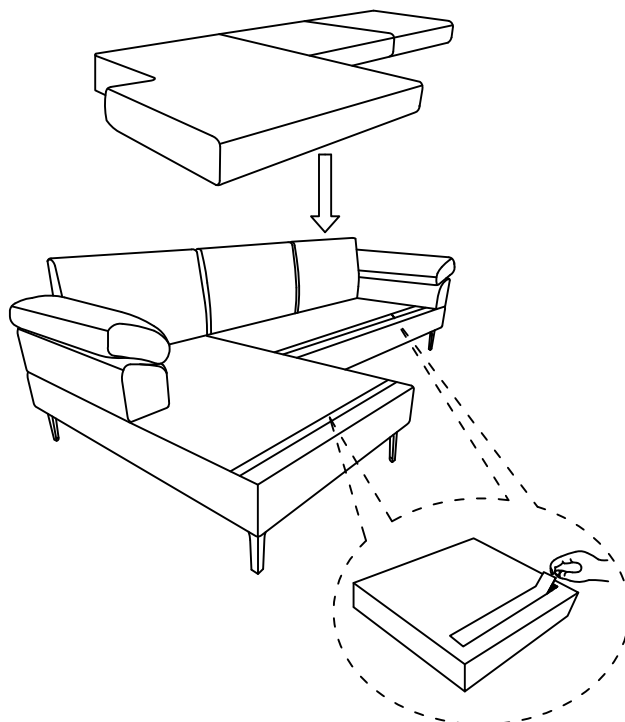


ASSEMBLY INSTRUCTION

ITEM NO: RYS33A

PAGE 6 OF 6


Step19:

Remove the black strip on back frame, put the back cushion on sofa, press it to stick with the velcro.

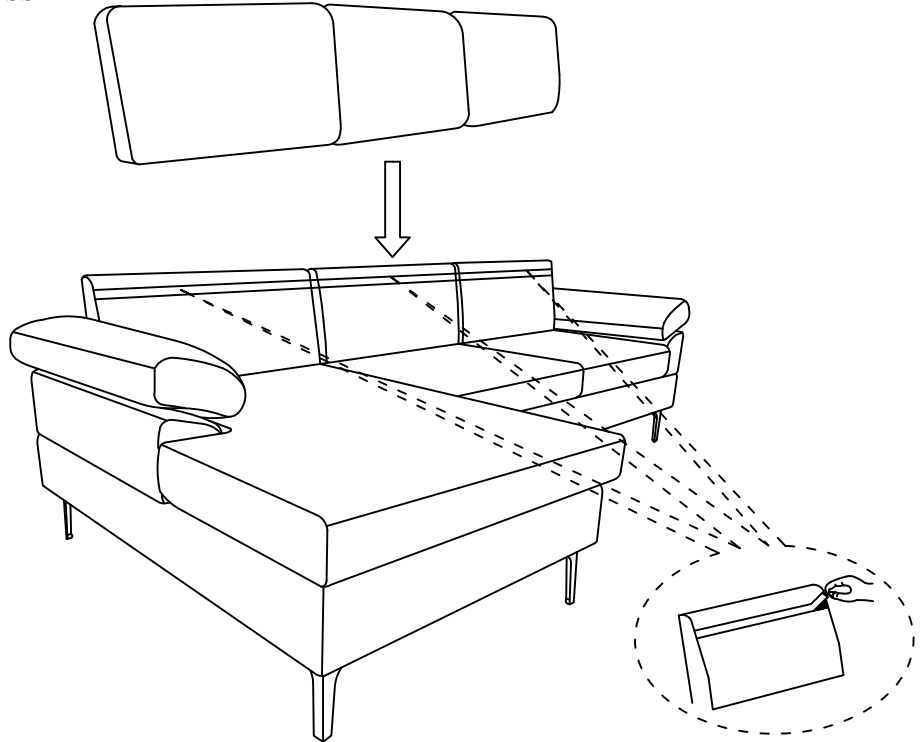


Step20:

Assembly is finished

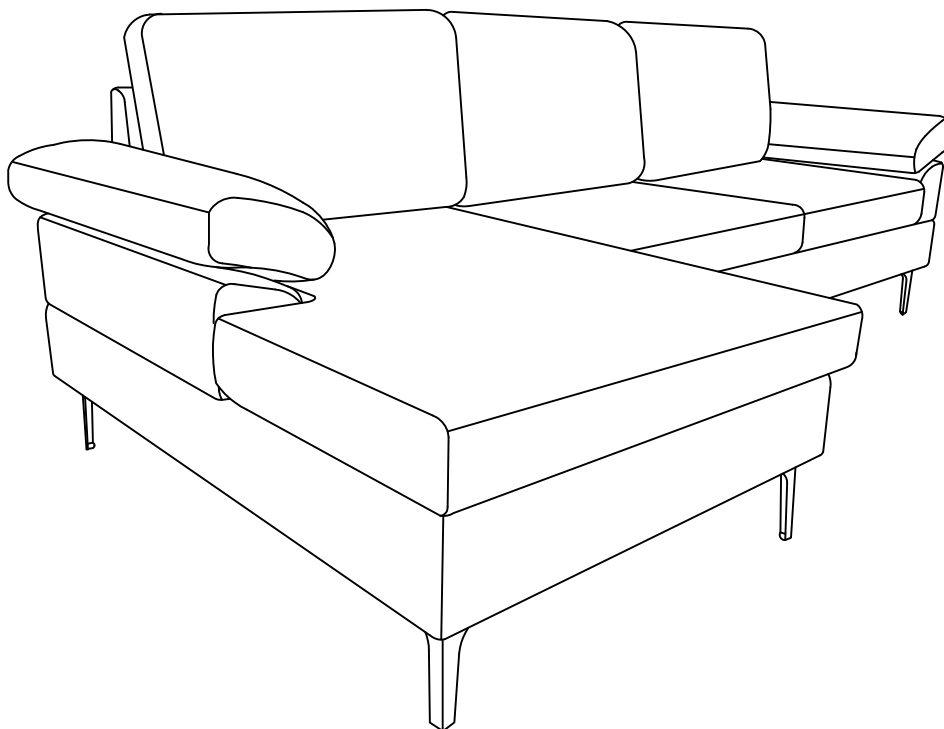

TIPS:

- 1, Please do not open the compress packaging until your sofa frame is completely assembled.
- 2, Compress cushions or pillows need to fully fluffed within 72 hours for your perfect use.
- 3, Please keep children away from plastic bag or any small pieces of stuff.
- 4, After assembly is completed, don't forget to pat the back cushions and seat cushions, make them recovering better. And wait 72 hours for fully rebound.

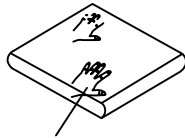


Pat and tidy the cushions

- 5, Cushions should be regularly maintained for perfect use.

STEPS for compressed pack:

(1) open the carton -- (2) take out the compressed pack -- (3) cut from edge and take out the cushion -- (4) Put the cushion on floor -- (5) Pat and tidy the cushion -- (6) Wait to rebound completely after 72 hours.

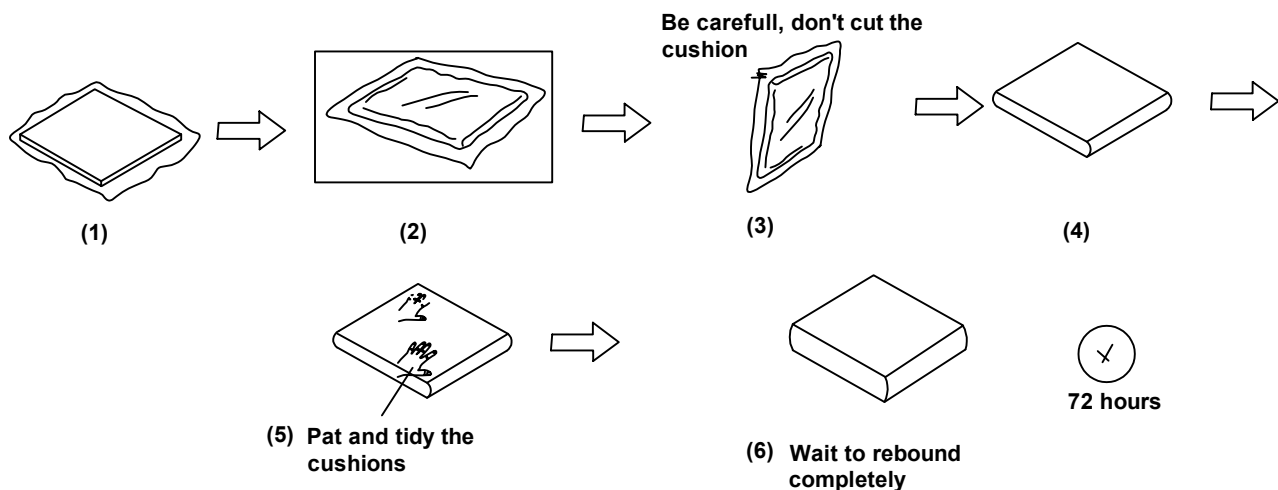

CAUTION:

PLEASE DO NOT OPEN COMPRESSED PLASTIC CUSHION BACK UNTIL YOUR SOFA FRAME IS COMPLETELY ASSEMBLED, OTHERWISE, IT CAN'T BE REPACKED IN ORIGINAL PACKING WAY TO RETURN.