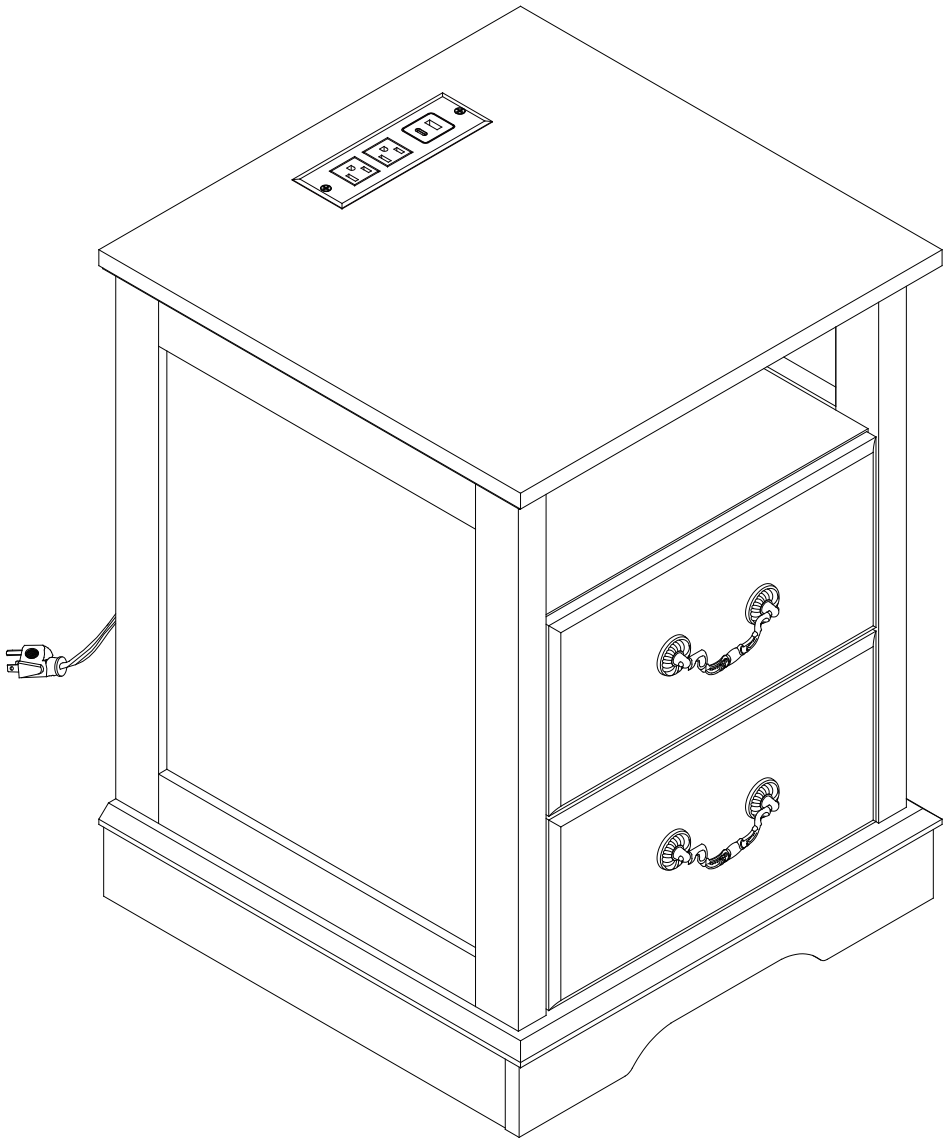


ATTENTION

If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

BEFORE STARTING


Before Using Product

- Read each step carefully before starting.It is very important thateach step is performed in the correct order.If these steps are not followed in sequence,assembly difficulties will occur.
- Make sure all parts are included.
- Work in a spacious area and near where the unit will be used,preferably on a carpet,or use a piece of the cardboard packaging to protect your floor and product.
- For a smooth assembly process,we suggest you keep a lite tightness for all the screws during assembly.After the whole product is assembled, firmly tighten all the screws.

⚠ WARNING


- Do not allow children to climb on unit.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly,keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- Please make sure that all objects are removed before moving the assembled unit.
- The unit must be team lifted,not dragged or pushed.Failure to do so could cause instability,product collapse,and/or serious injury.
- Be careful when using power tools to assemble your furniture.Power tools may strip or damage the parts.

QUICKFIT

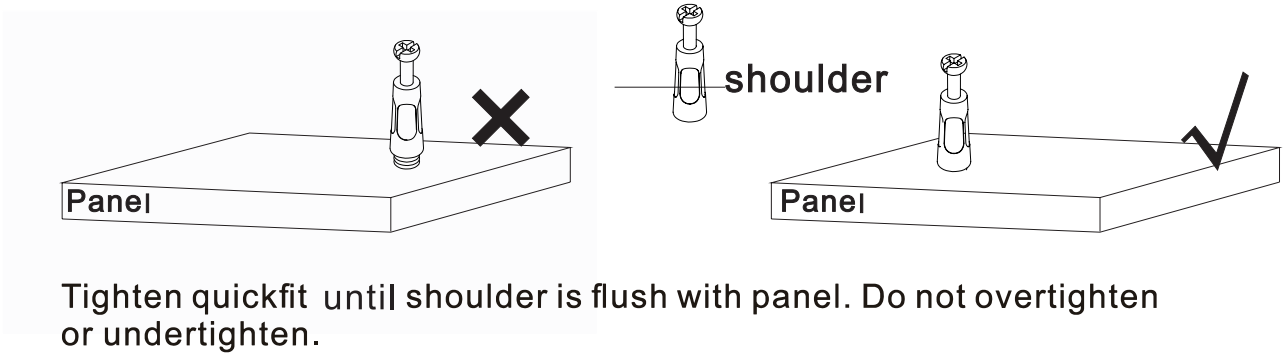


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

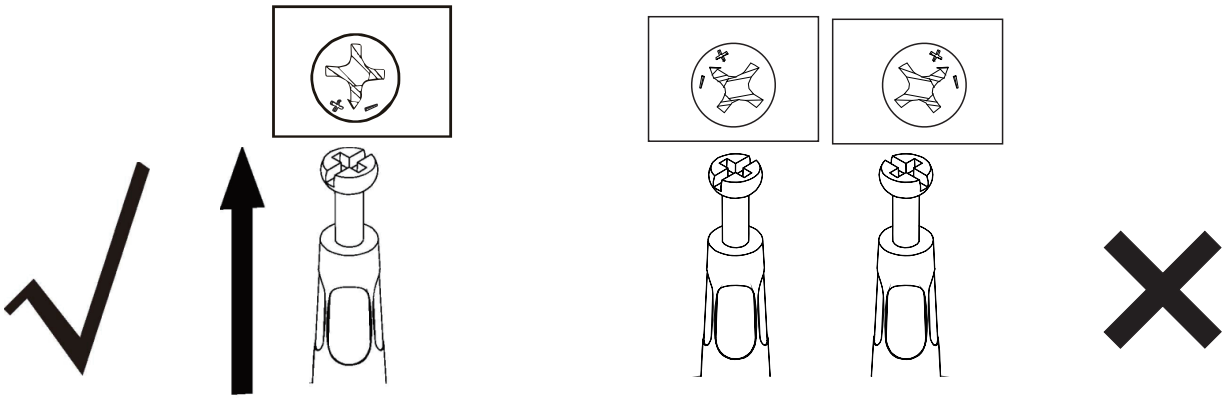


CORRECT WRONG

When fitting cam lock, ensure starting positions is correct before you insert cam lock to quickfit.

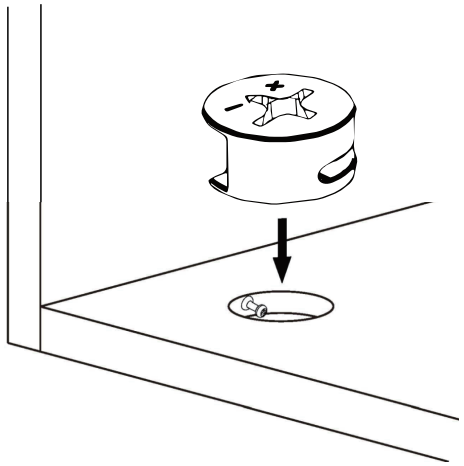


Quickfit head should be in the center of the cam lock. When the two panels are joined. Cam lock should be inserted before quickfit.

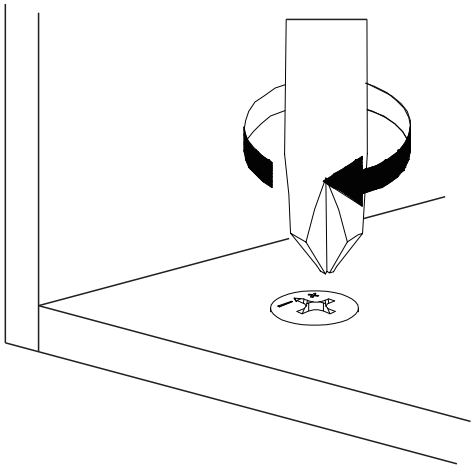


Turn cam lock clockwise to tighten.


1 x1

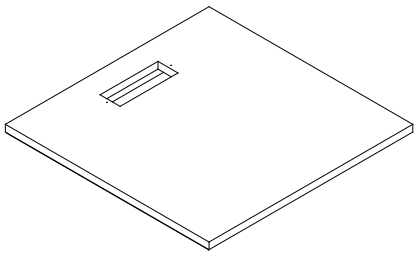


2 x1

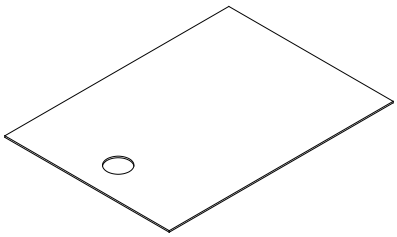


3 x1

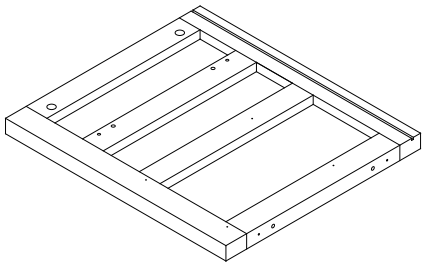


4 x1

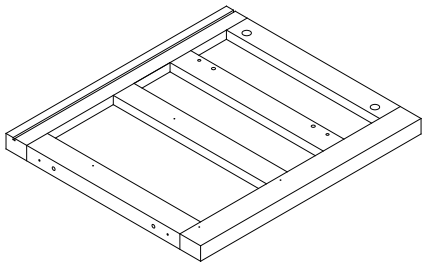


5 x1

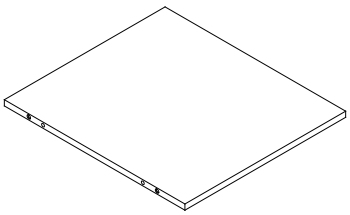


6 x1

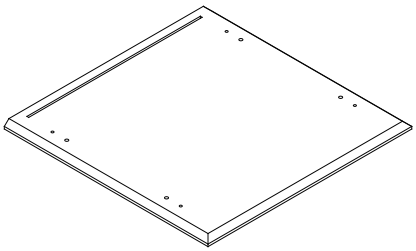


7 x1

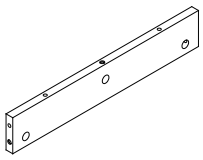


8 x2

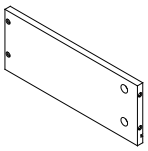


9 x1

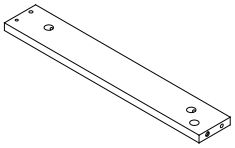


10 x1

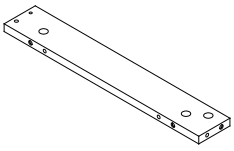


11 x1

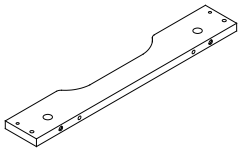


12 x2

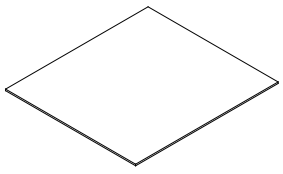


13 x2

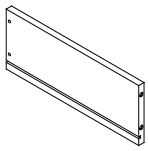


14 x2

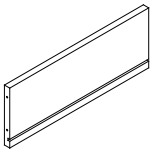

15 x2

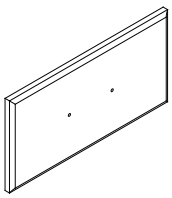

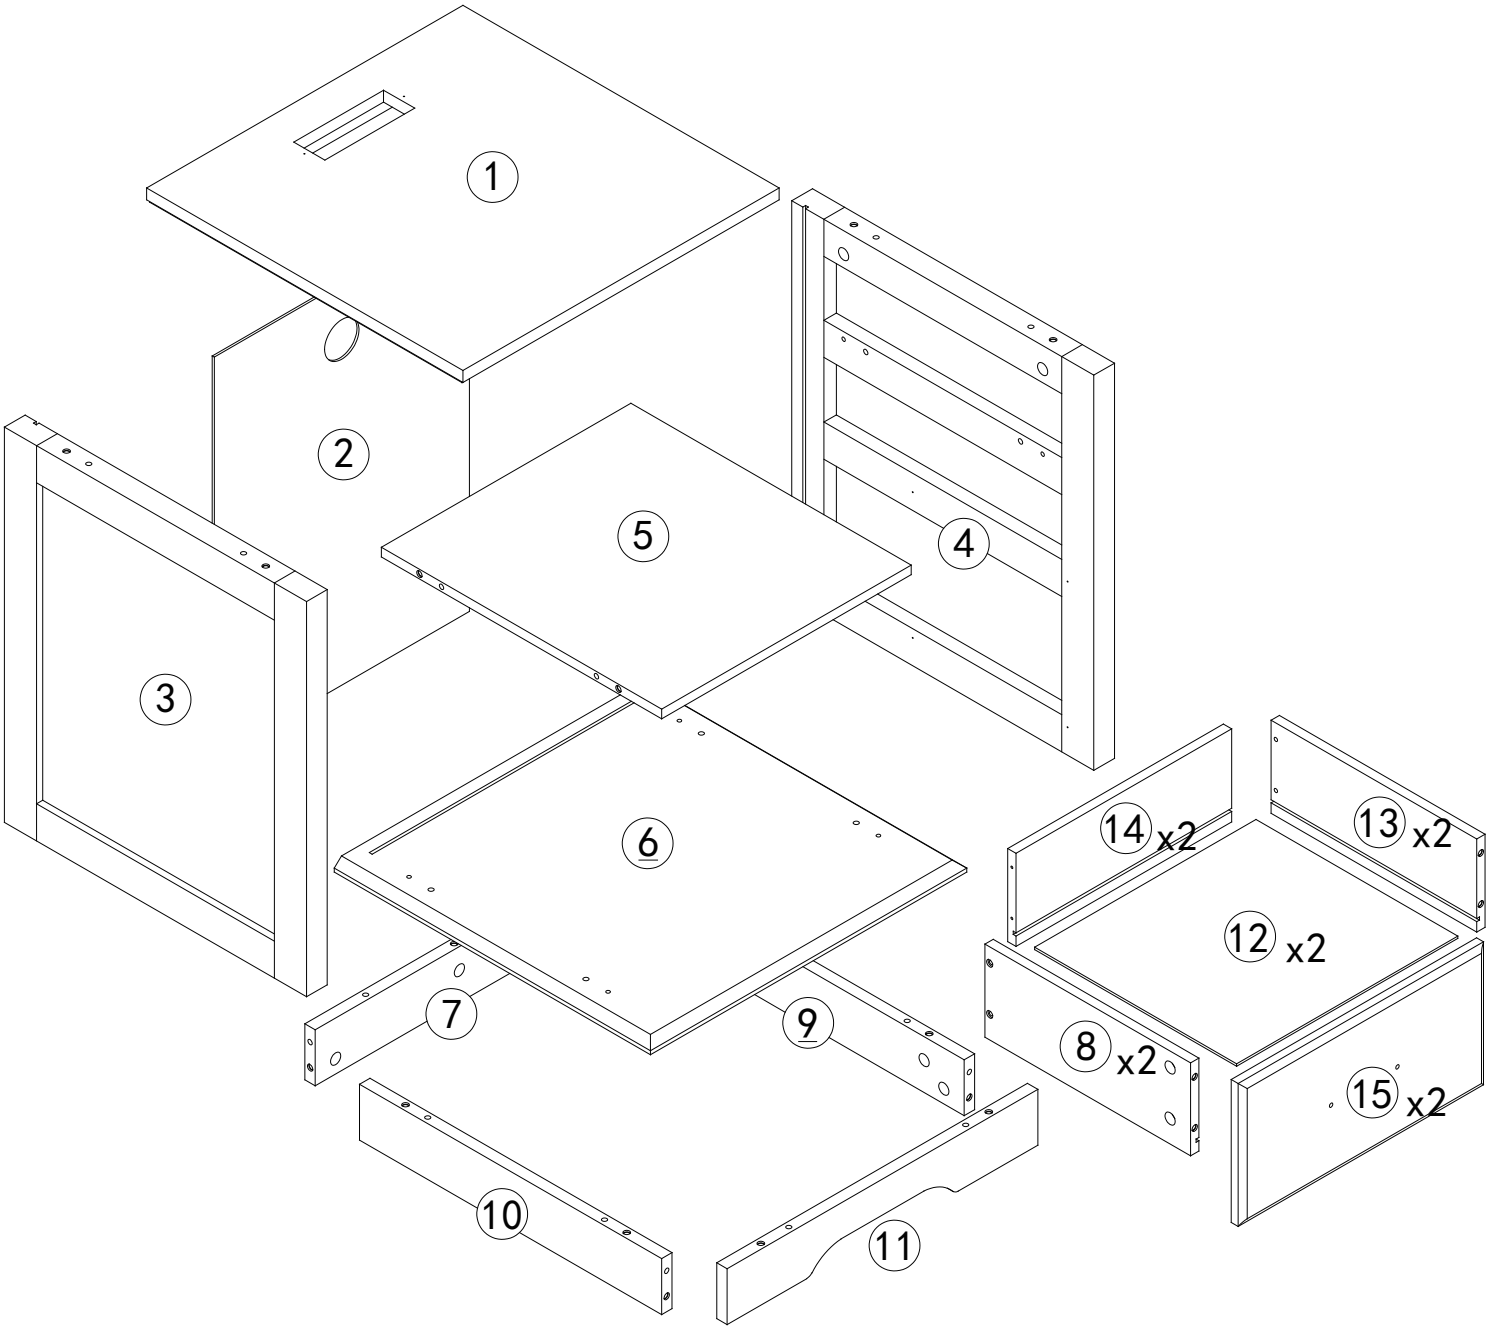



∅6x35MM

Ax27+2



∅15x10MM

Bx27+2



∅6x30MM

Cx24+2



M4x35mm

Dx12+1




M3x12mm

Ex16+2



M4x14mm

Fx4

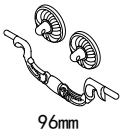


96mm

Gx2




M3x12mm

Hx2




M3x16mm

Ix4

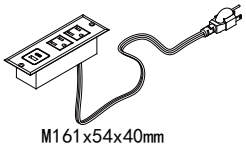


M161x54x40mm

Jx1



300mm


x2

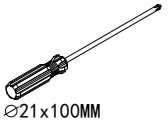


∅21x100MM


x1


1

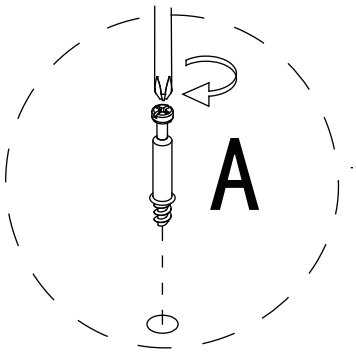



Pay attention to the hole position.

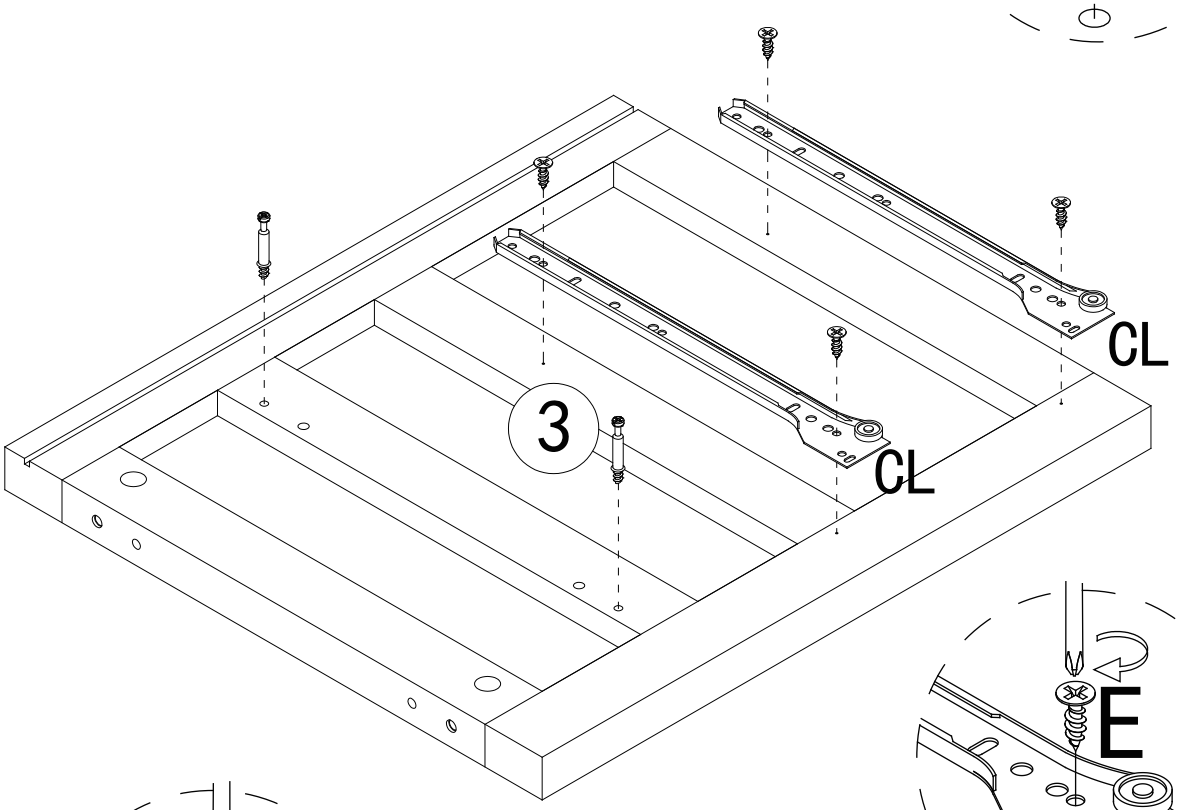

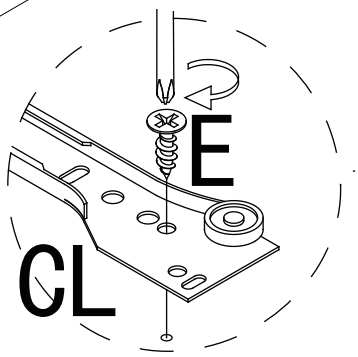


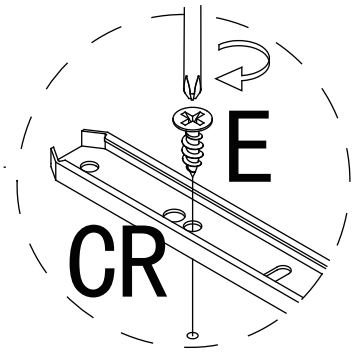

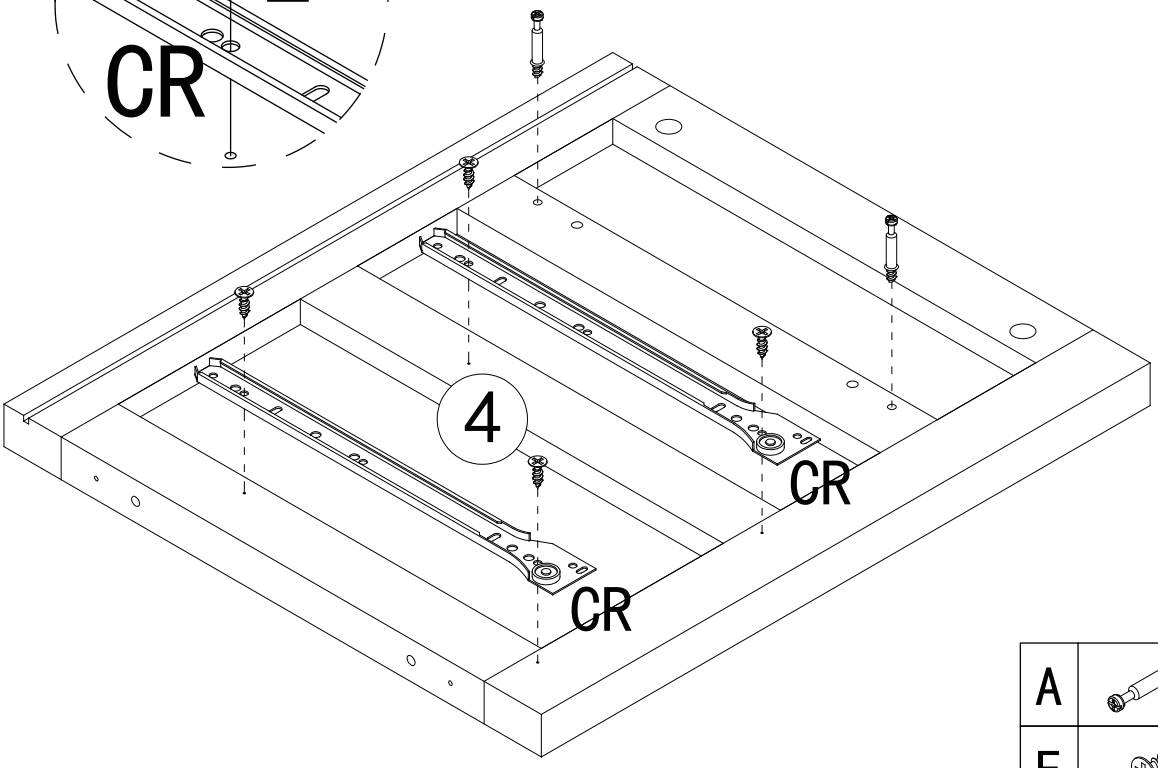


A		4pcs
E		8pcs
		2pcs

2

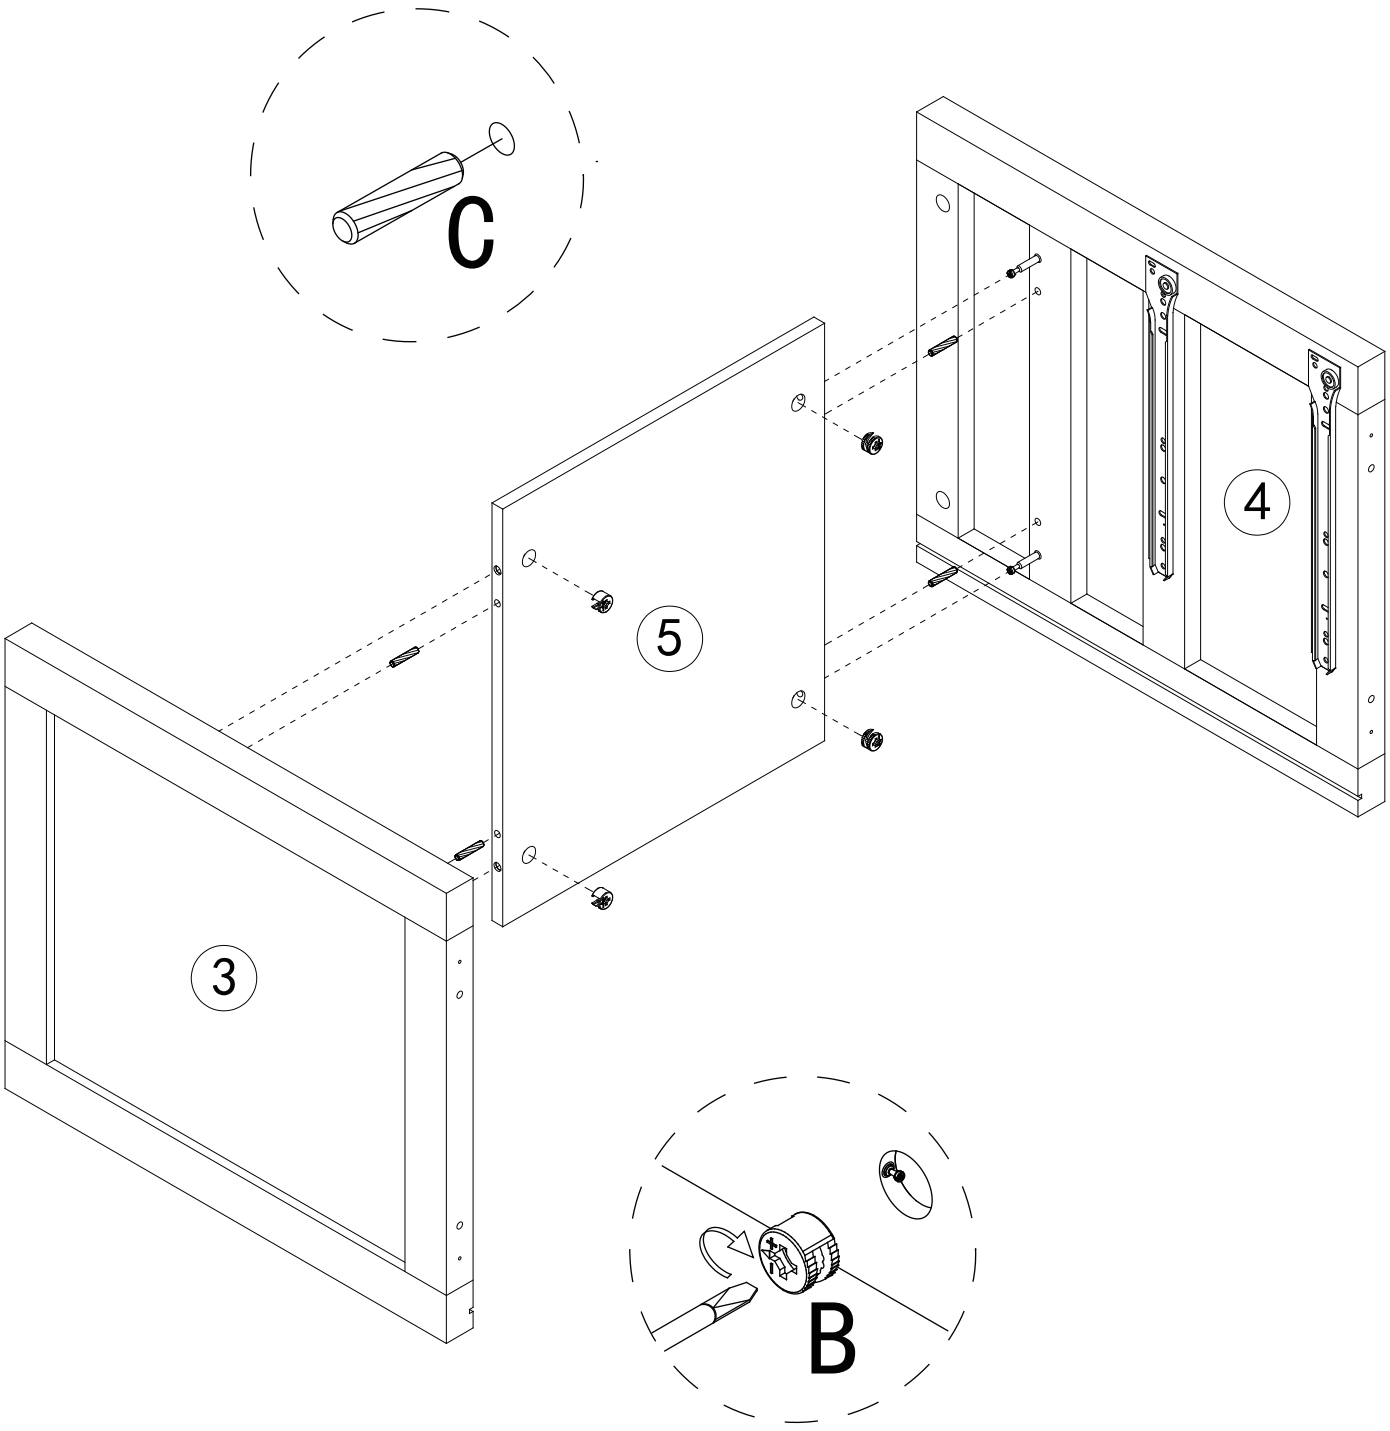


B		4pcs
C		4pcs


3

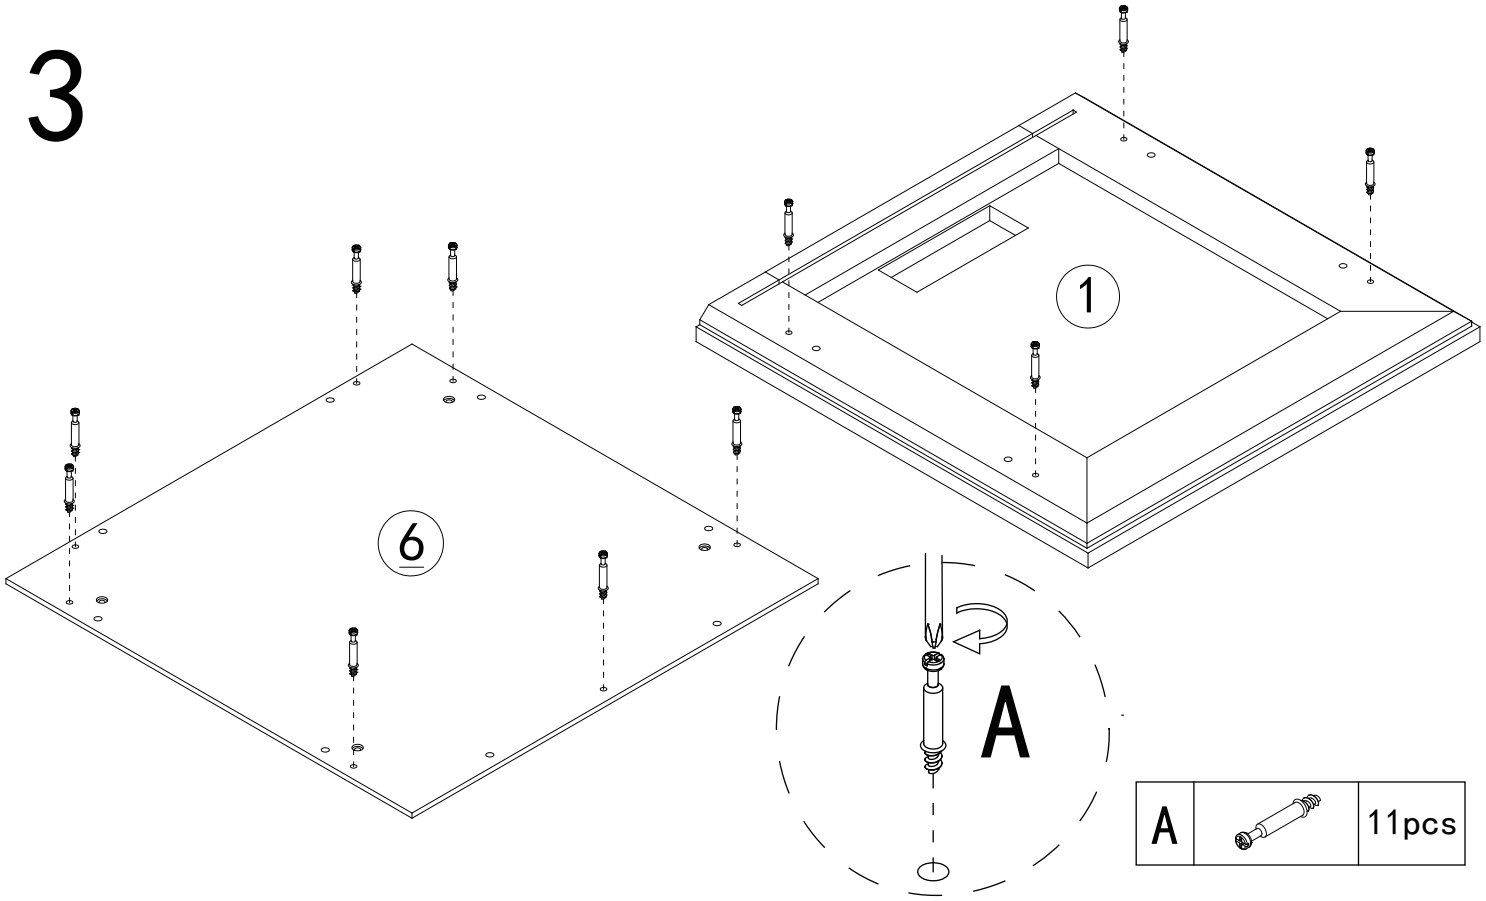


A		11pcs

4

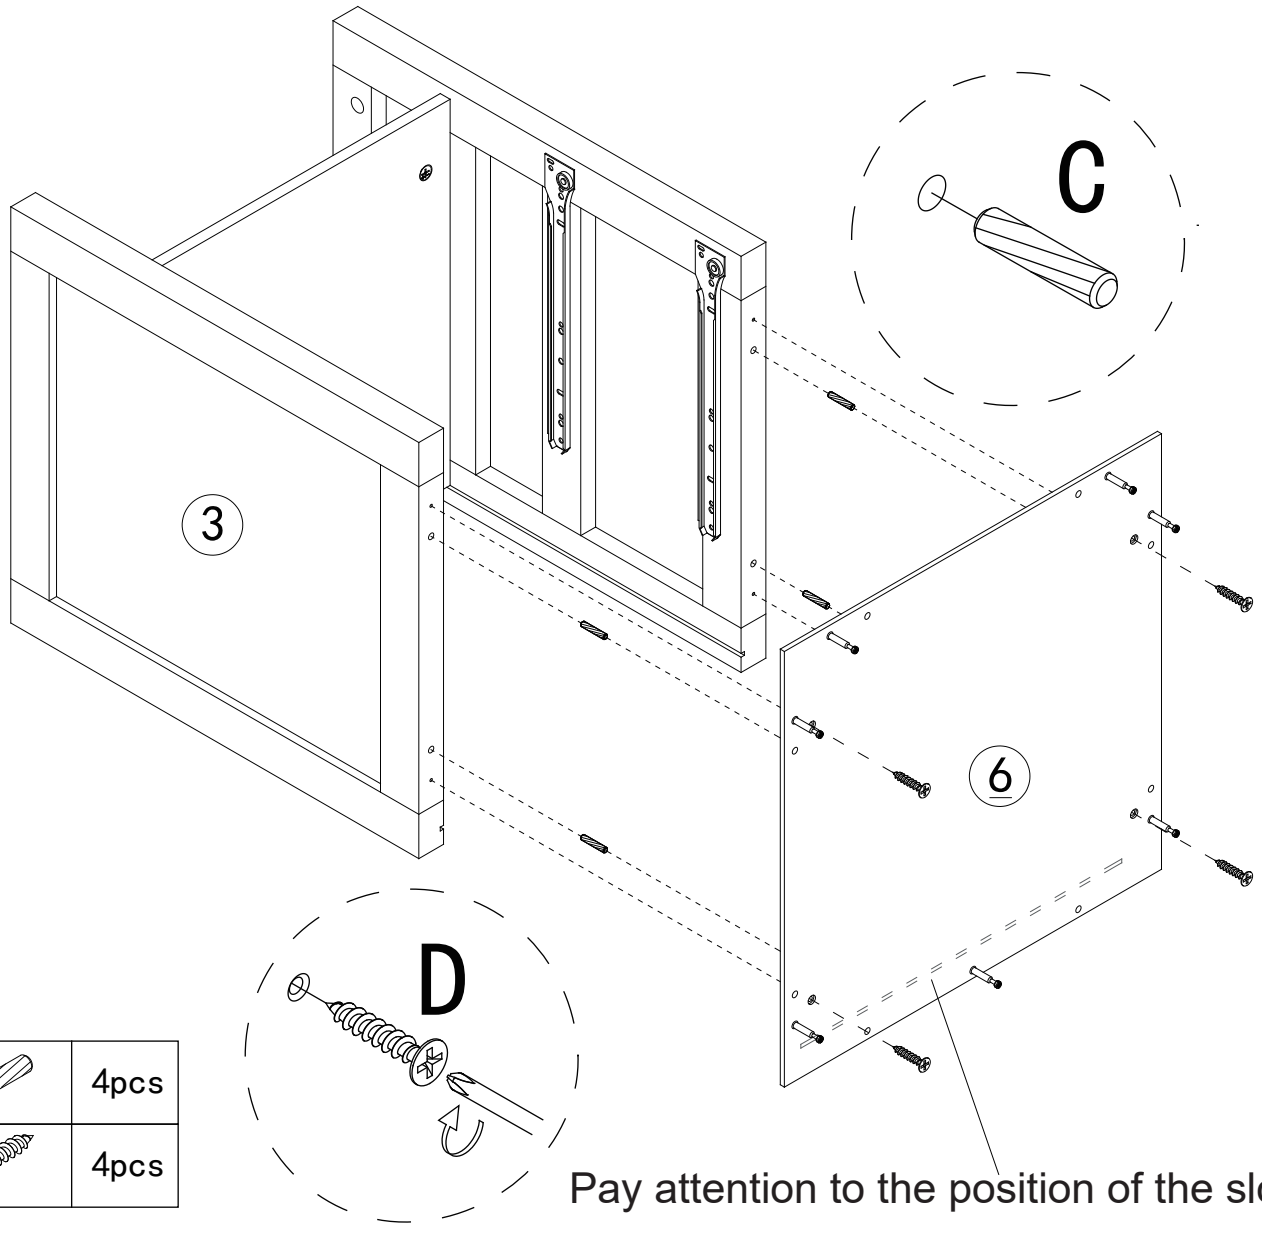


C		4pcs
D		4pcs

5

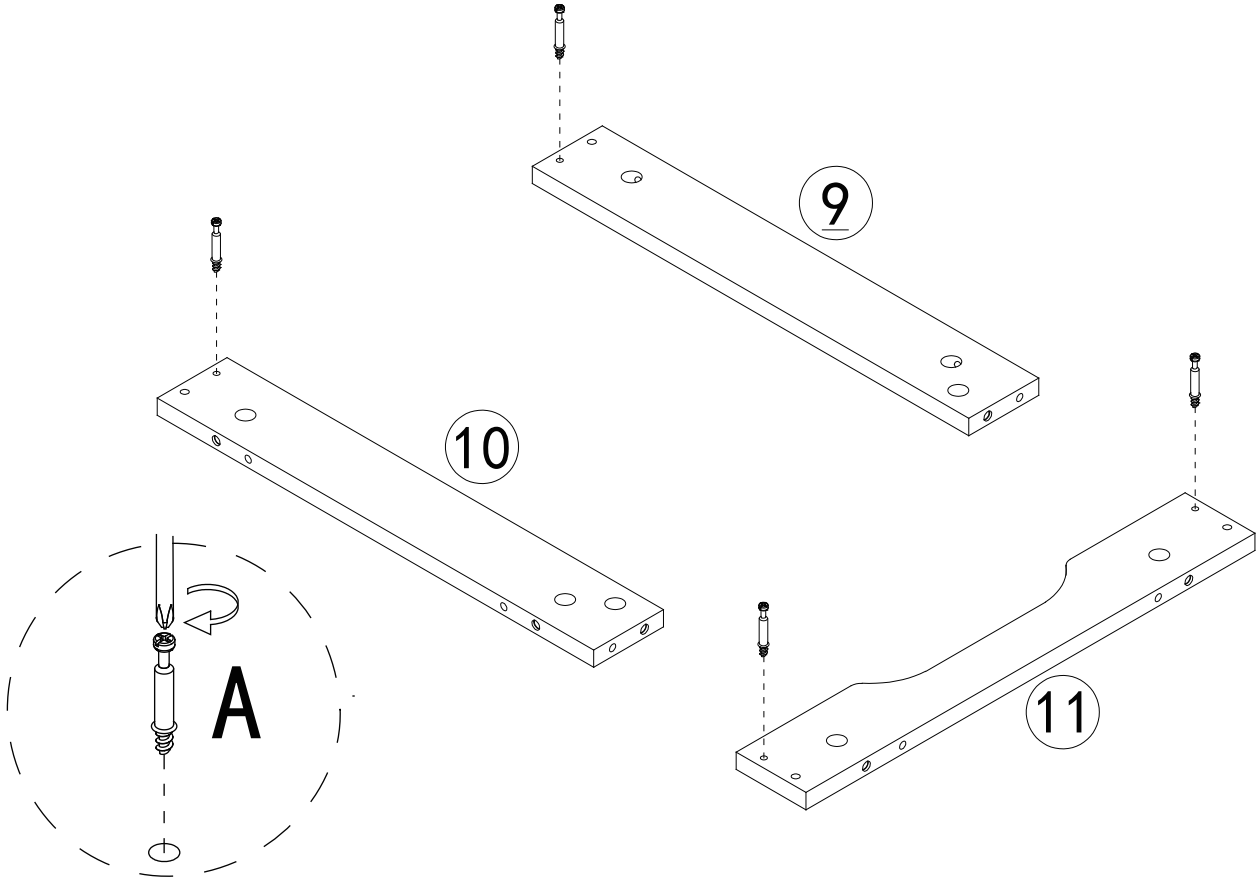


A		4pcs

6

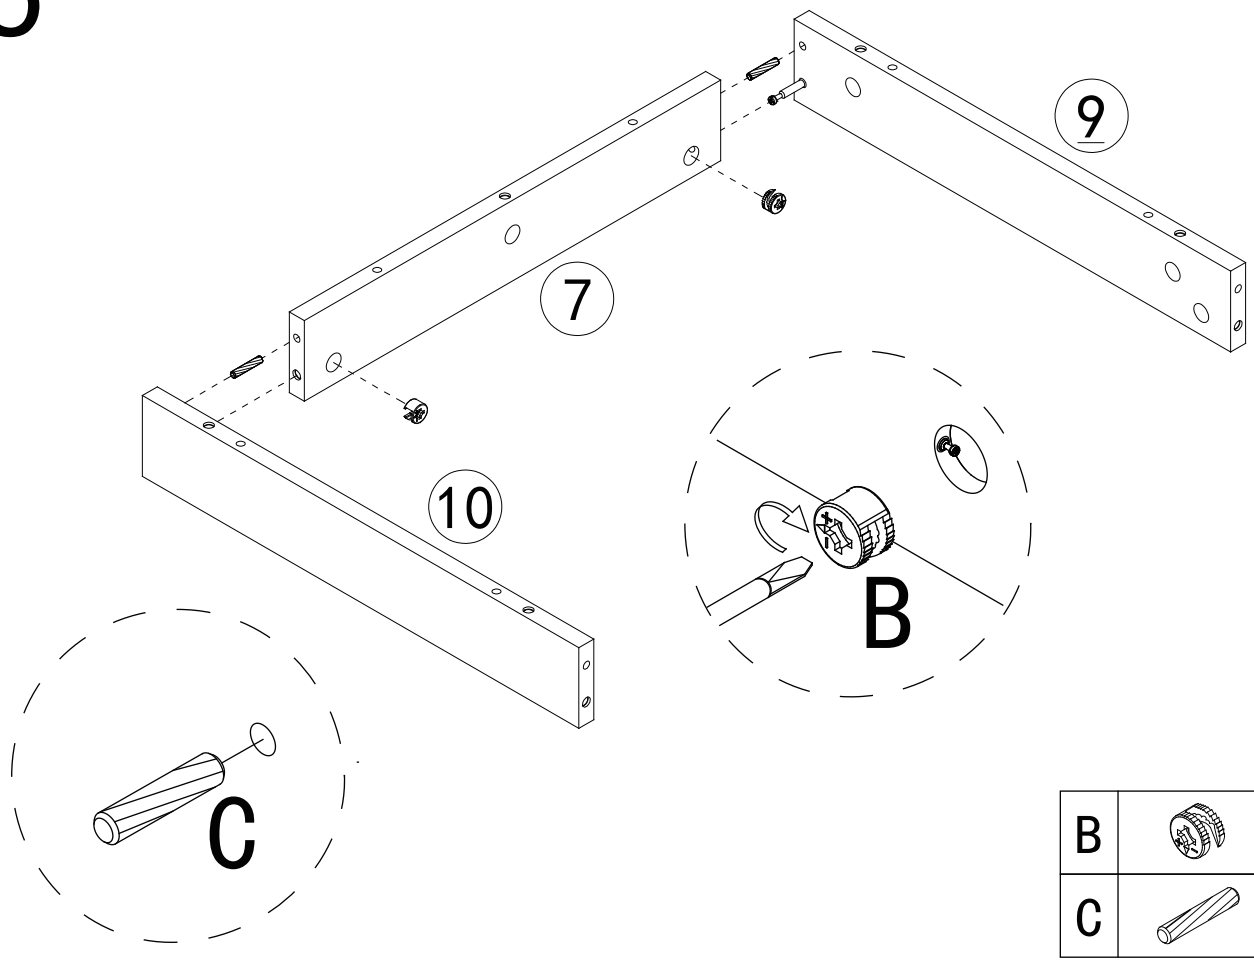


B		2pcs
C		2pcs

7

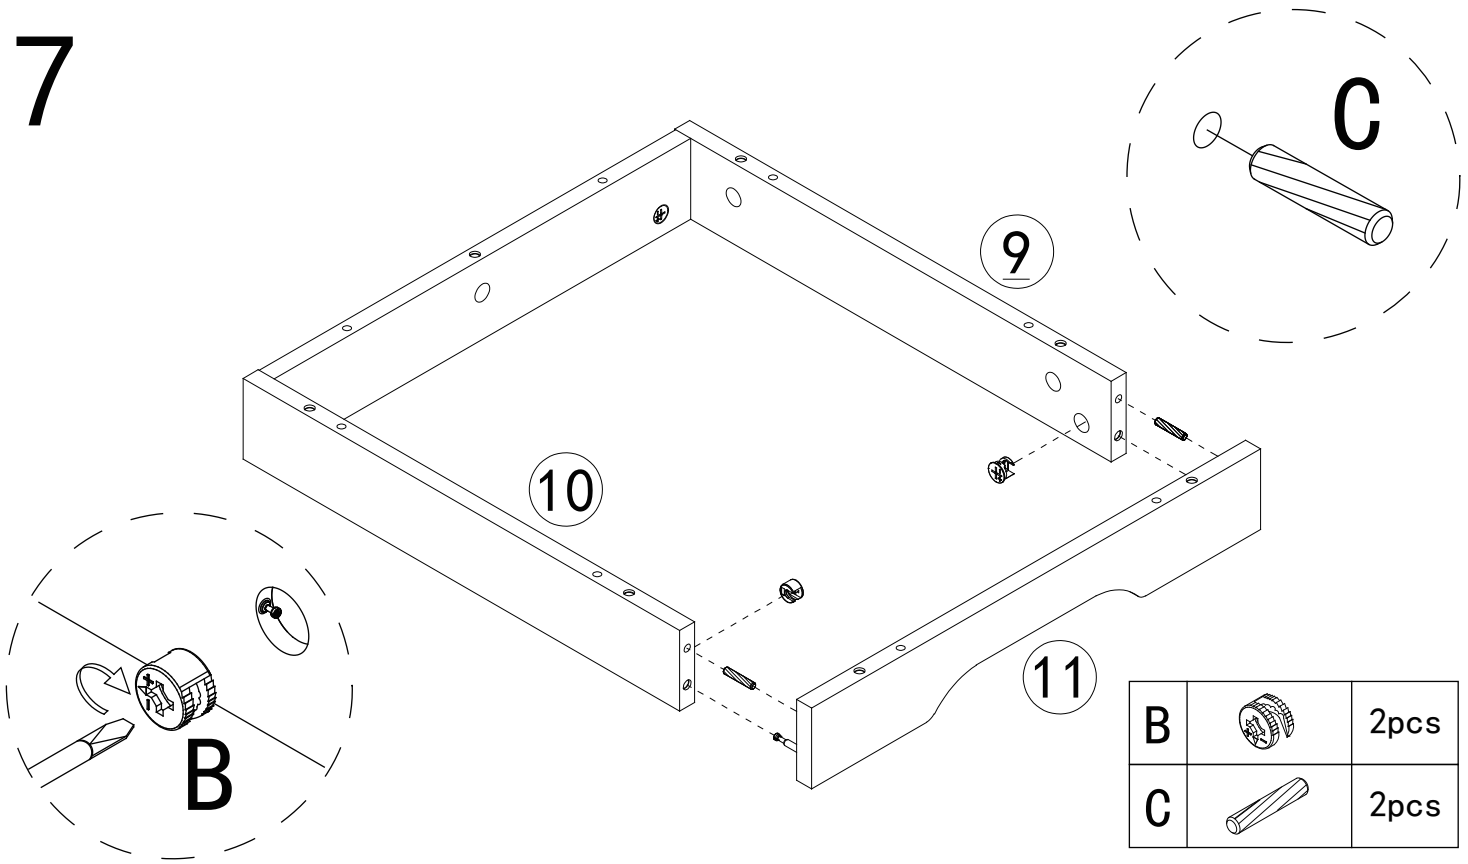


B		2pcs
C		2pcs

8

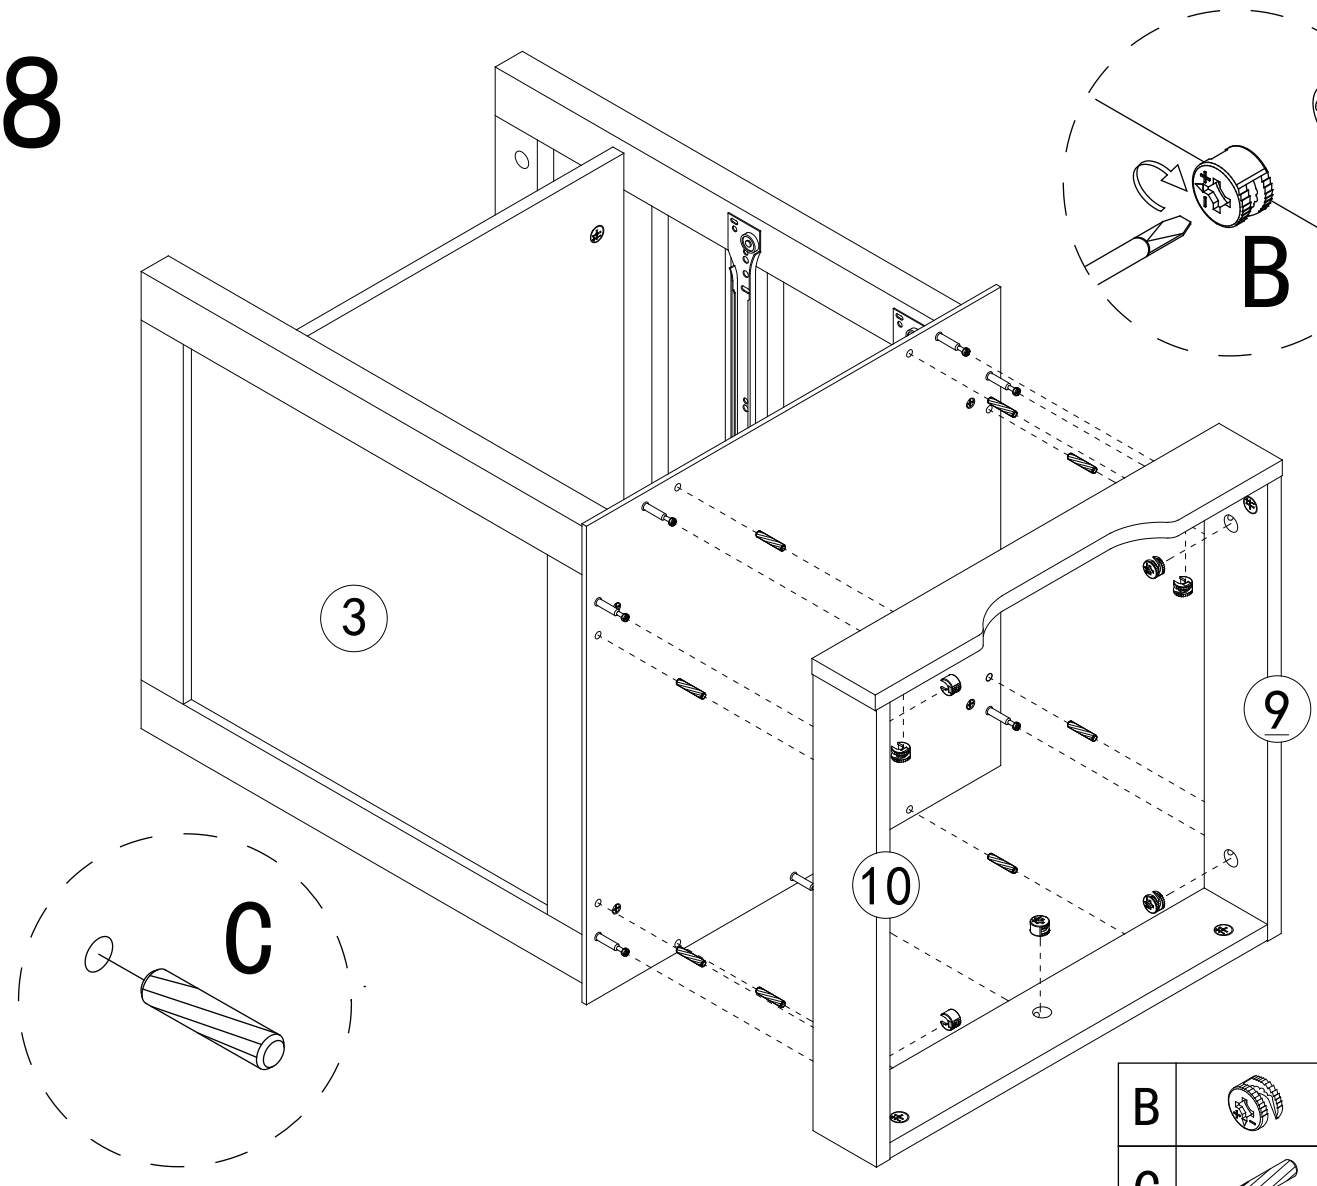


B		7pcs
C		8pcs

9

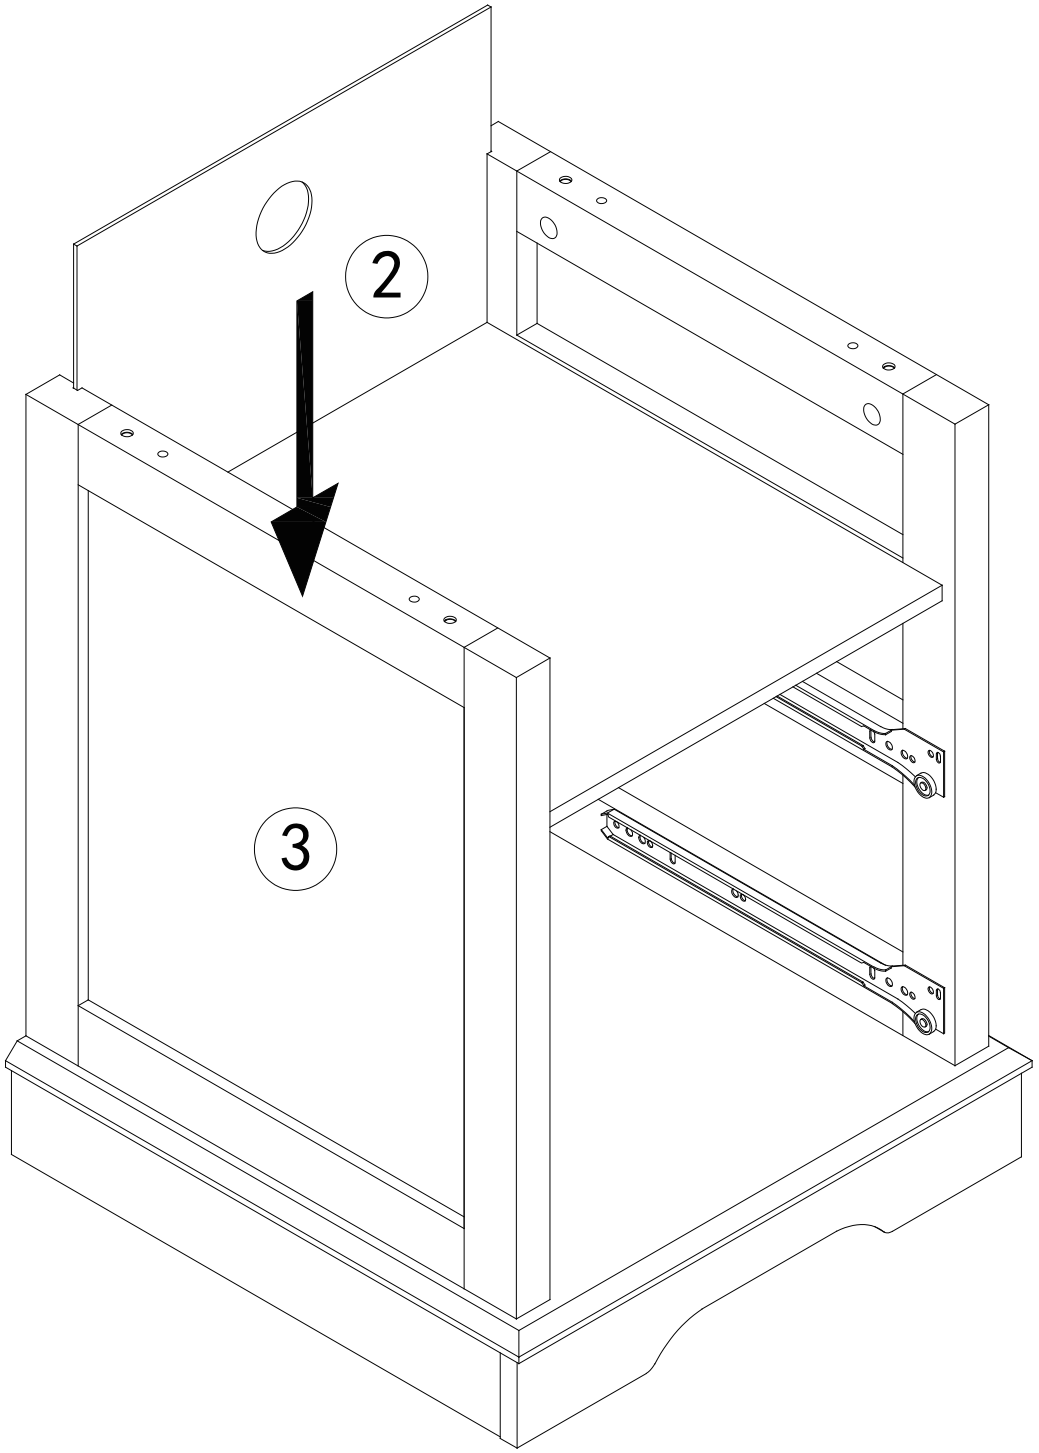


10

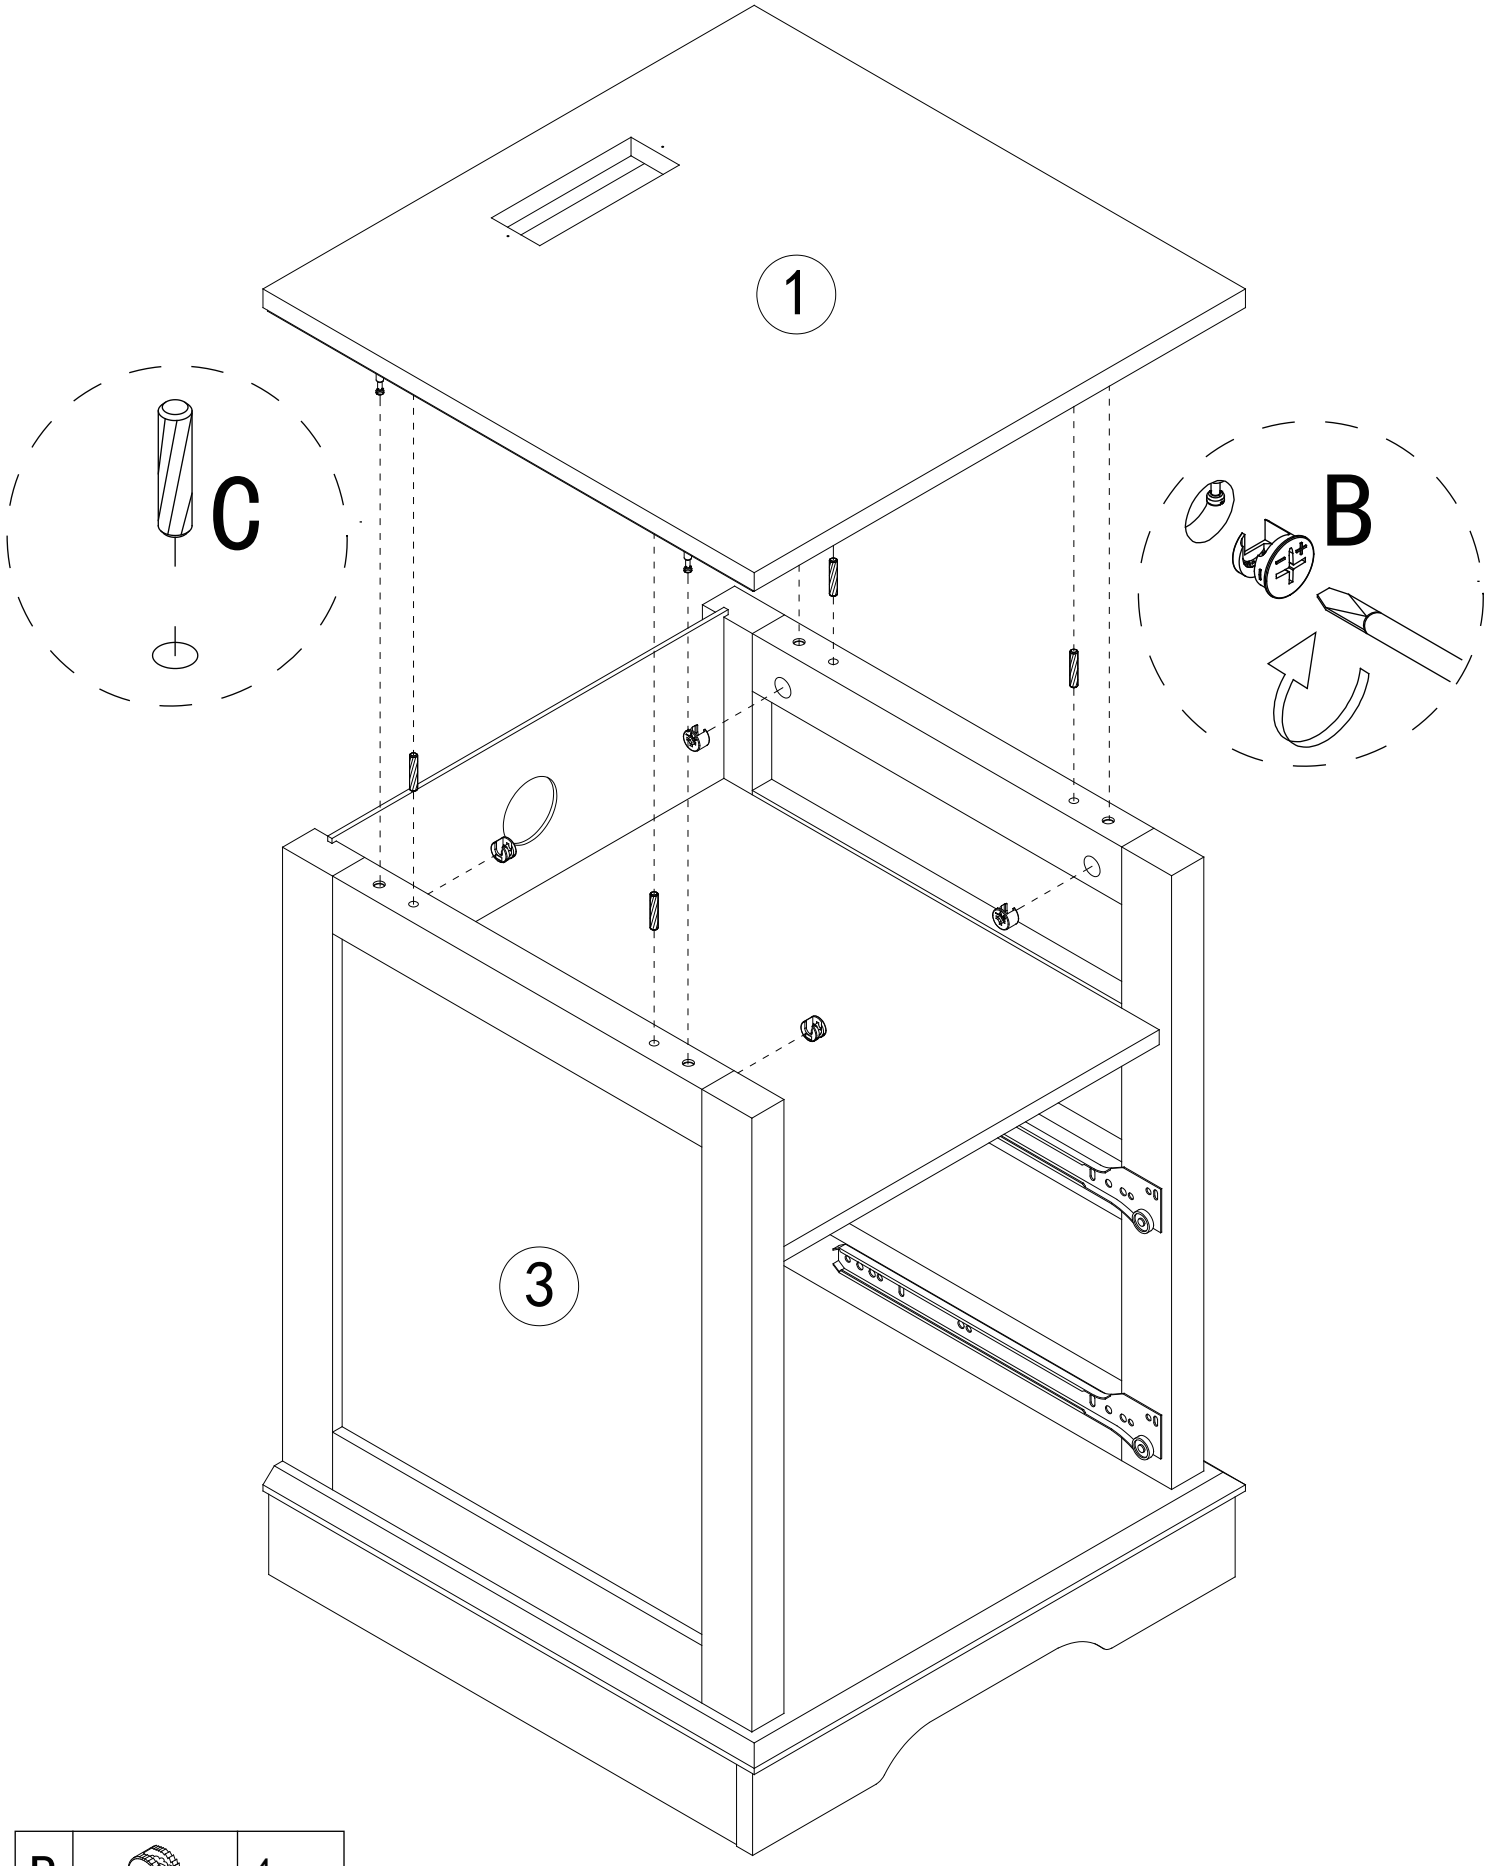

B		4pcs
C		4pcs


11

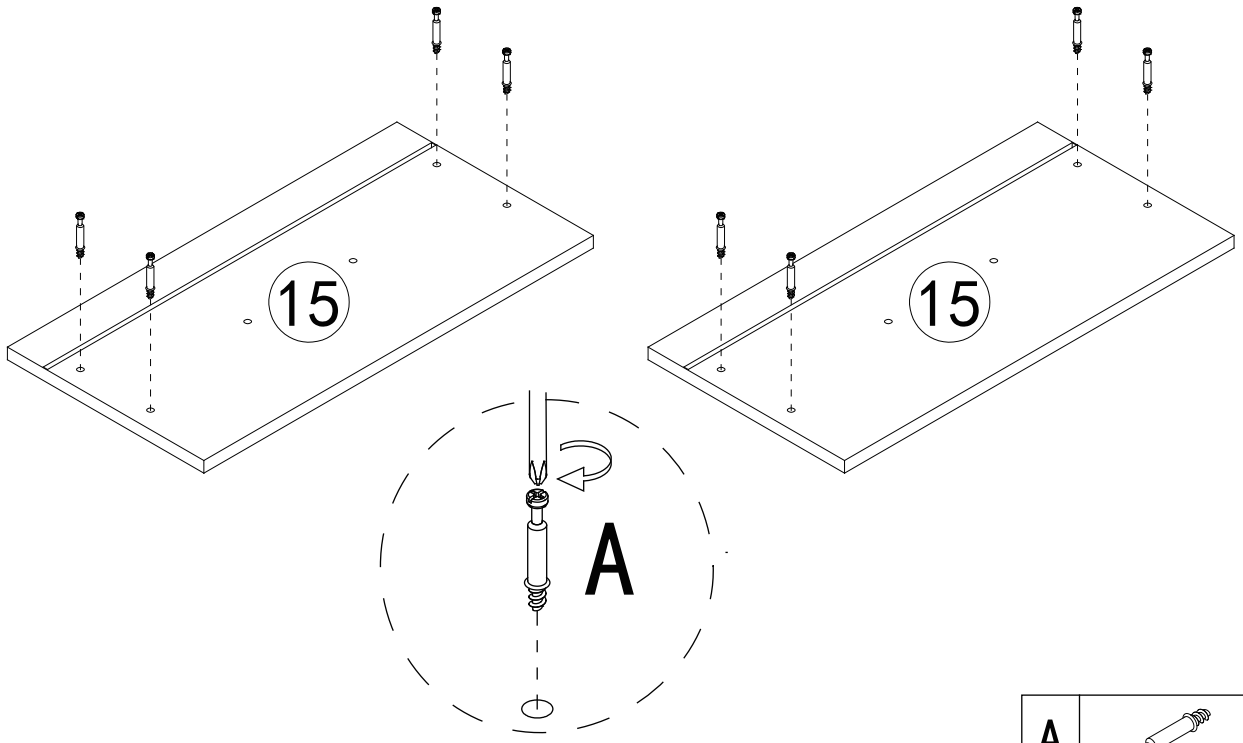


A		8pcs

12


The side panels are flush with the bottom panel.

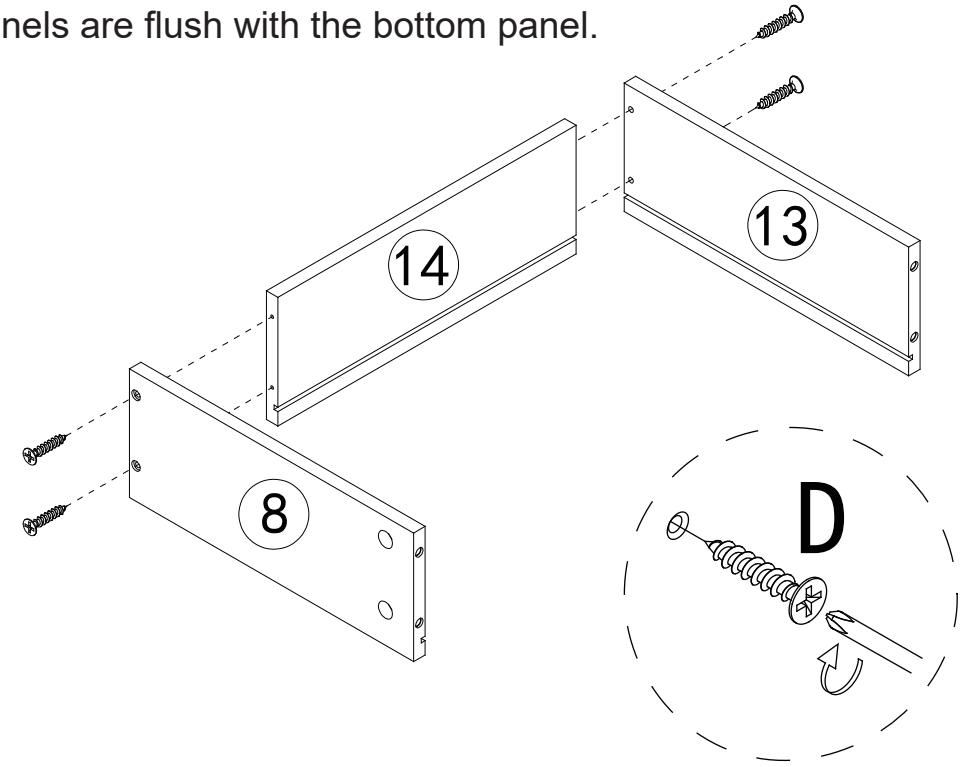

D		8pcs


x2

13

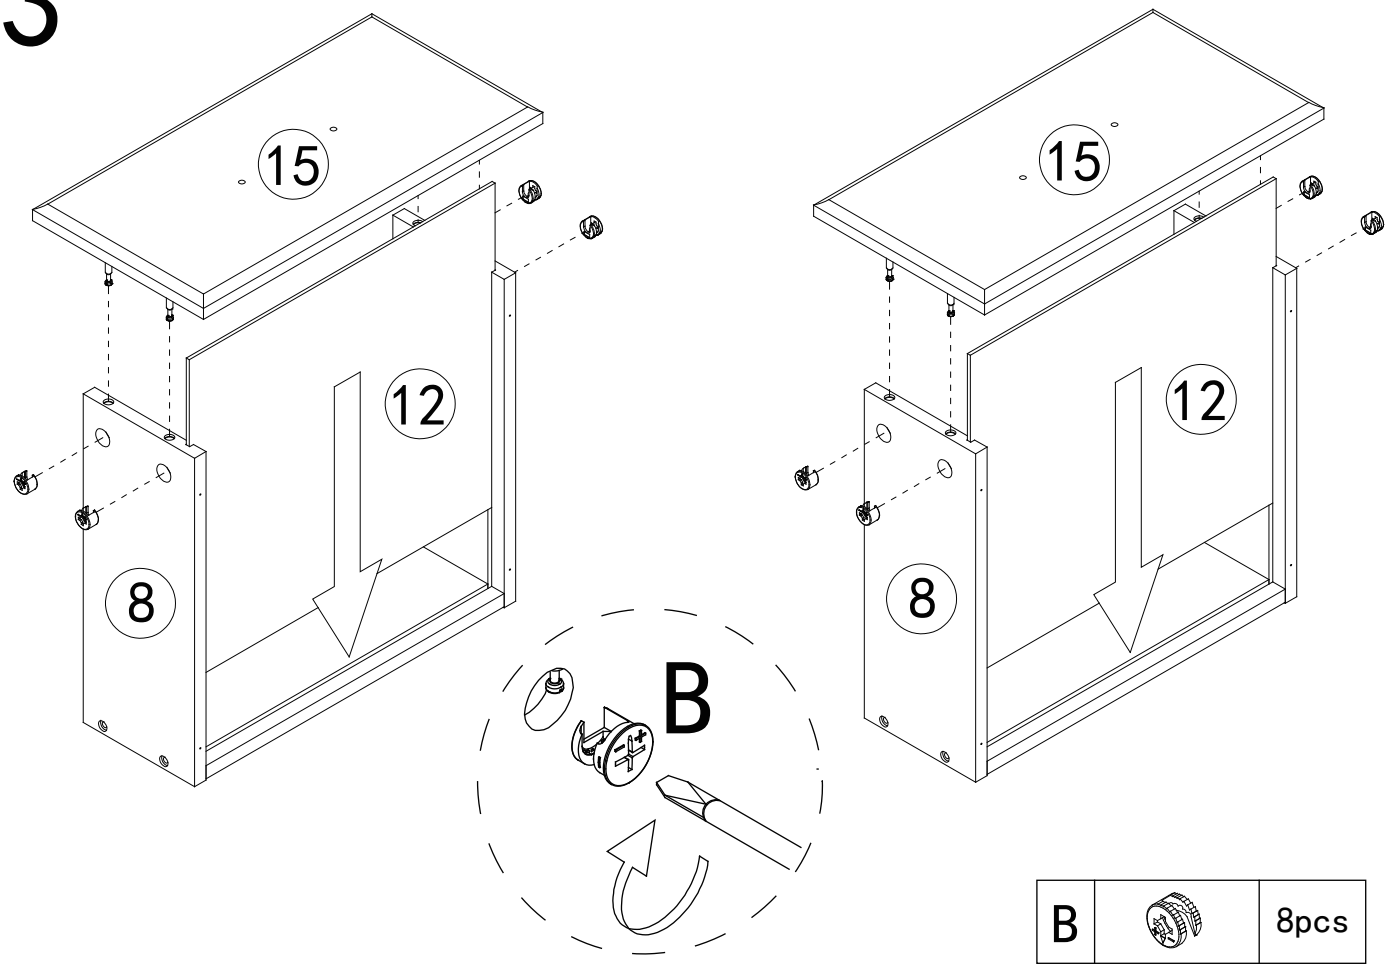

B		8pcs


14

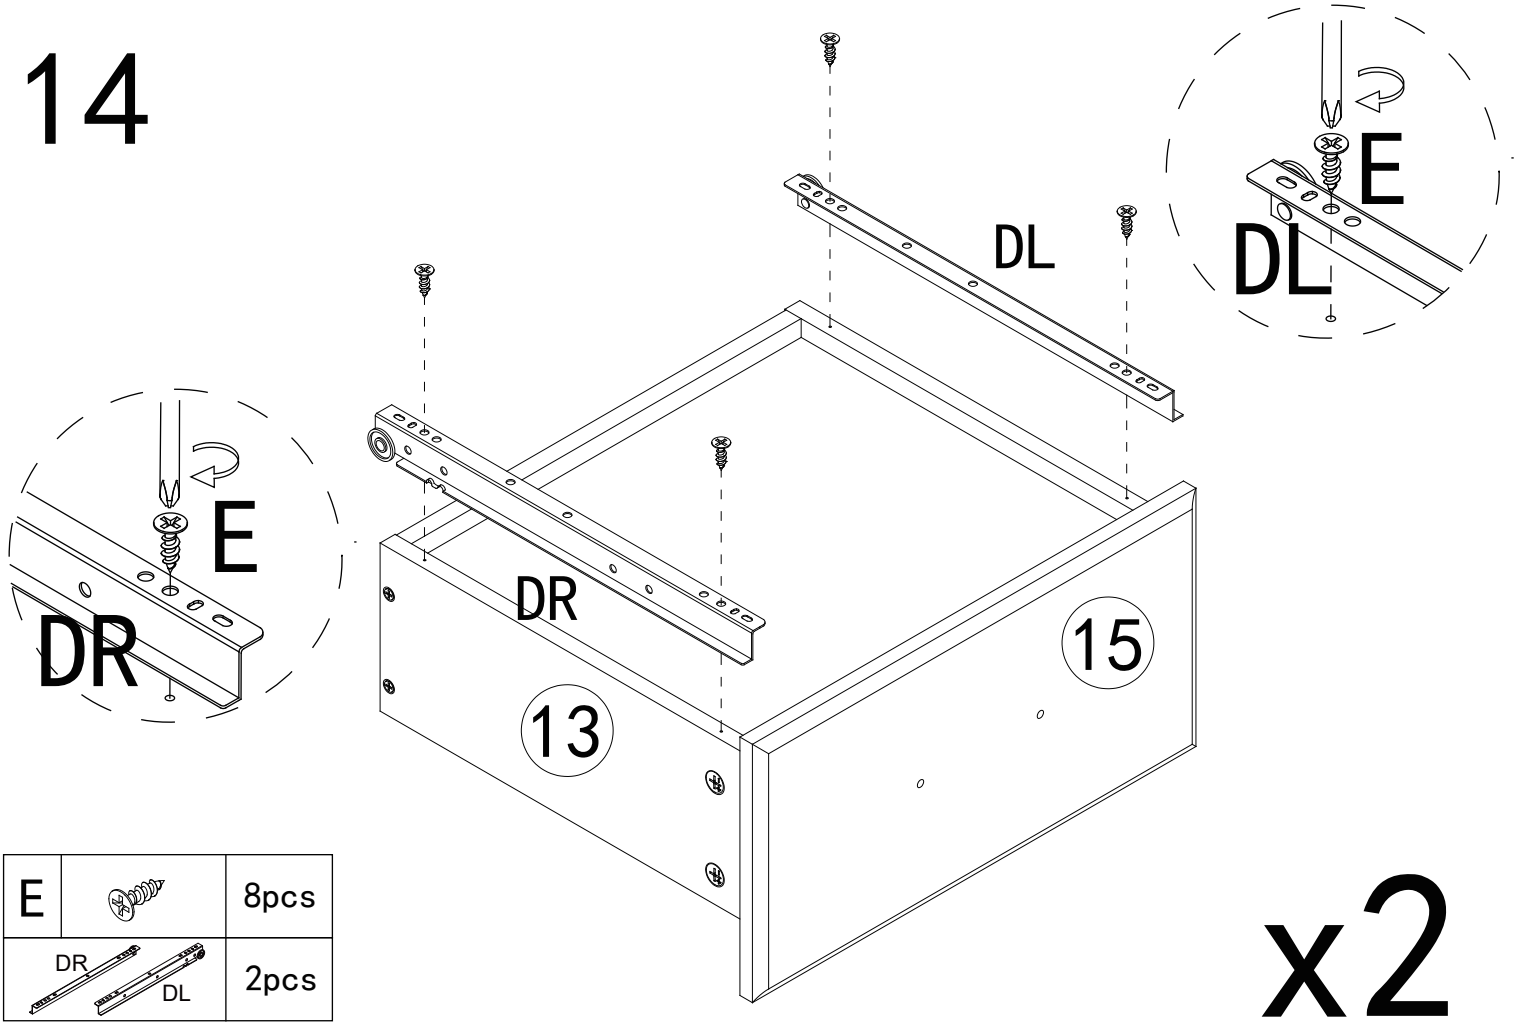



E		8pcs
DR DL		2pcs

x2

15

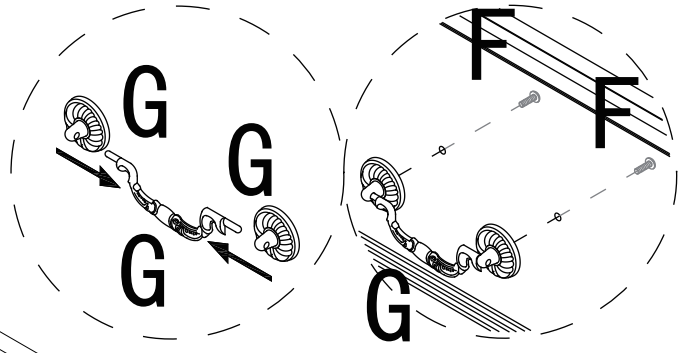


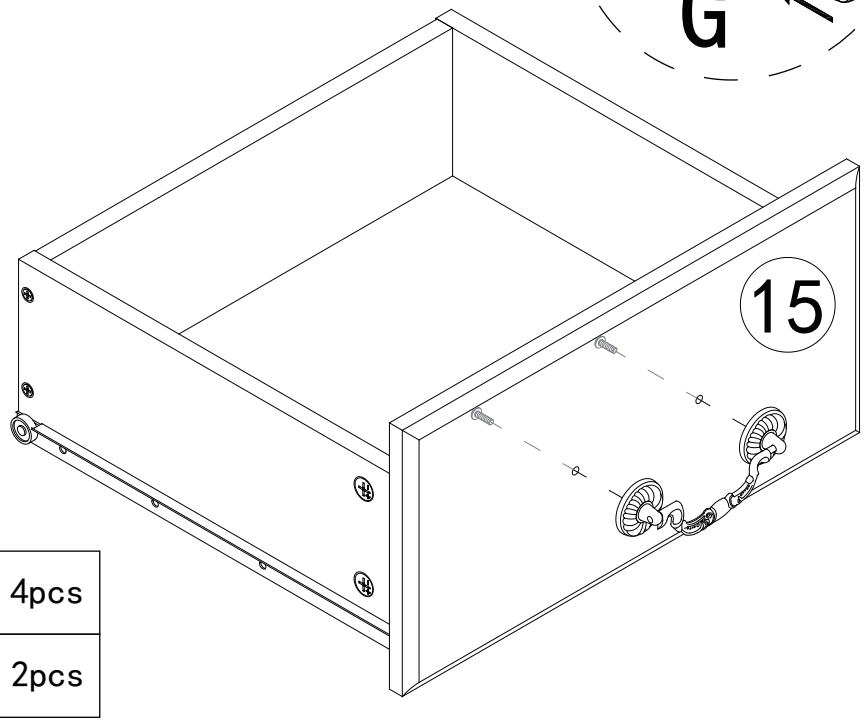


F		4pcs
G		2pcs

x2


16

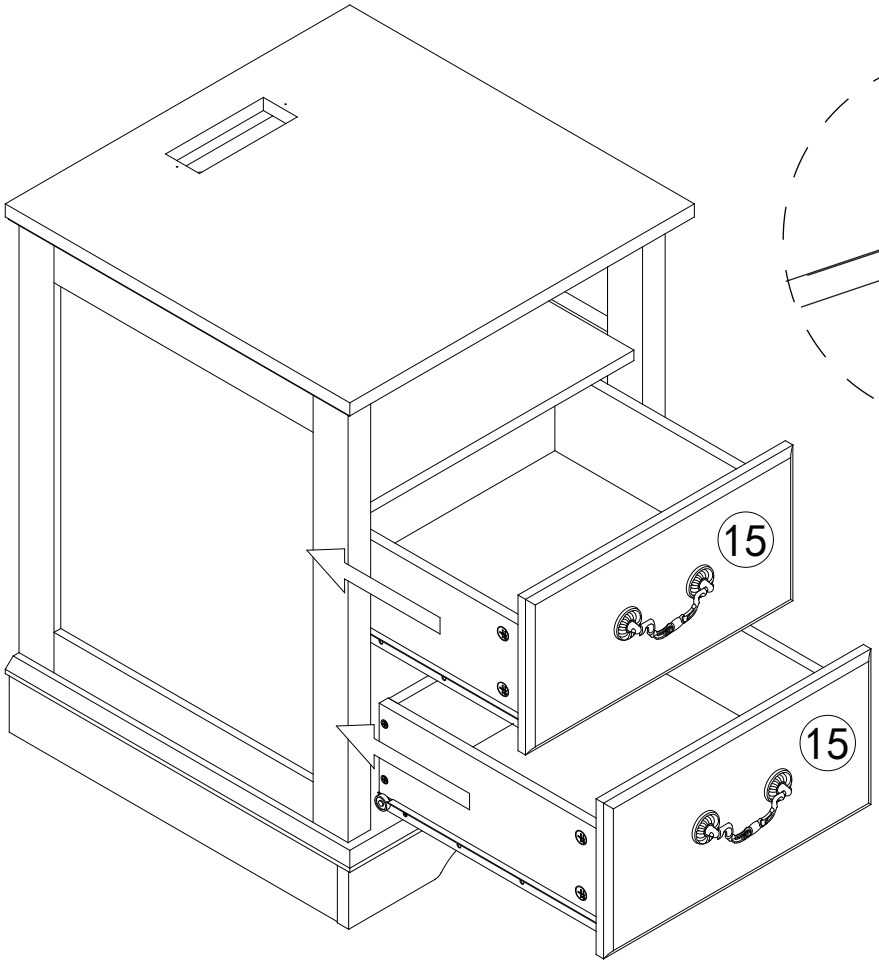


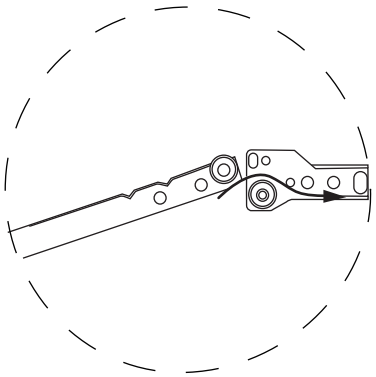

17


Be sure to install back plate buckle to prevent the cabinet from shaking.

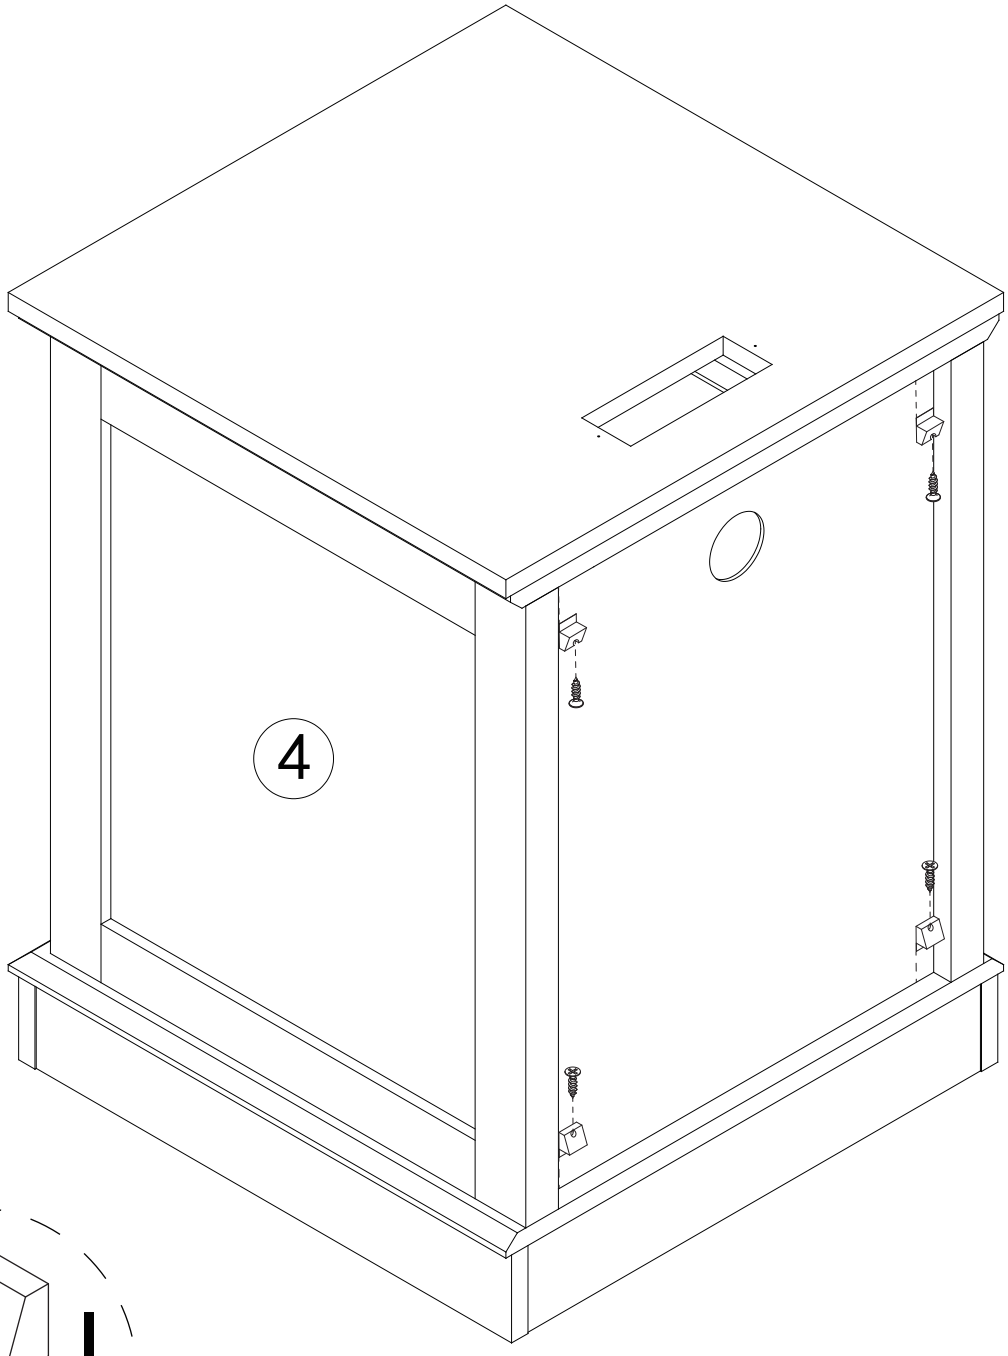

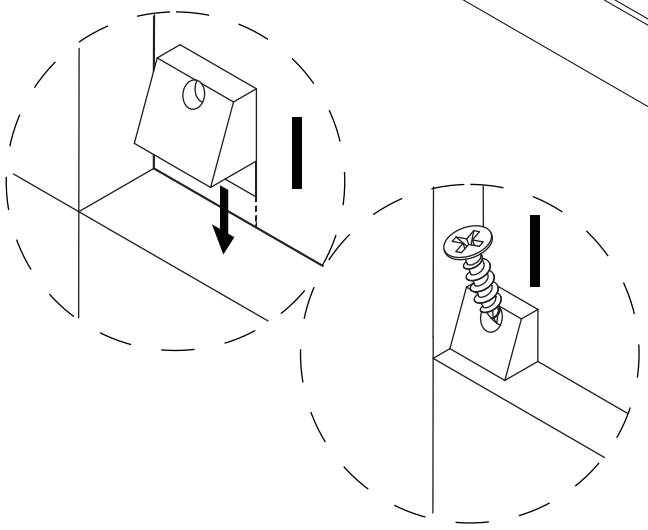

I		4pcs

18

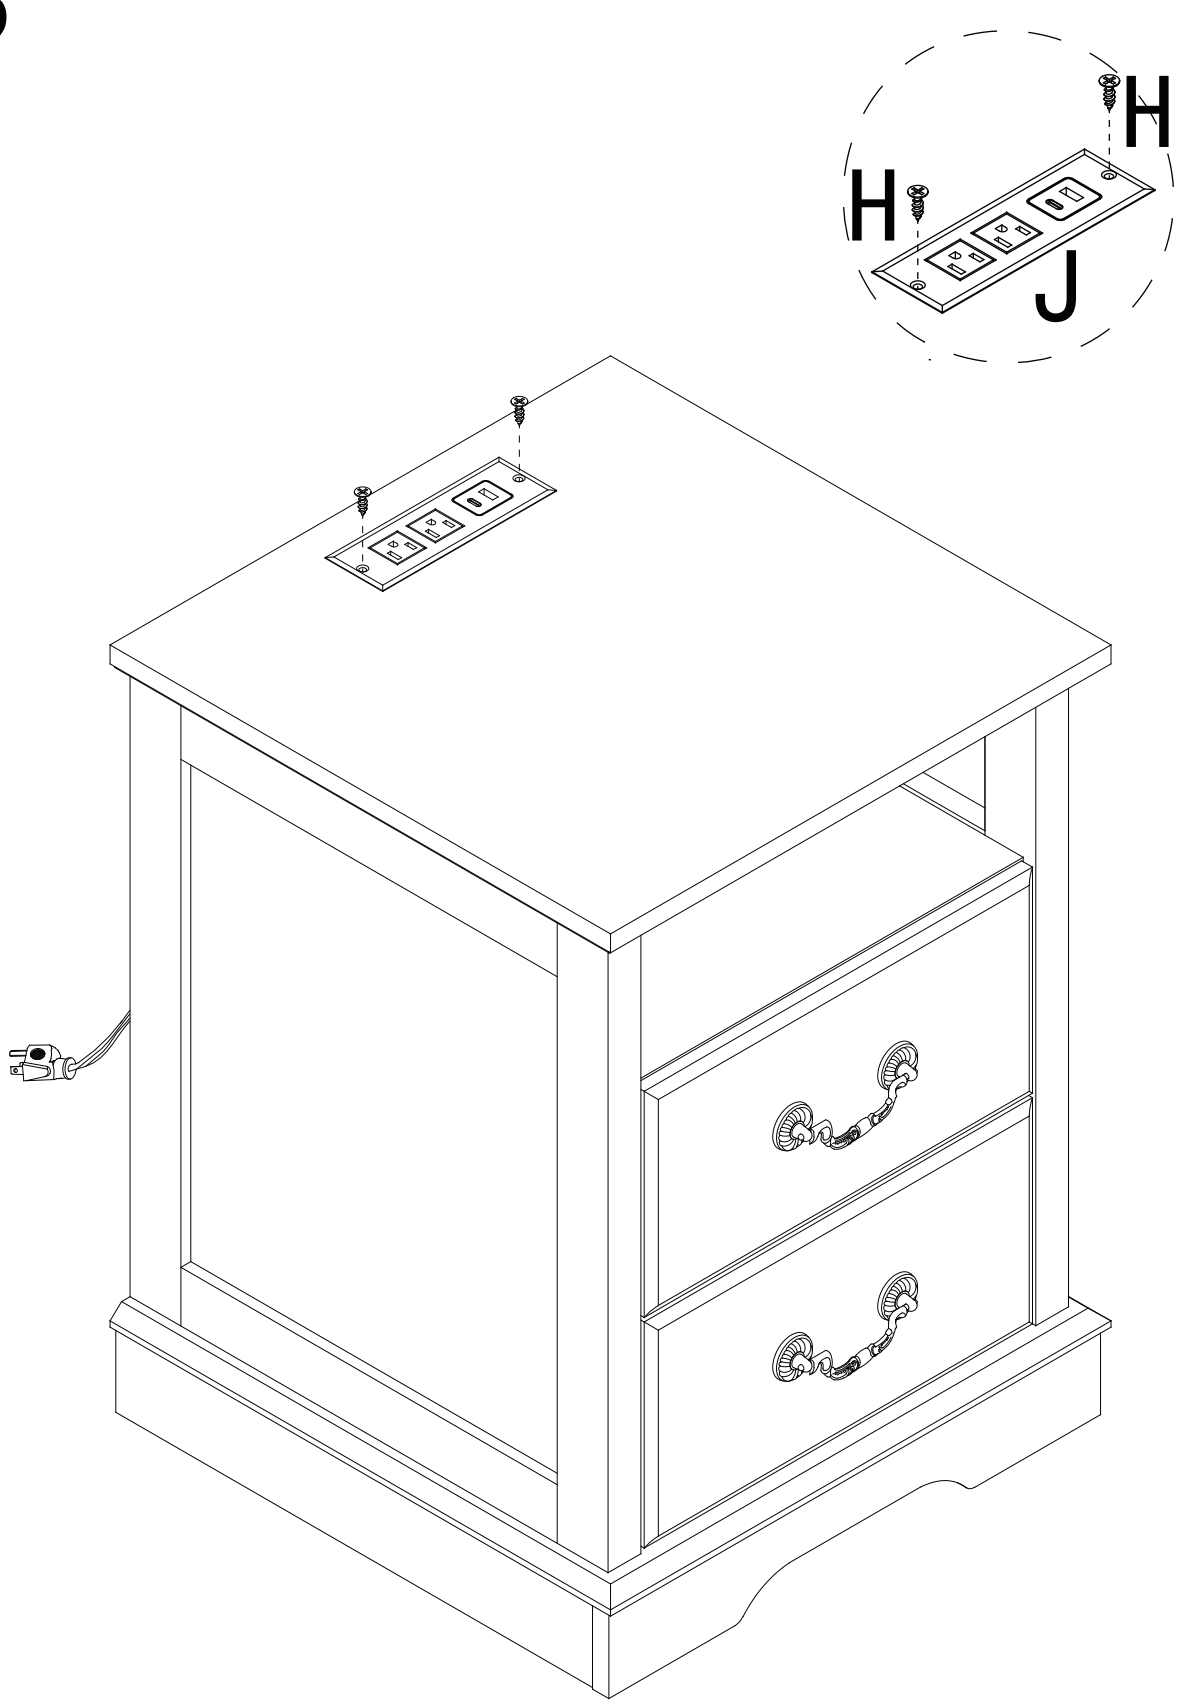

Note: When moving the cabinet, please lift it vertically off the ground.
Dragging may cause loose connectors, affecting stability and service life.

H		2pcs
J		1pc