


Metal Roof
Aluminum Gazebo

10X10FT

SKU:A-TPSB23-G029-1
A-TPSB23-G029-2
A-TPSB23-G029-3

ASSEMBLY INSTRUCTIONS

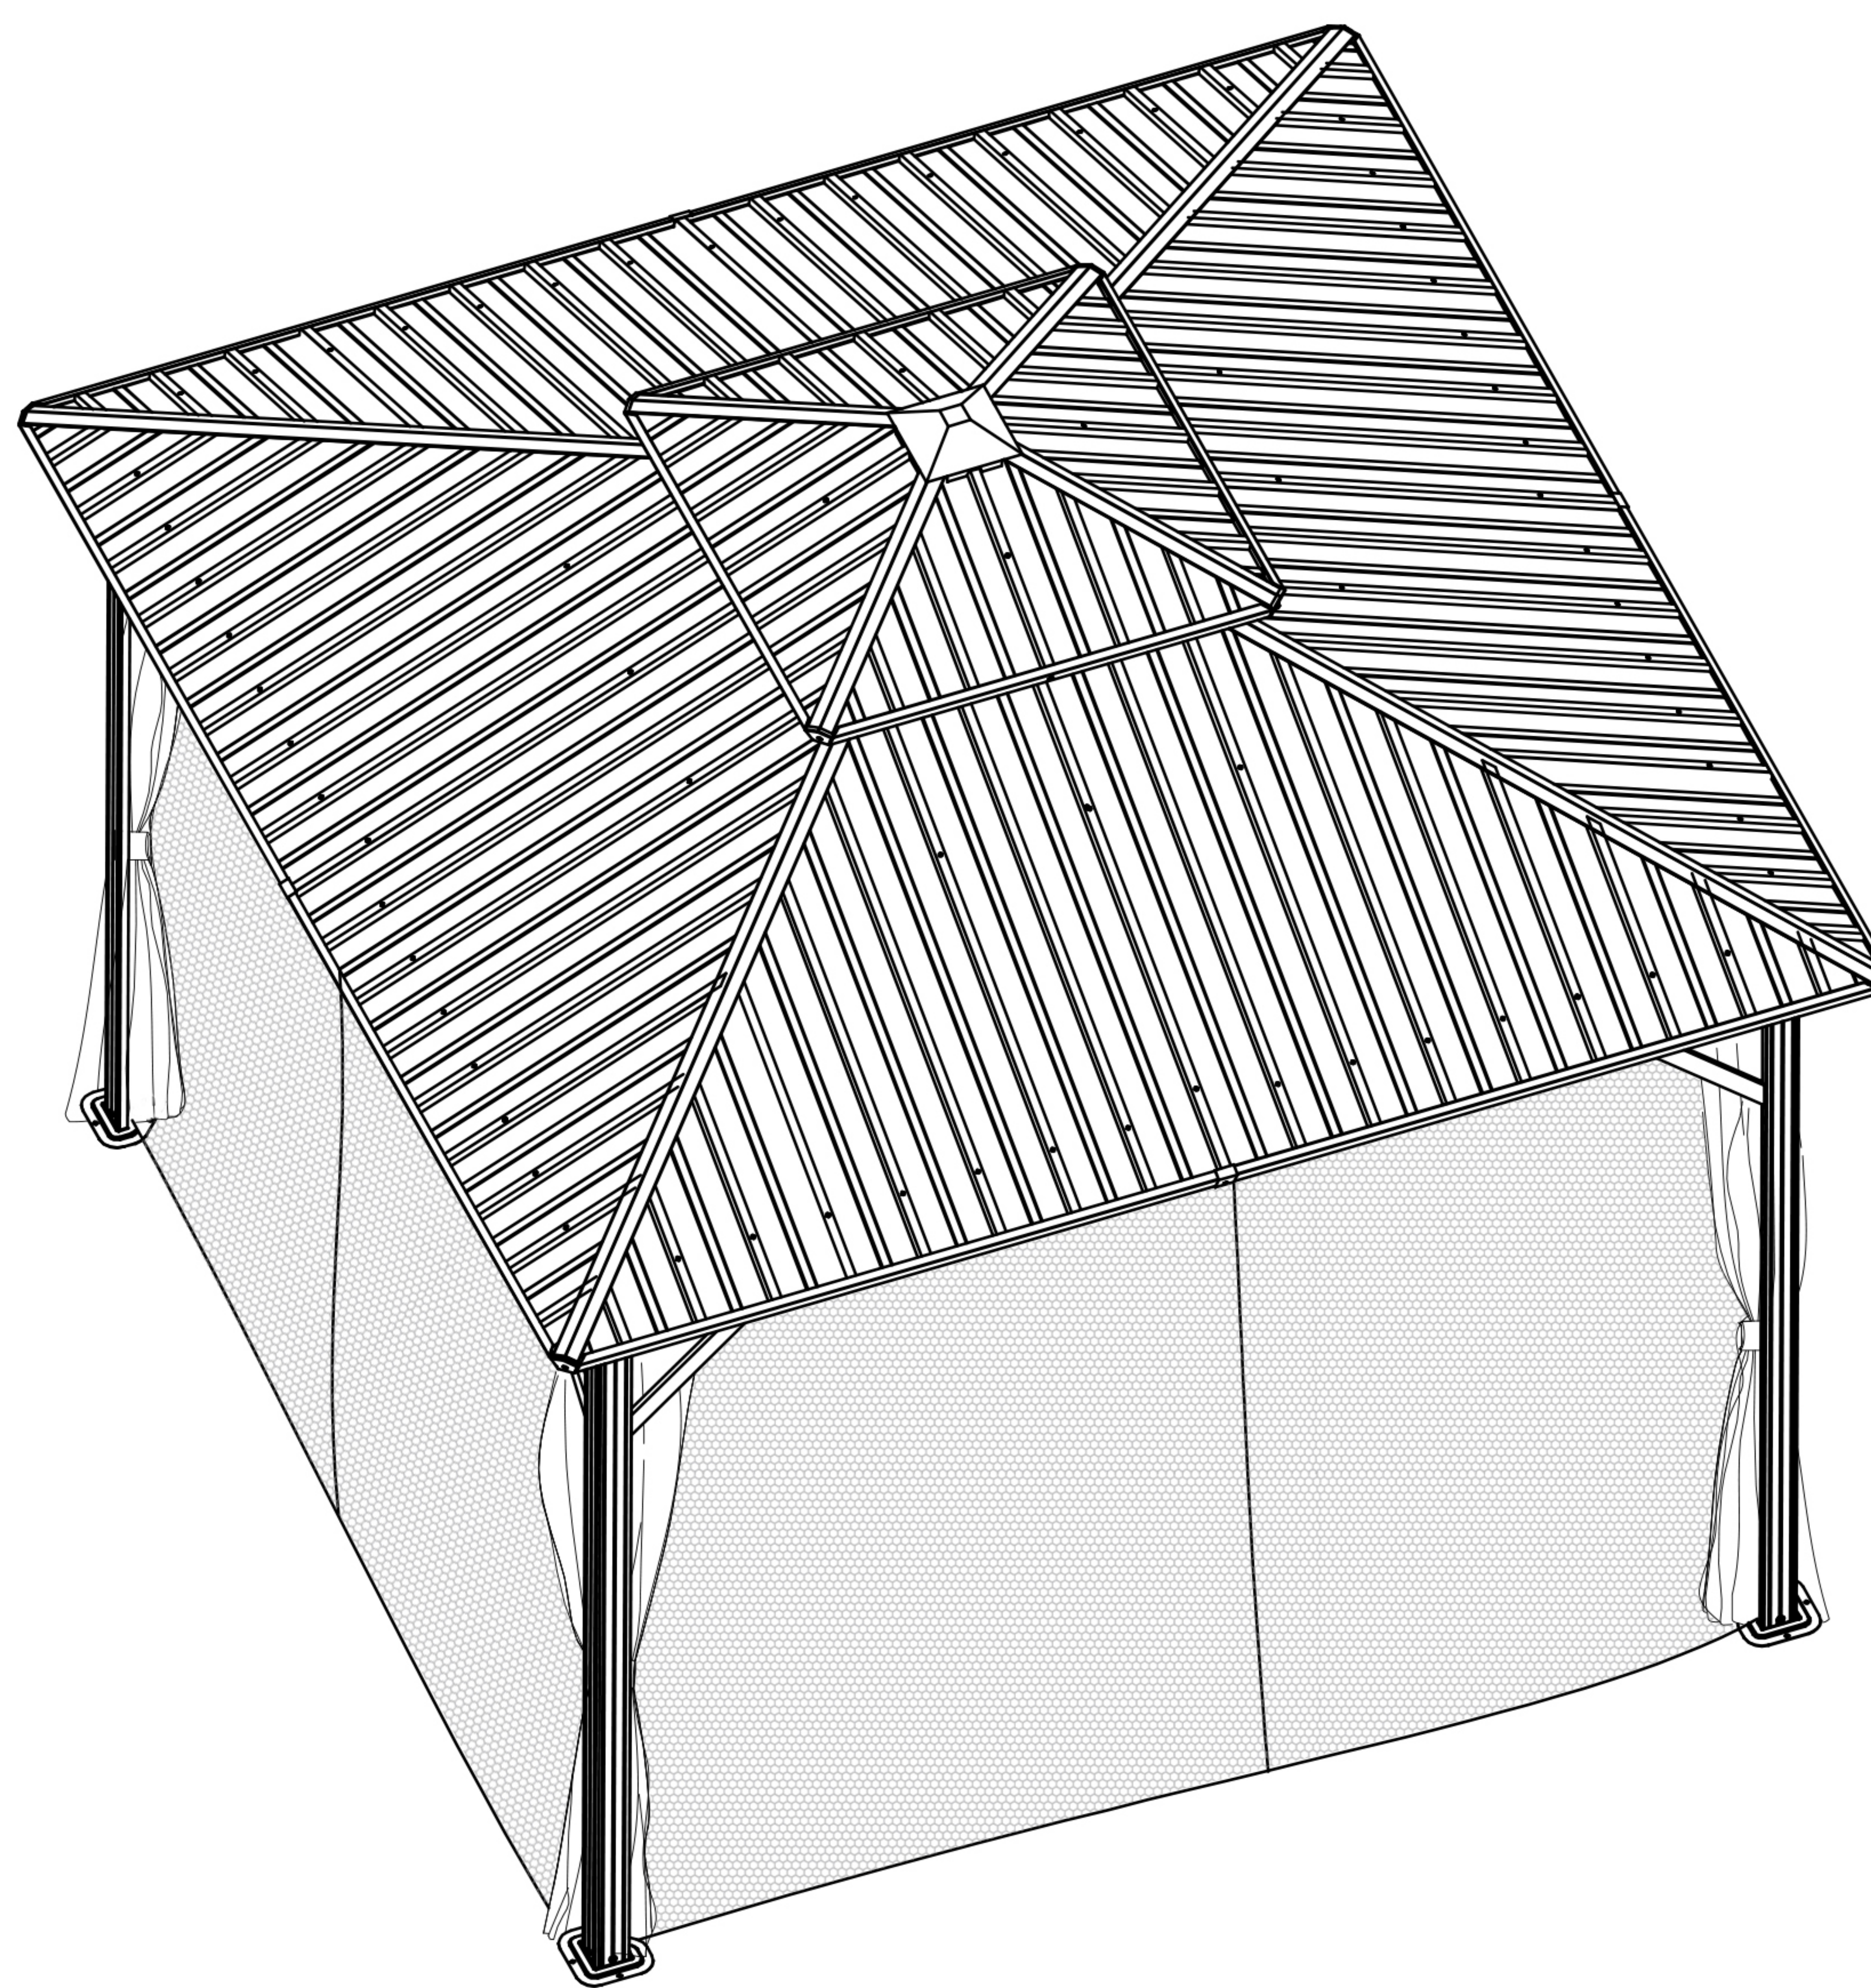


Please check the number of parts in the following accessory catalogue when unpacking. We have sent you more small parts for spare. If there is any missing or any questions about the installation. Please feel free to contact us. We will reply within 24 hours.



E-mail: cs.helper01@gmail.com

TOOLS RECOMMENDED

*NOTE: The recommended tools are not included in boxes and need to be prepared by yourself.

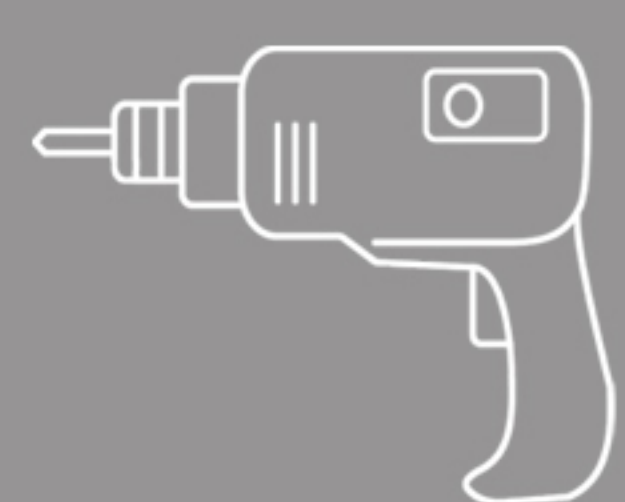

DRILL



RUBBER Mallet




STEPLADDER
(6.5Ft Or More)



SAFETY HAT




GLOVES

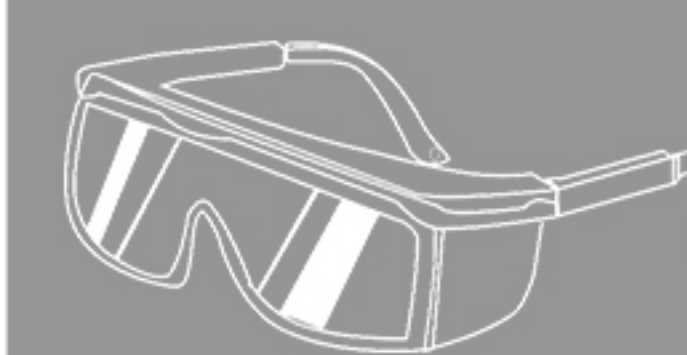

SAFETY GOGGLES



ATTENTIONS

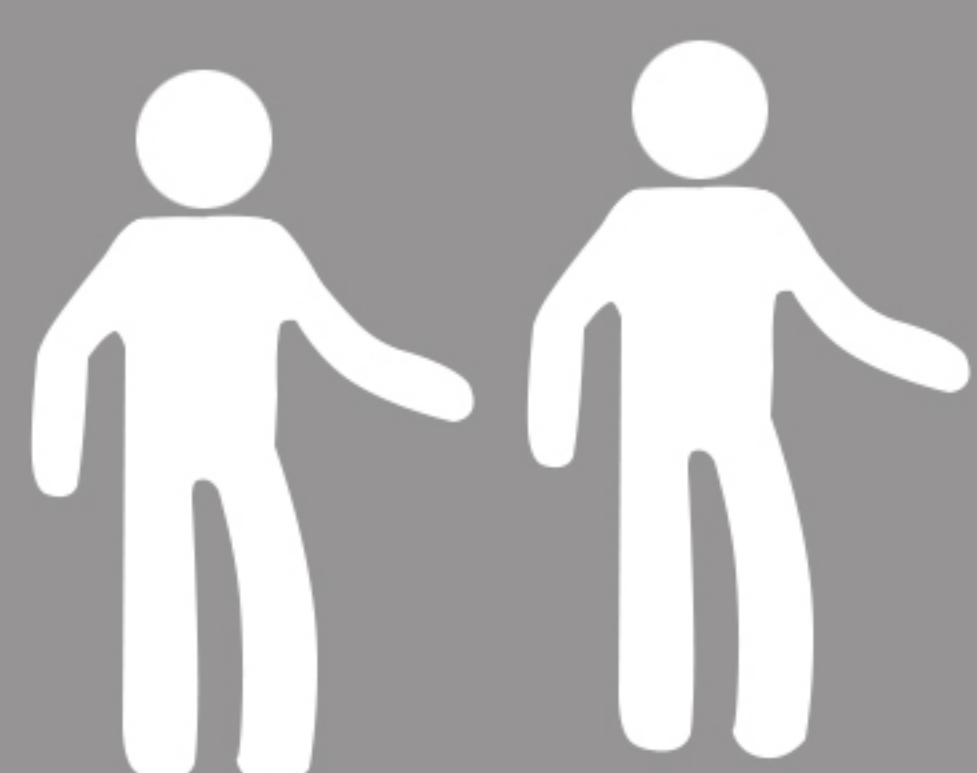

Two or more people
are required for
assembly



To better align the screws
for practical situations, do
not fully tighten screws
initially



Please reinforced the Gazebo
and do not use in heavy winds
or inclement weather



Make sure all screws are
tightened before use and
check all screws, buckles and
straps every 90 days



Since it is easy to lose many
small accessories during the
installation, please collect all the
the screw accessories before the
assembly is completed











Please clear the snow off the
roof in time for the heavy
snowfall and do not use it










ACCESSORY CATALOGUE

BOX 1

SKU:A-TPSB23-G029-1

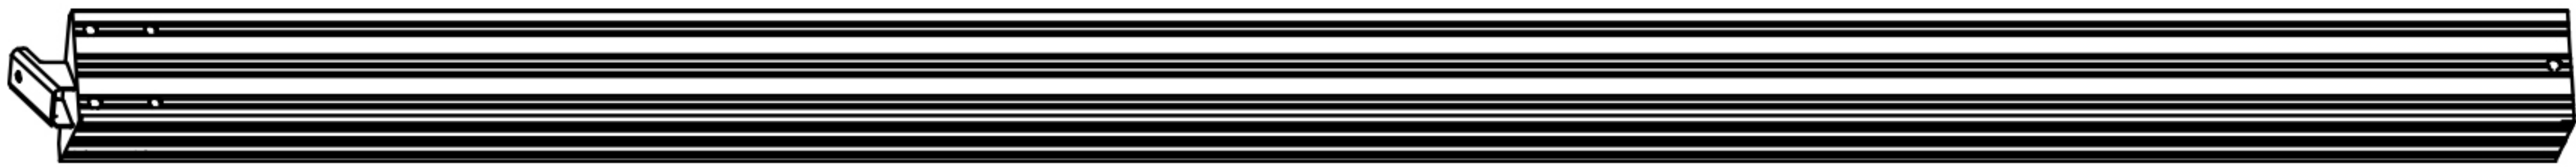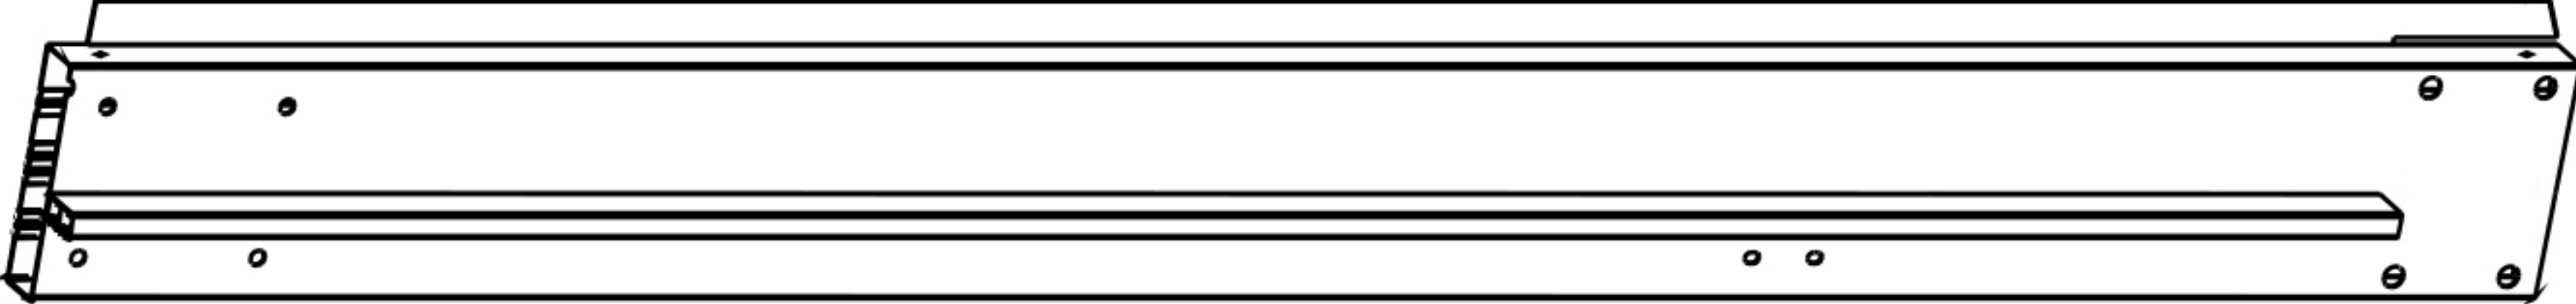
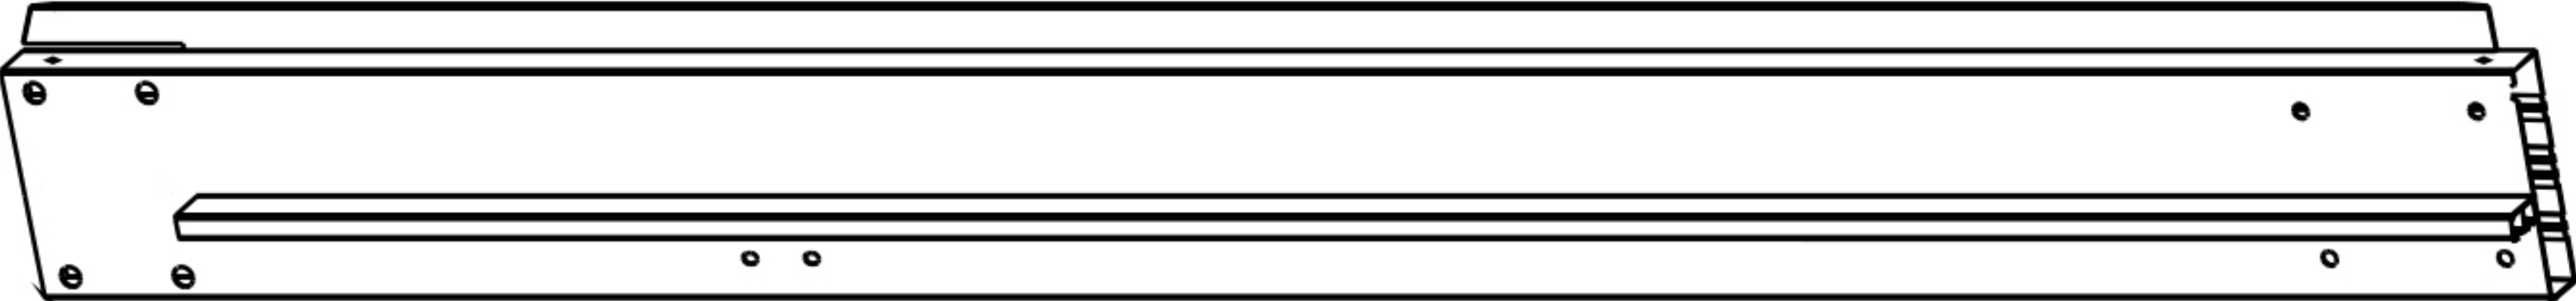
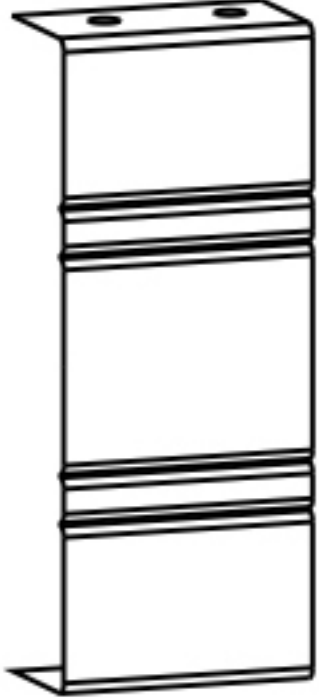
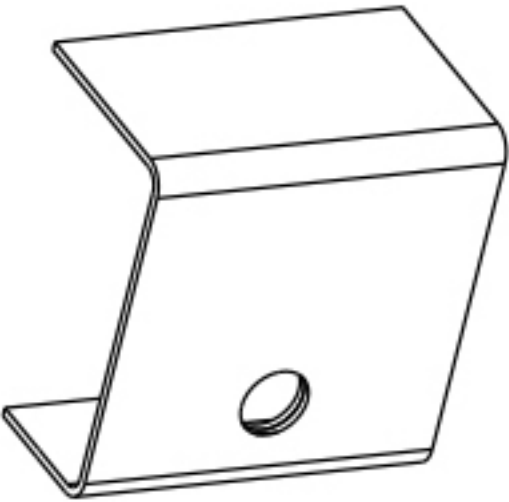
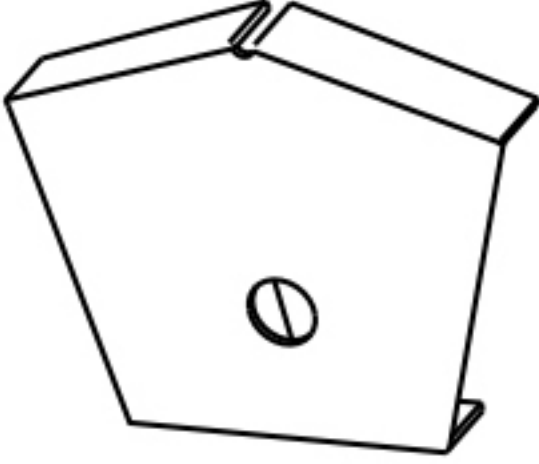
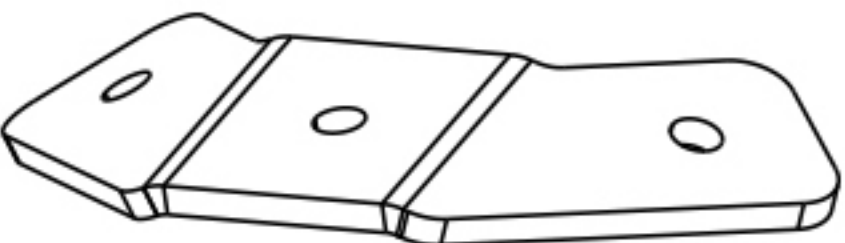
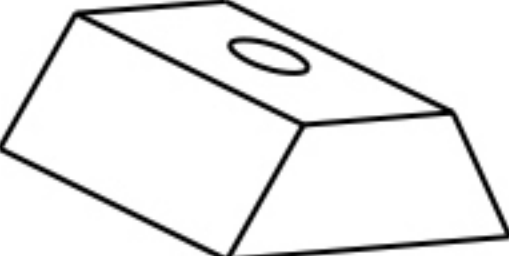
Item no.	Reference Image	Qty.
A		4
C		4
C1		4
J2		4
M1		4
M2		8
M3		4
M4		4
M5		64

ACCESSORY CATALOGUE

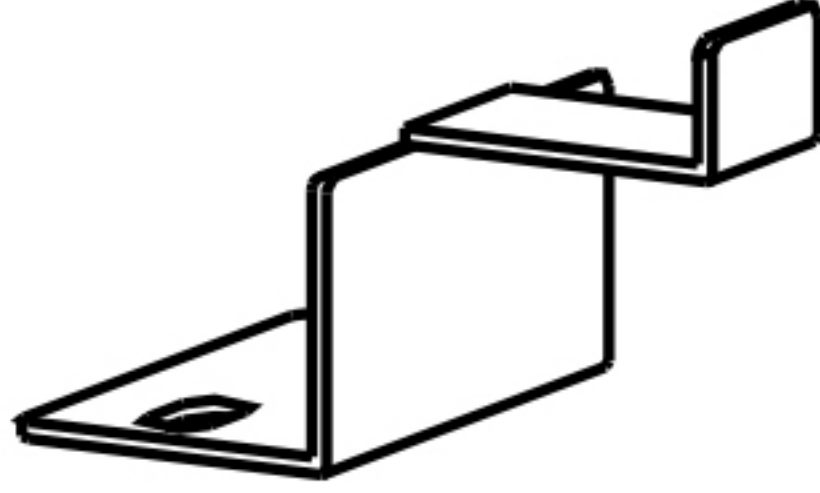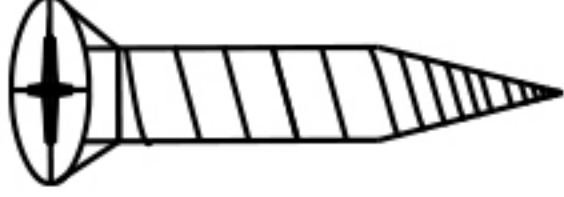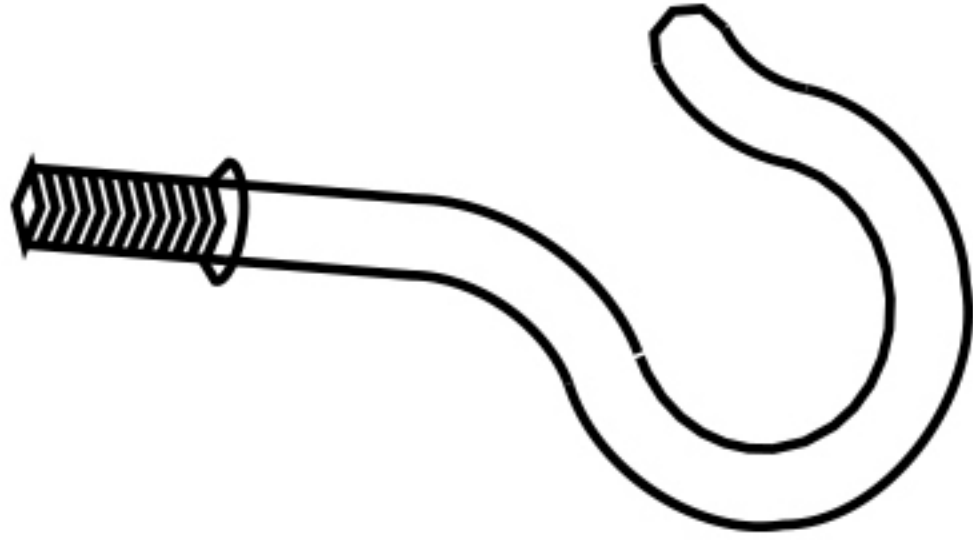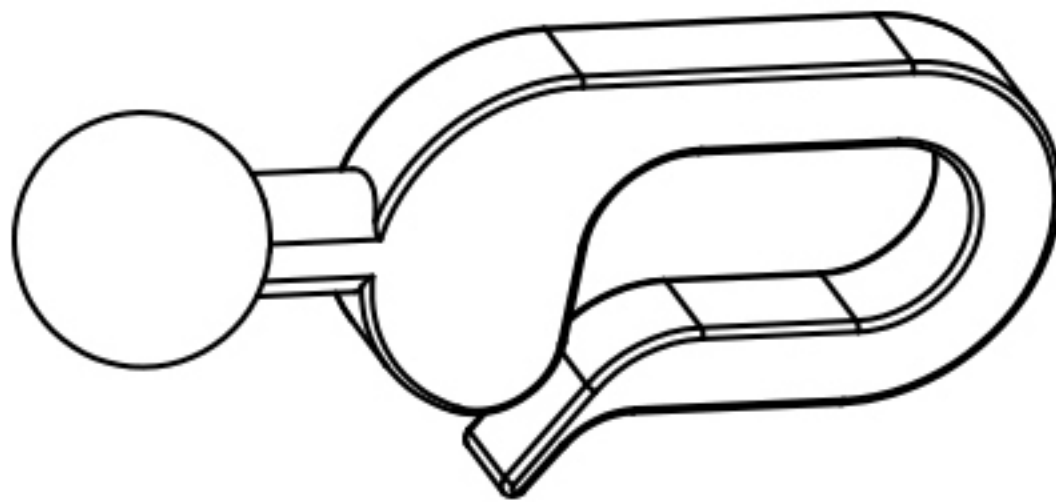
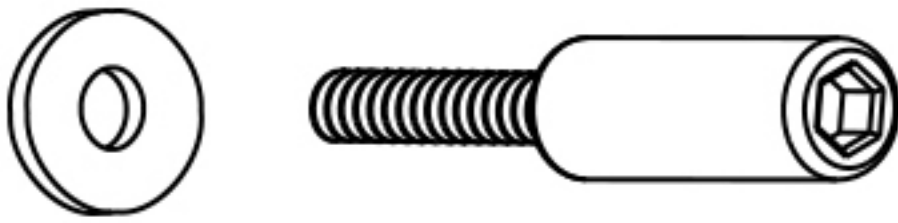
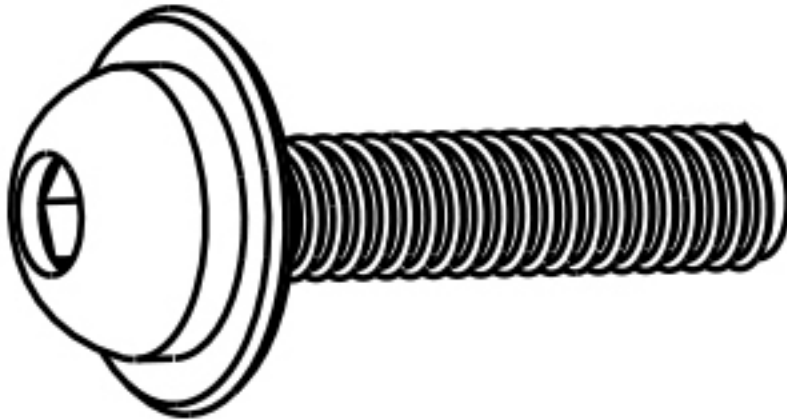
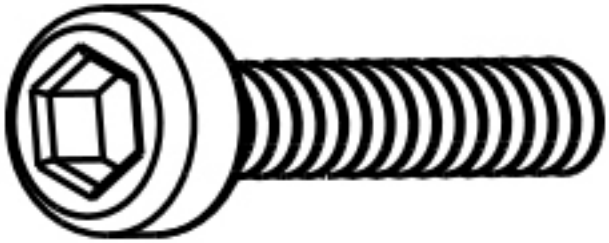
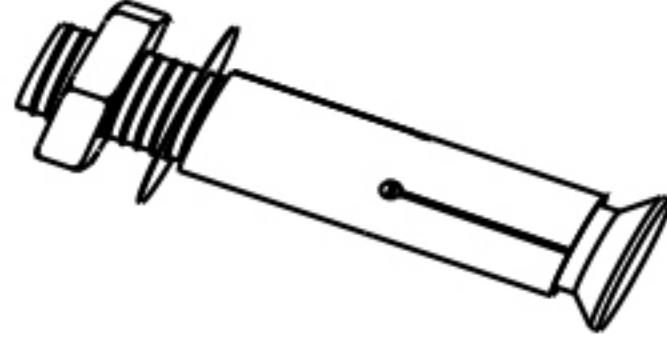
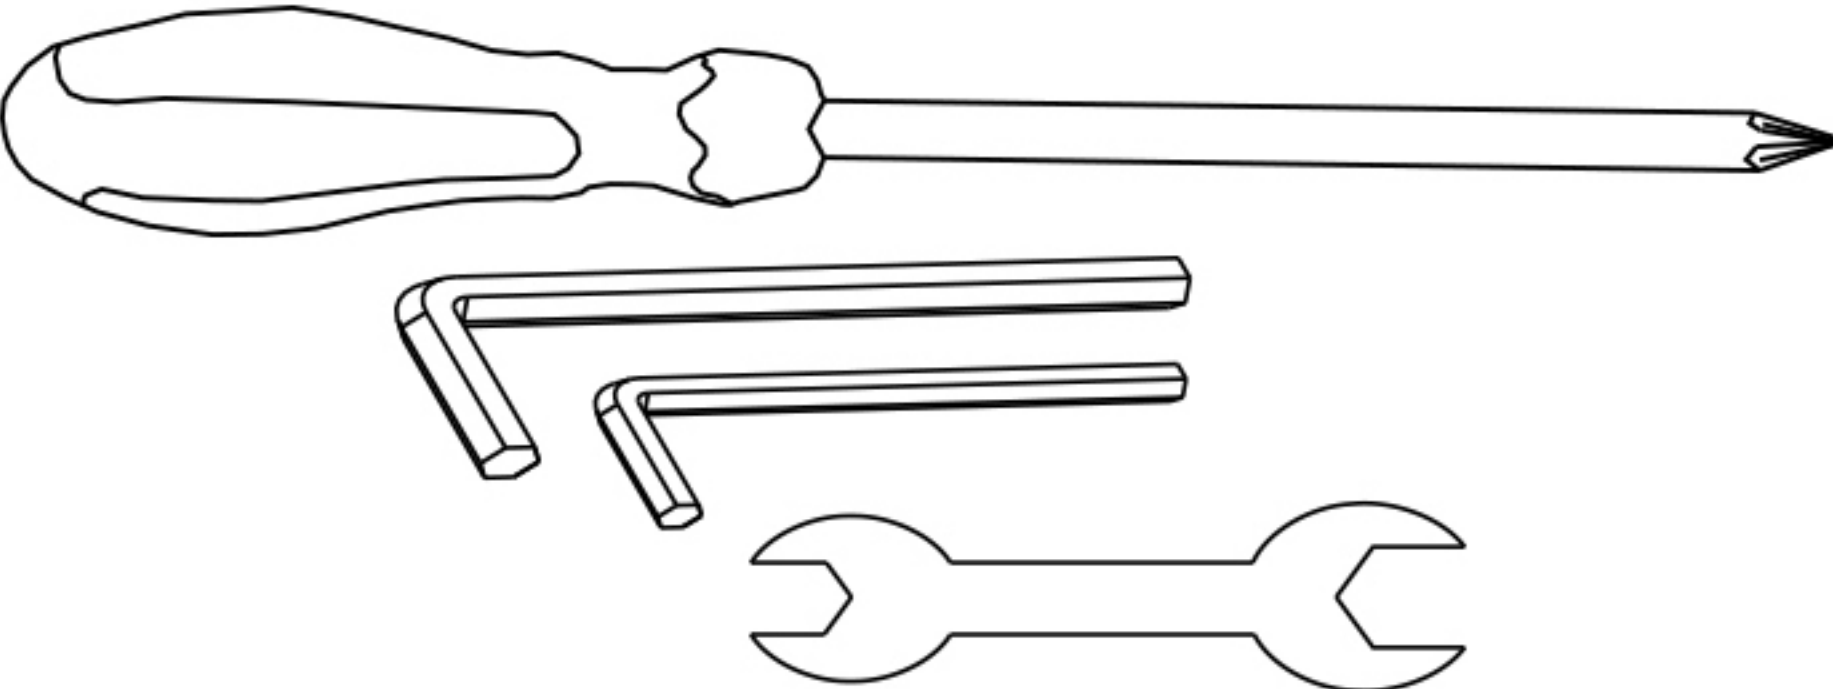
Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
M6		4	X4	 M5X10mm	56
M7		1	X5	 M6X38mm	4
Q		64	X6	 M6X42mm	12
X	 M6X10mm	32	X7	 M6X30mm	4
X1	 M6X15mm	108	1		8
X2	 M6X20mm	56	2		8
X3	 M6X20mm	4	3		1

ACCESSORY CATALOGUE








BOX 2 SKU:A-TPSB23-G029-2

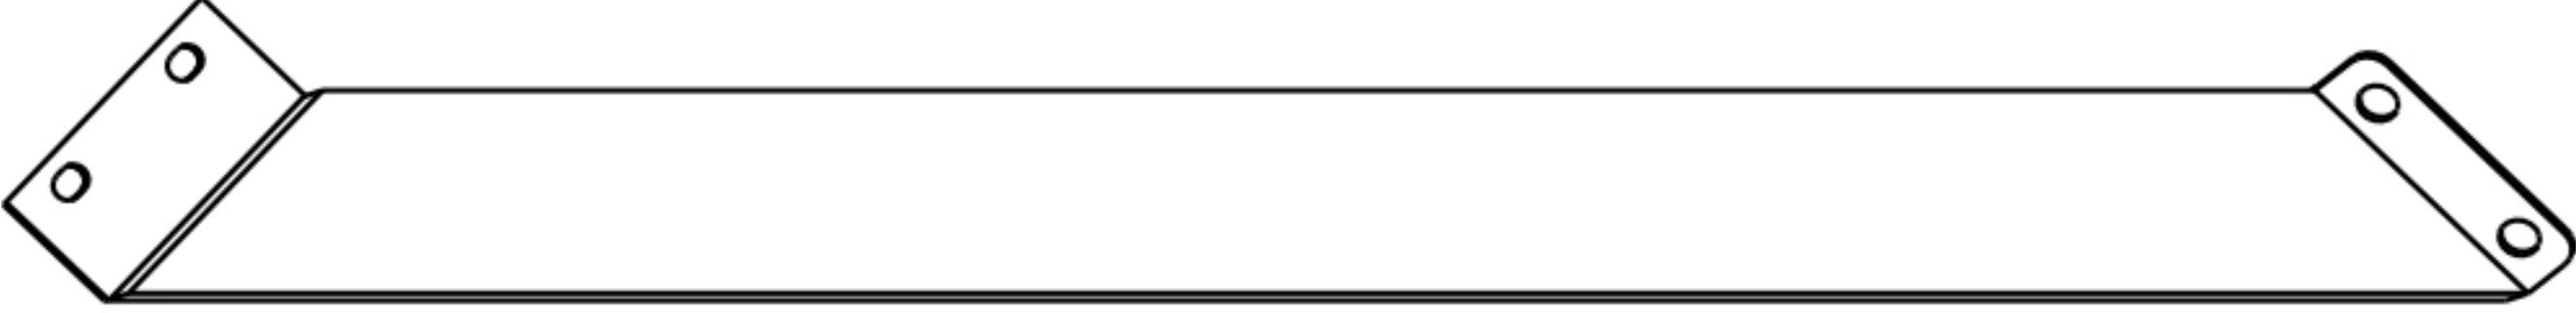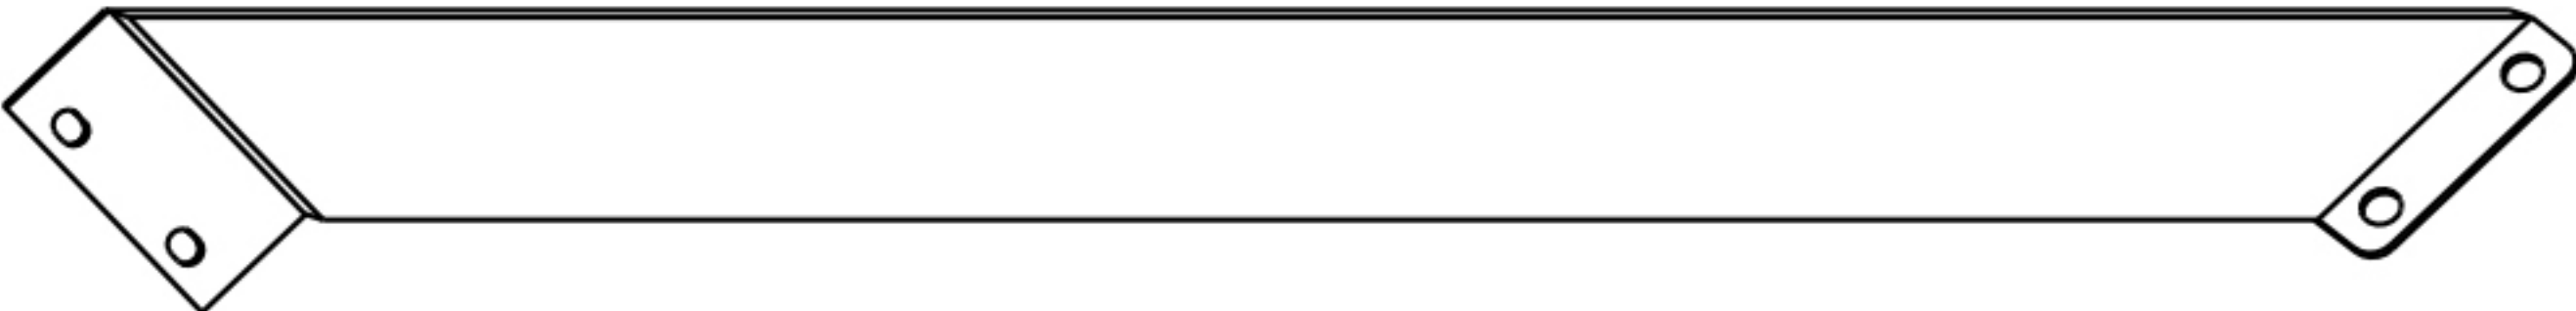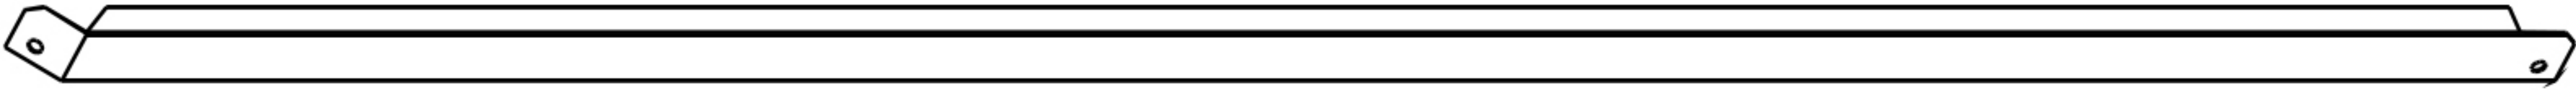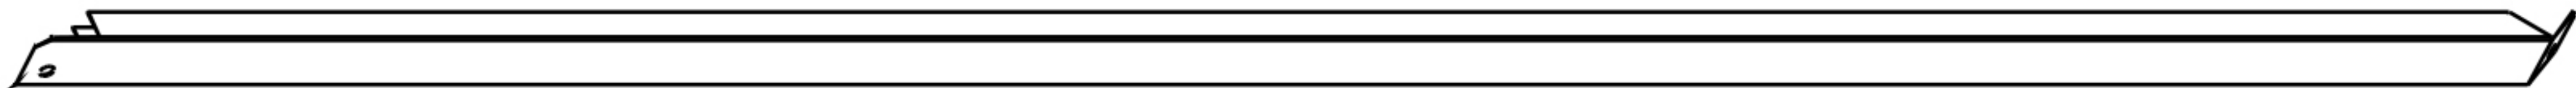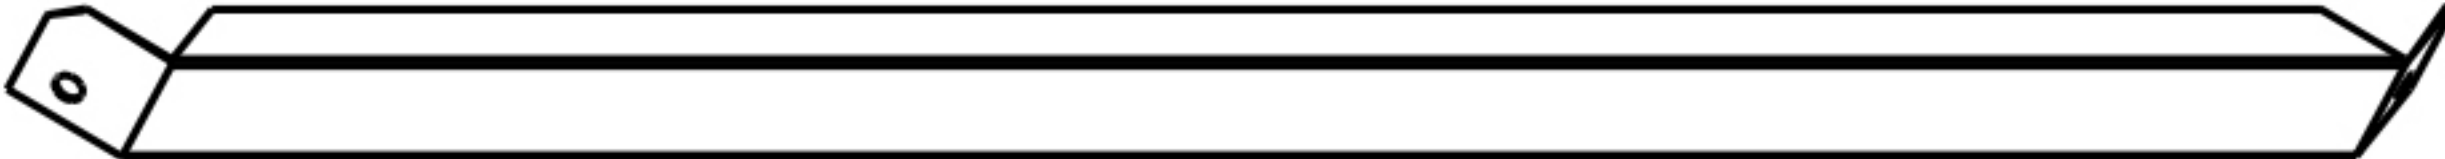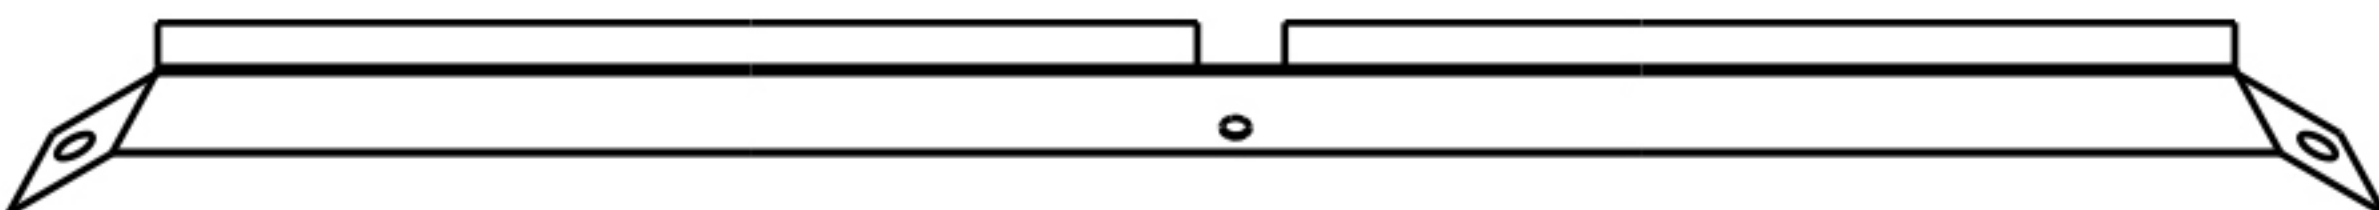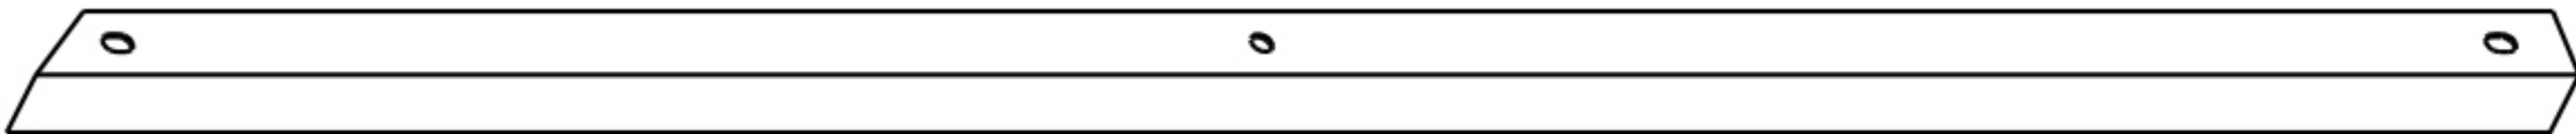Item no.	Reference Image	Qty.
D		4
E		4
F		4
F1		4
G1		4
G2		4
G6		4
G8		4
I		8

ACCESSORY CATALOGUE

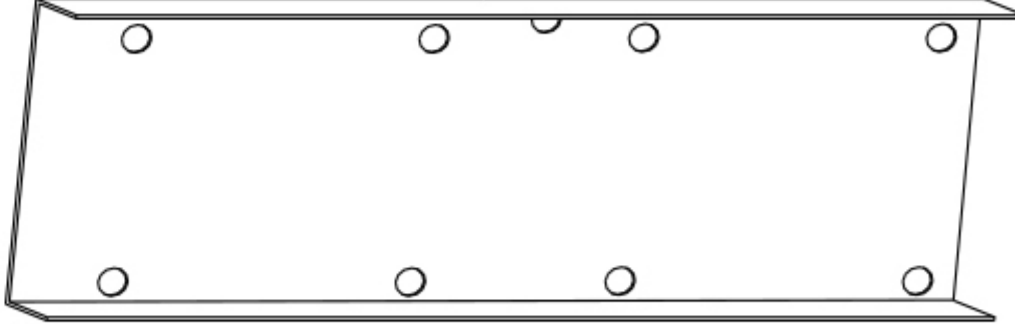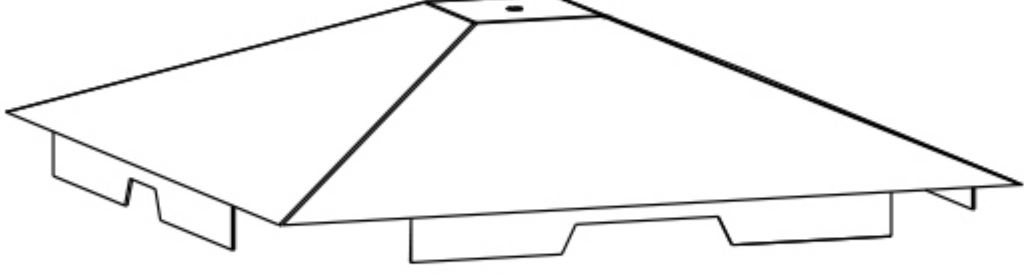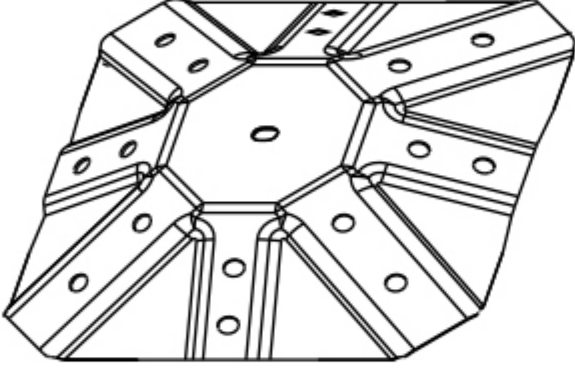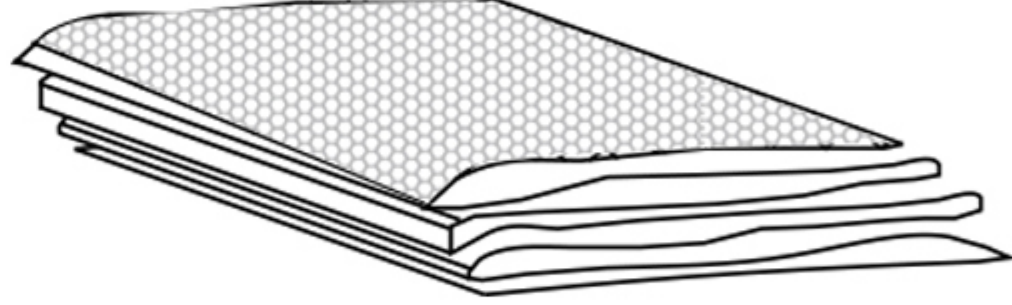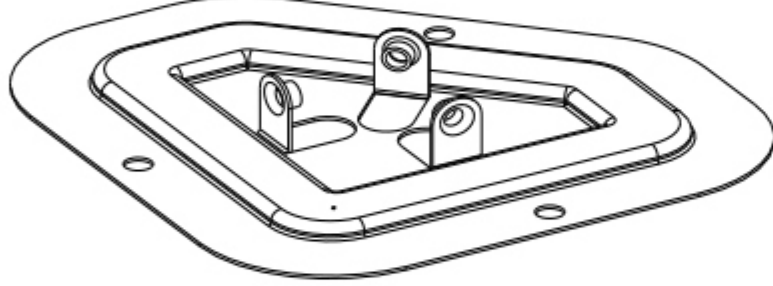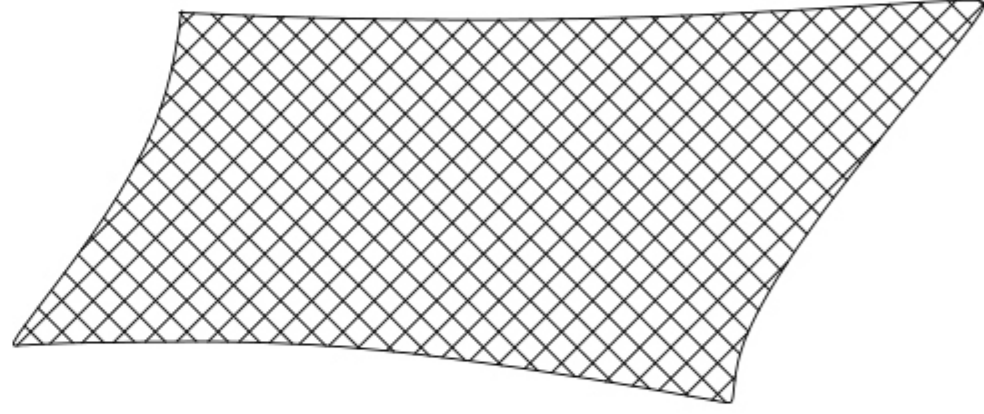Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
J1		4	P		4
K		1	Z		1
K1		1	Z1		1
L		4	Z2		1

BOX 3 SKU:A-TPSB23-G029-3

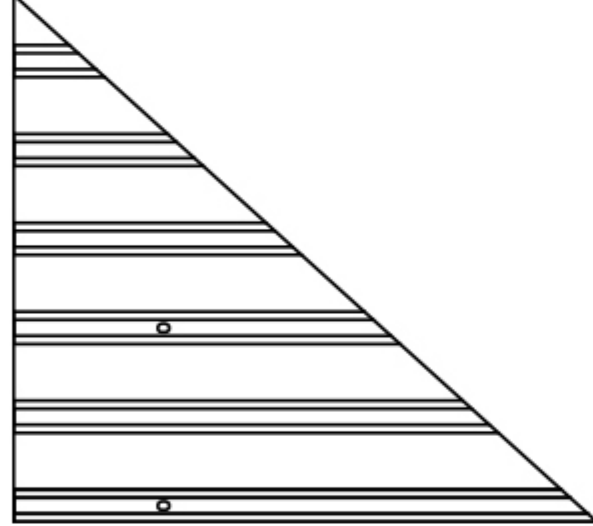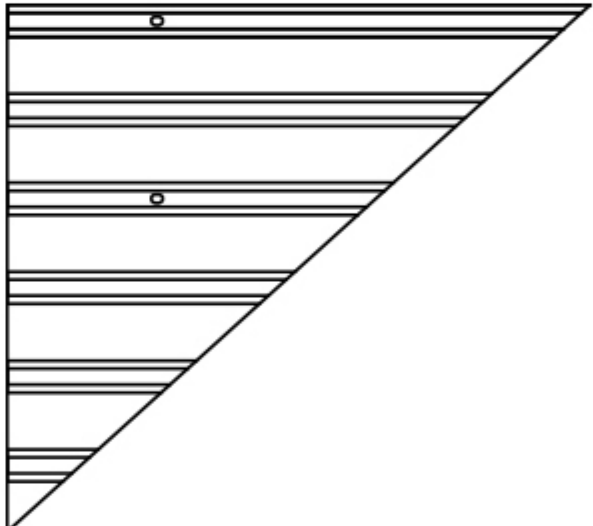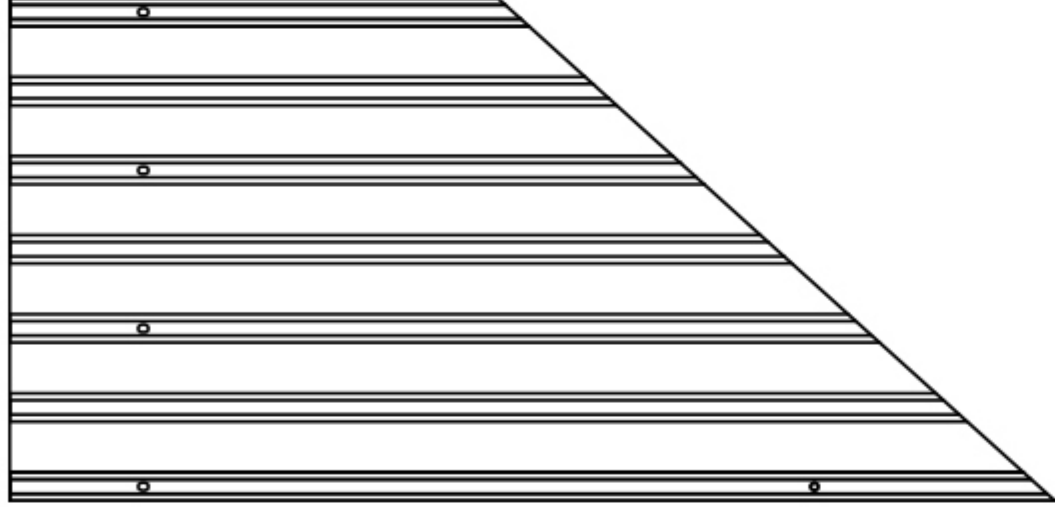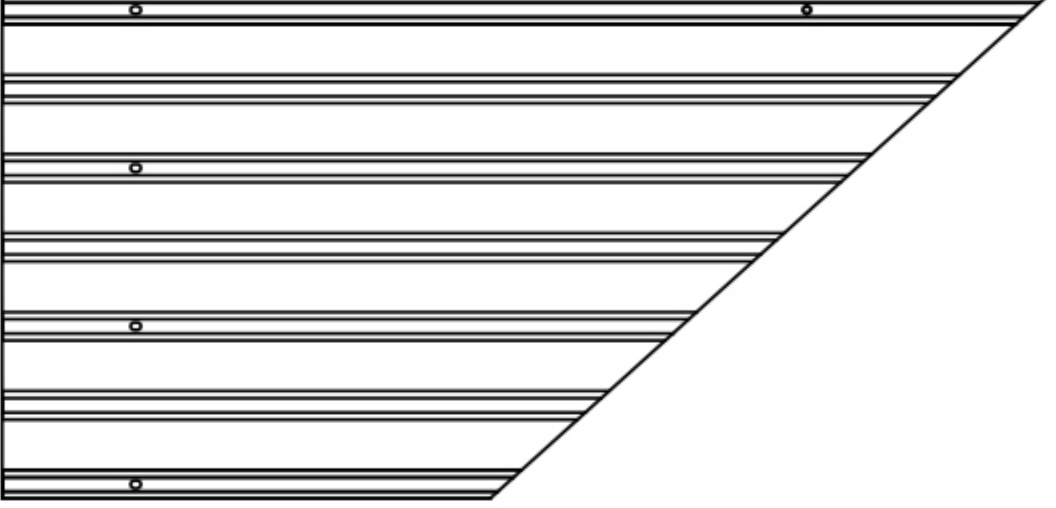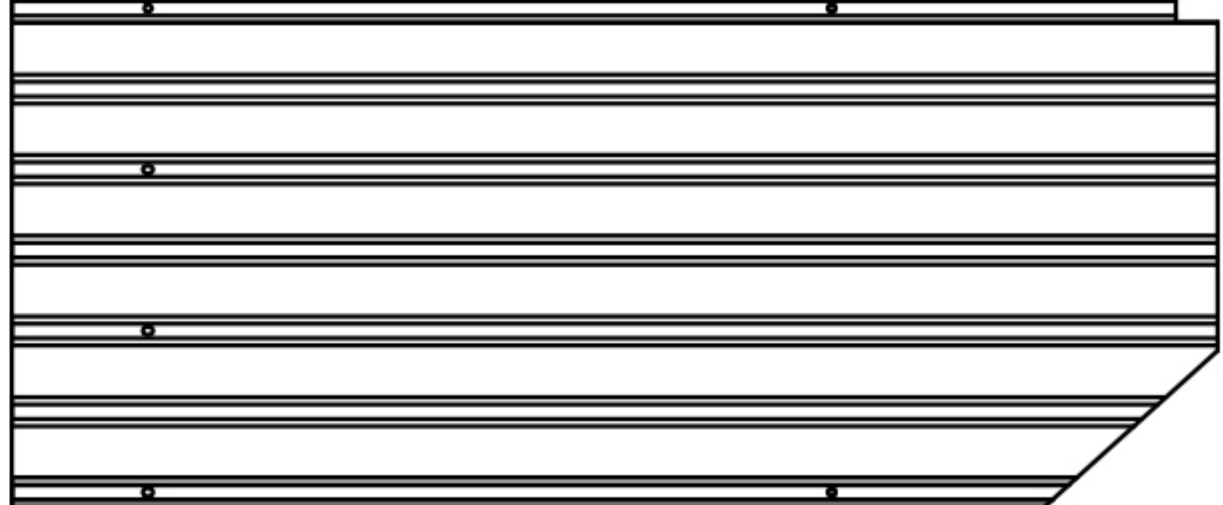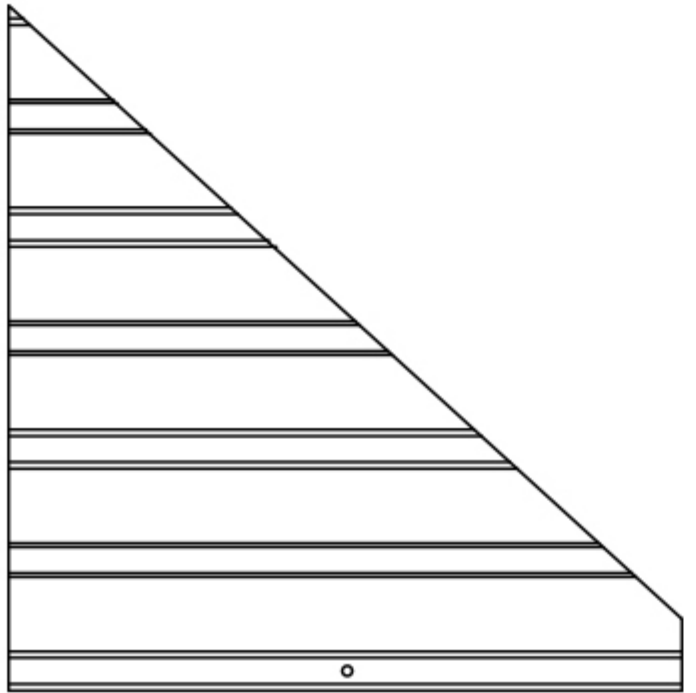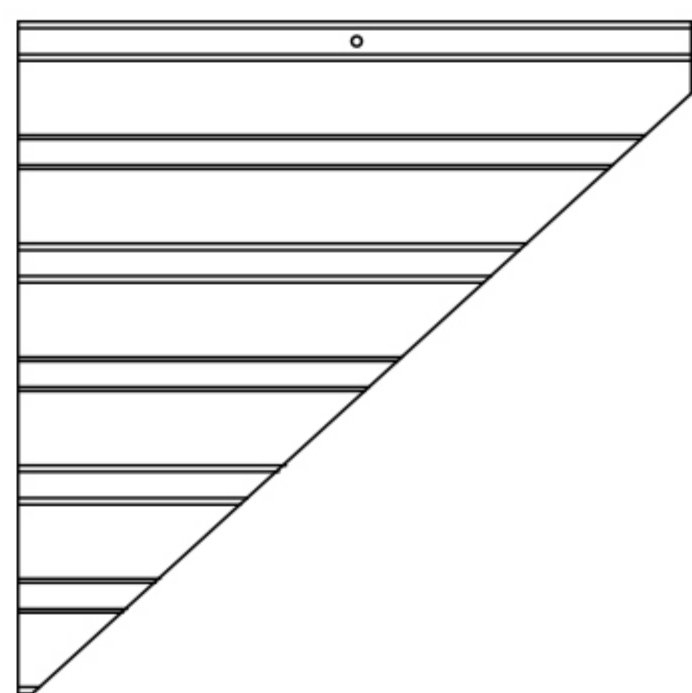
Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
O1		4	V1		4
O2		4	V2		4
O3		4	V3		4
O4		4	V4		4

STEP 1


Parts required



A 4pcs

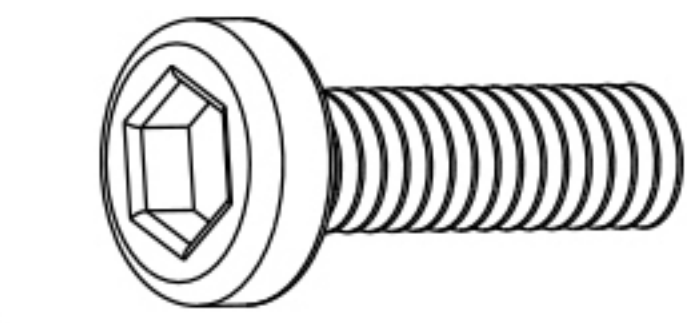




X1 12pcs

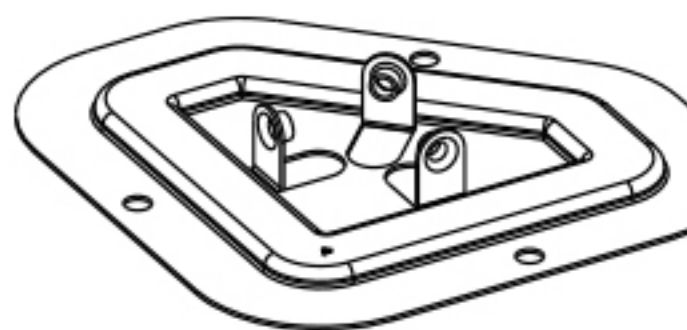

L 4pcs

1 → 2


A

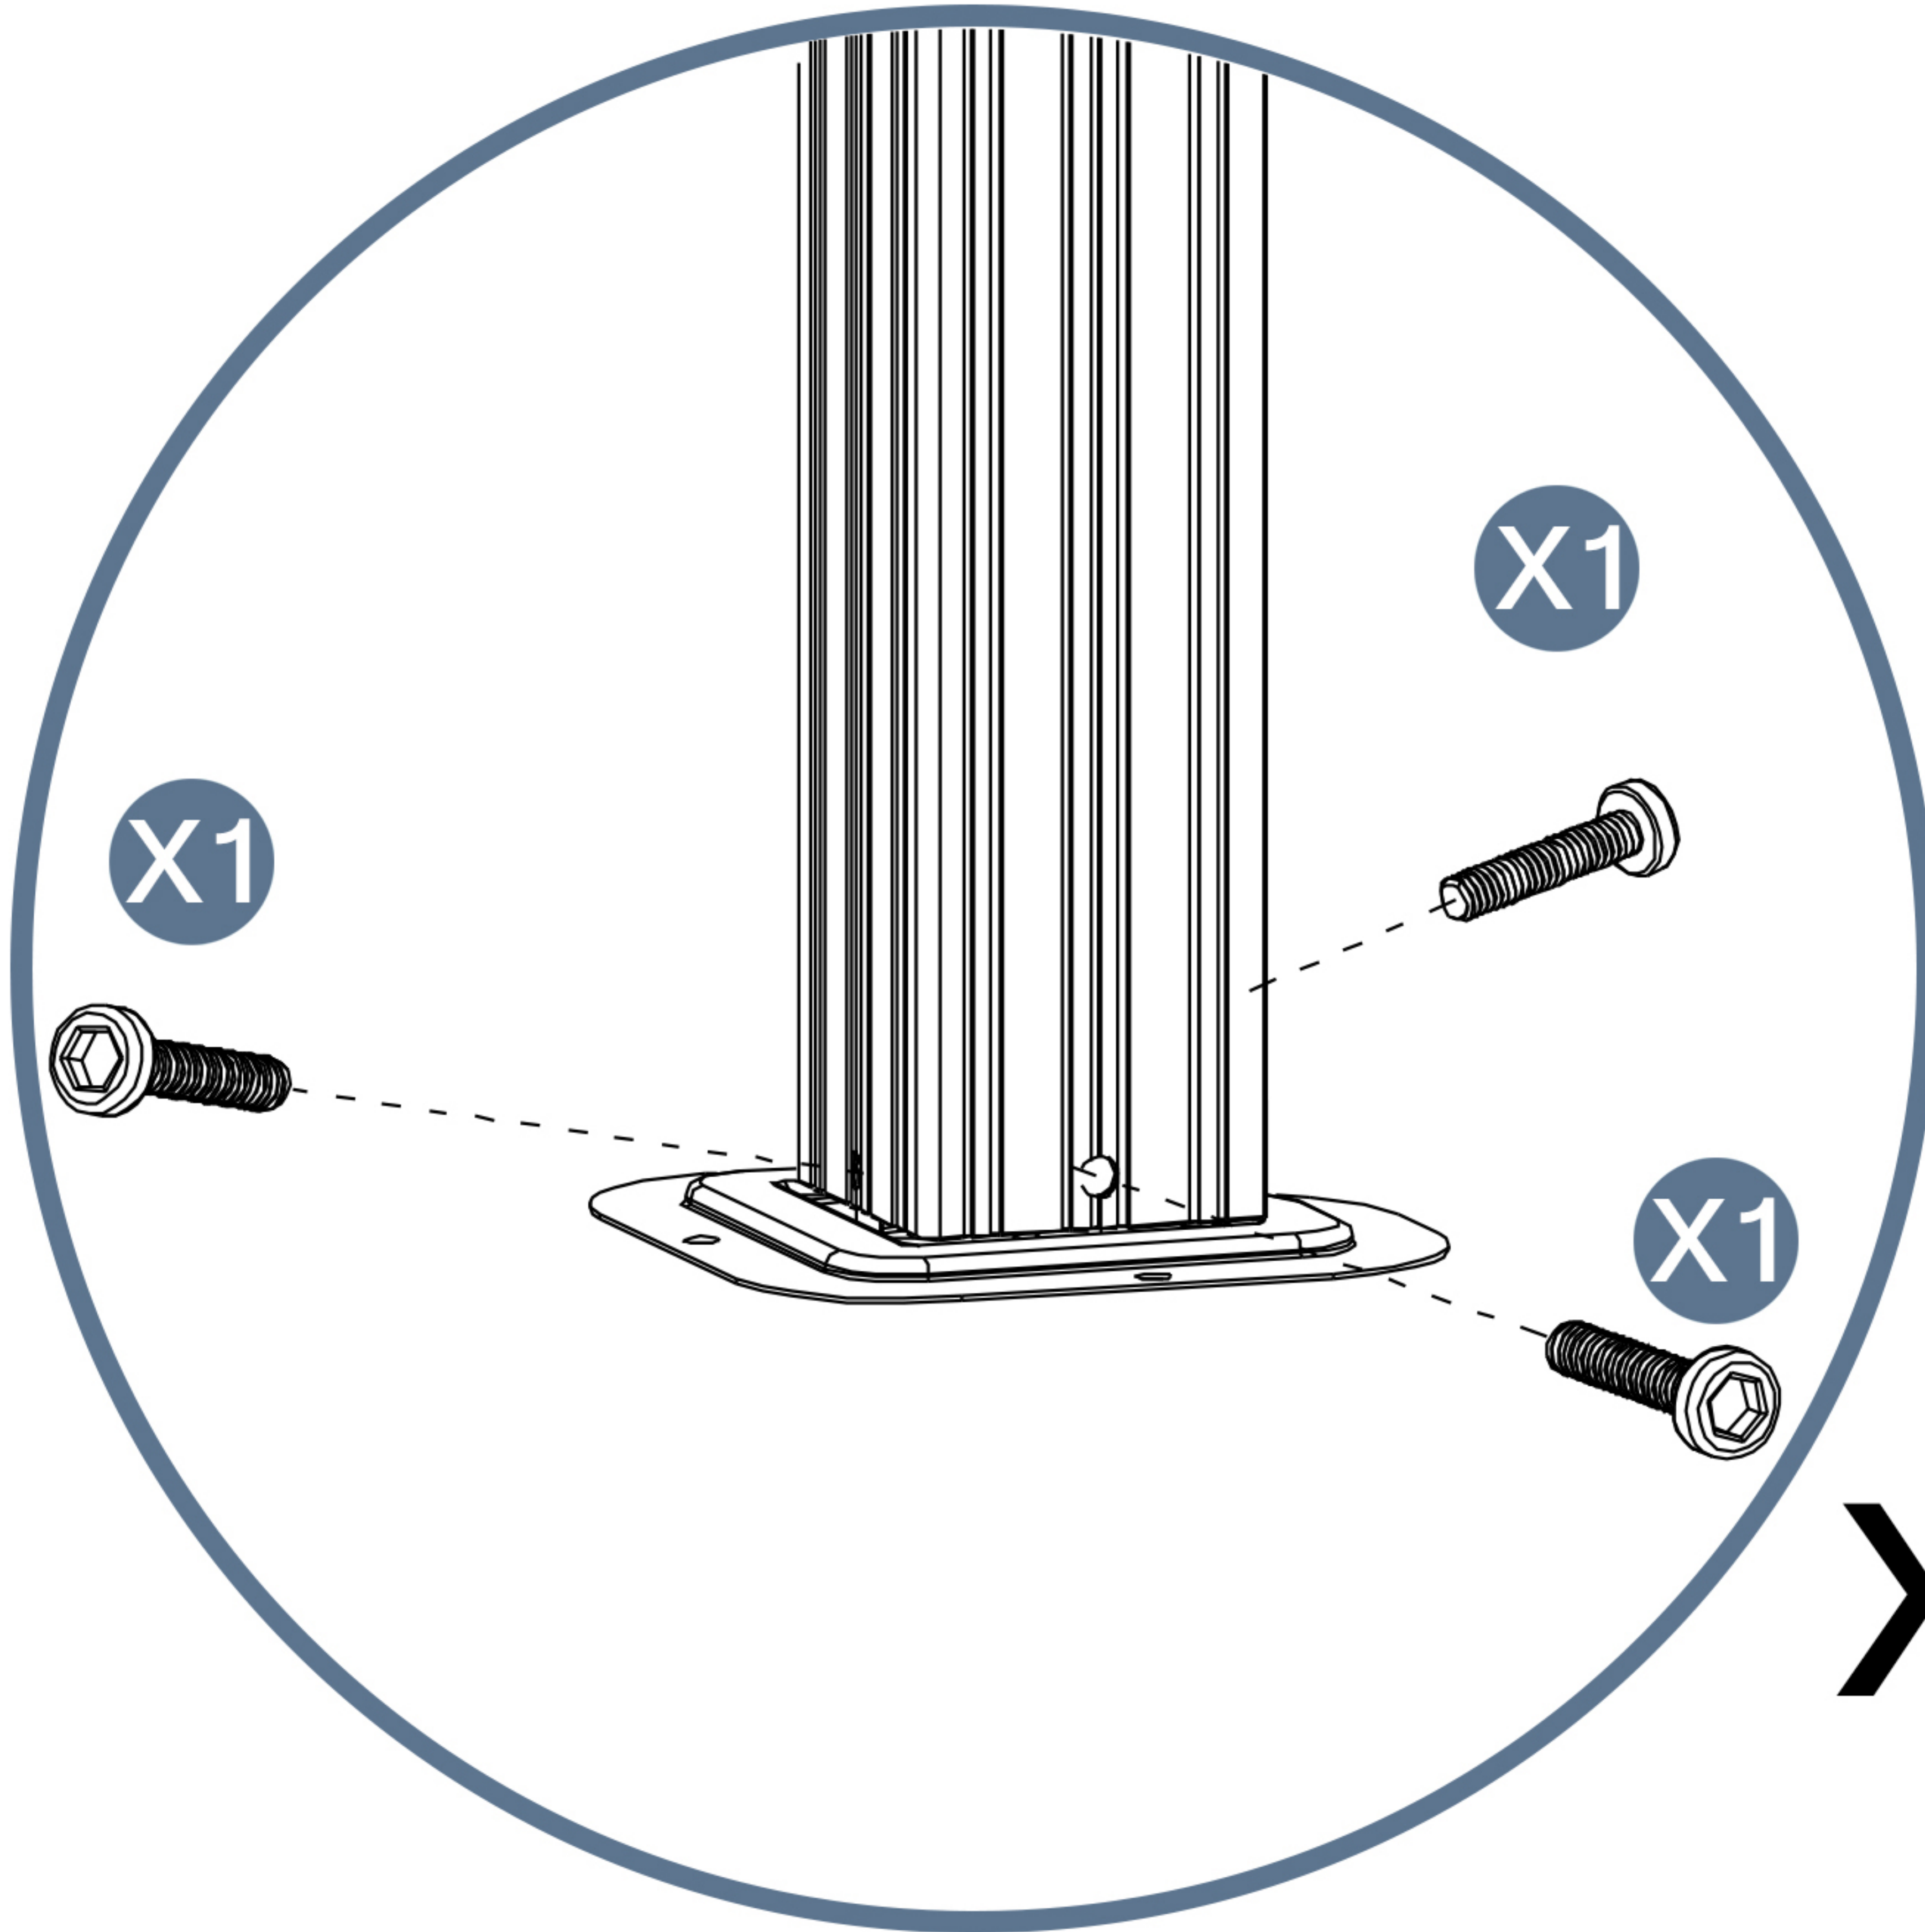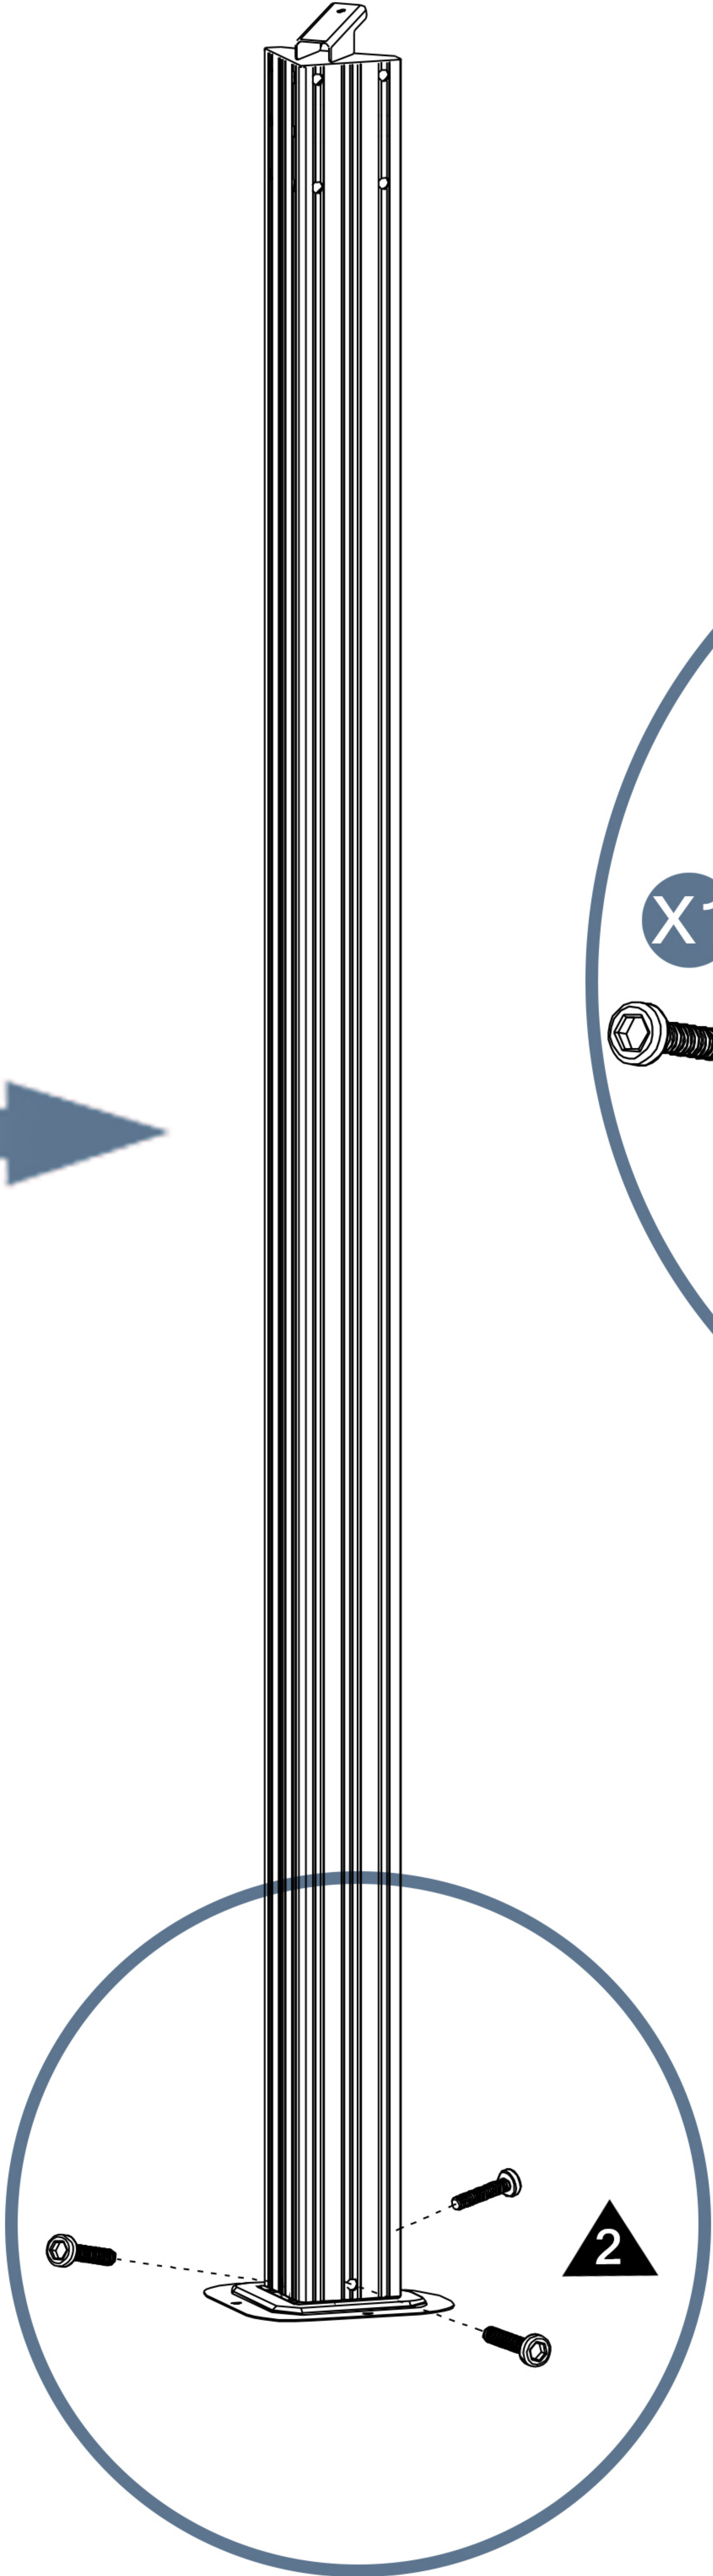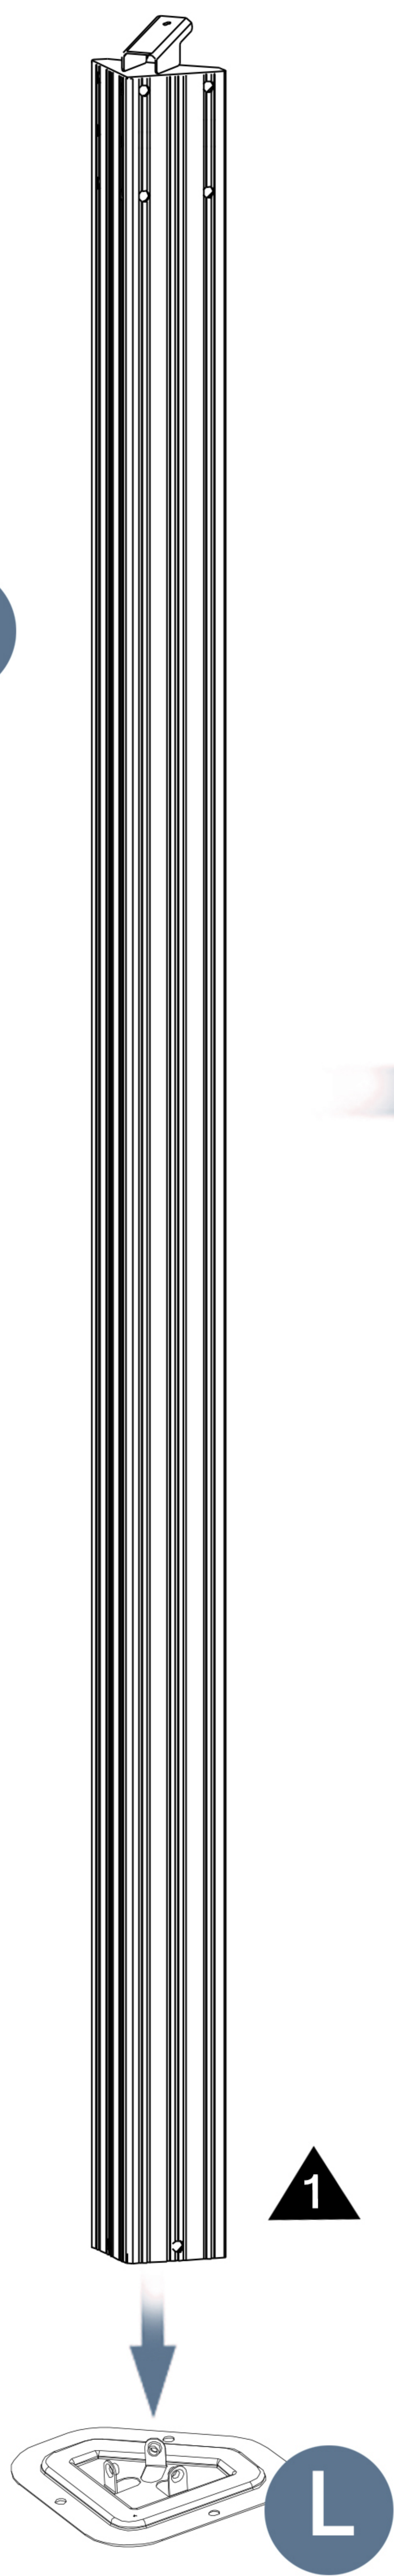


X4

STEP2


Parts required

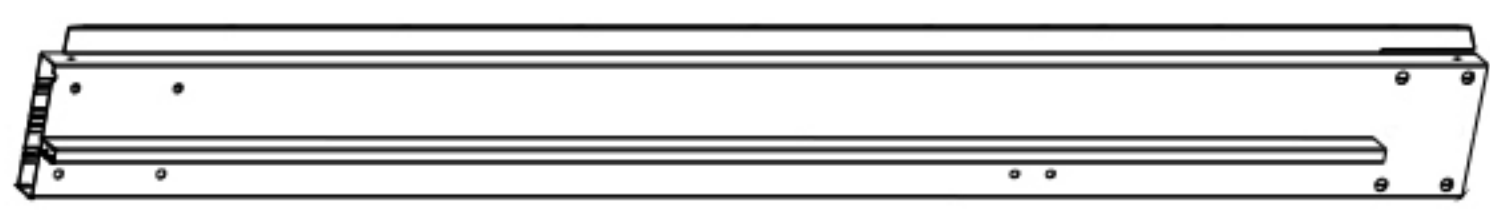

C 4pcs

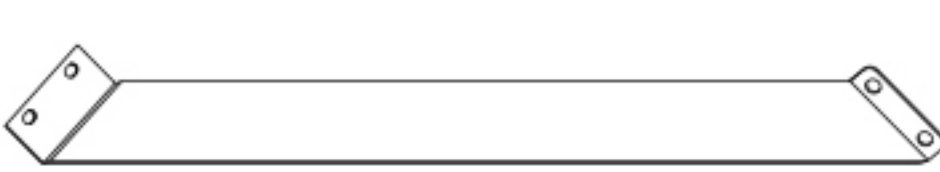


F 4pcs

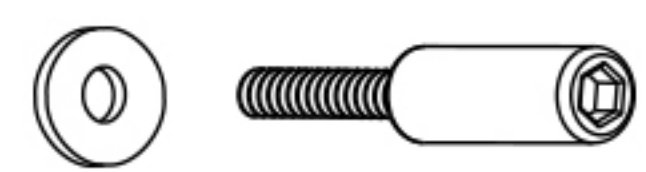


X 32pcs



C1 4pcs

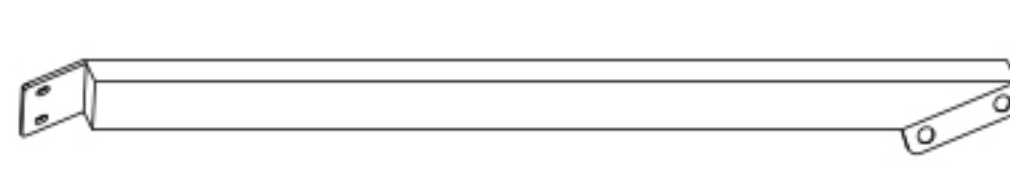

F1 4pcs




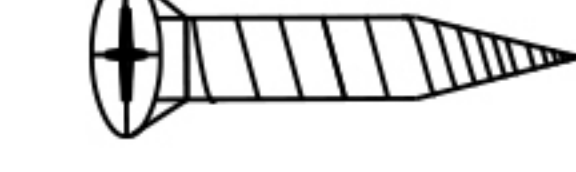


X4 32pcs

1 → 2


NOTE:

You can put it down to assemble as shown in the picture.

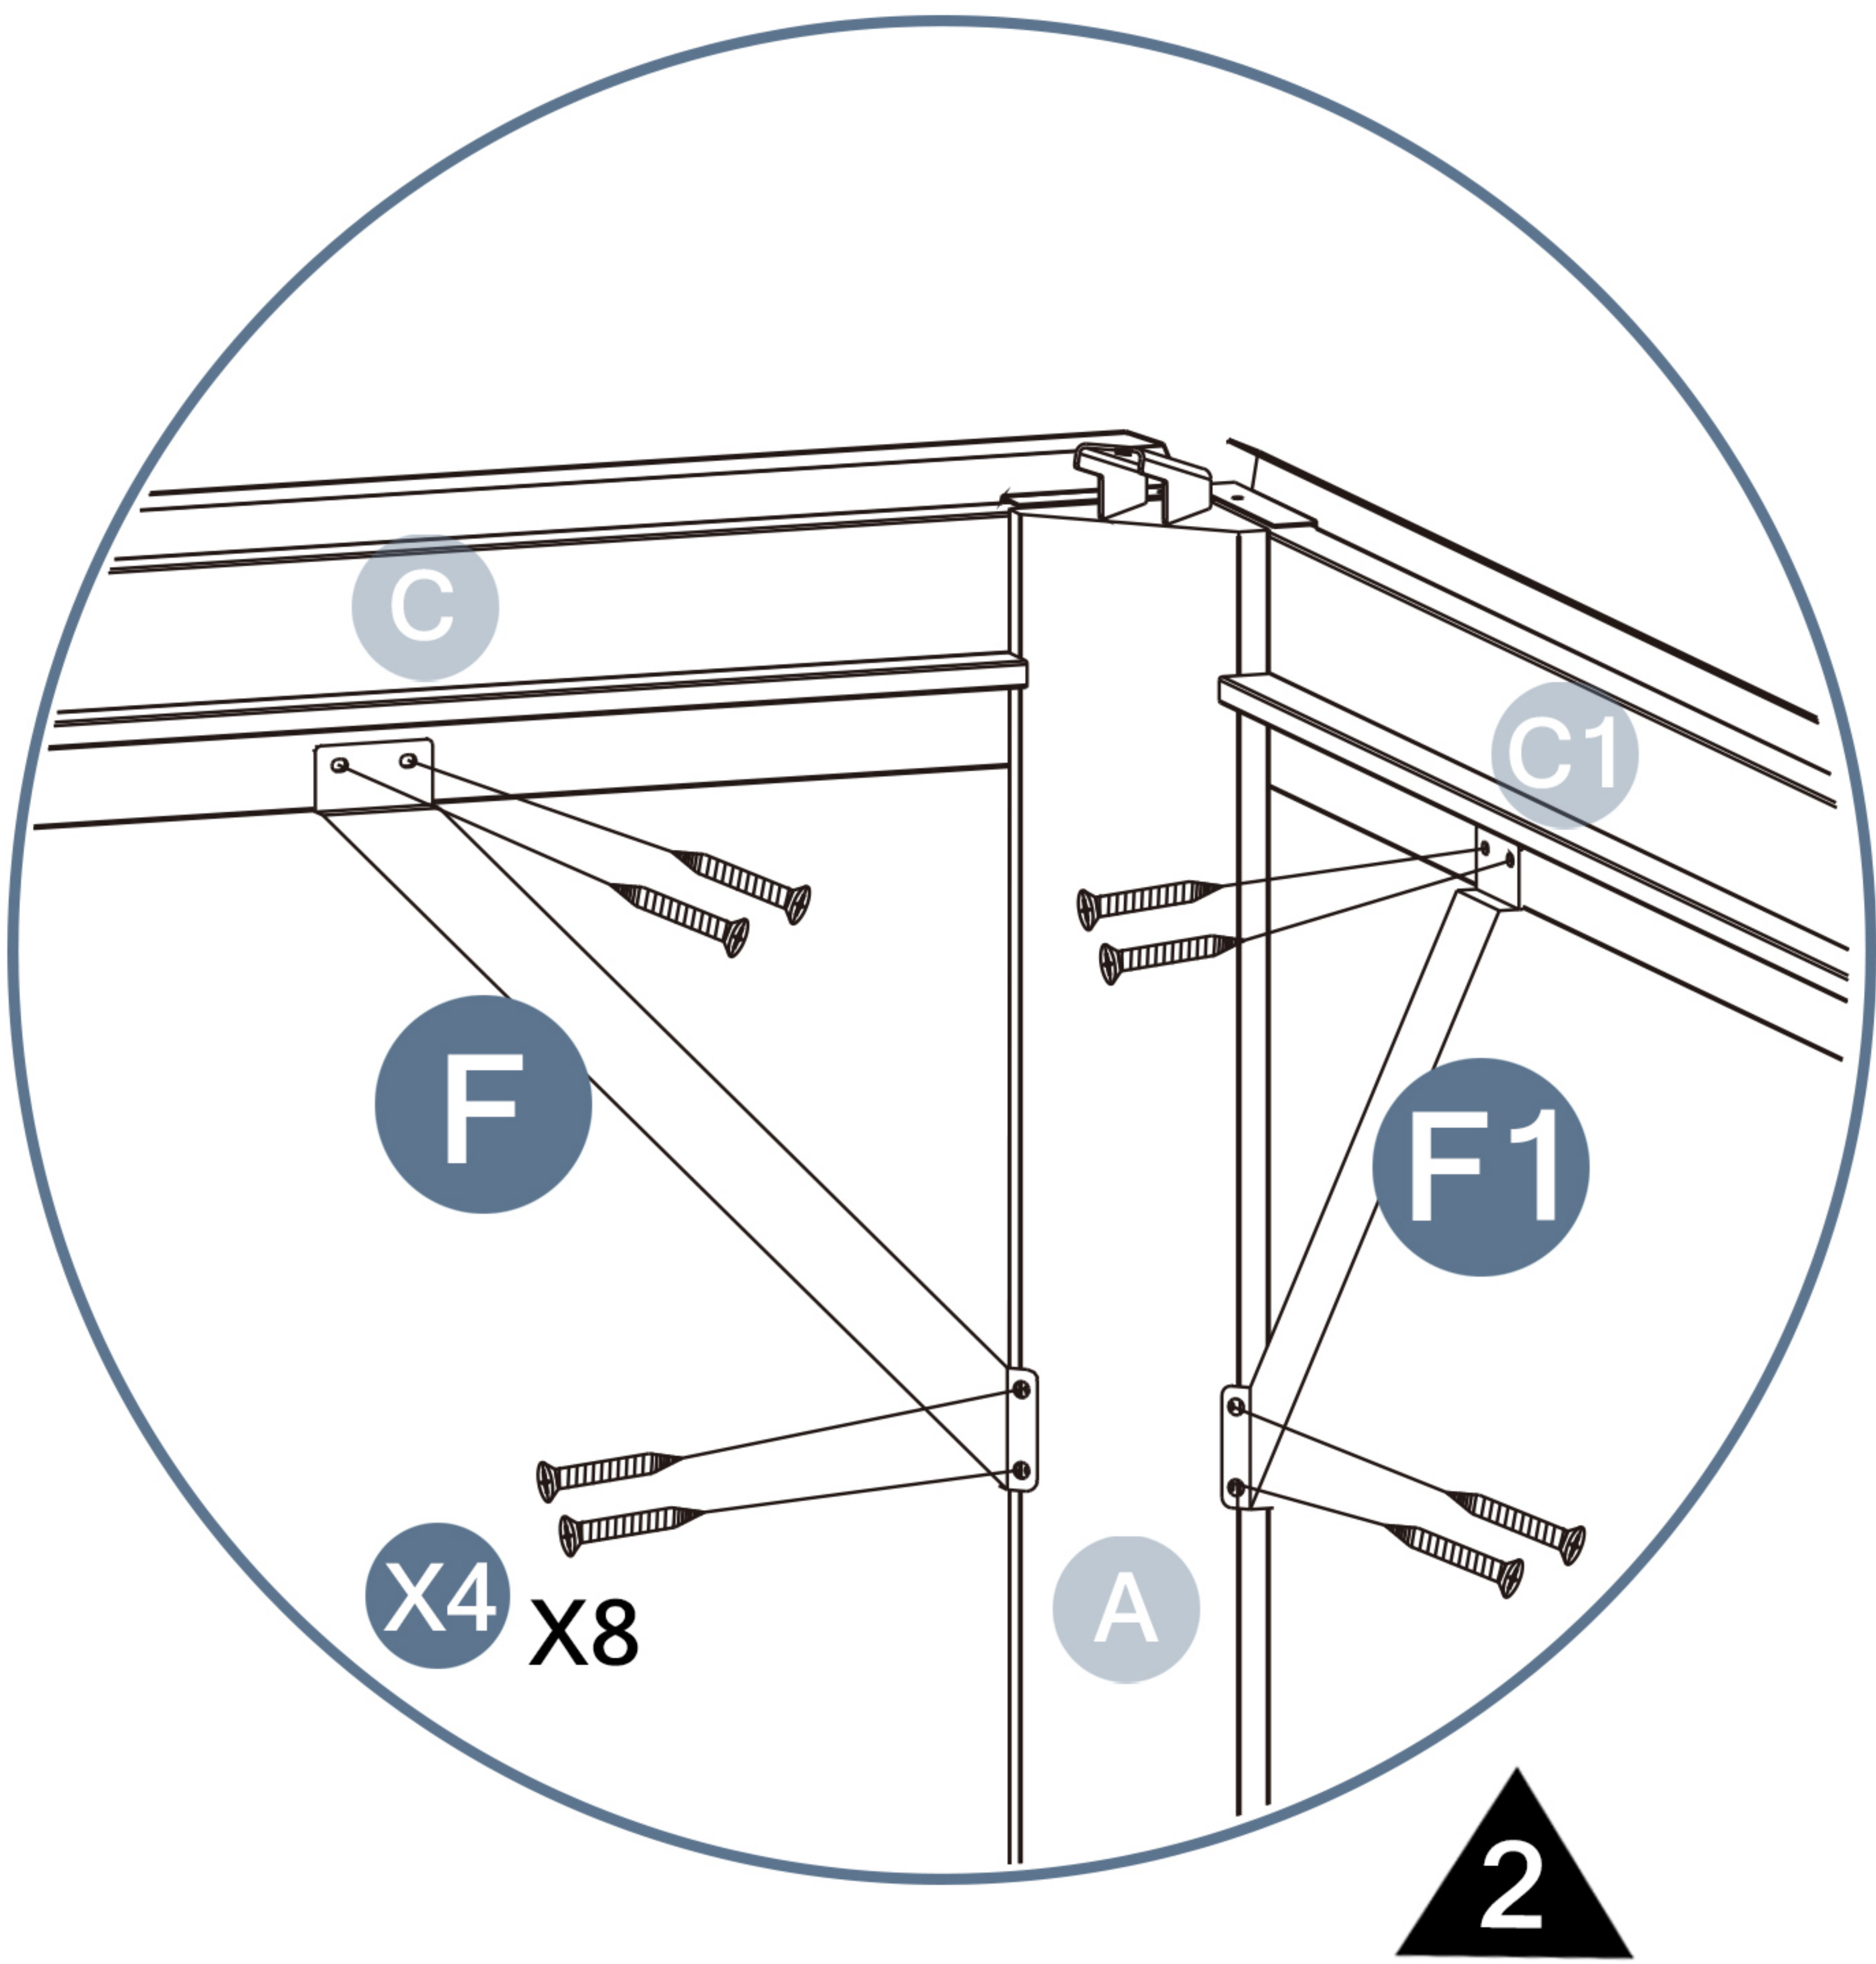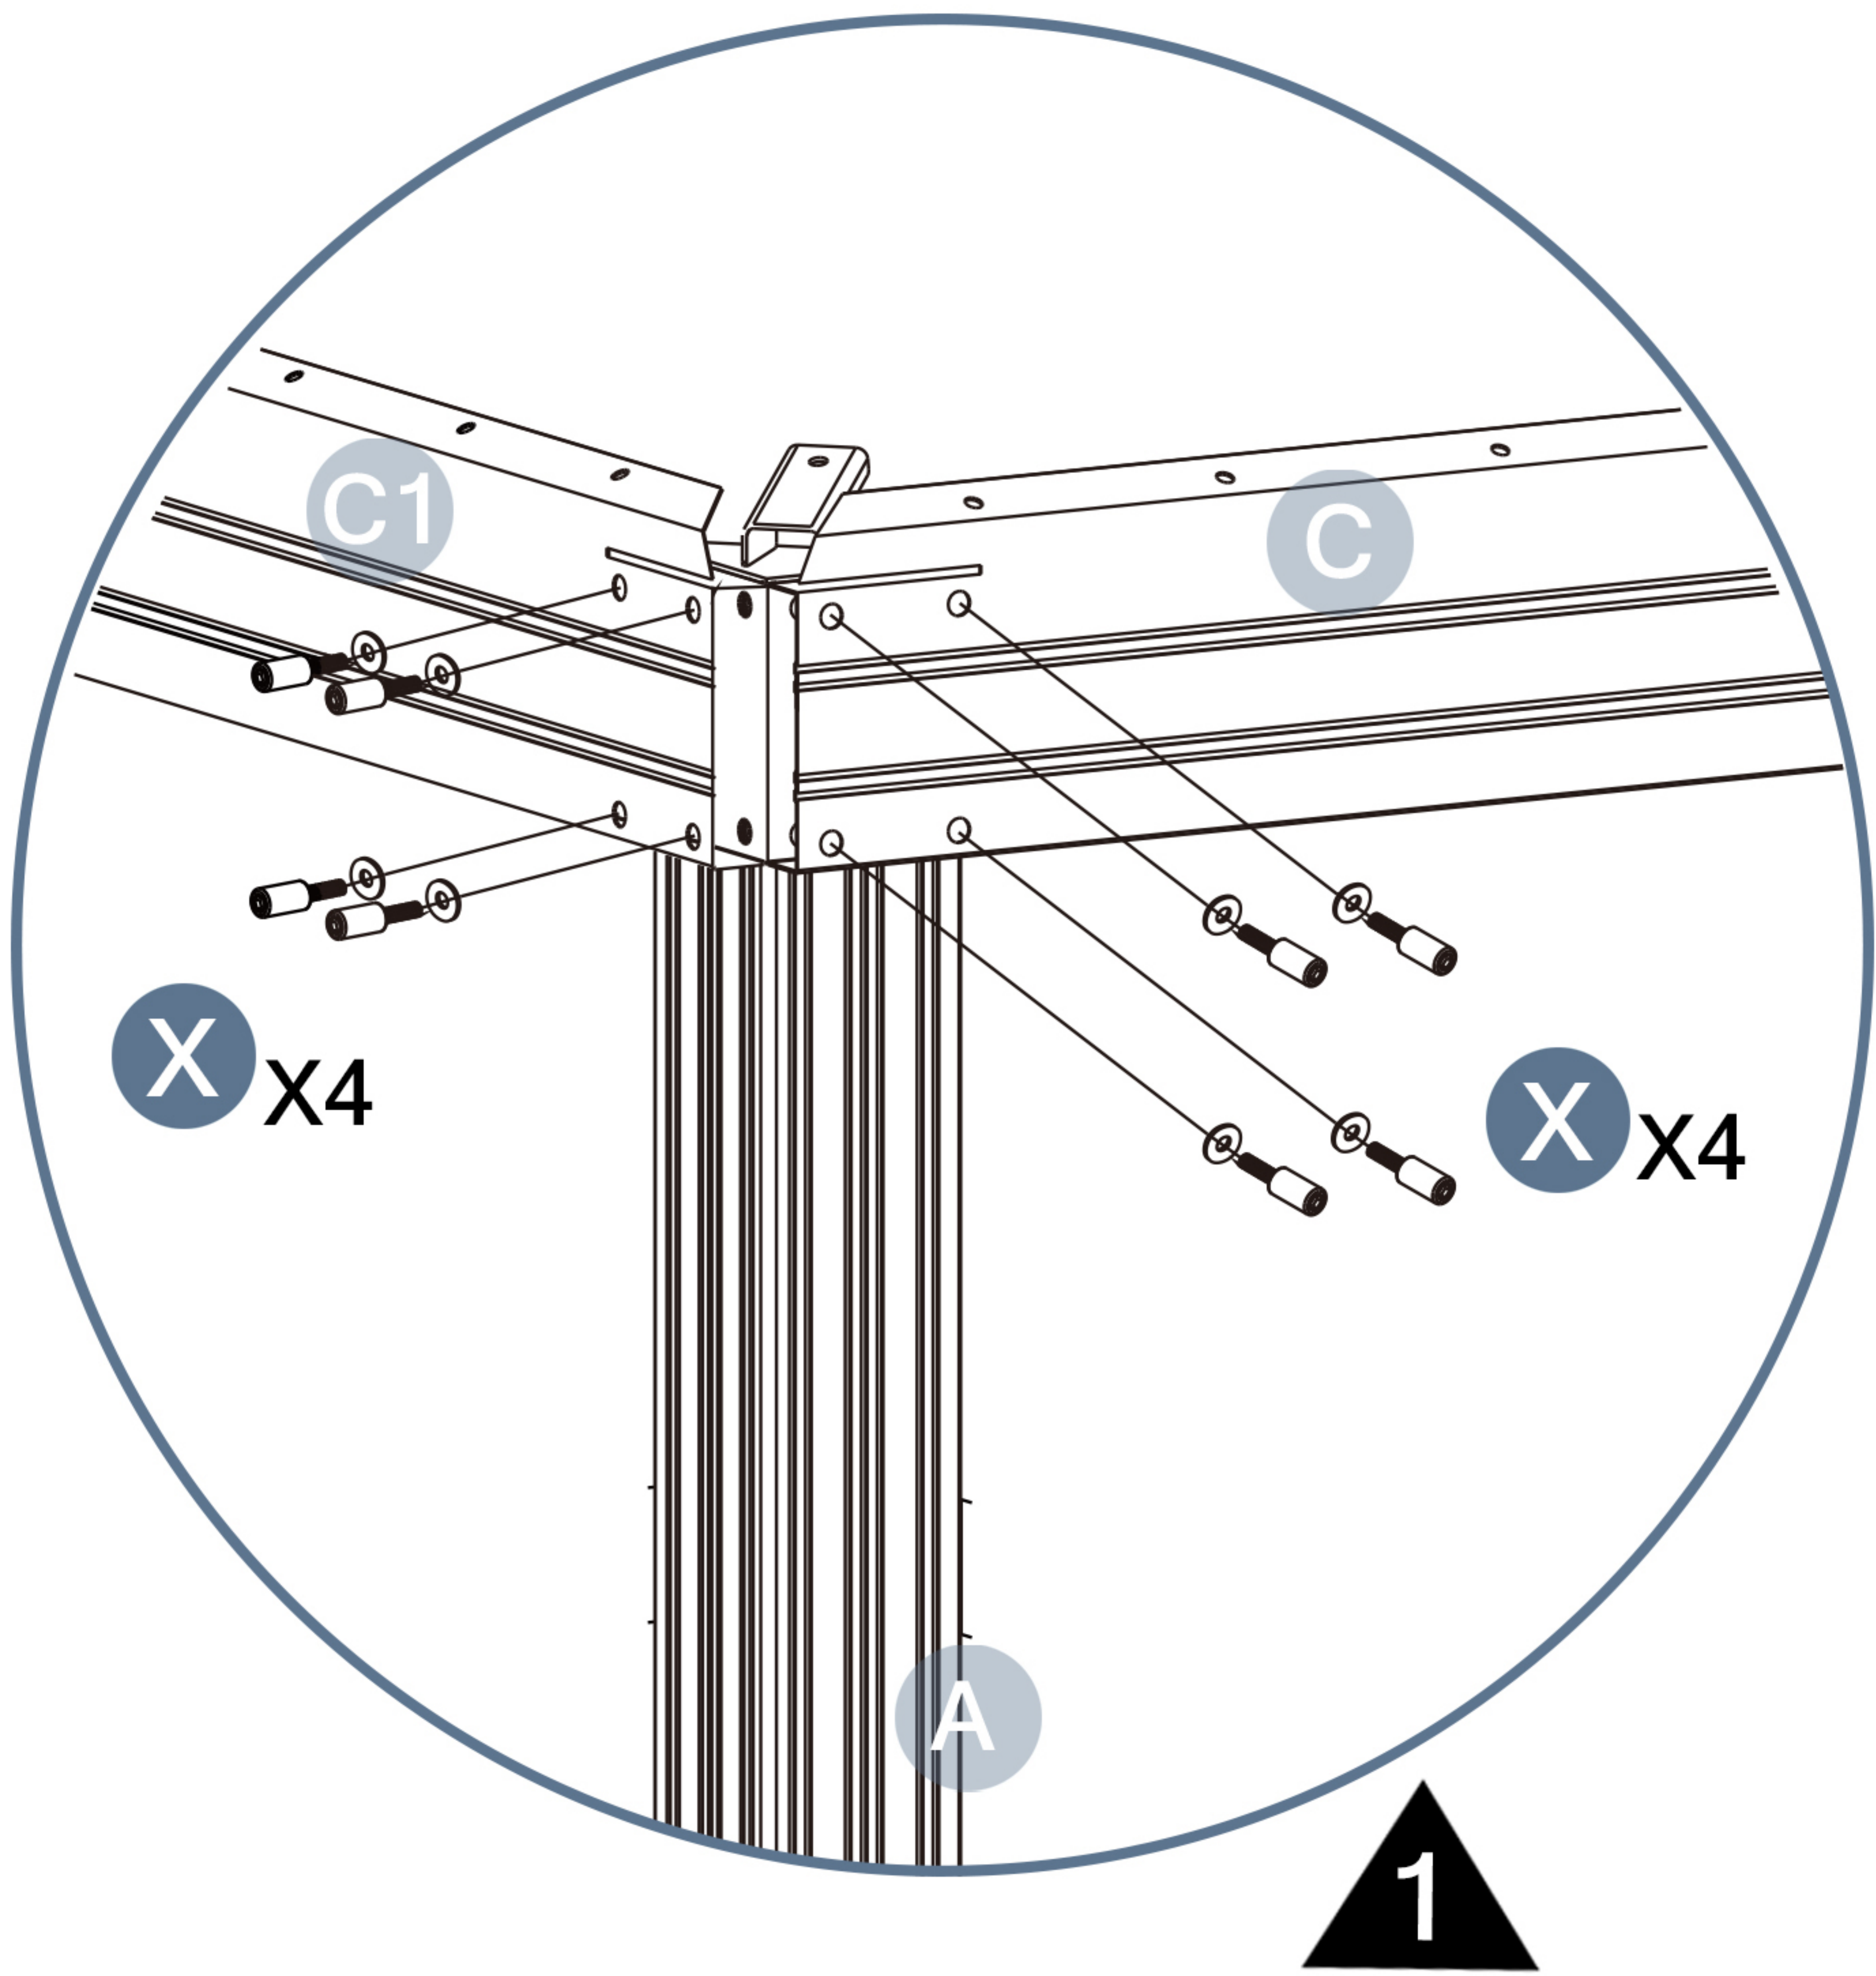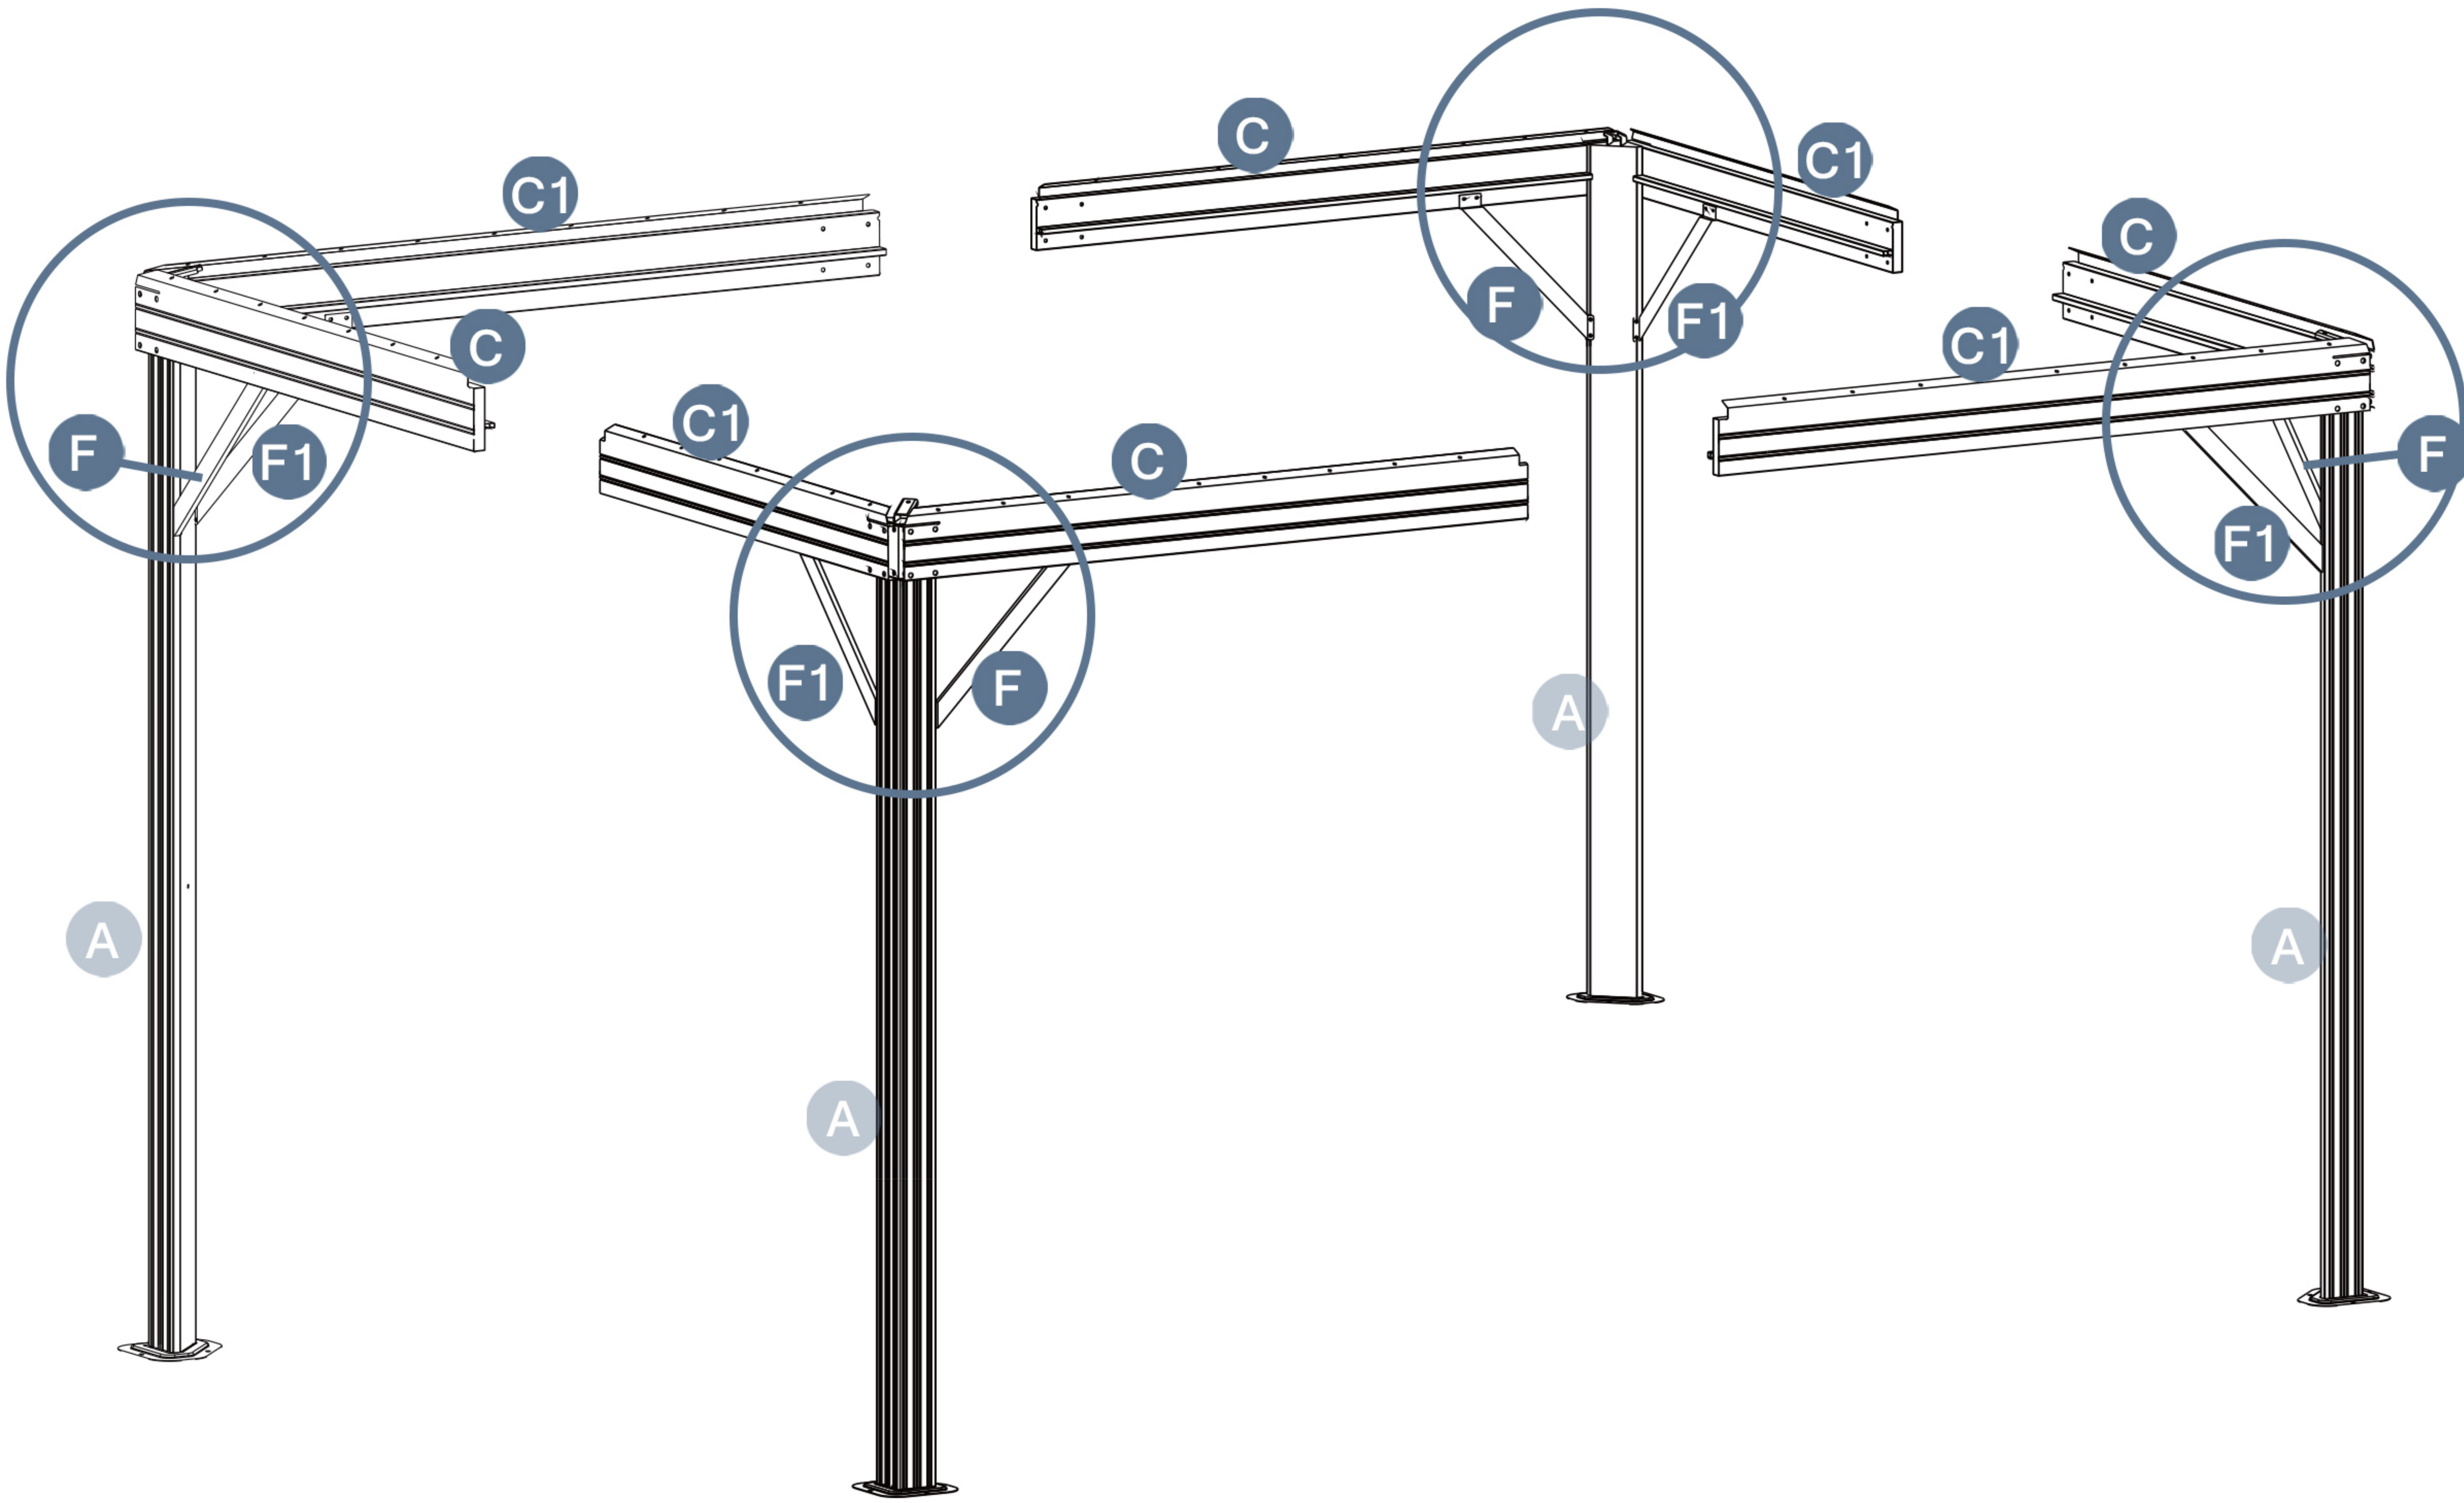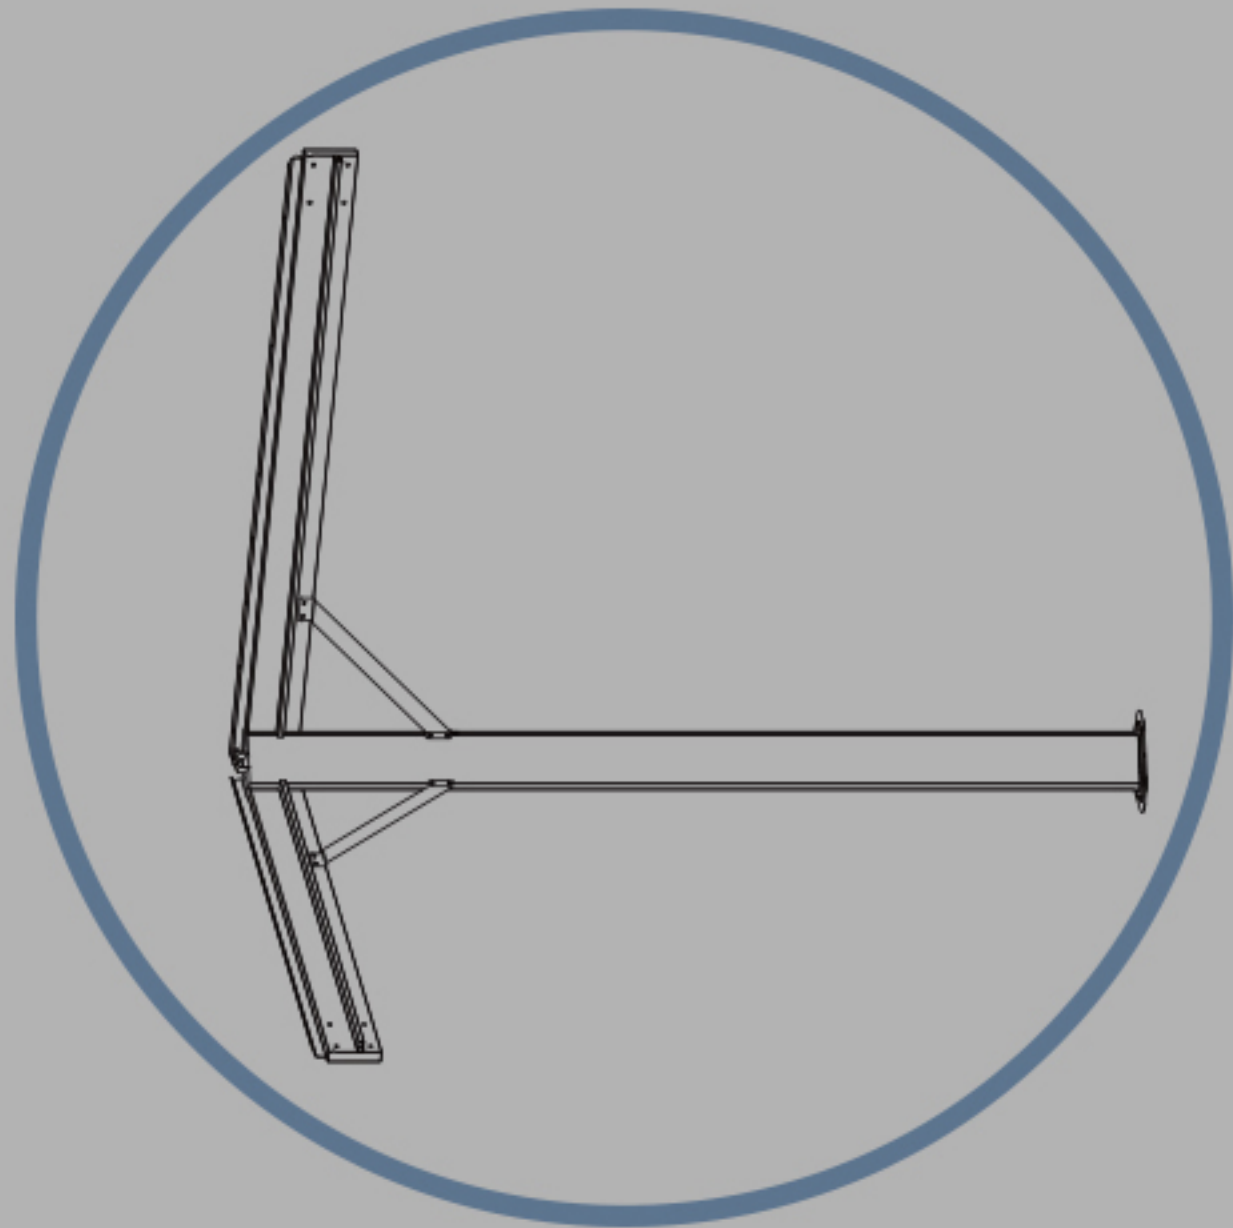


STEP 3

Parts required

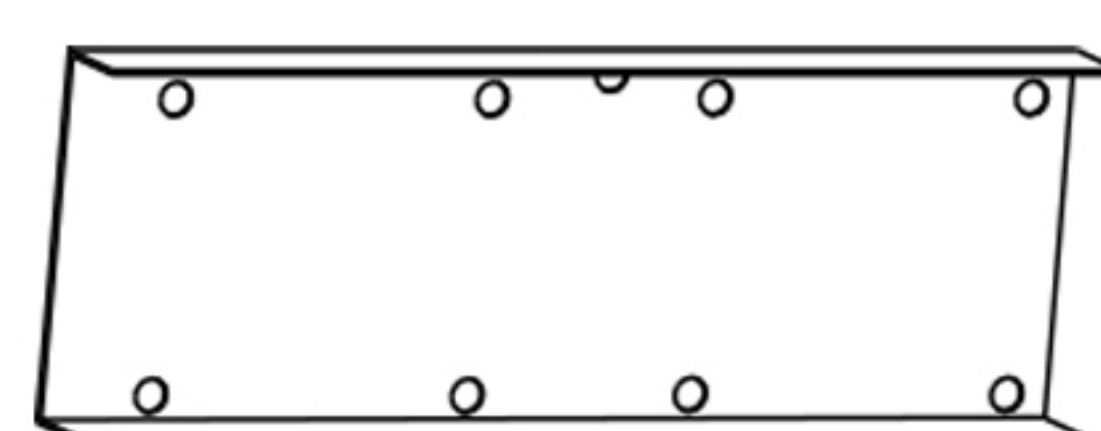

P 4pcs



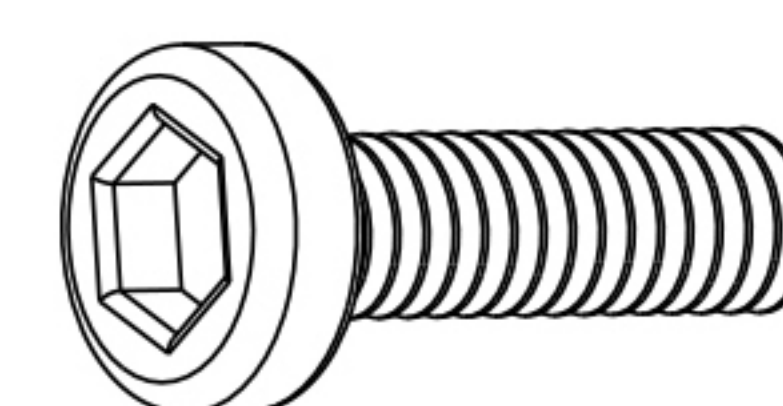


X1 32pcs

1 → 2



When connecting **C** and **C1** via **P**, make sure that 3 holes on part **P** (as shown in the picture) should be facing upwards. Do not install it upside down.

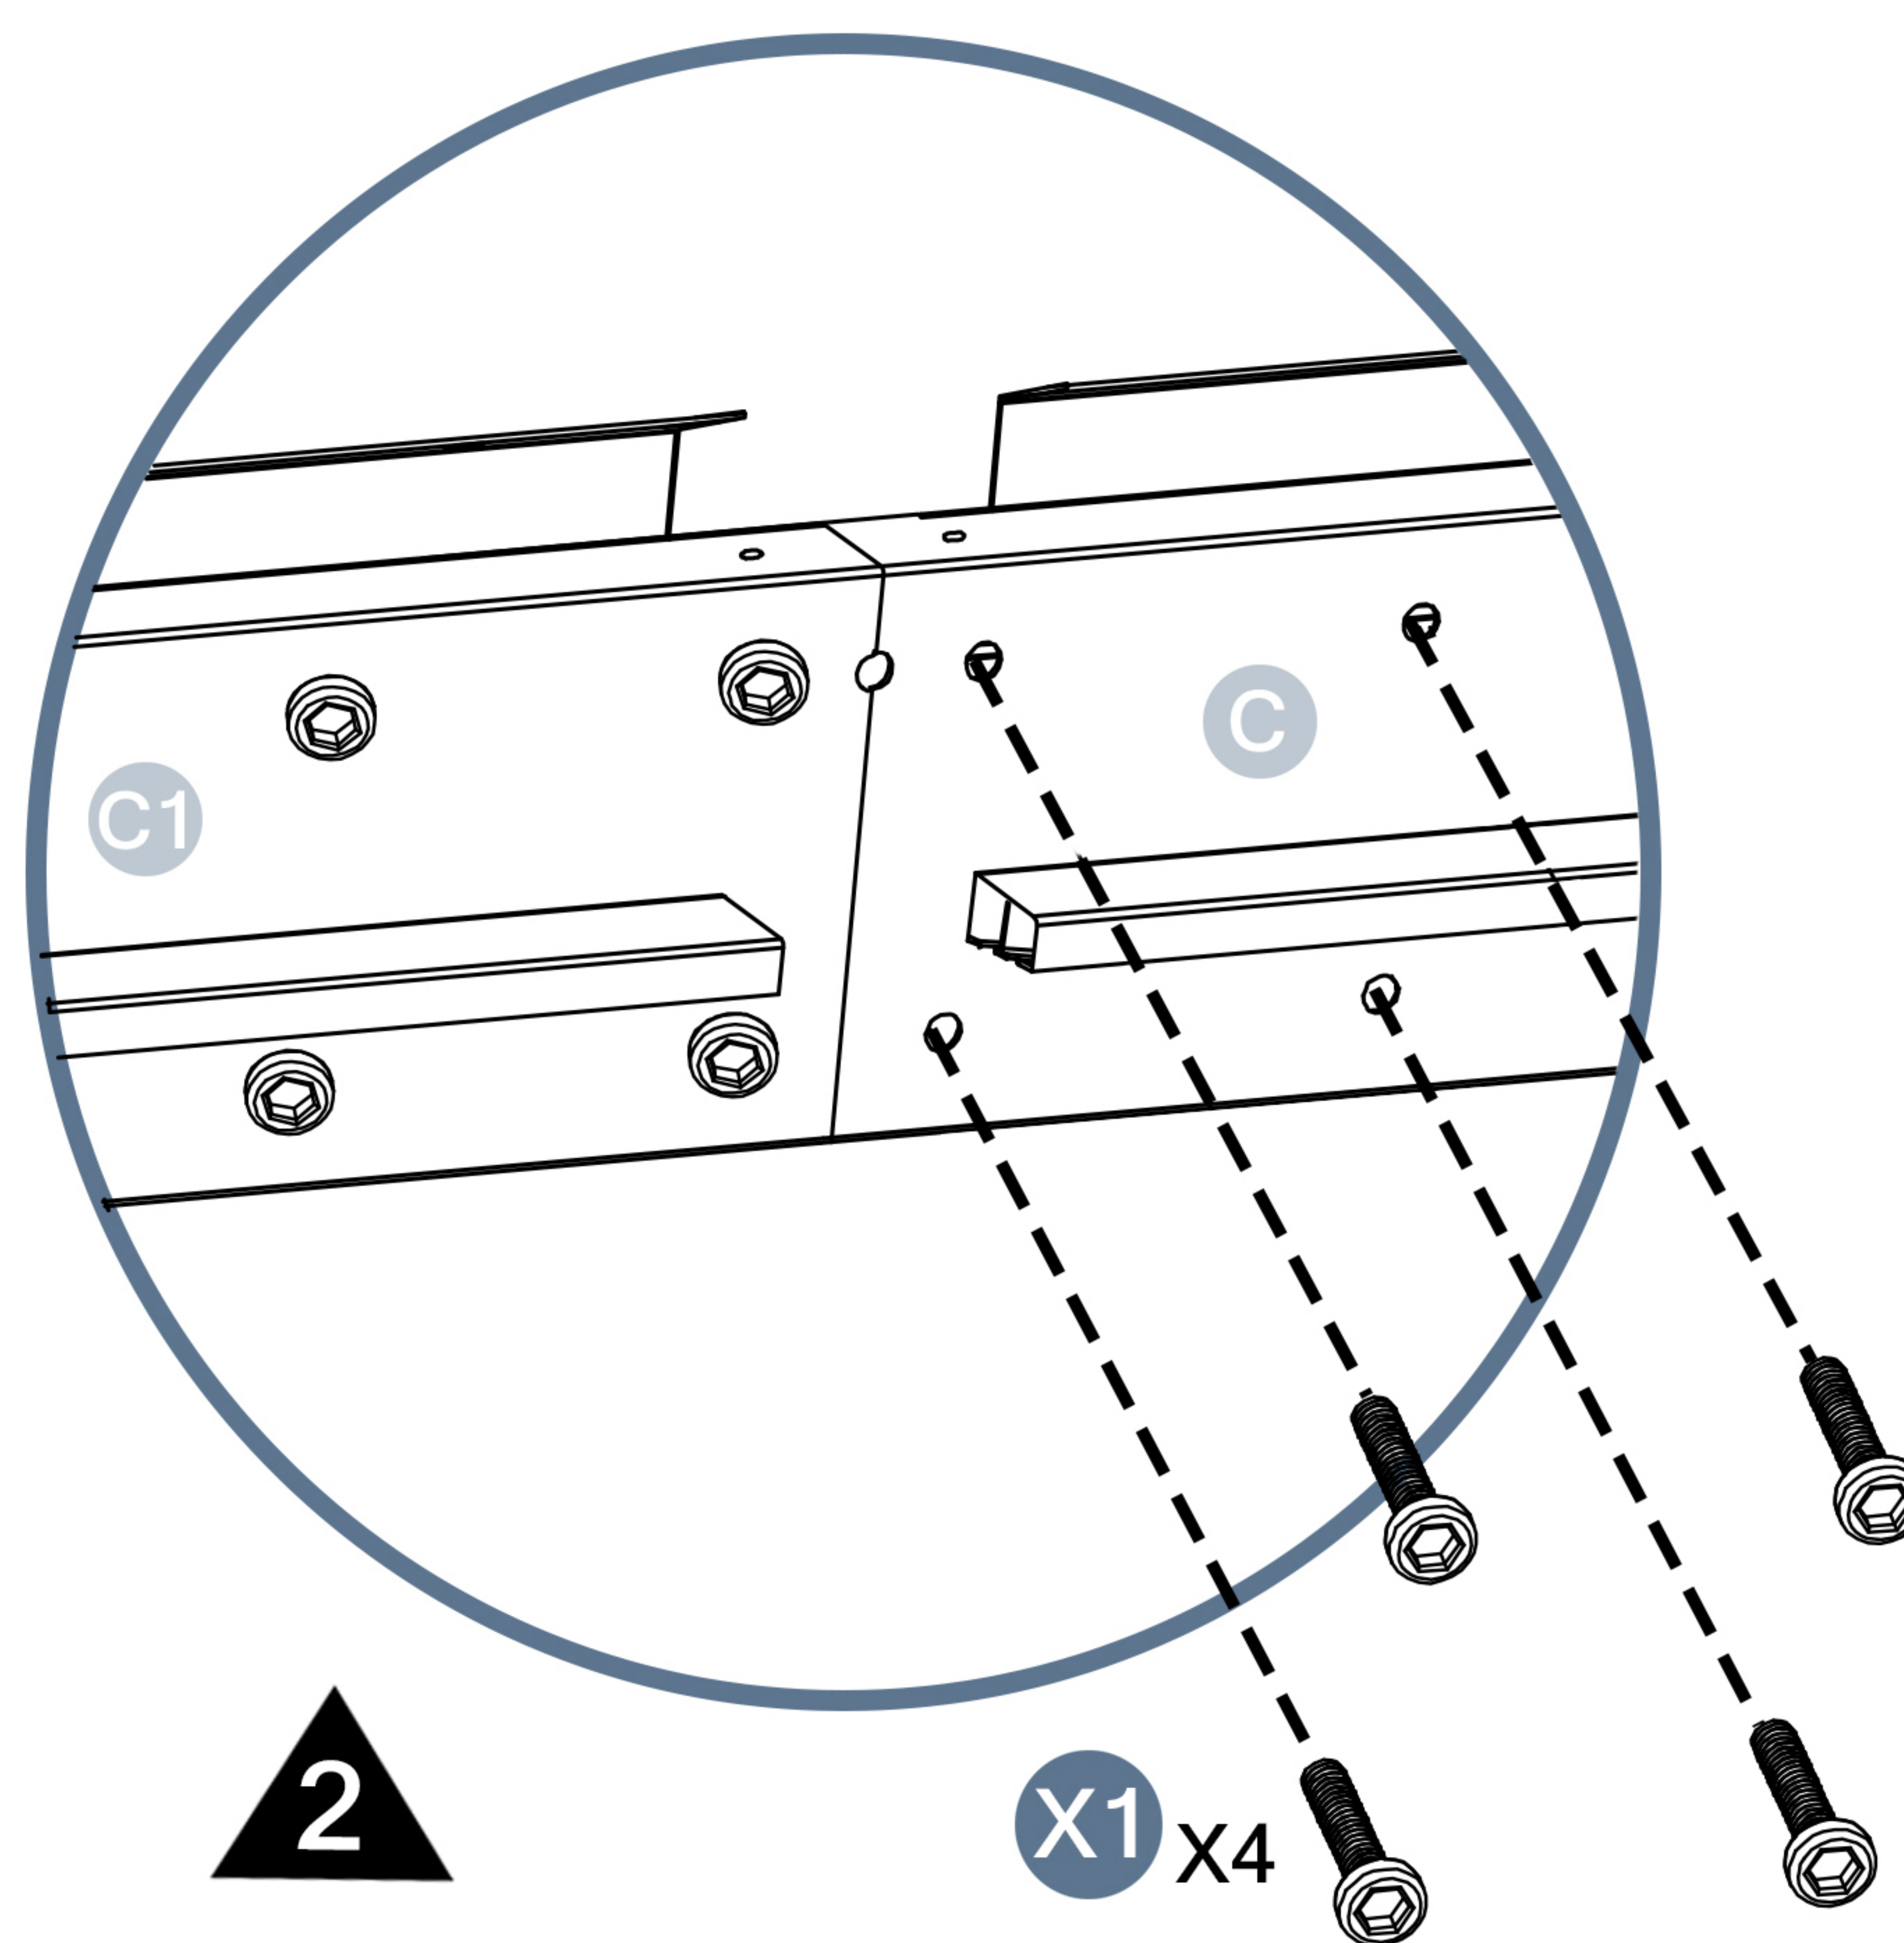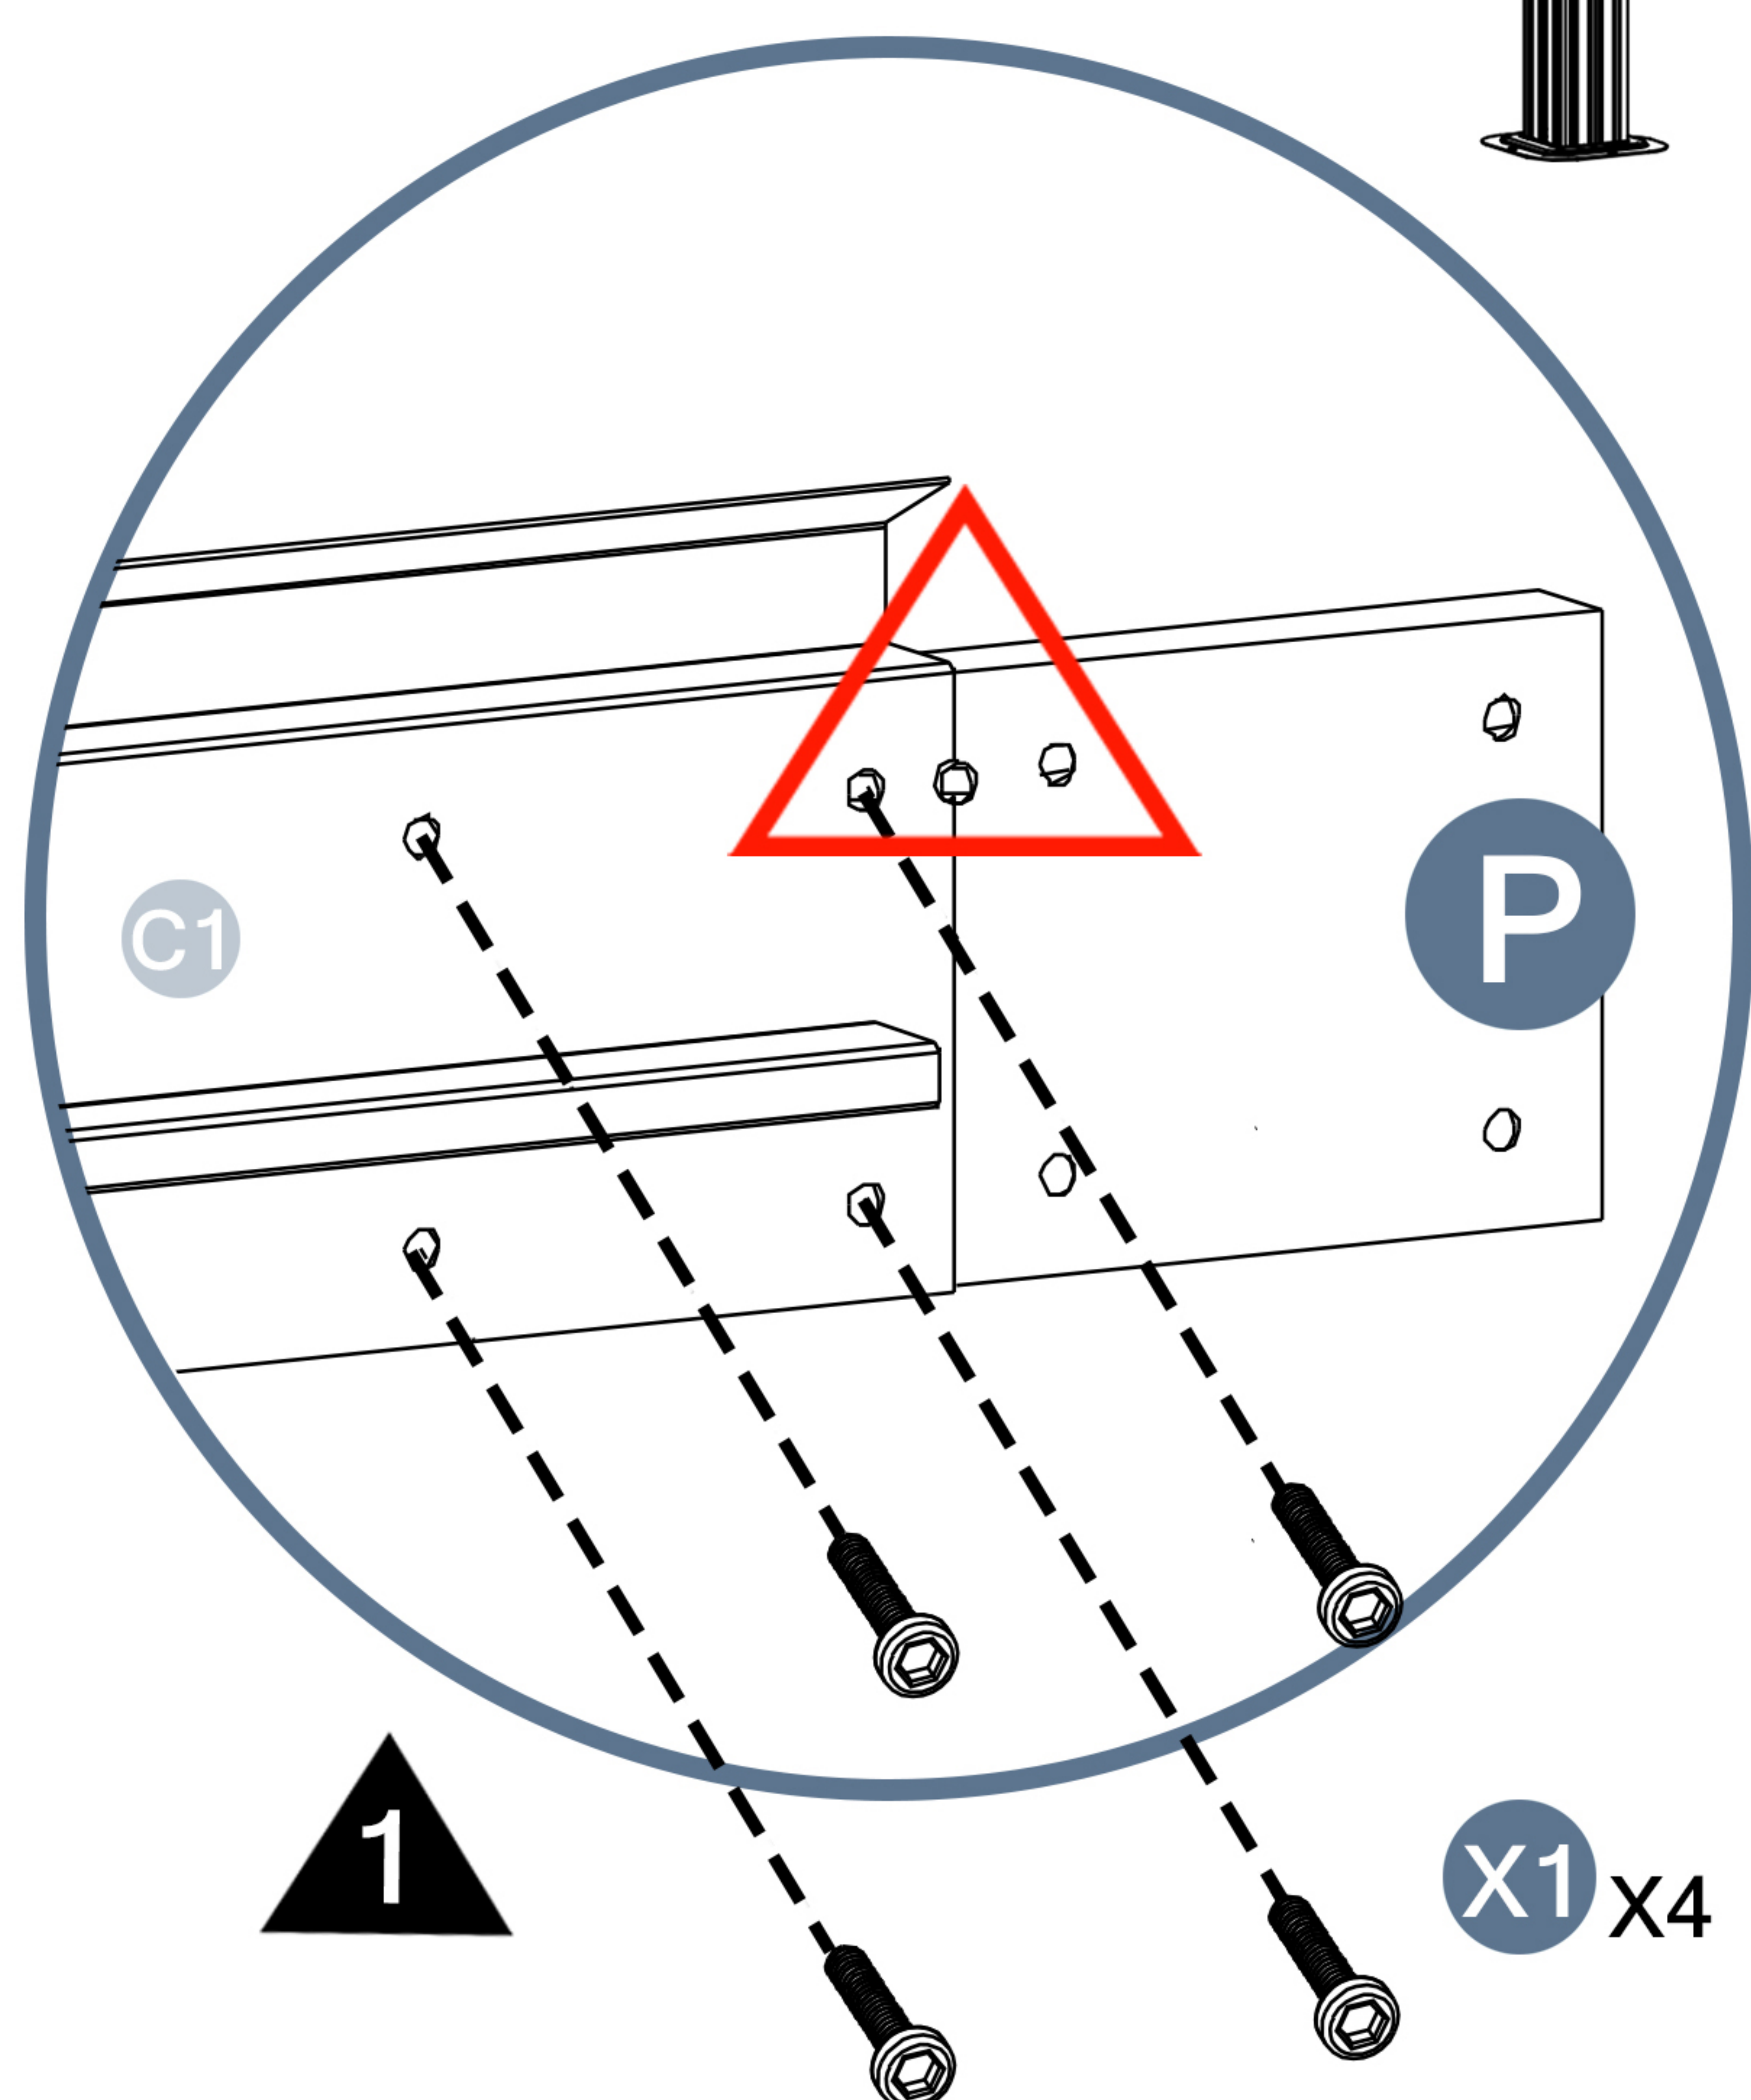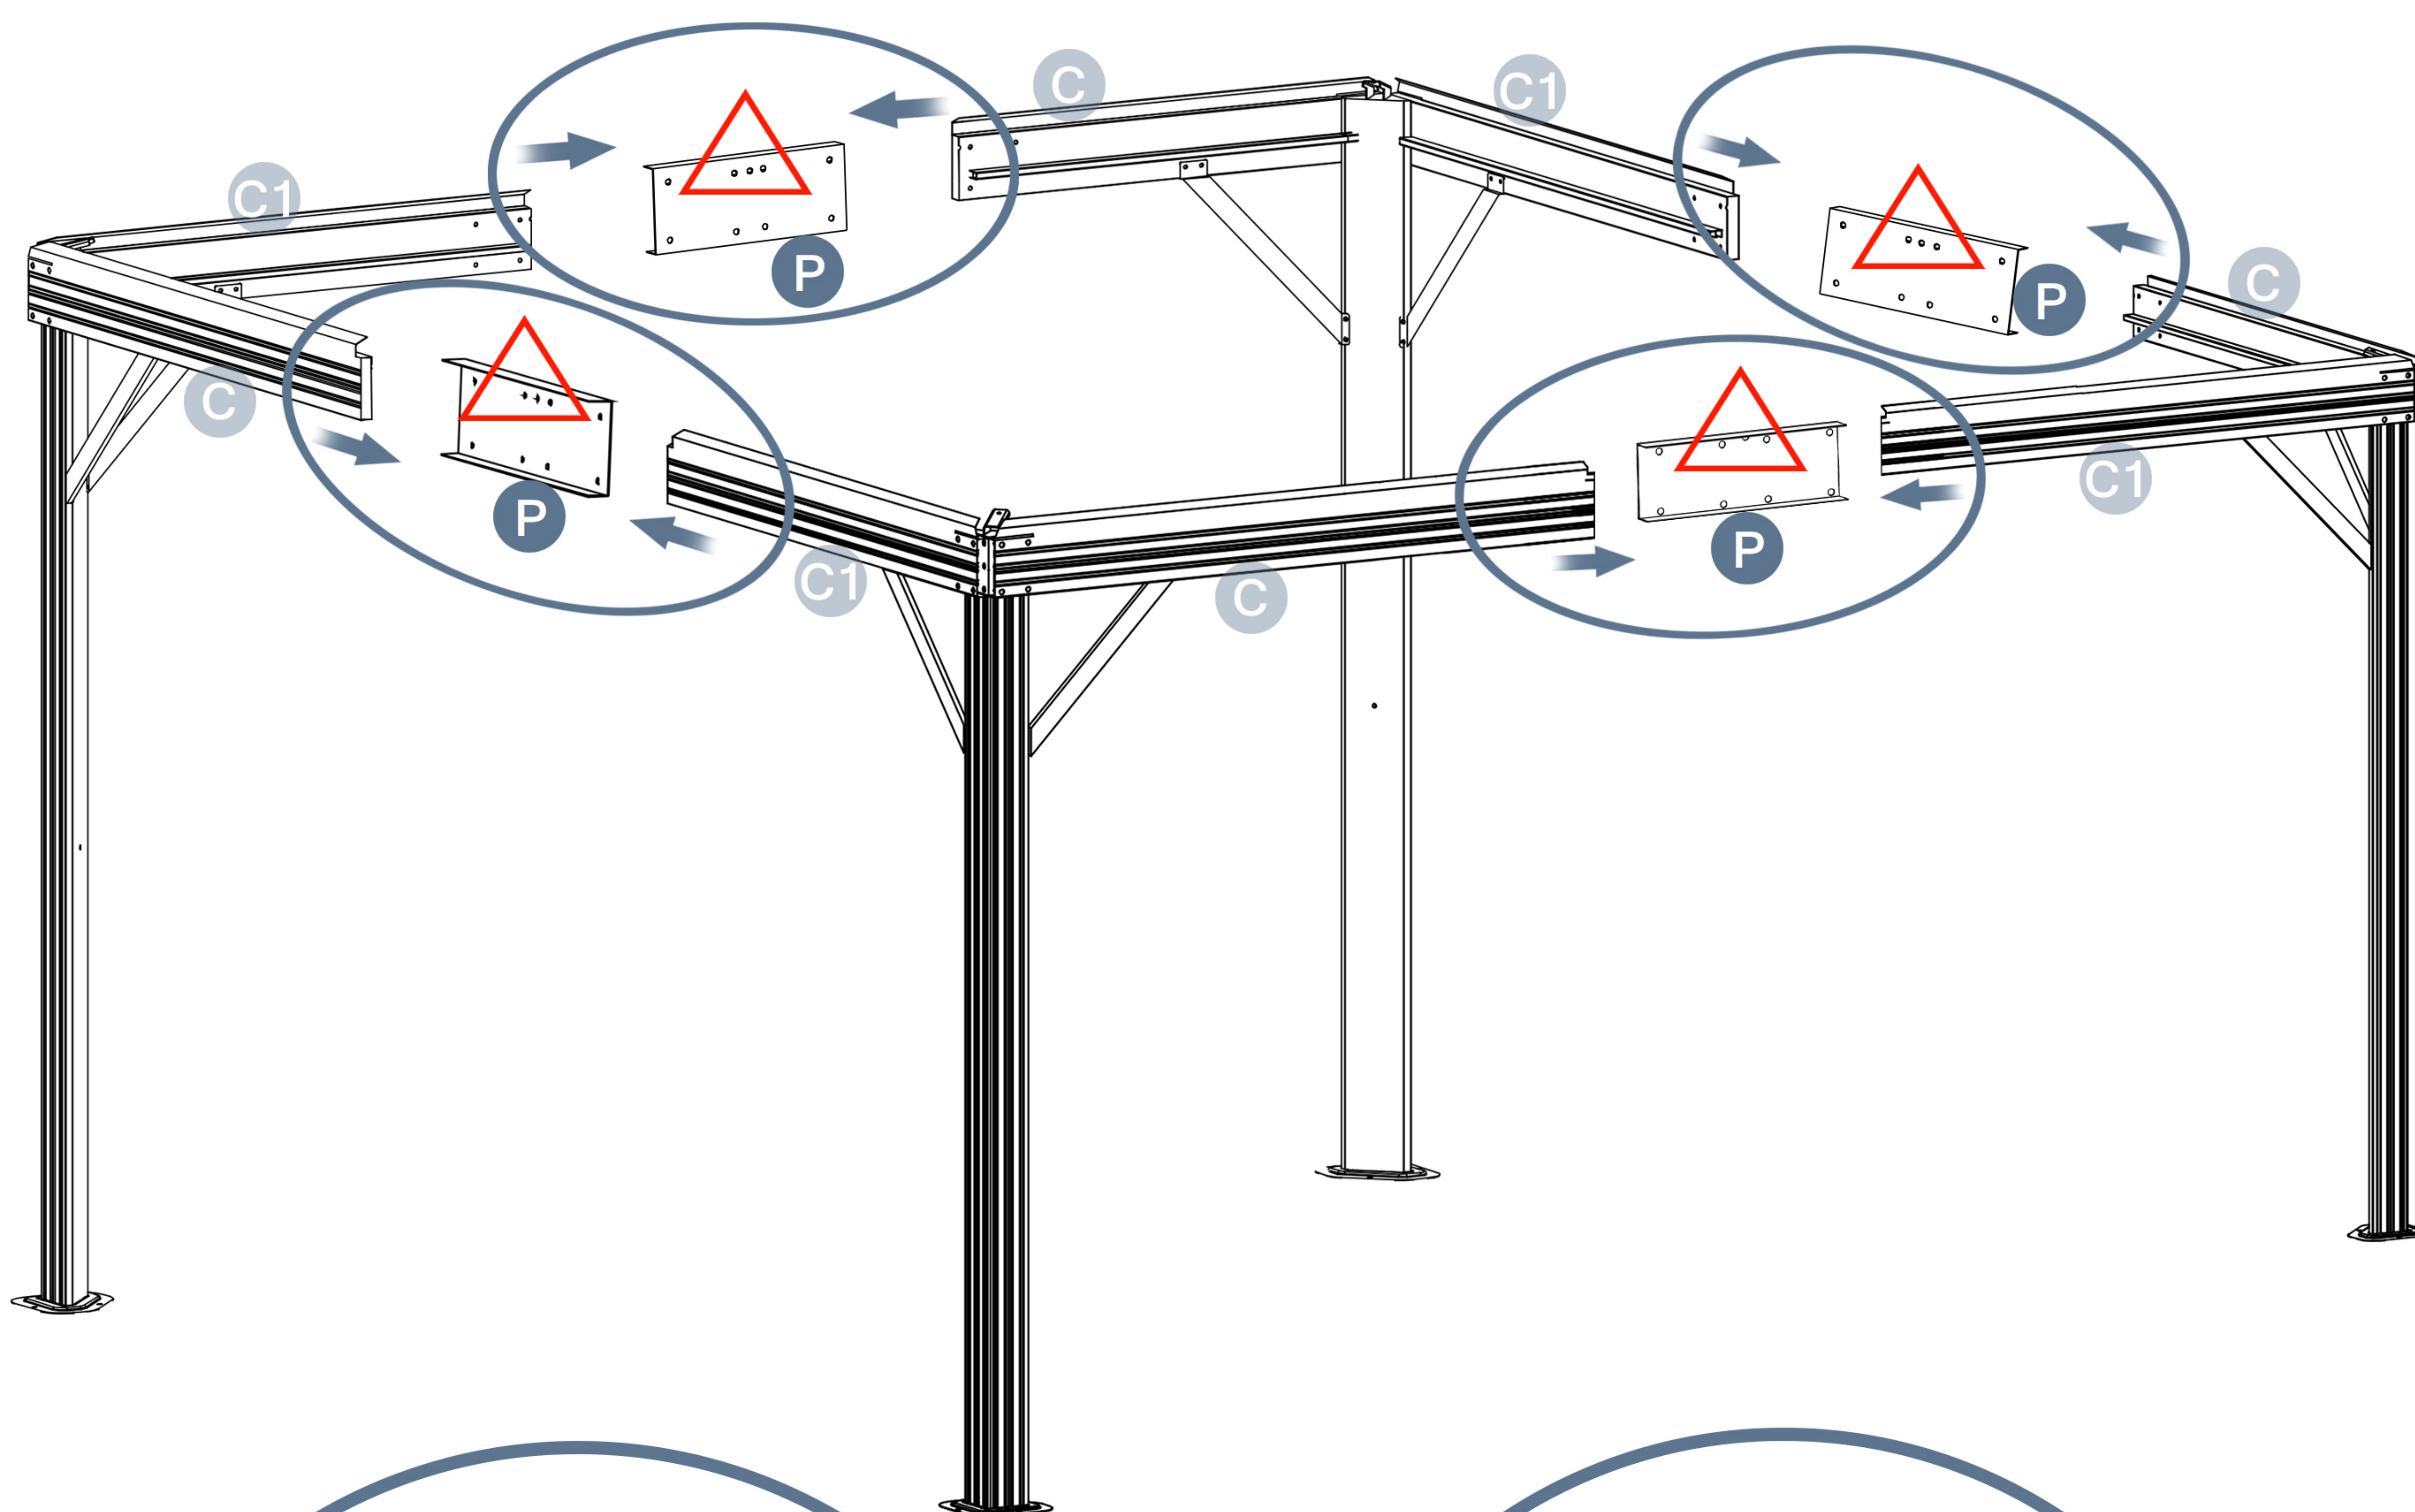


STEP 4

Parts required






J1 4pcs

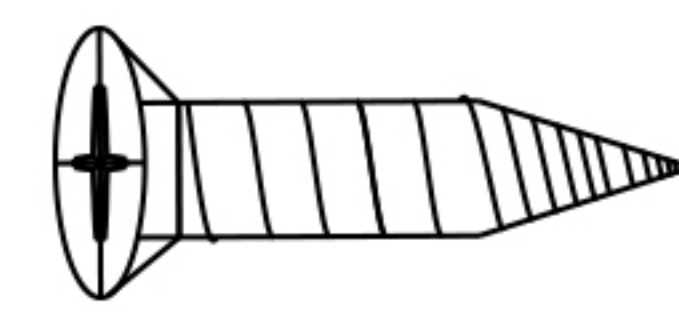


X4 8pcs

1 → 2

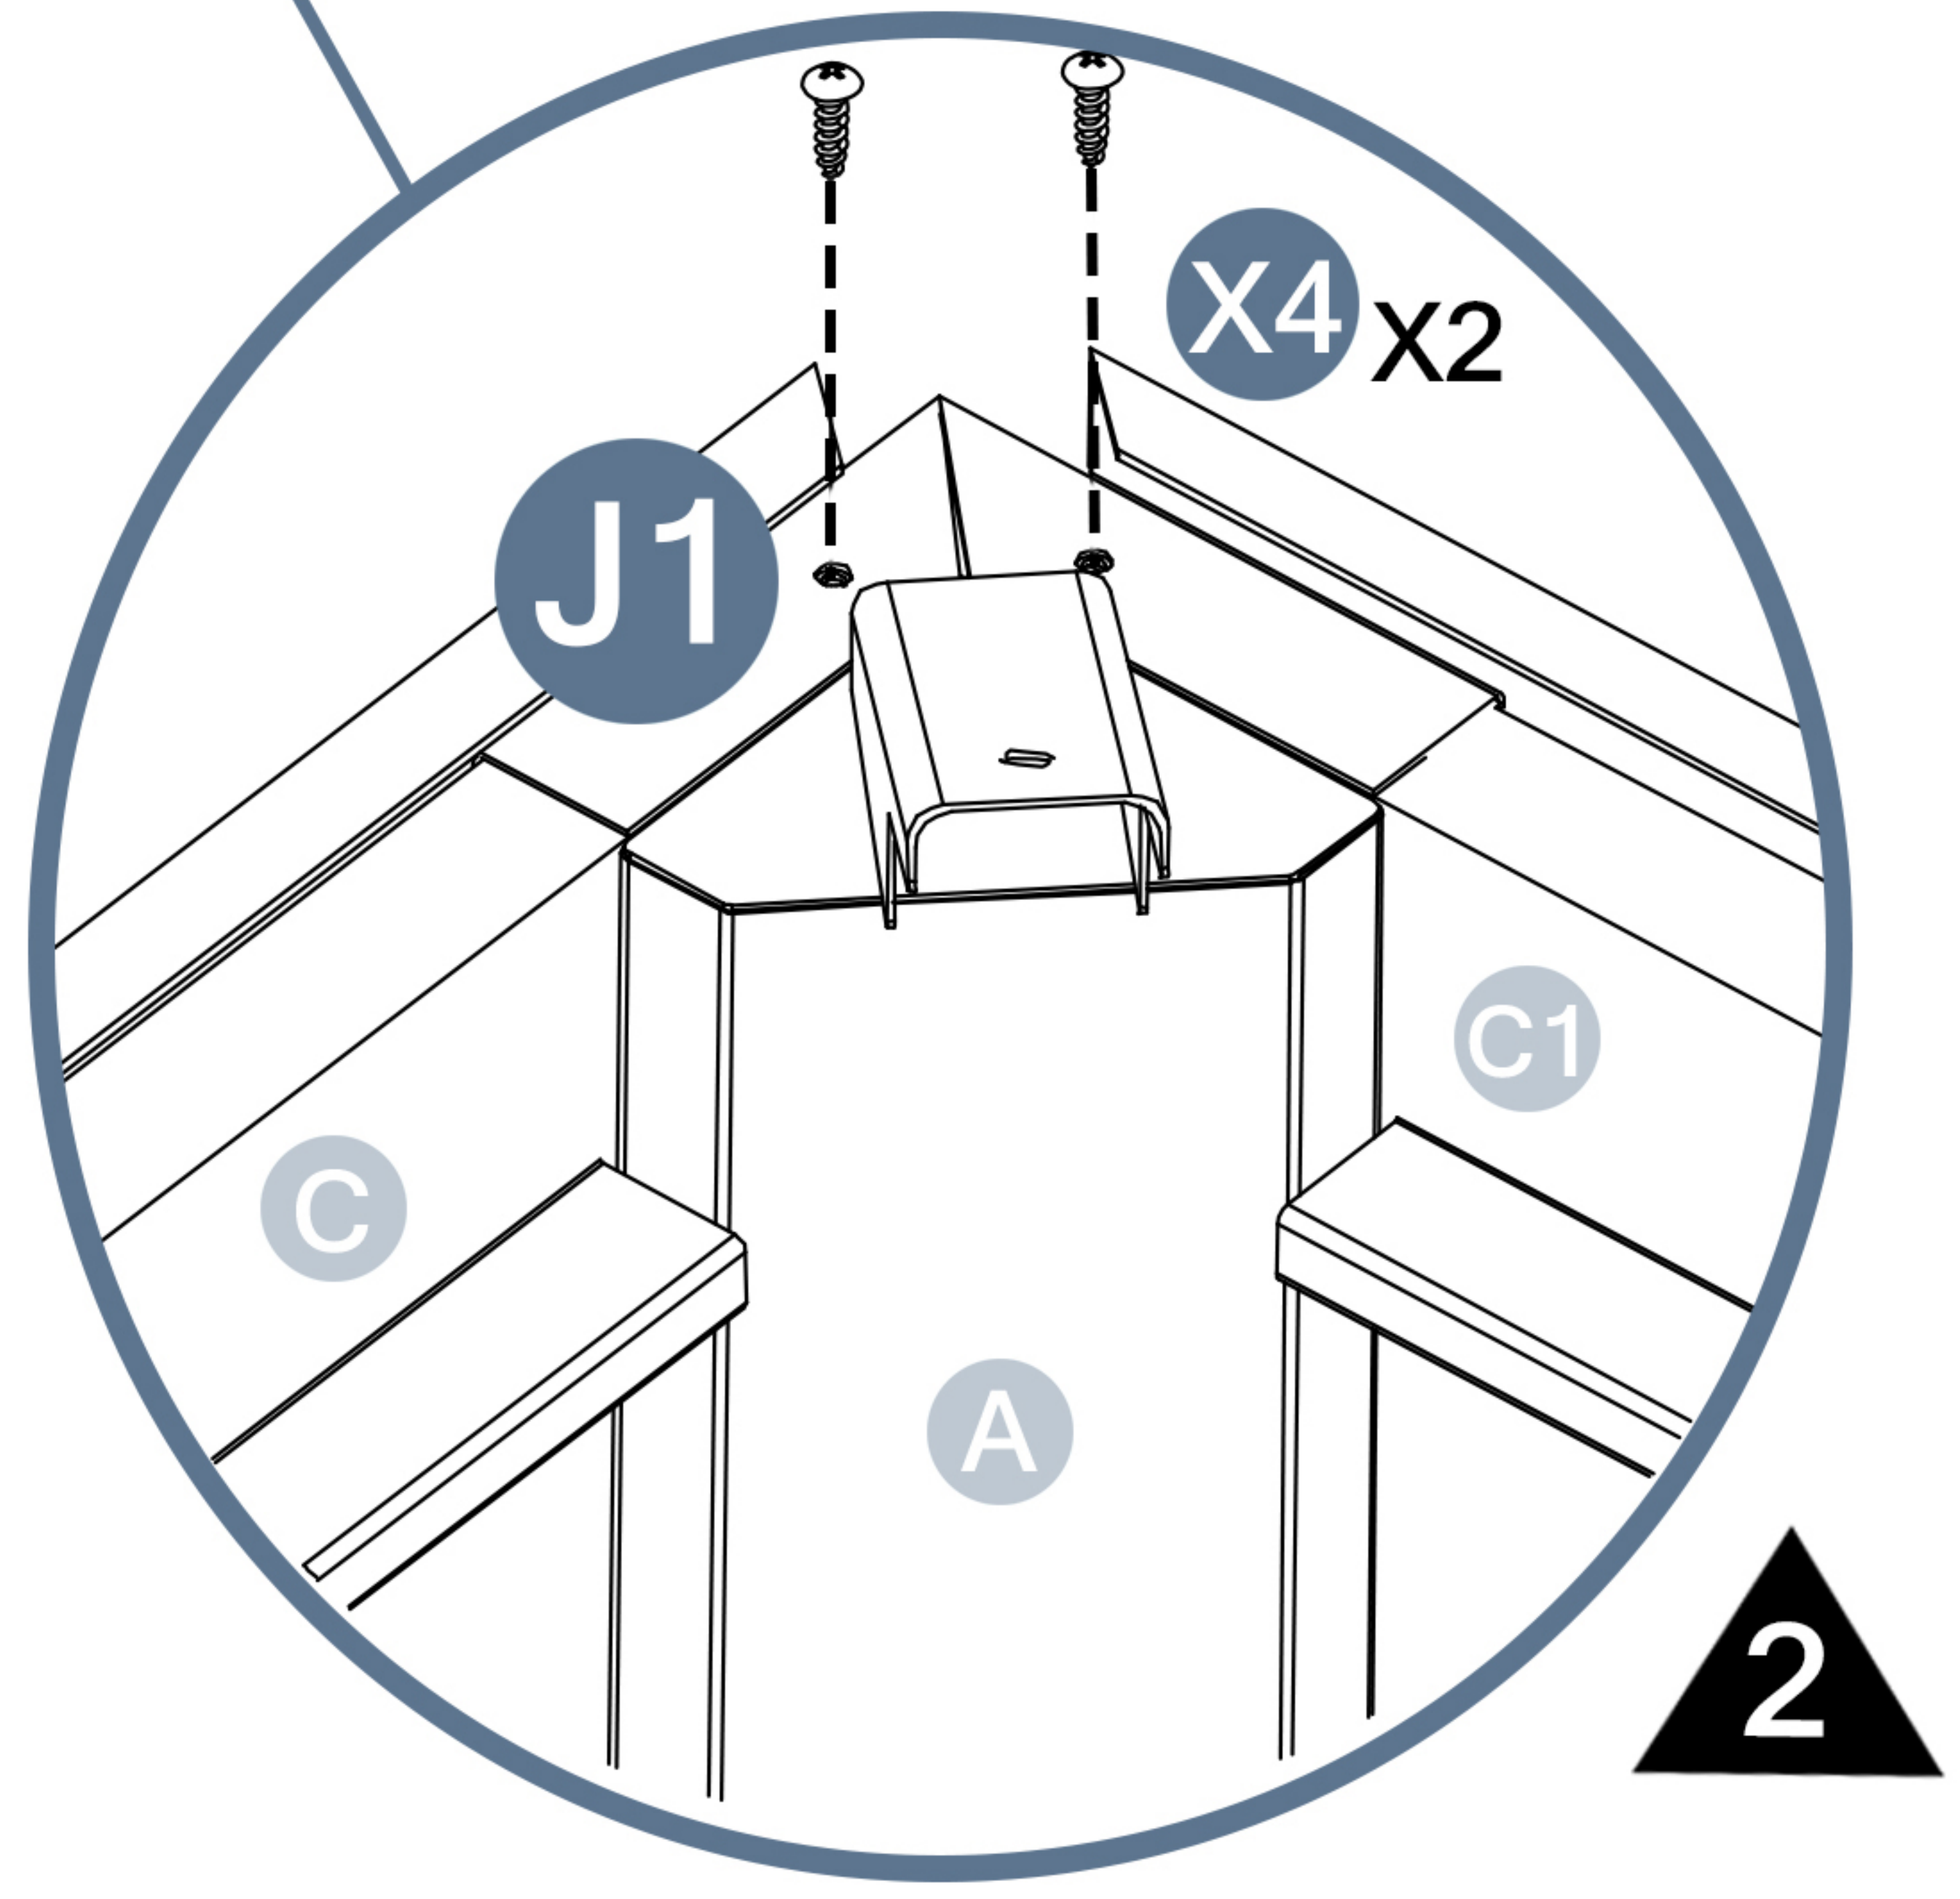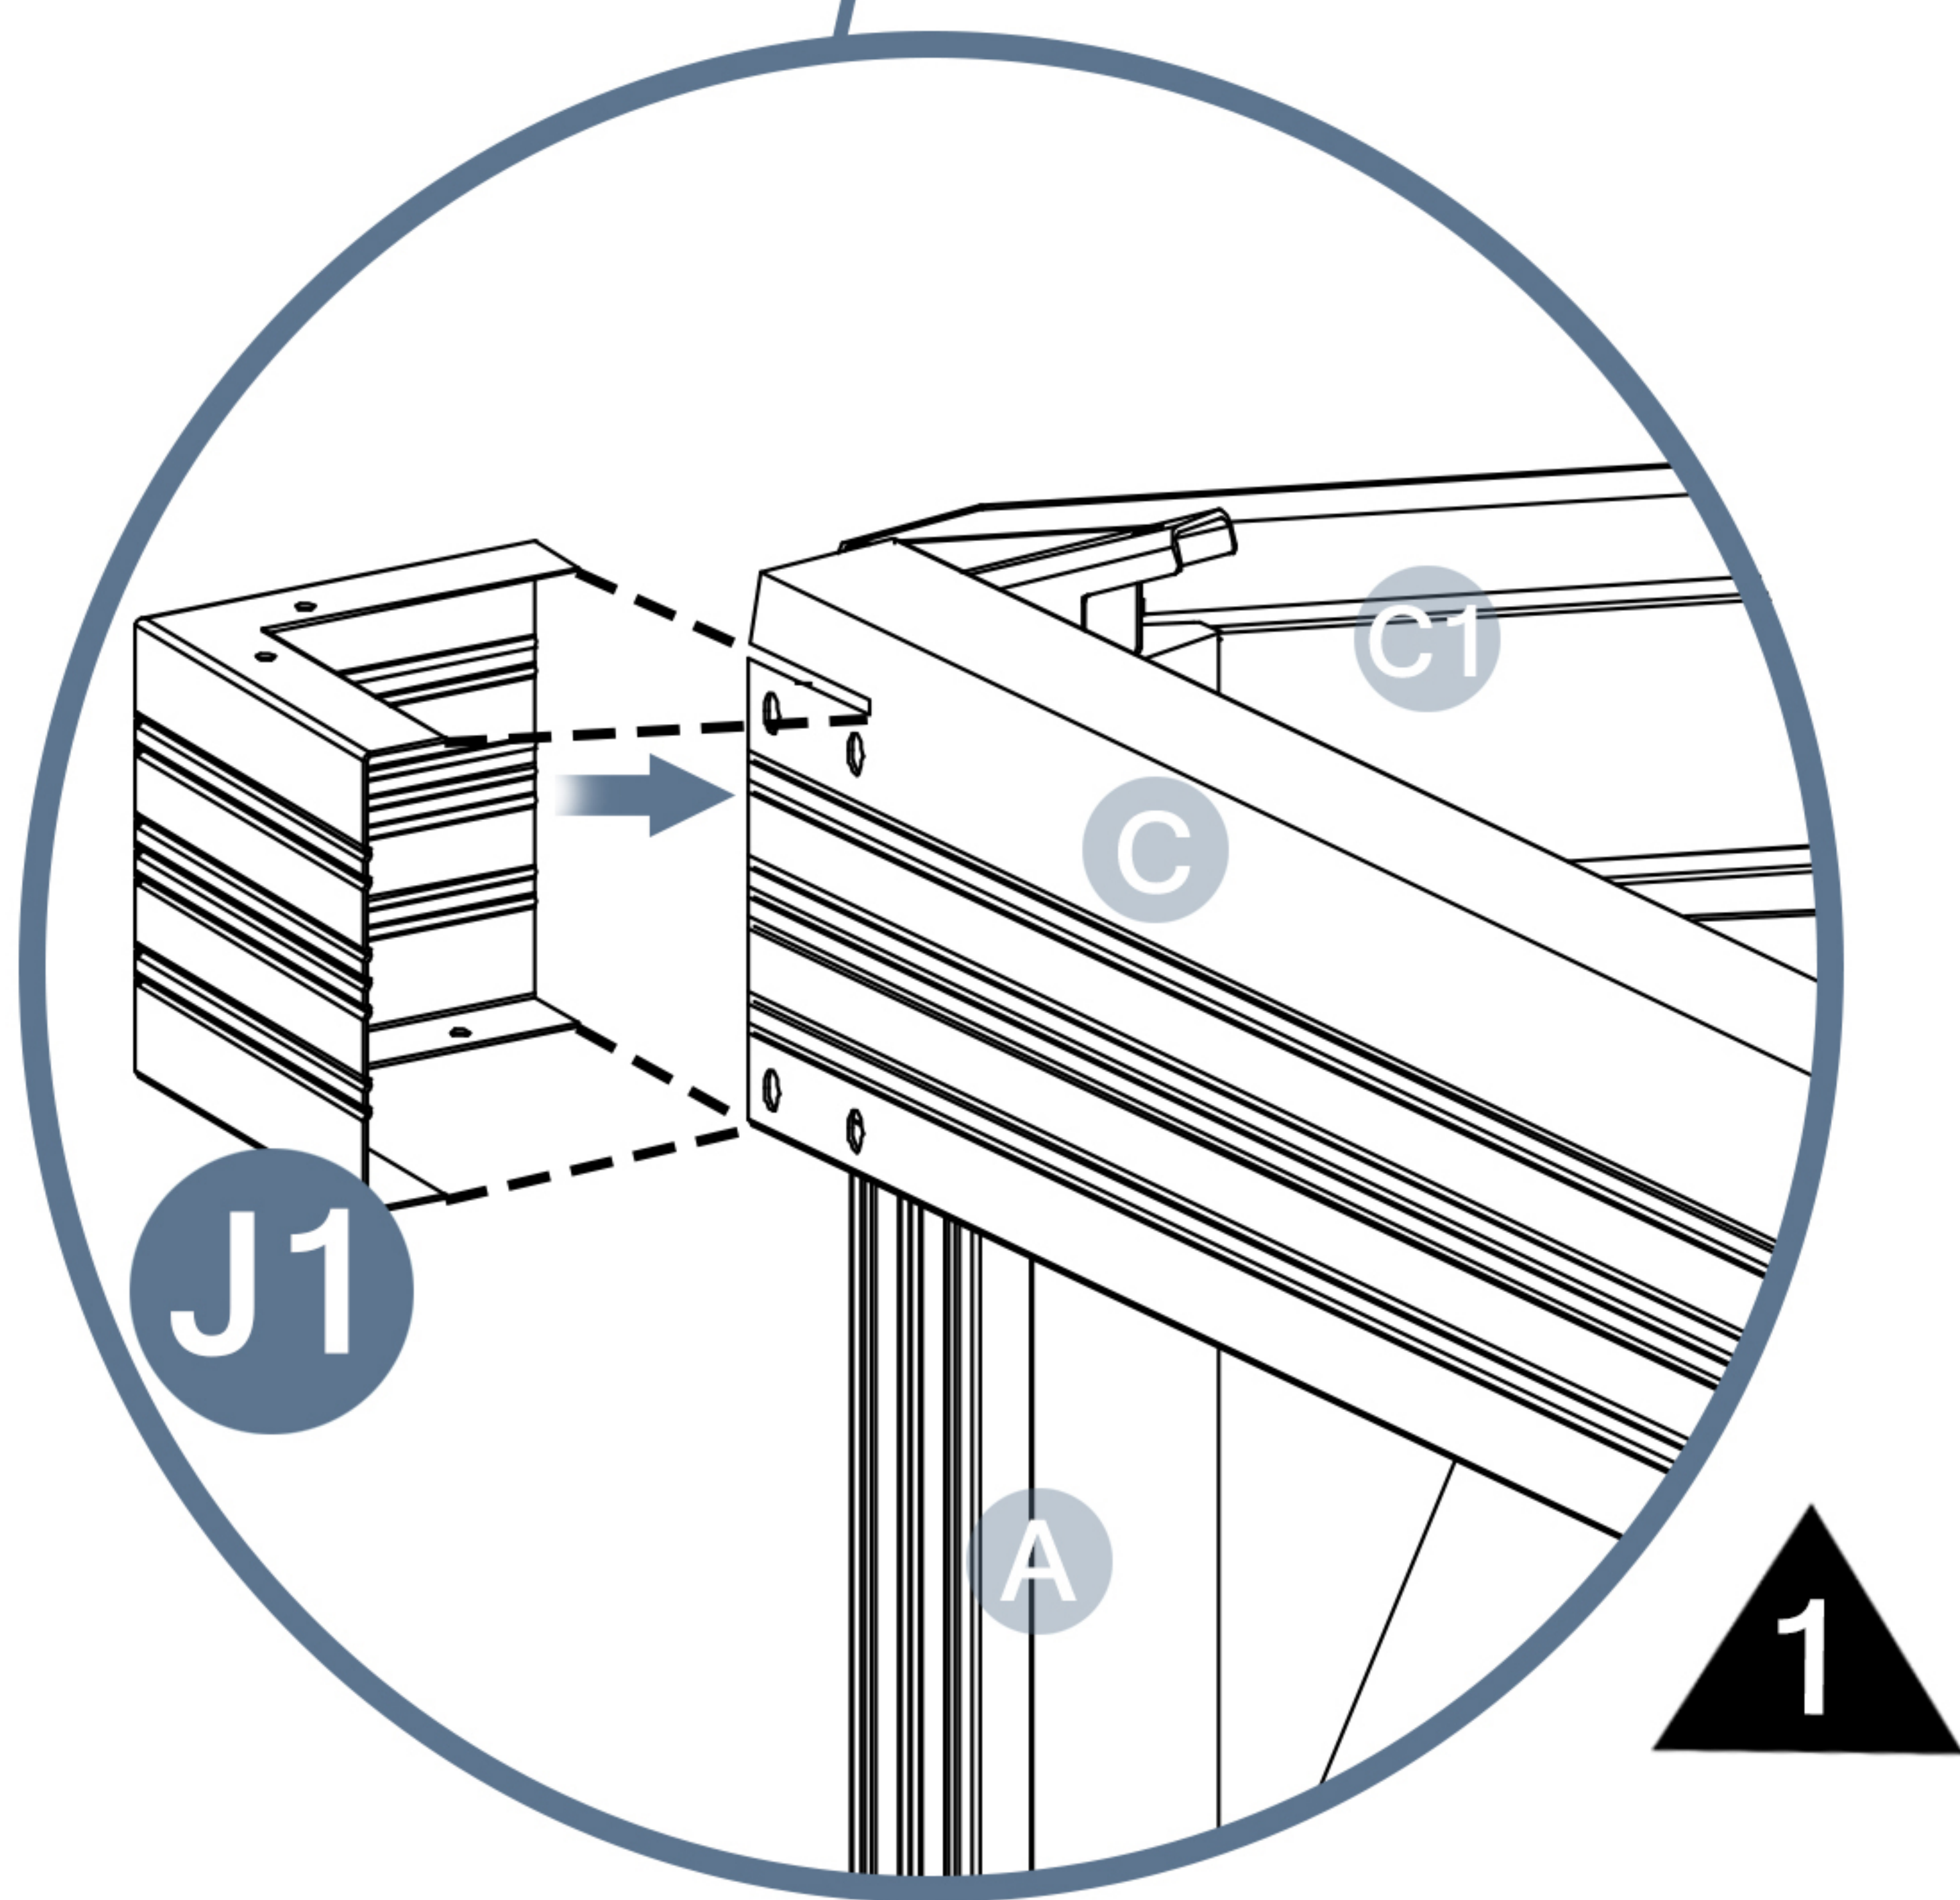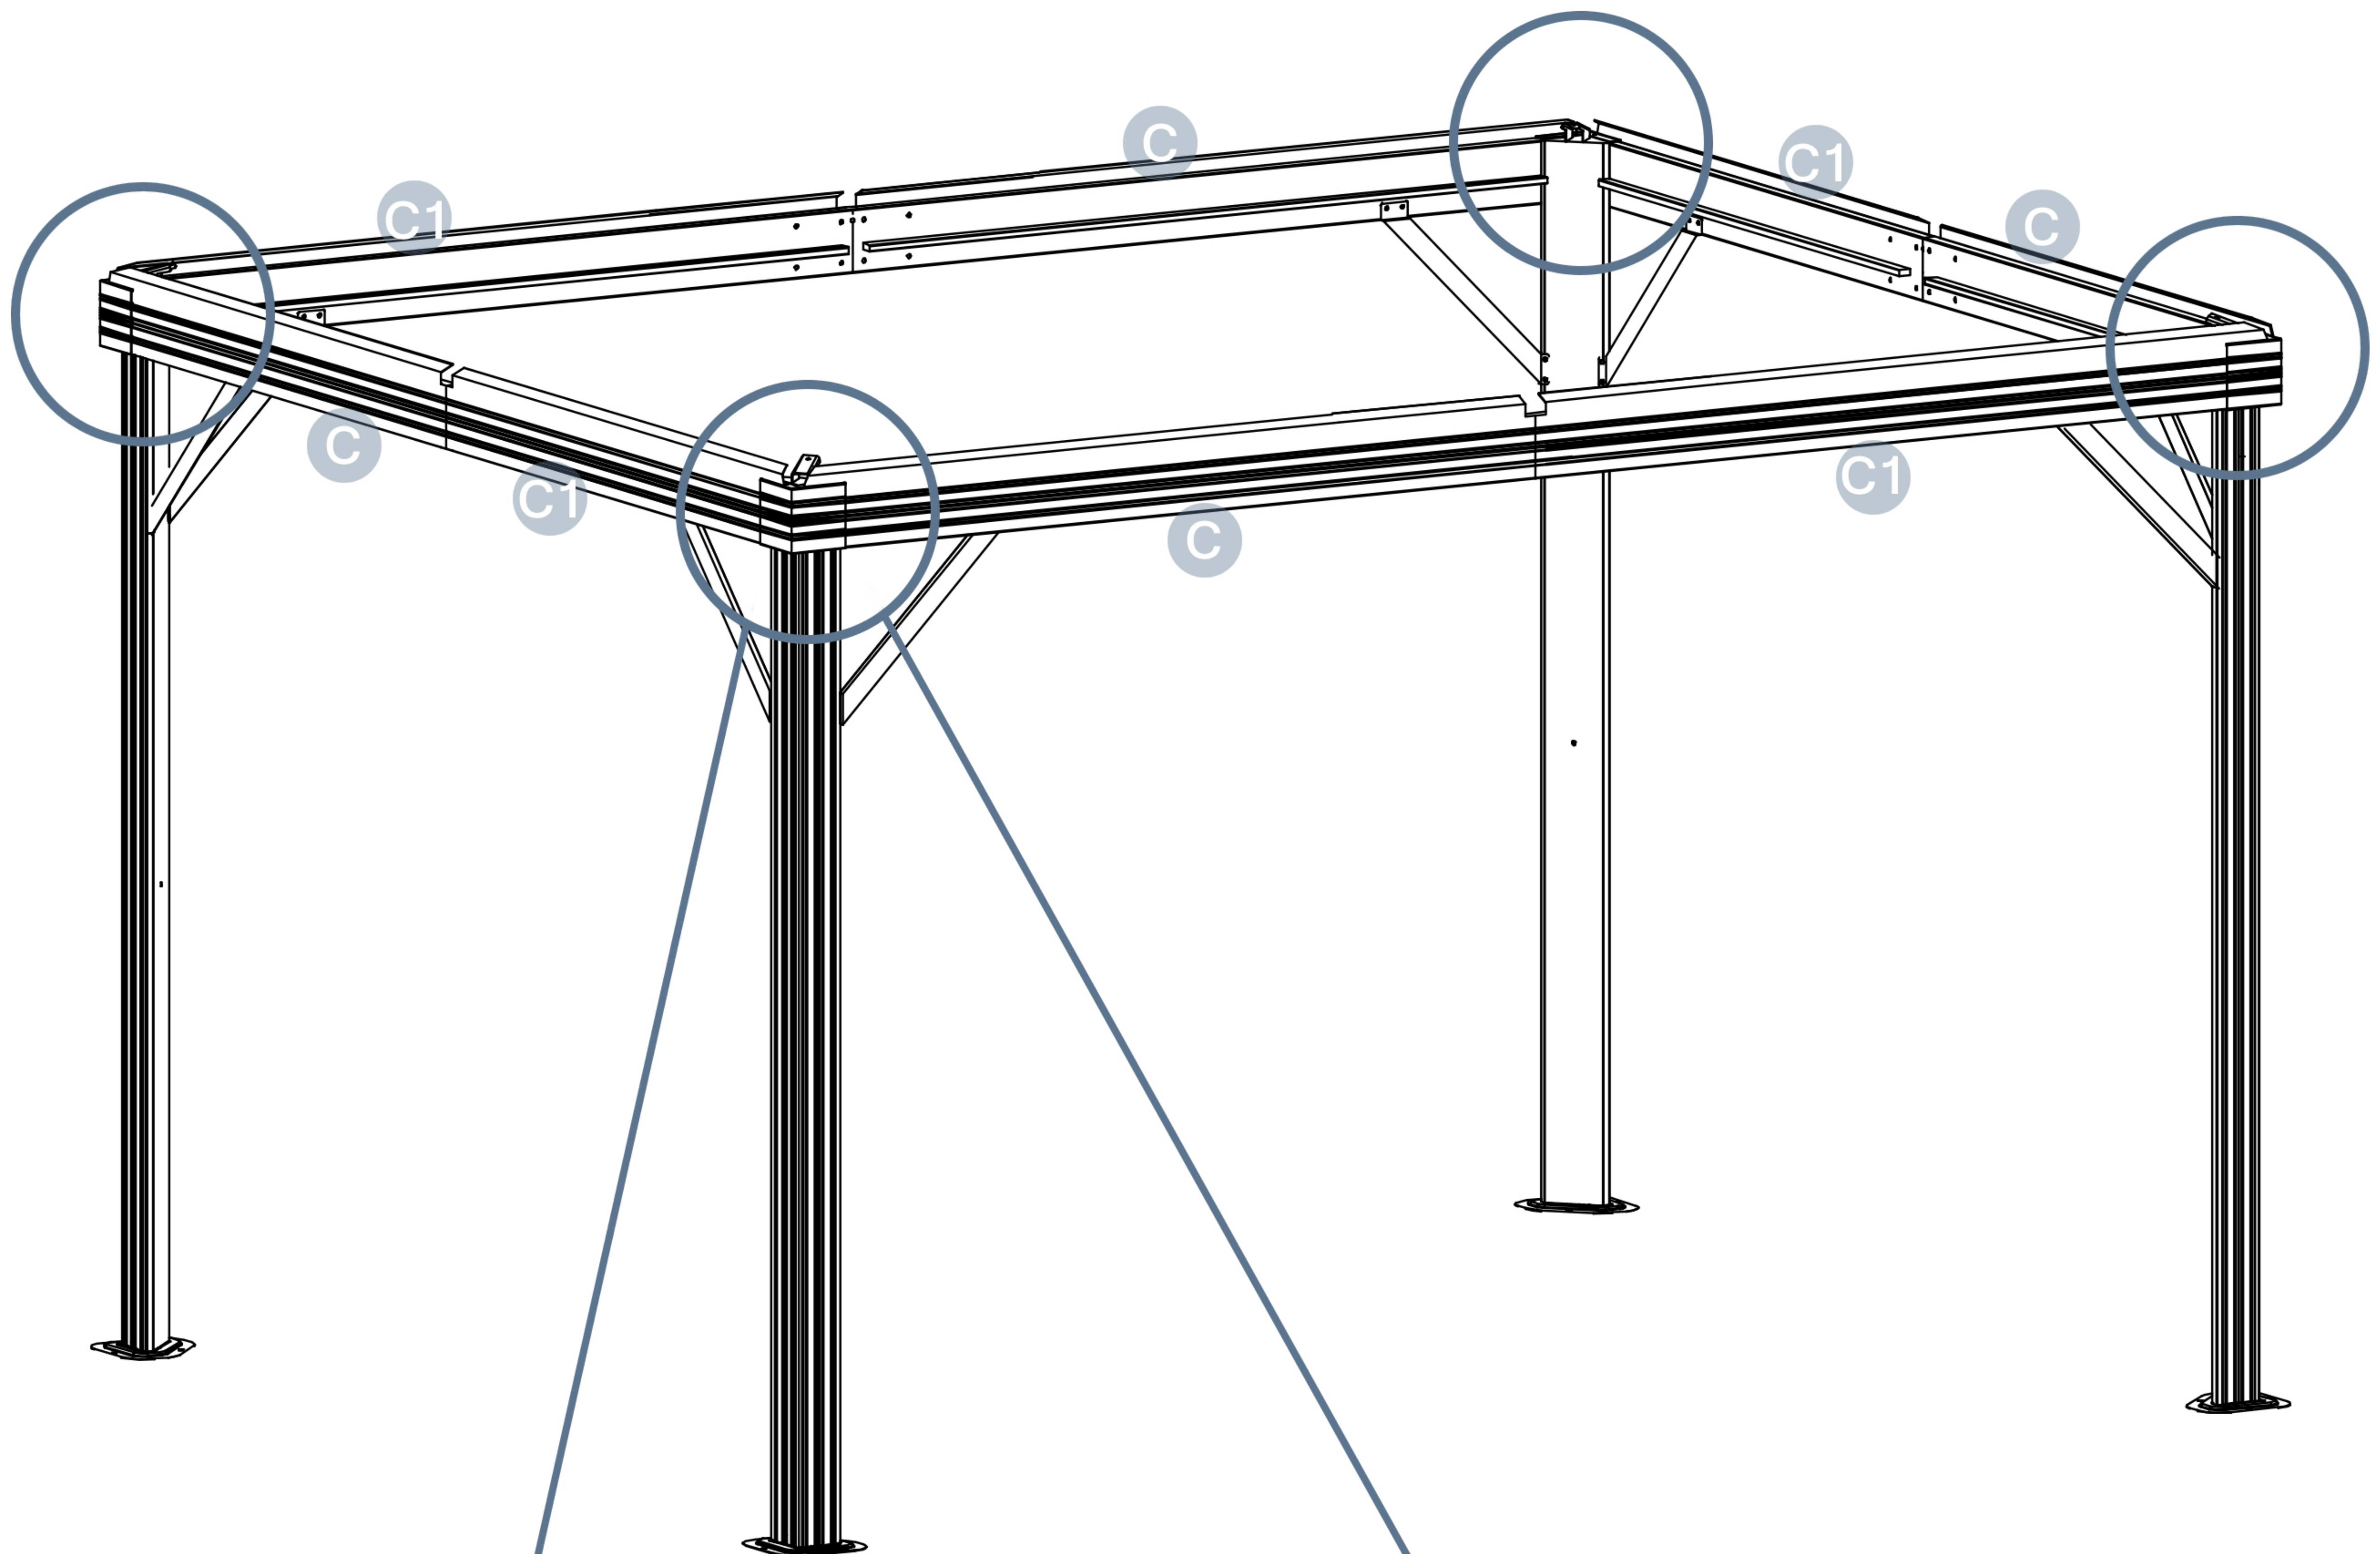

STEP5


Parts required

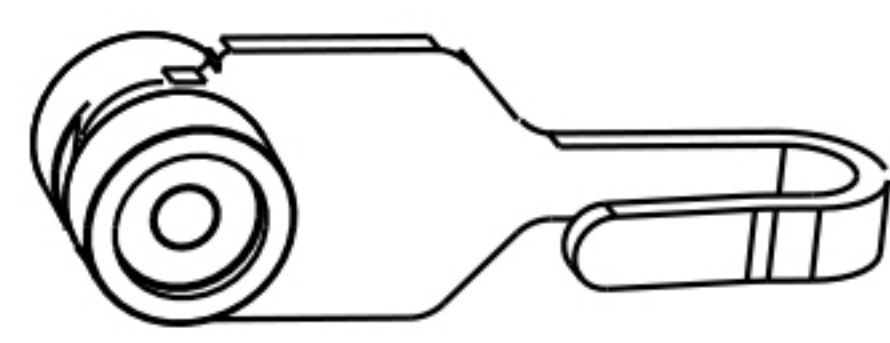

Q

64pcs

There are 2 rails on the rod. Install the 4 hanging hooks each rail on rod of **C** and **C1**.

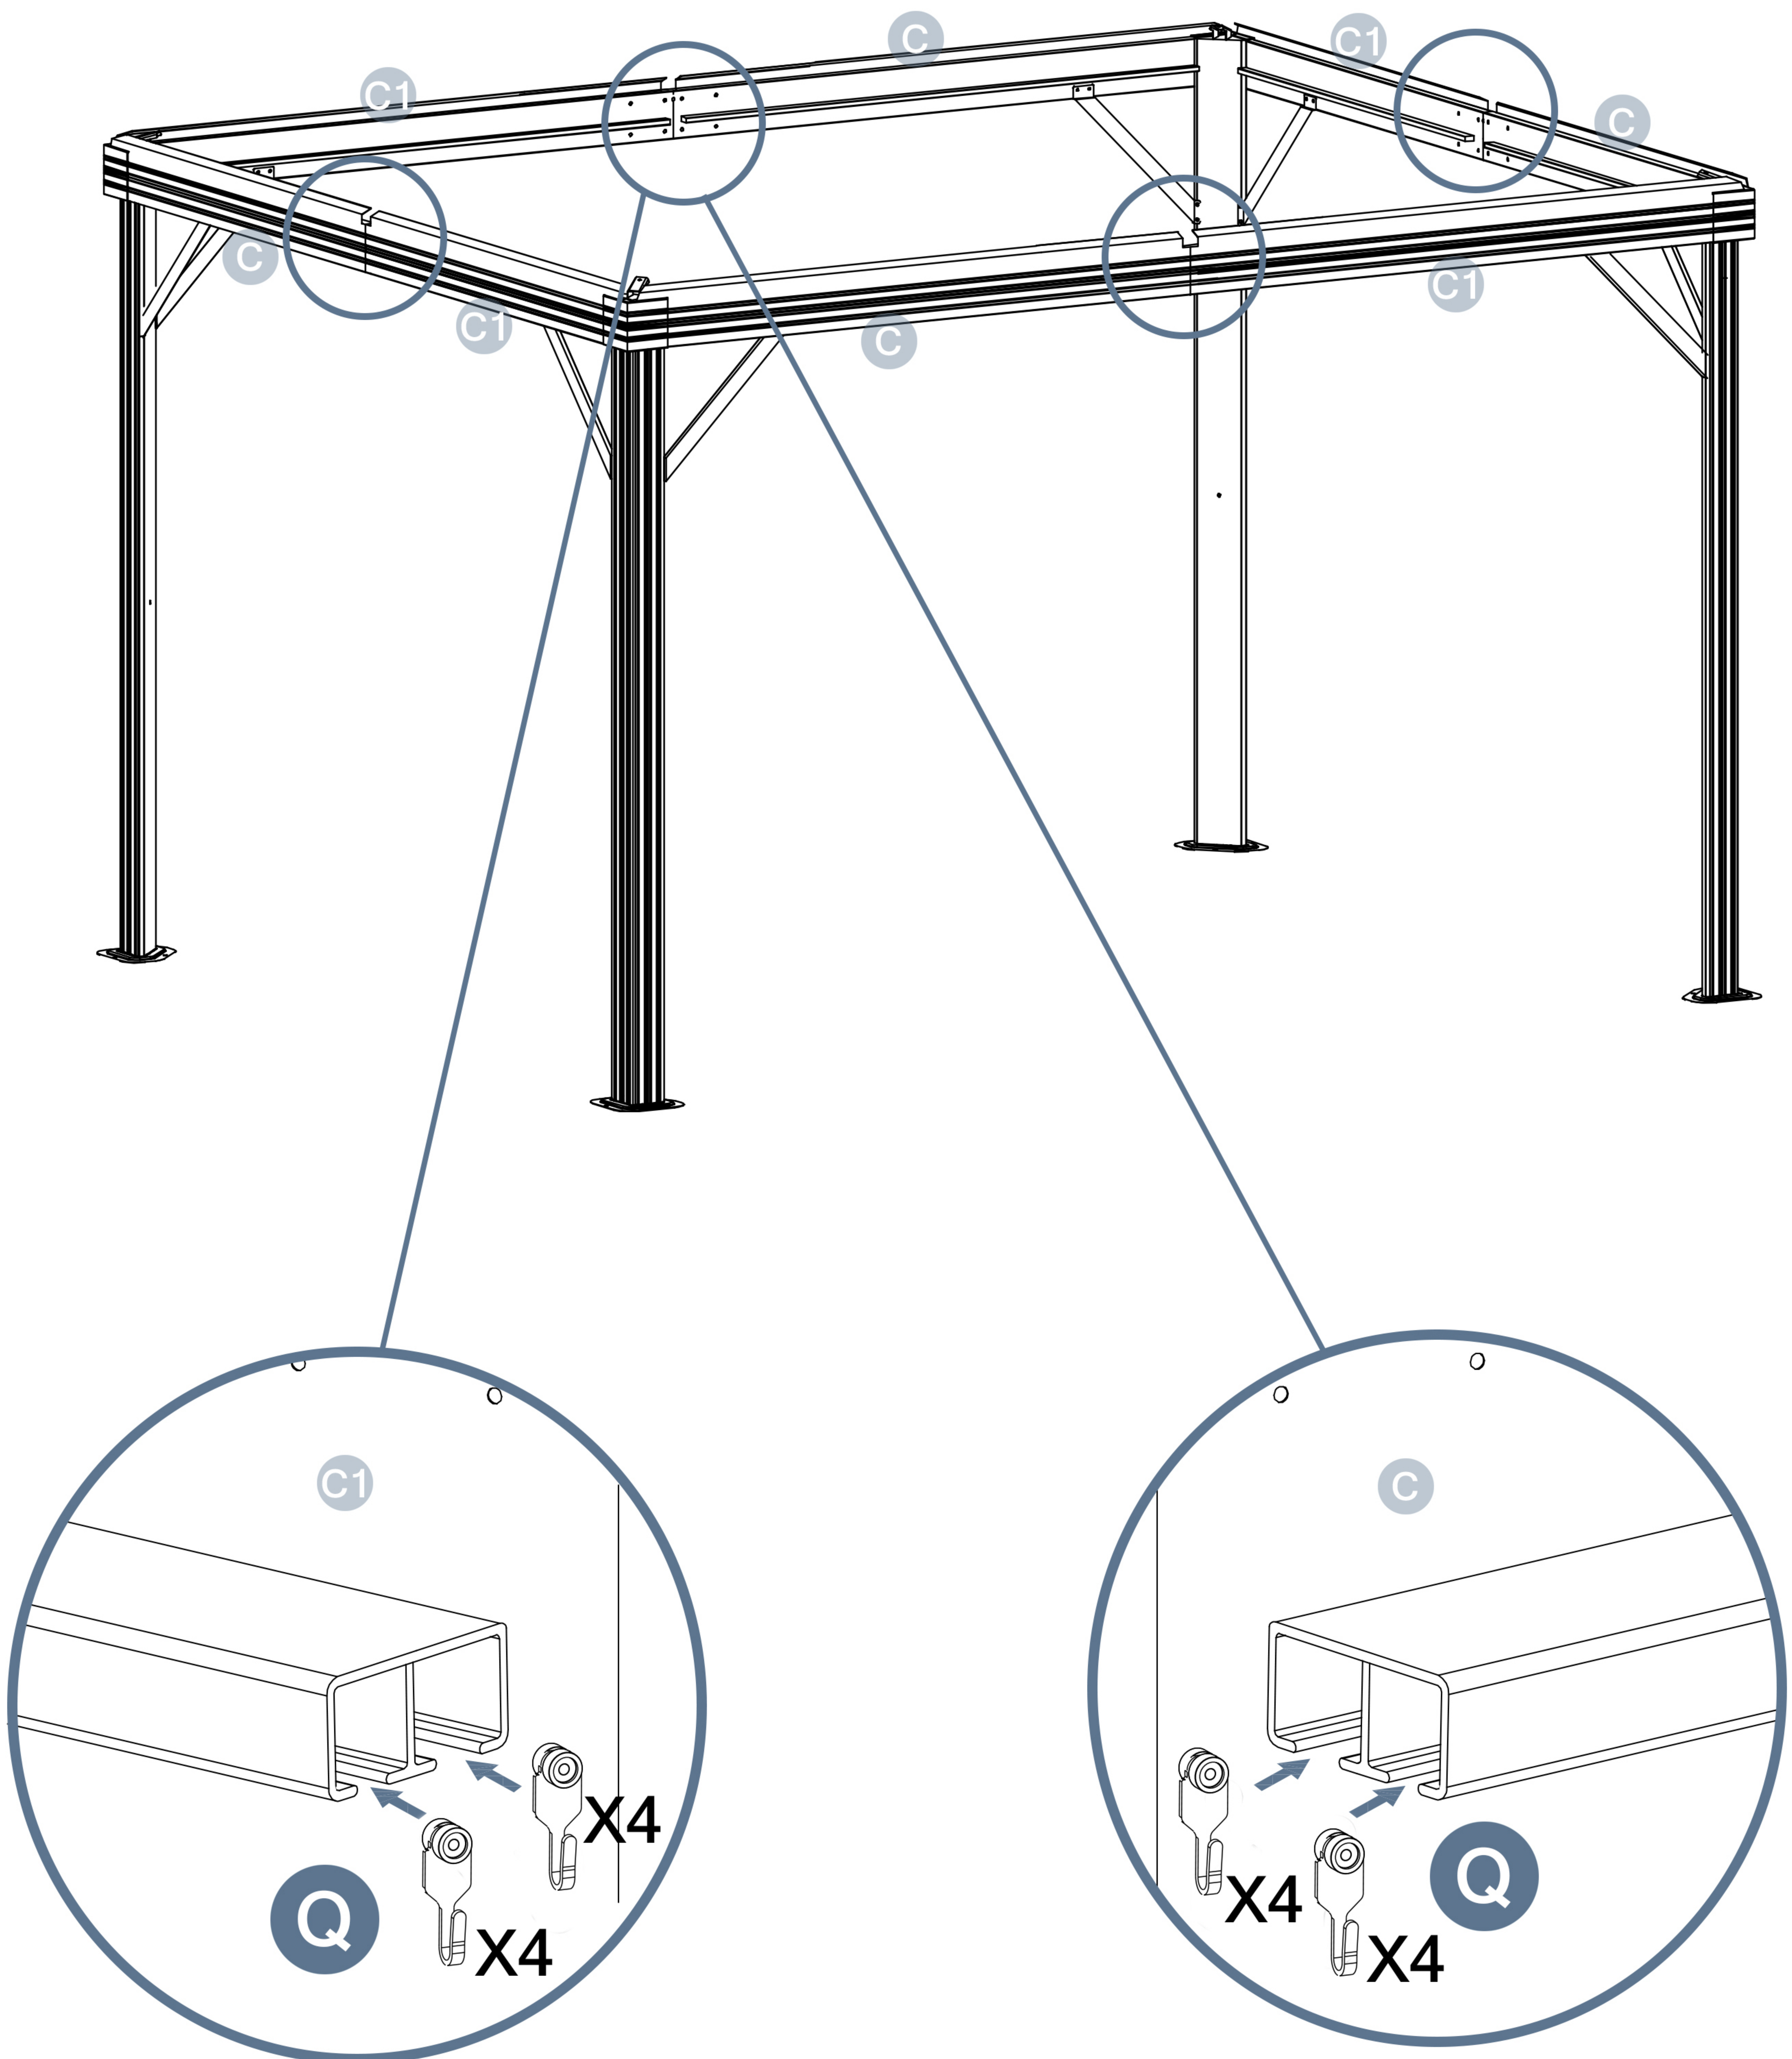


STEP 6


Parts required



J2 4pcs



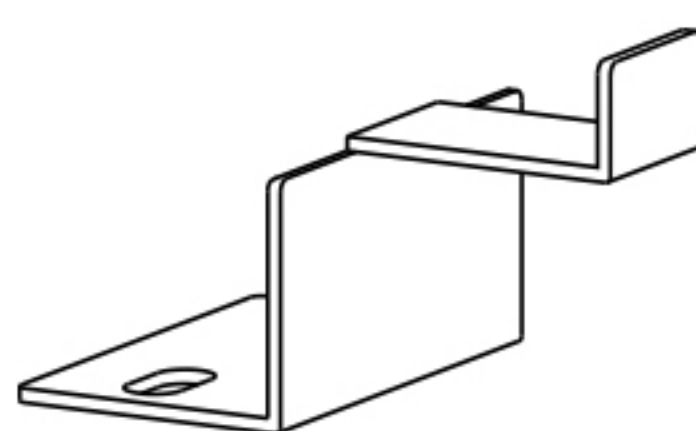


M6 4pcs

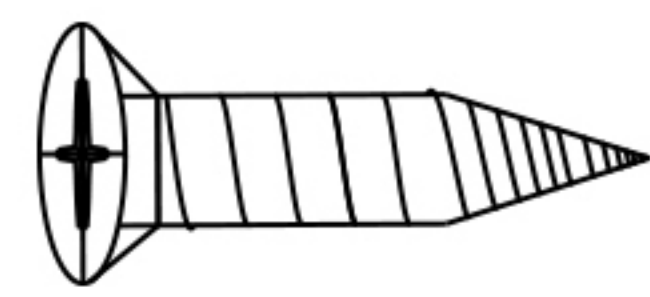

X4 16pcs

1 → 2

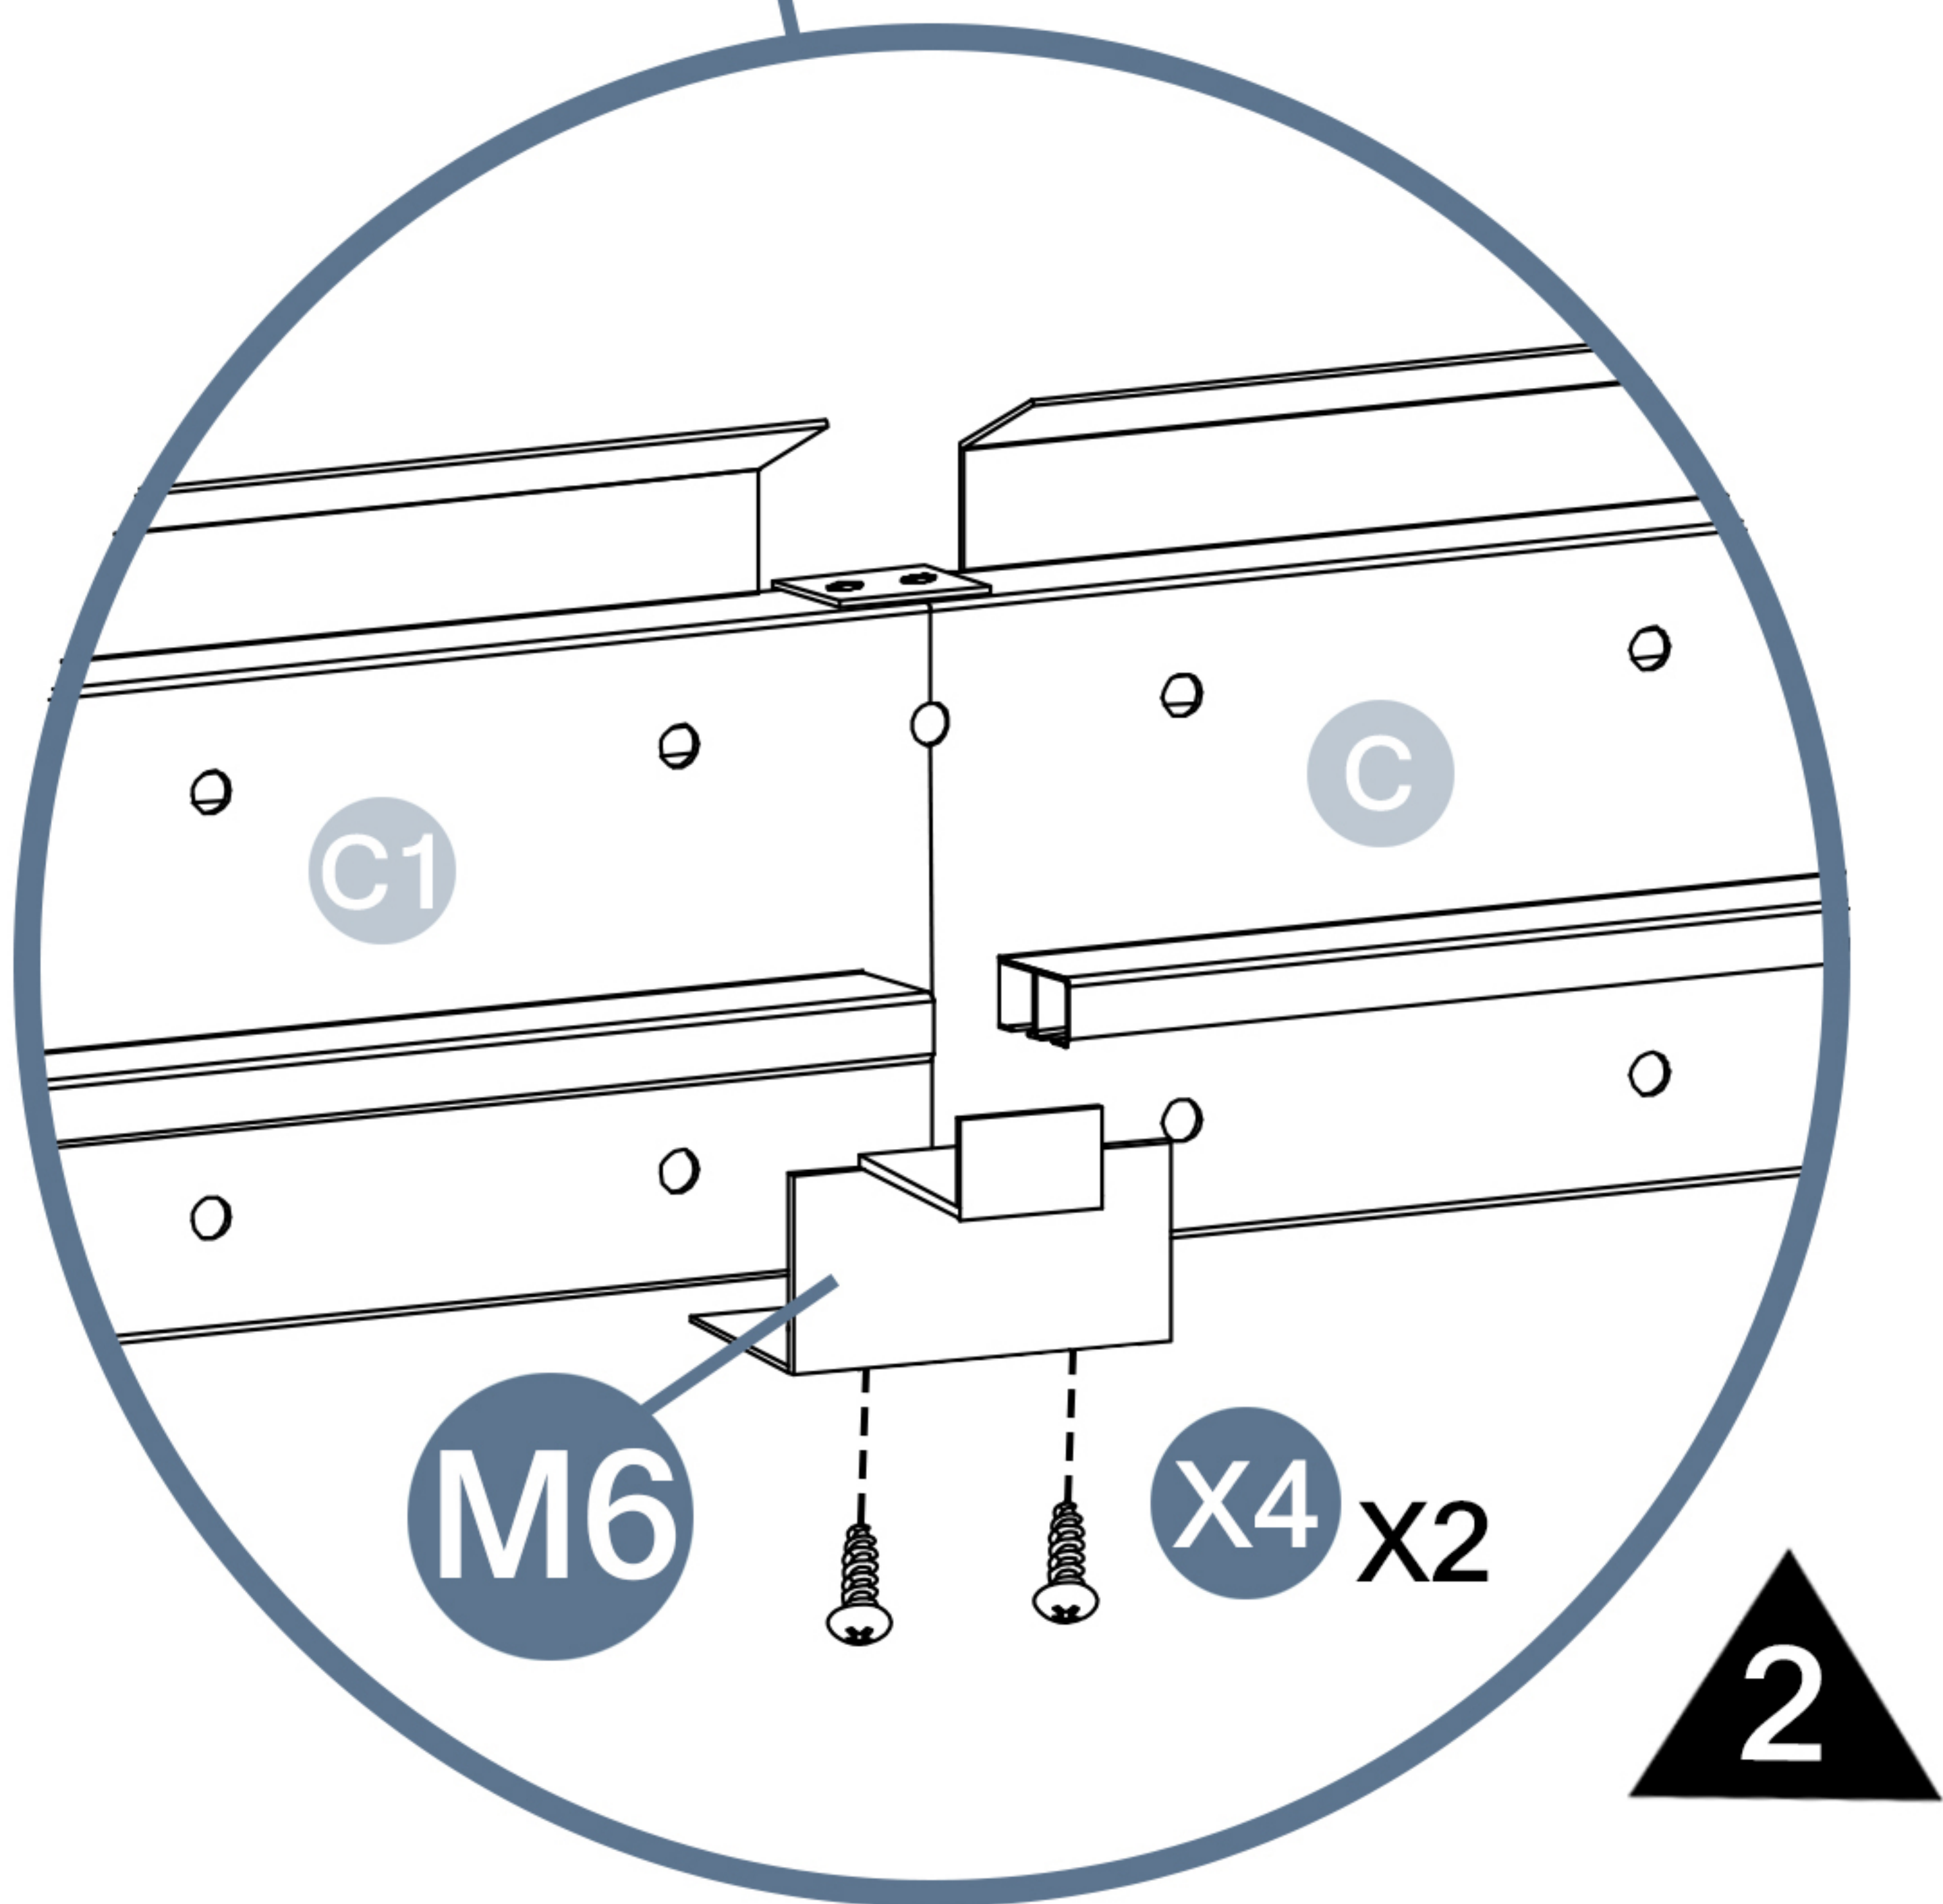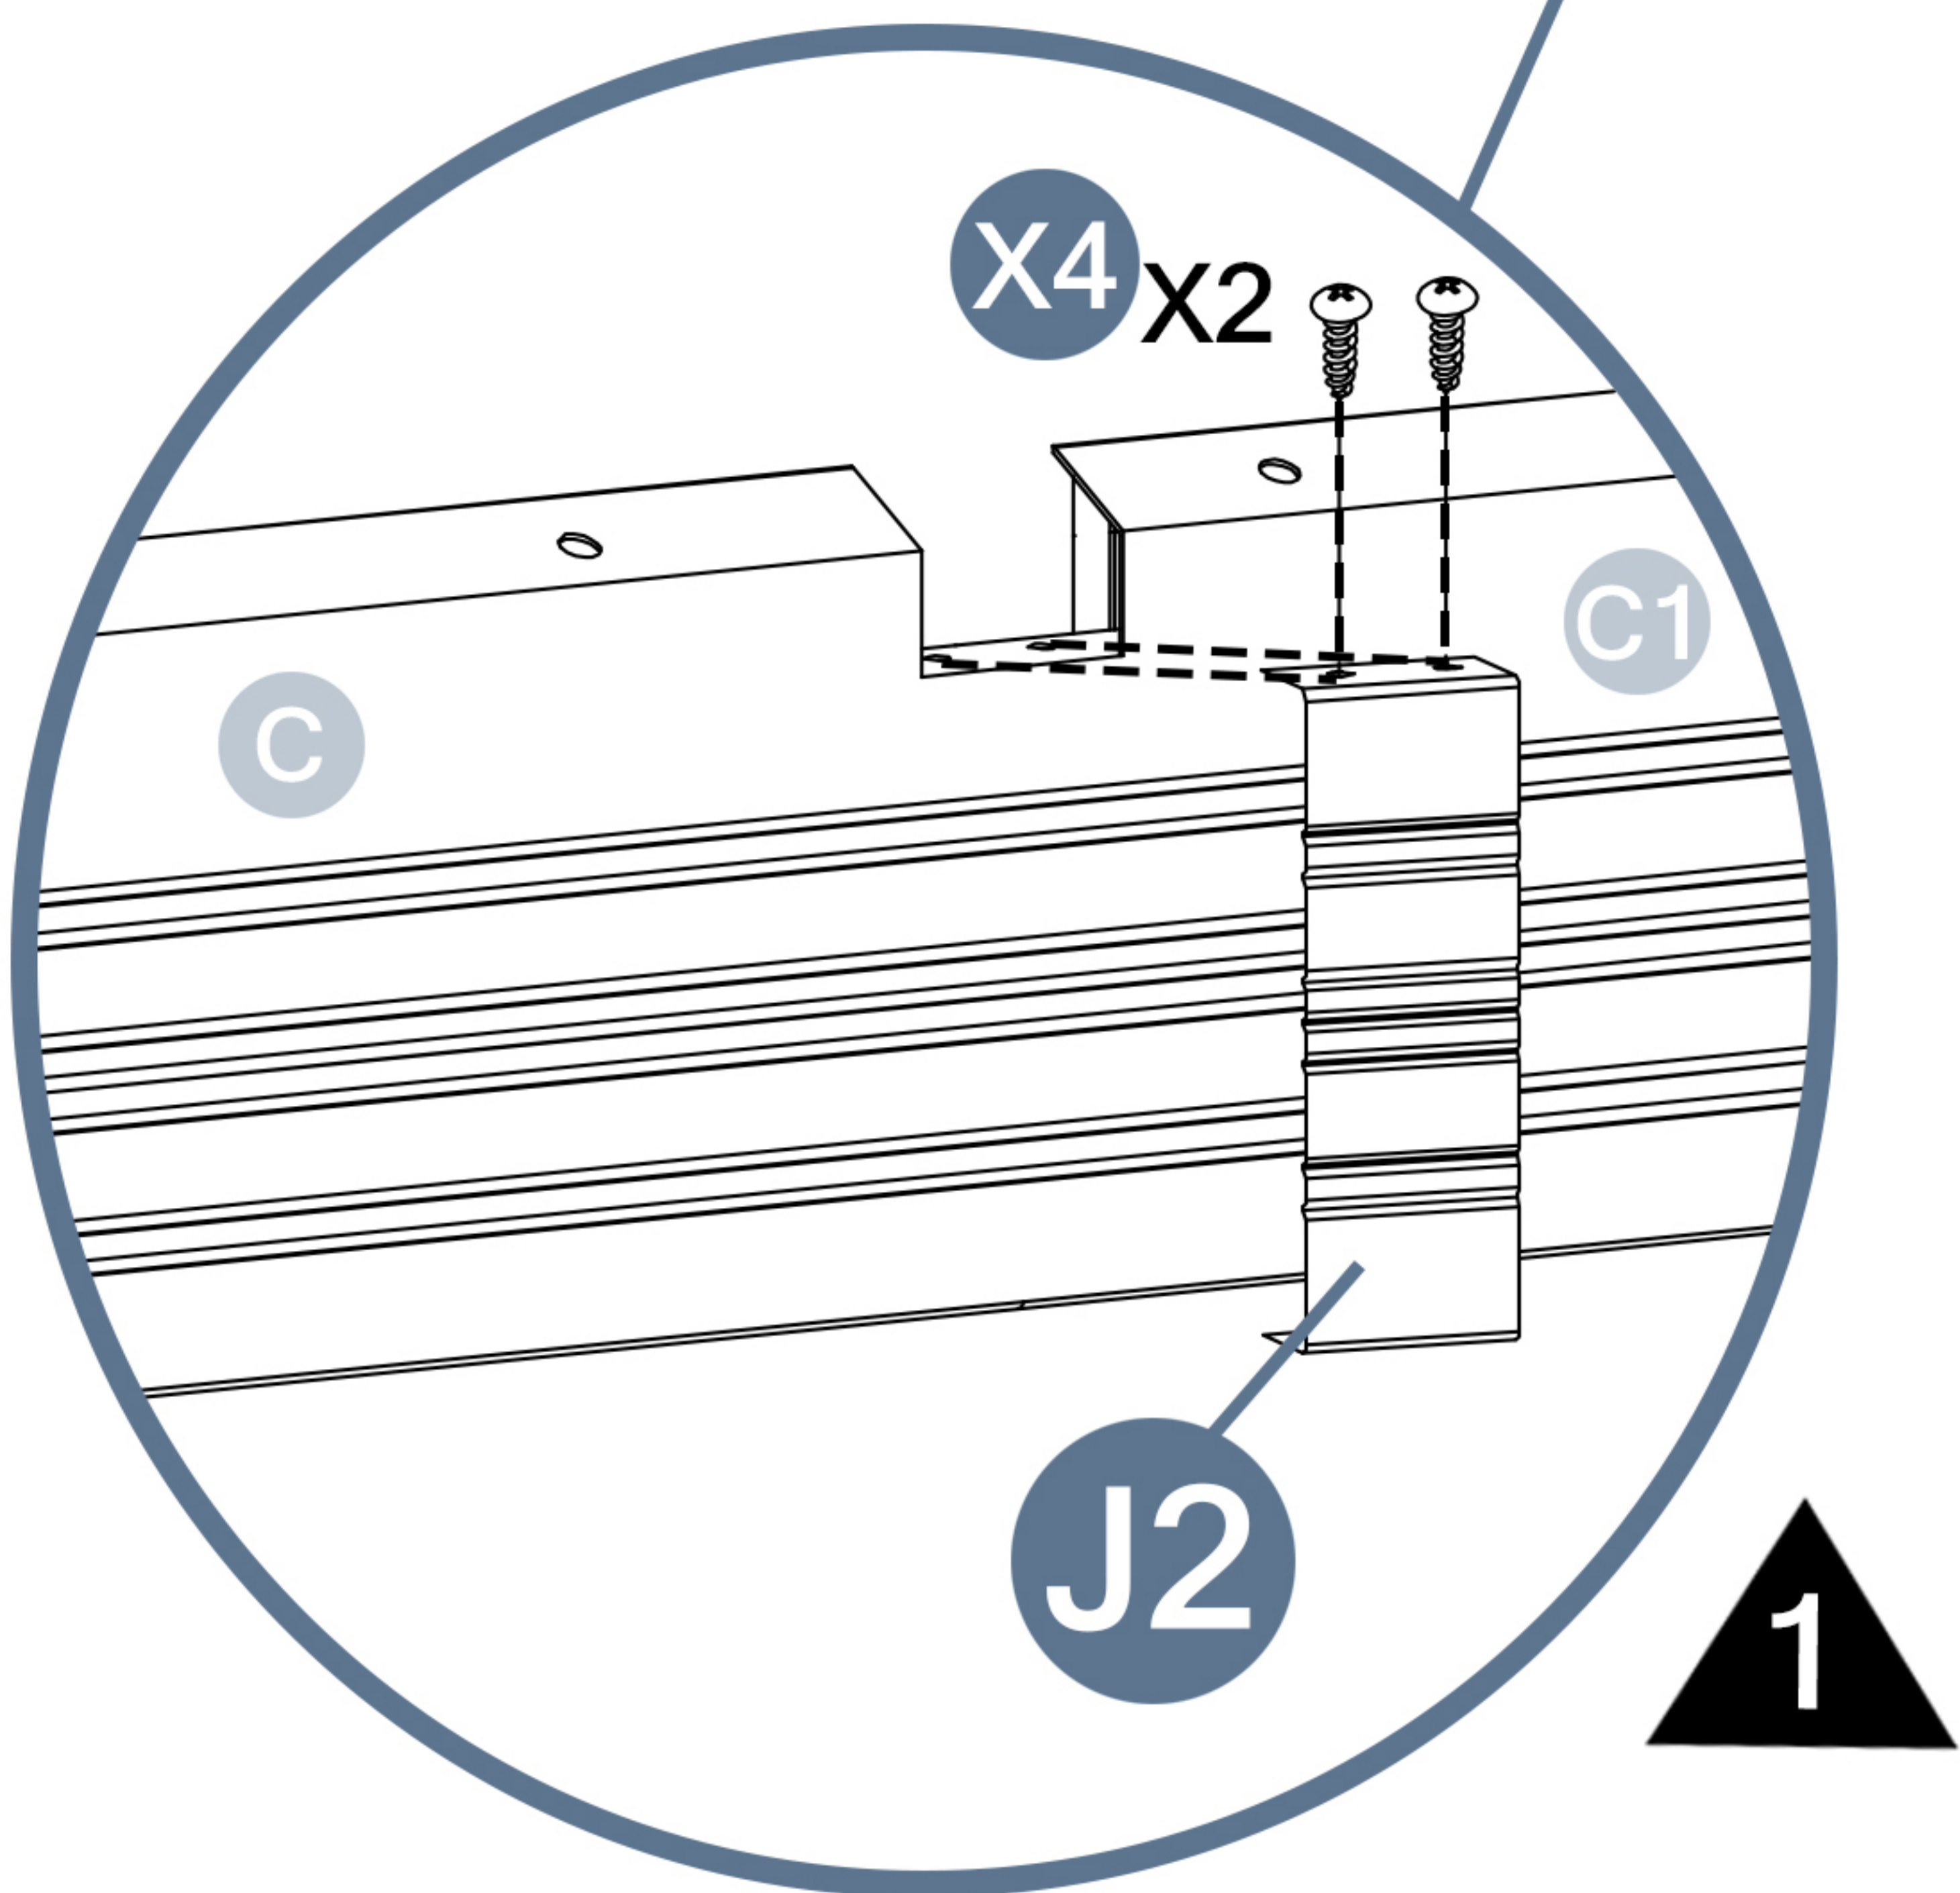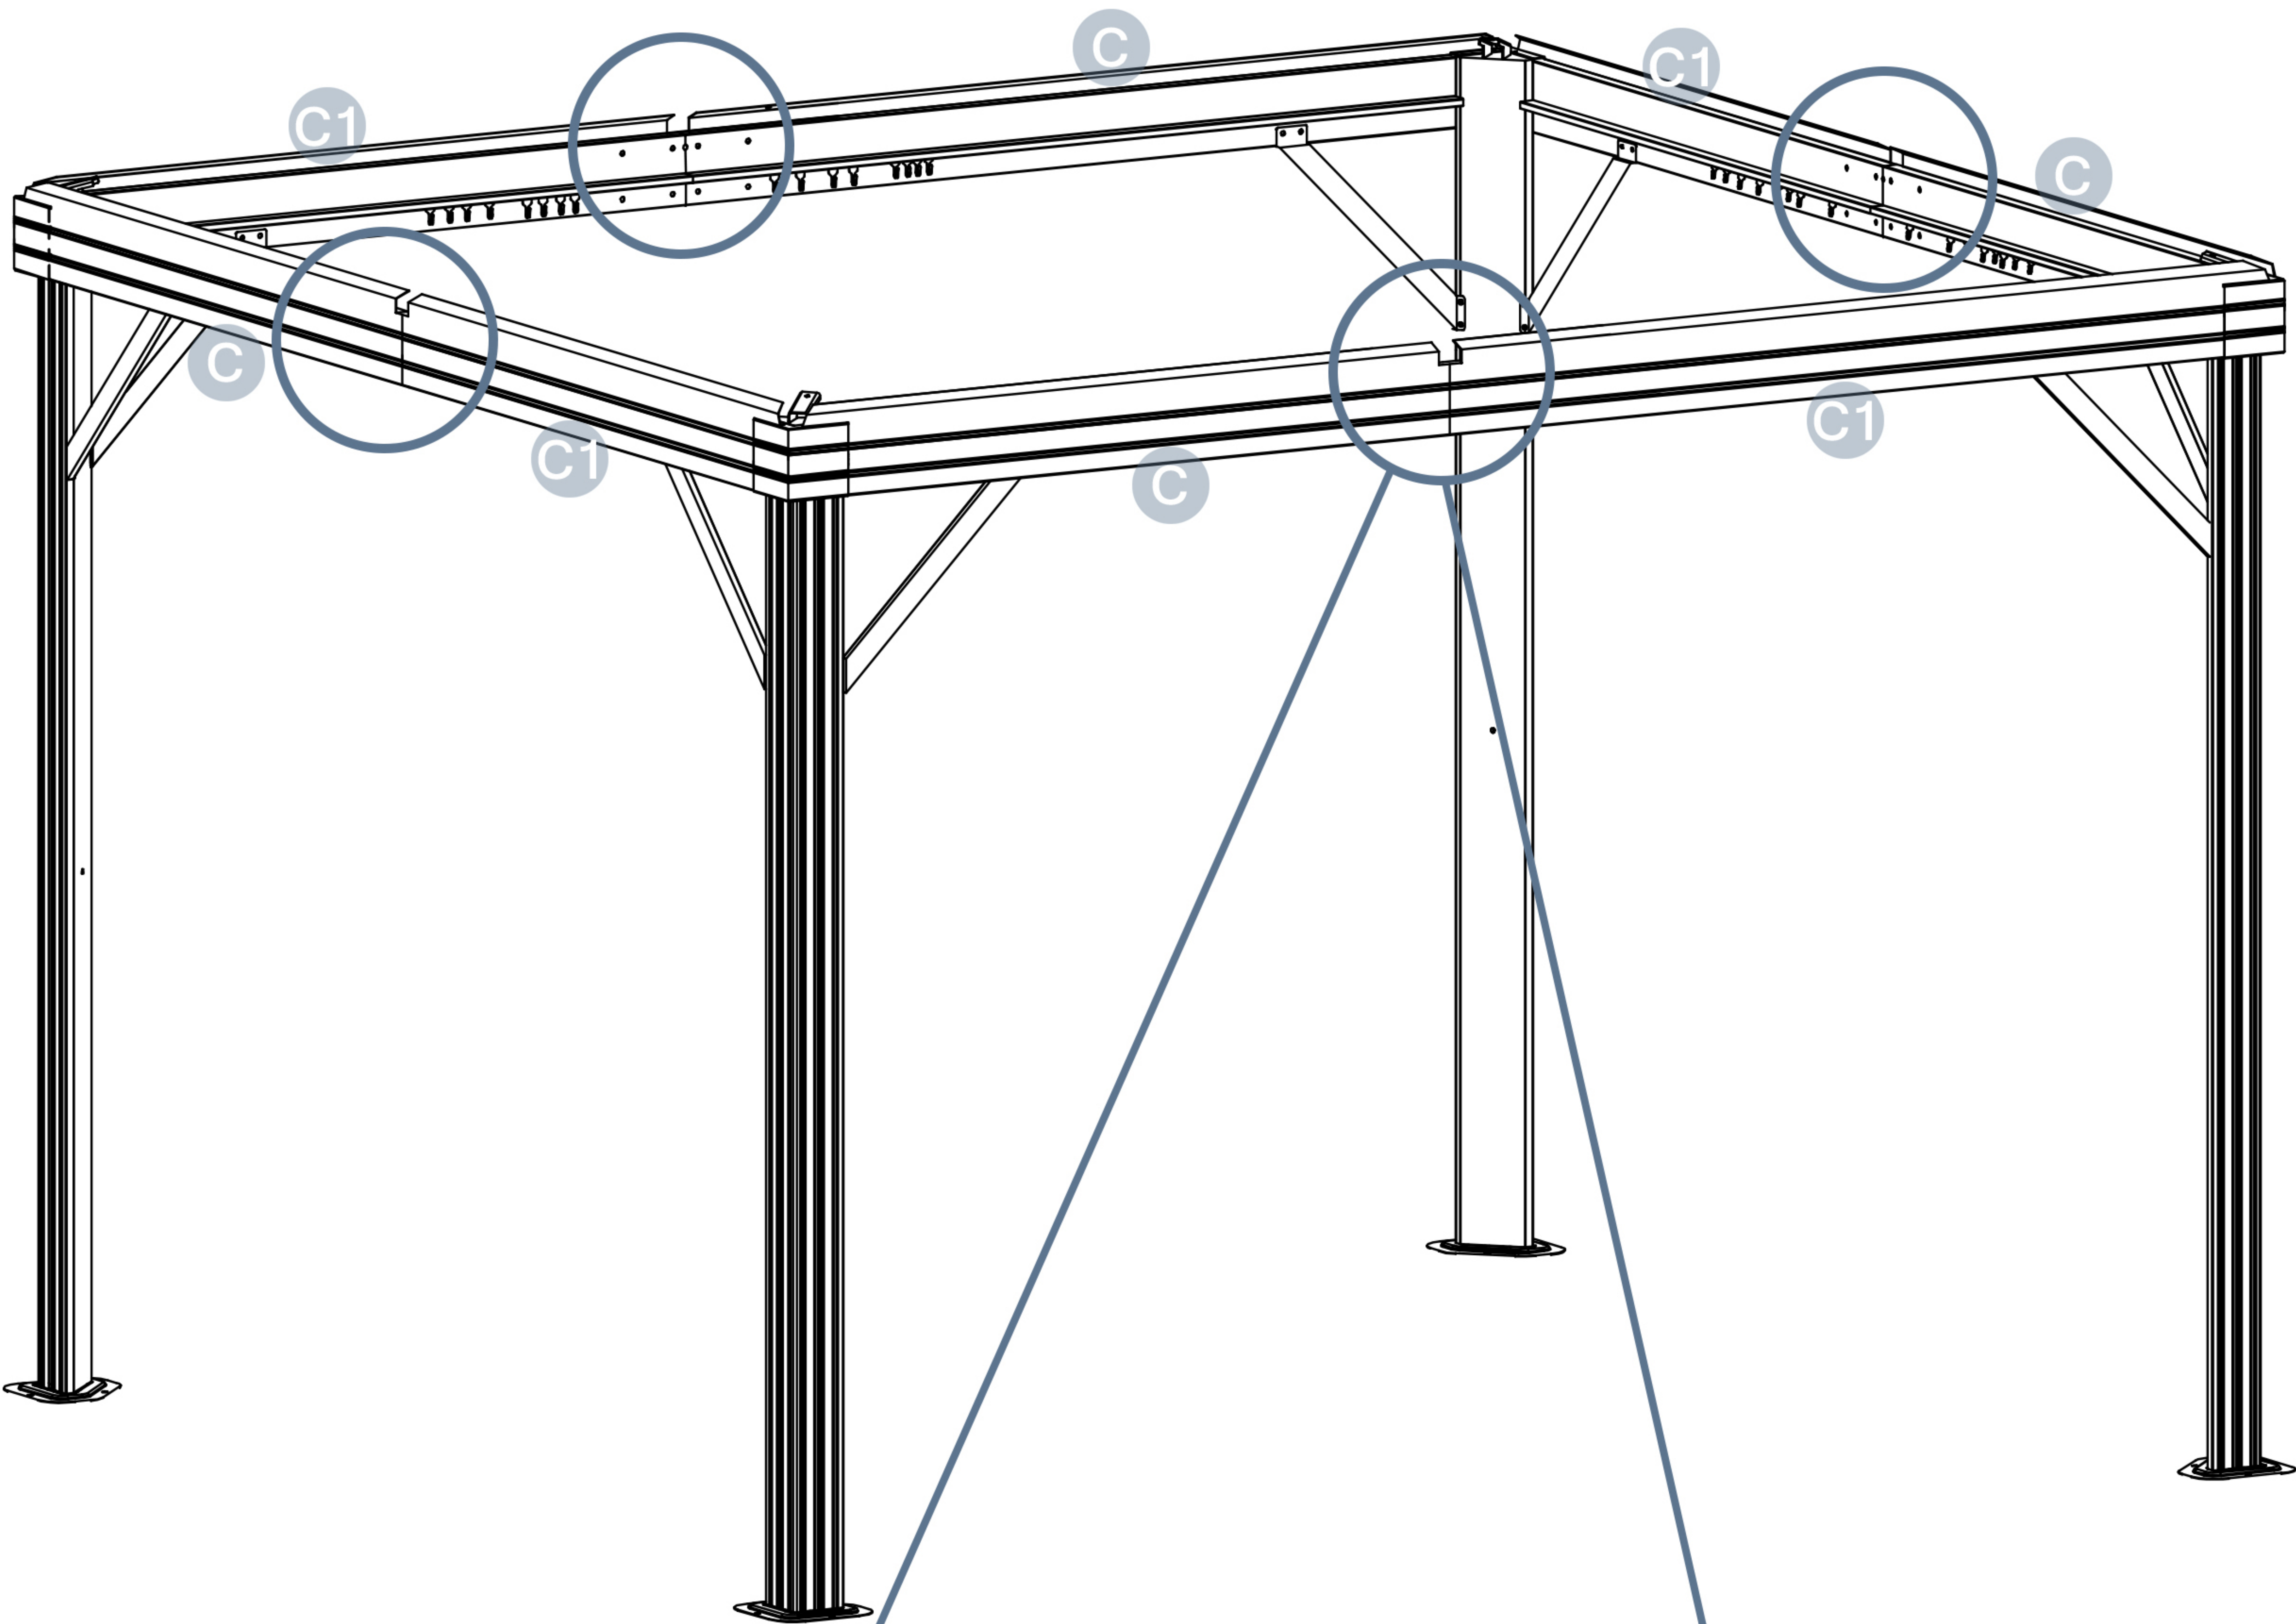


STEP 7


Parts required





D 4pcs

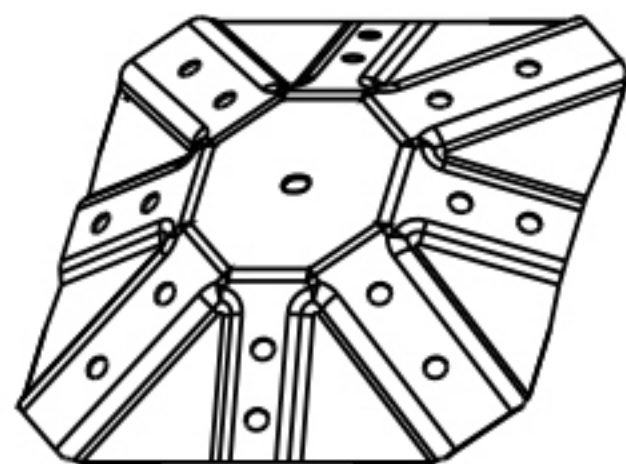

K1 1pcs

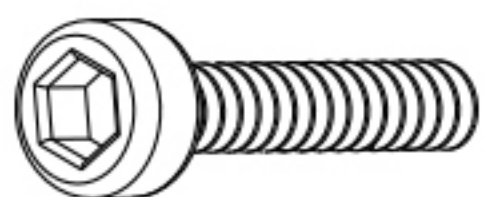


X1 8pcs

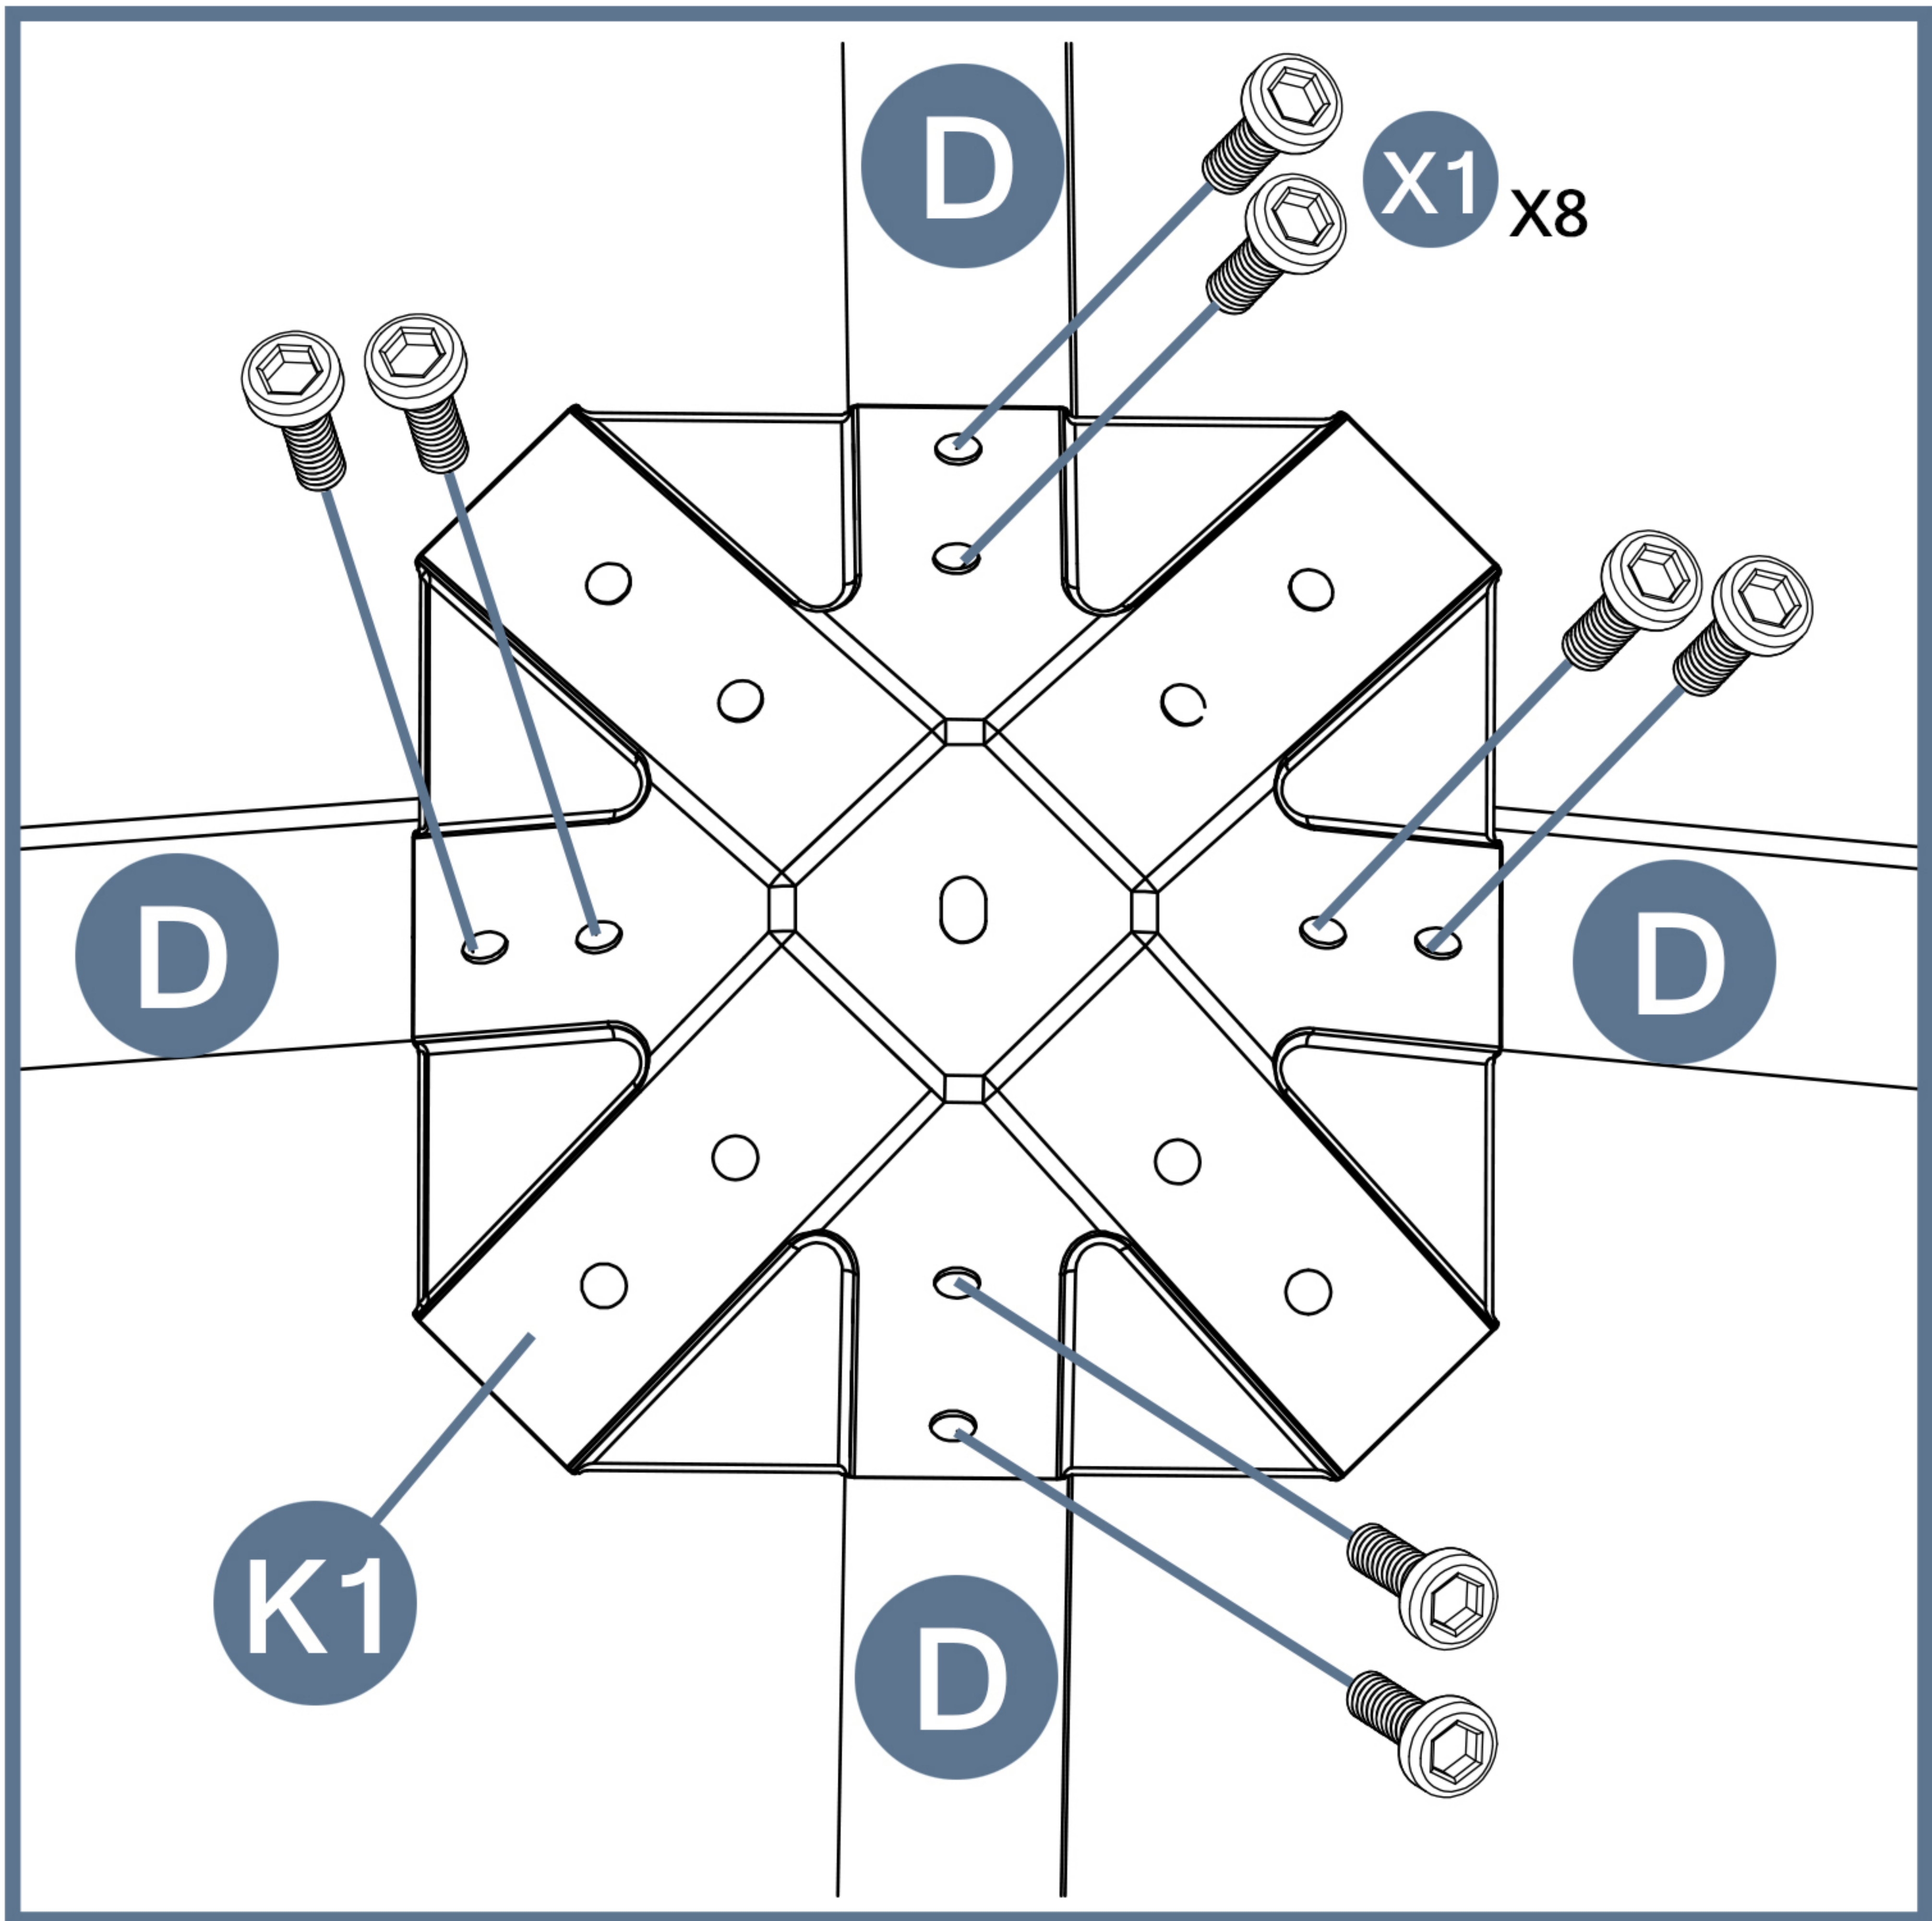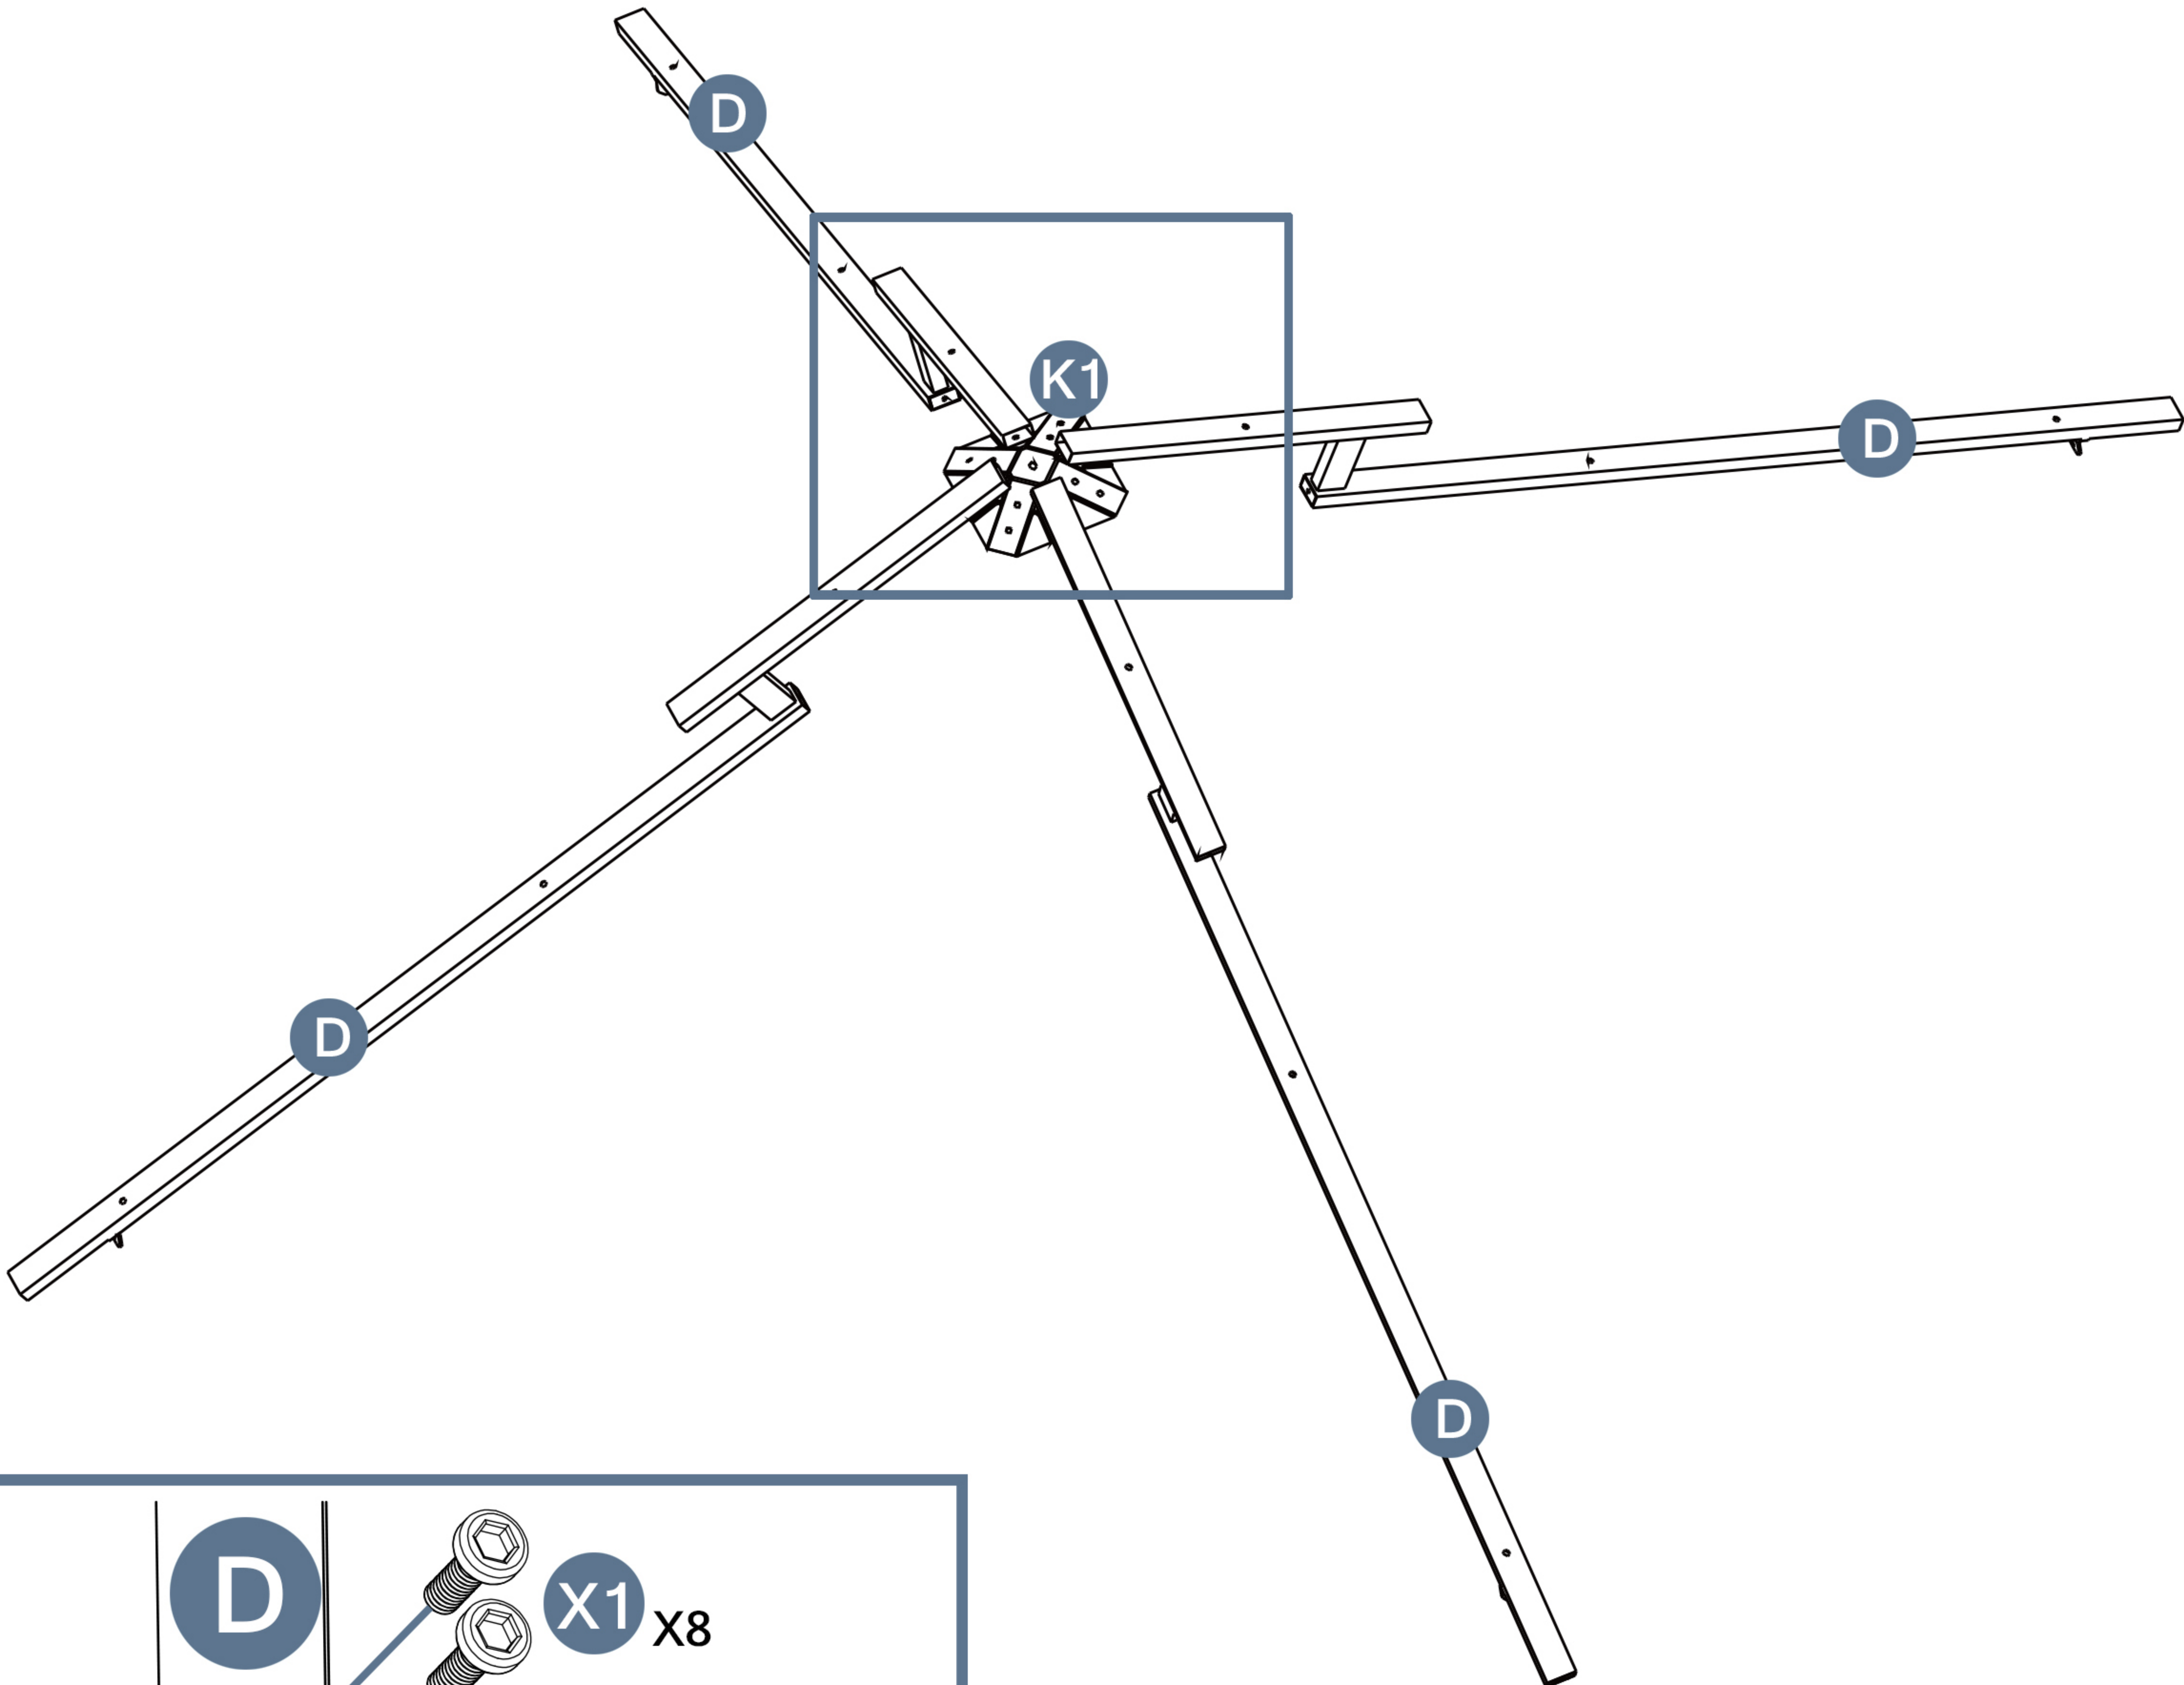


STEP 8

Parts required

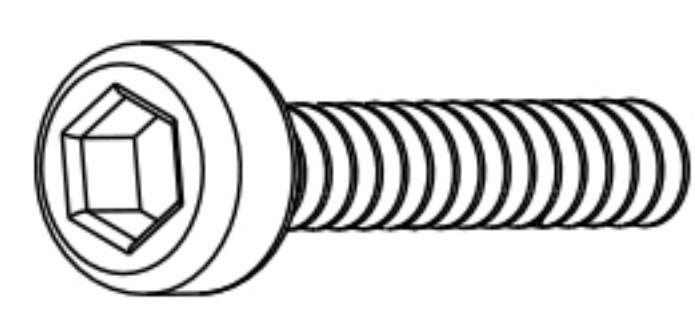

X1 4pcs

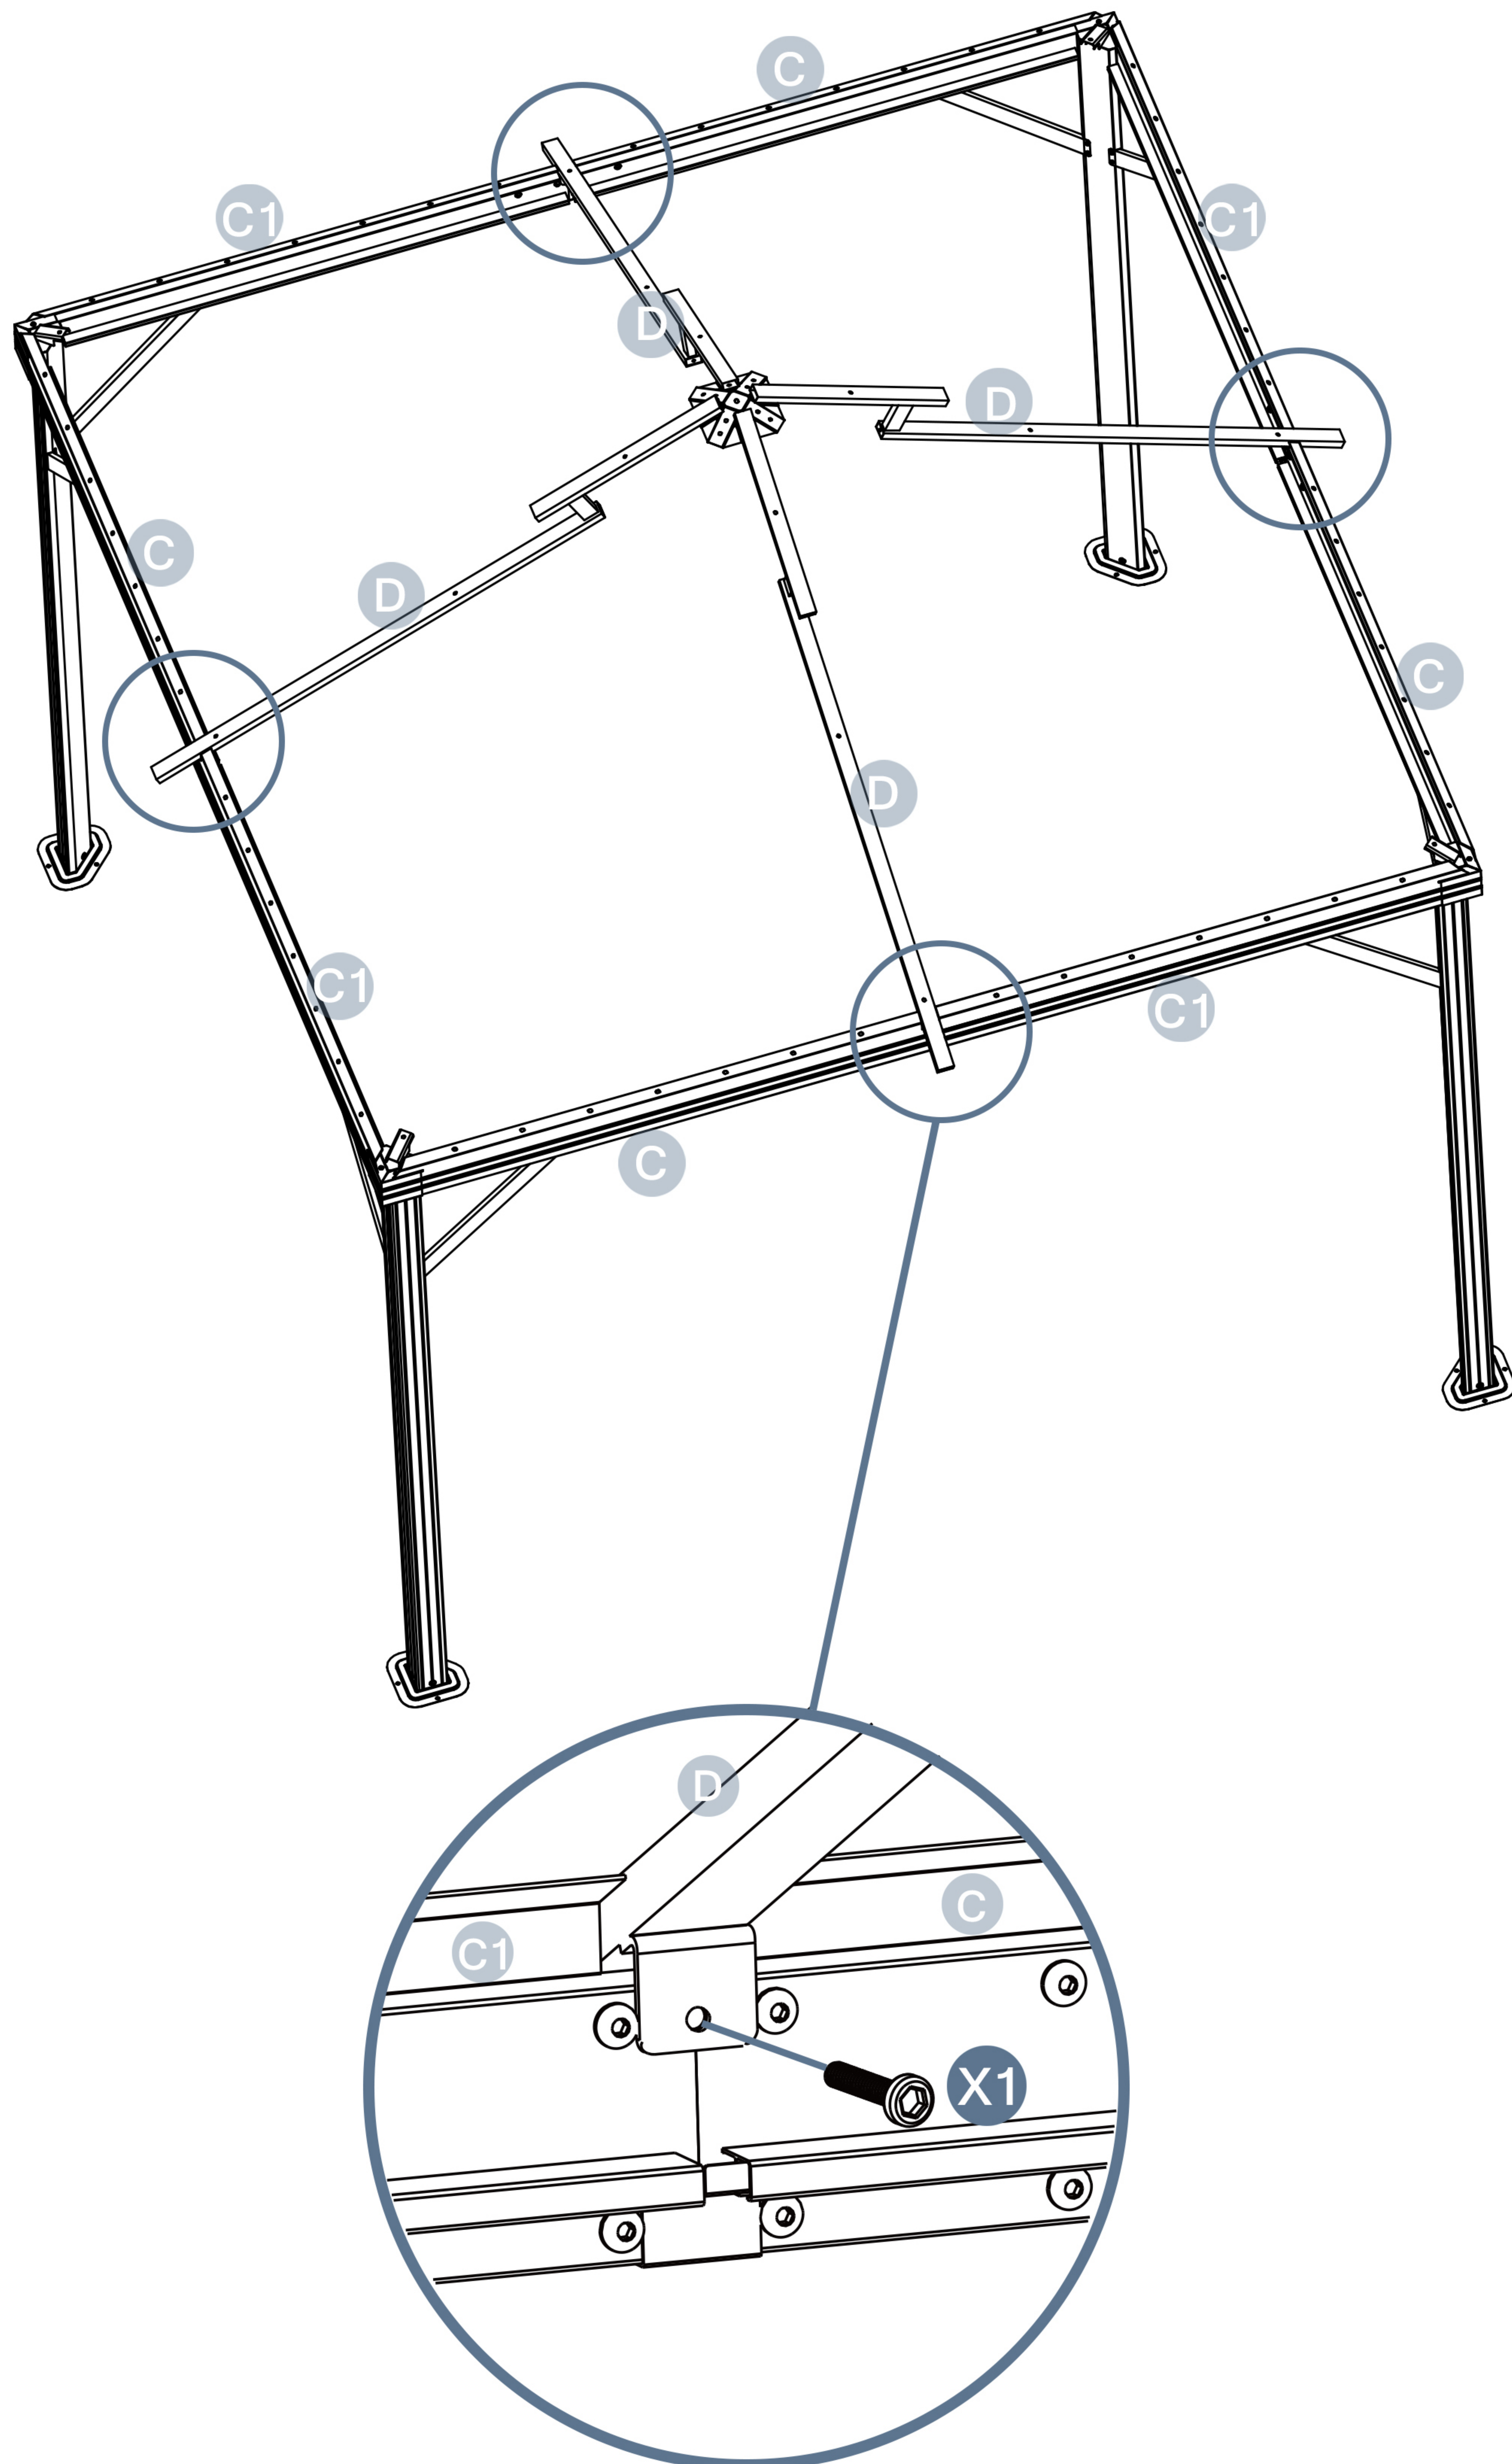


STEP9

Parts required





E 4pcs

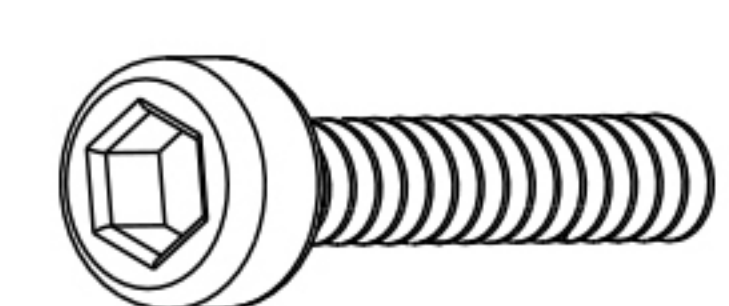


X1 12pcs

1 → 2

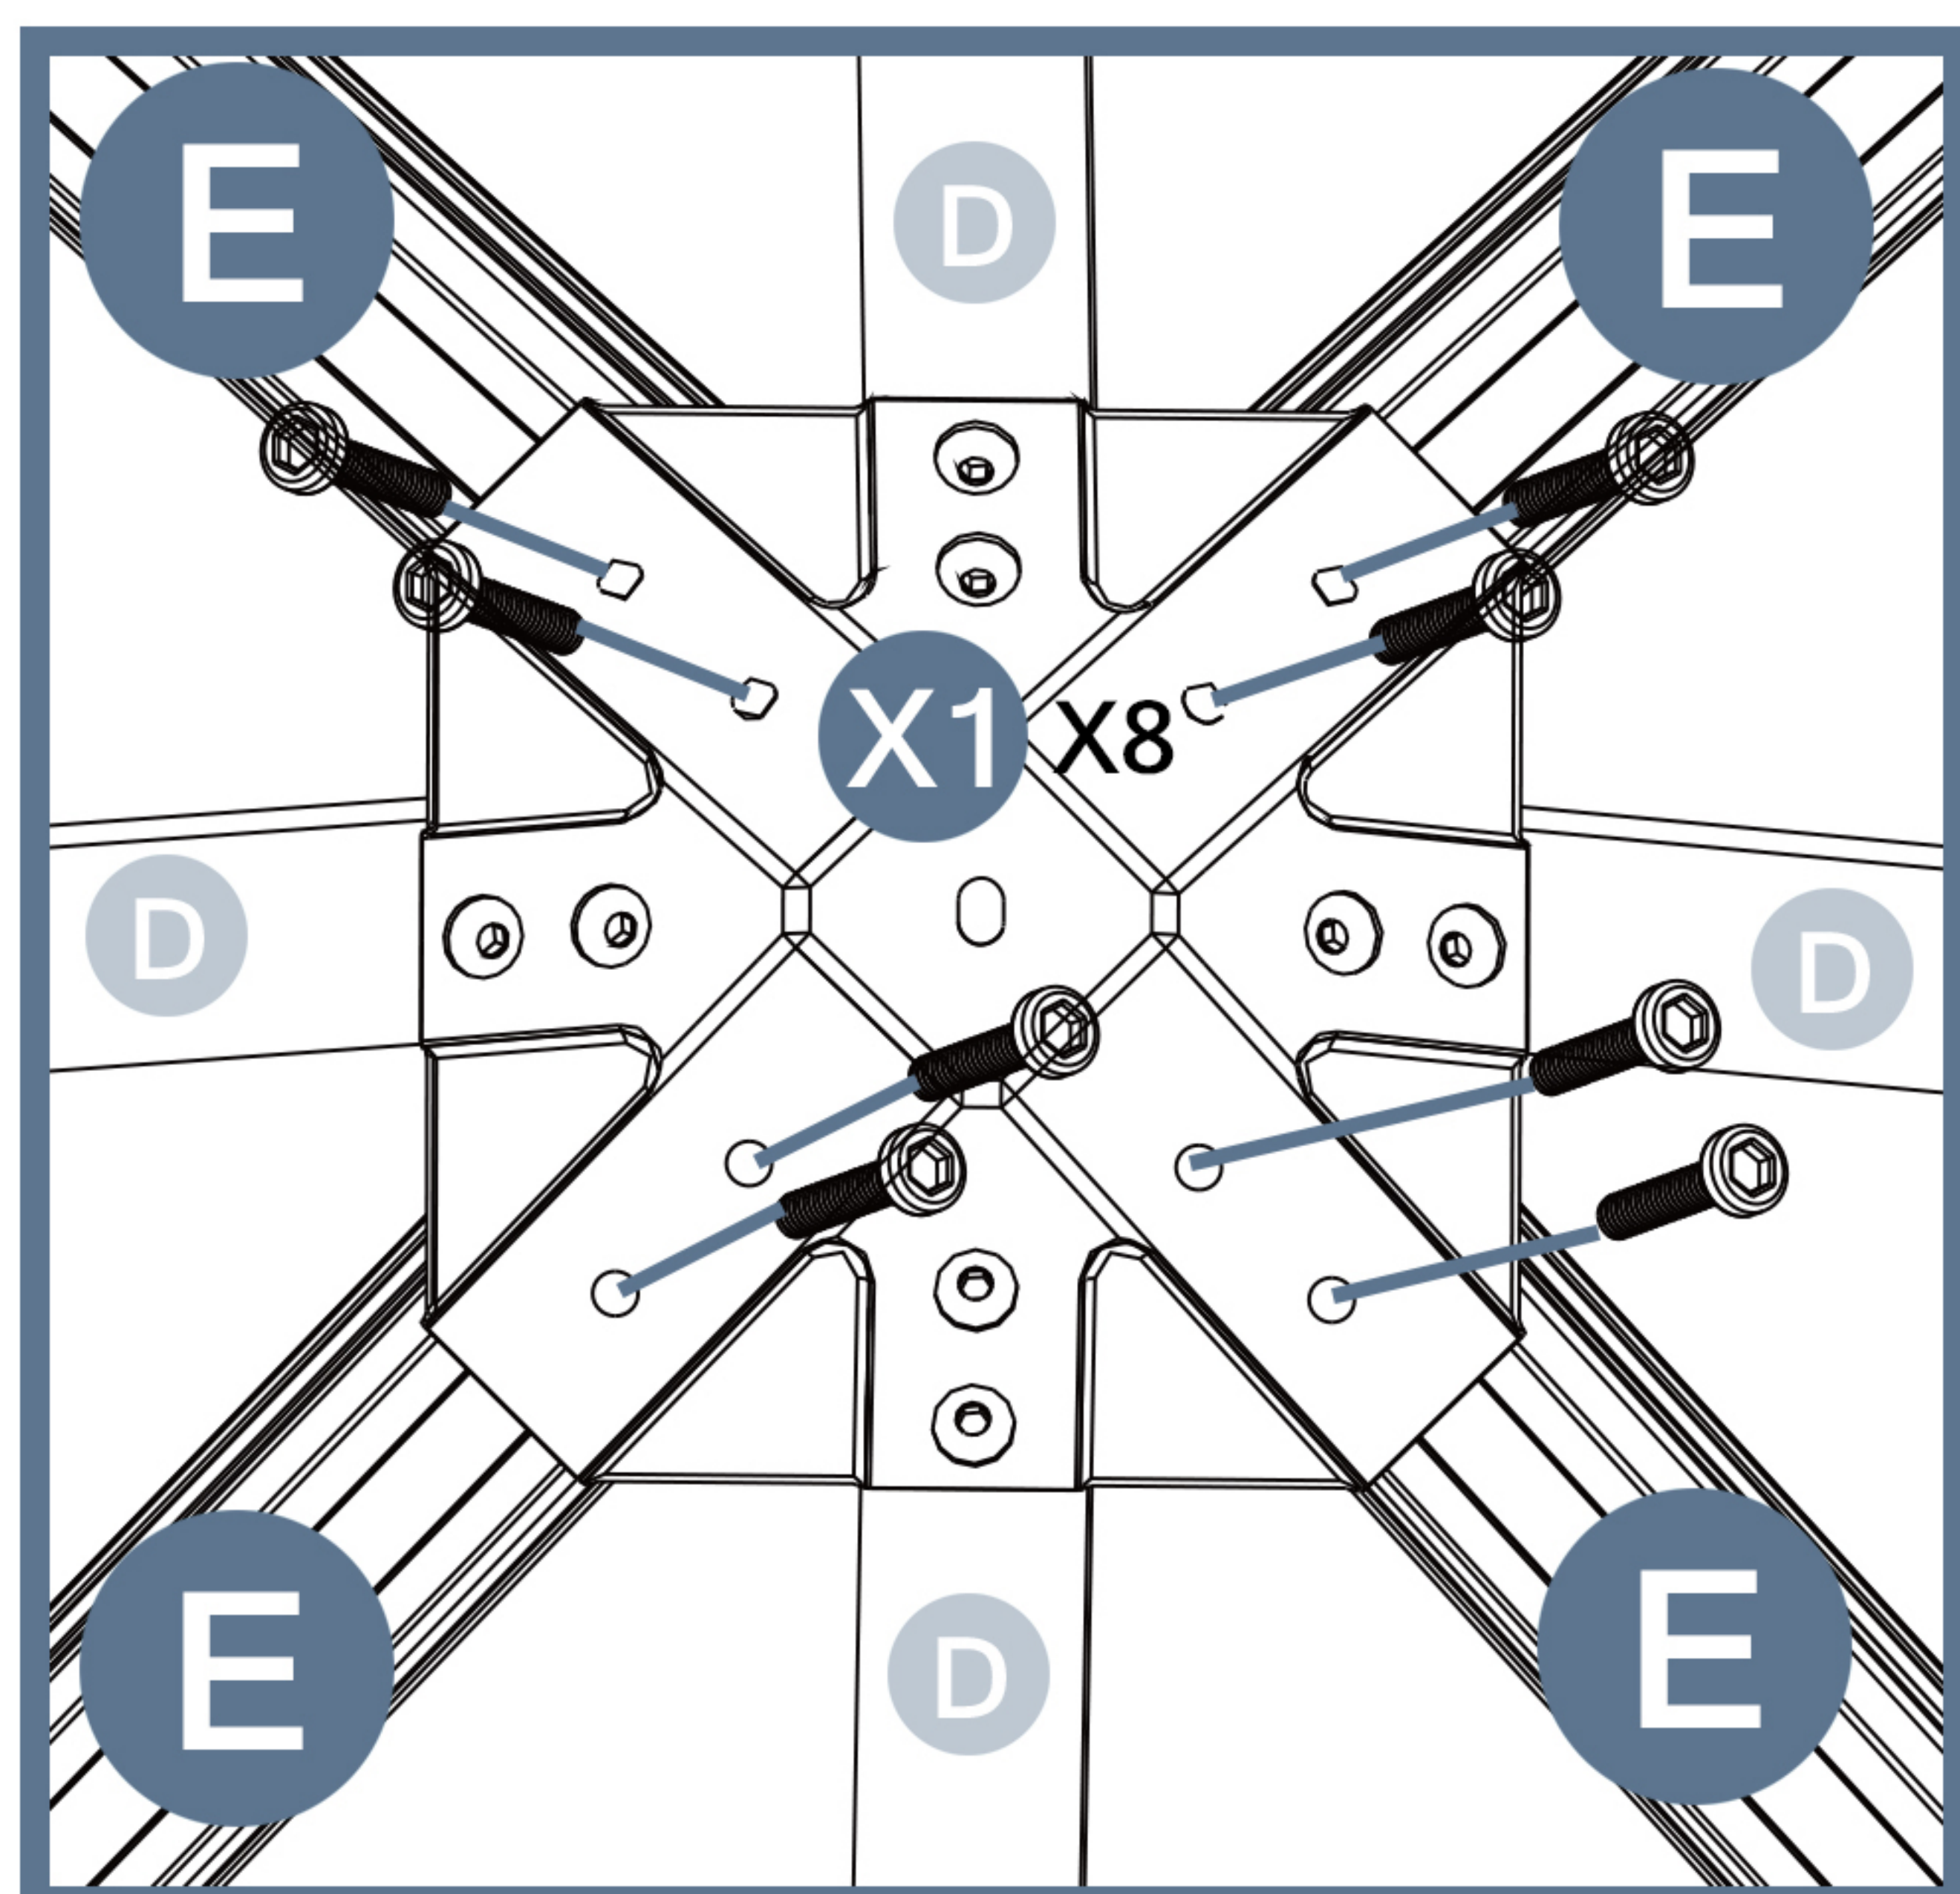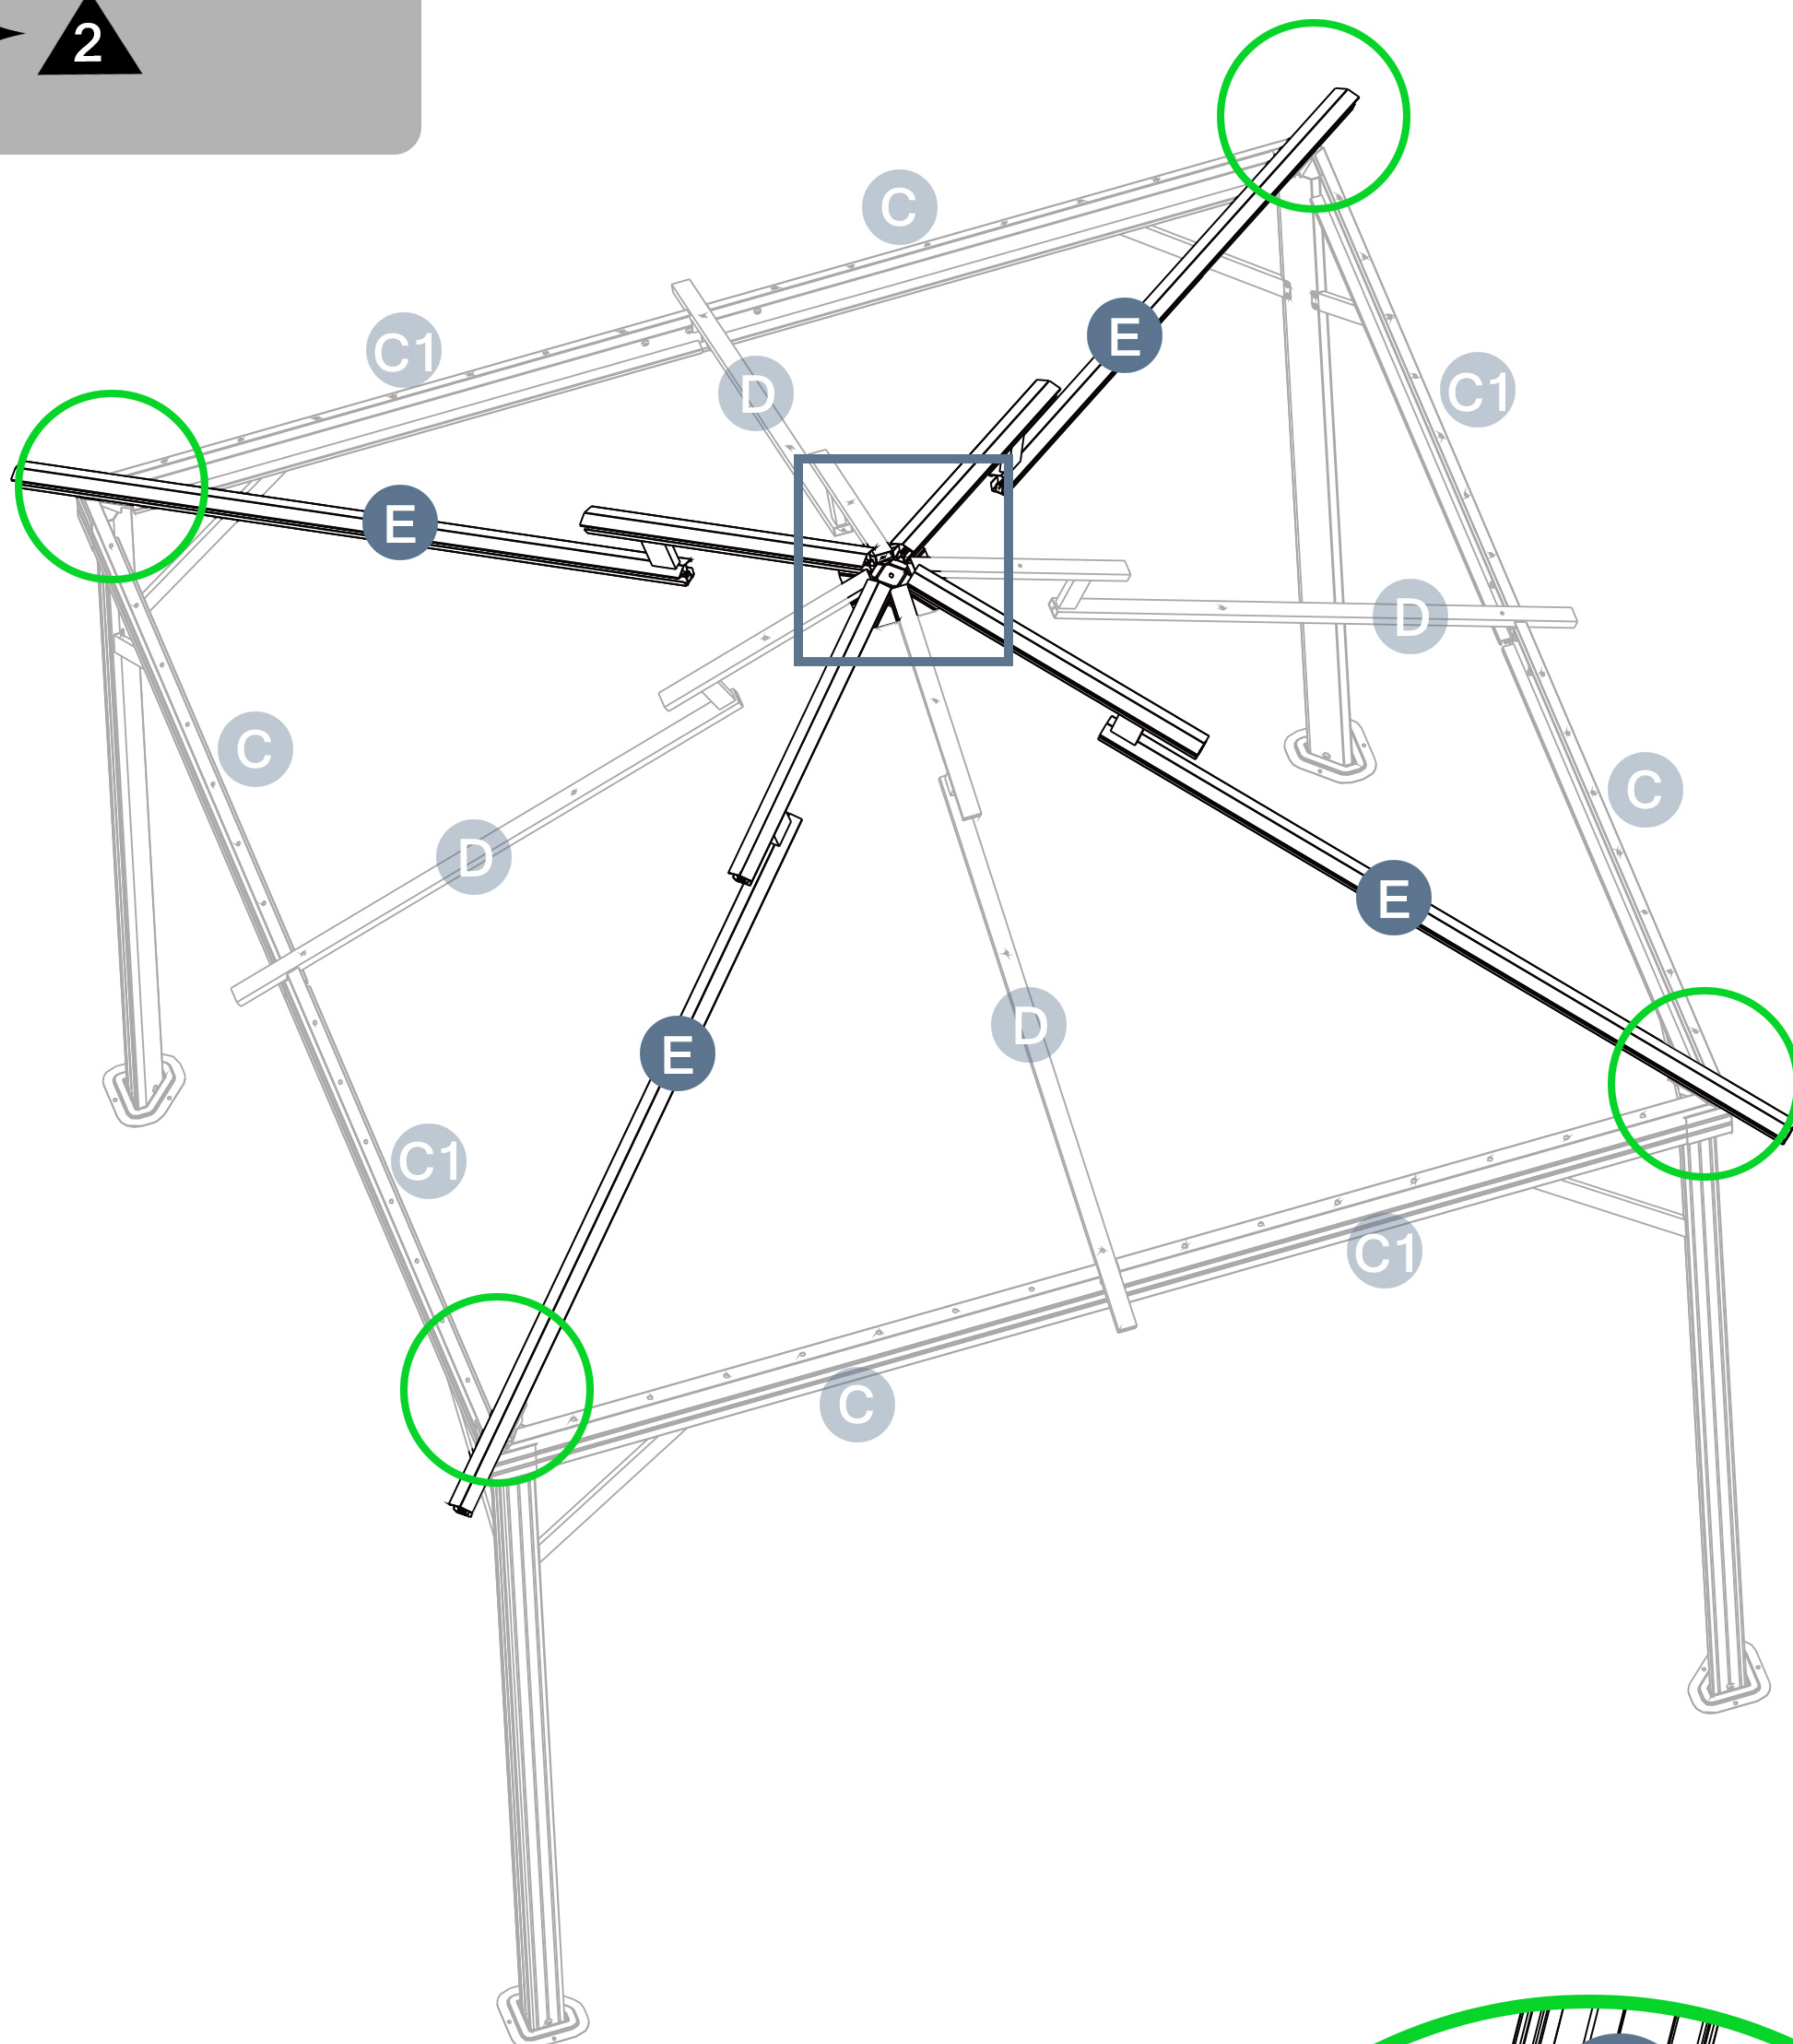


1

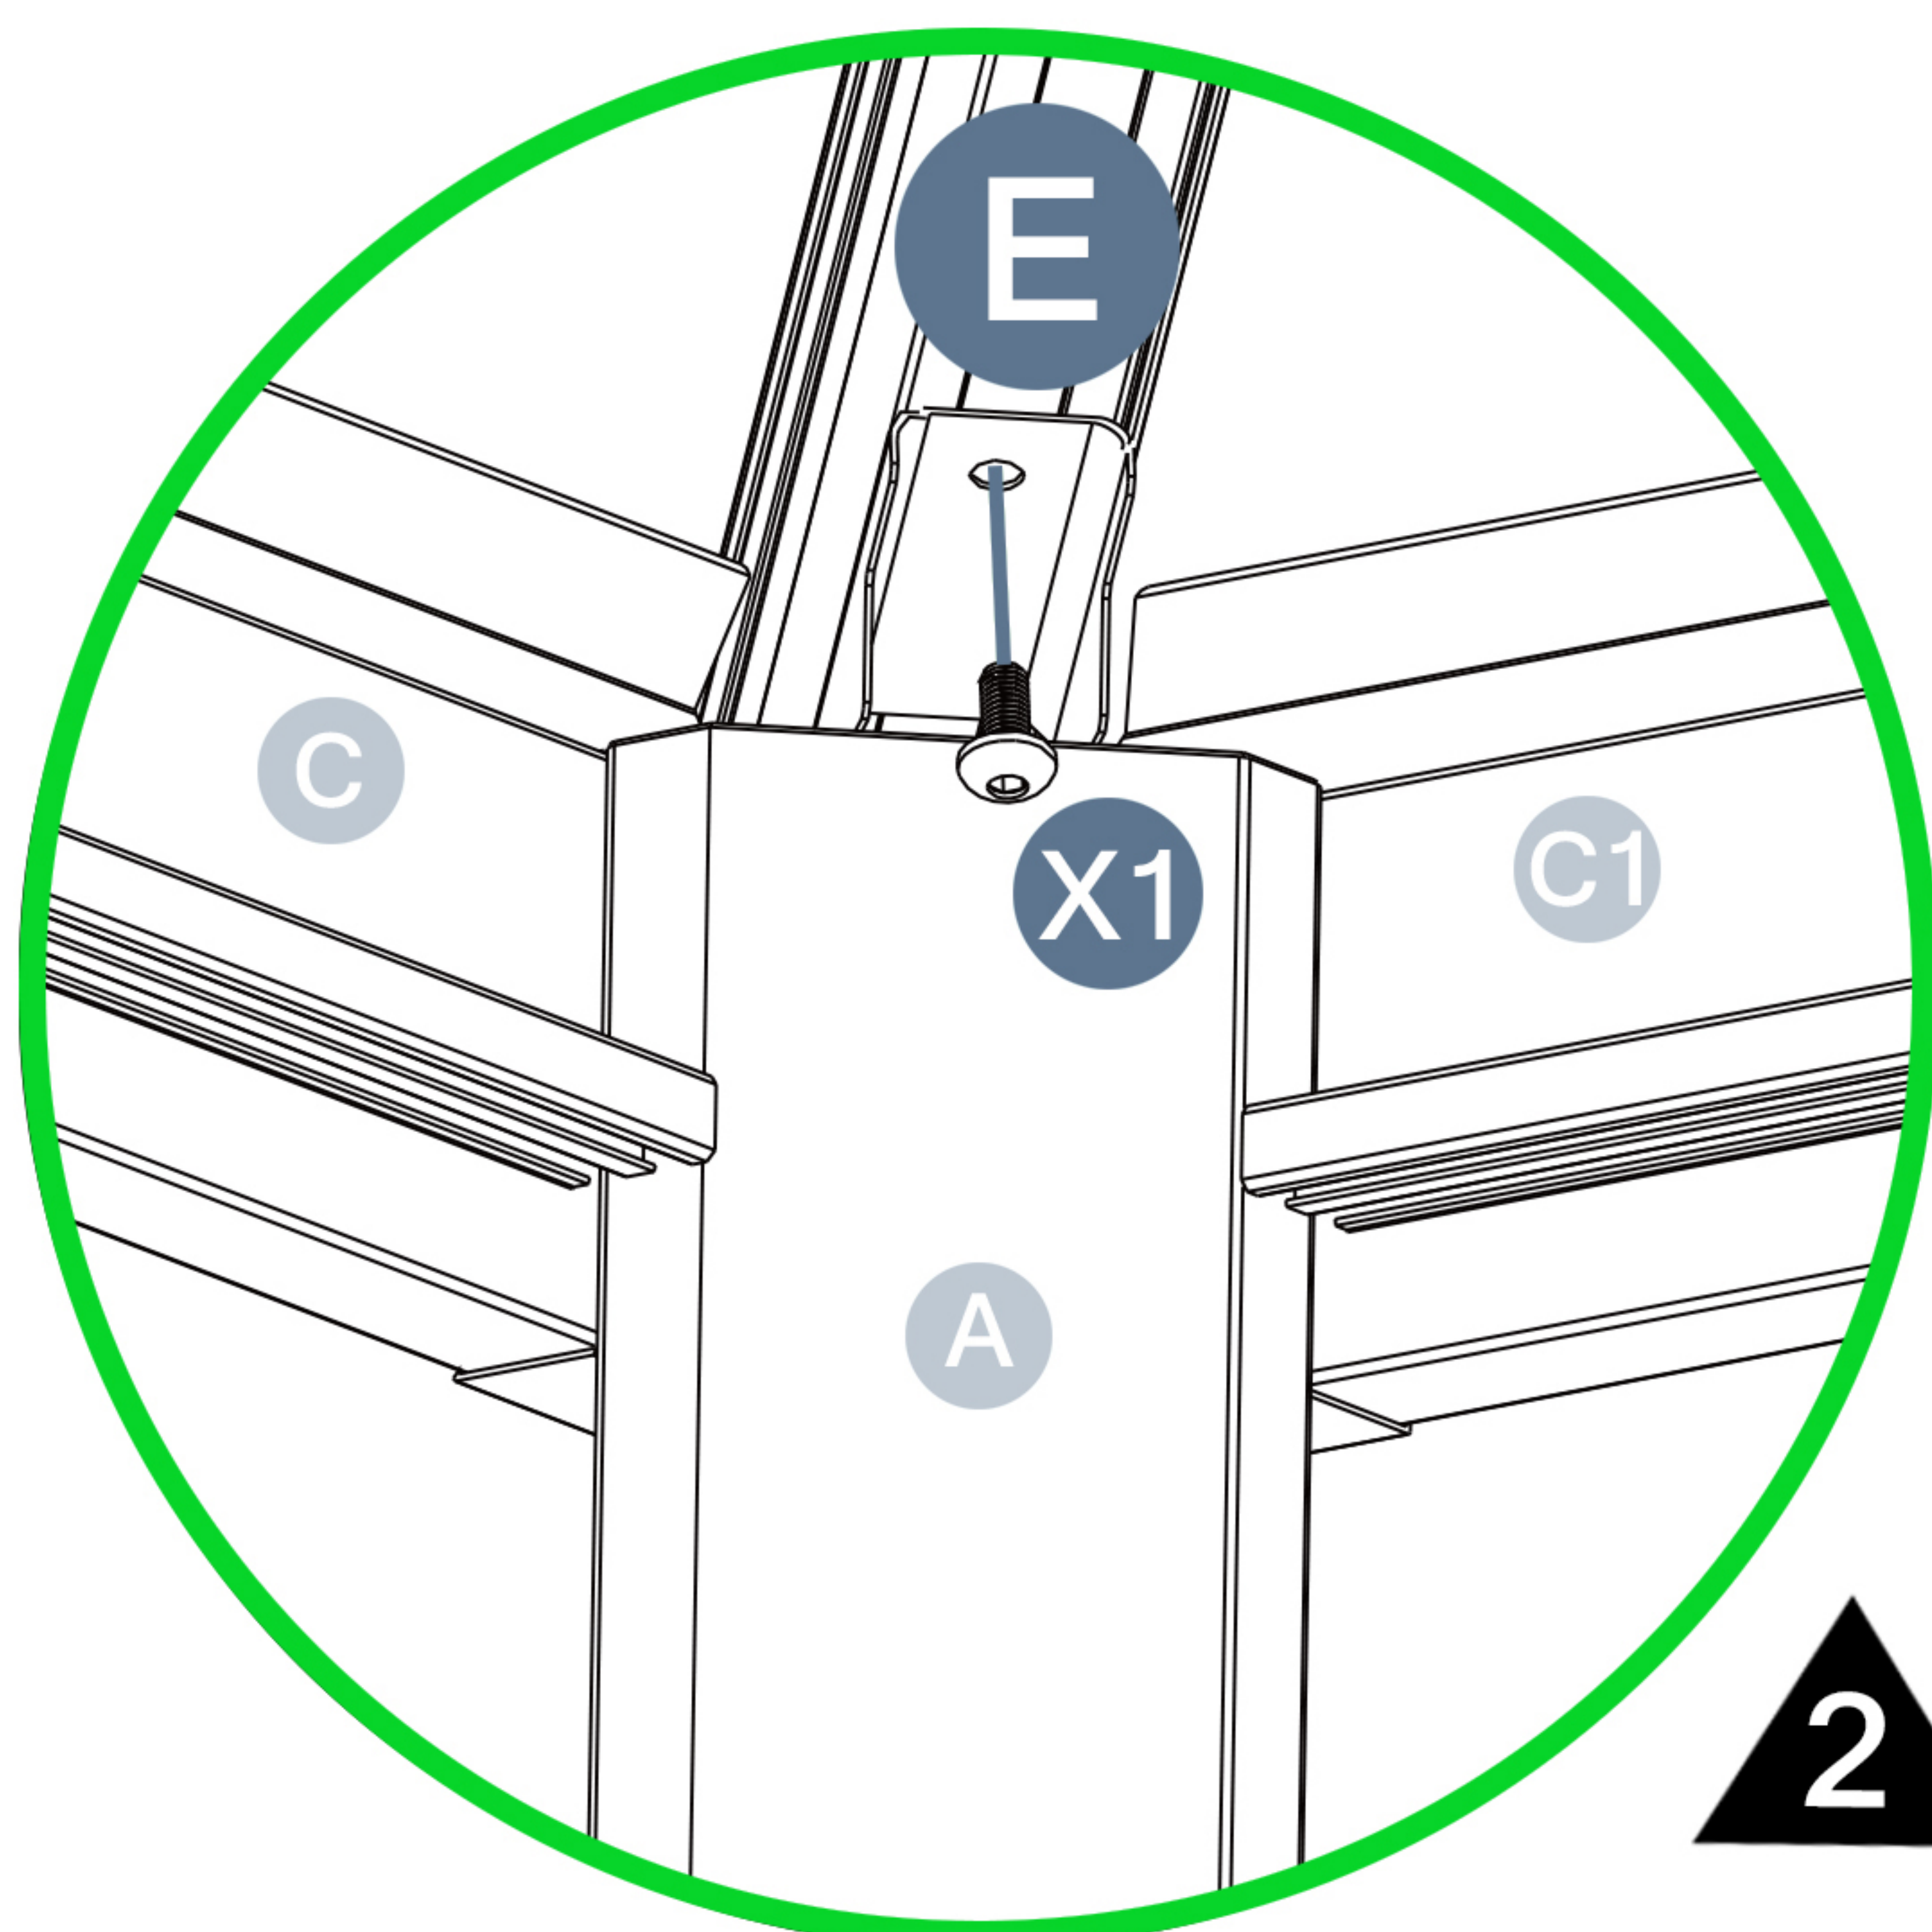

2


STEP 10

Parts required

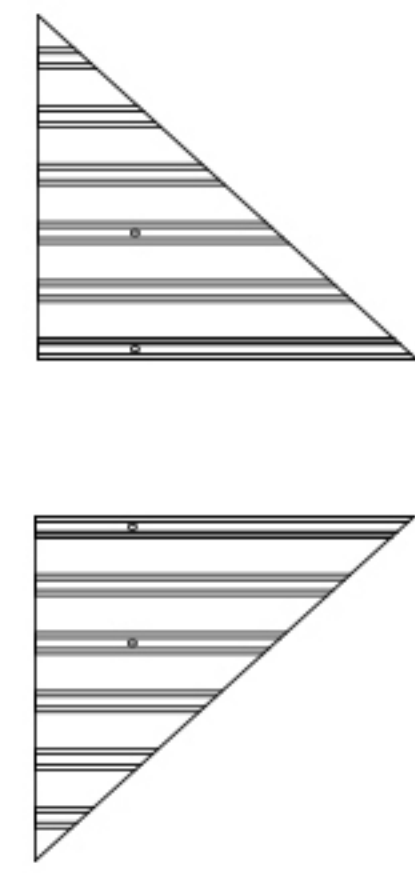


O1 4pcs

V1 4pcs

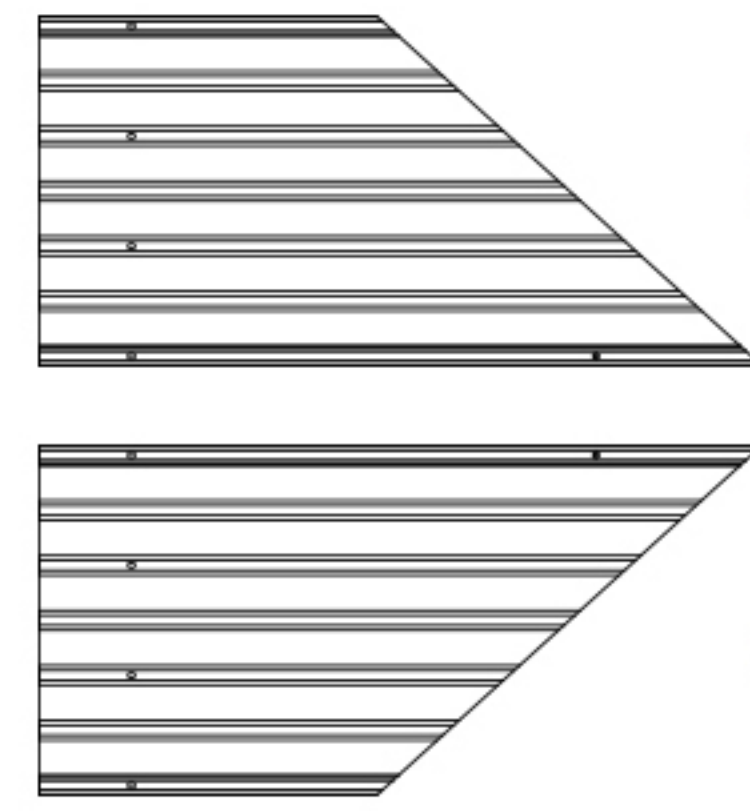


O2 4pcs

V2 4pcs

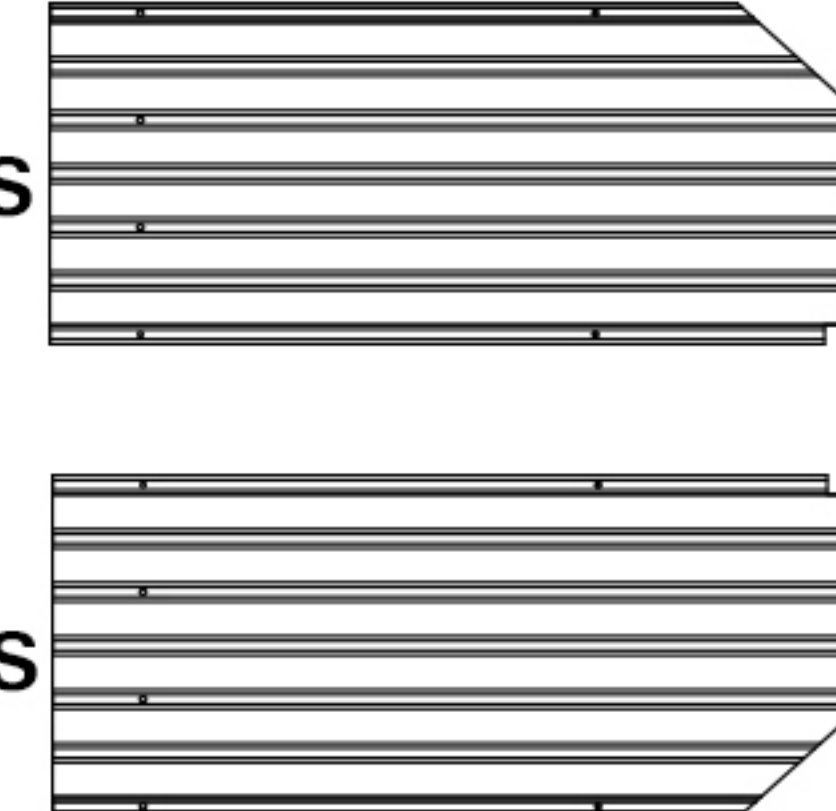


O3 4pcs

V3 4pcs

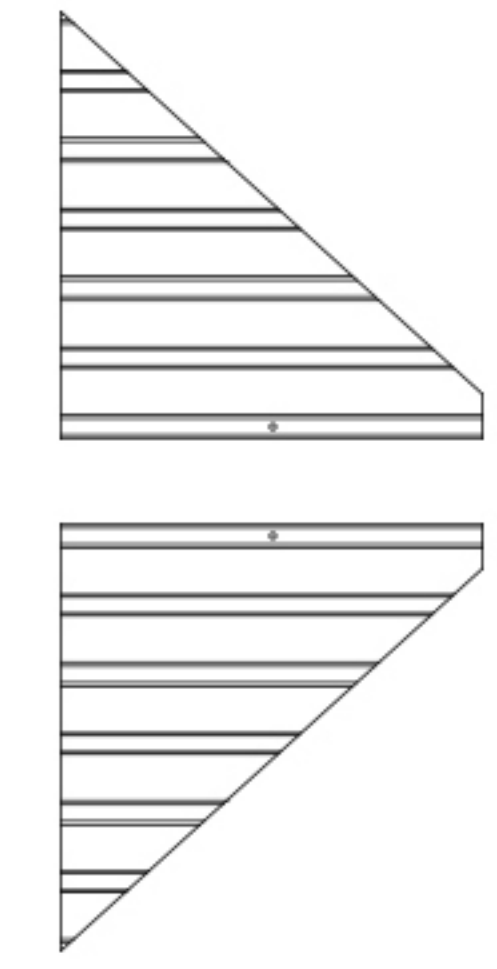


O4 4pcs

V4 4pcs

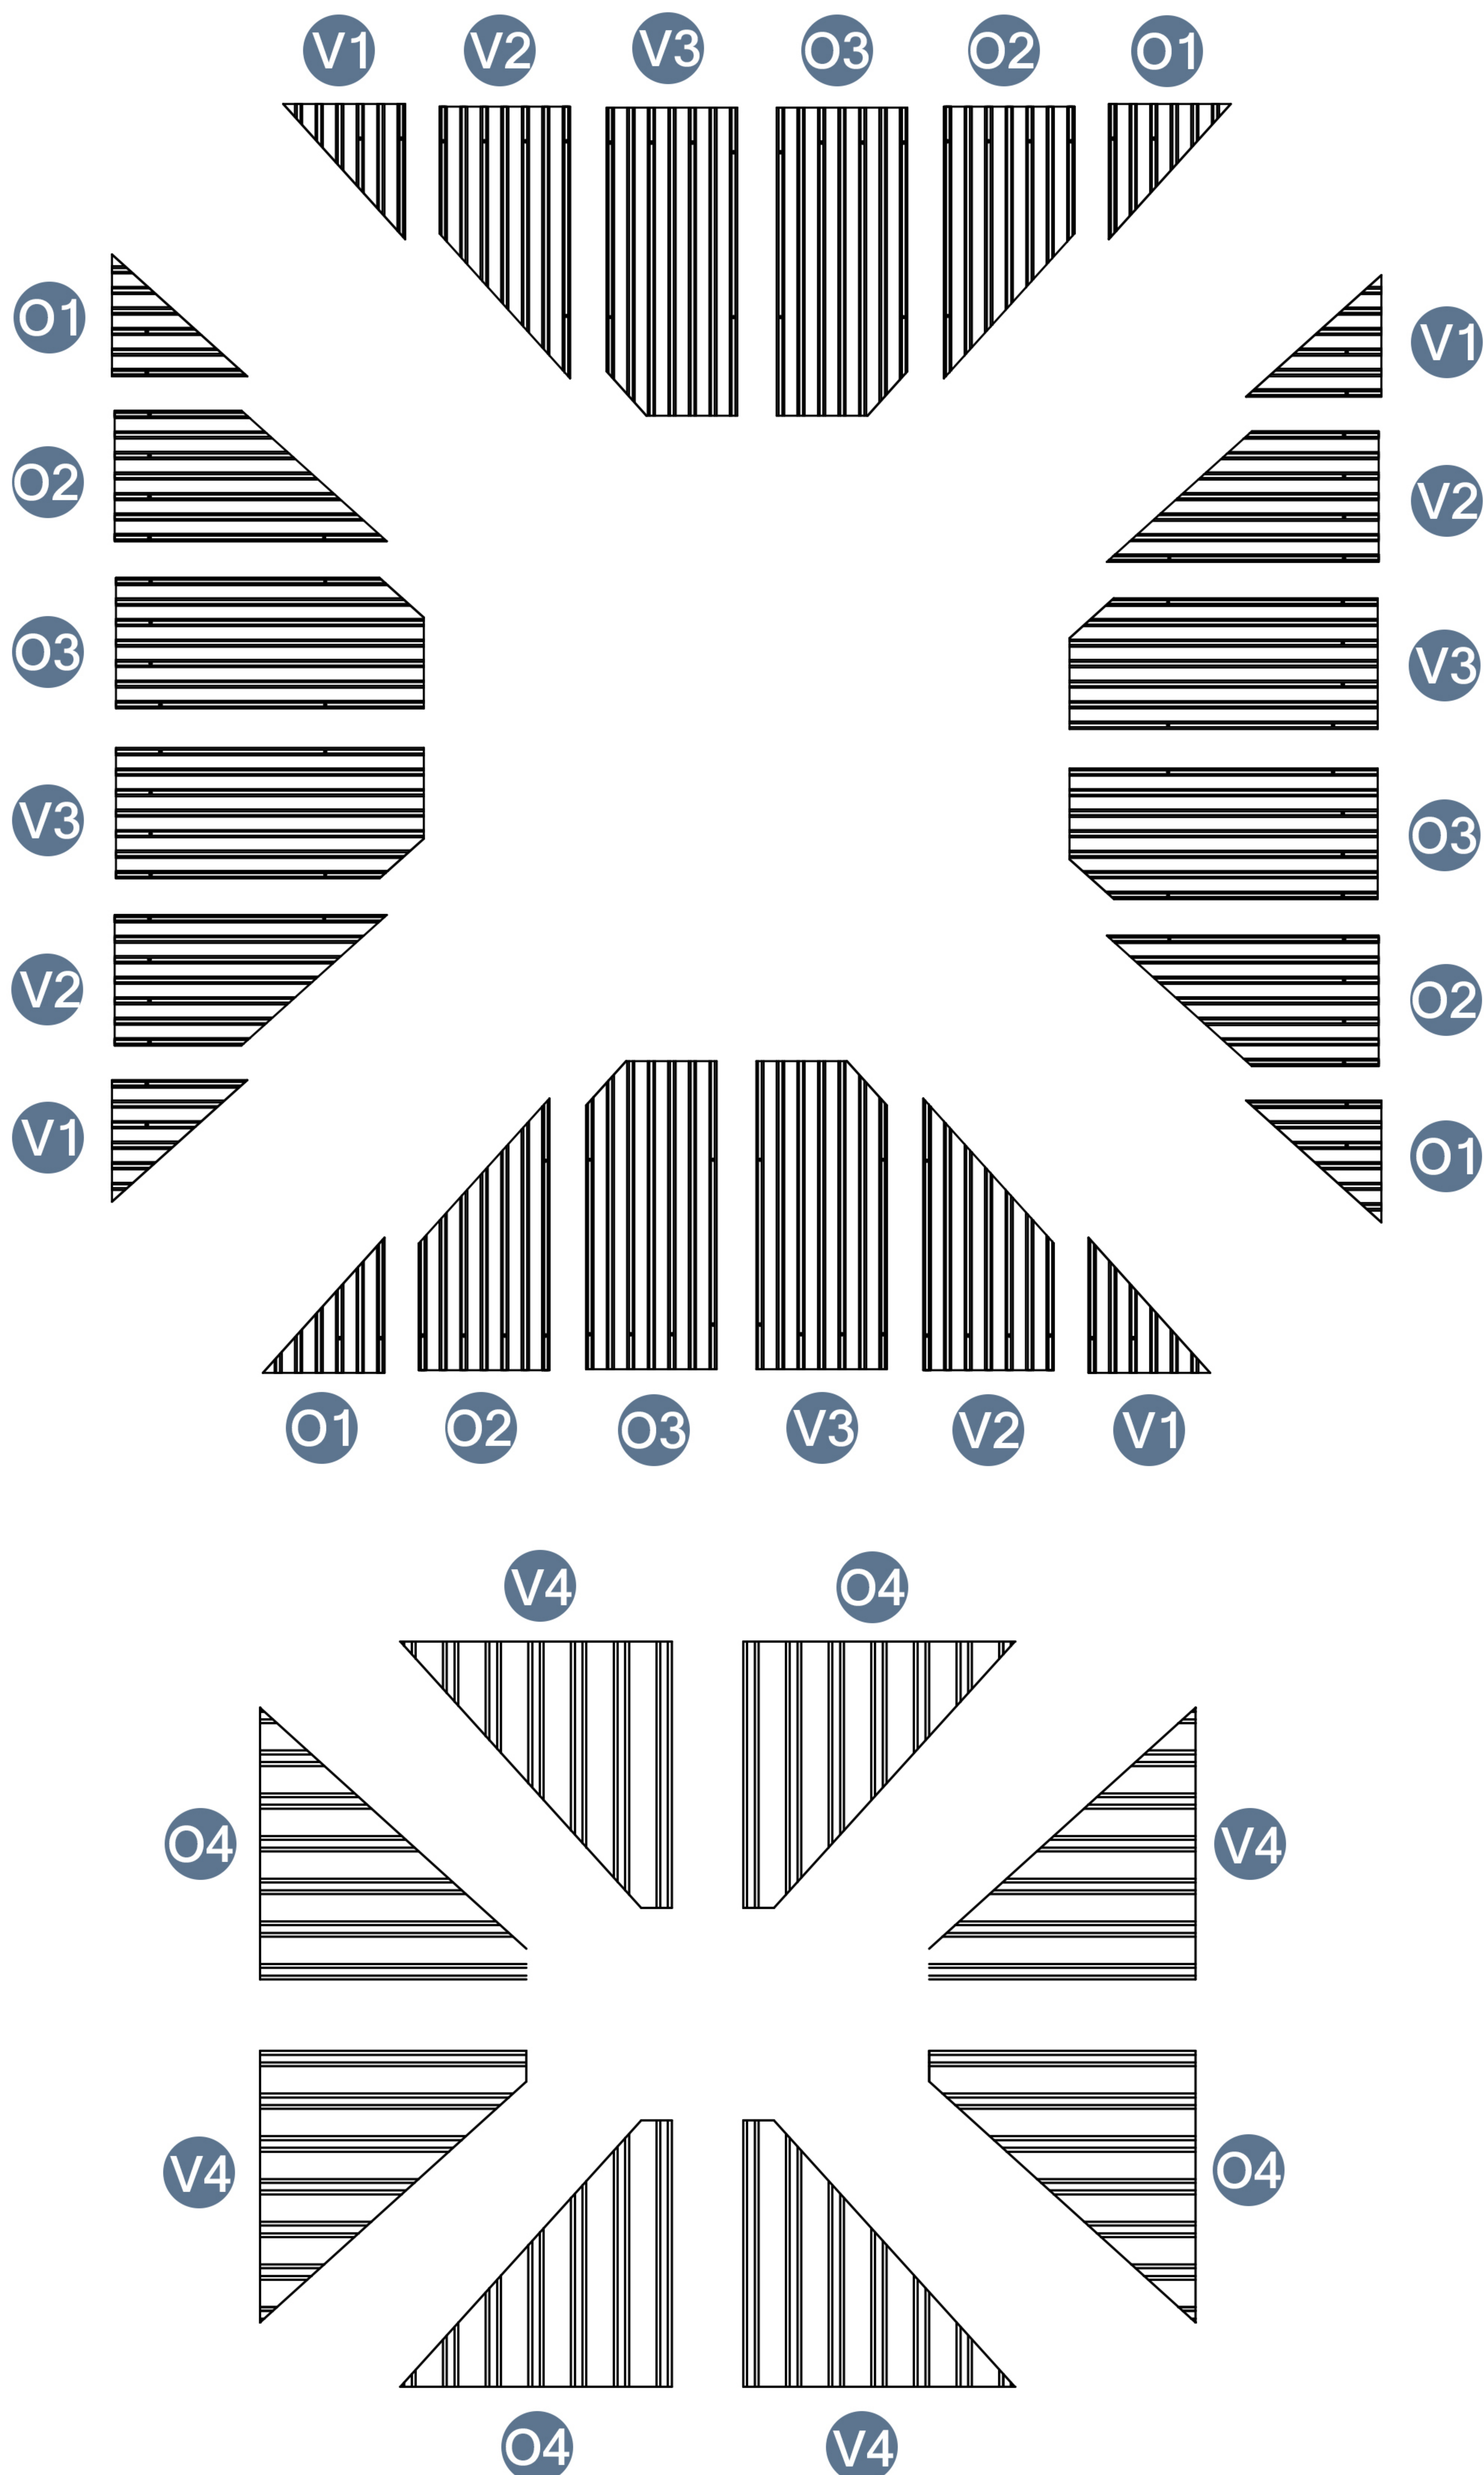

STEP 11



Parts required

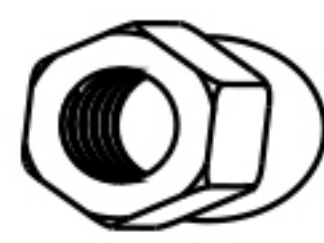


X5 4pcs

1 → 2


Please refer to the image P1-1 for installation.

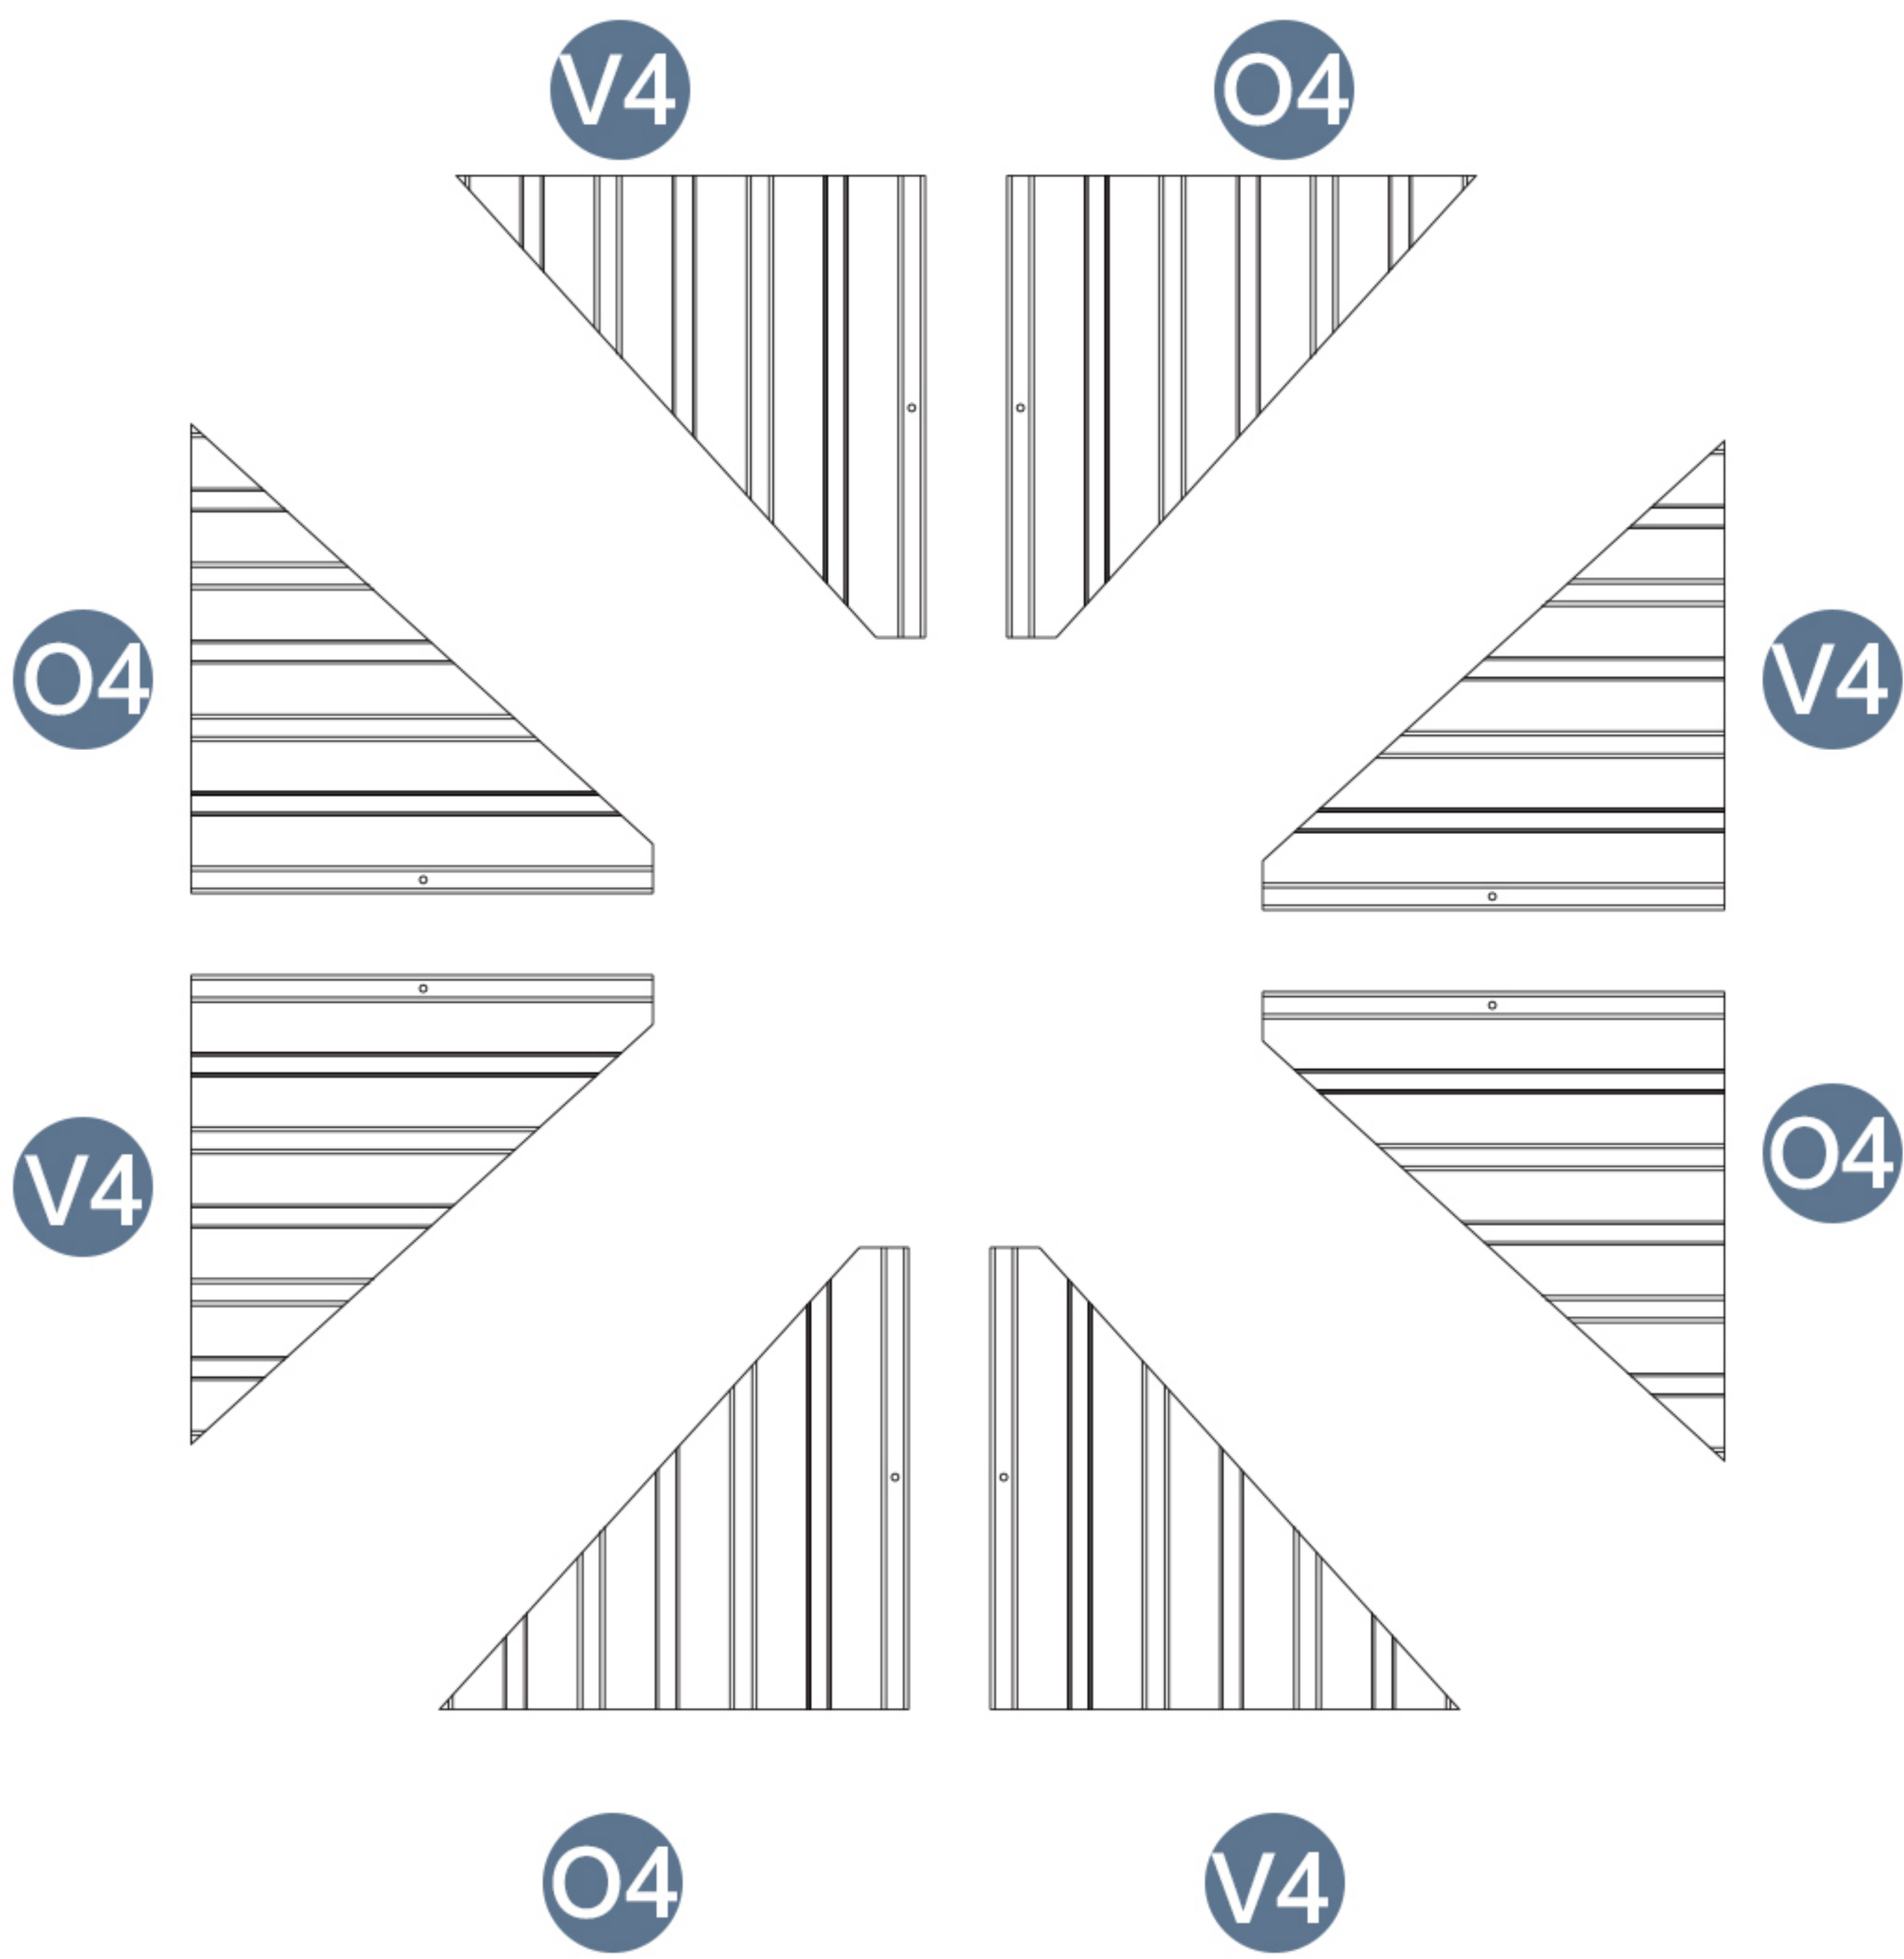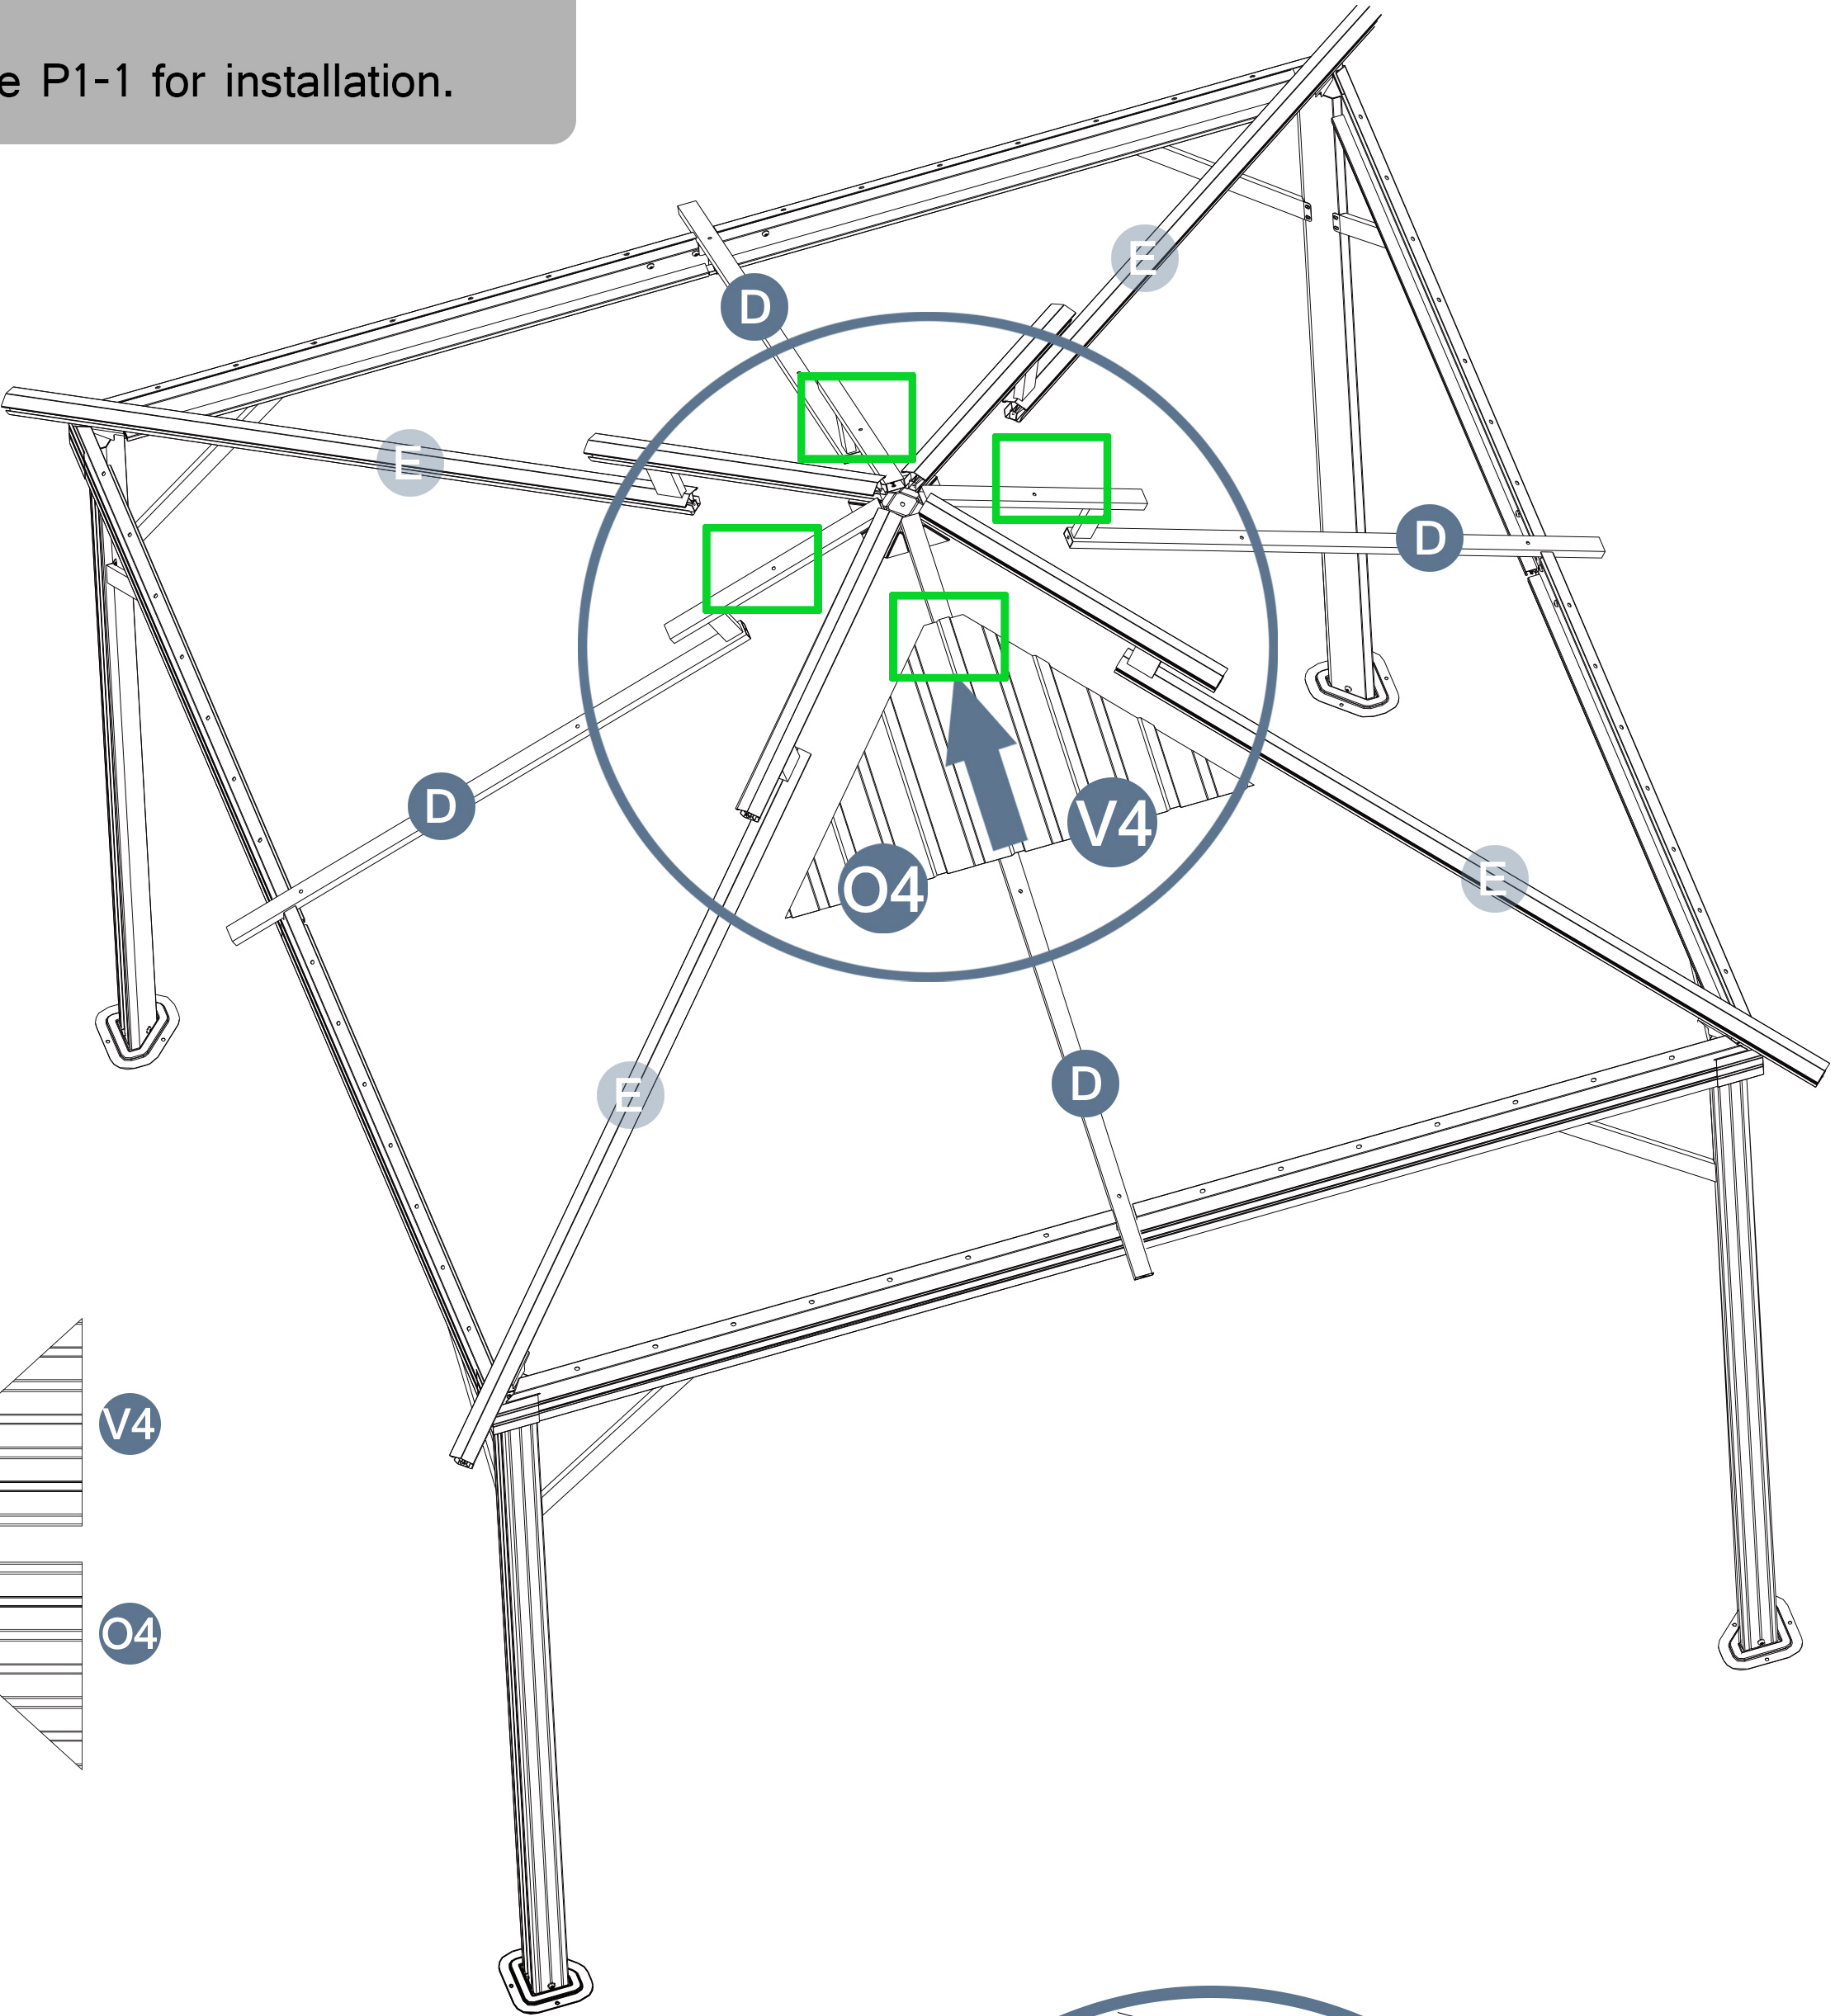

• P1-1

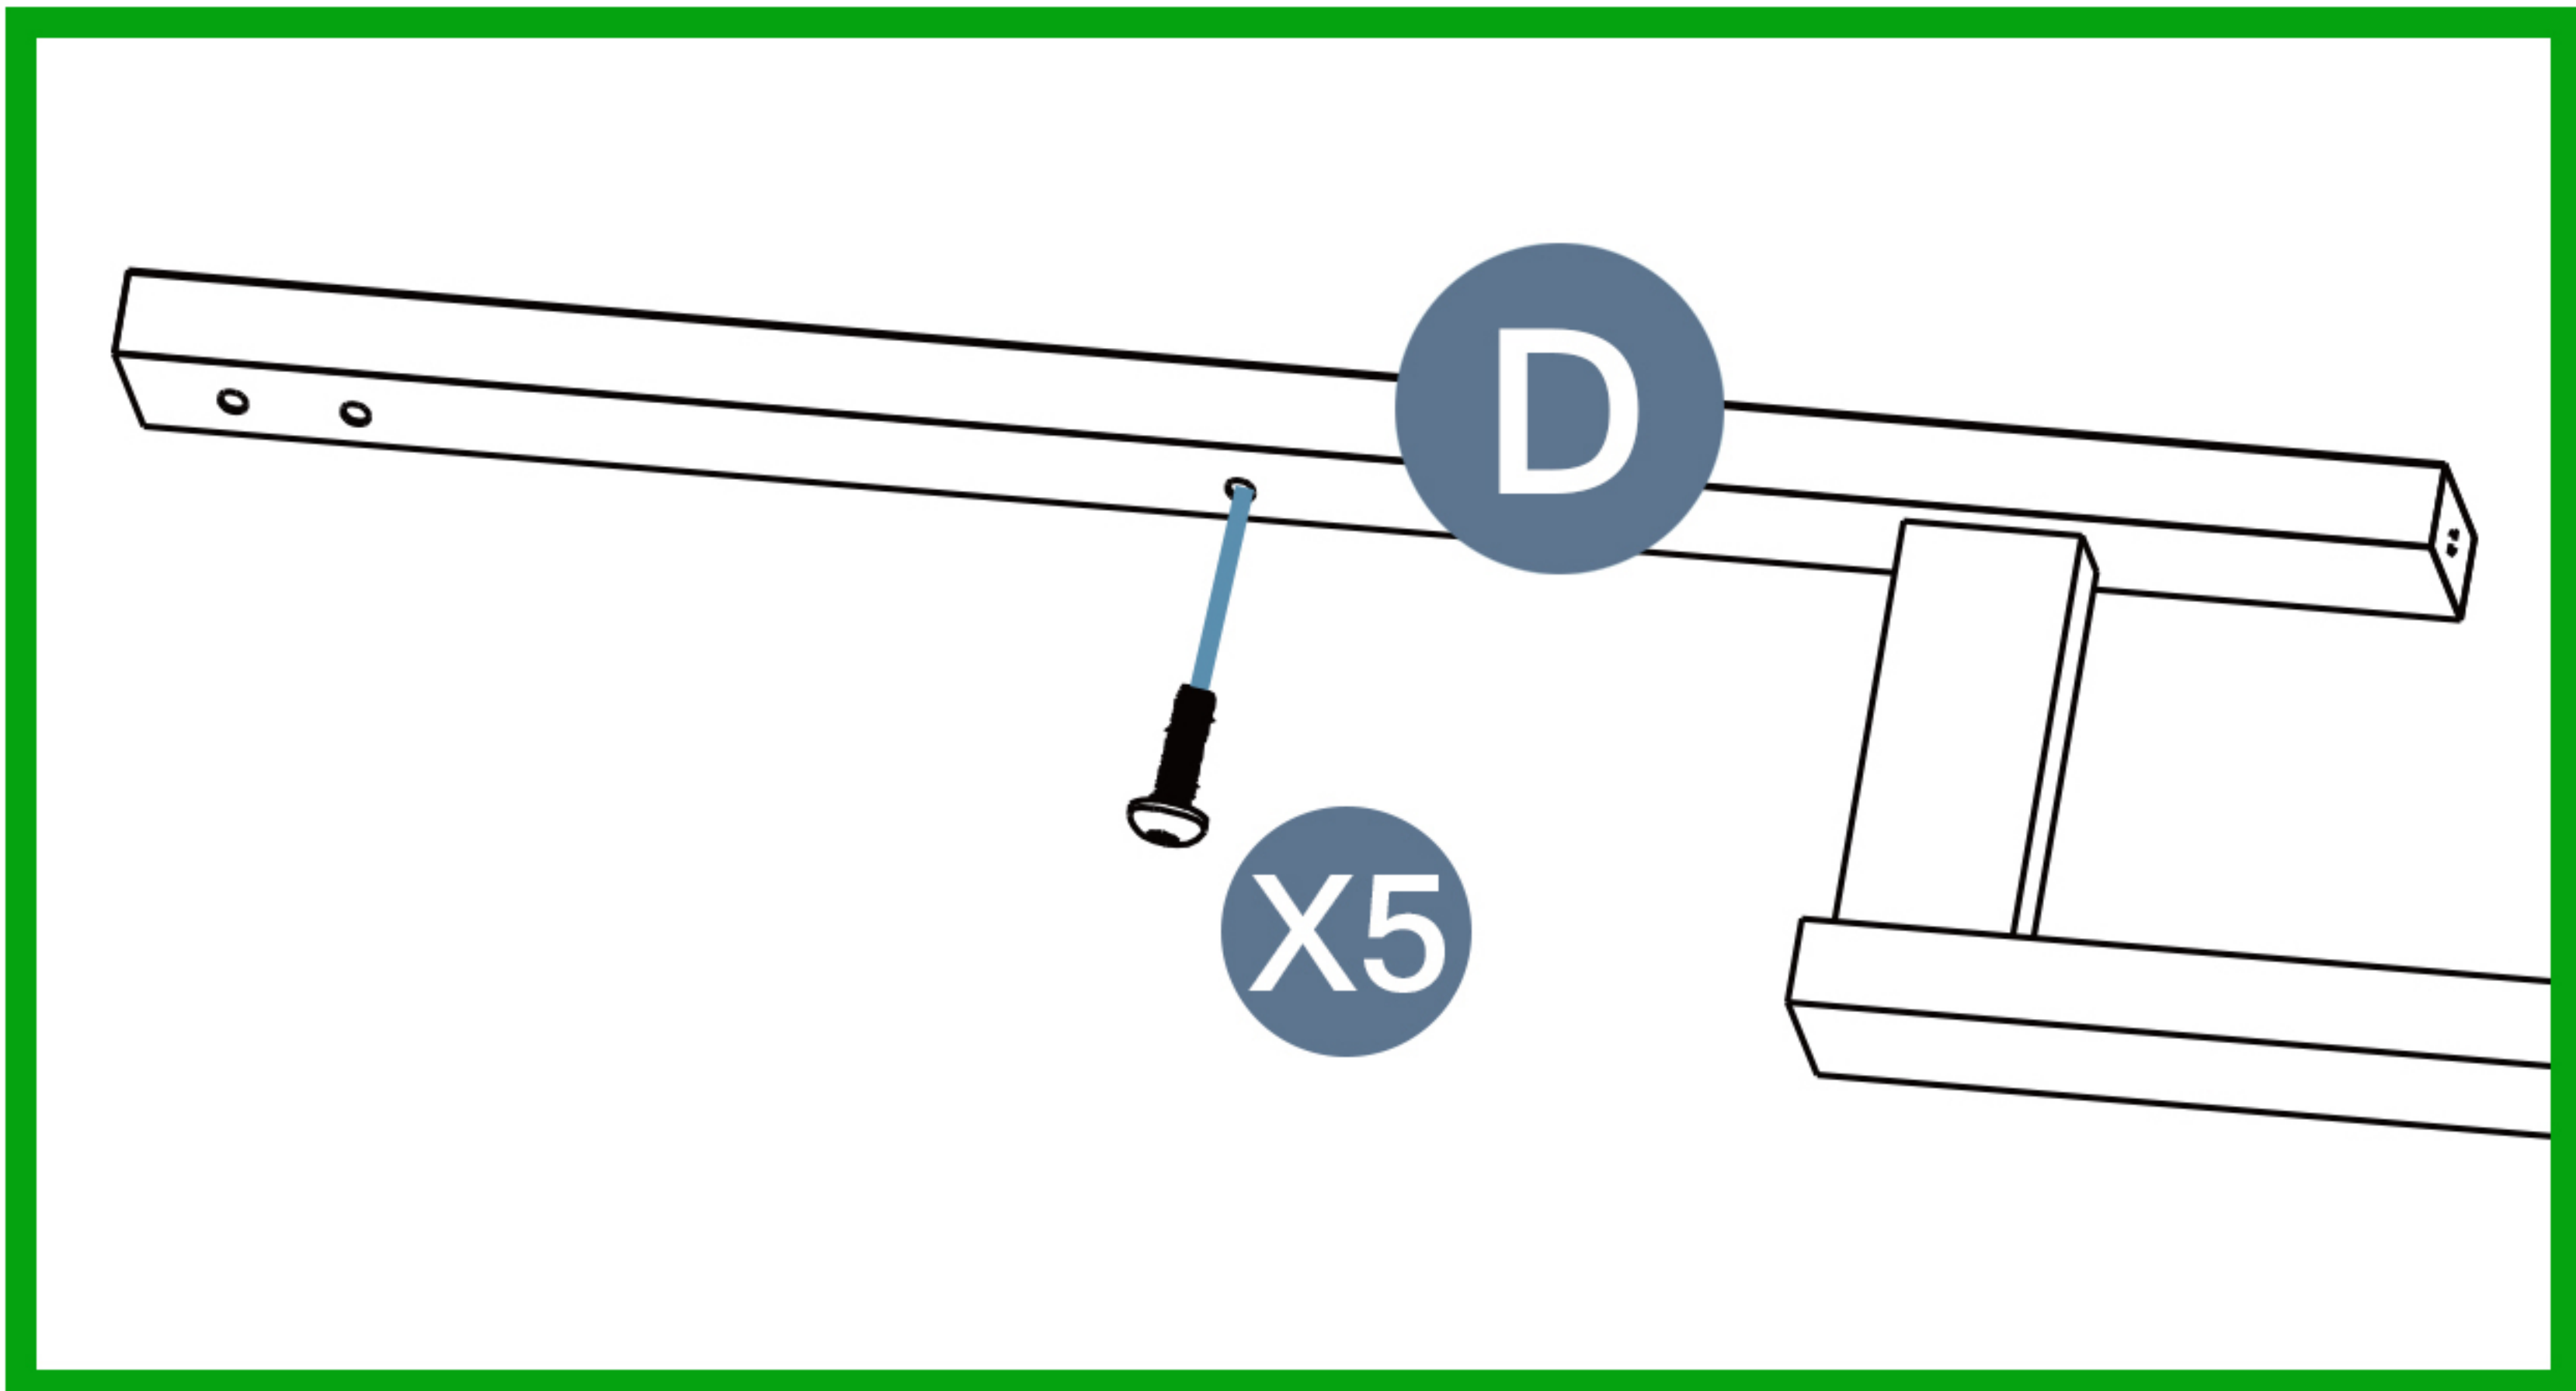


1

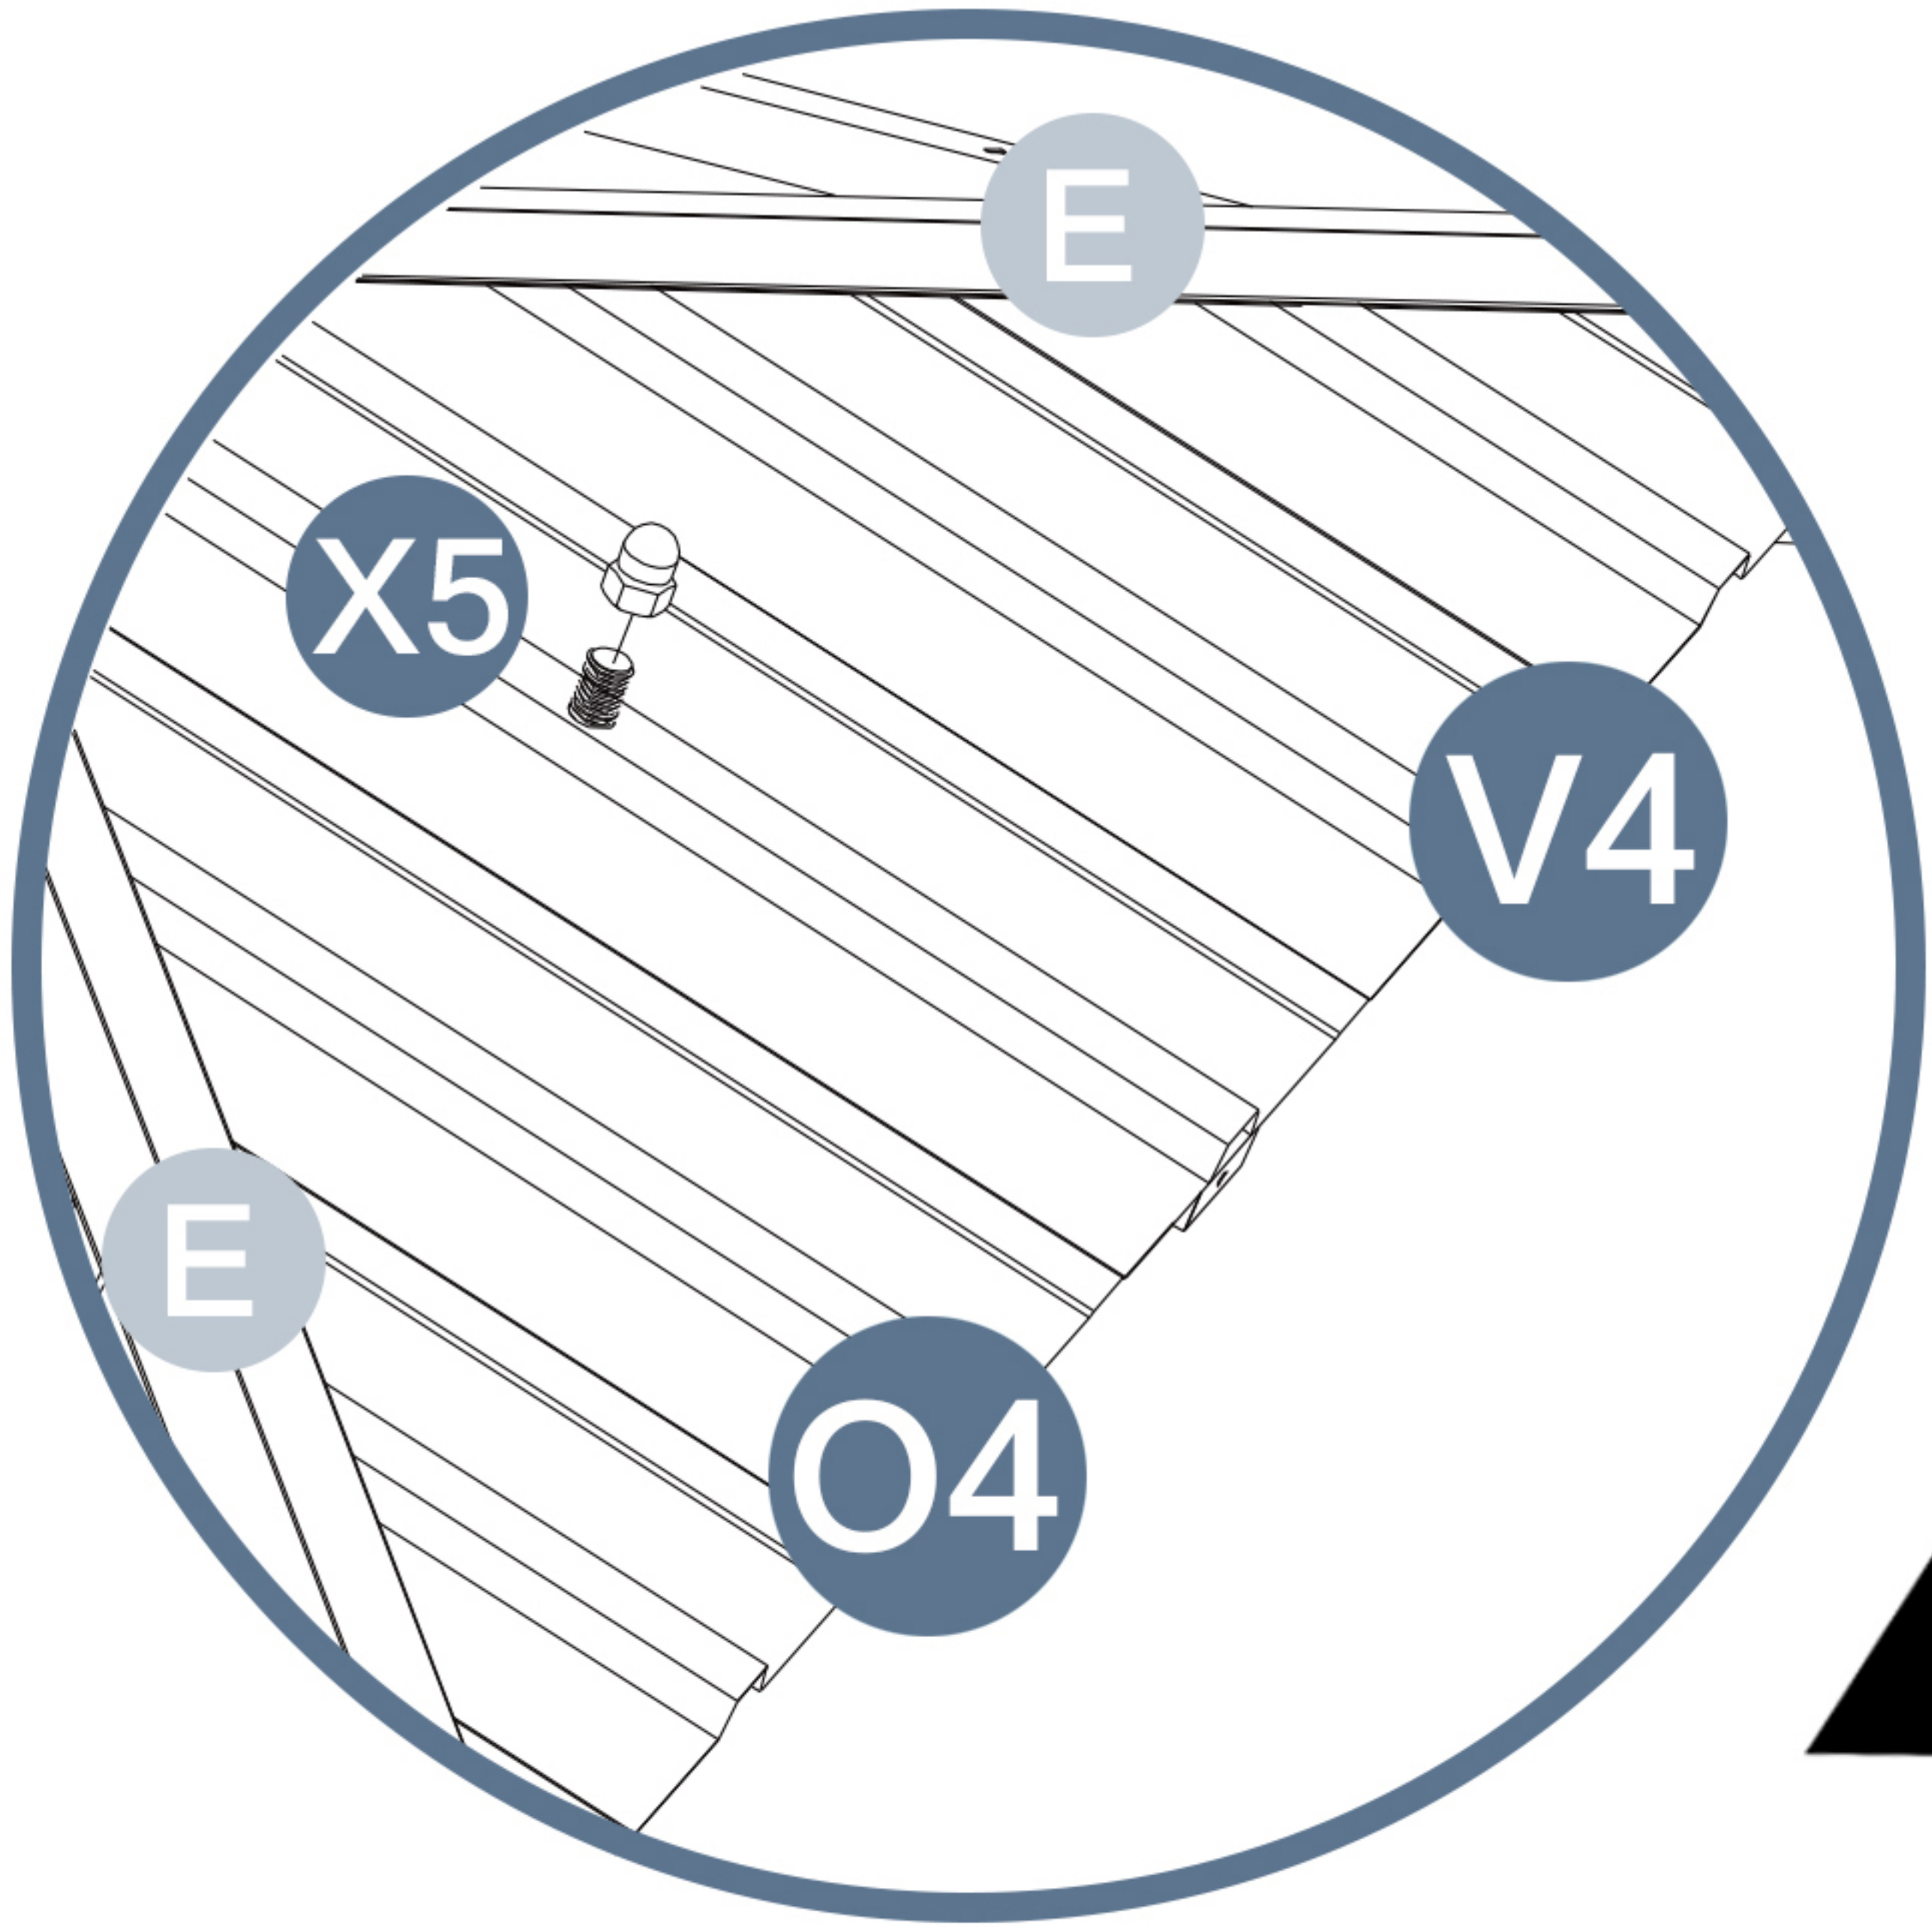


2

STEP 12


Parts required

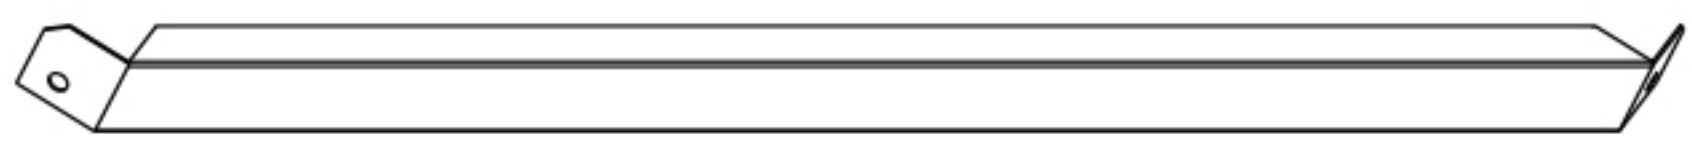


G6 4pcs

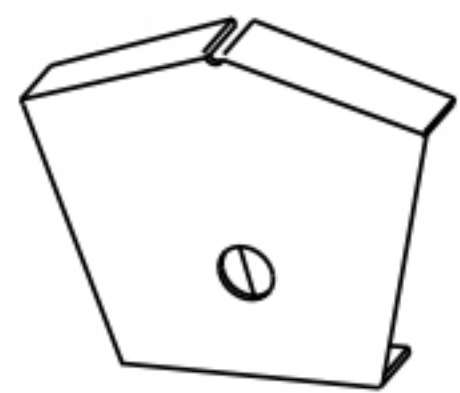



M2 4pcs

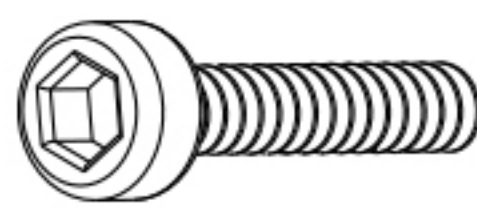



X1 8pcs

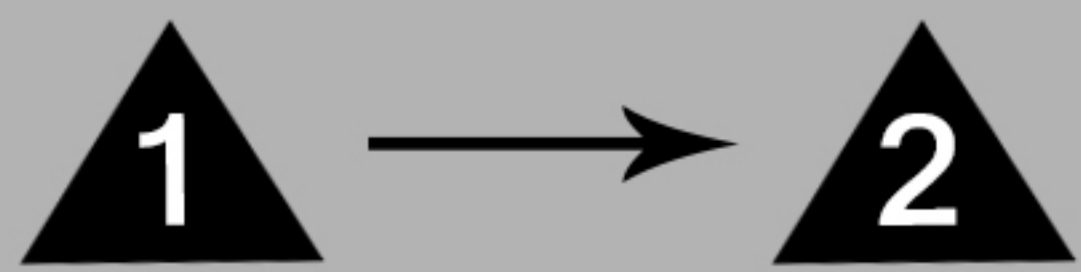

To better align the screws for practical situations, do not fully tighten screws initially.

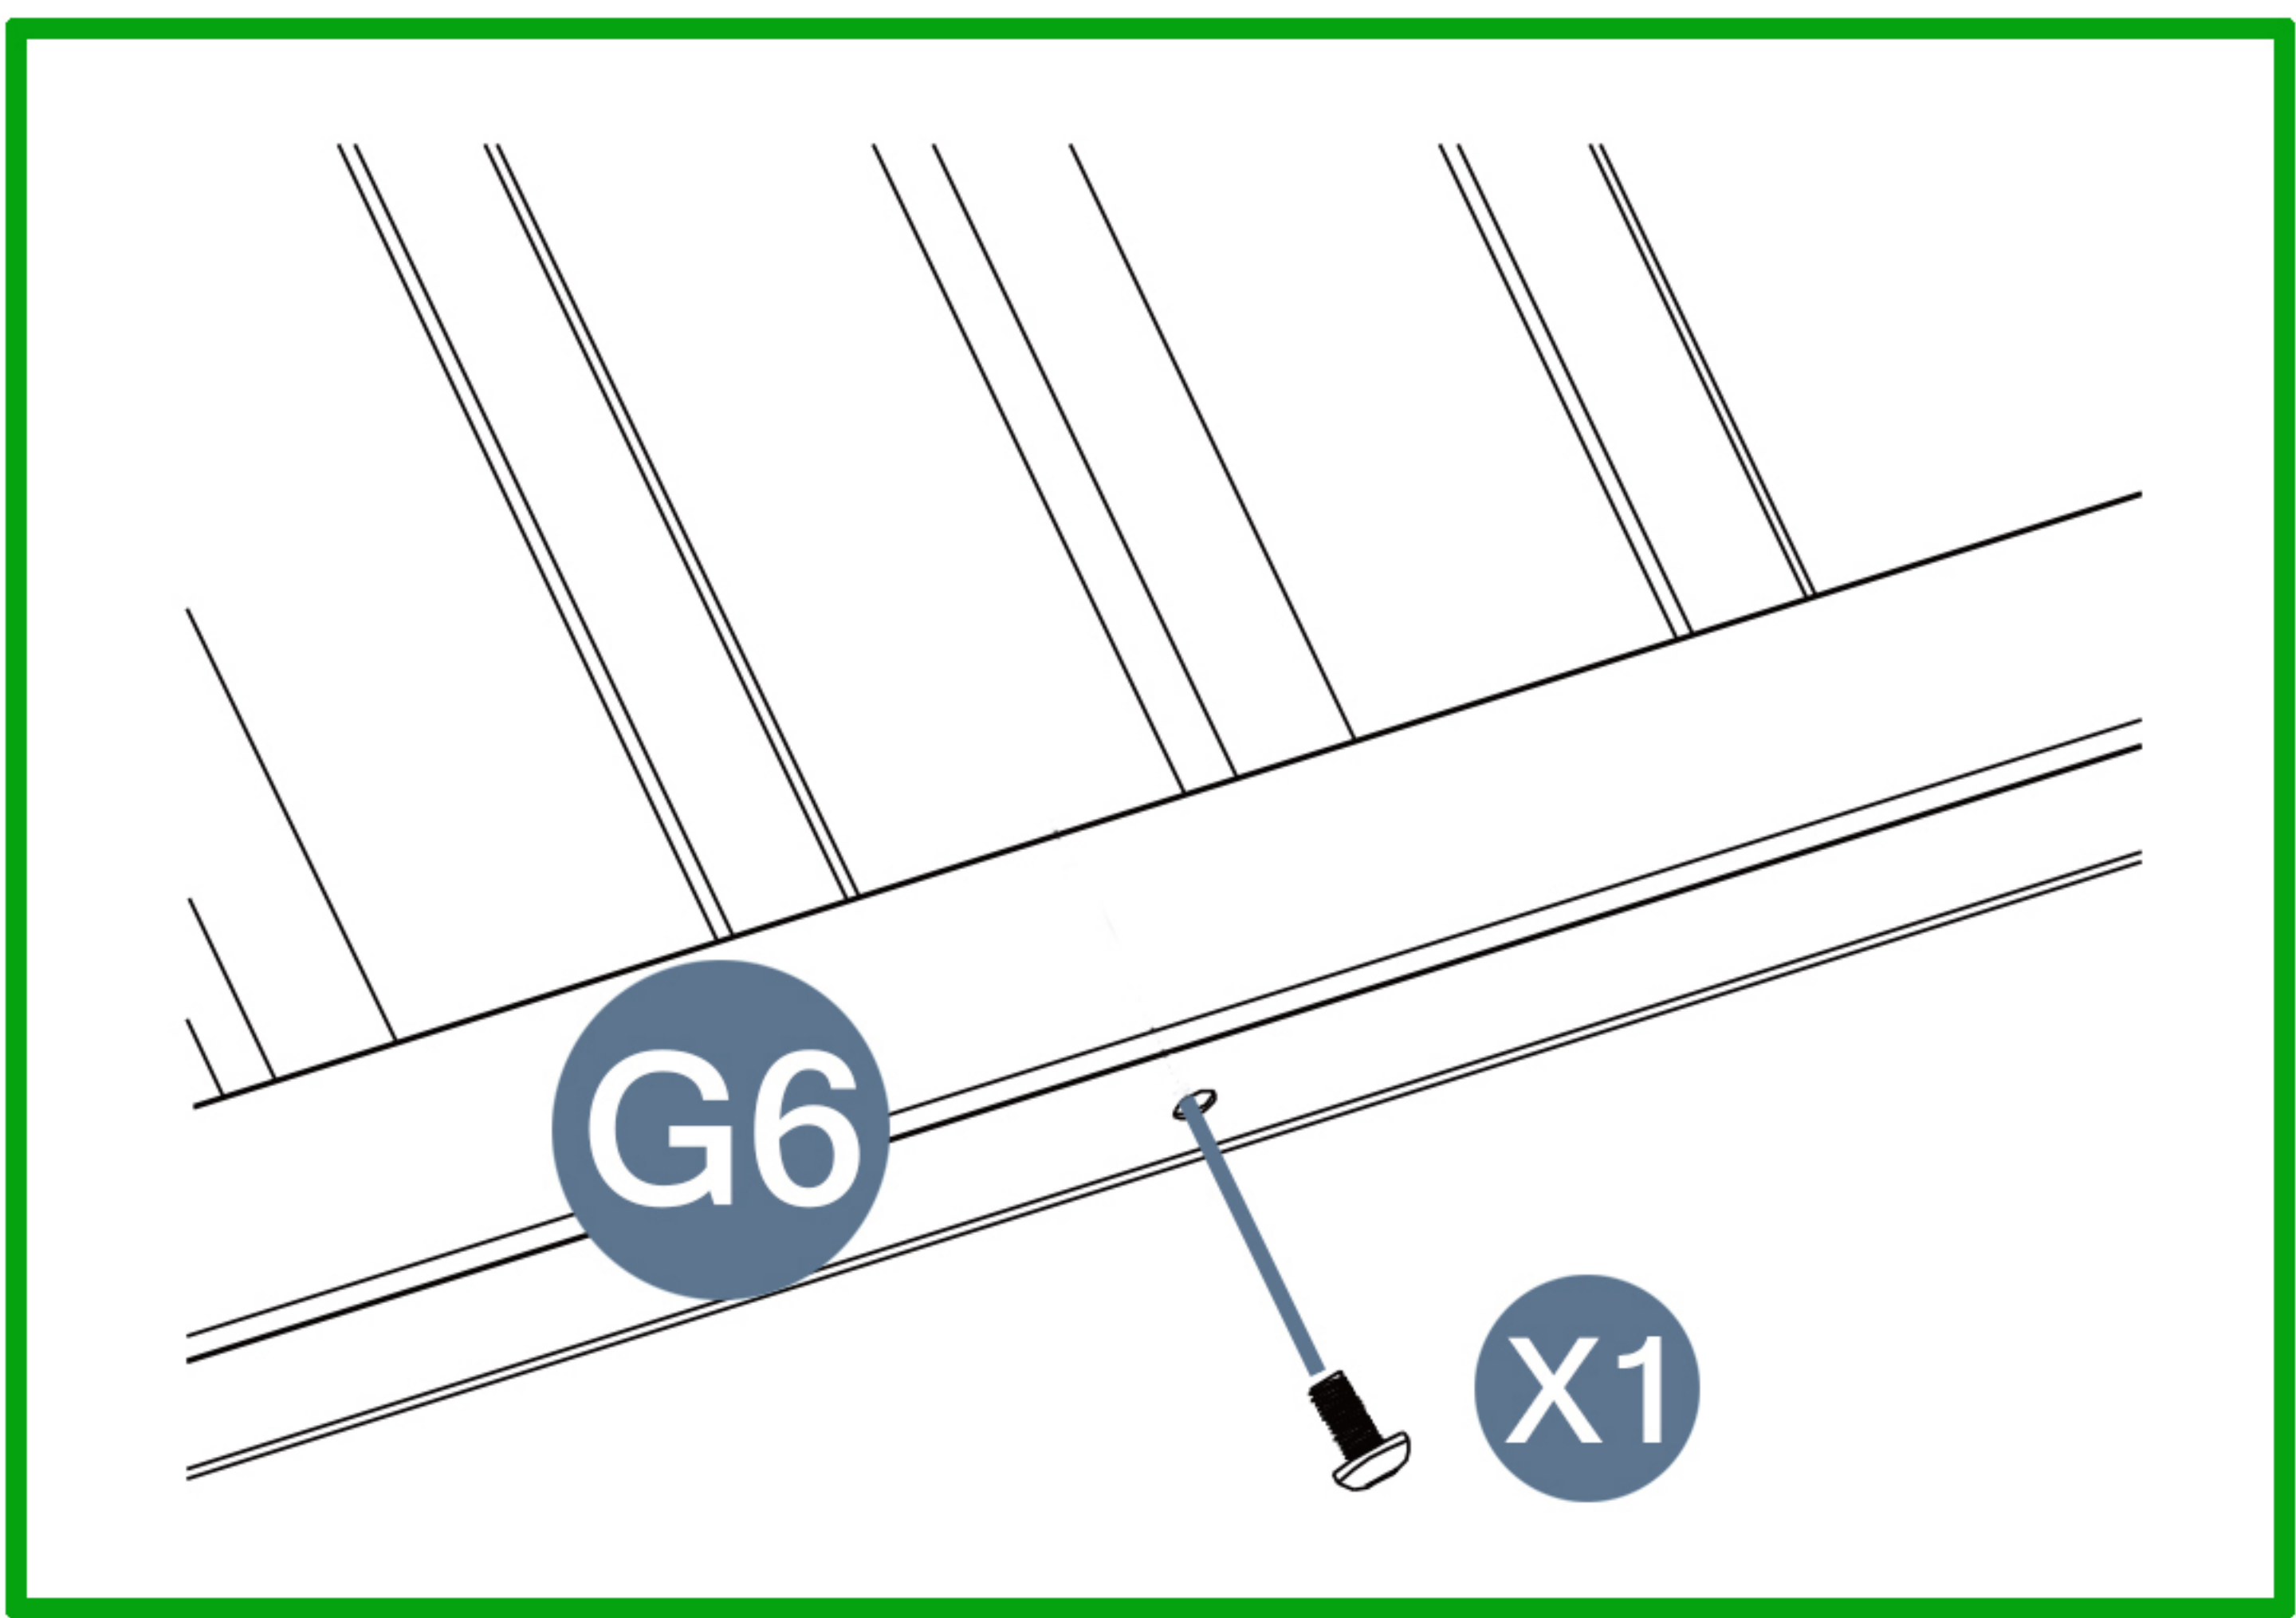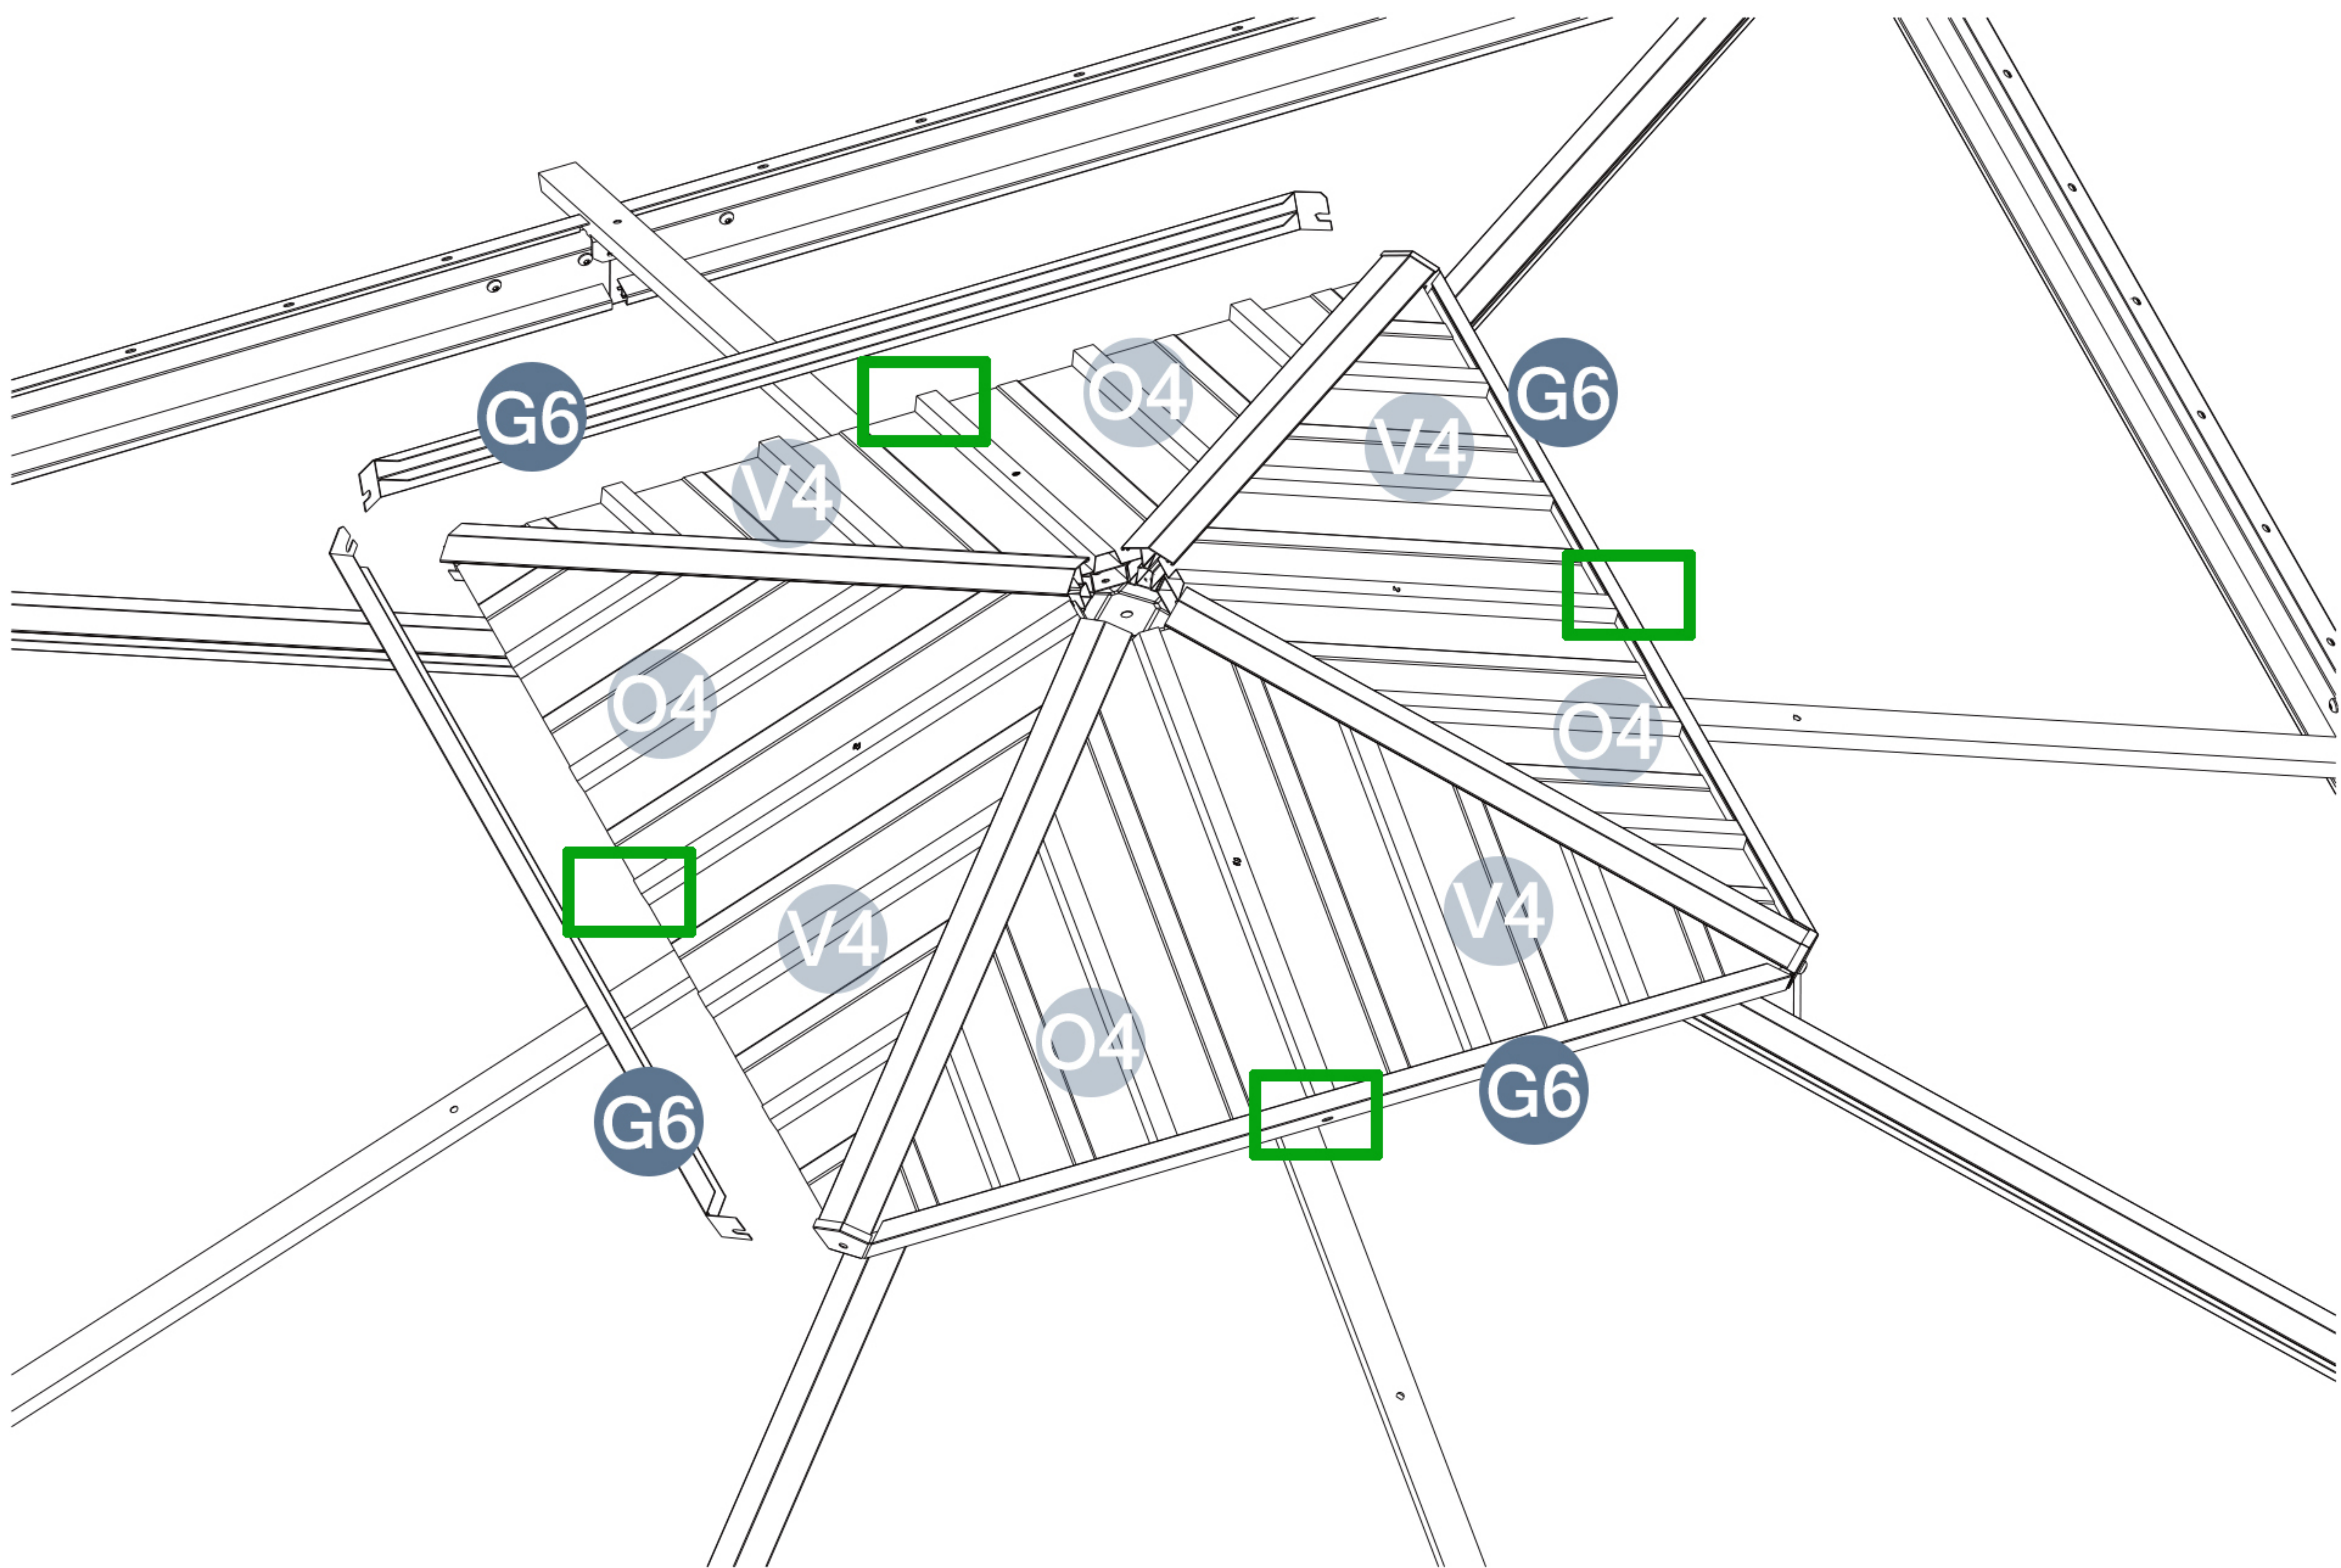

X4

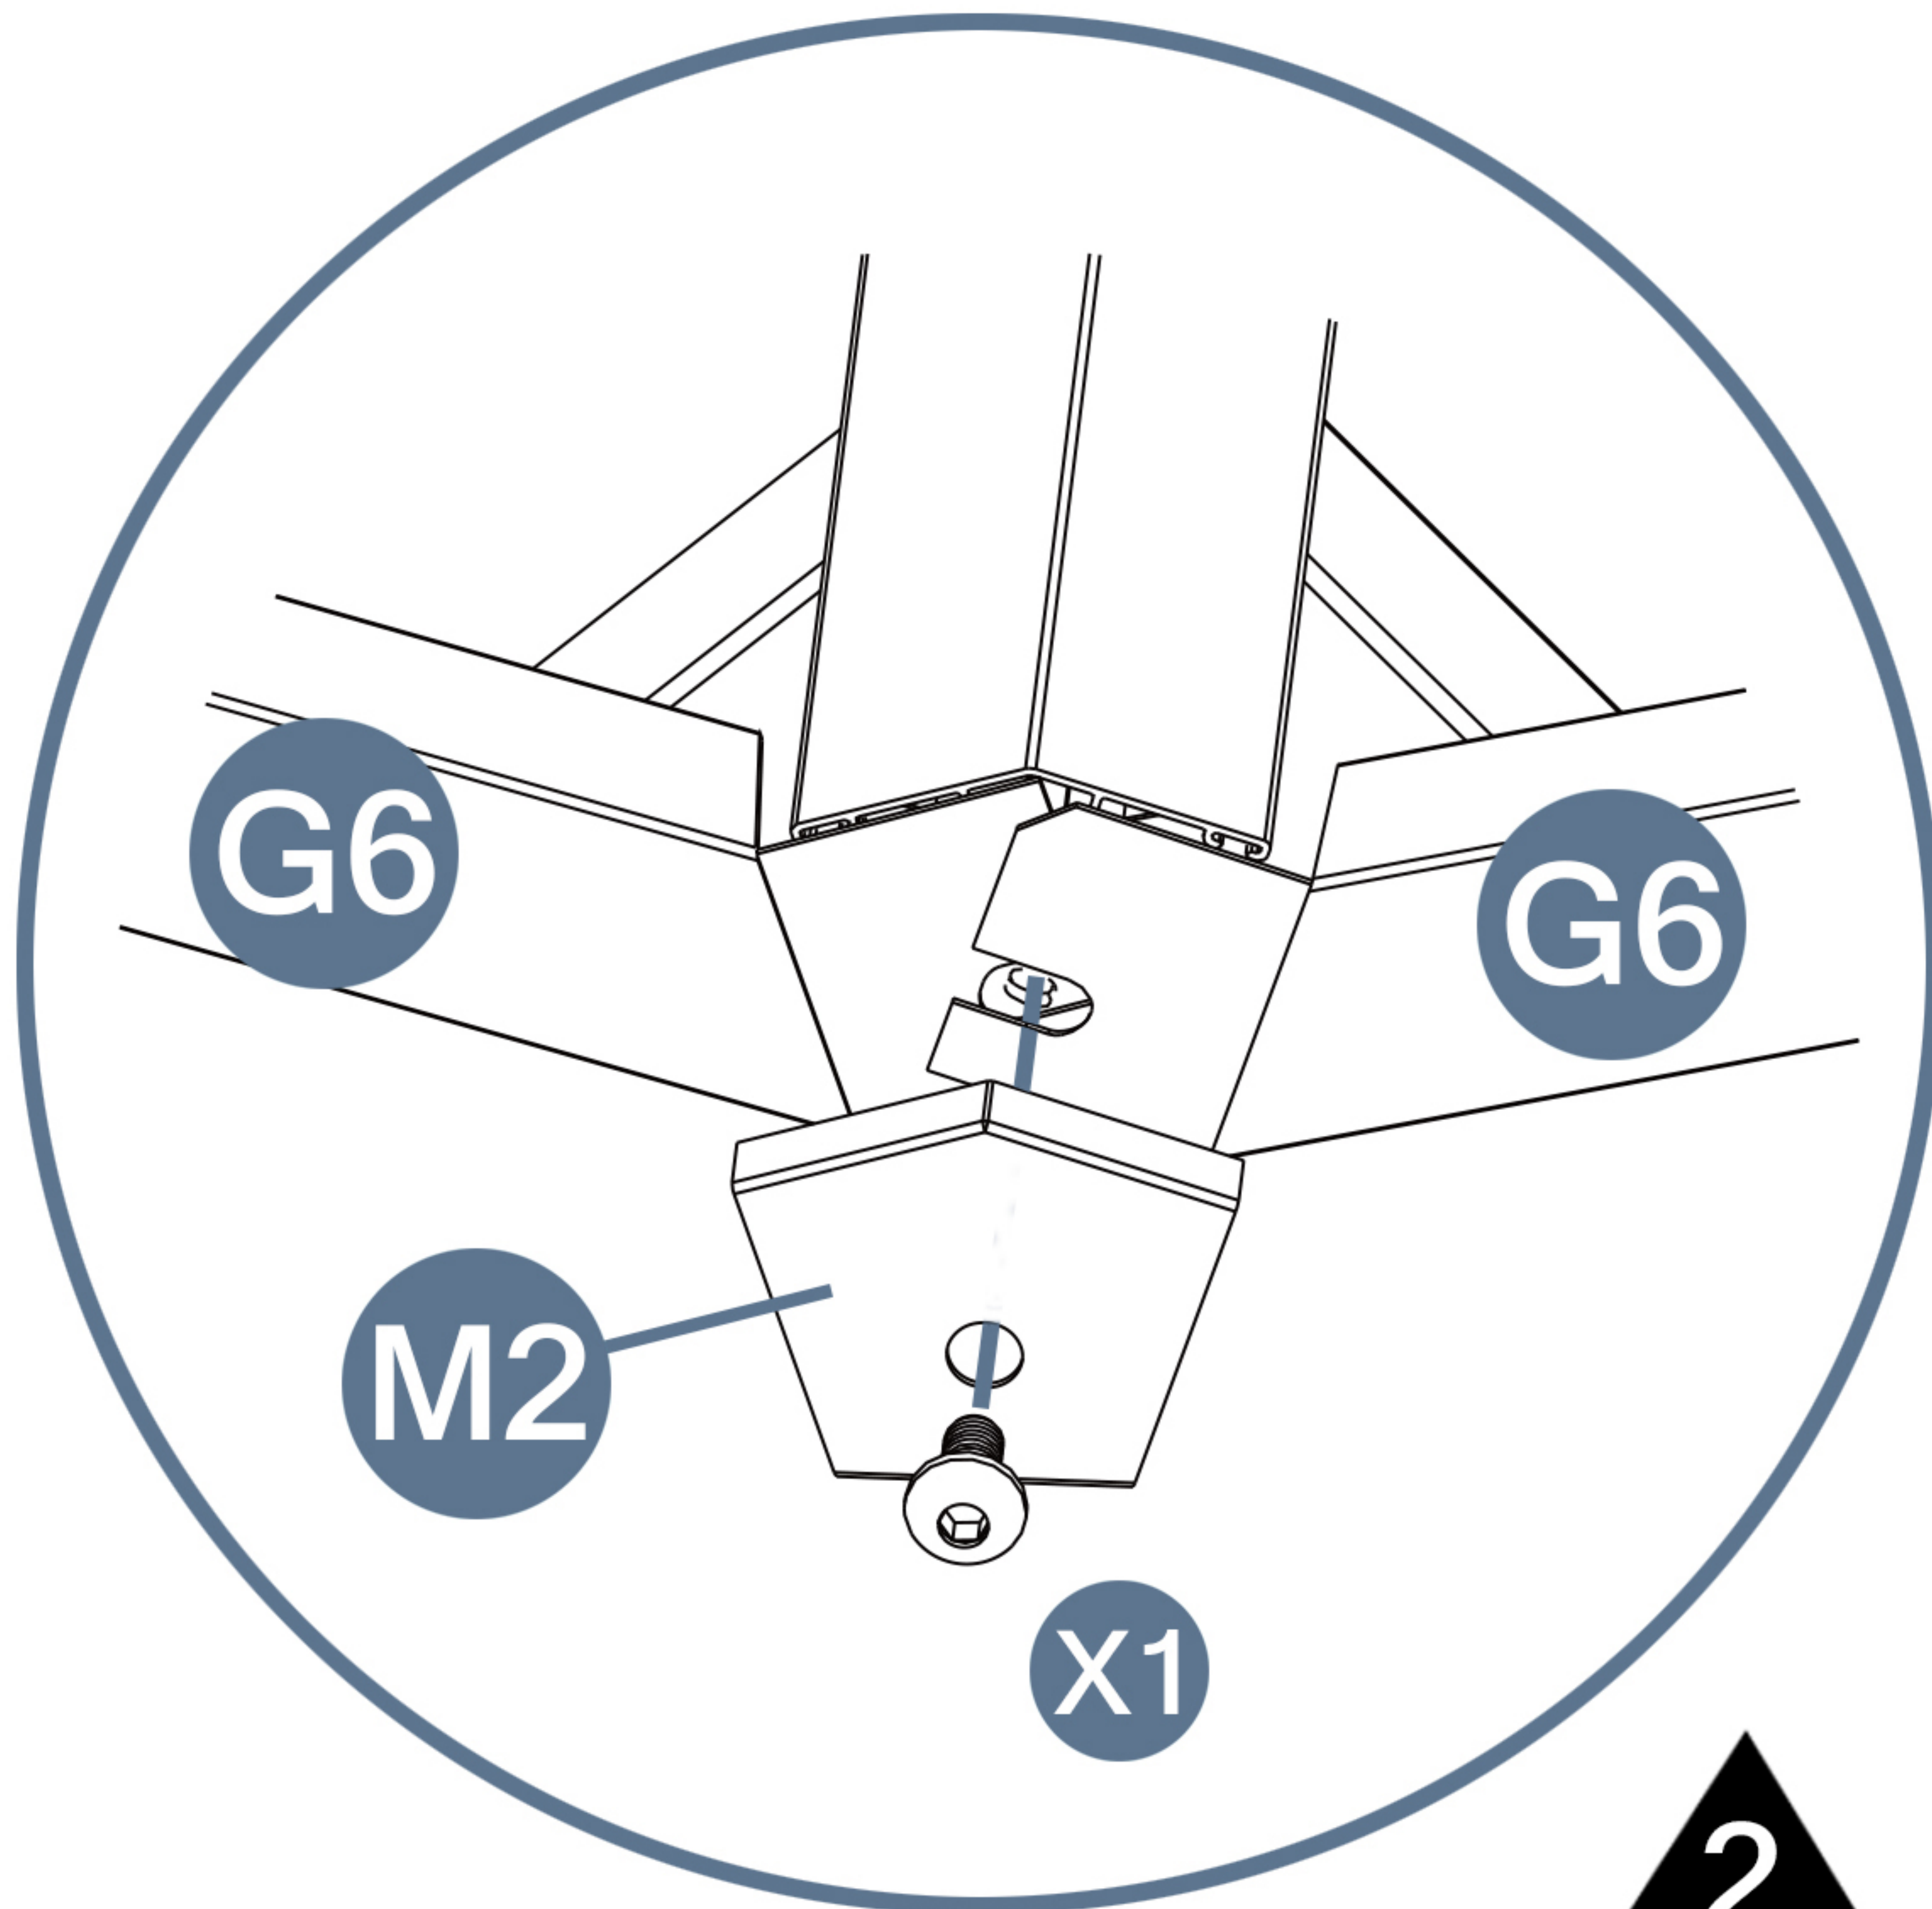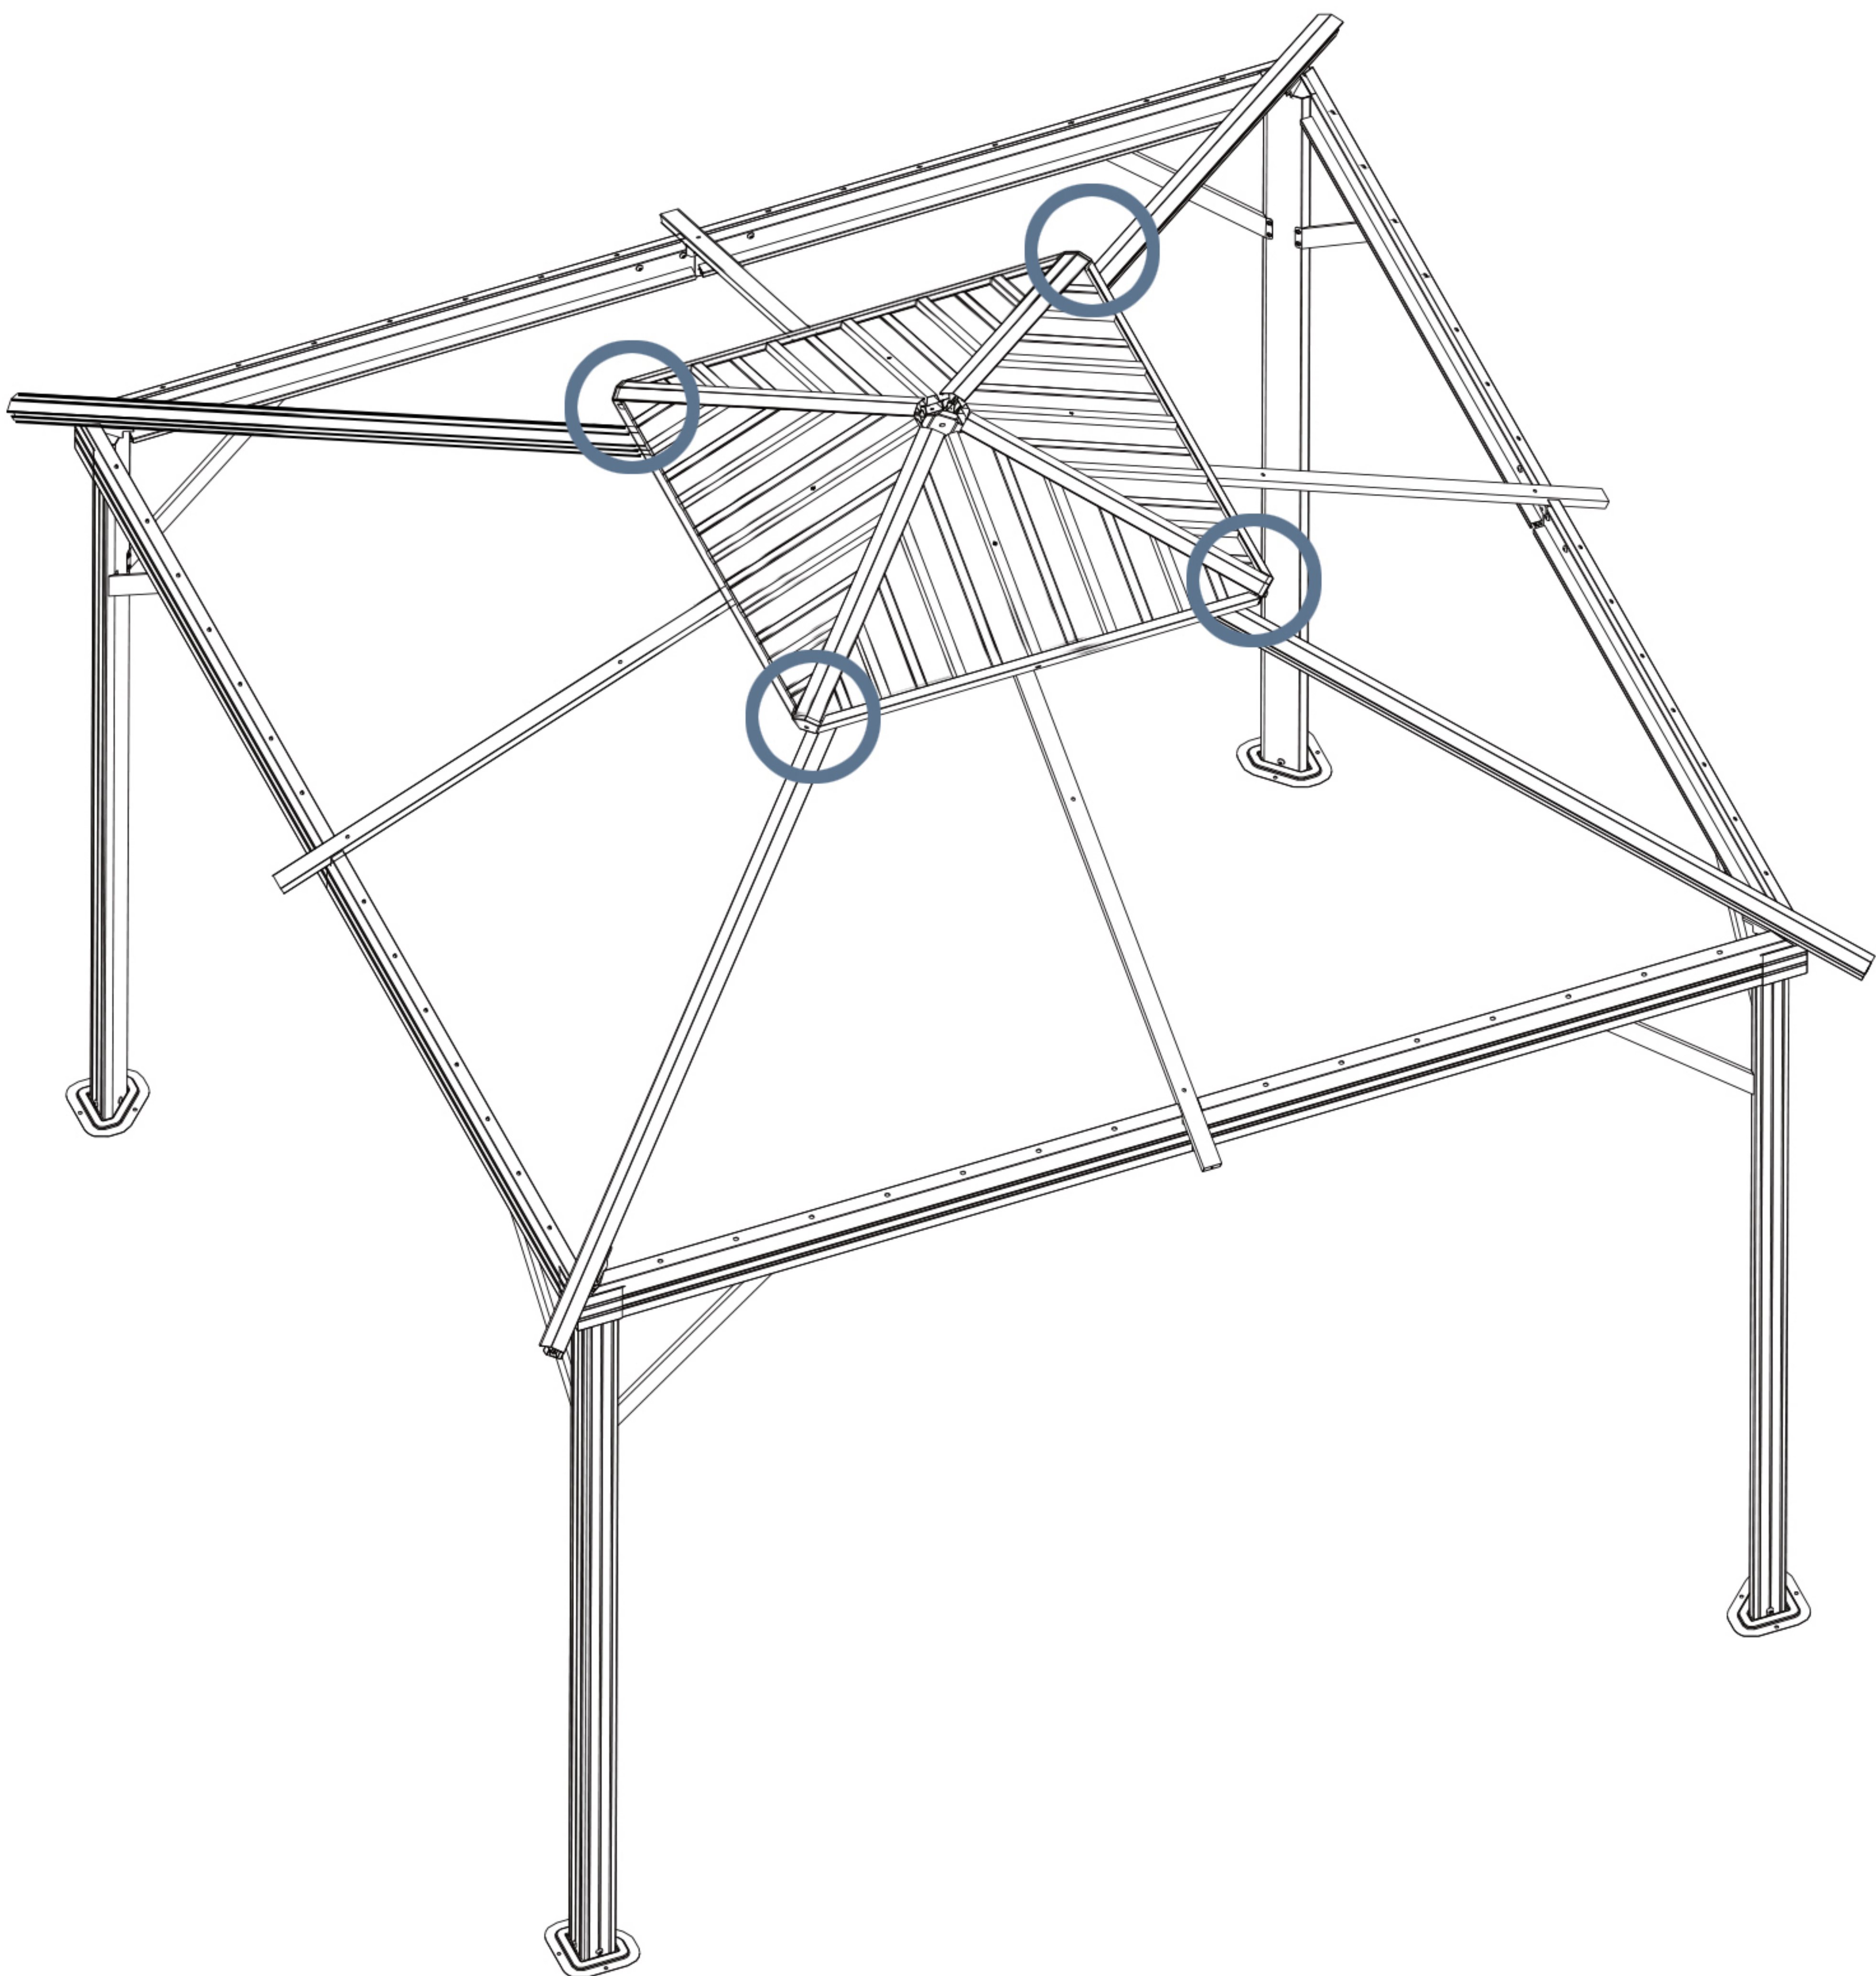


X4




STEP 13

Parts required

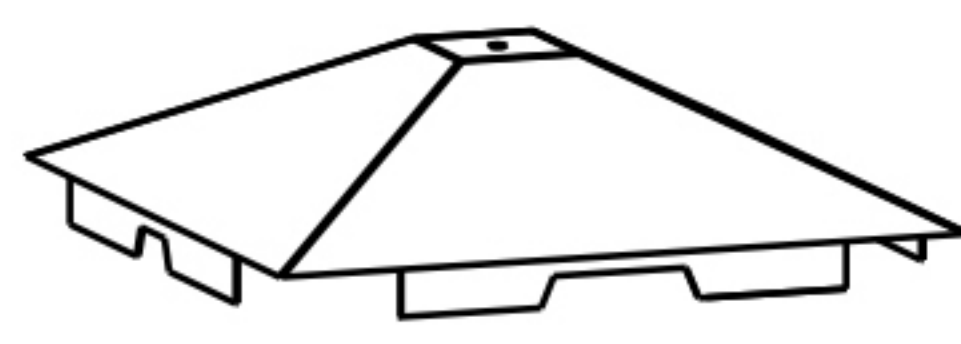



K

1pcs

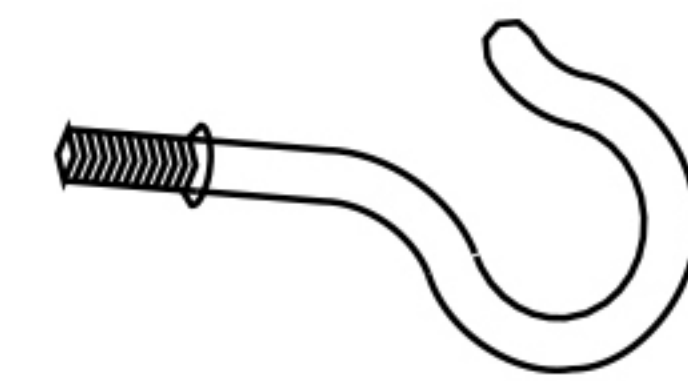



M7

1pcs

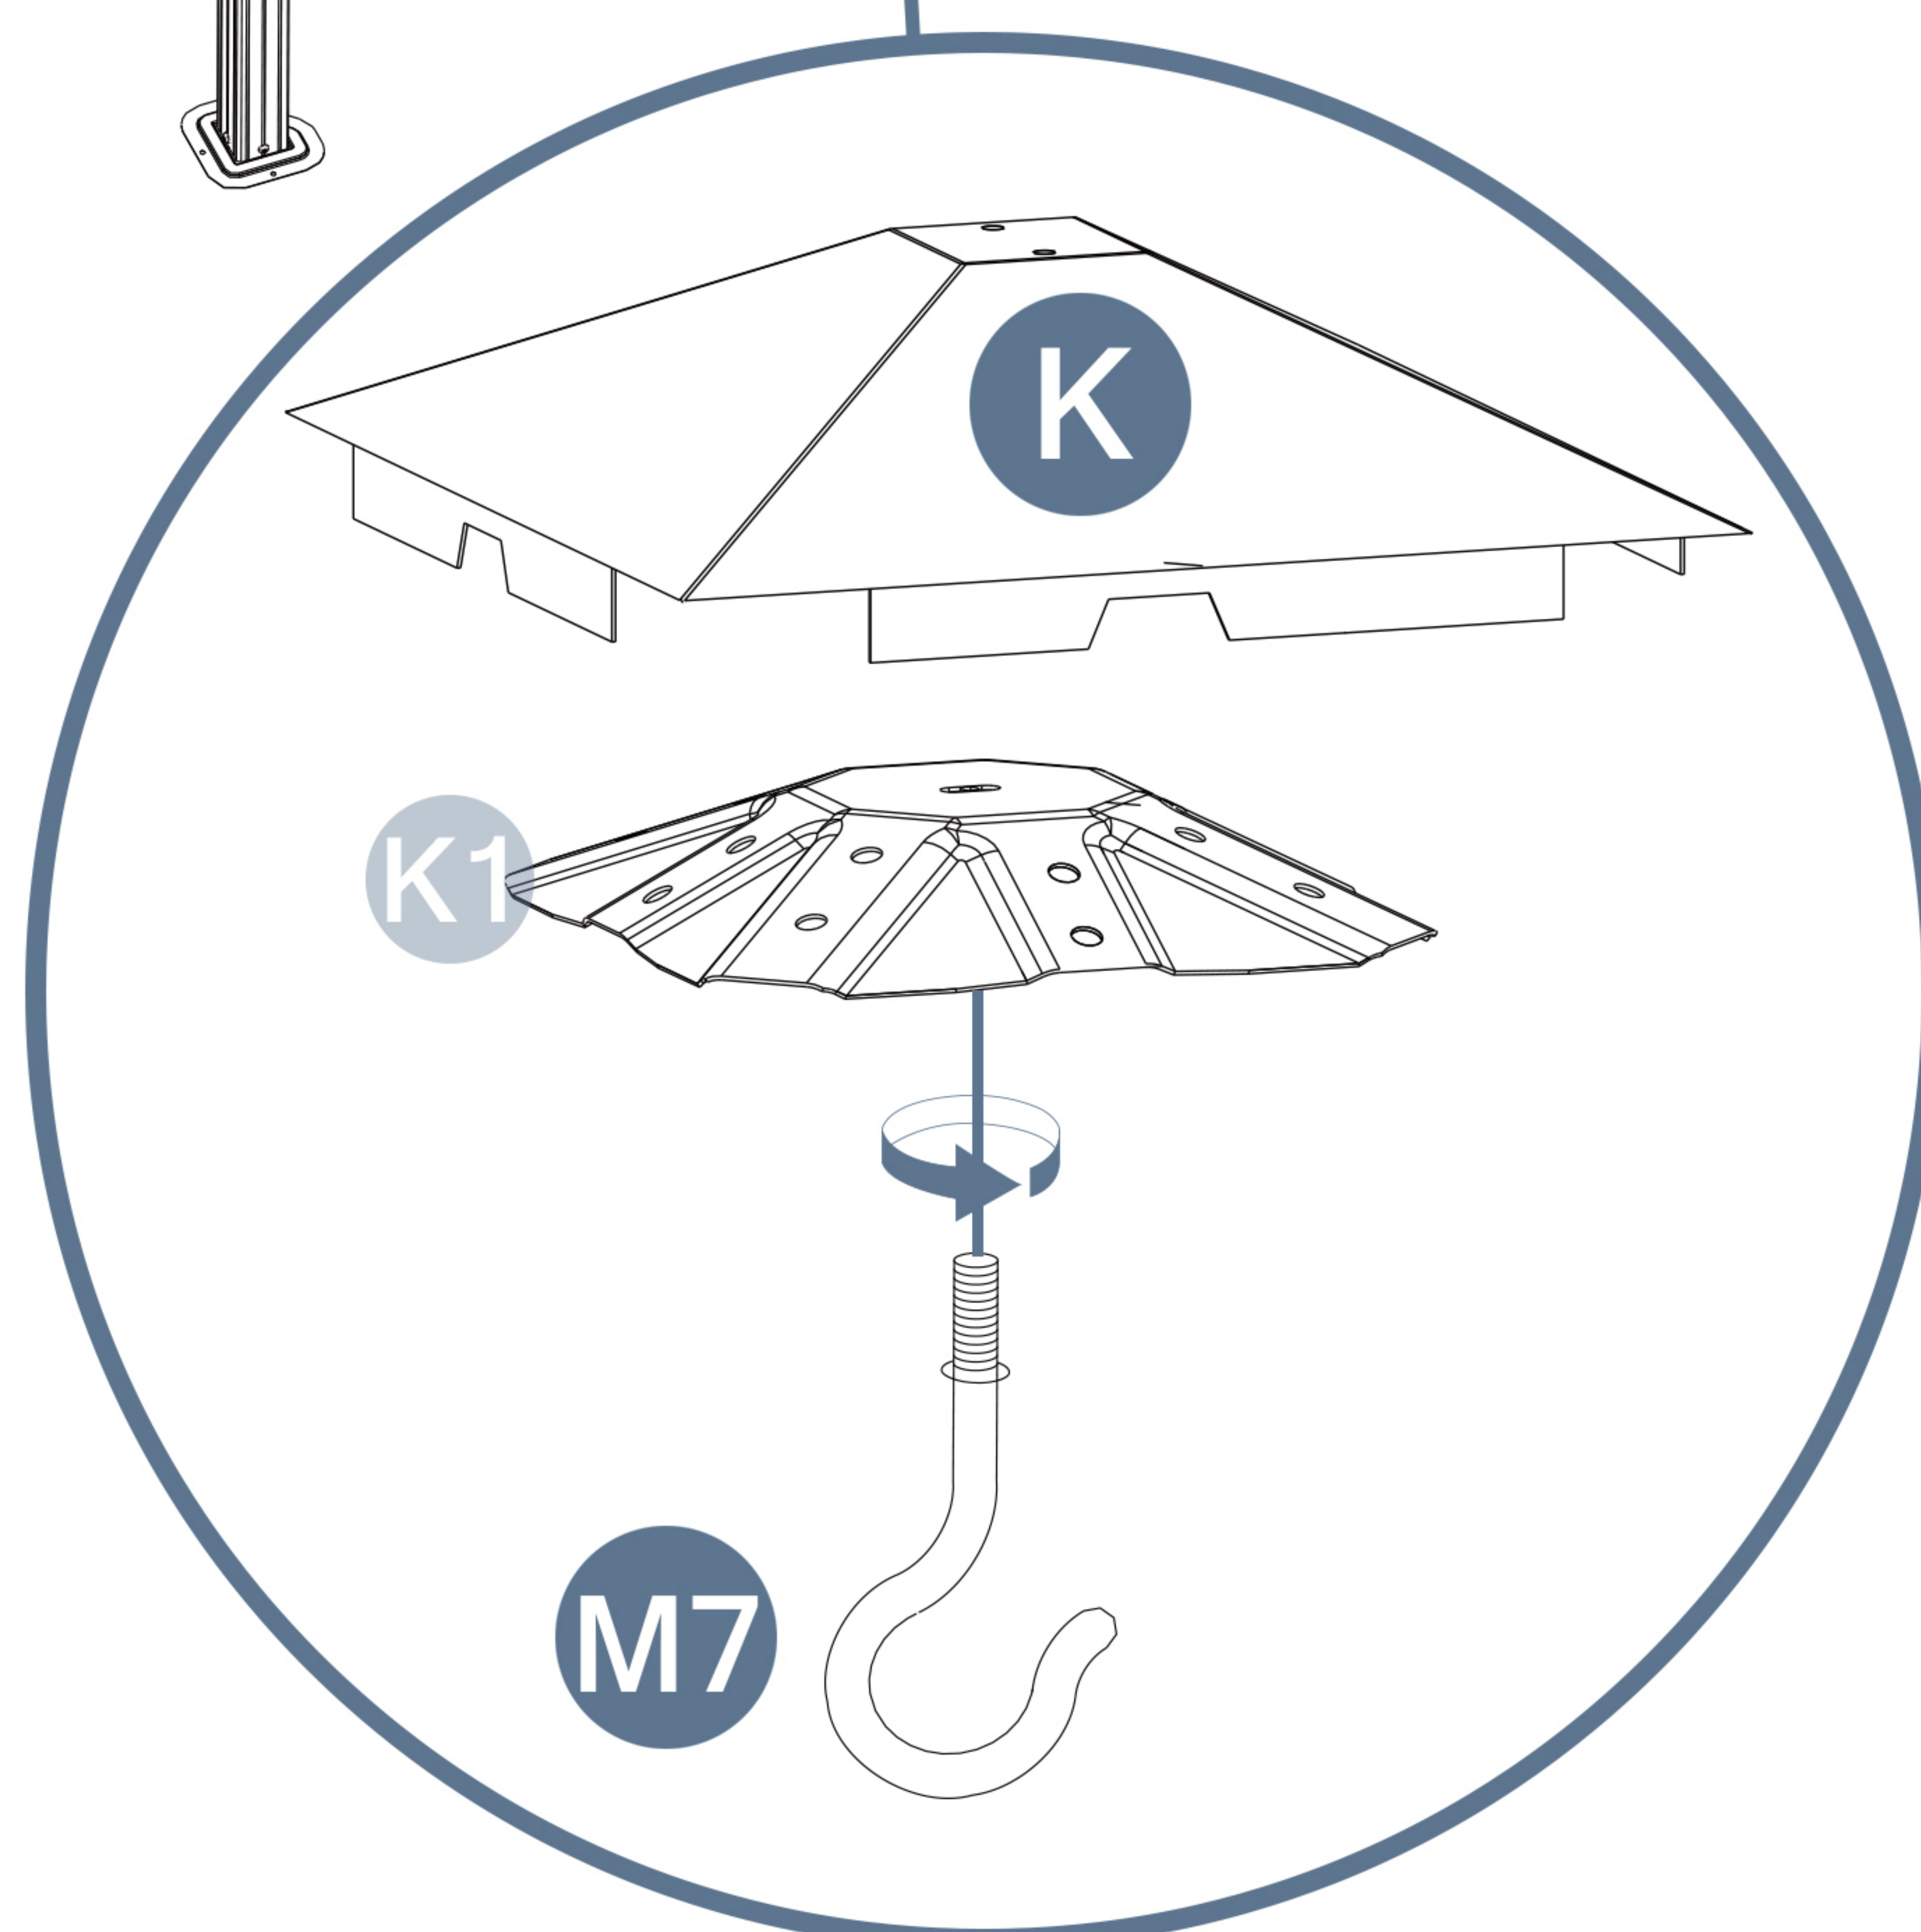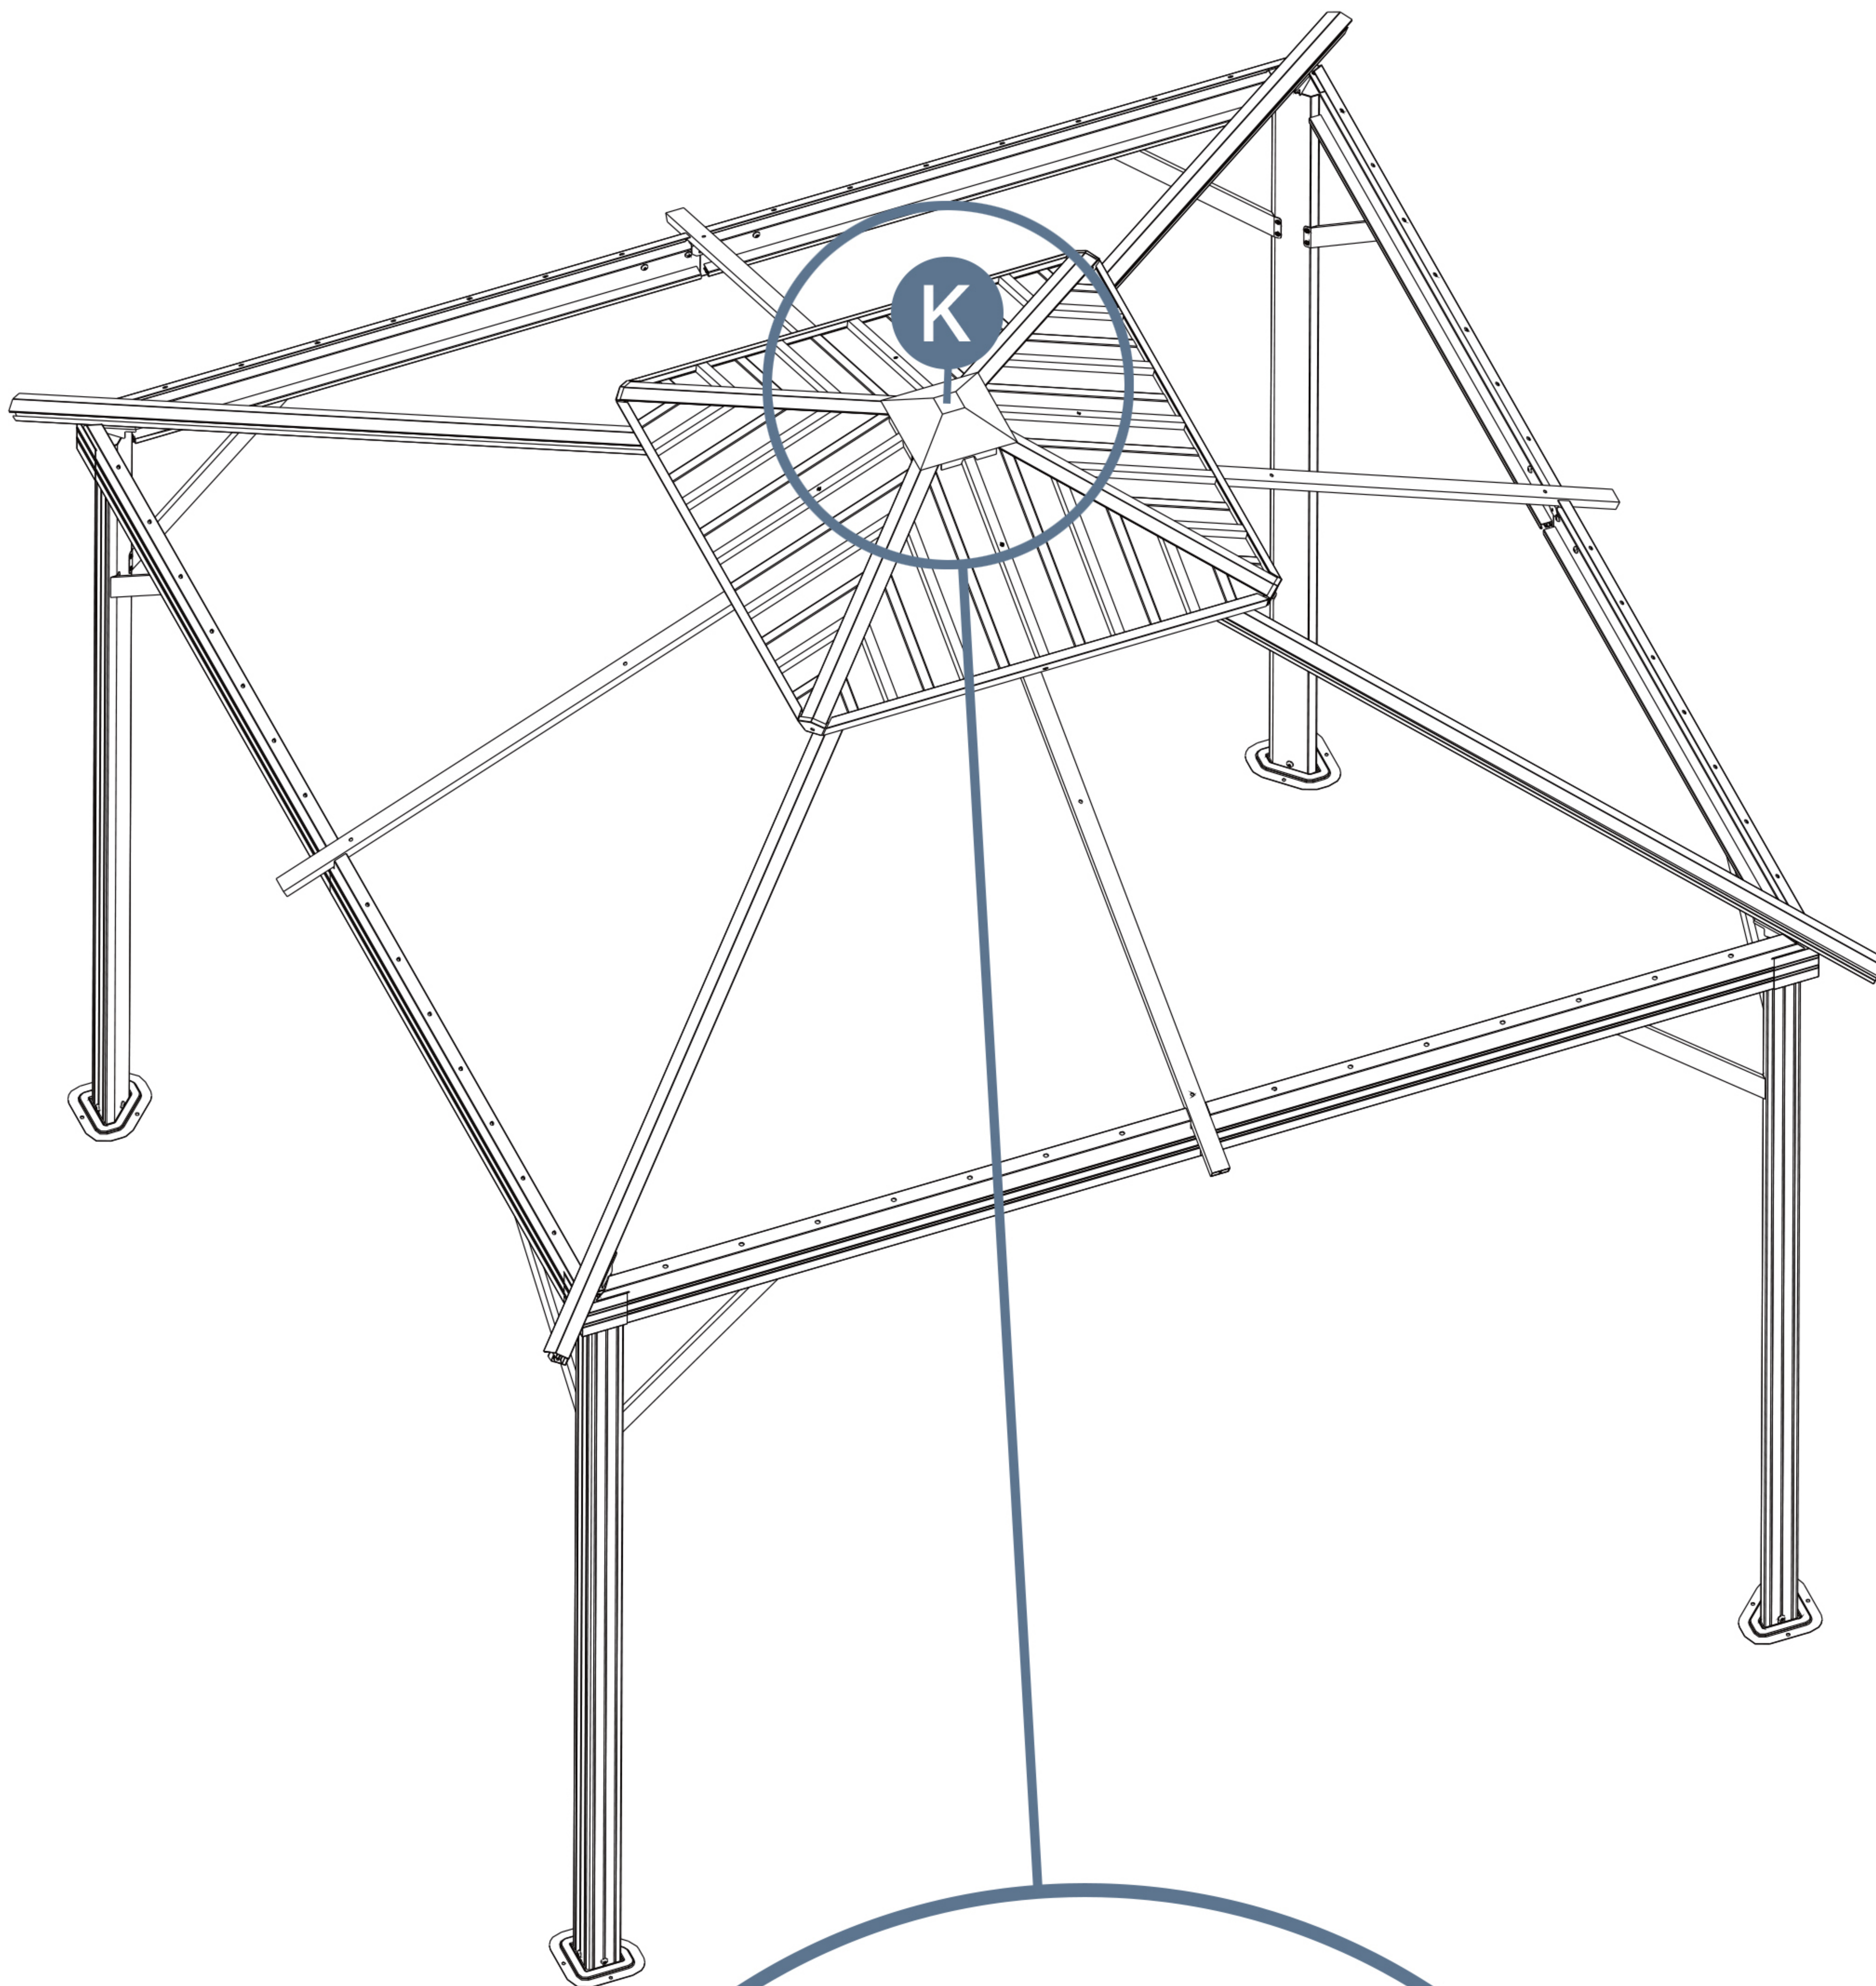


STEP 14

Parts required

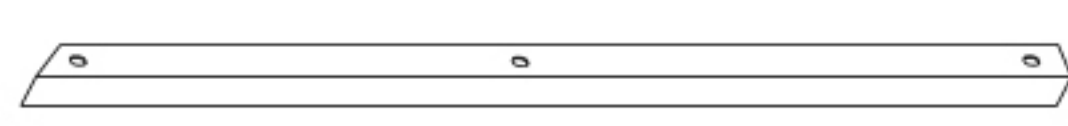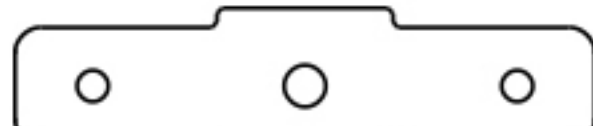 **I** 8pcs  **M3** 4pcs  **X1** 8pcs

 Part I should be placed as shown in the picture.

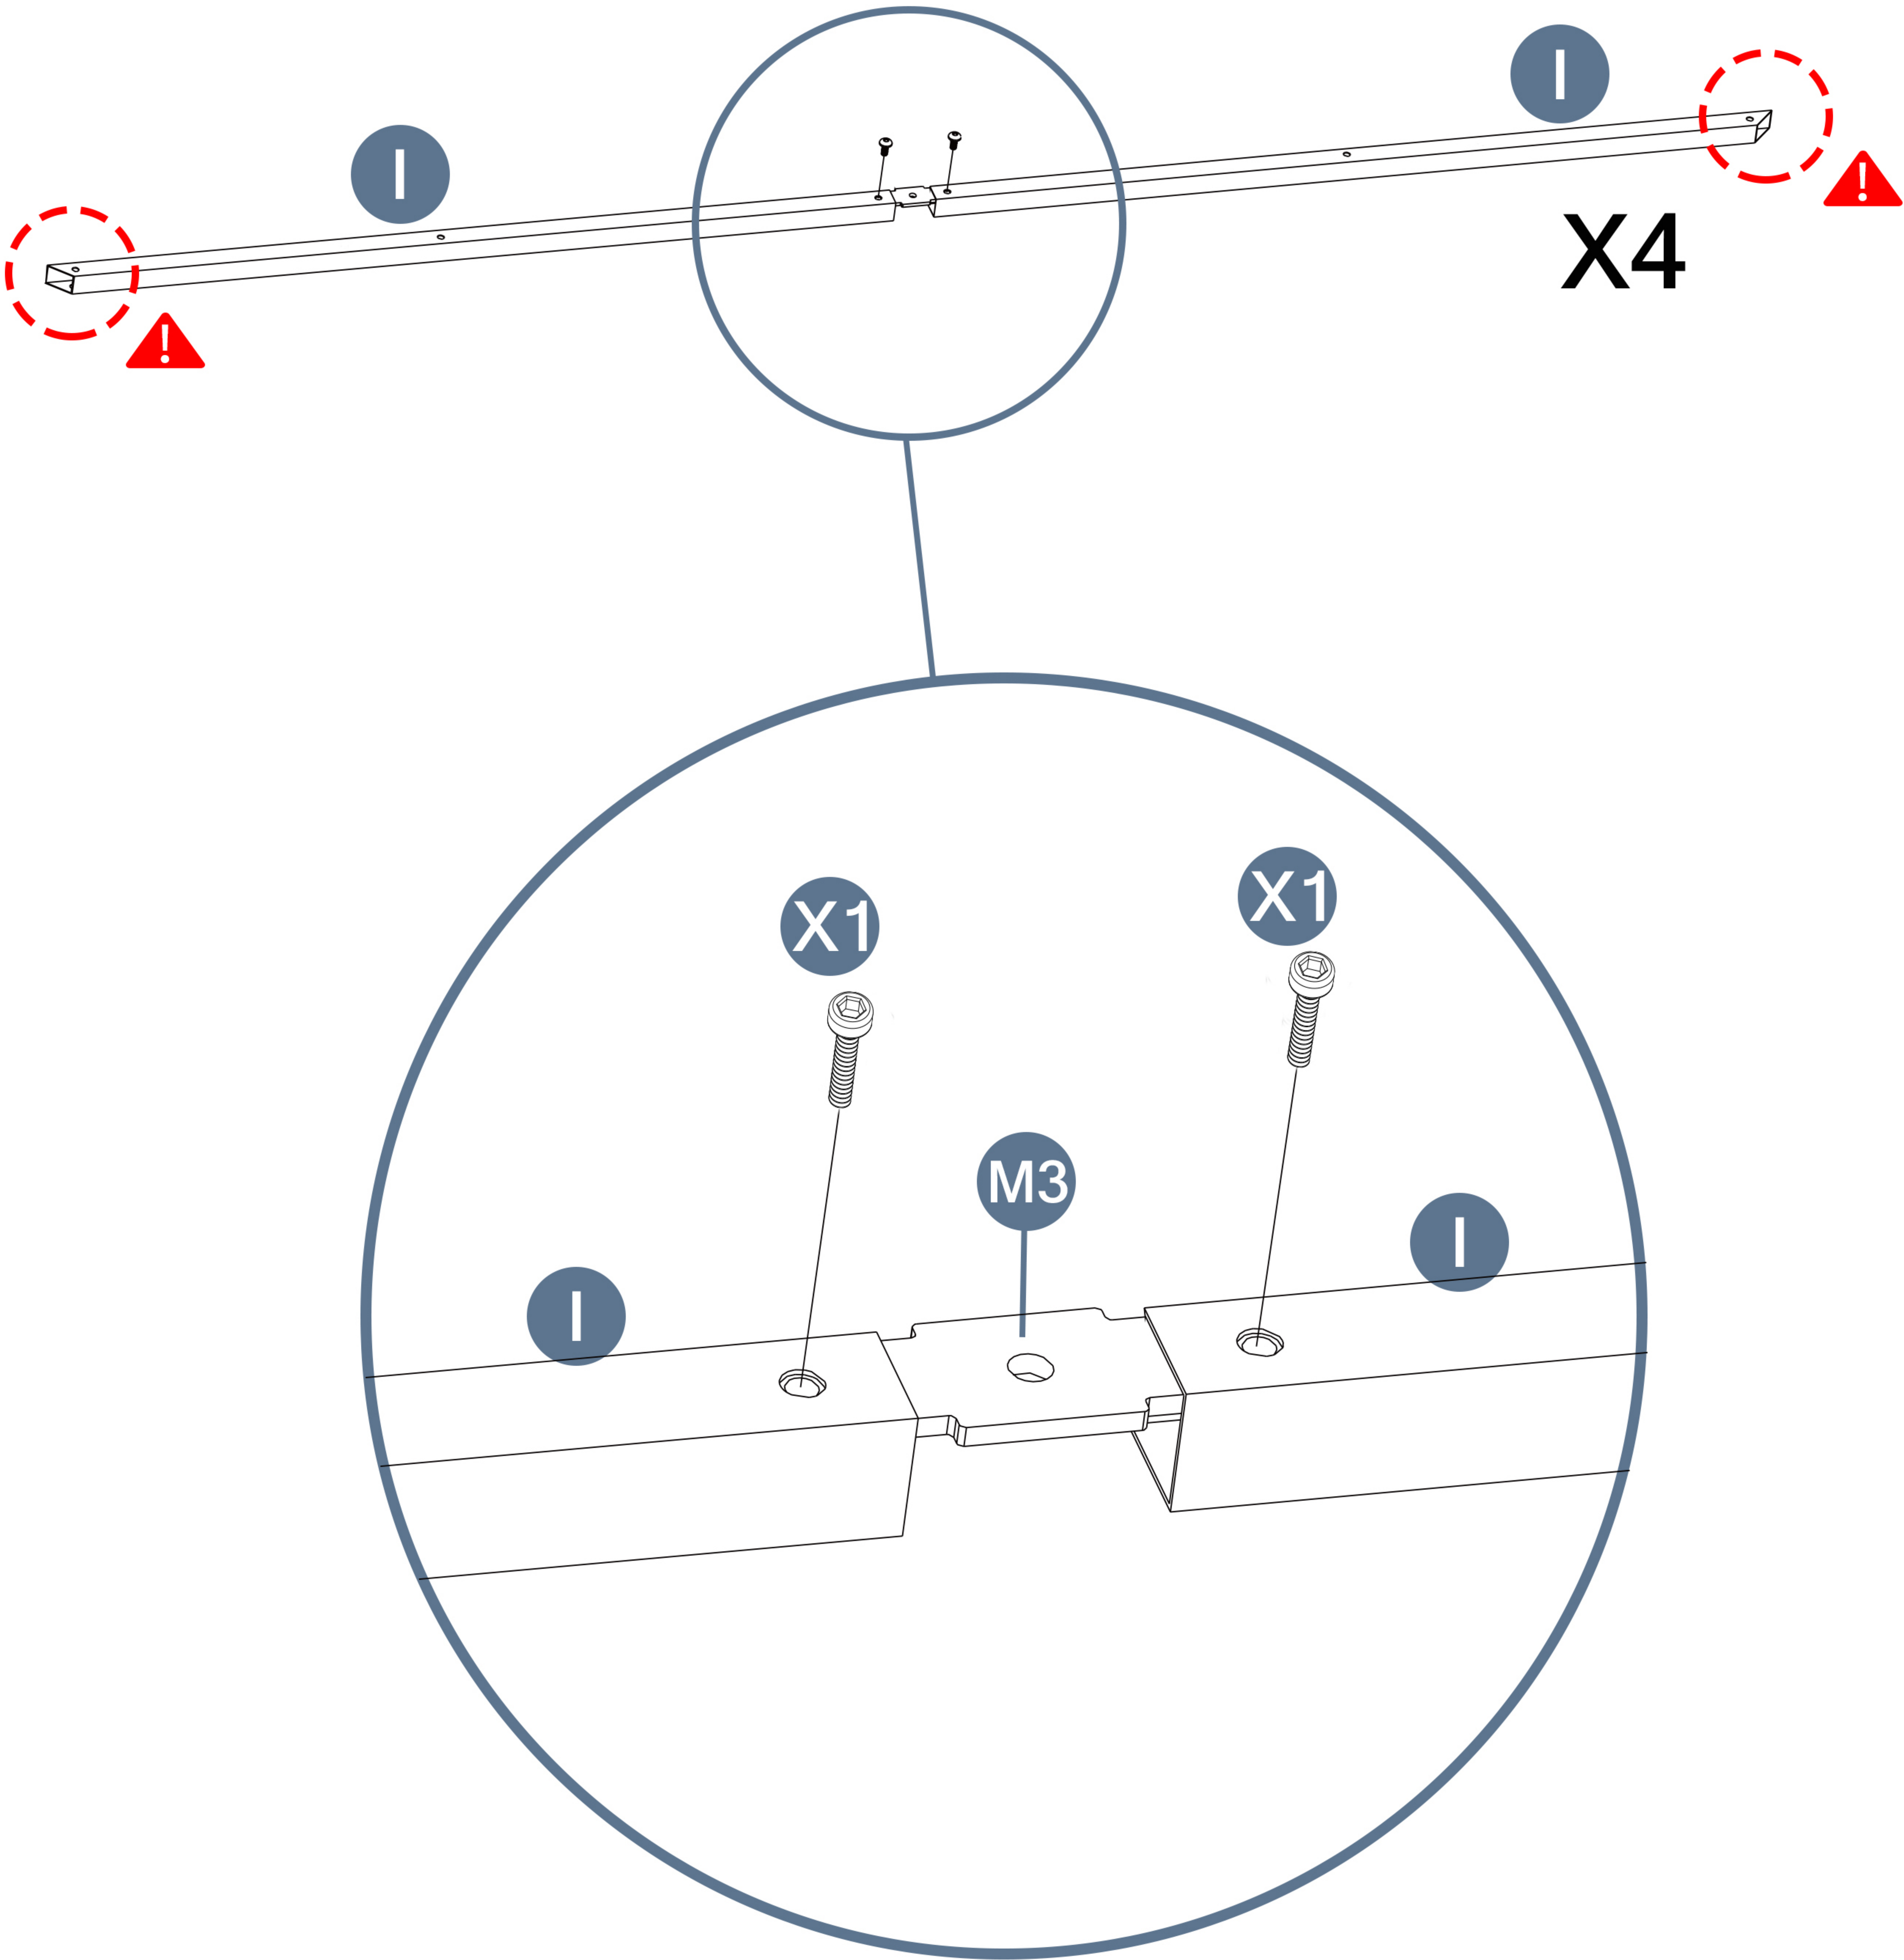


STEP 15


Parts required





M4 4pcs

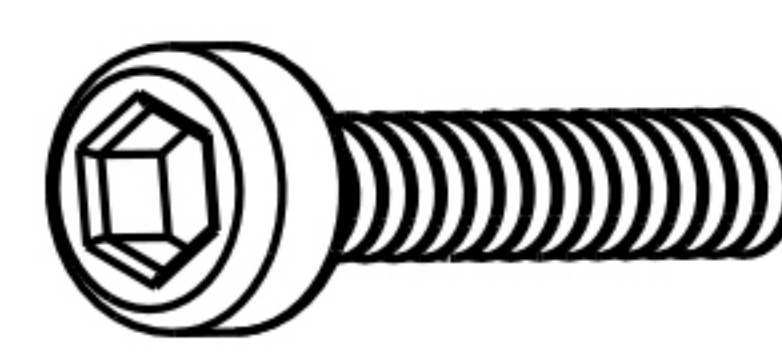



X1 12pcs

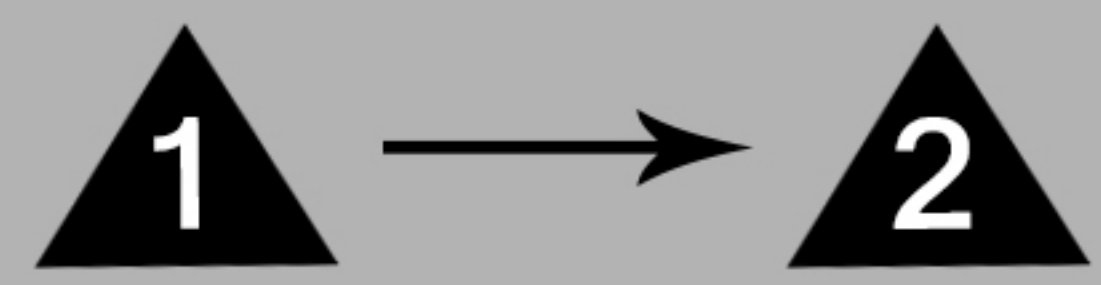

To better align the screws for practical situations, do not fully tighten screws initially.

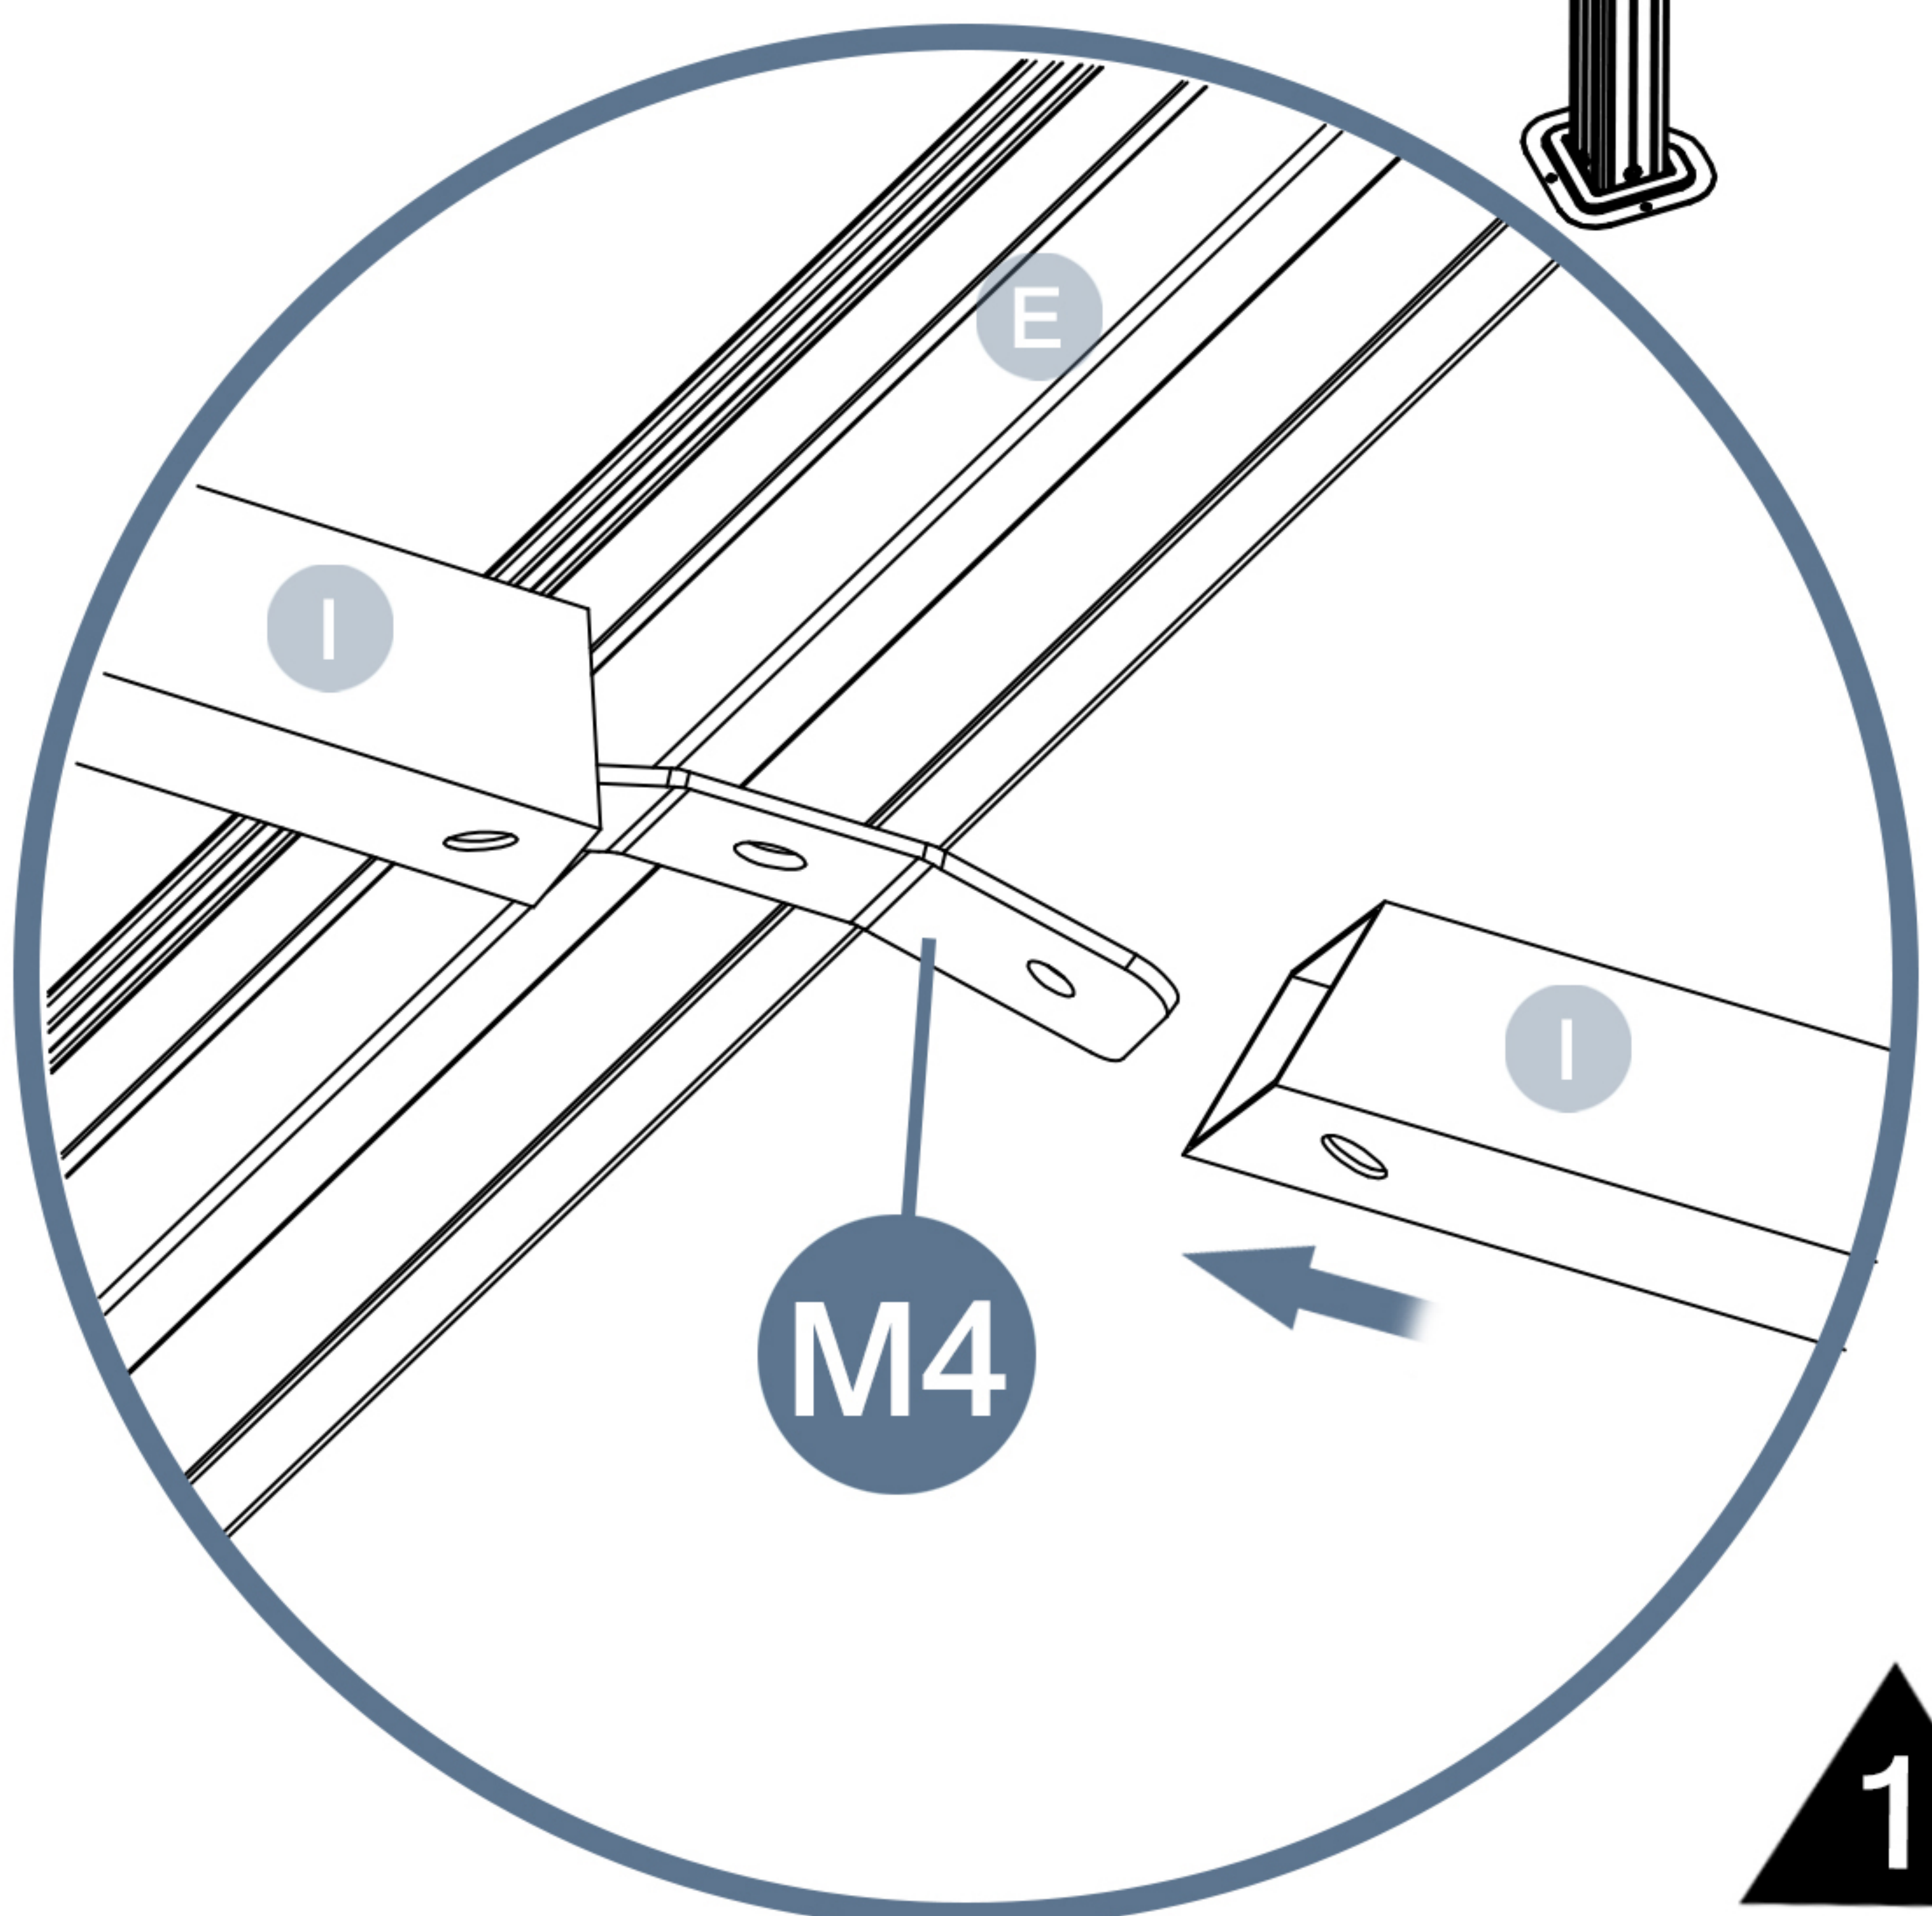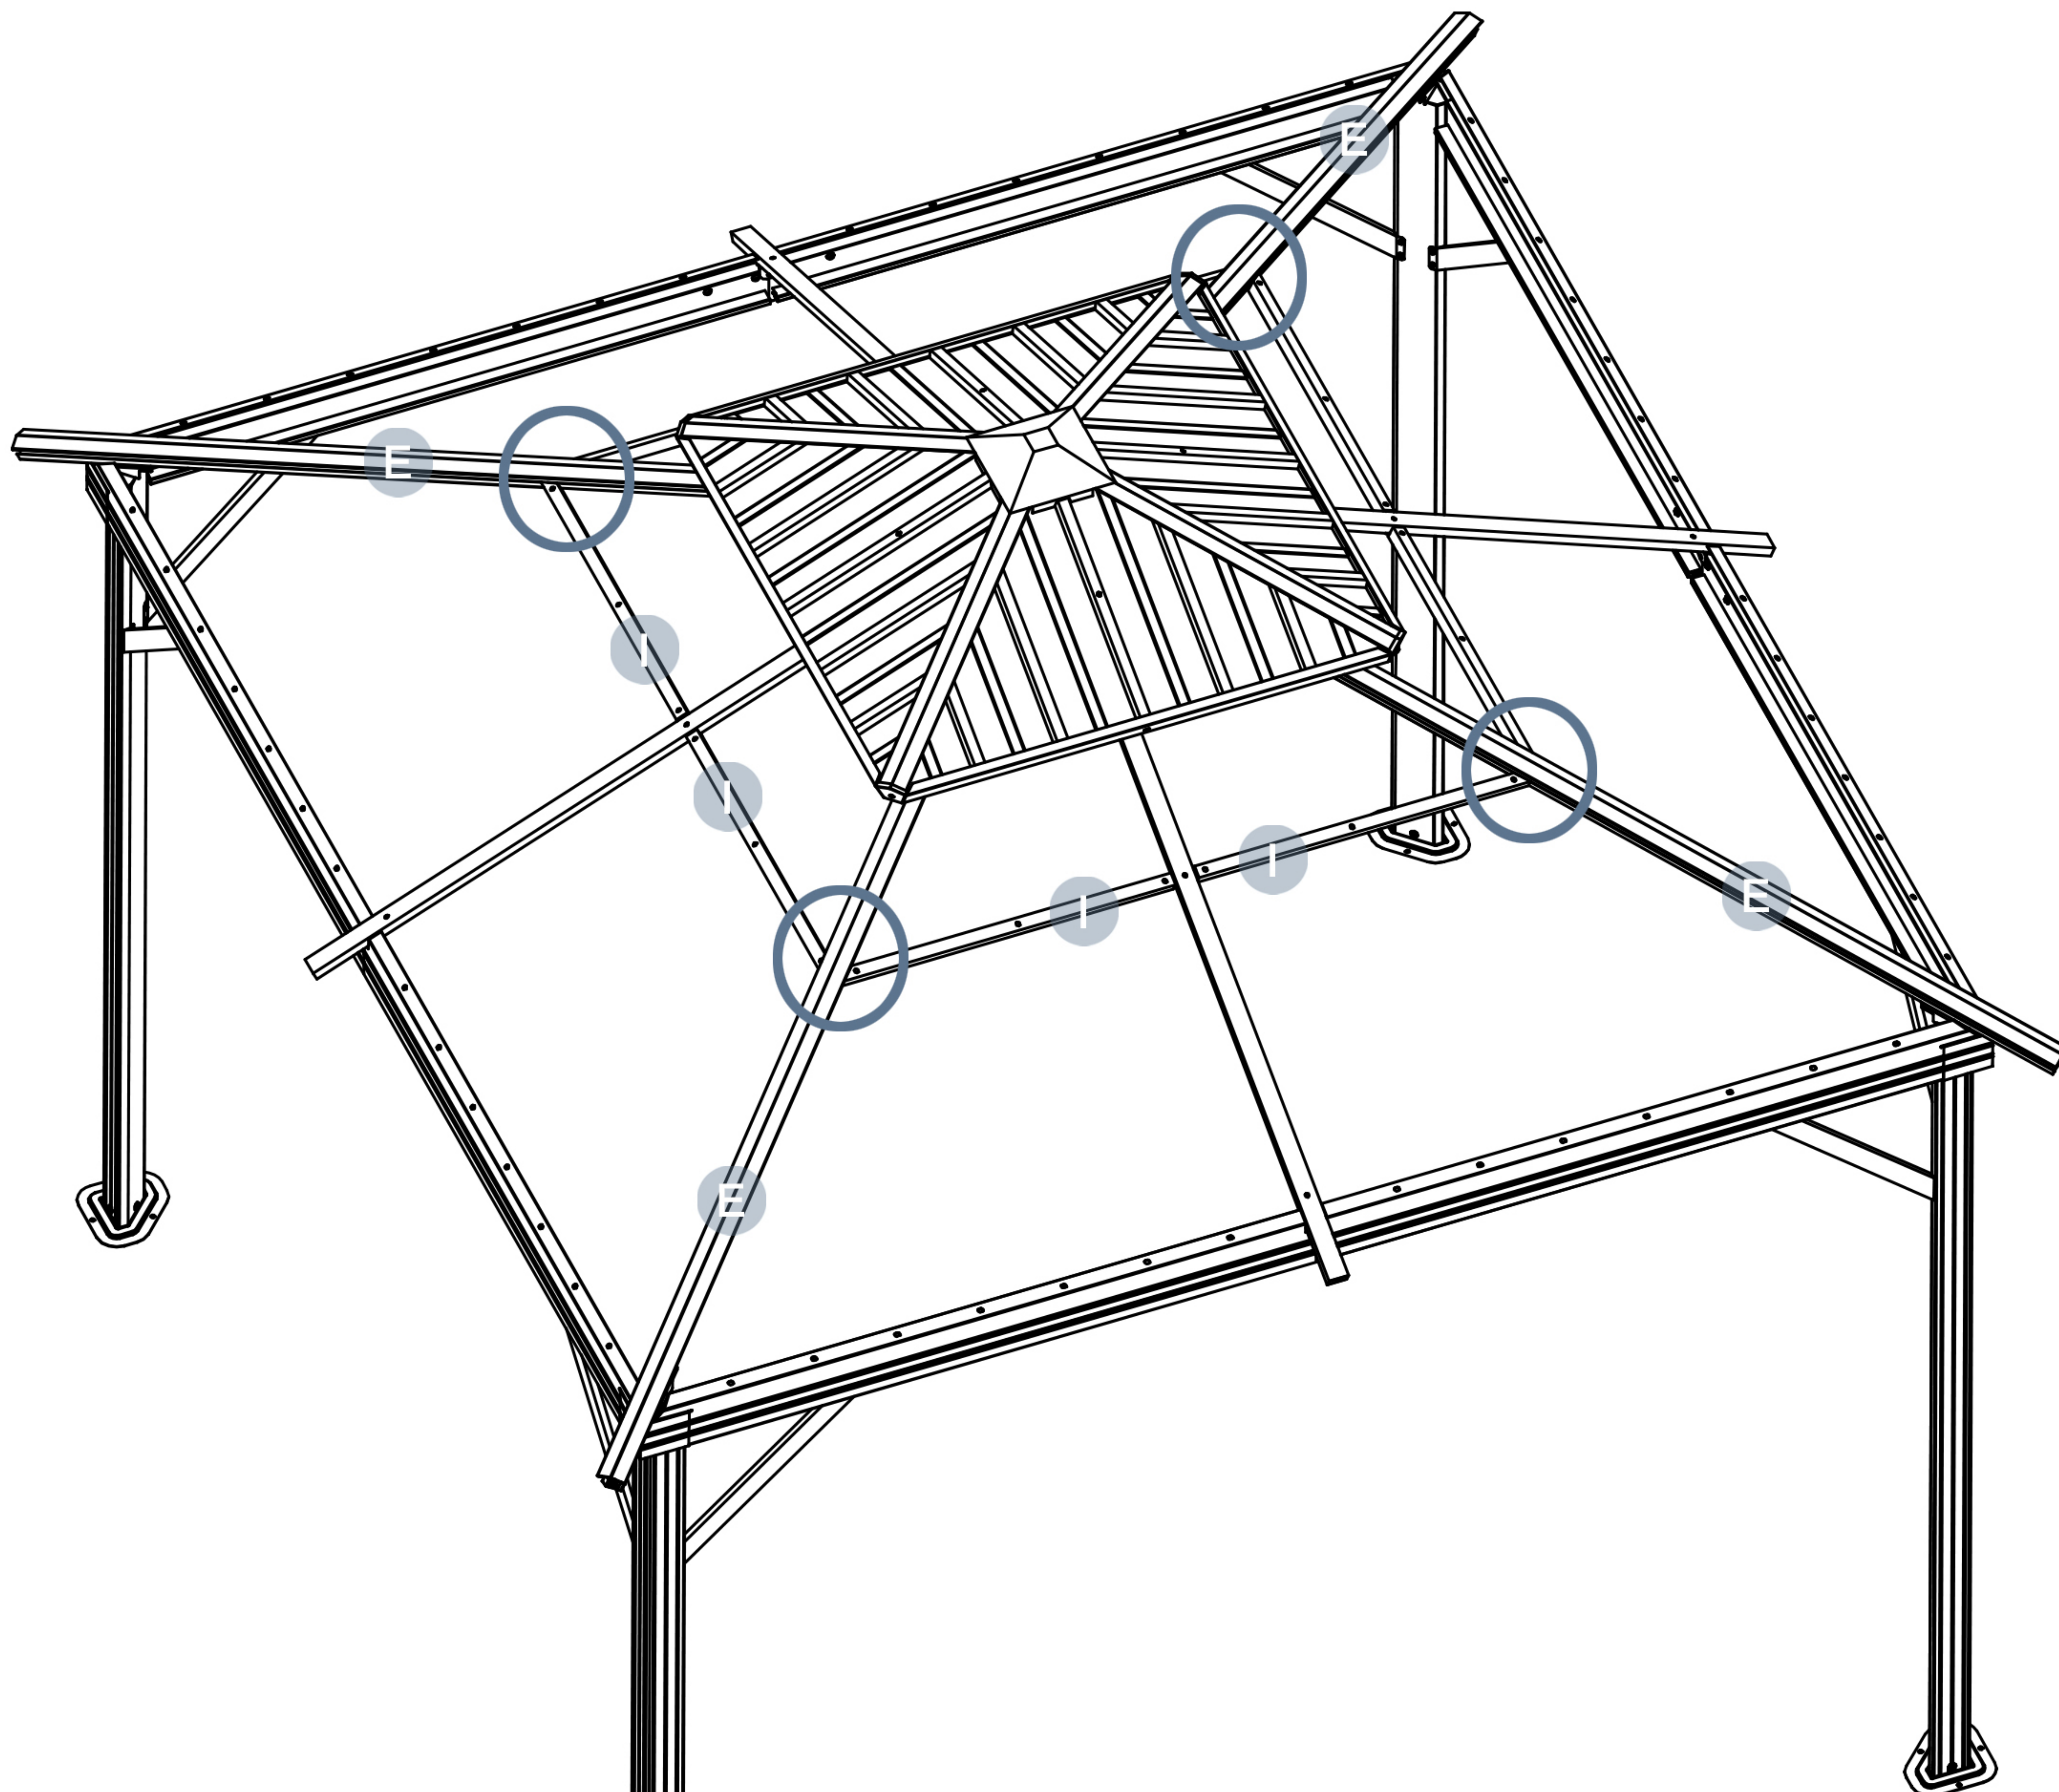


1

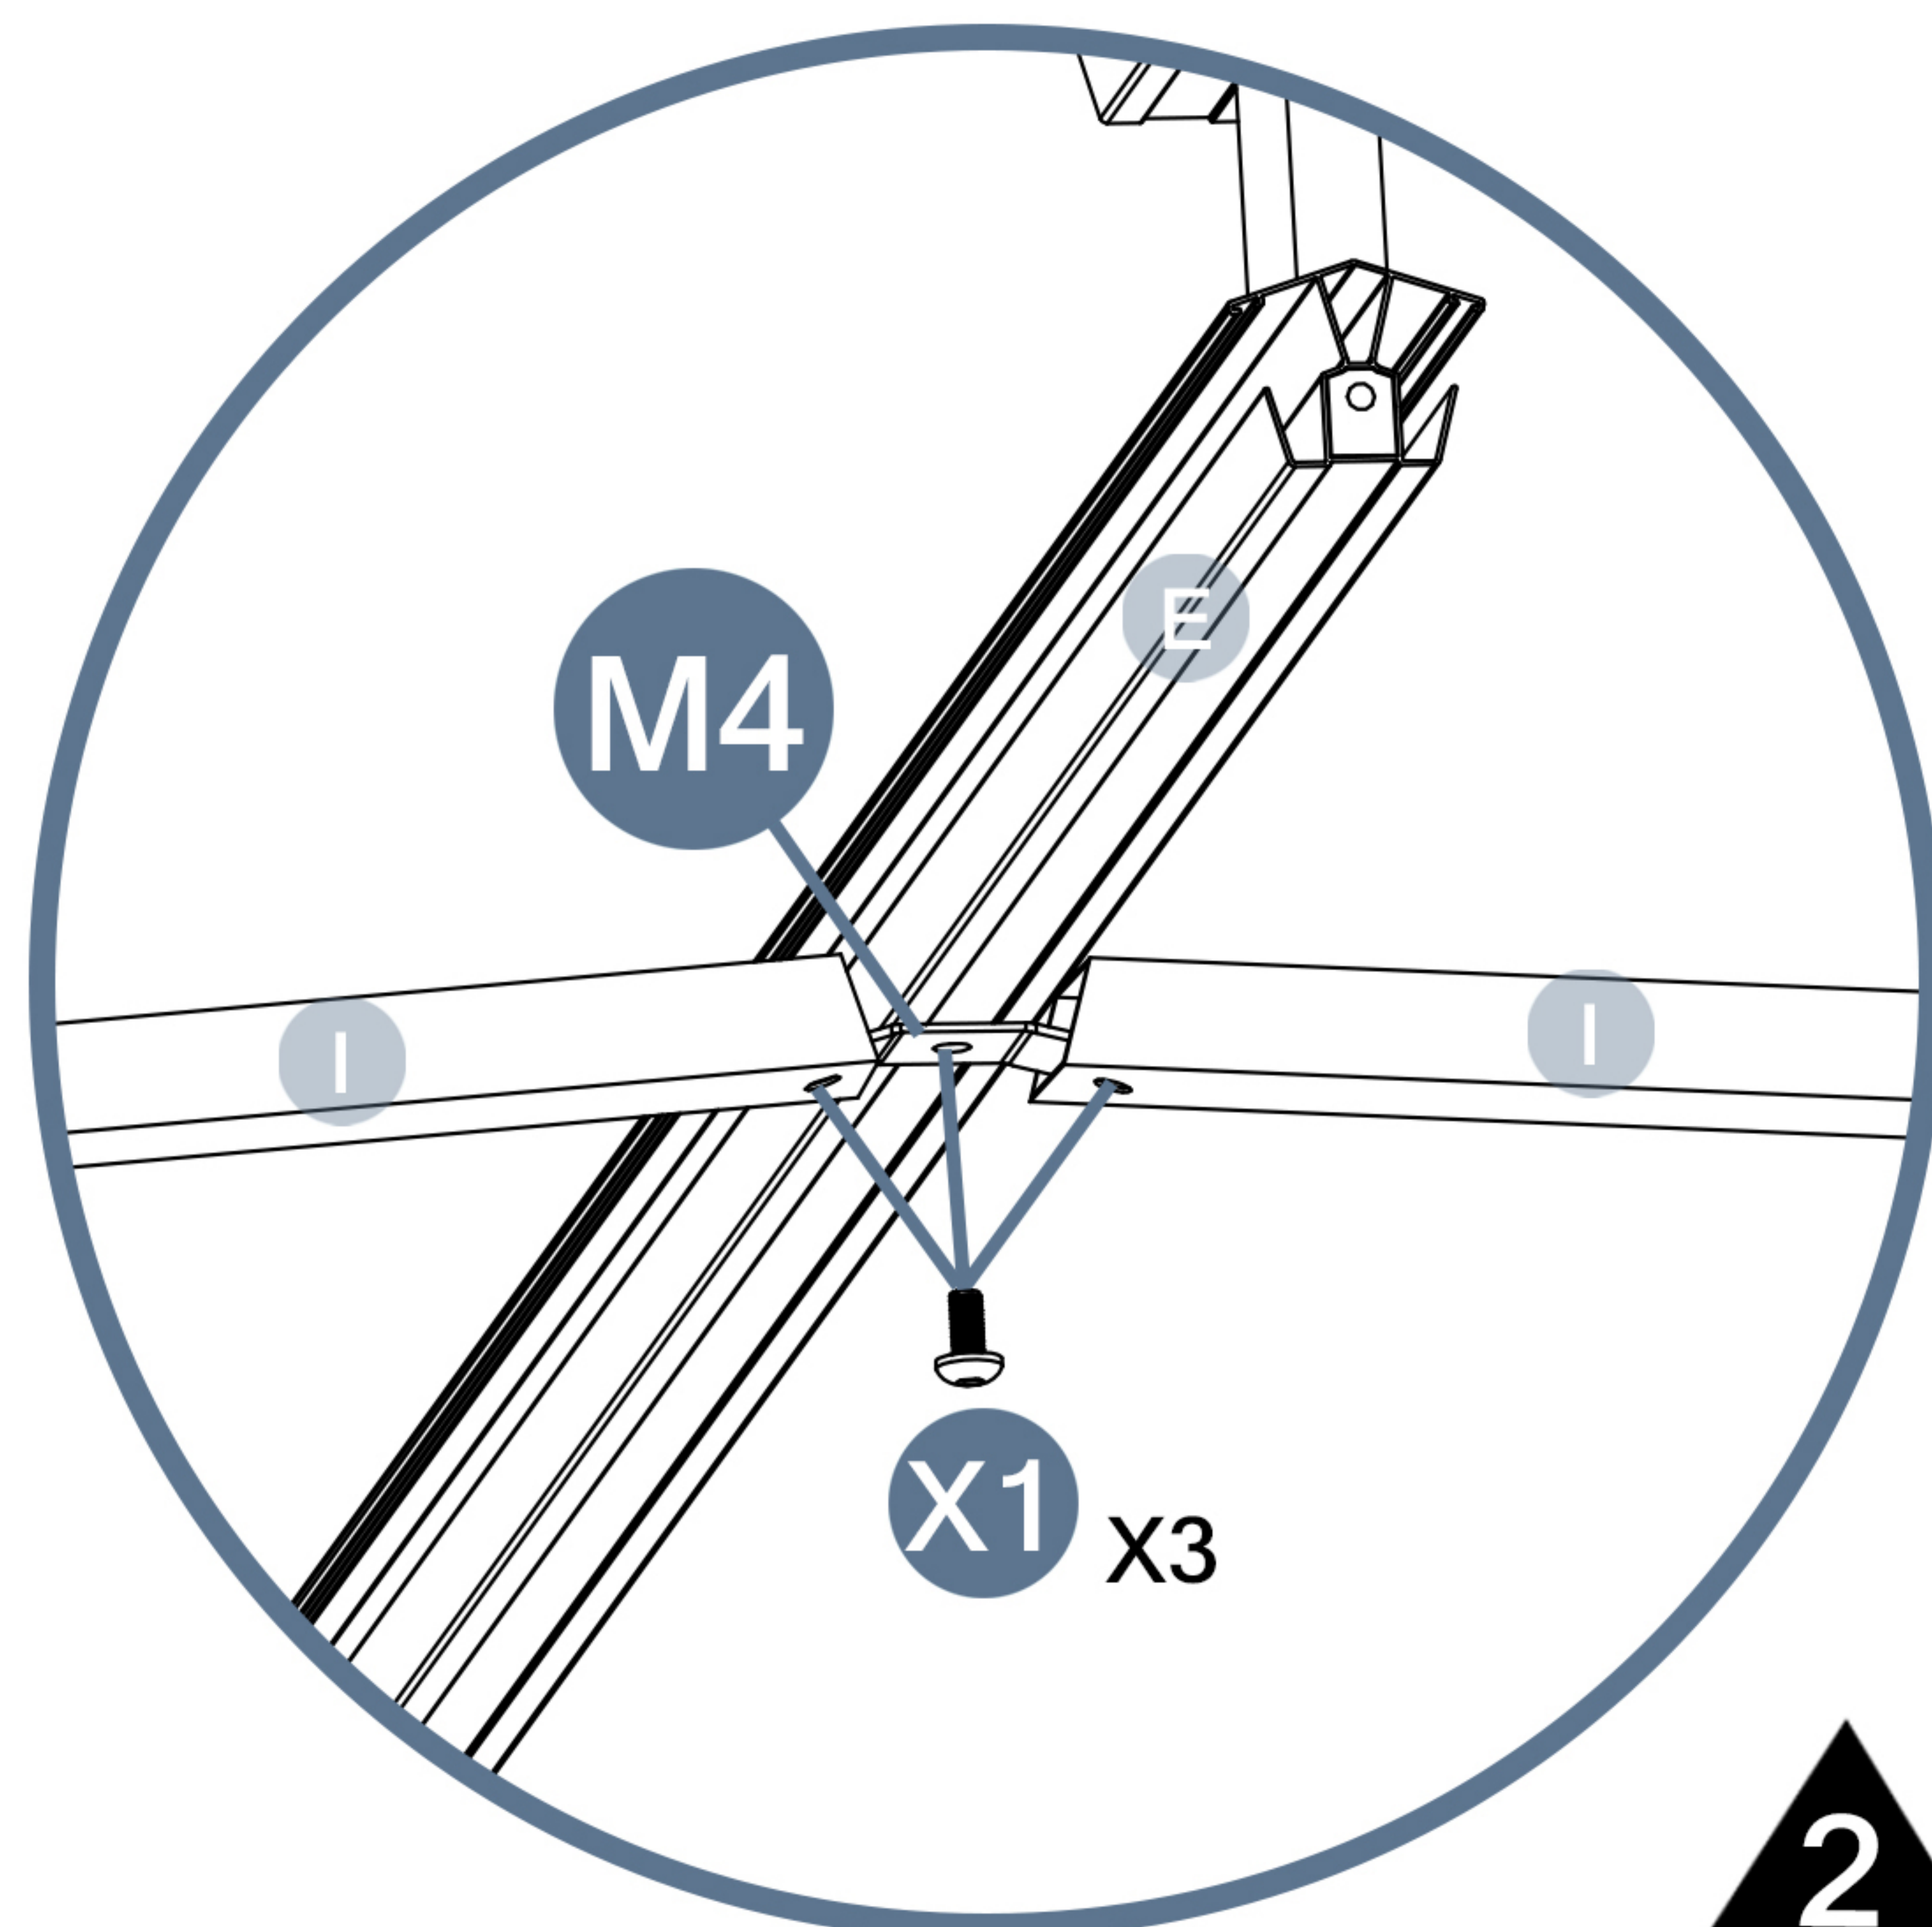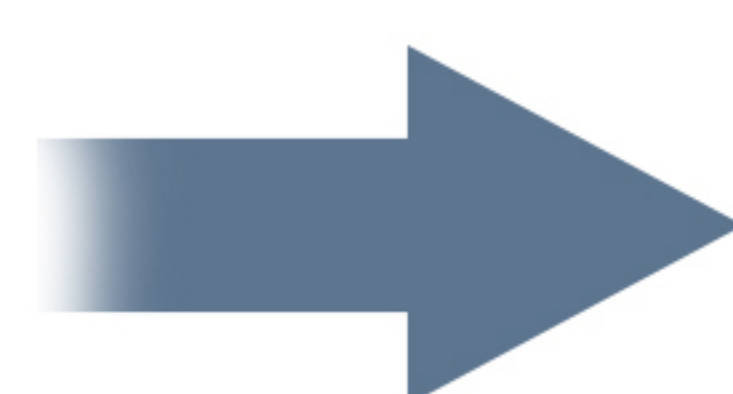

2


STEP 16

Parts required

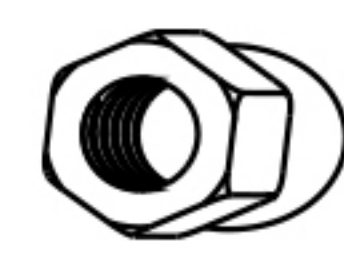






X6 4pcs

 Only **X6** screws are used in this step. Please hide the **X6** nuts. Step 17 will be used.



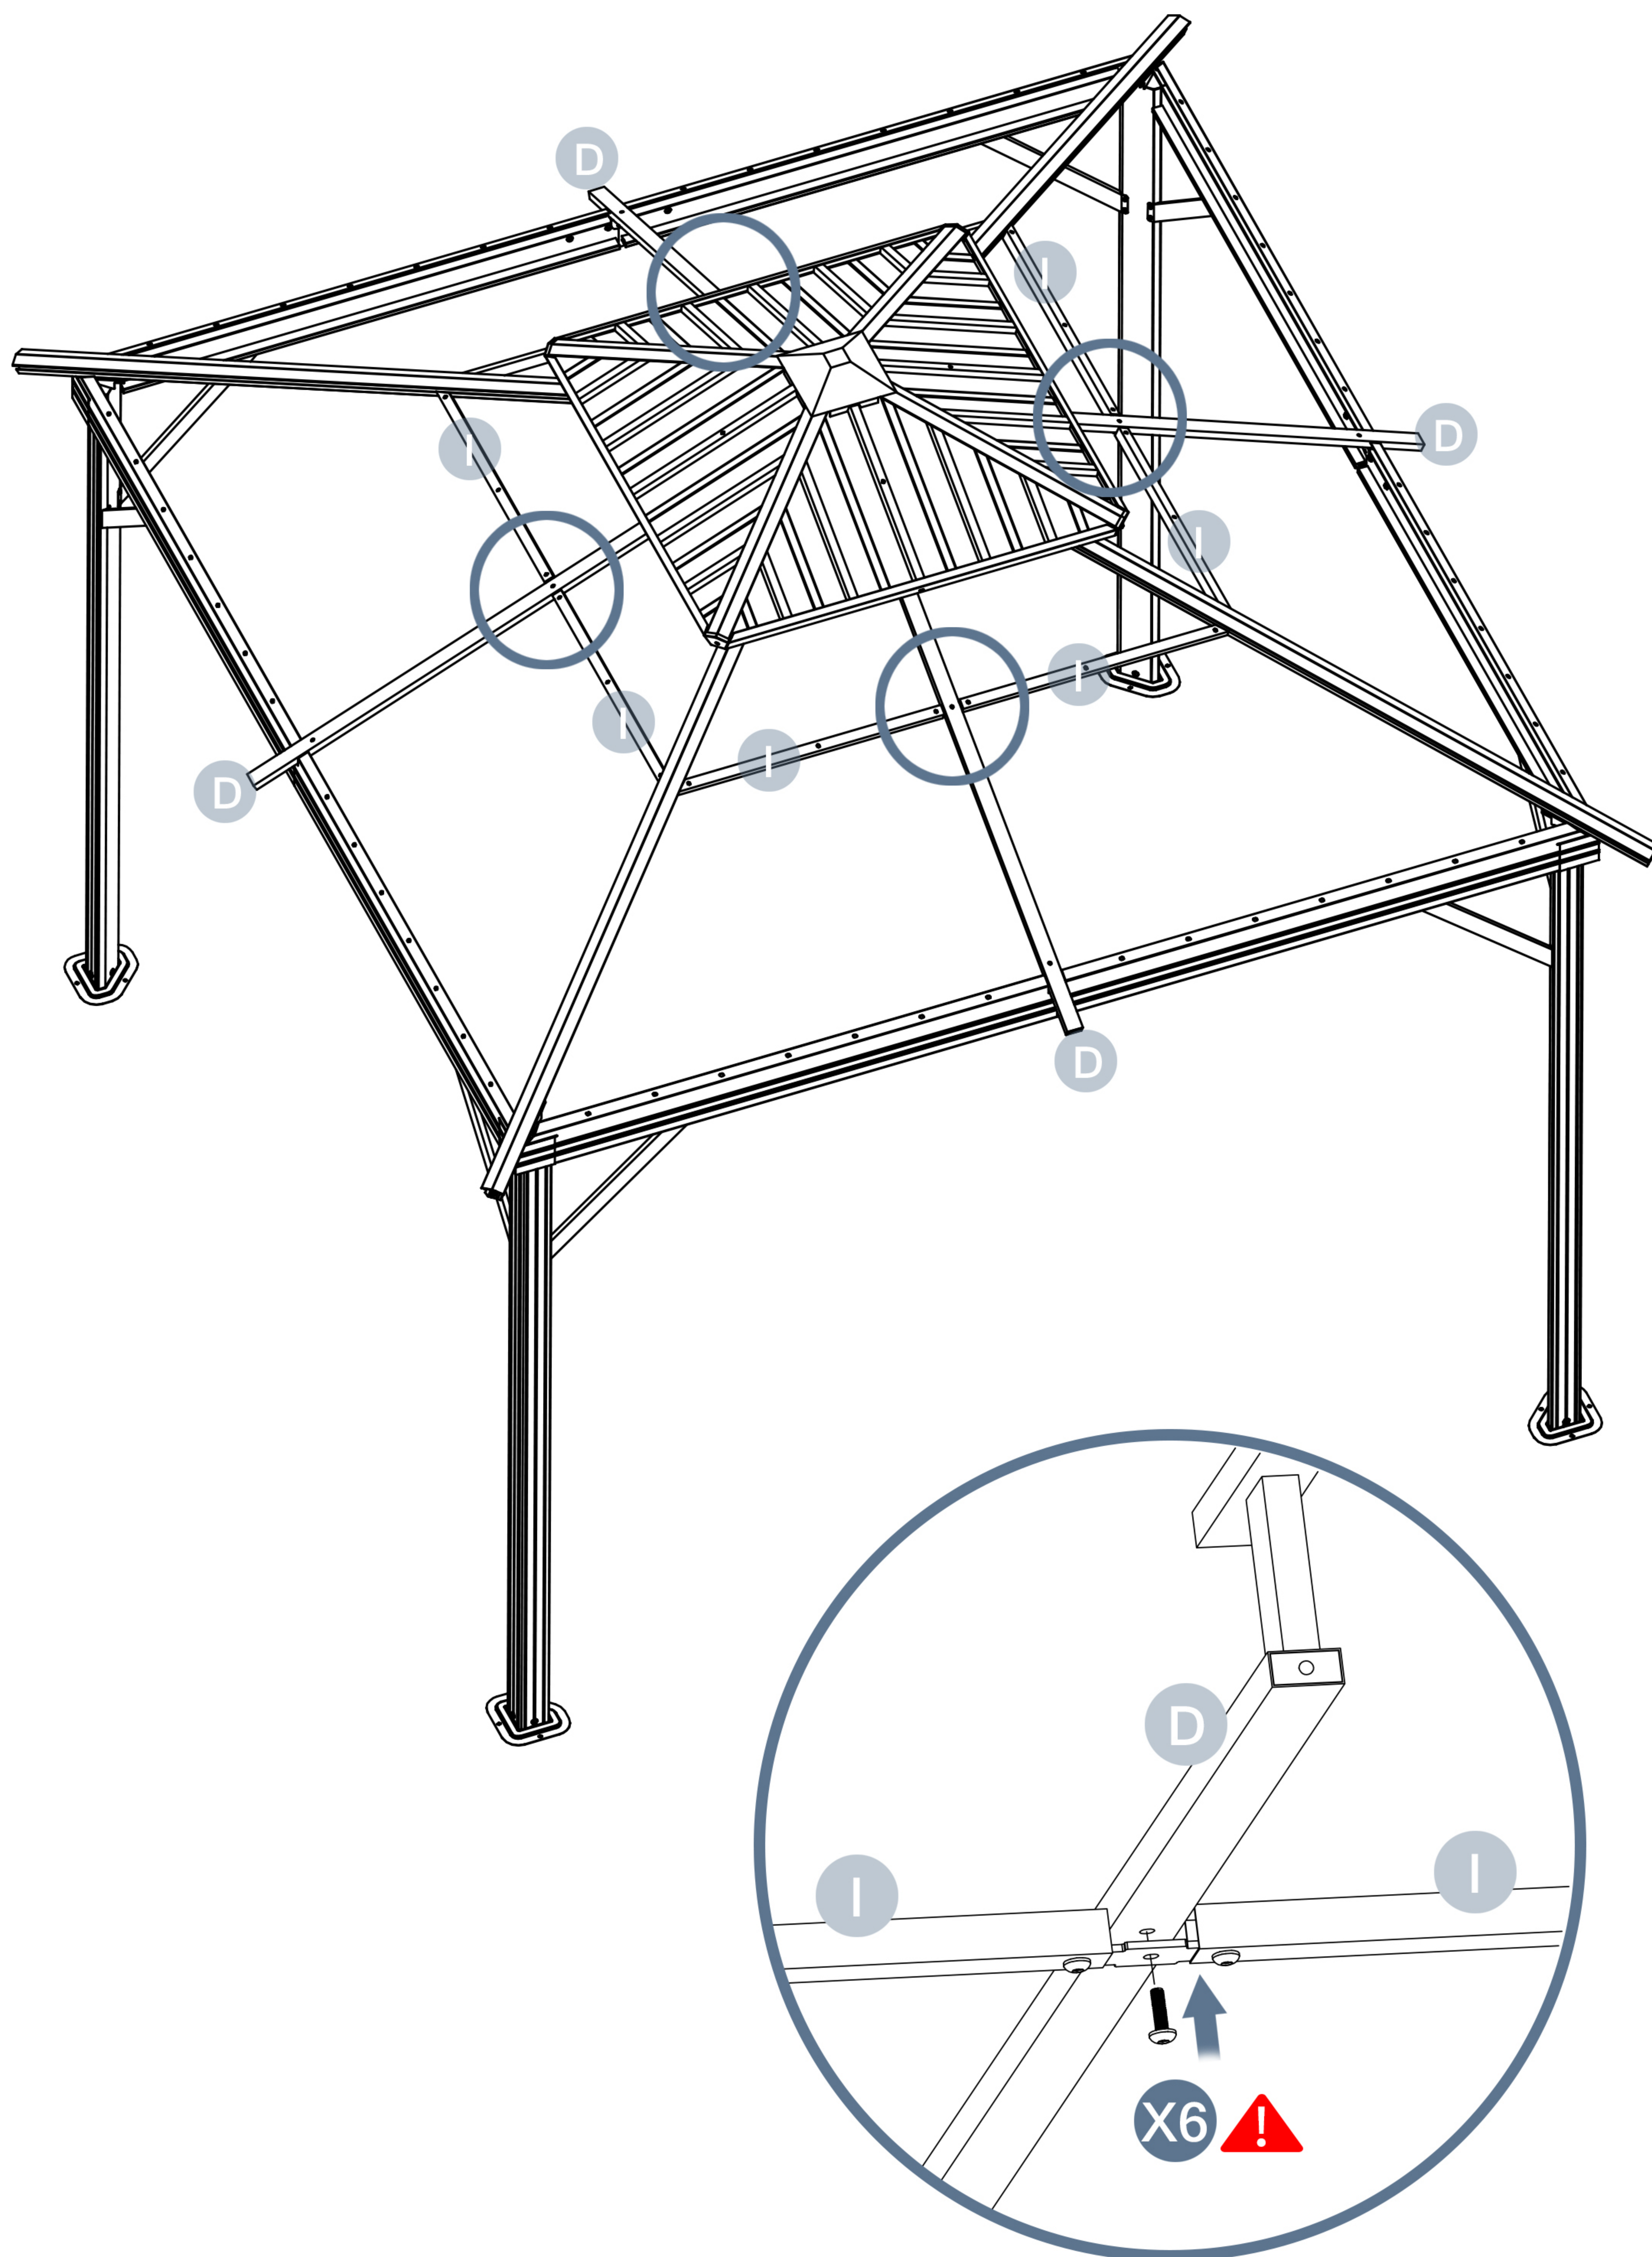


STEP 17



Parts required

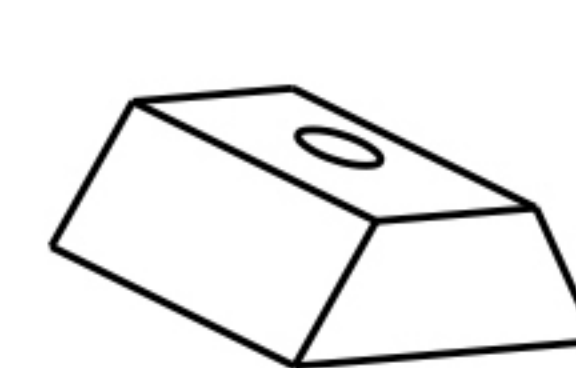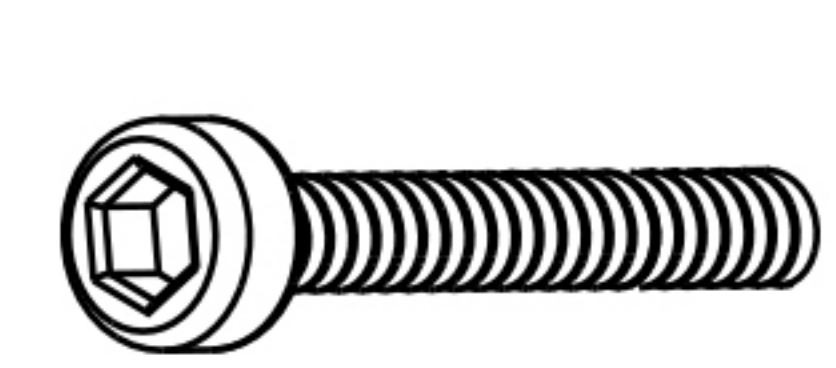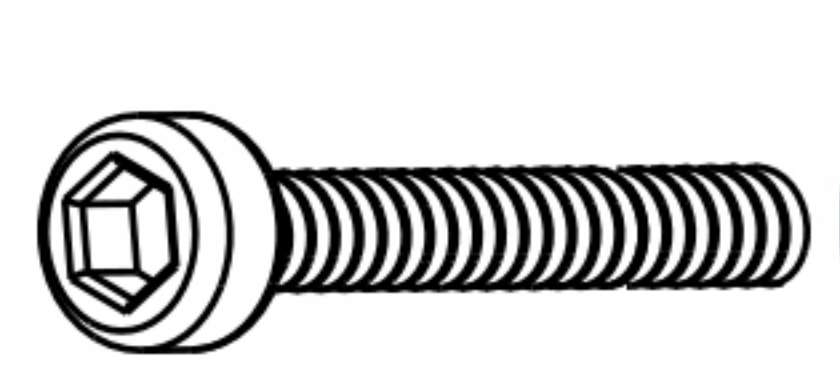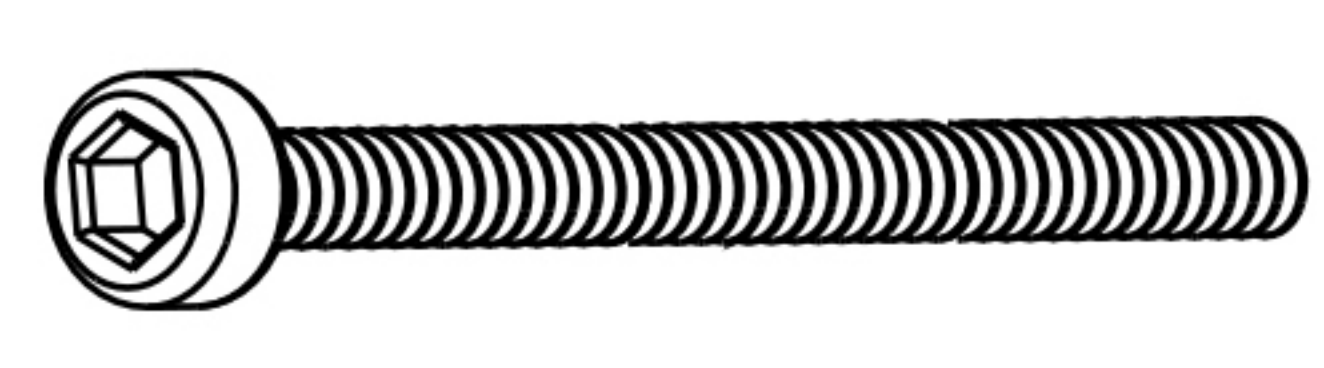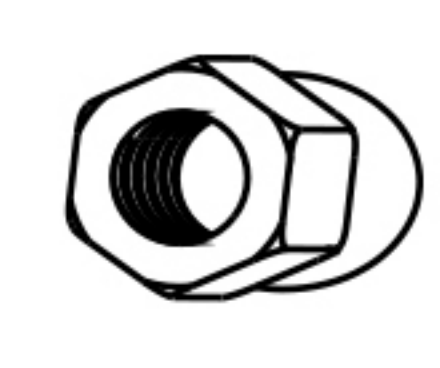-  **M5** 64pcs
-  **X2** 56pcs
-  **X3** 4pcs
-  **X6** 8pcs
-  **X6** 8pcs


1 → **2** → **3** → **4**
Pay attention to the direction of screw installation

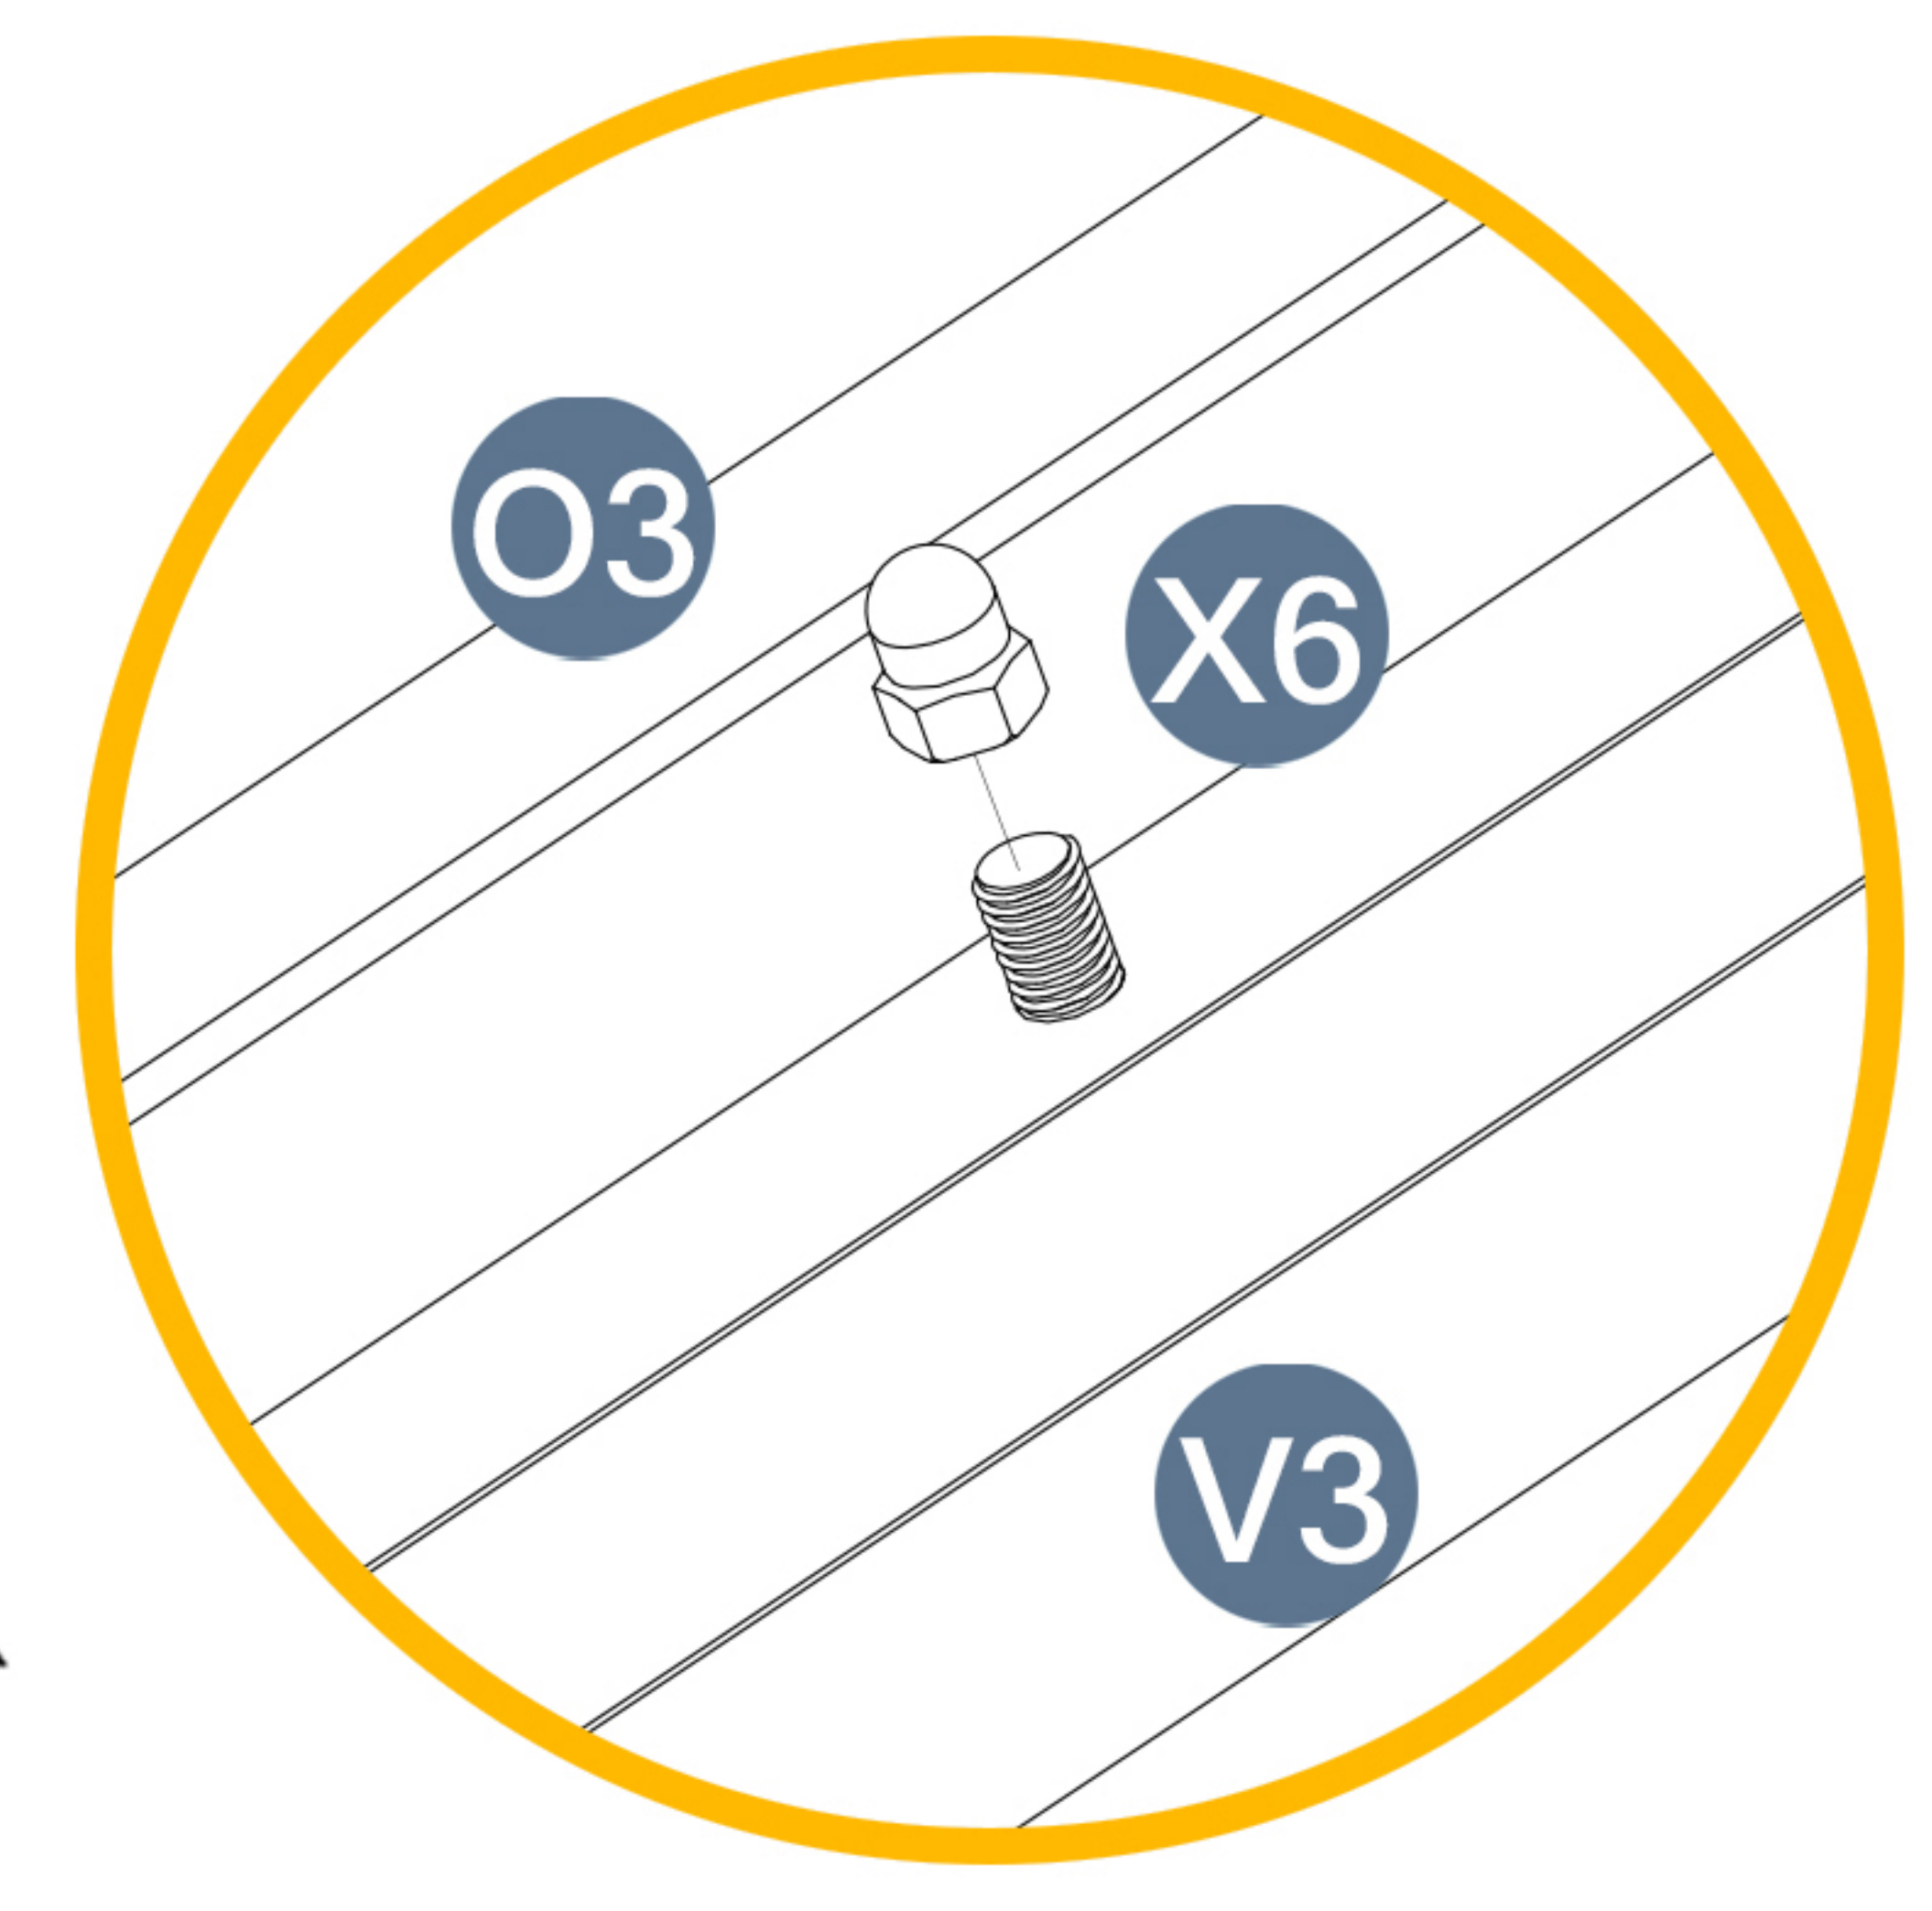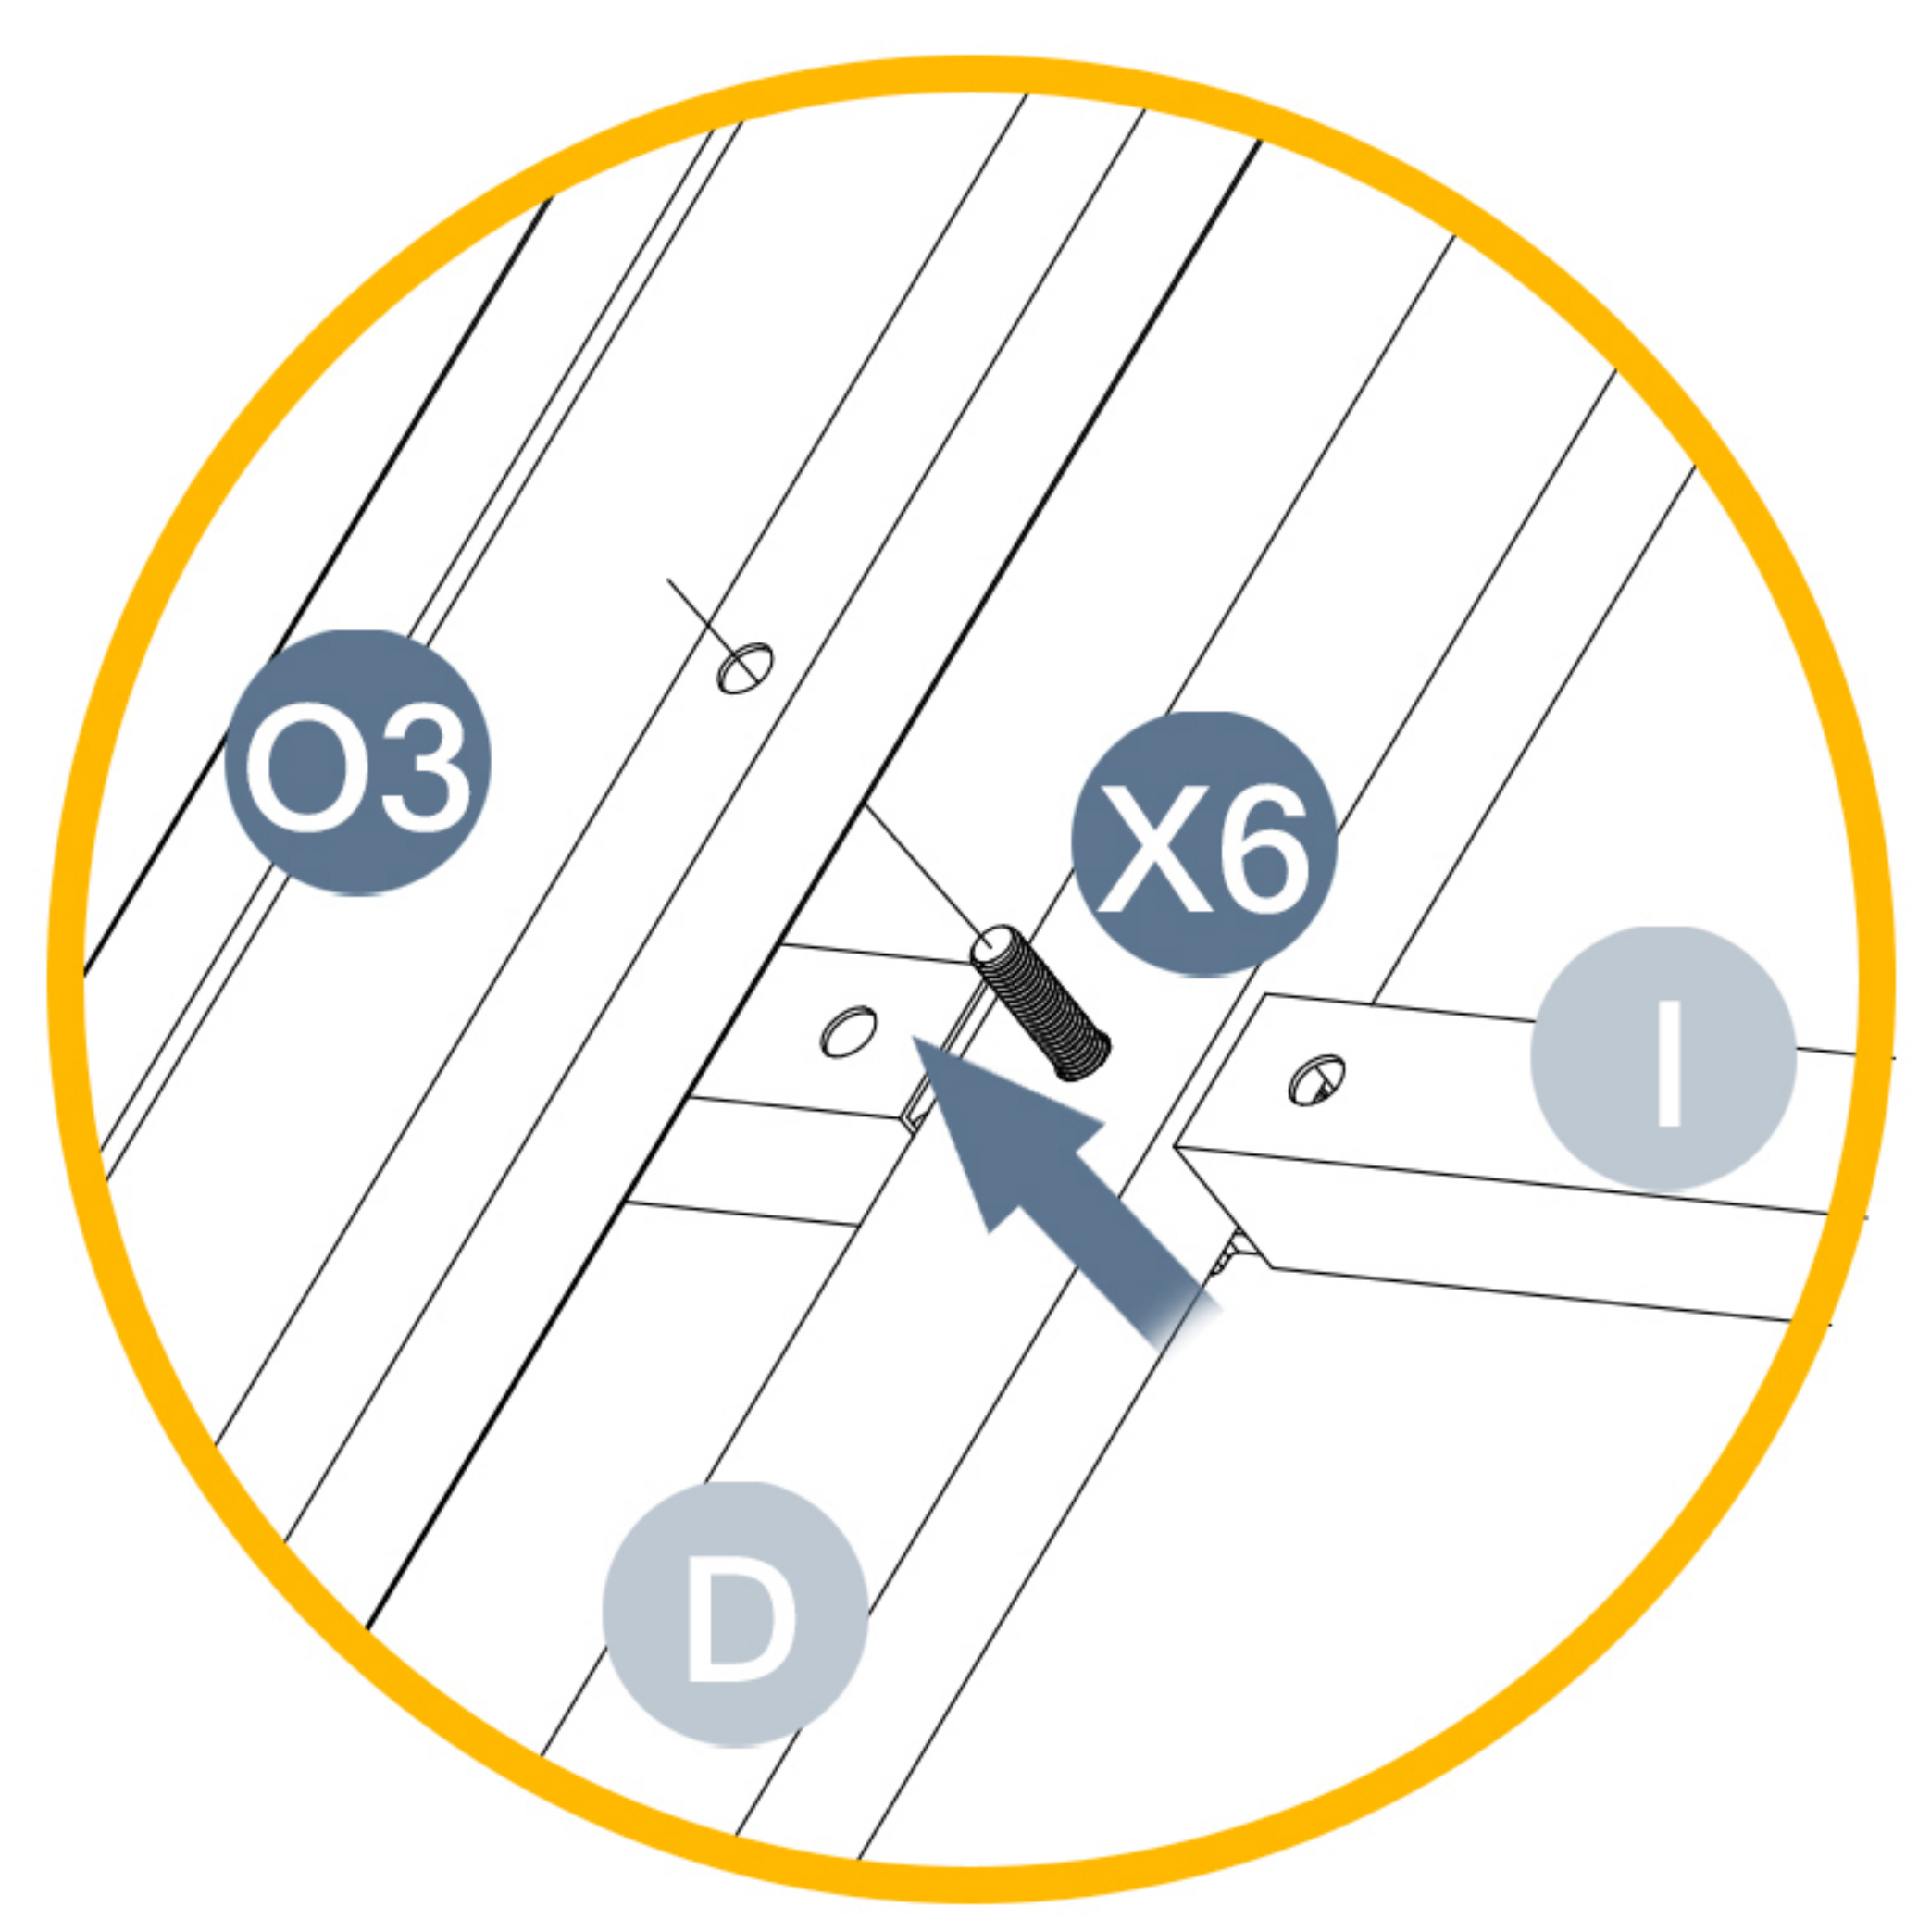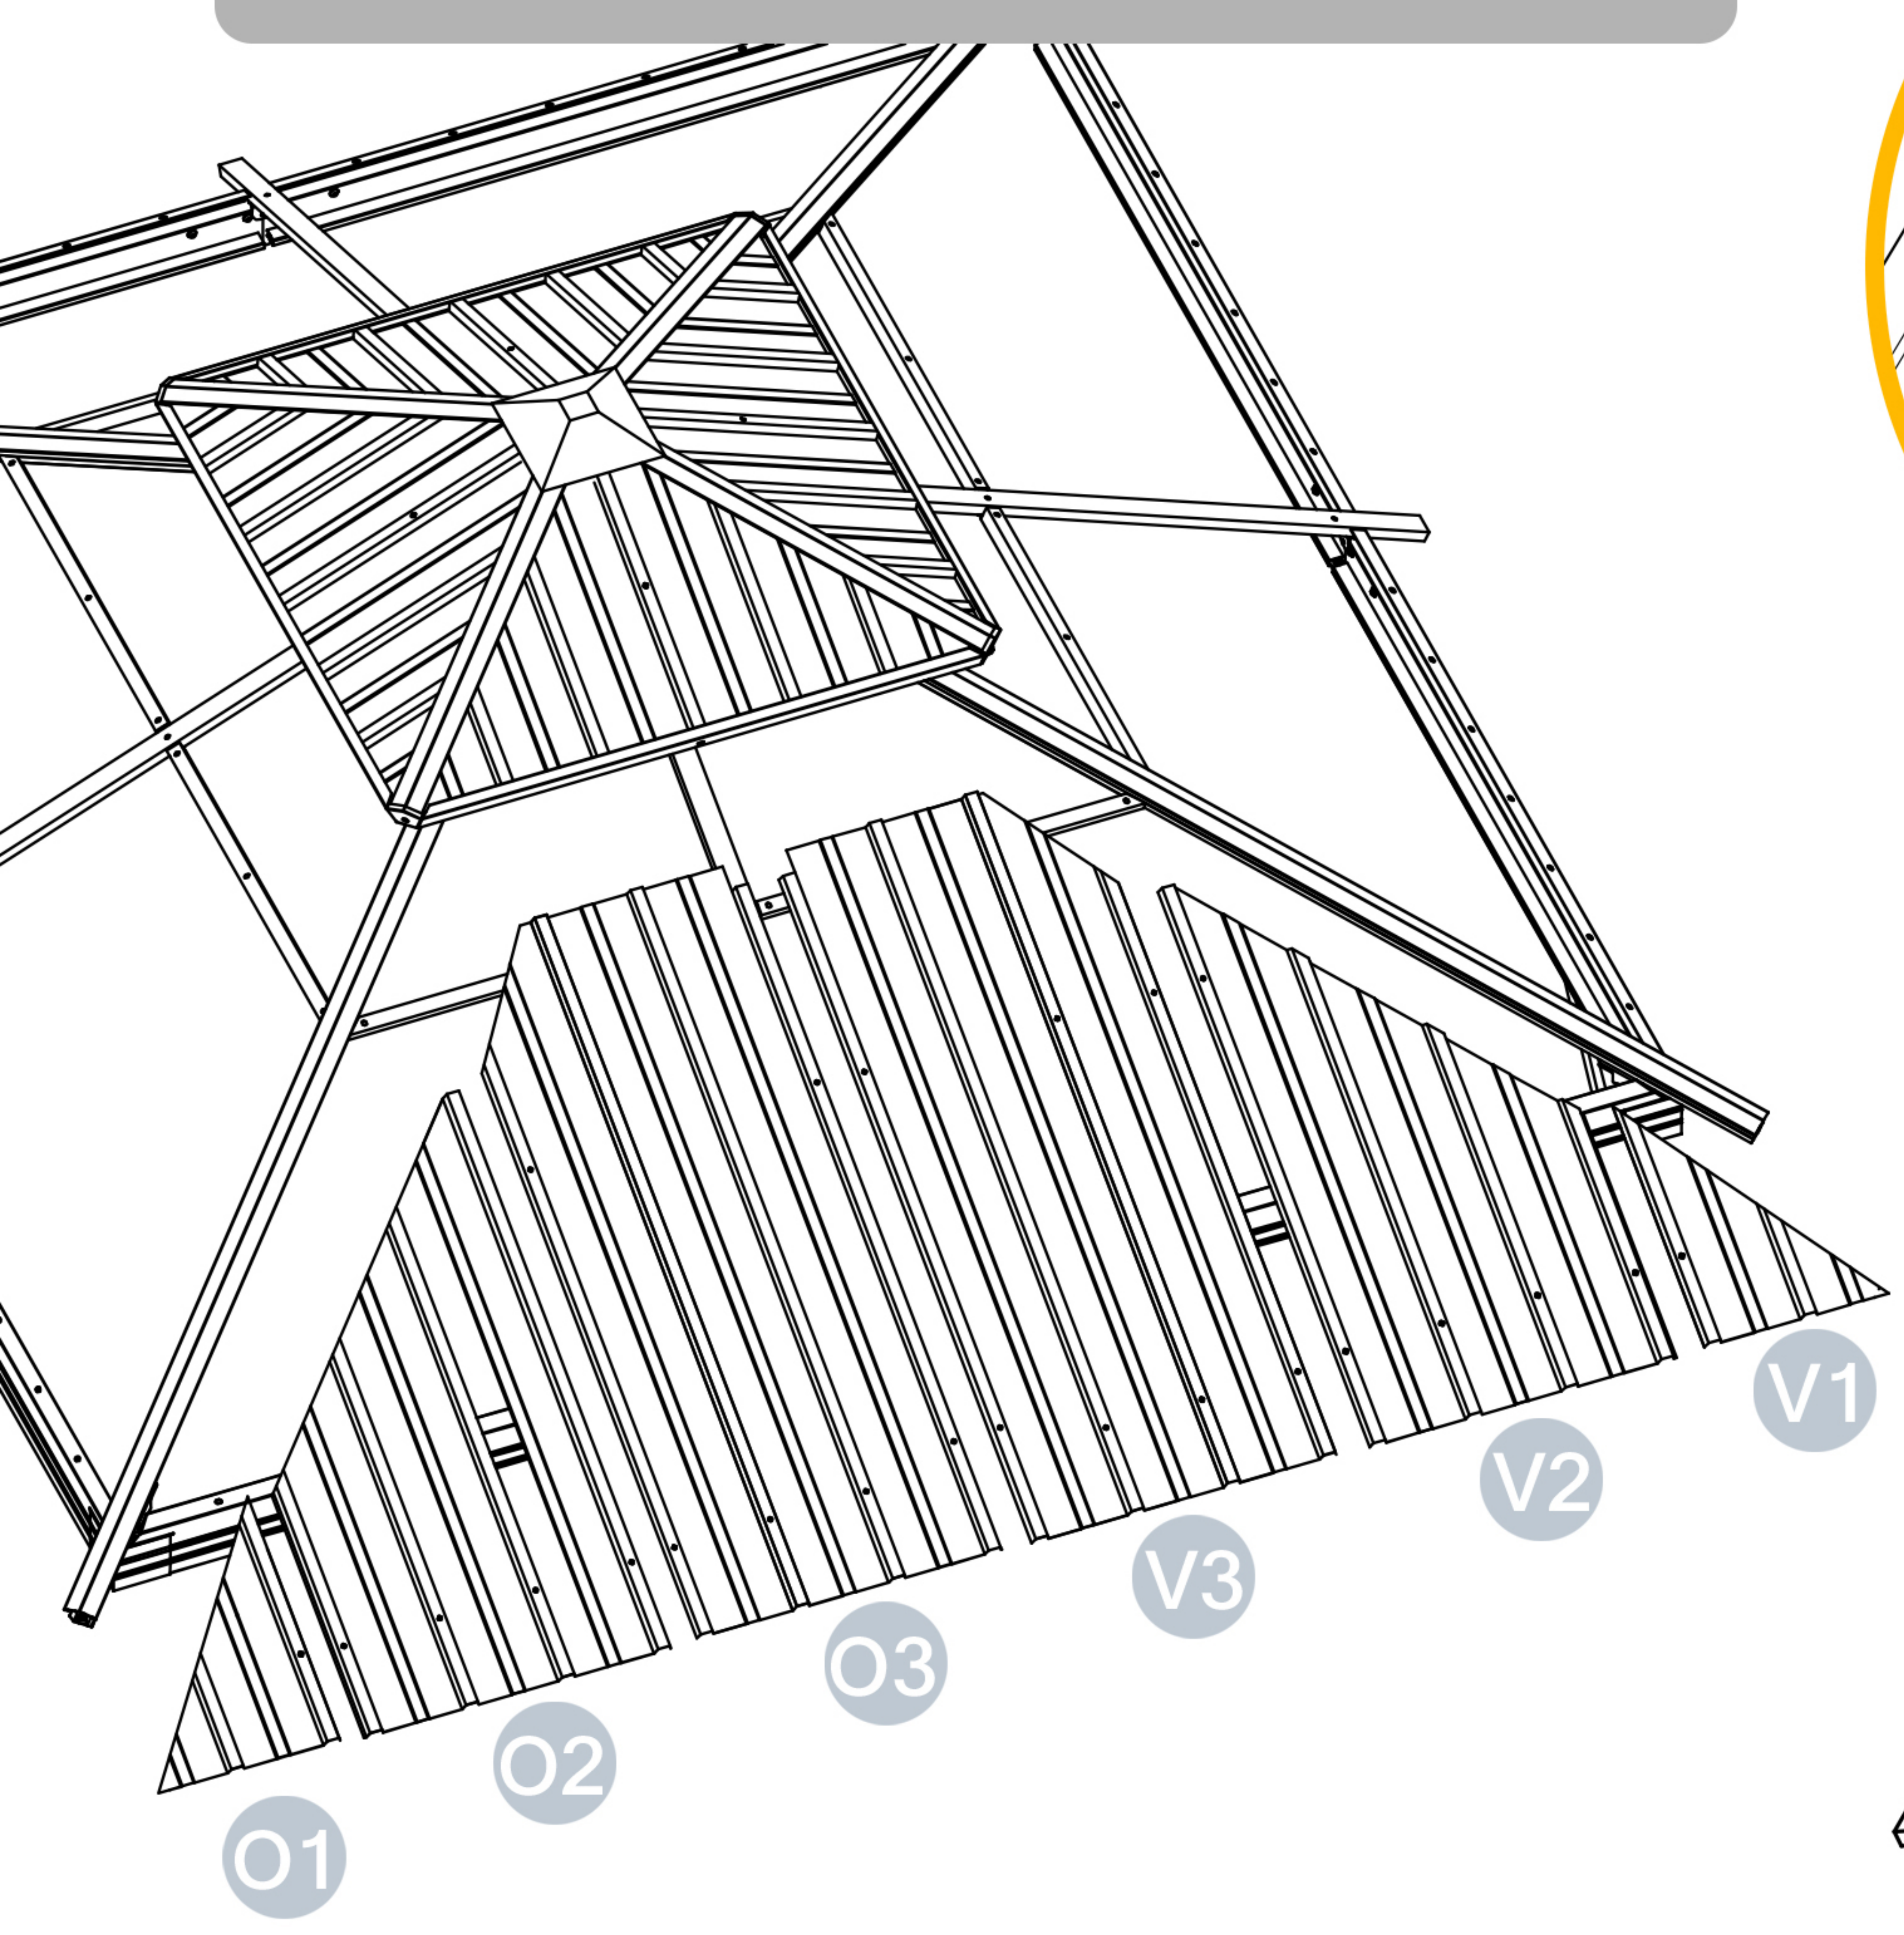


1

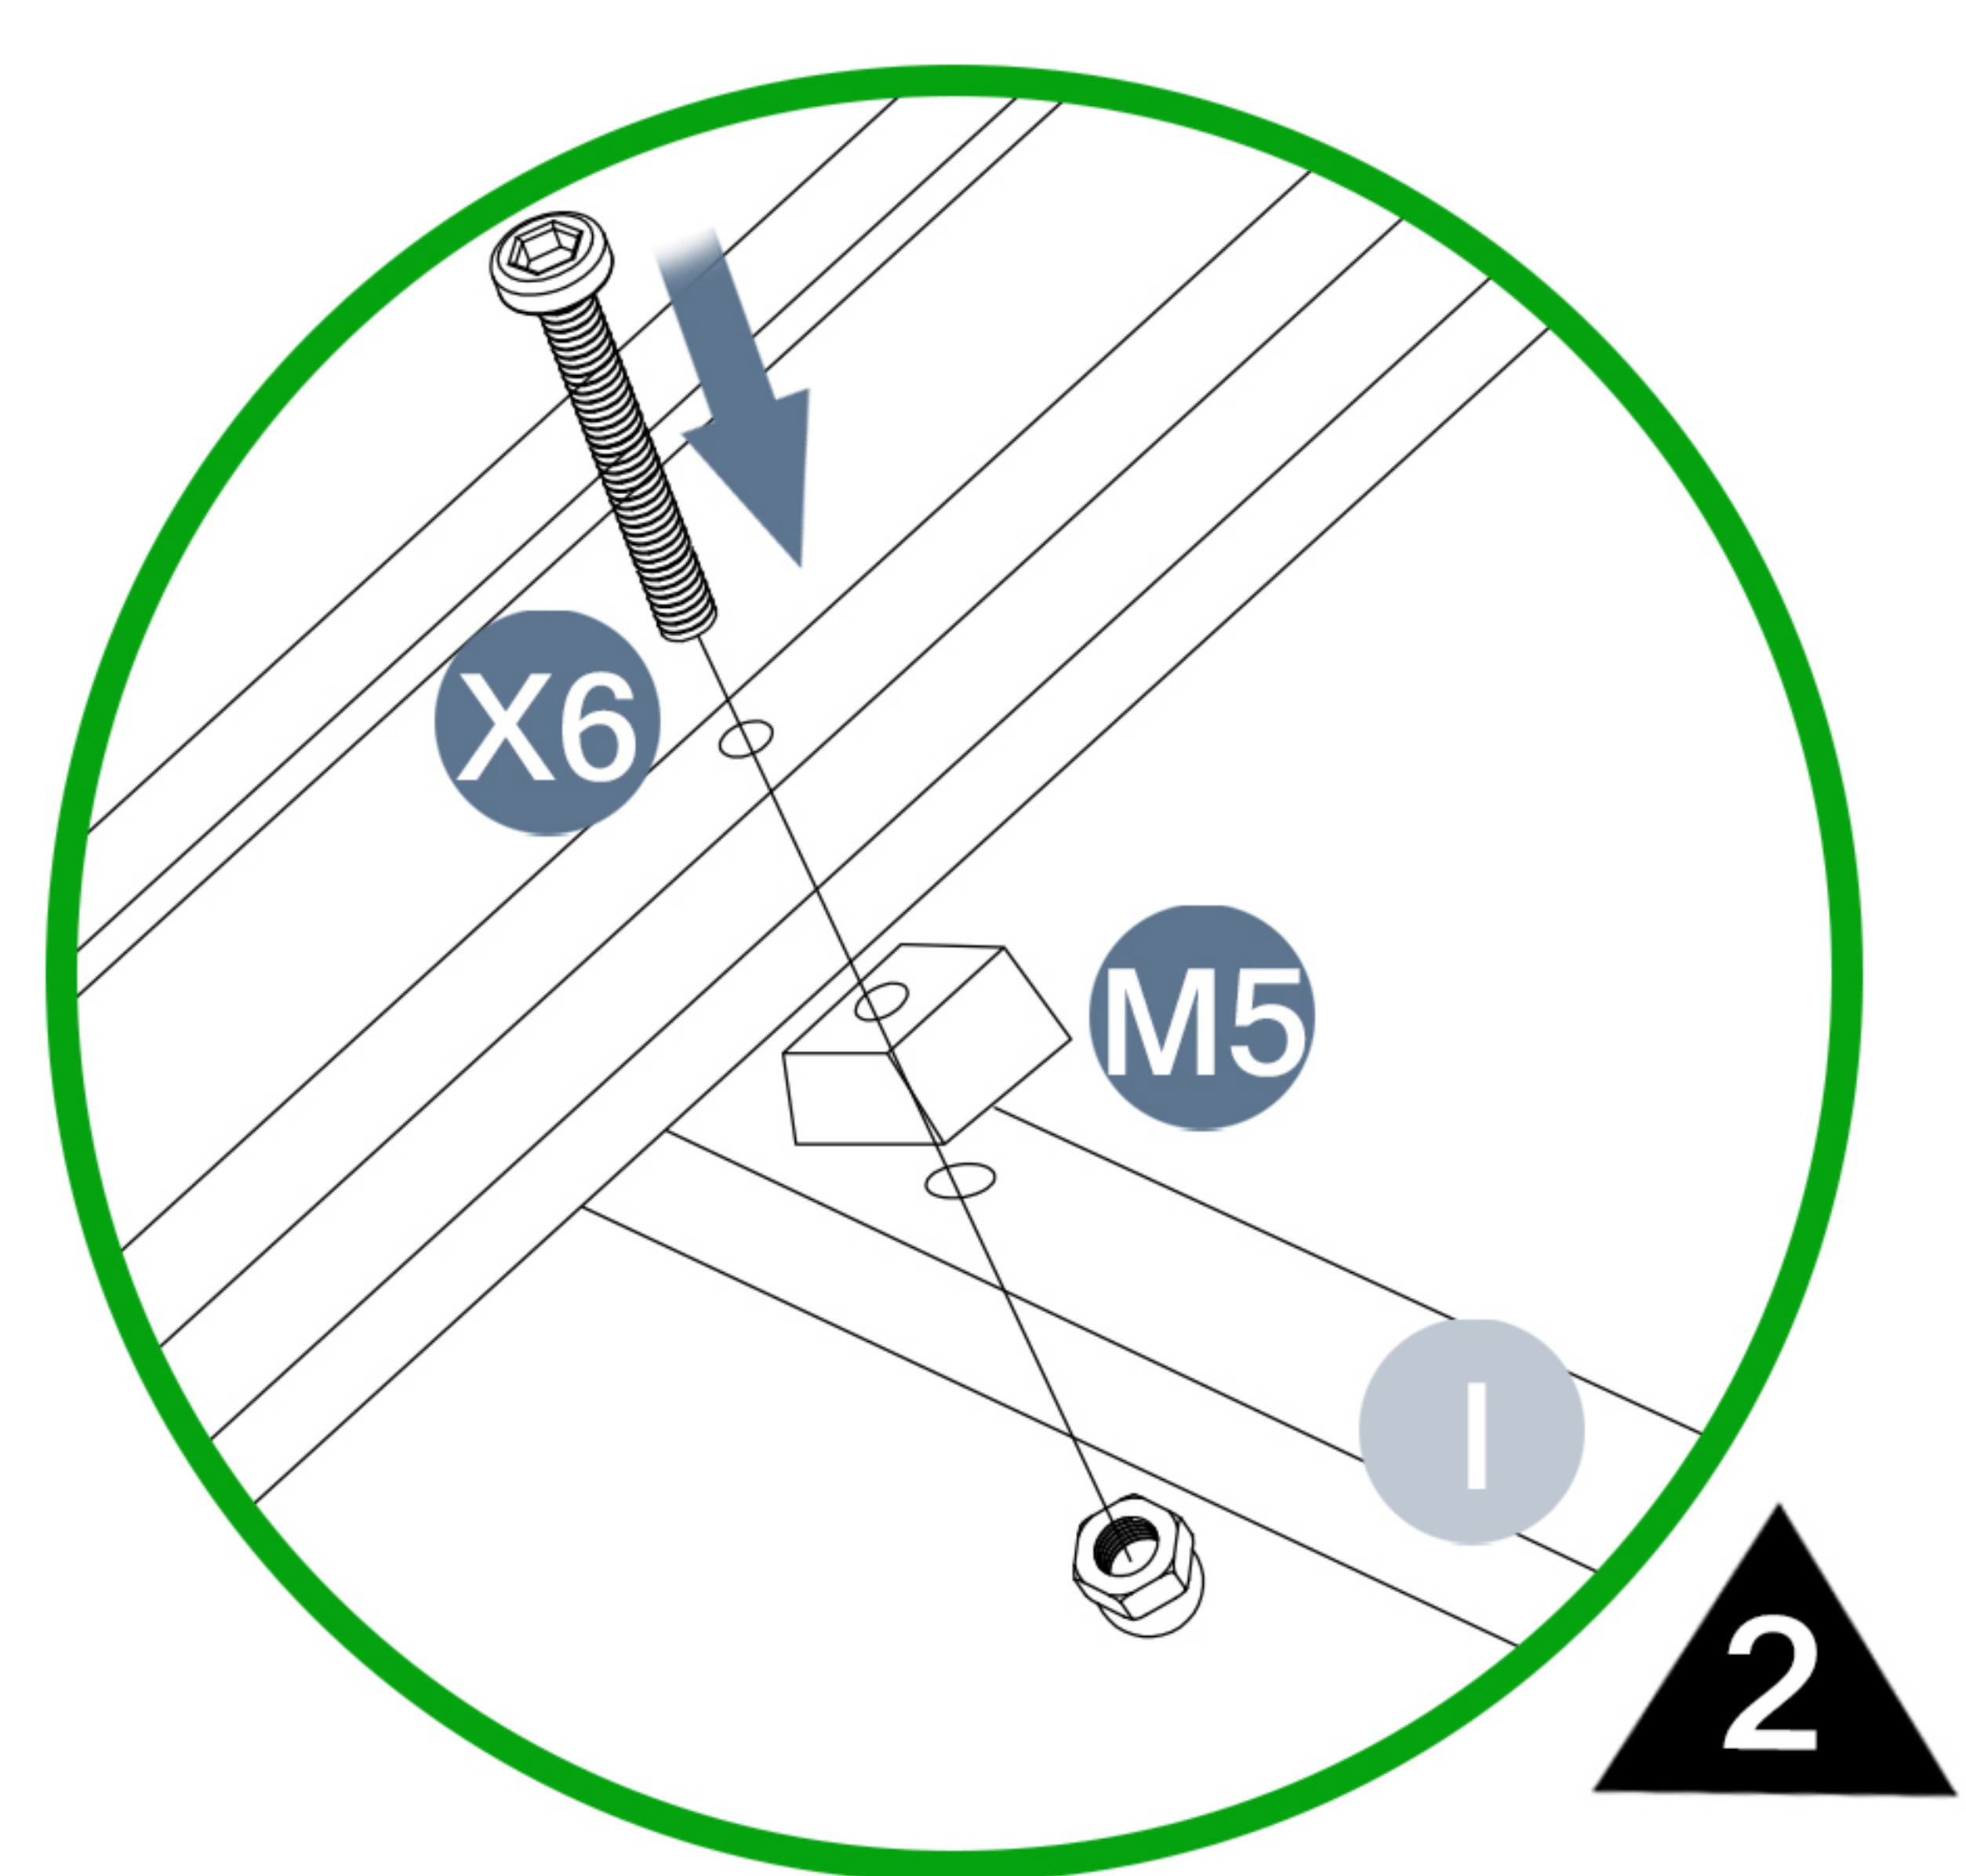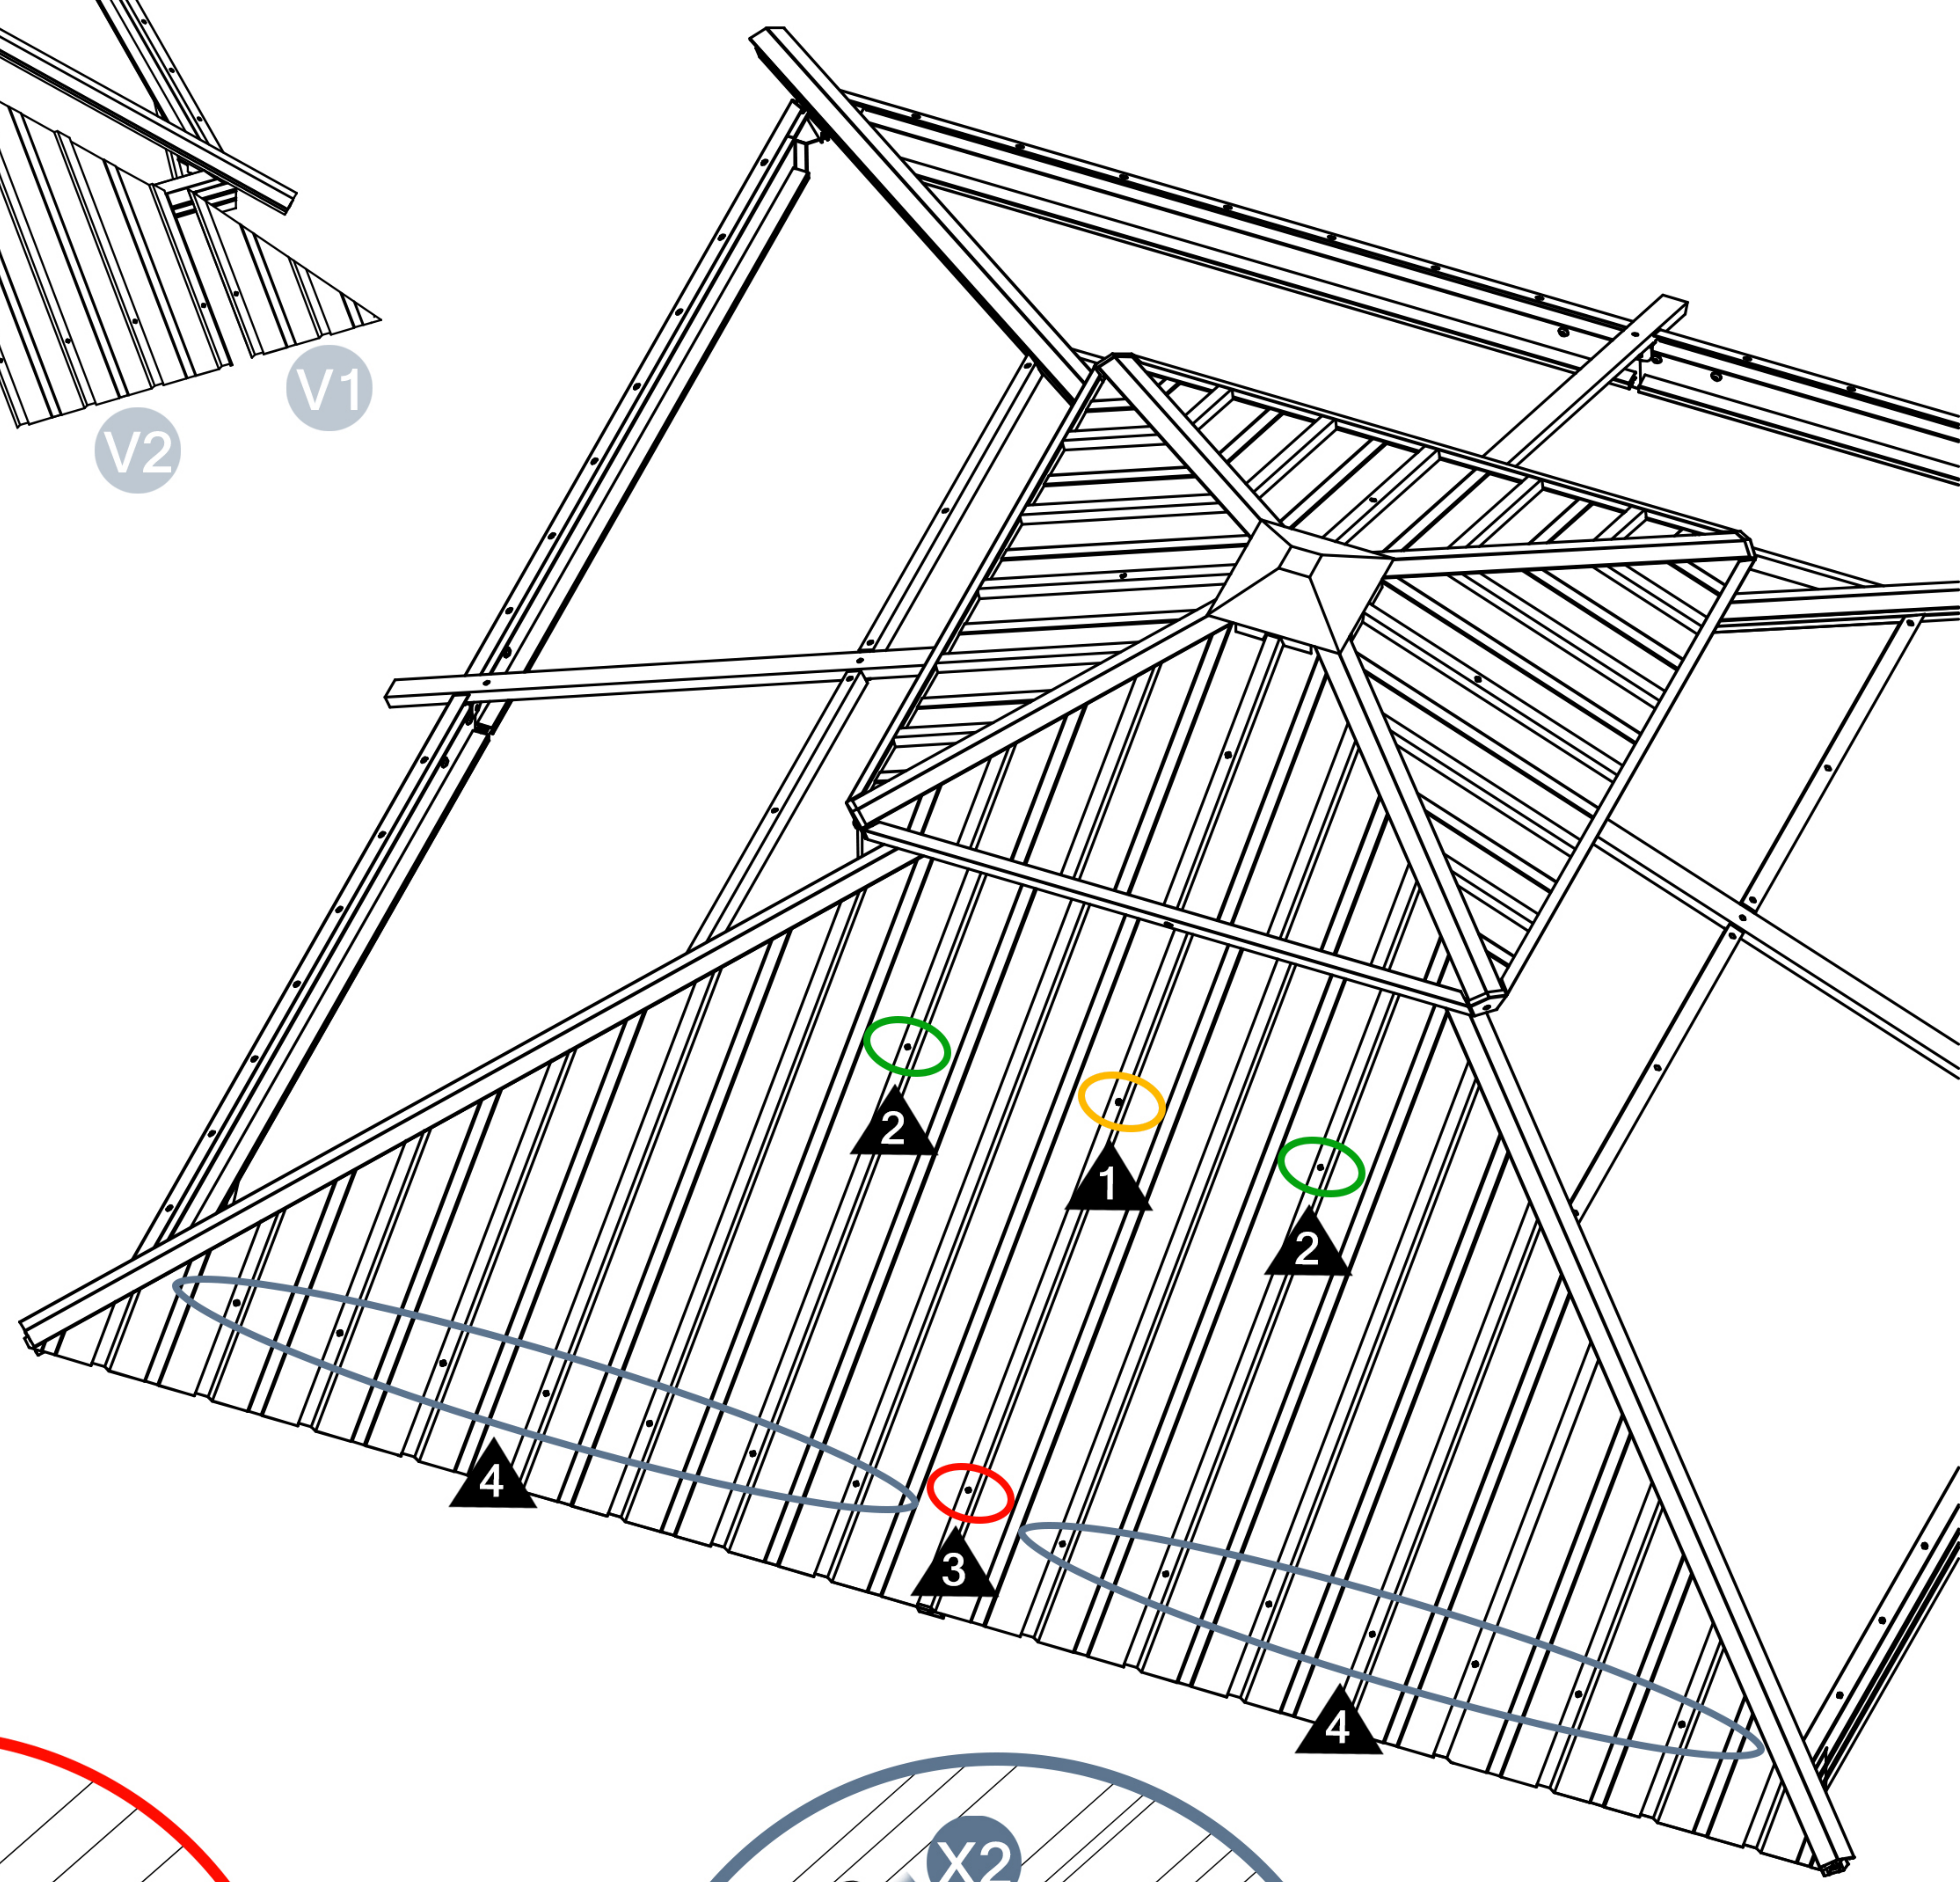

2

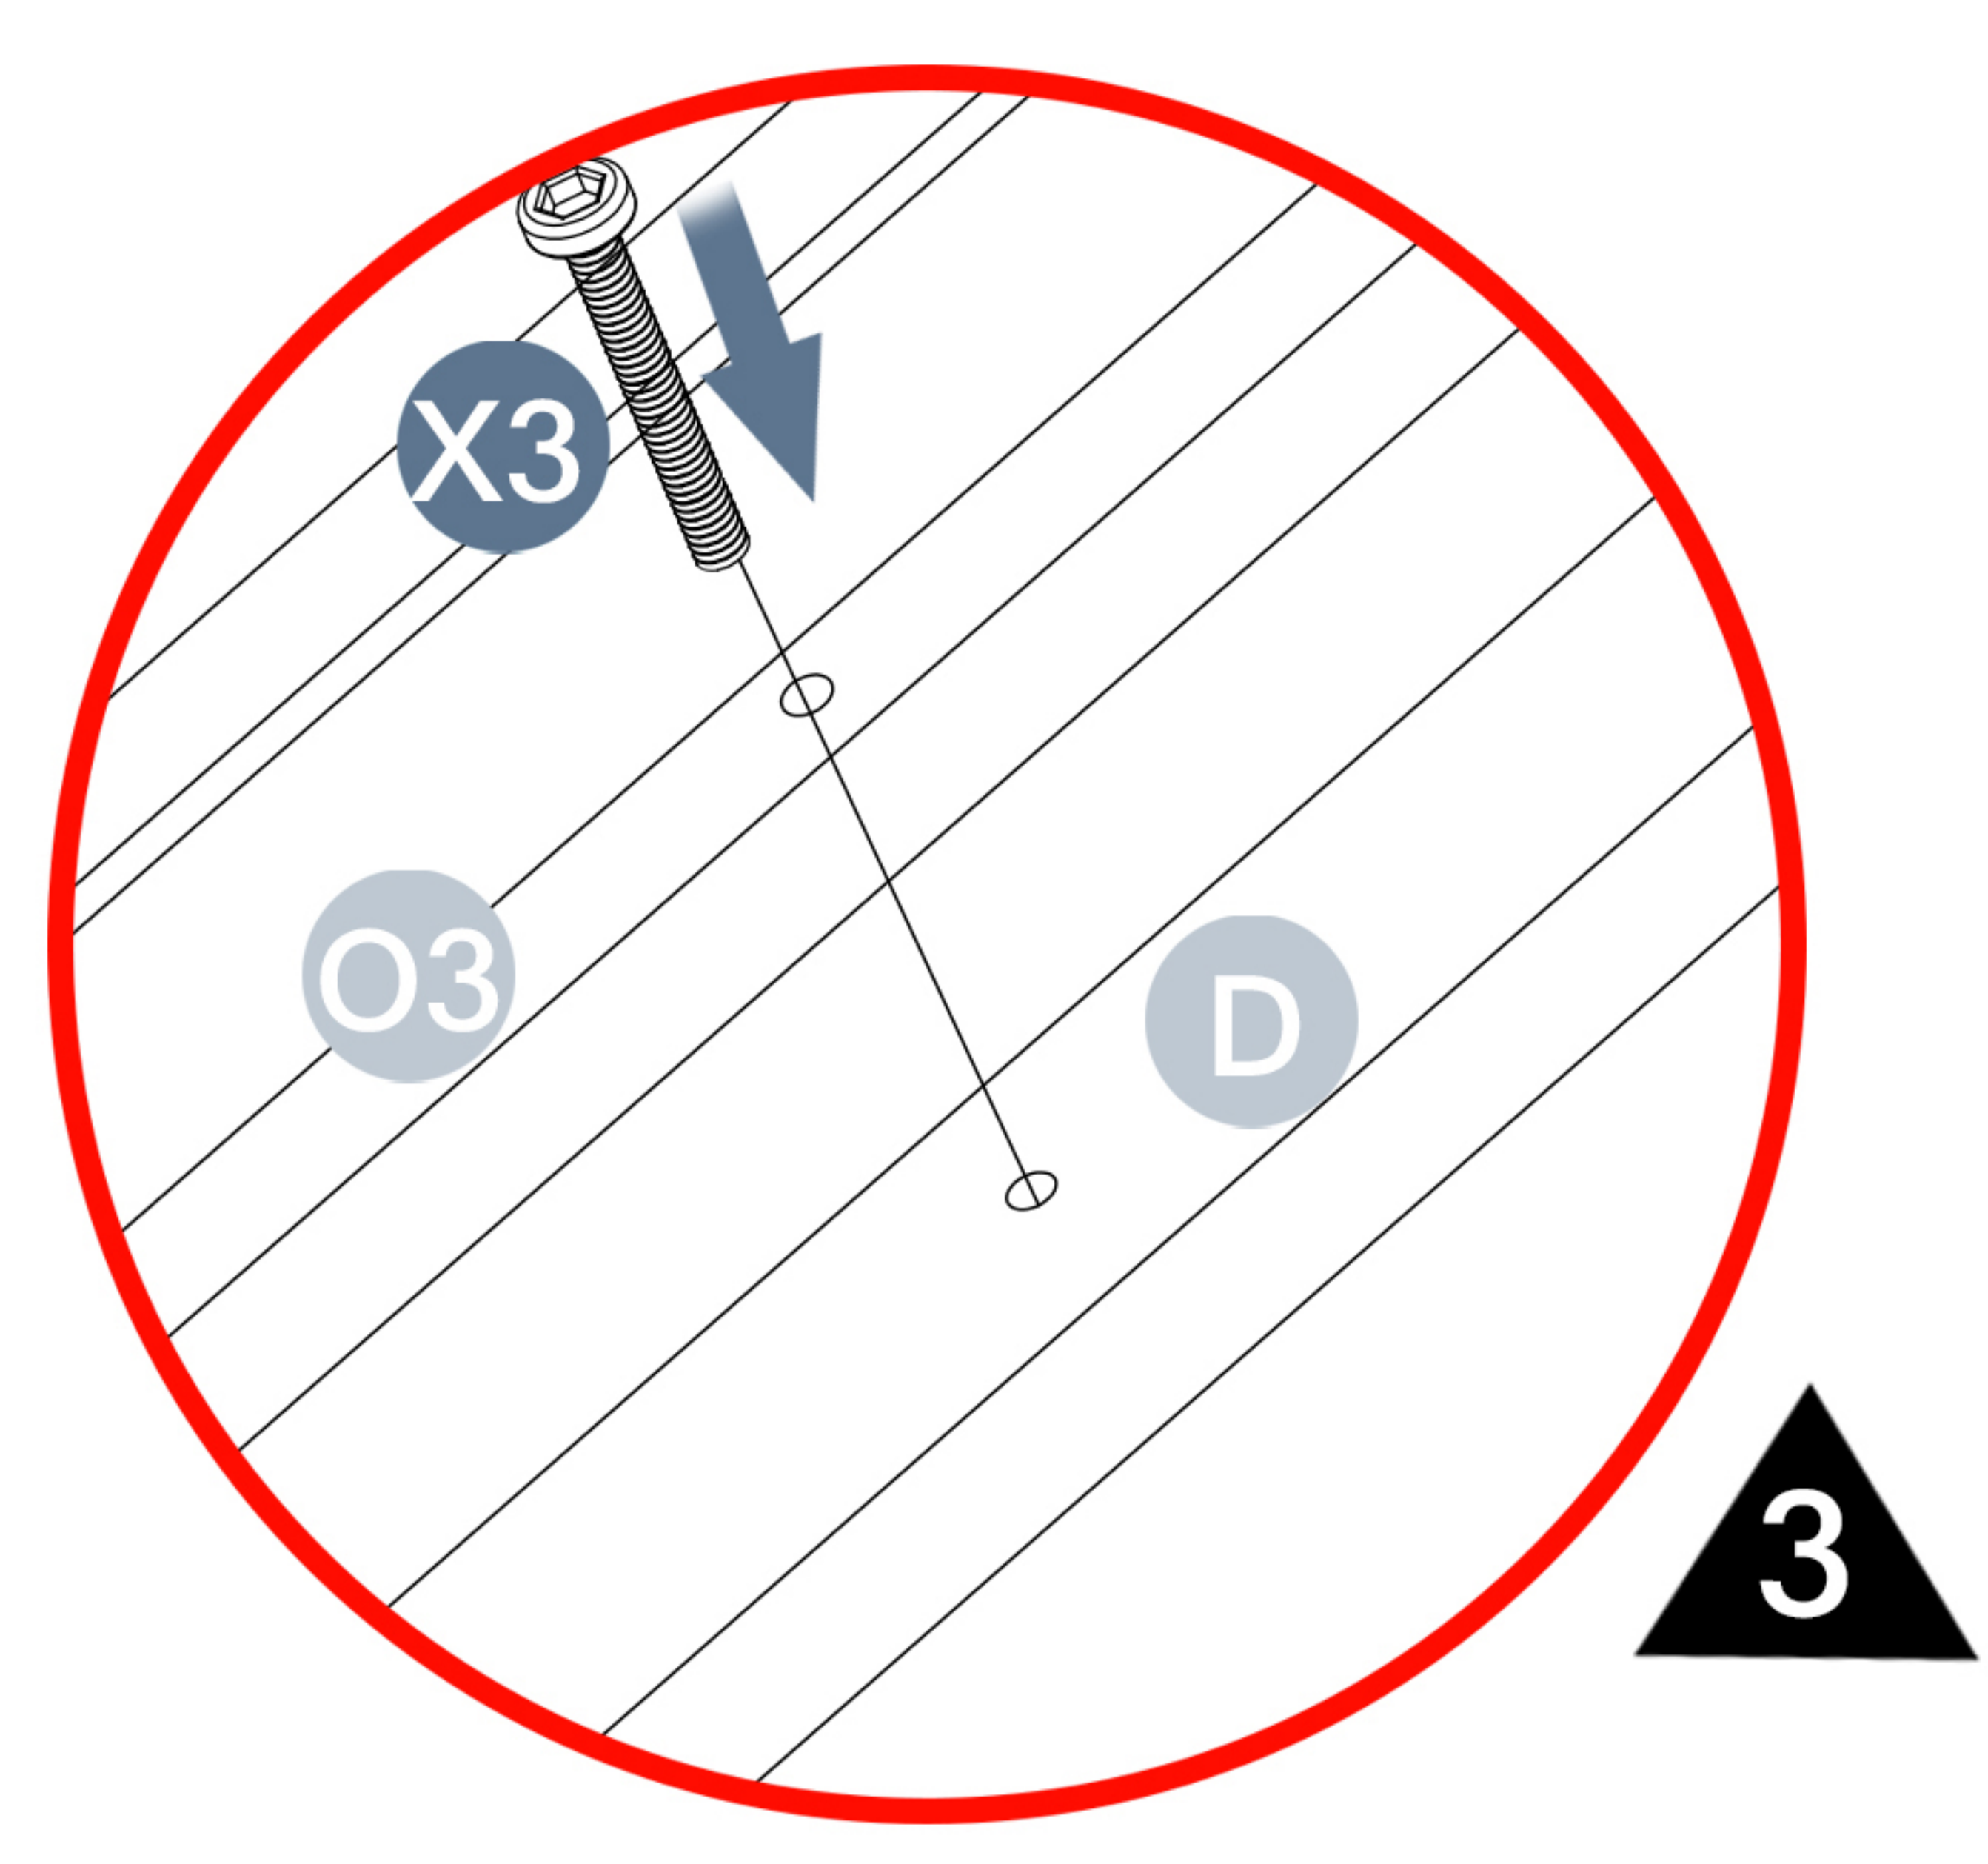


3

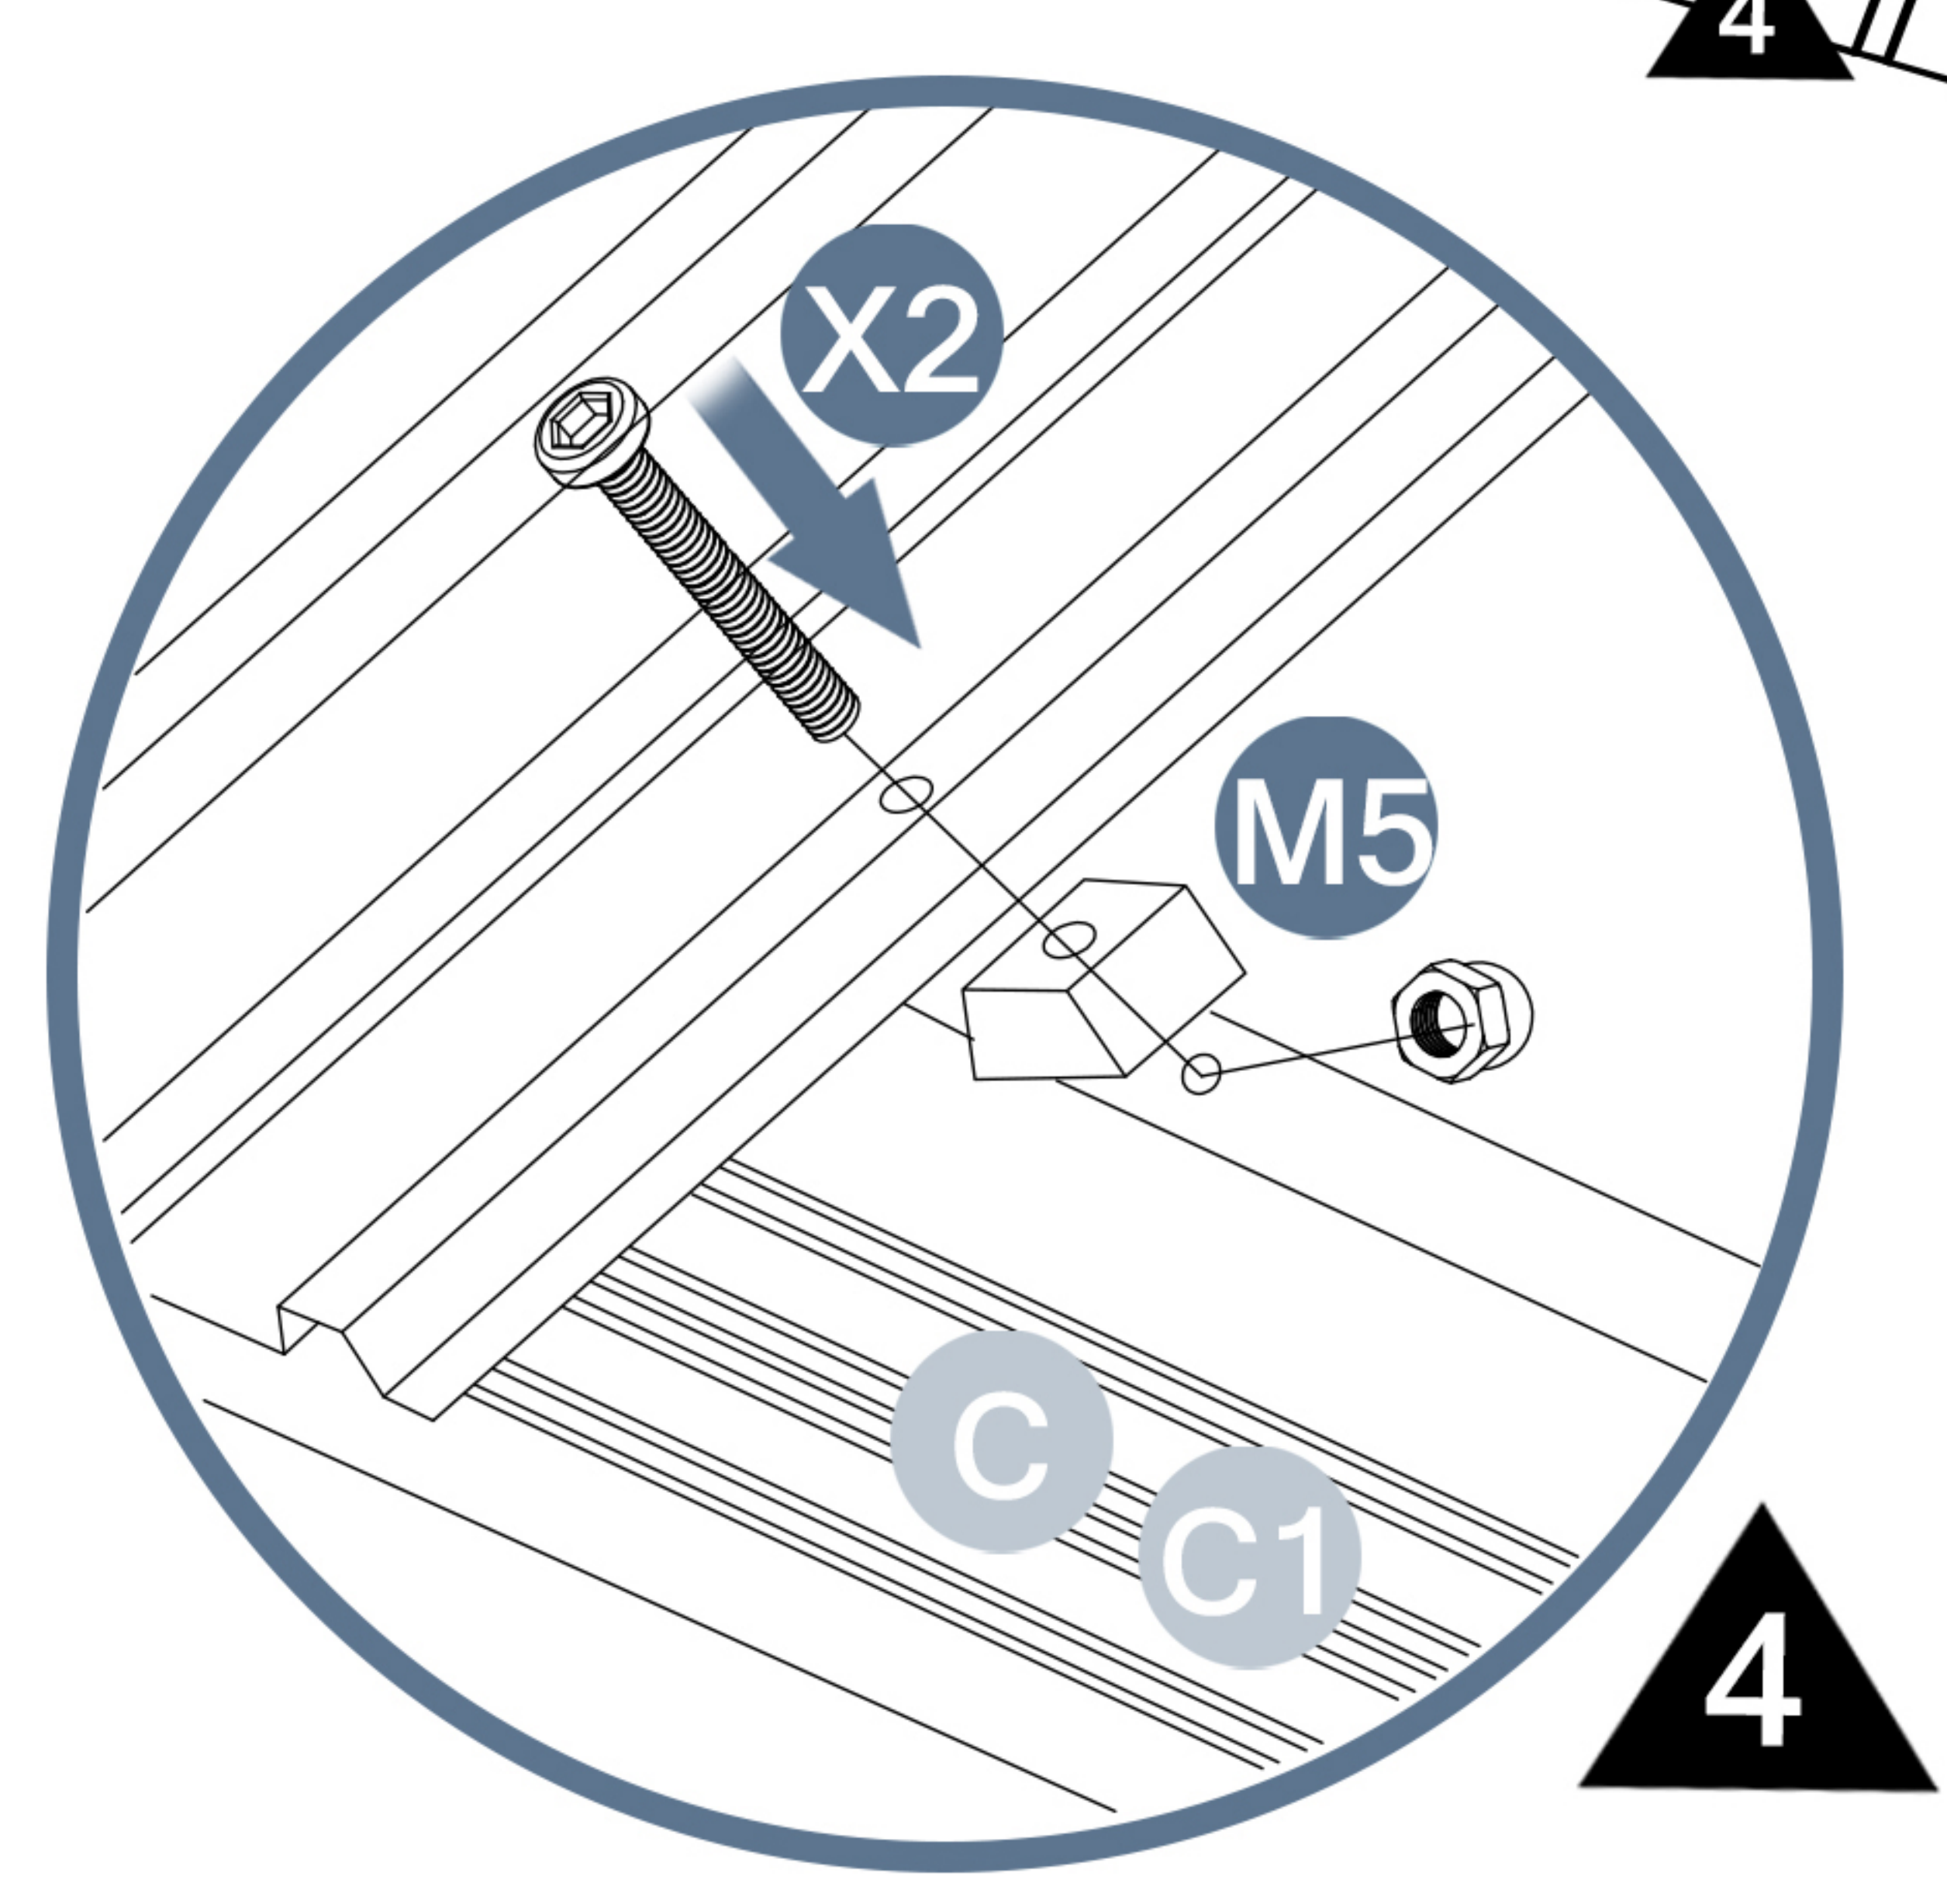


4

STEP 18


Parts required

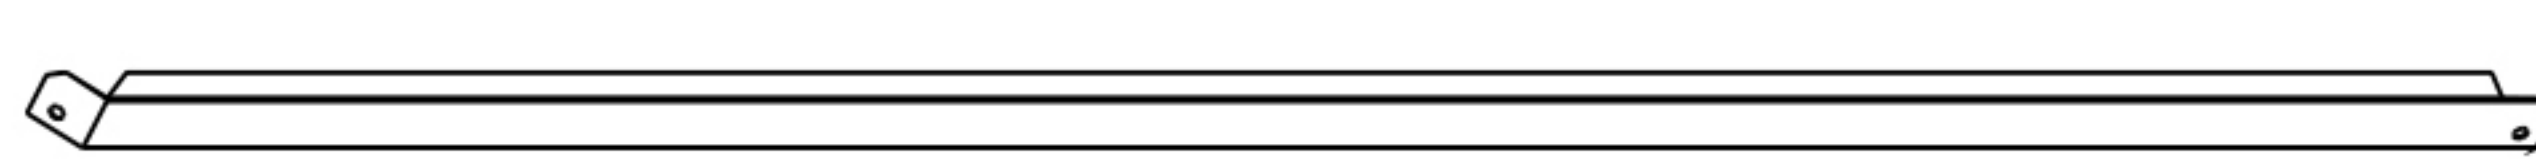


G1 4pcs

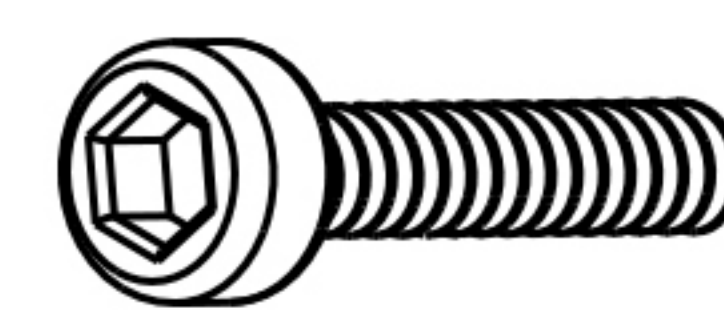

X1 4pcs

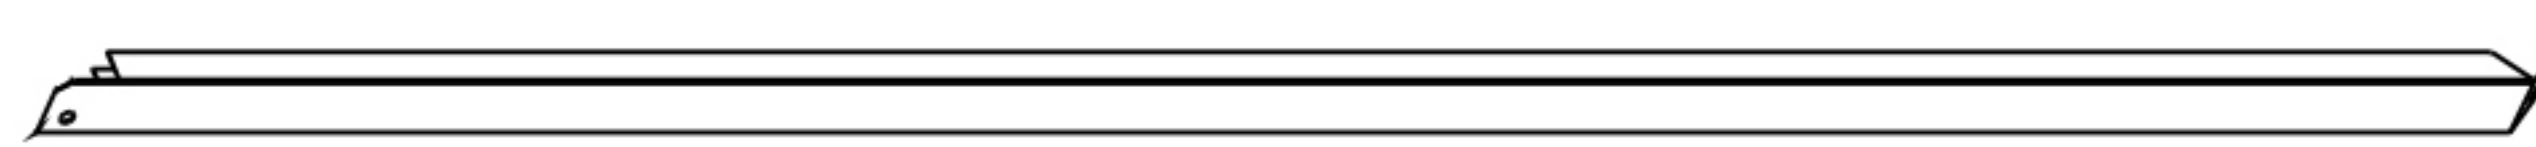


G2 4pcs

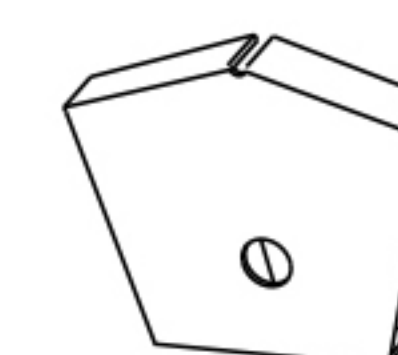

M2 4pcs




To better align the screws for practical situations, do not fully tighten screws initially.

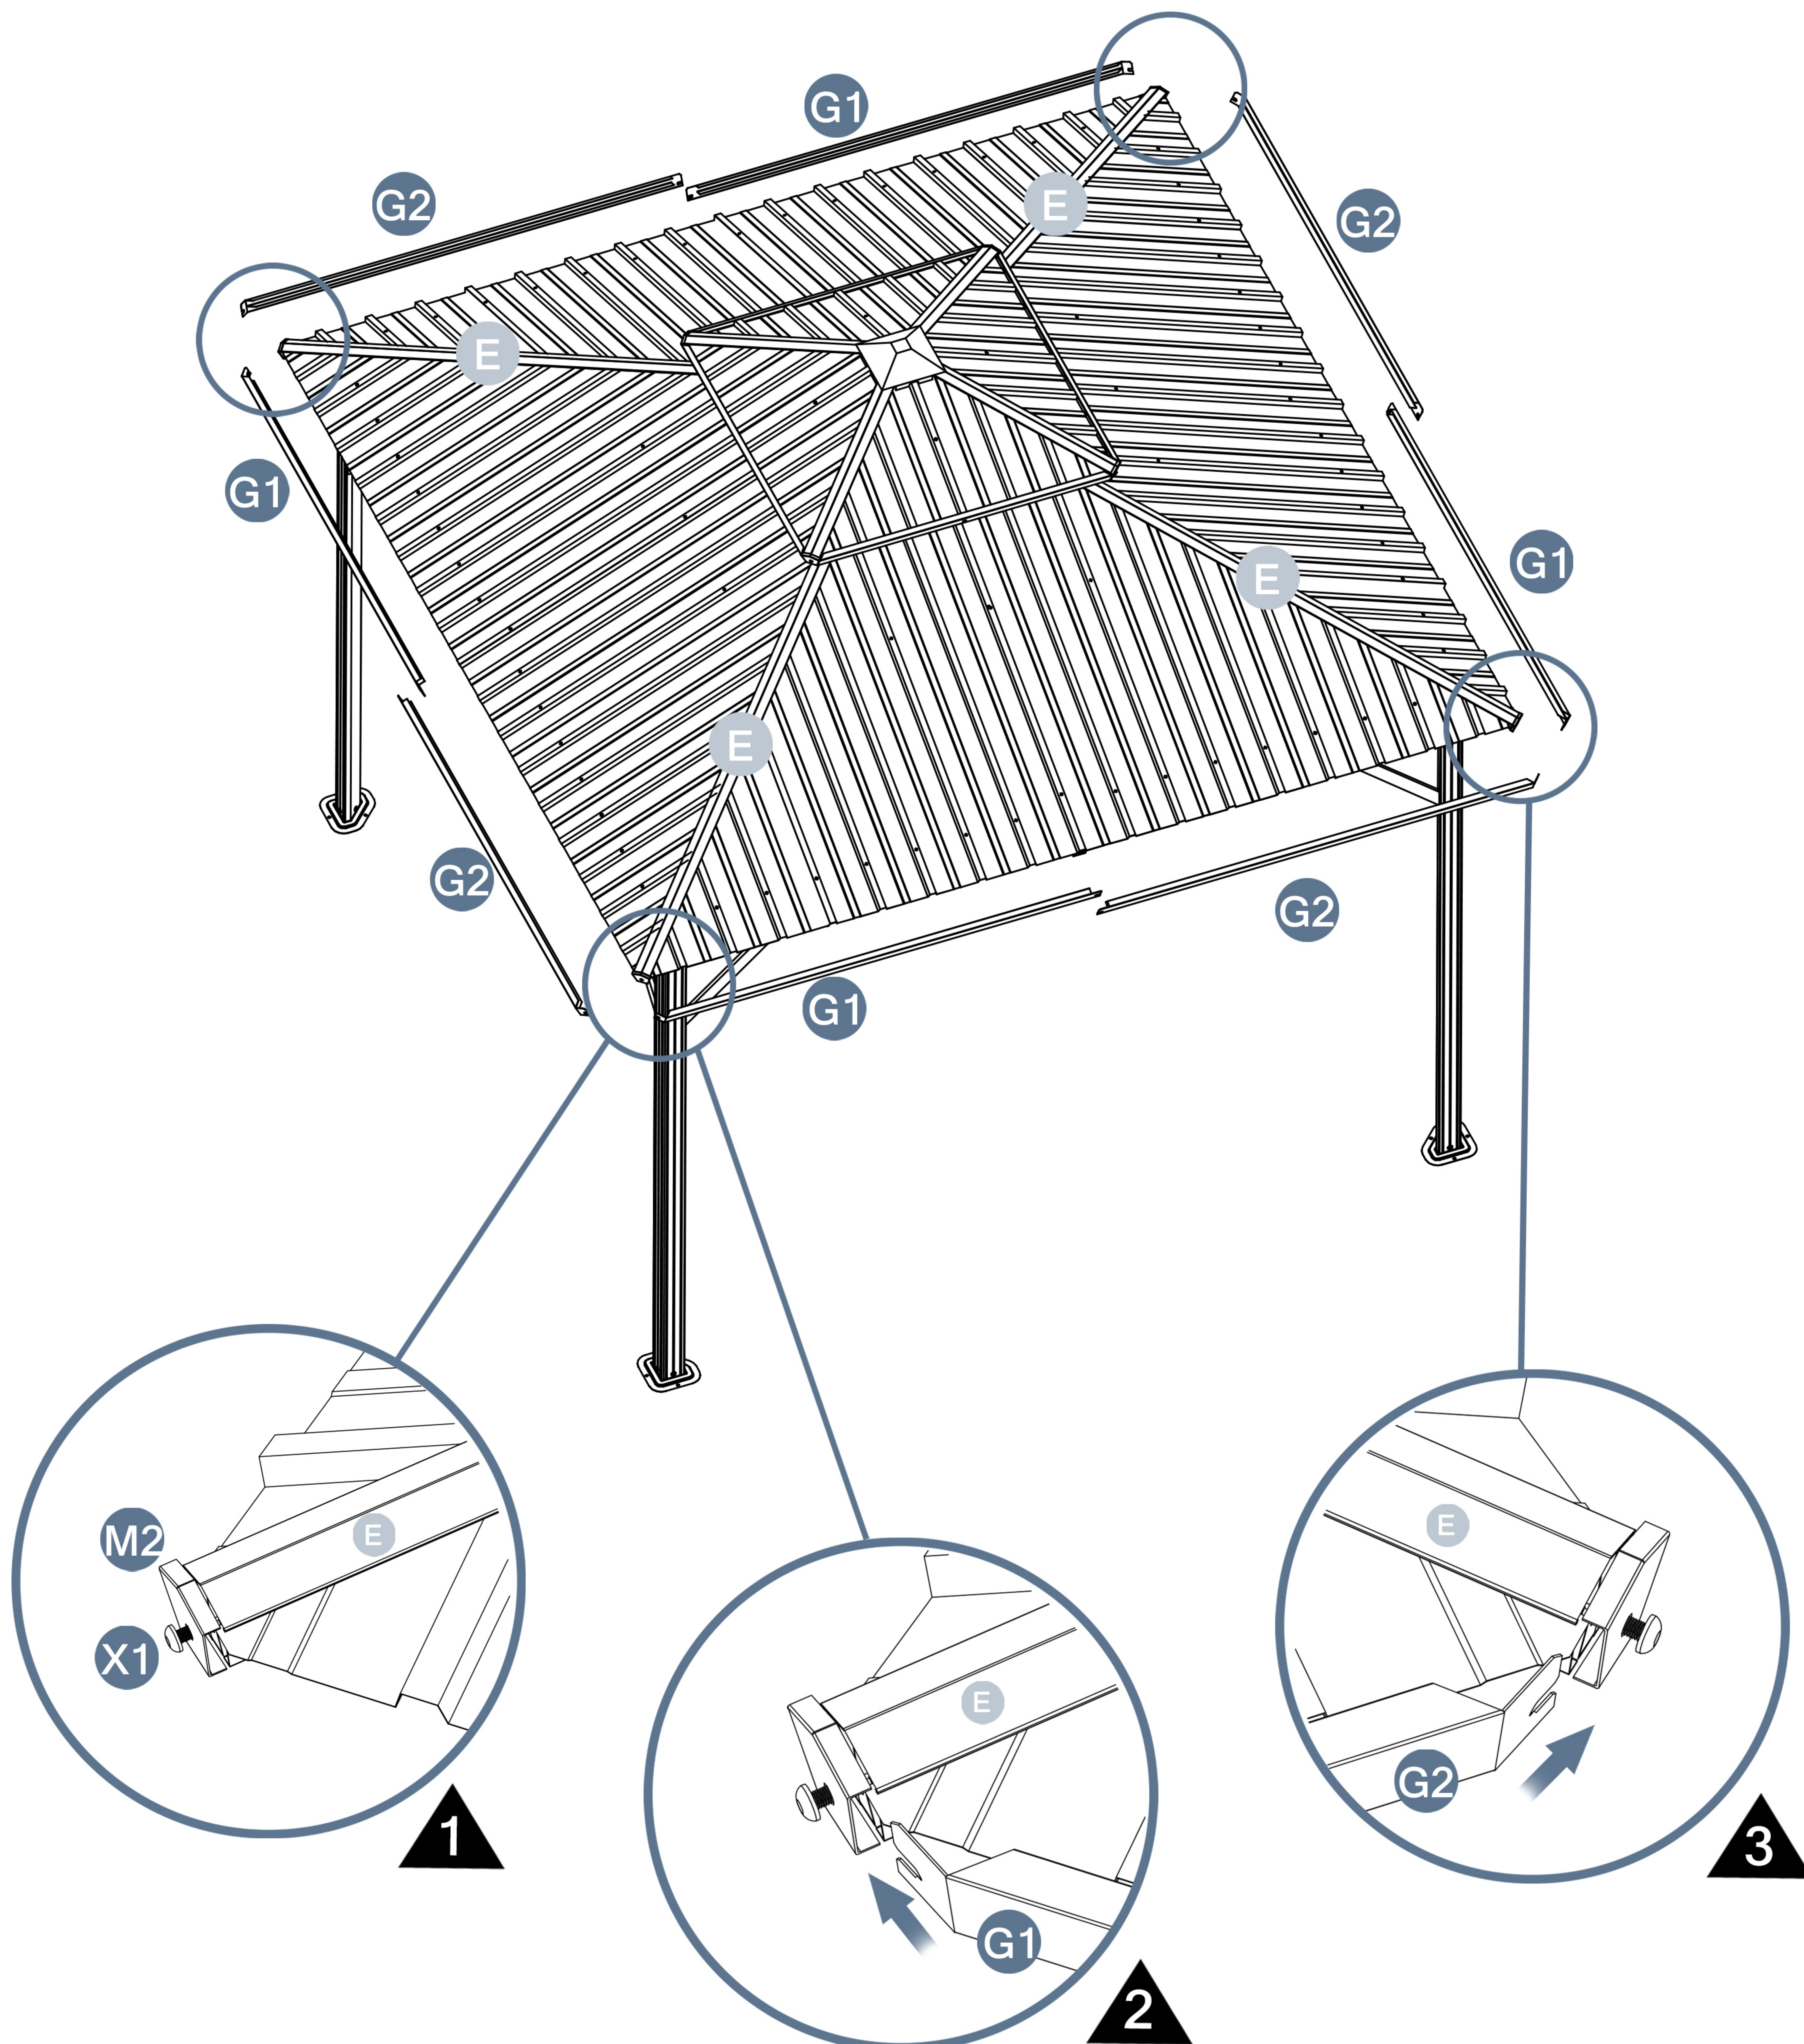


STEP 19



Parts required

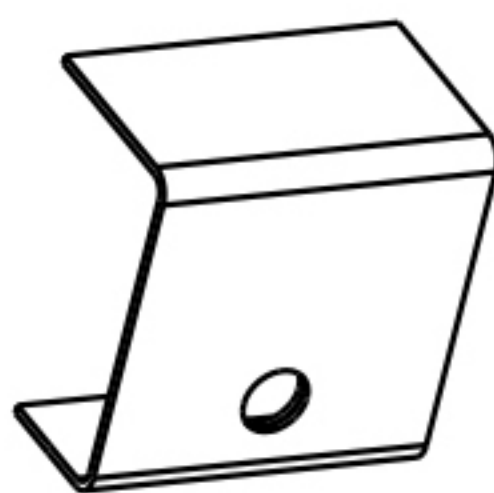

M1 4pcs

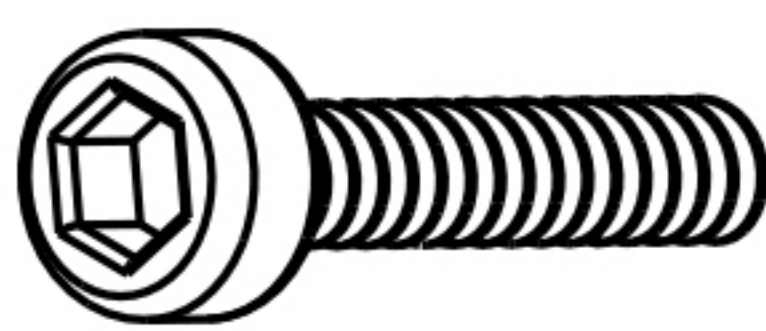


X1 4pcs

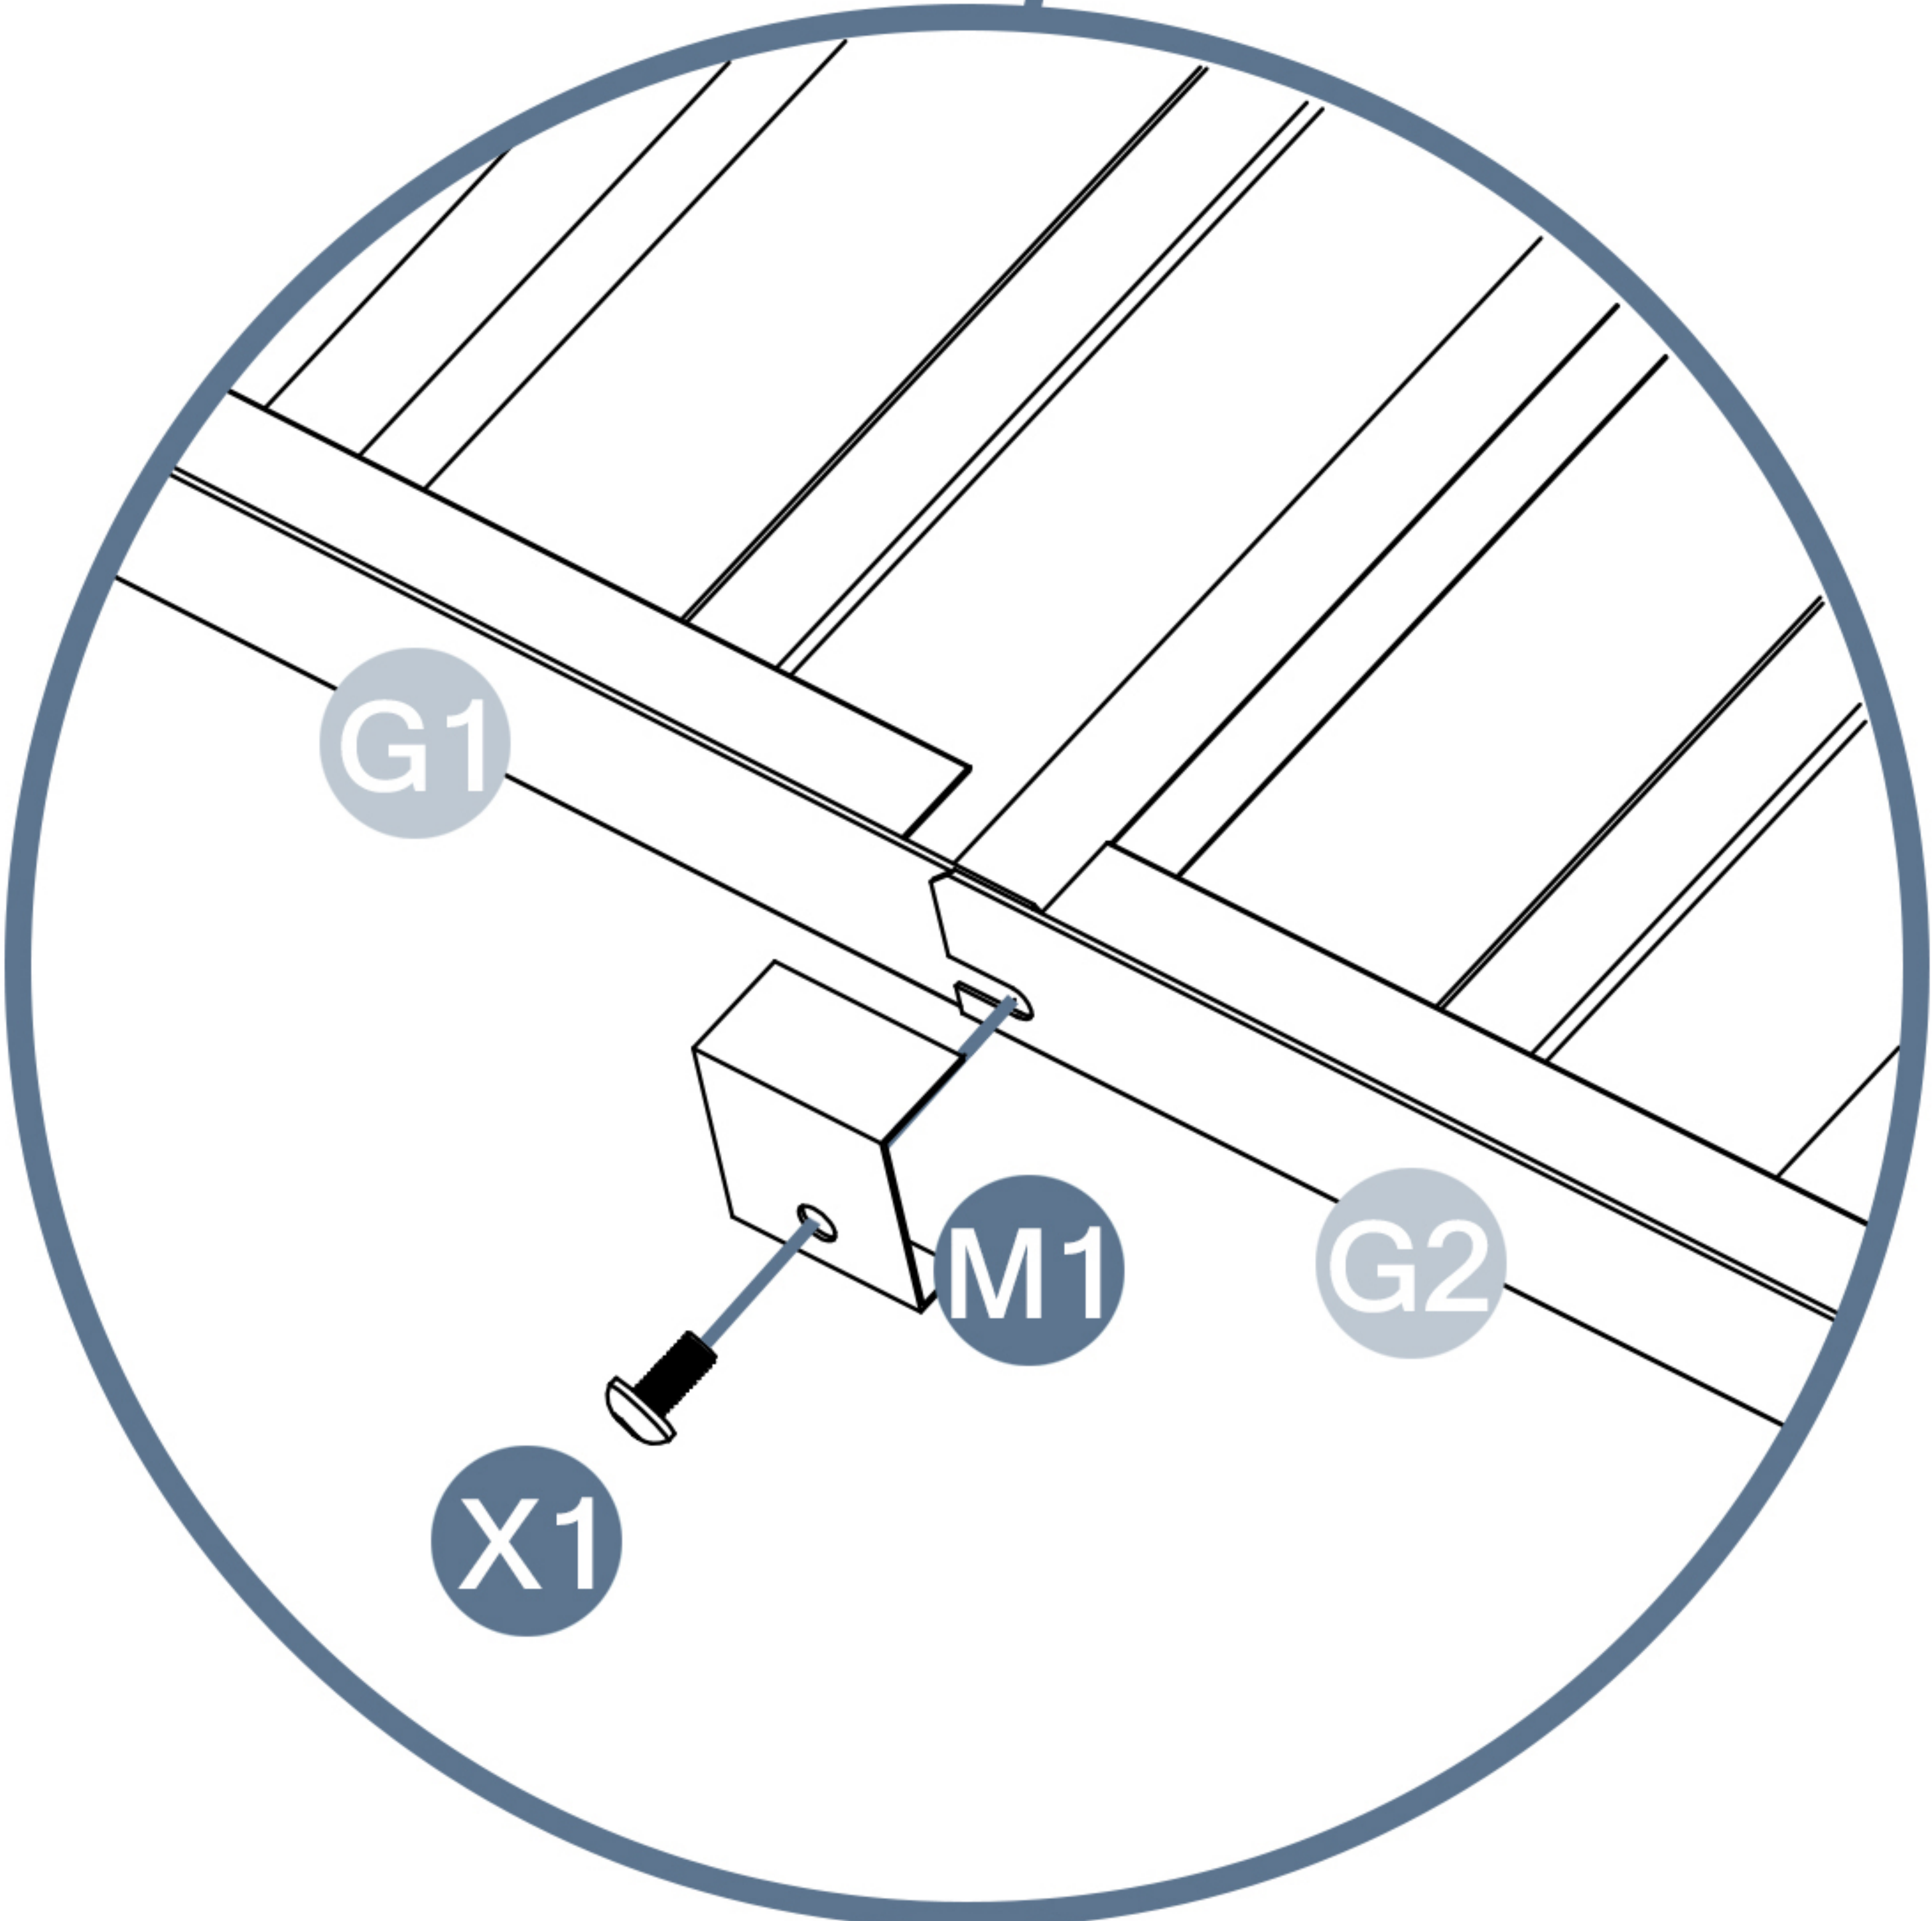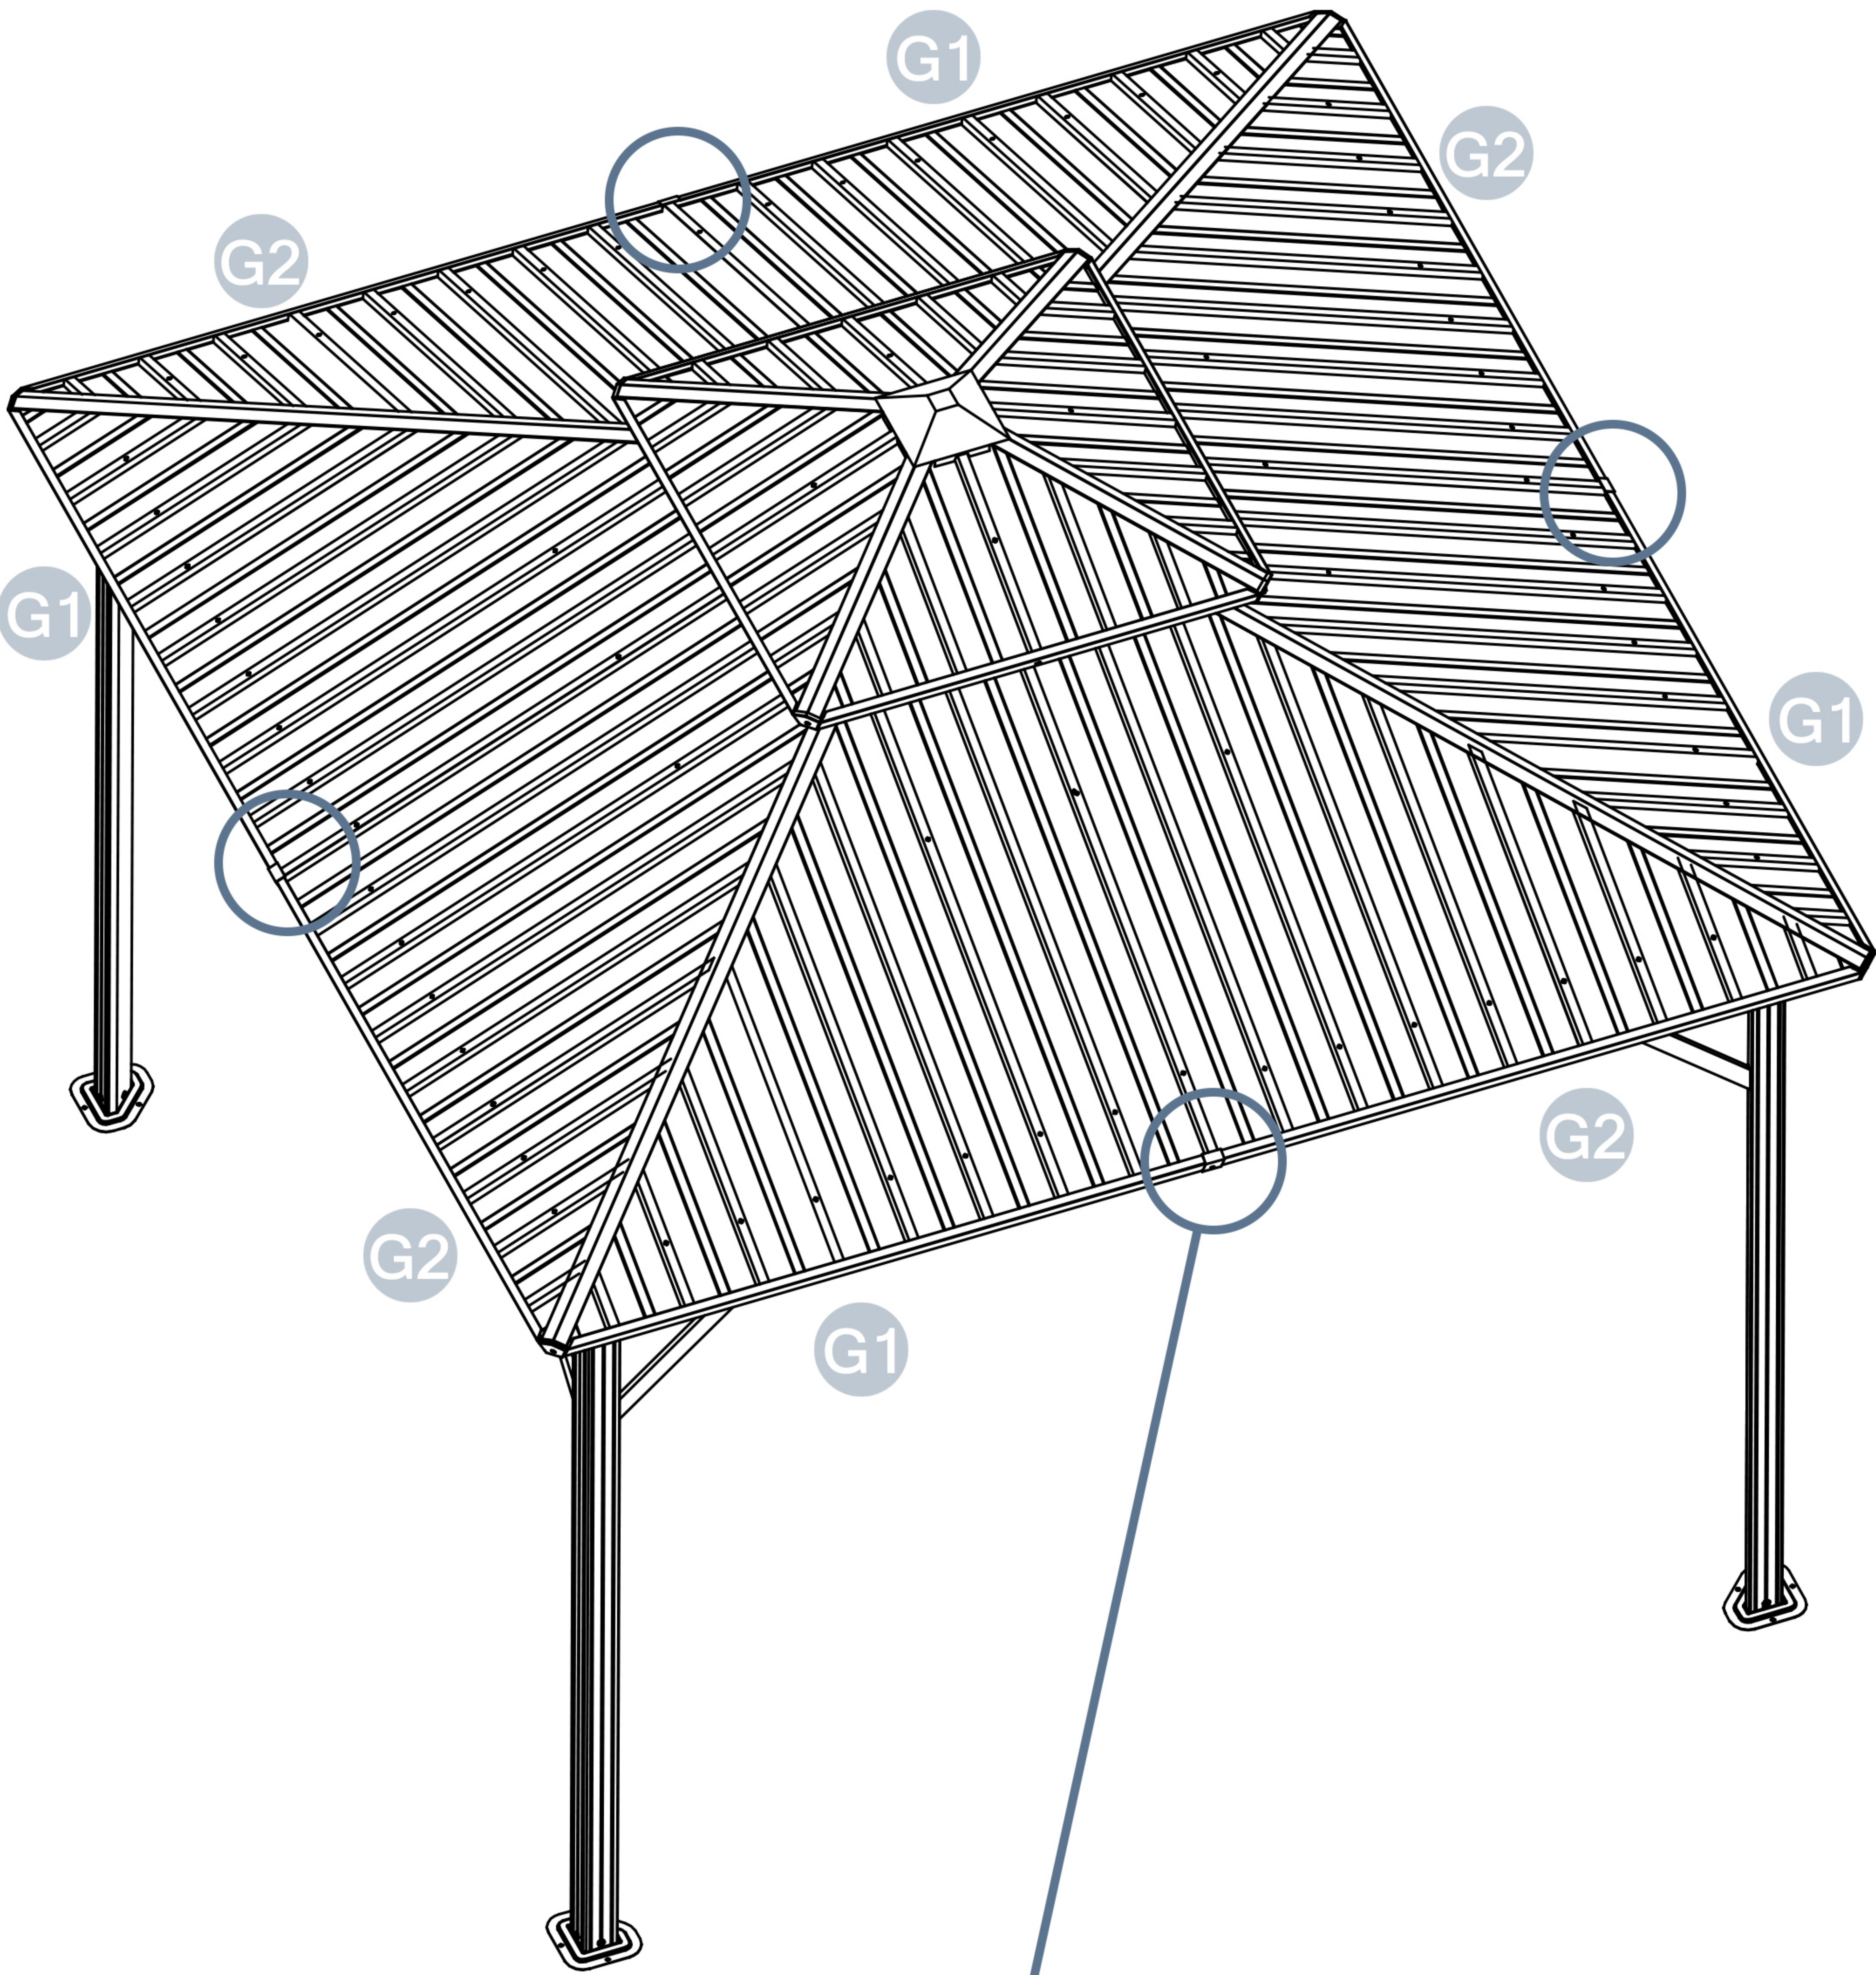


X4

STEP 20


Parts required

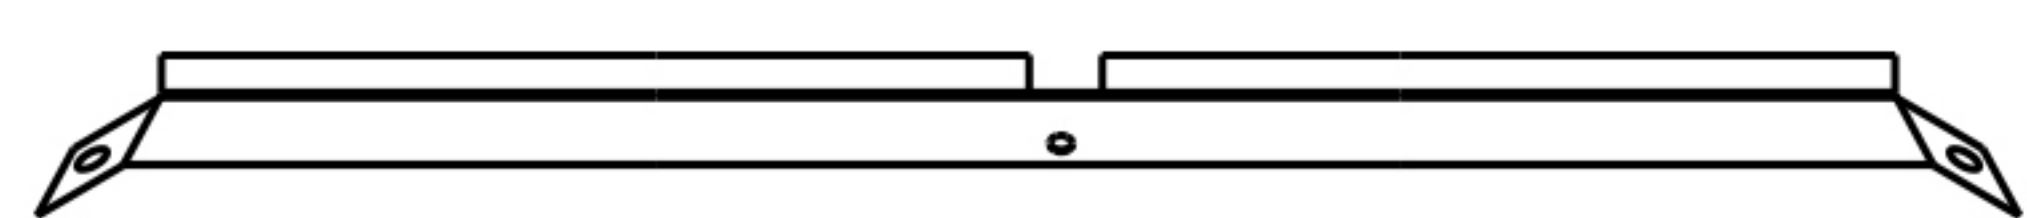


G8 4pcs

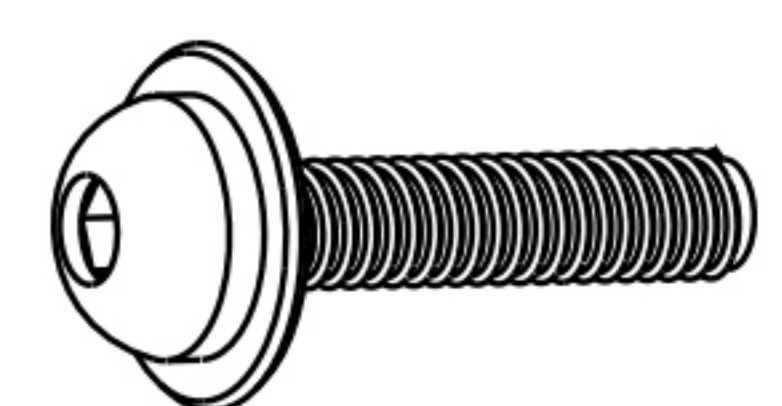

X7 4pcs





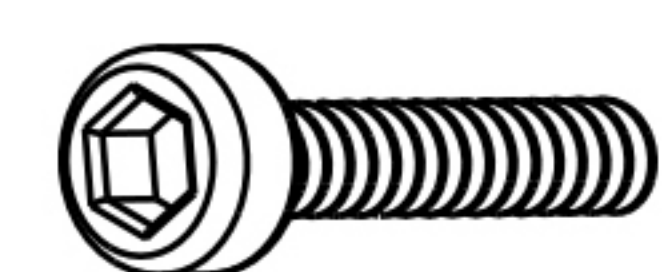


X1 4pcs

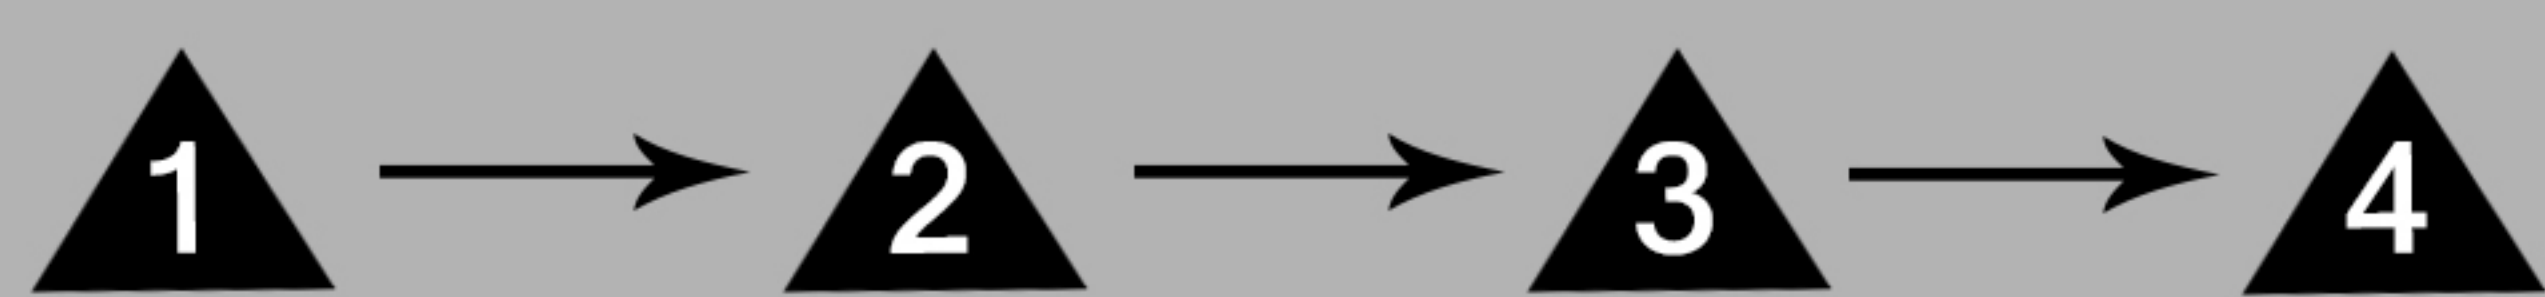


It can be installed from the inside.

To better align the screws for practical situations, do not fully tighten screws initially.

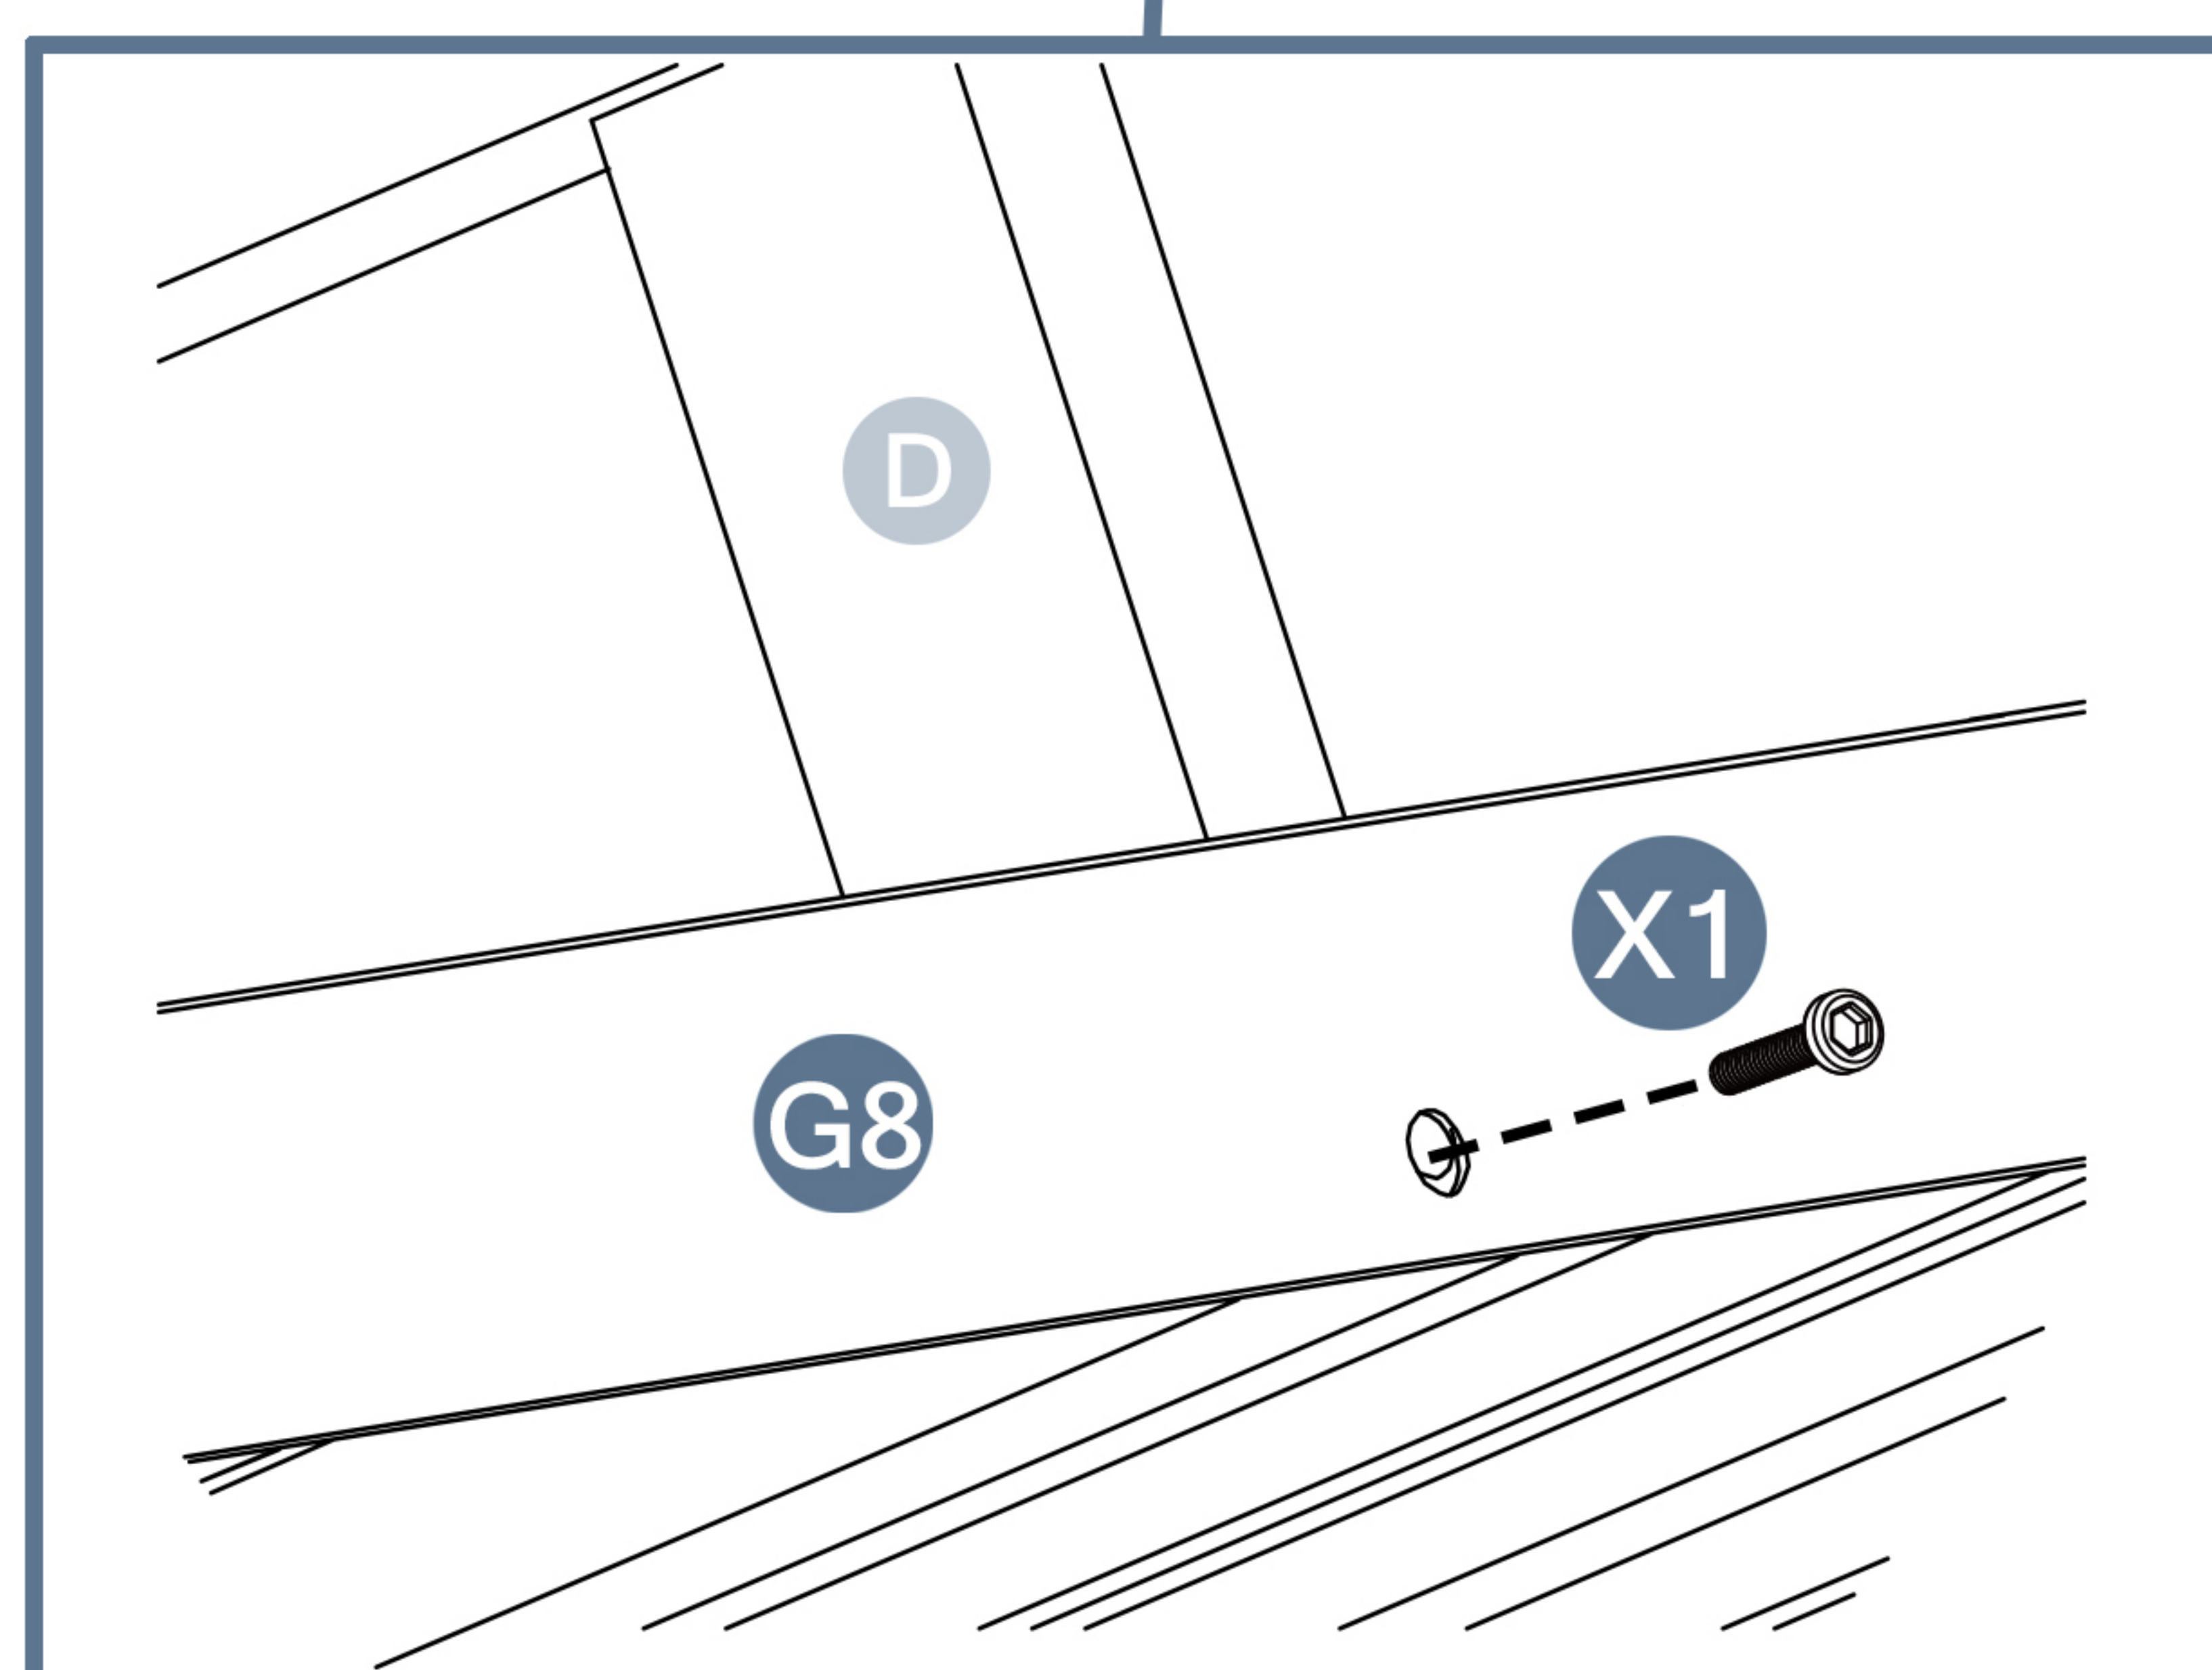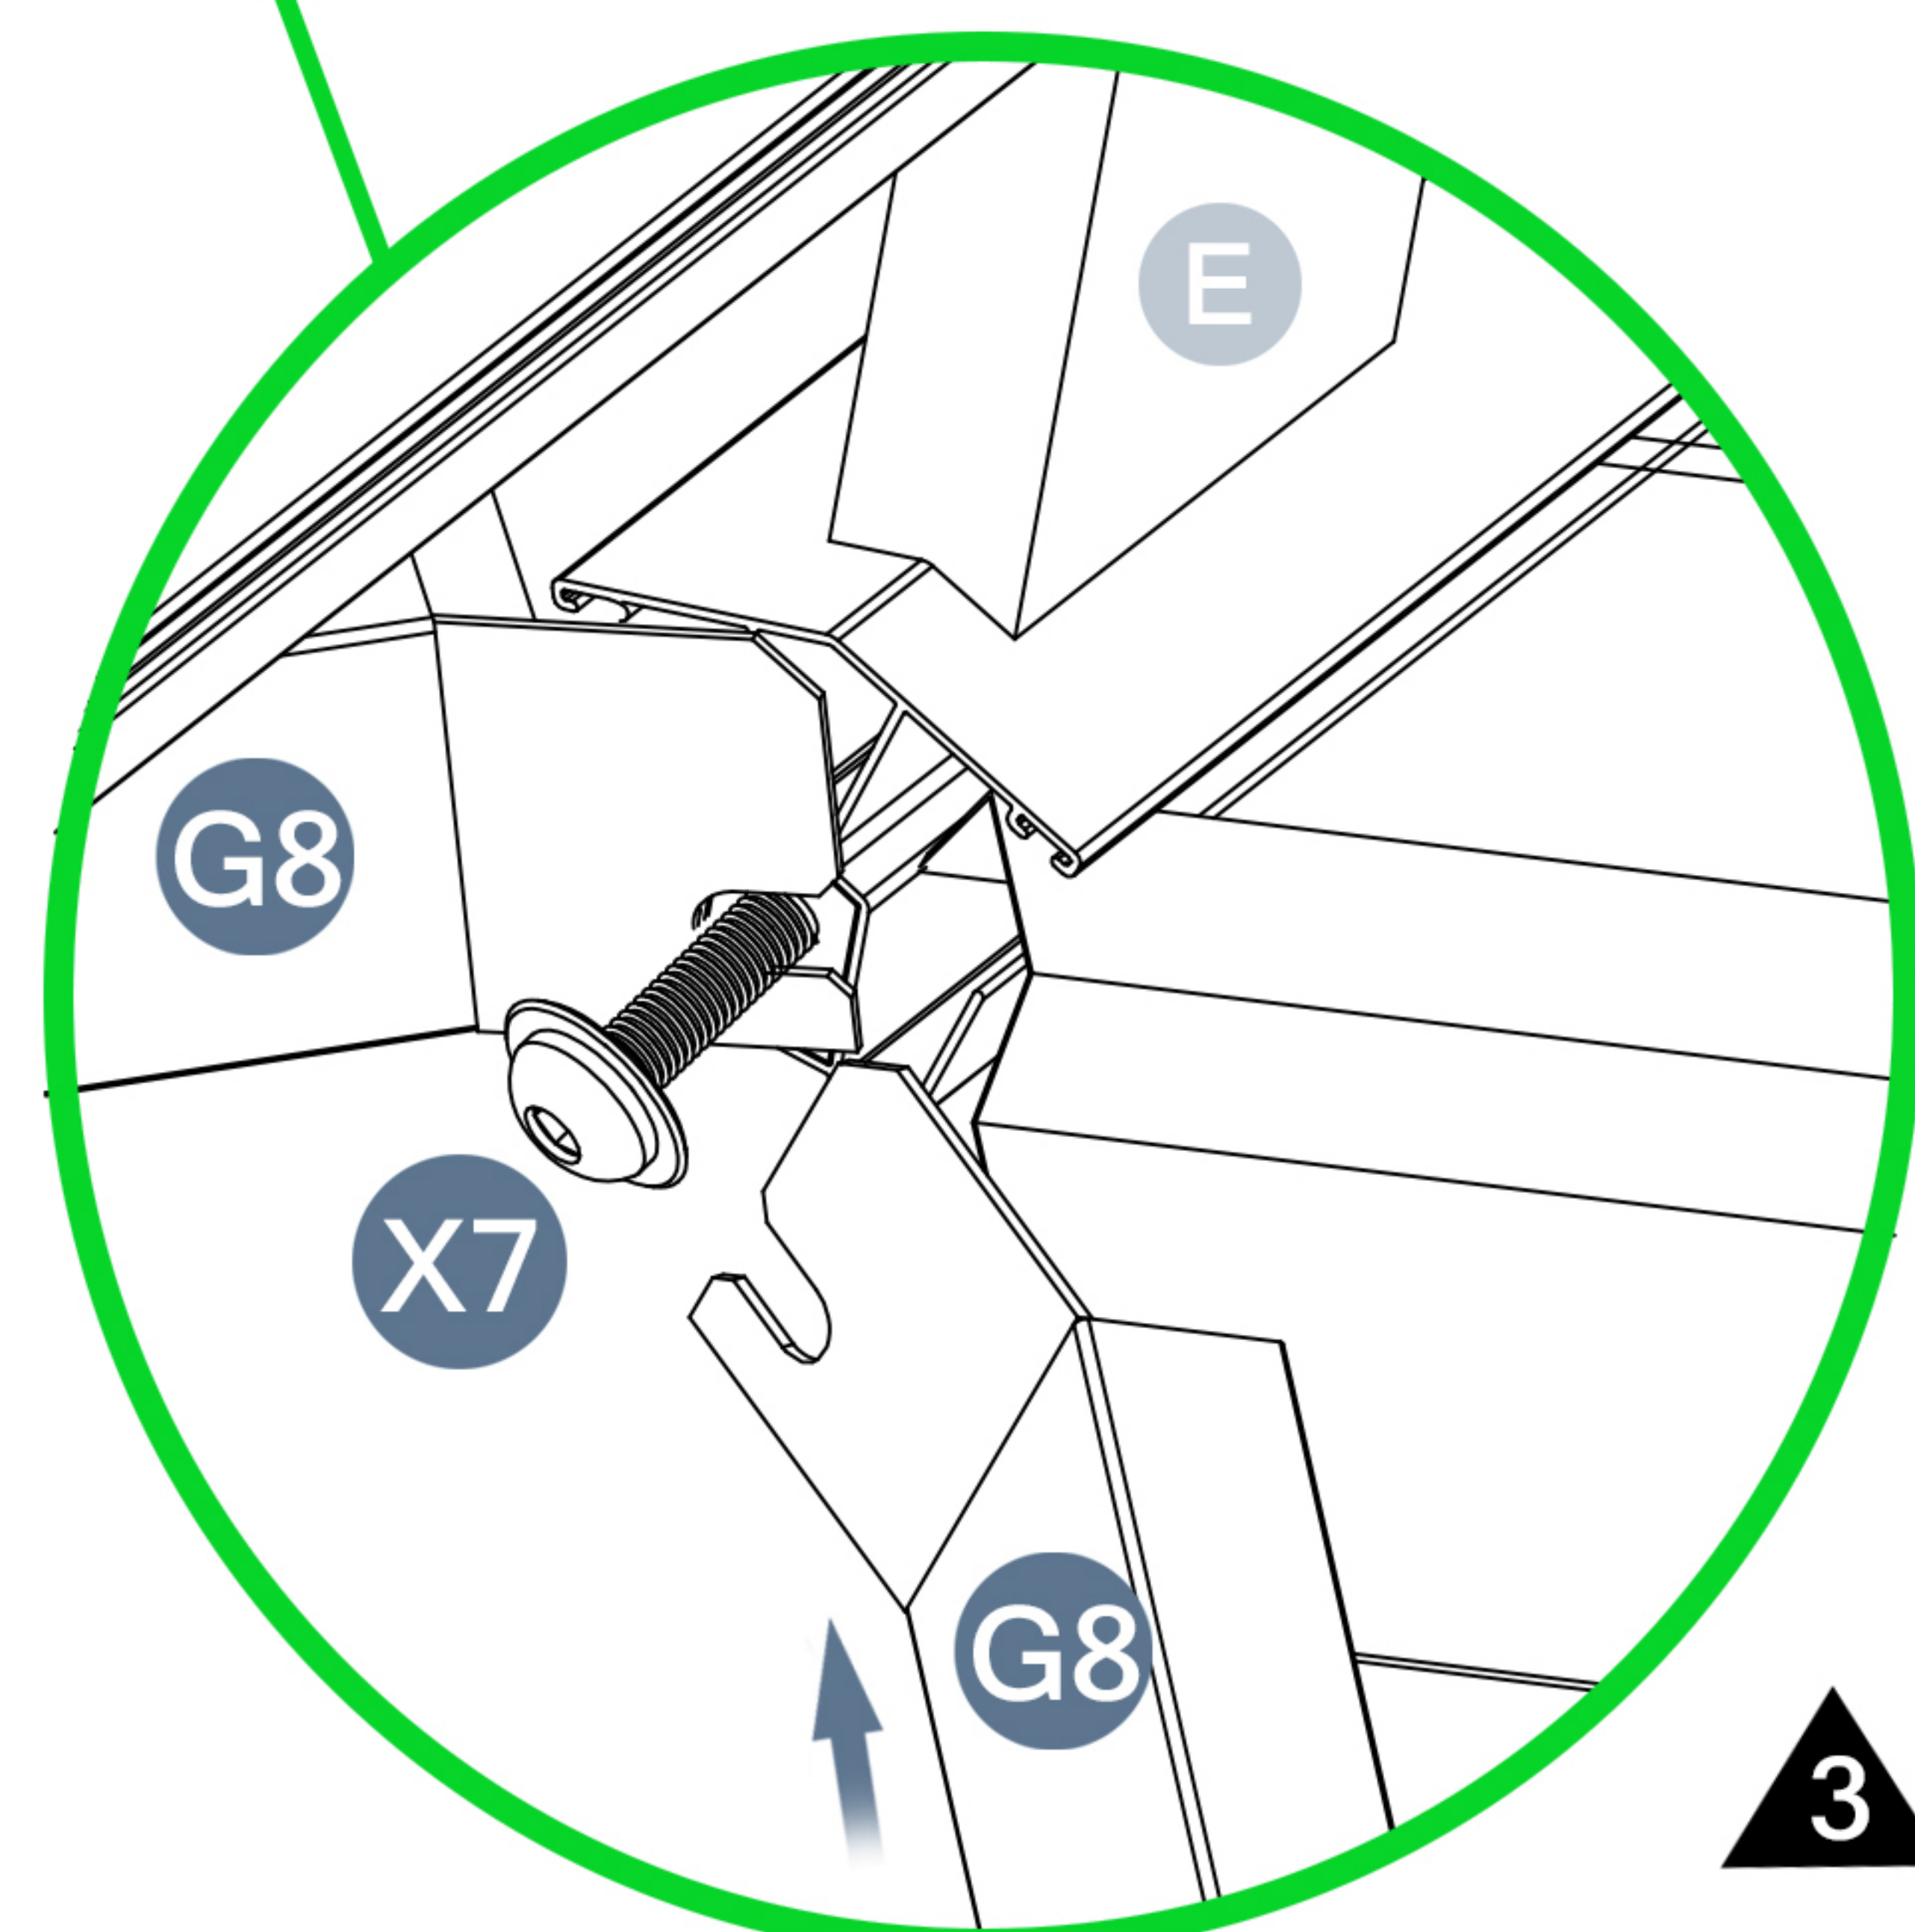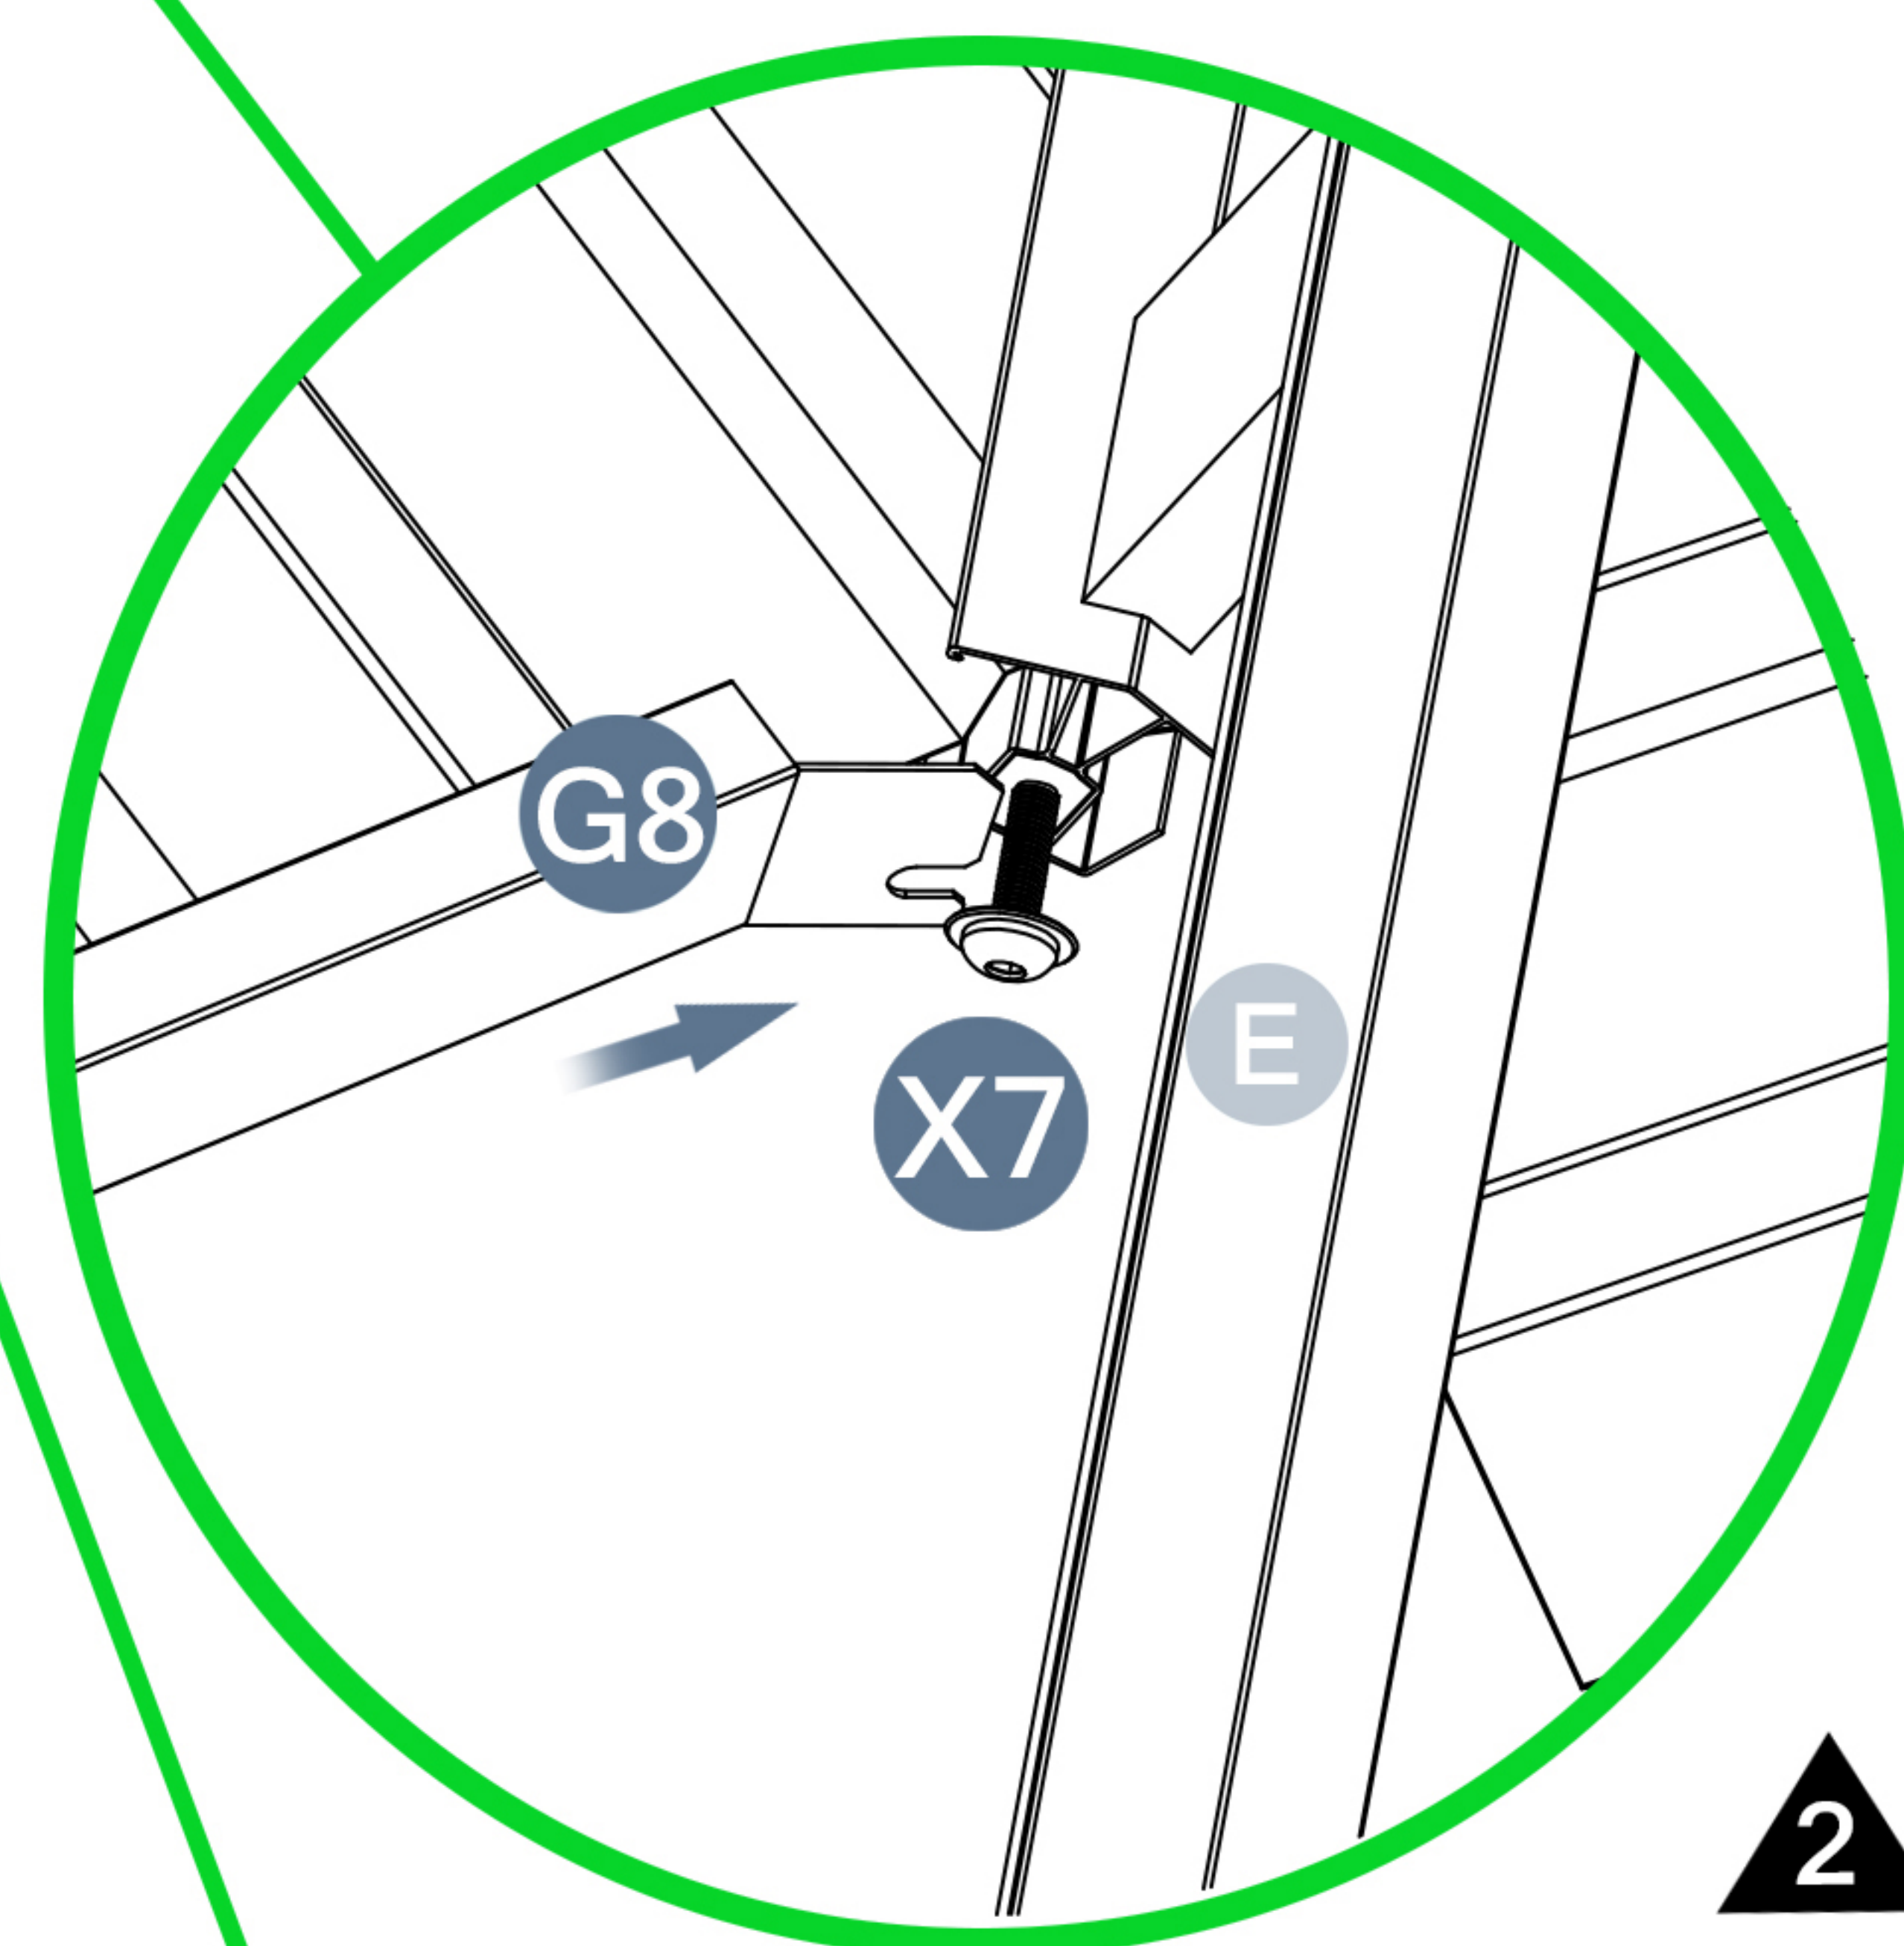
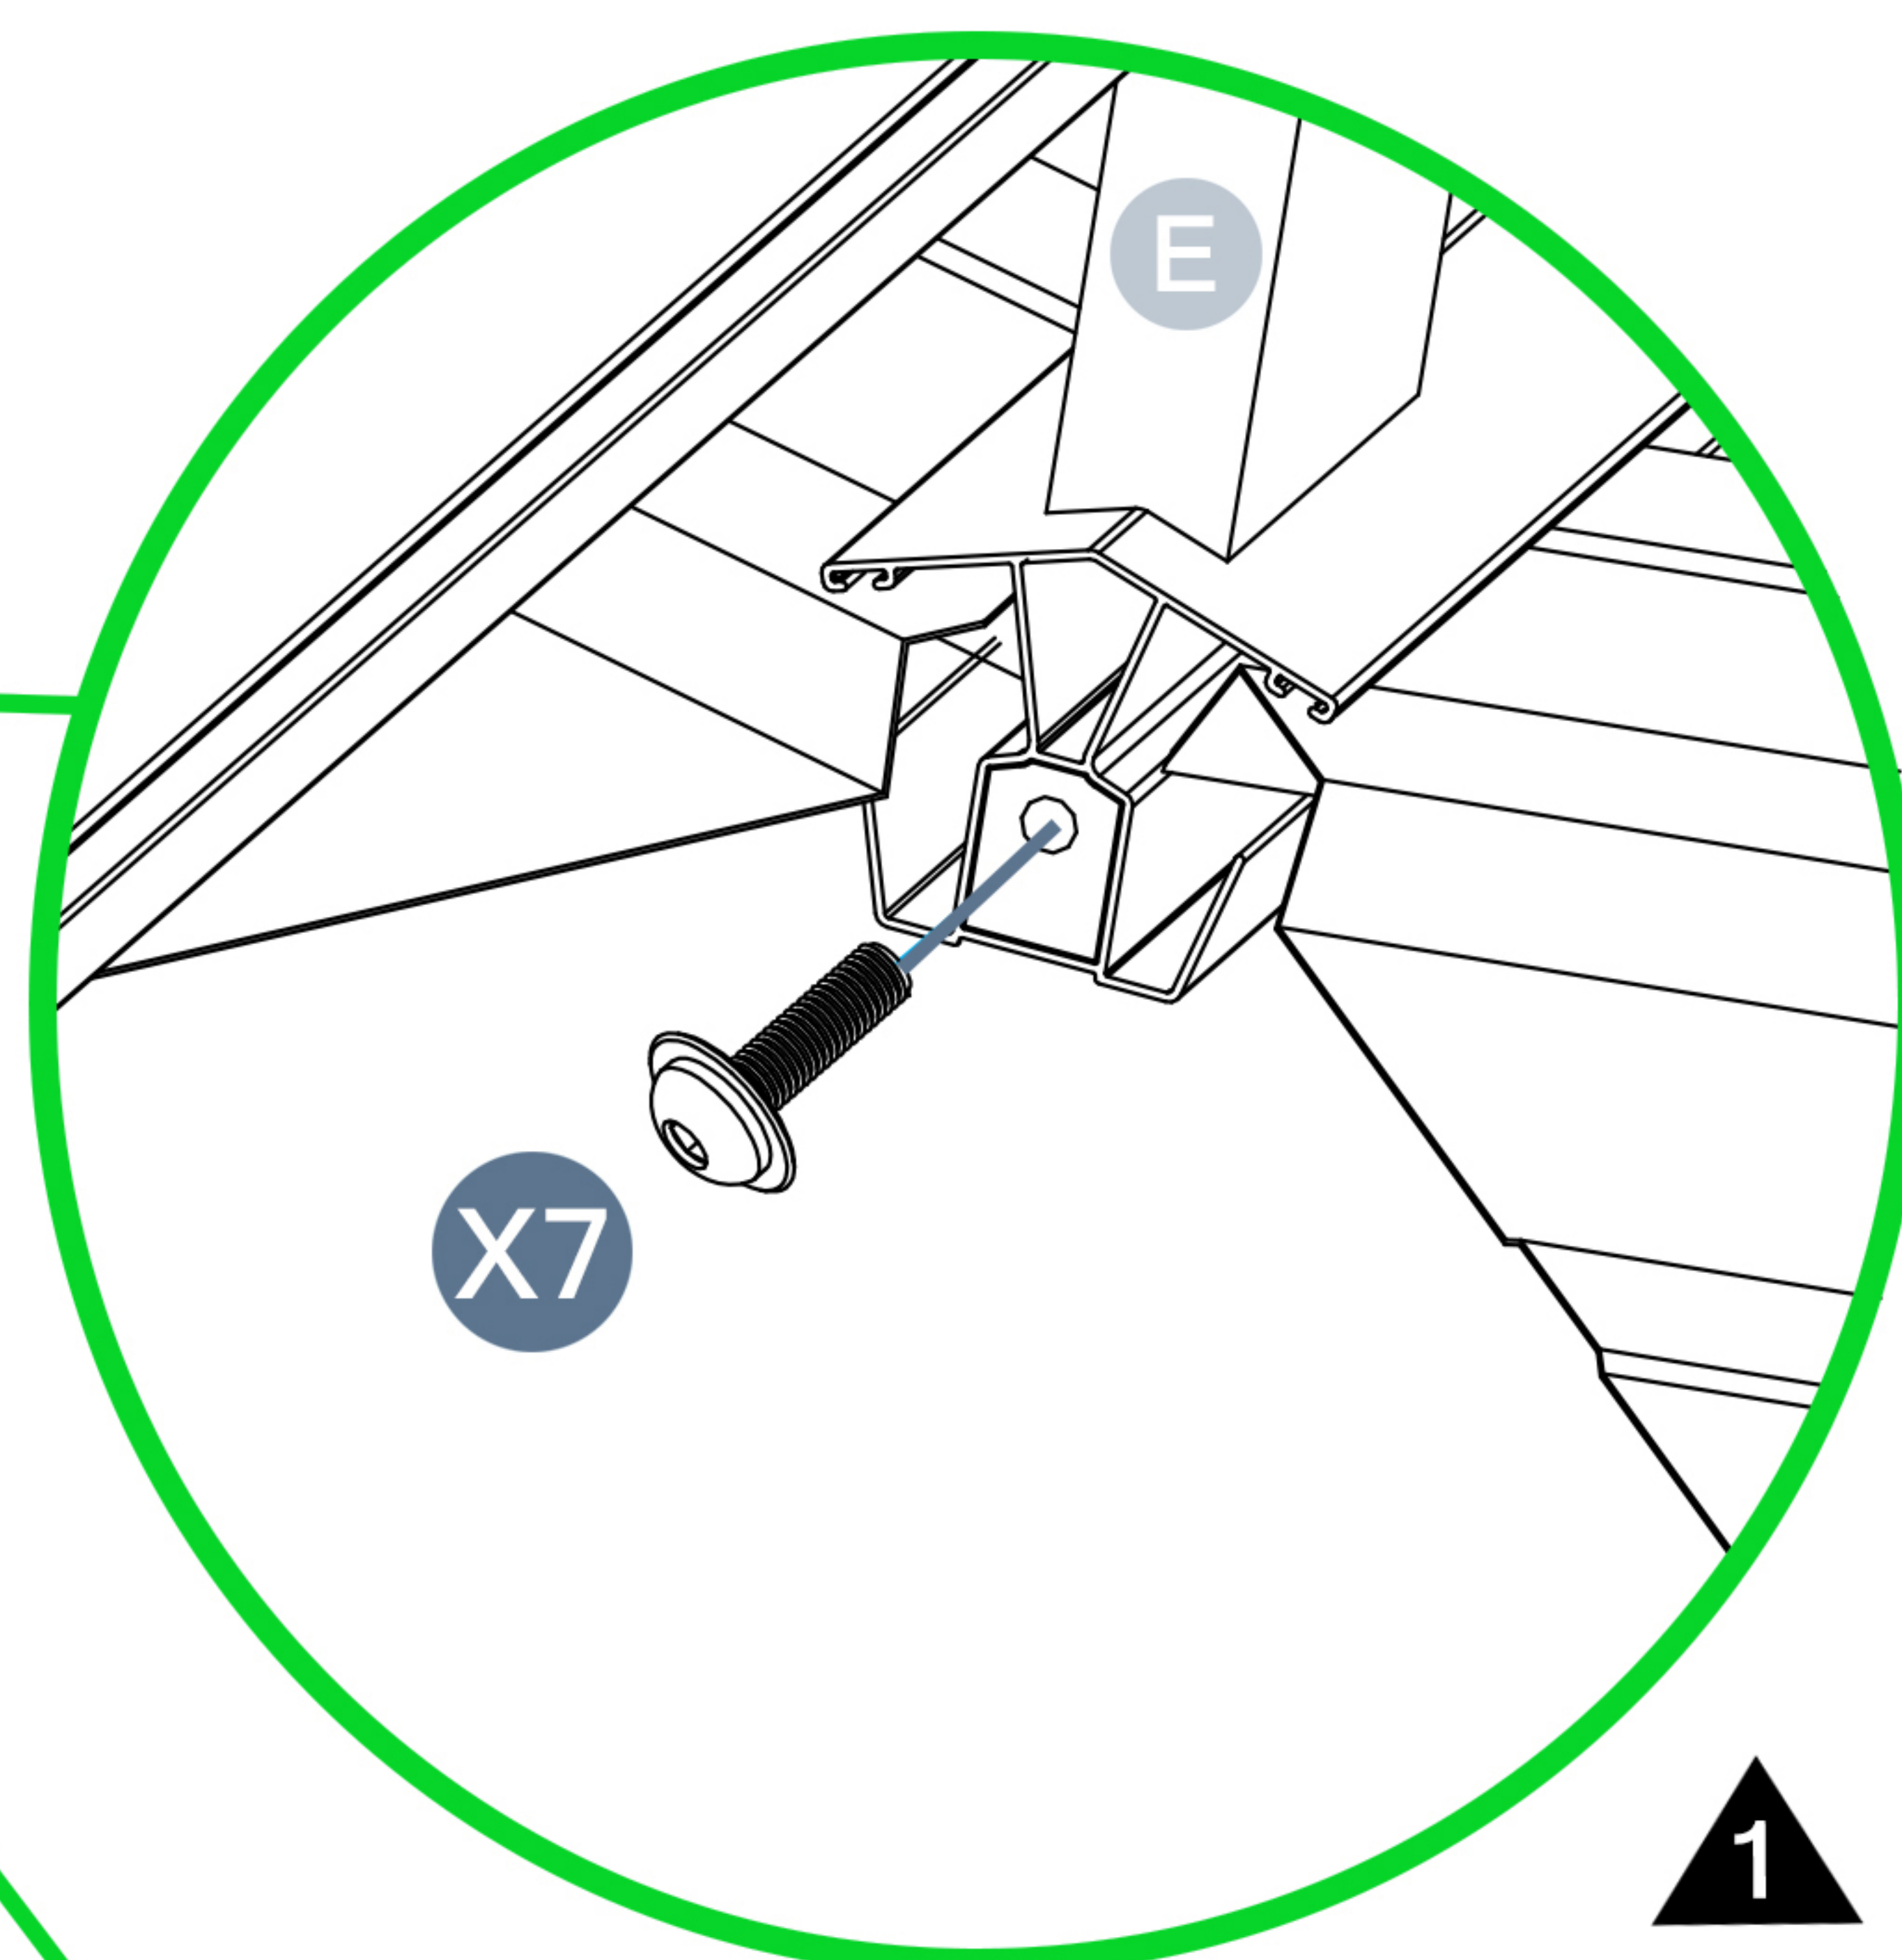
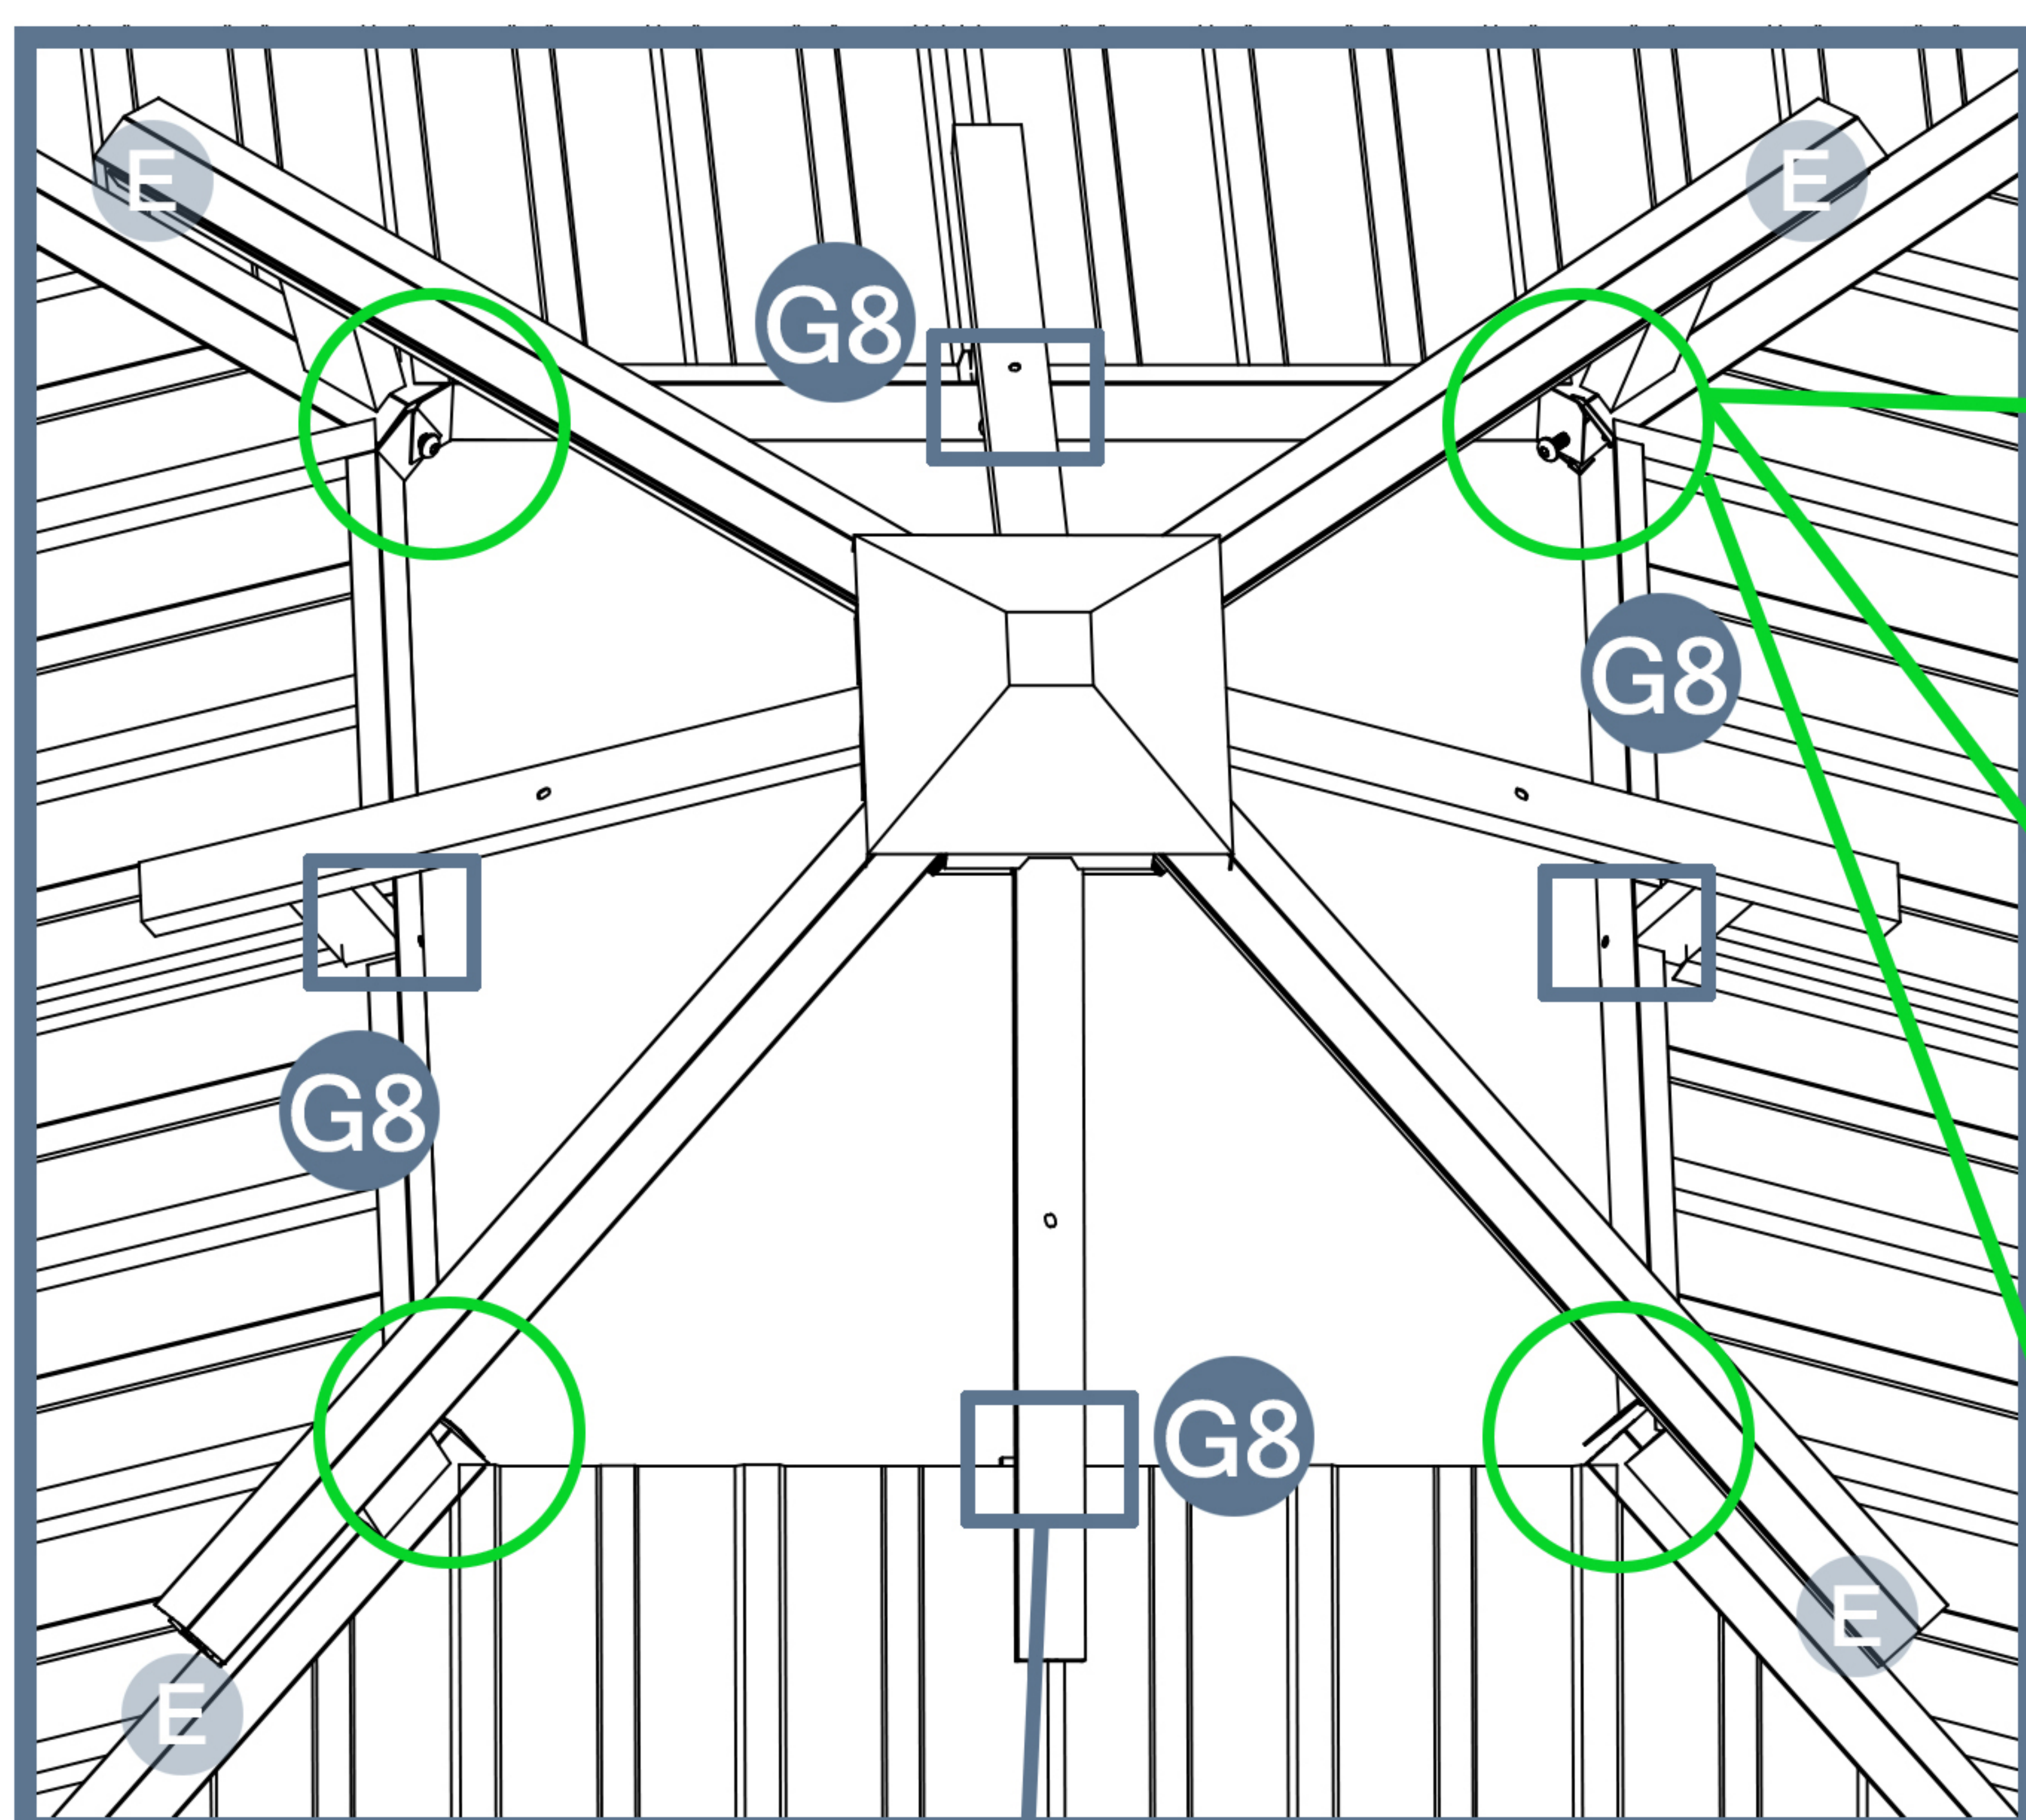


STEP21

Parts required

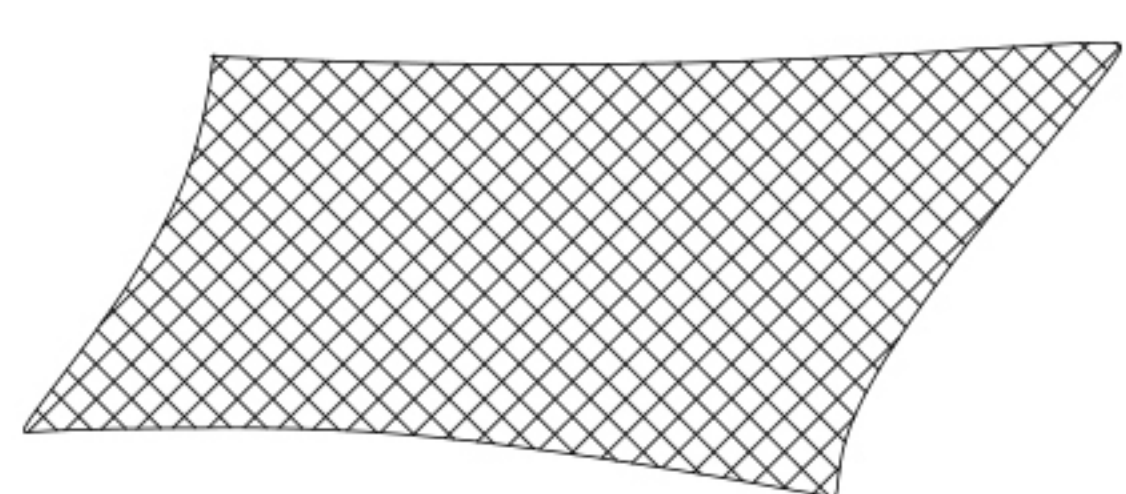


Z2 1pcs

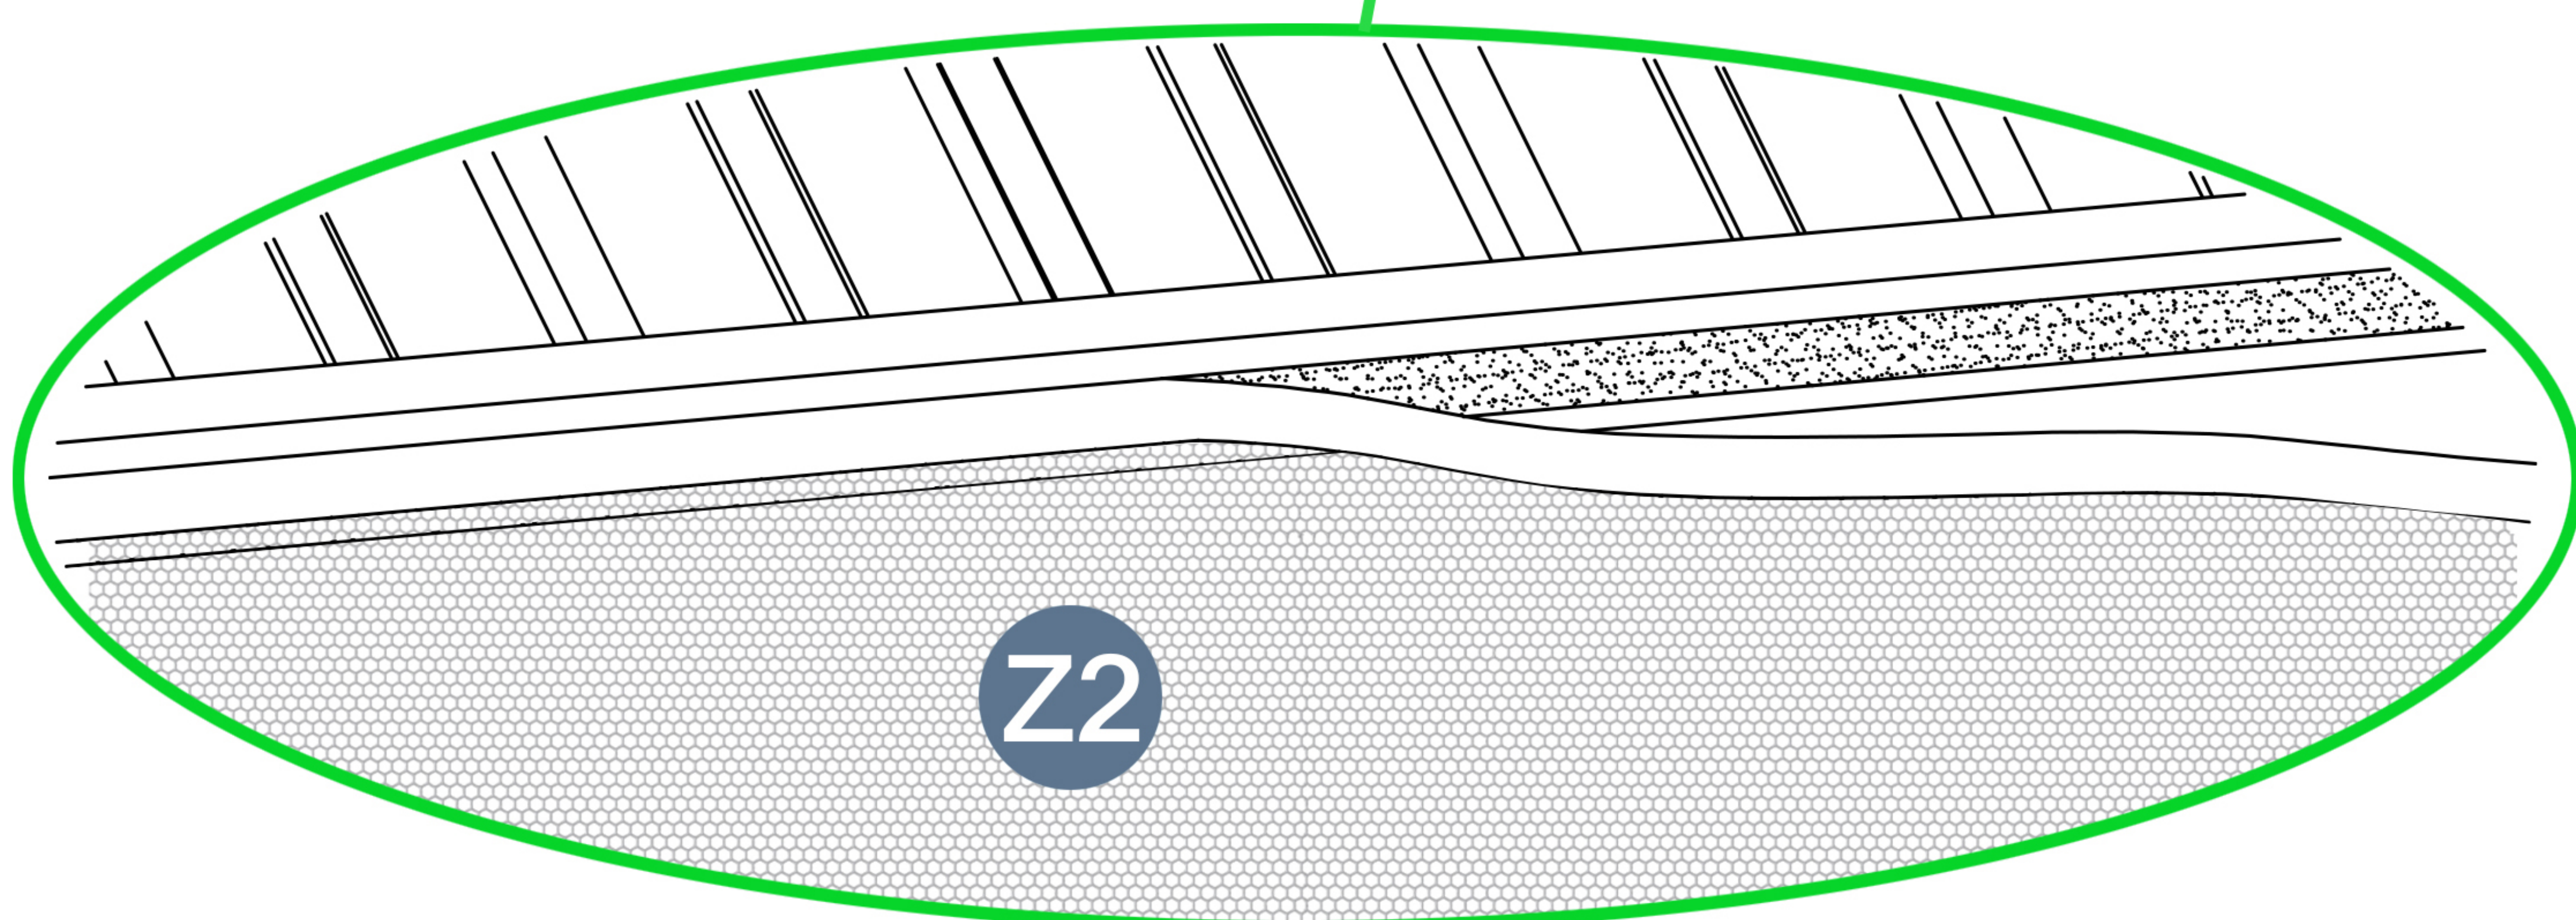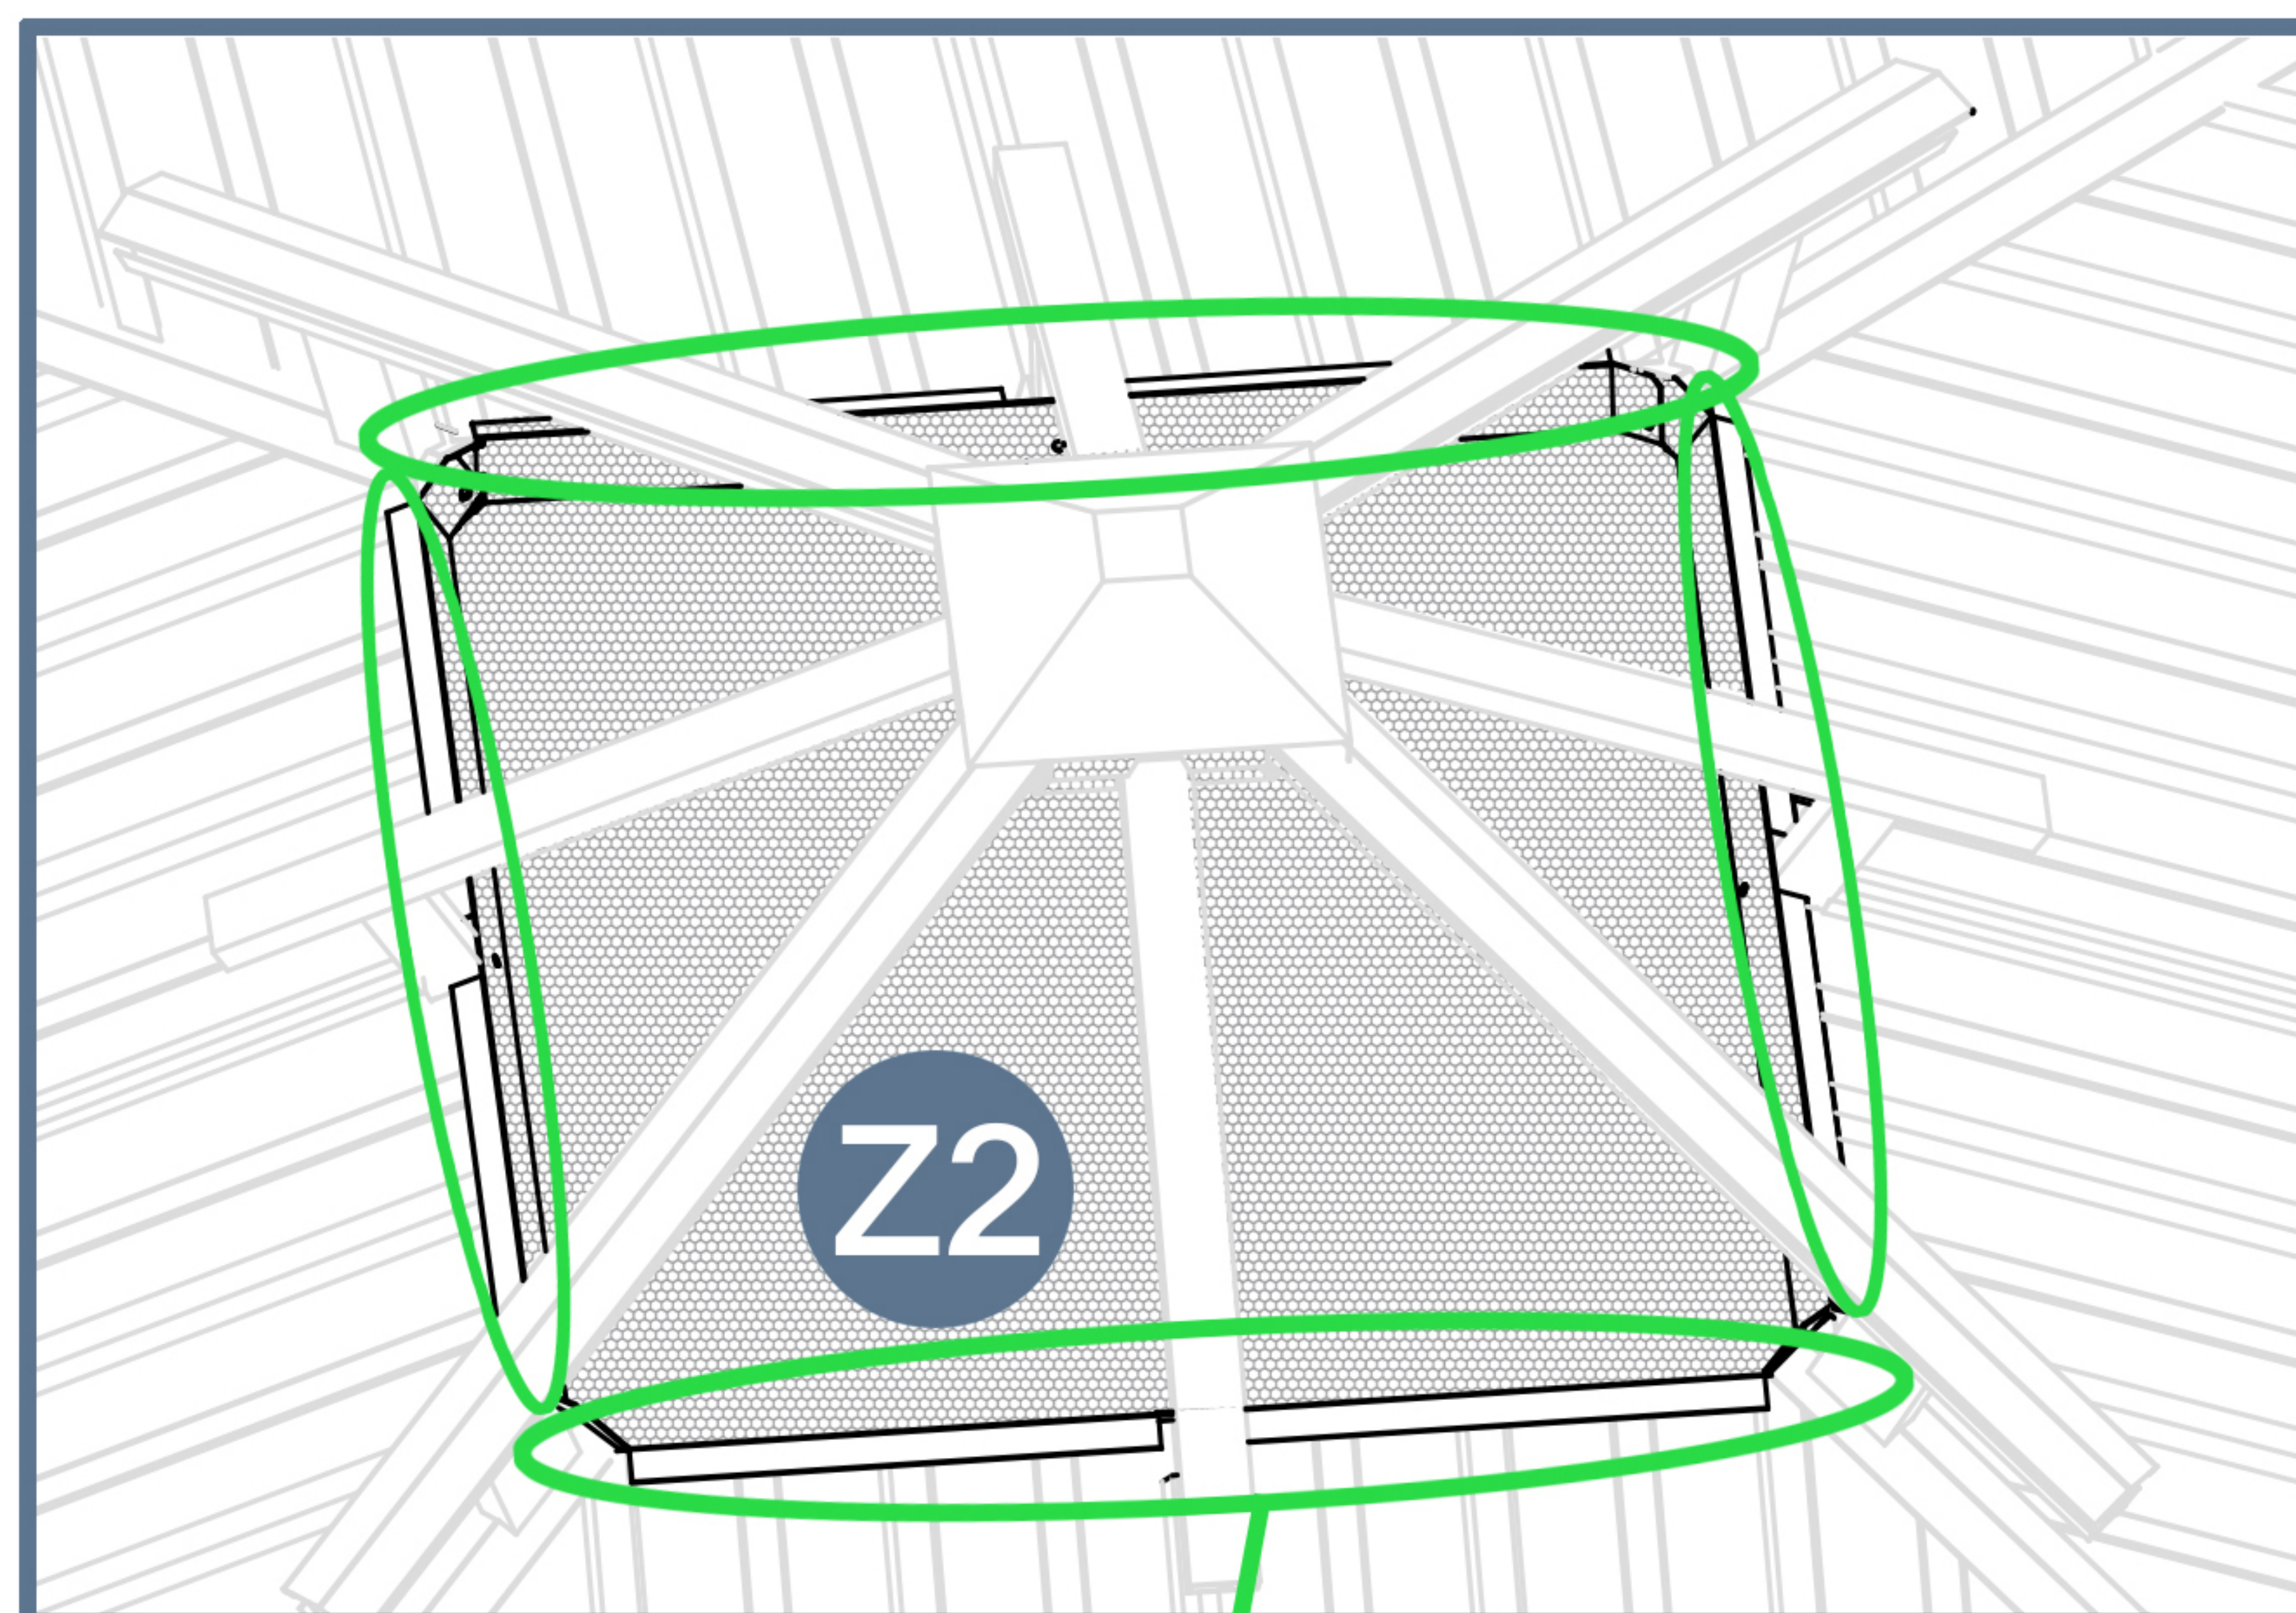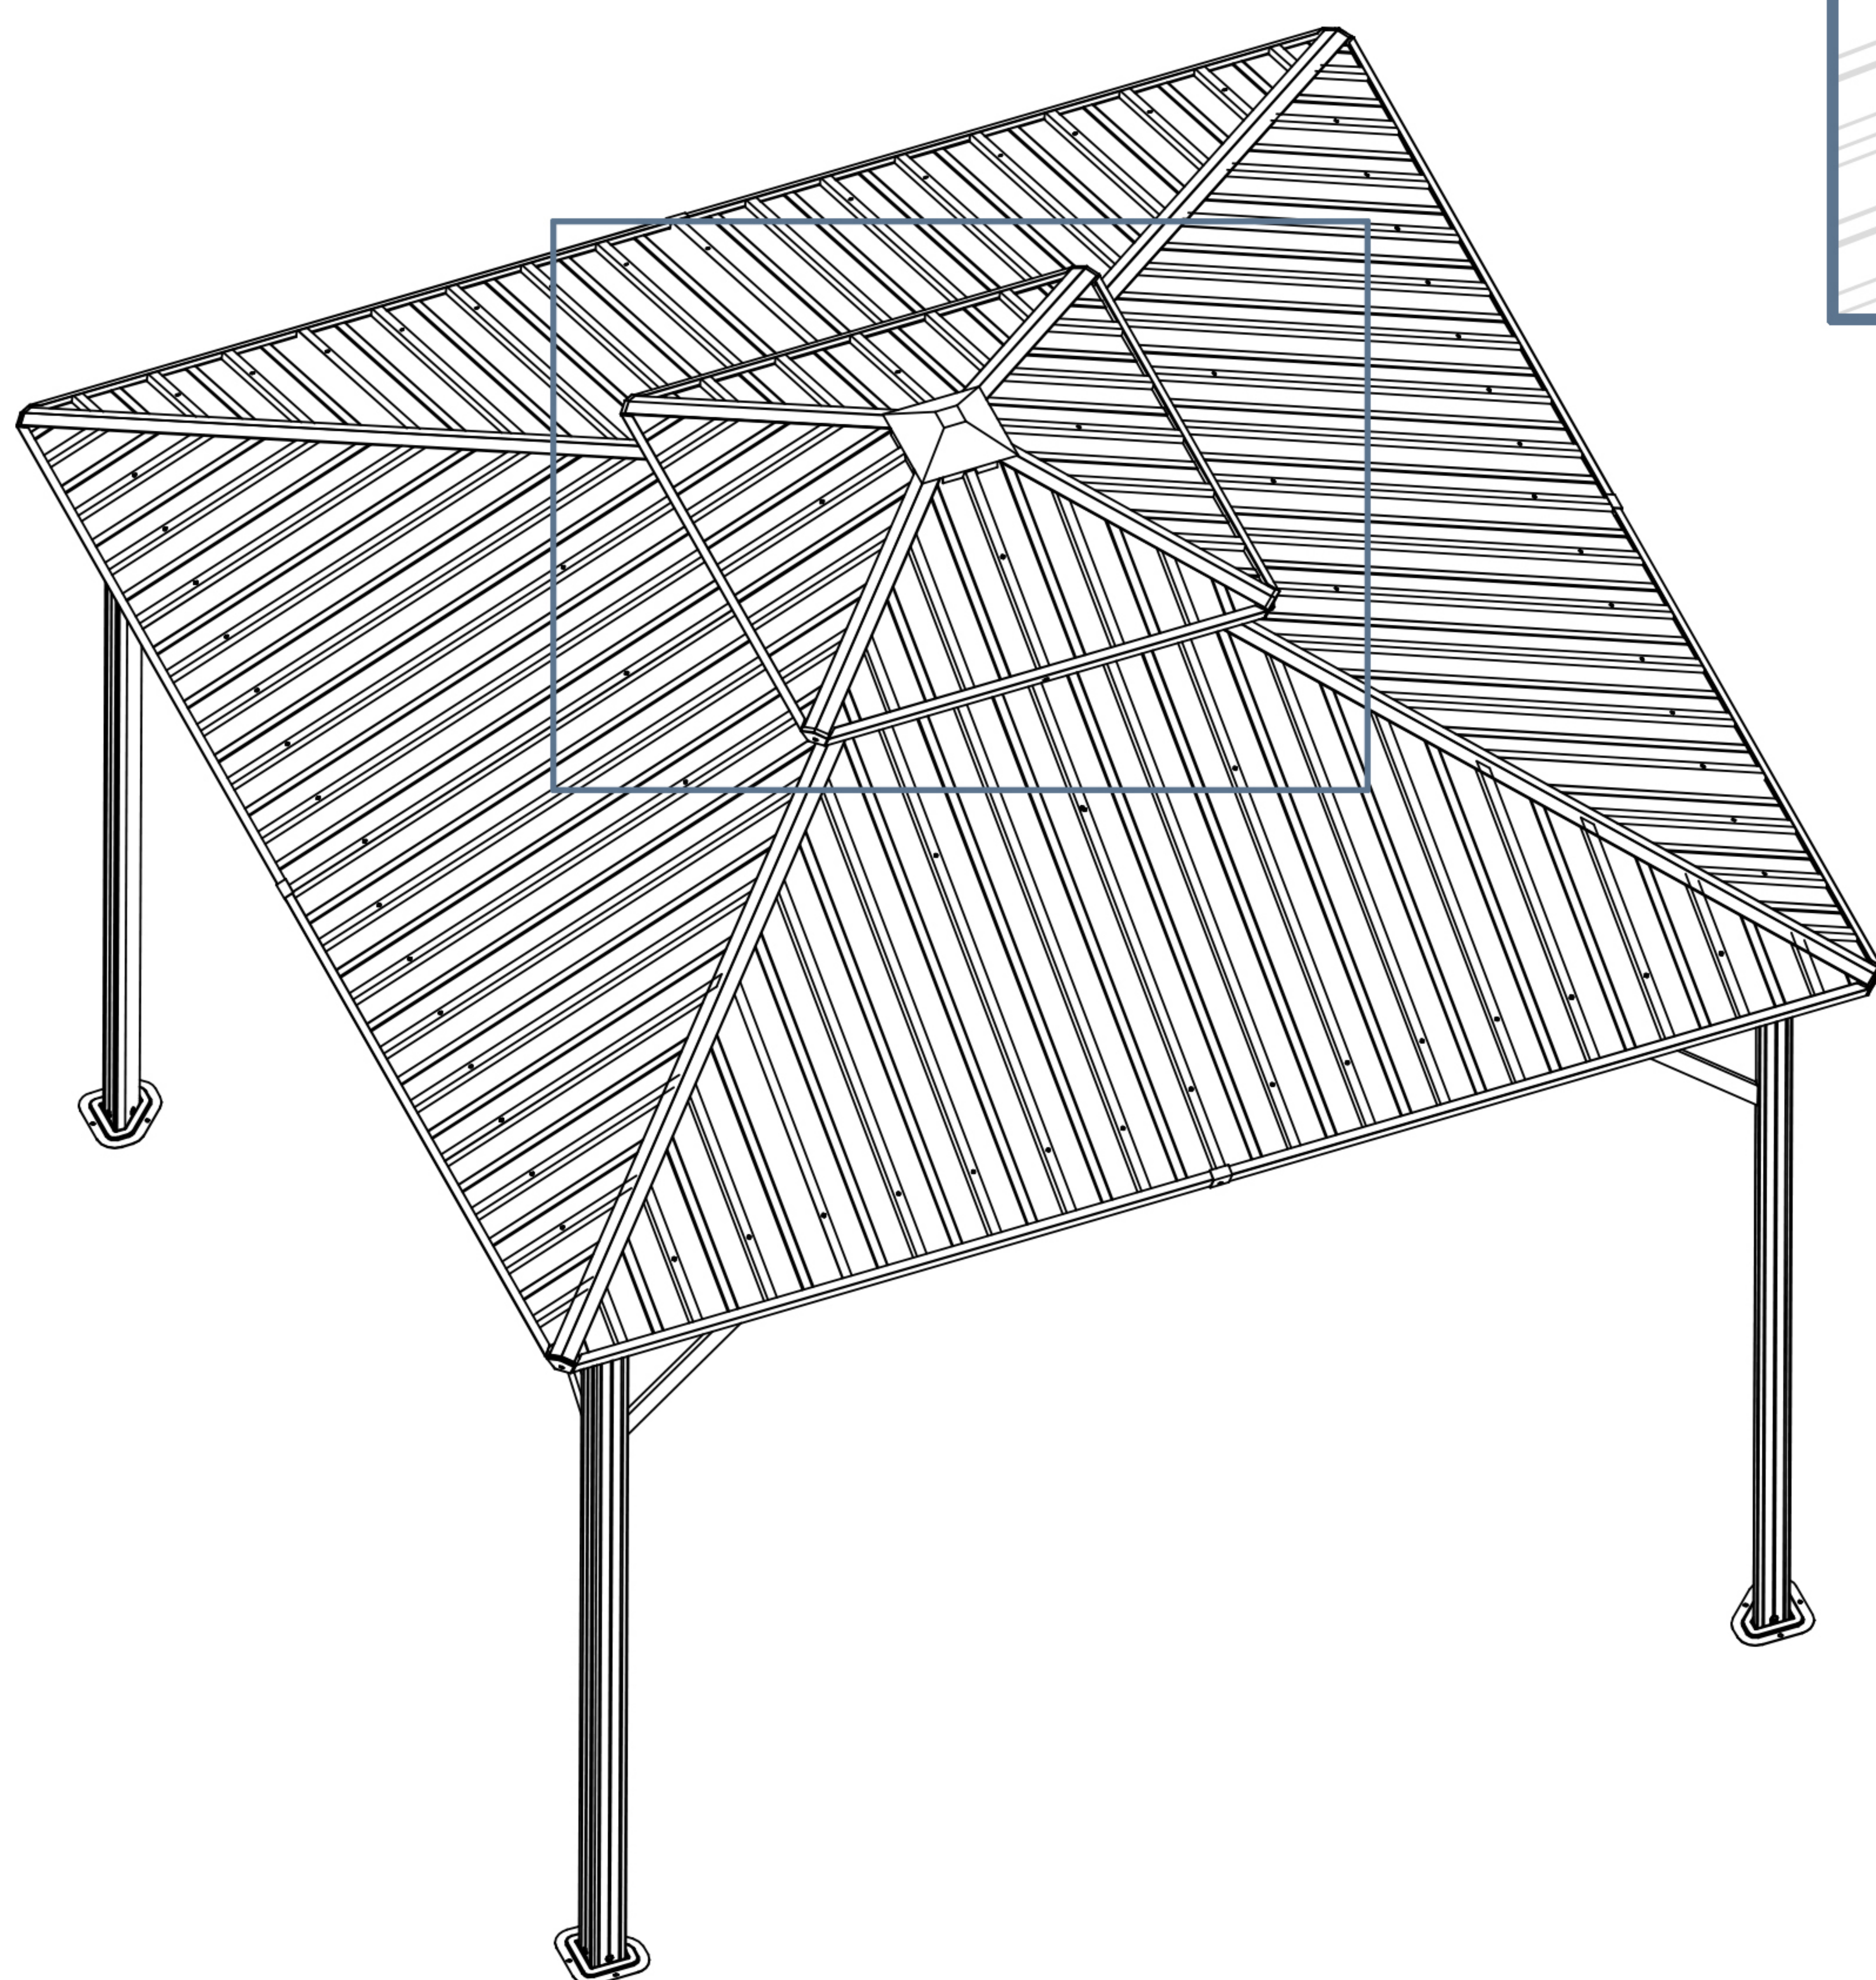


STEP 22

Parts required

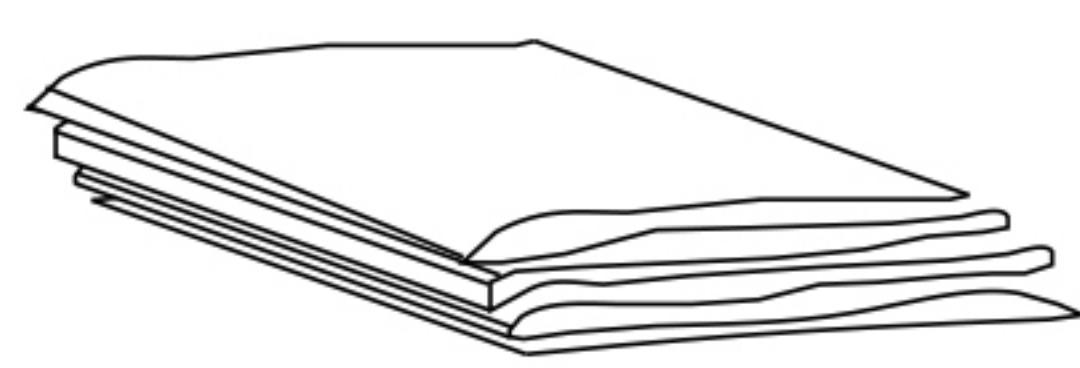


Z 1pcs

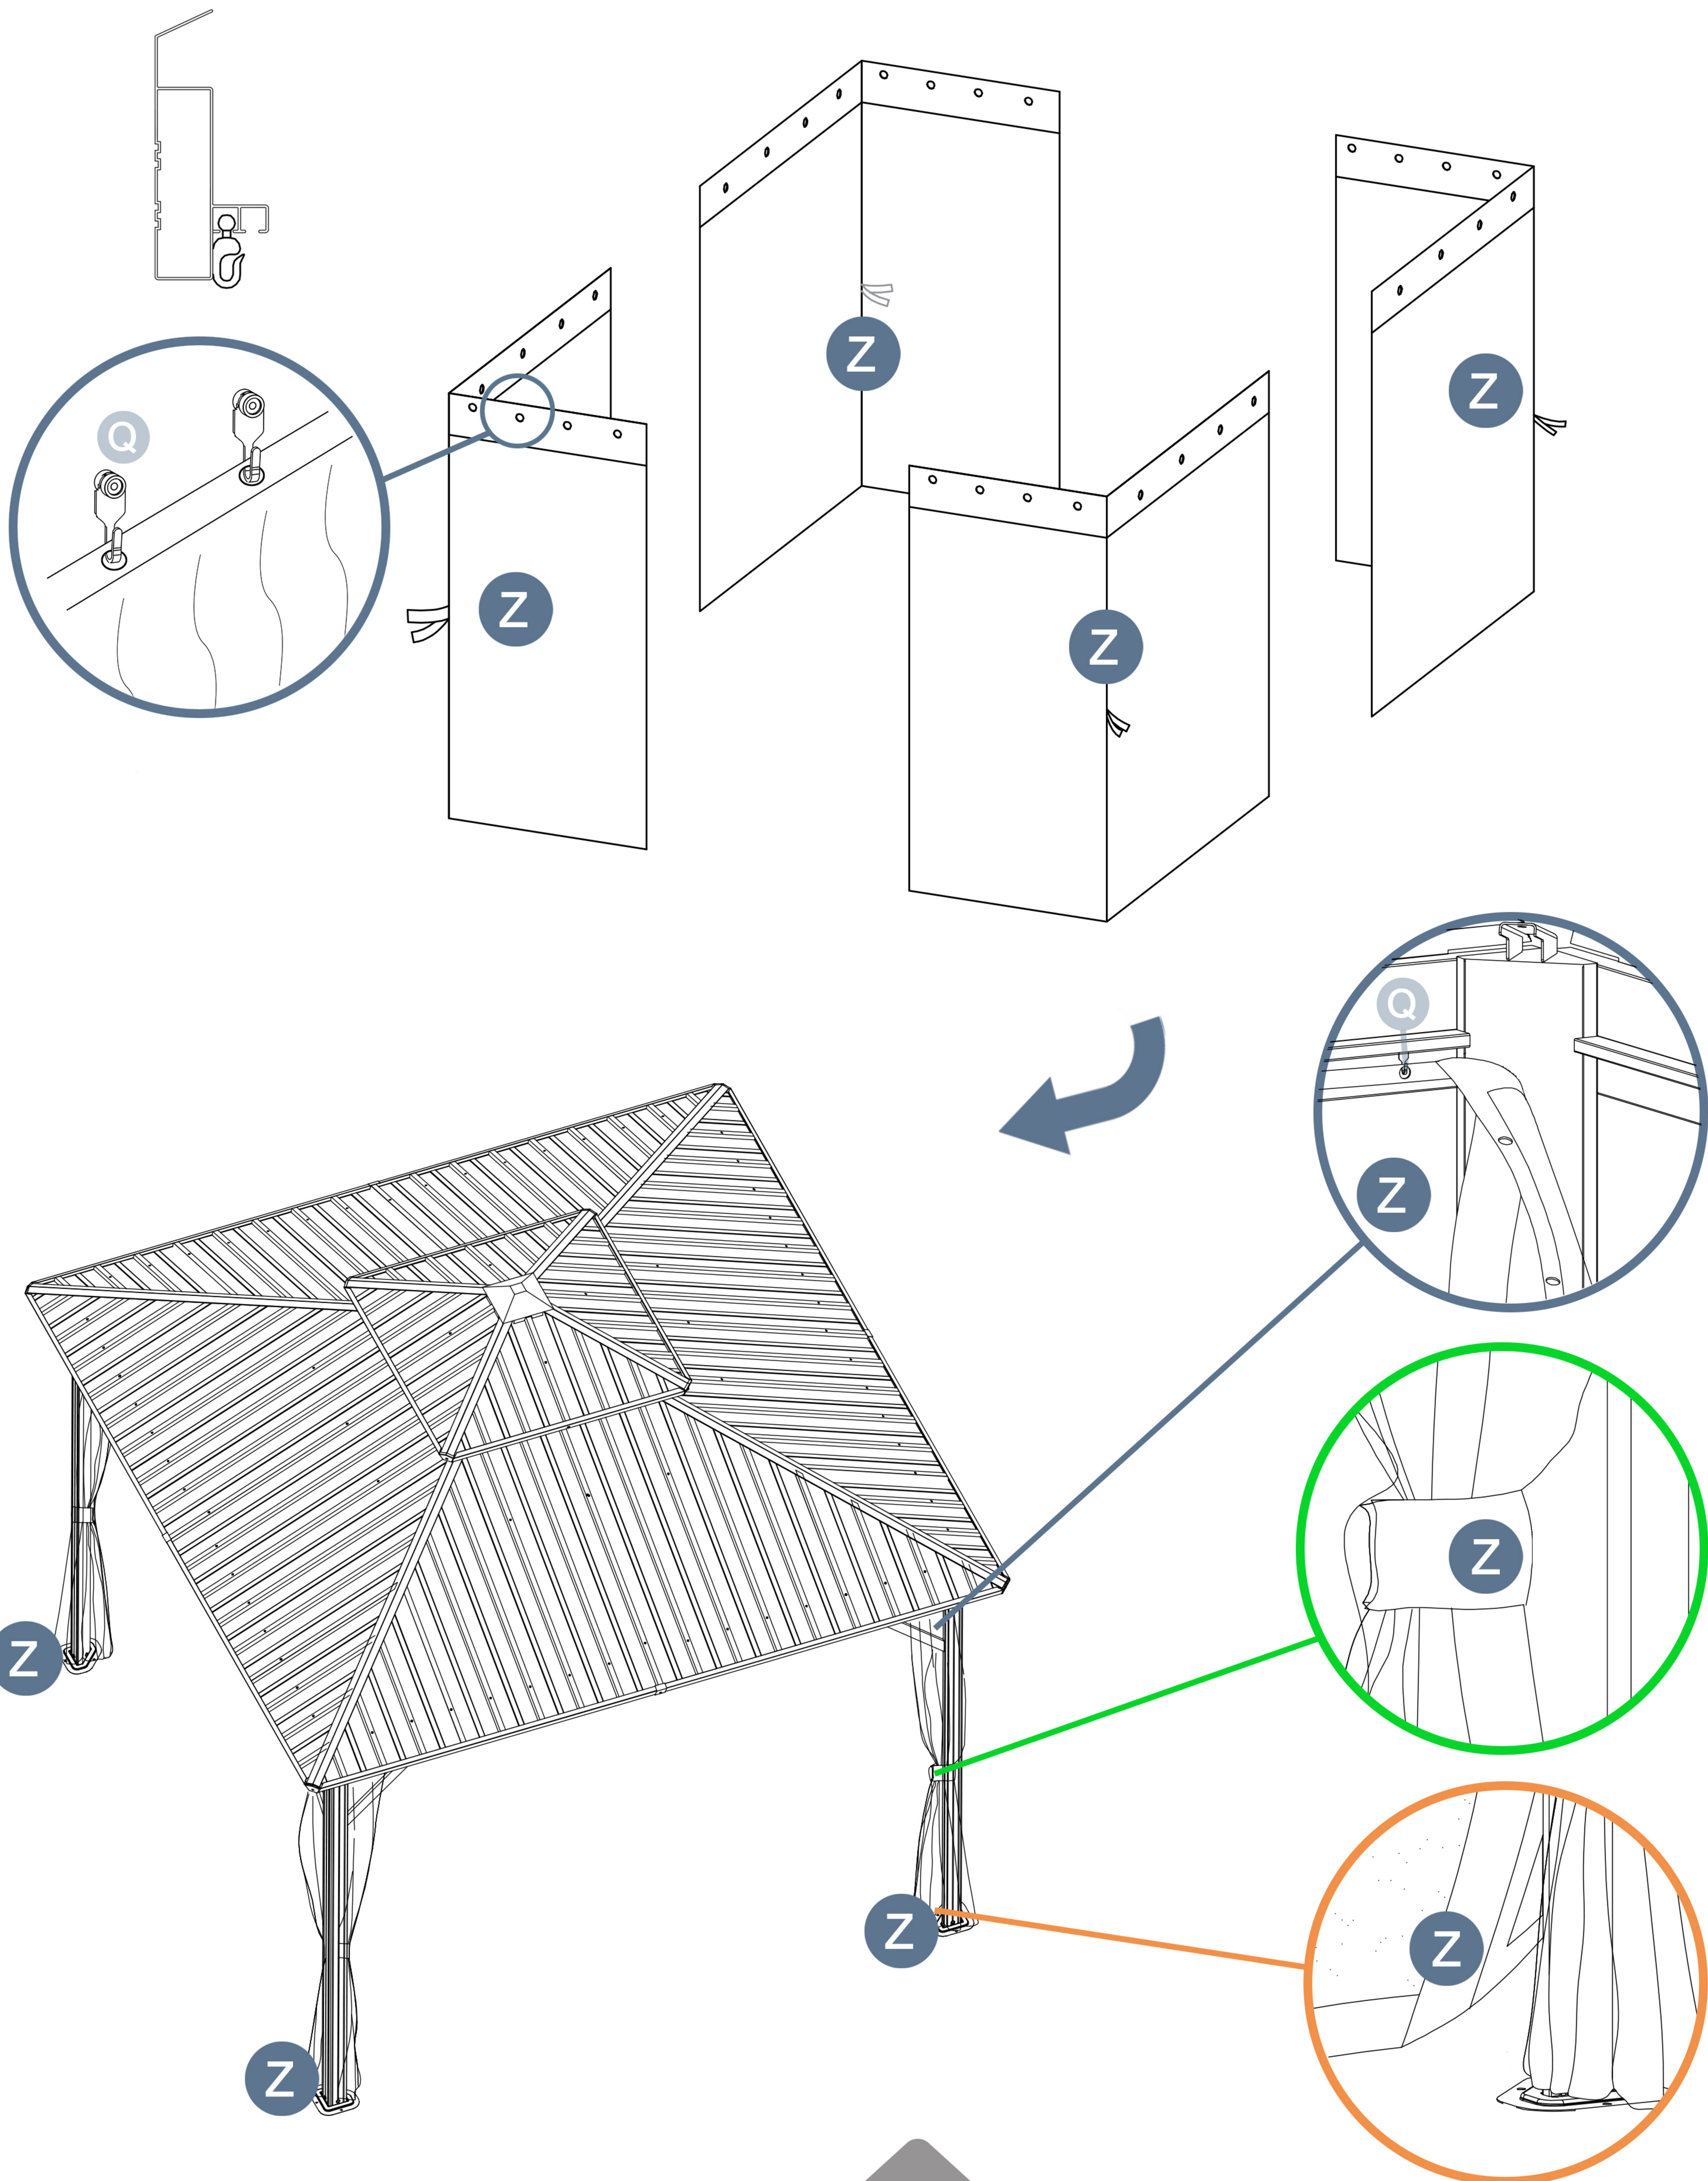


STEP 23

Parts required

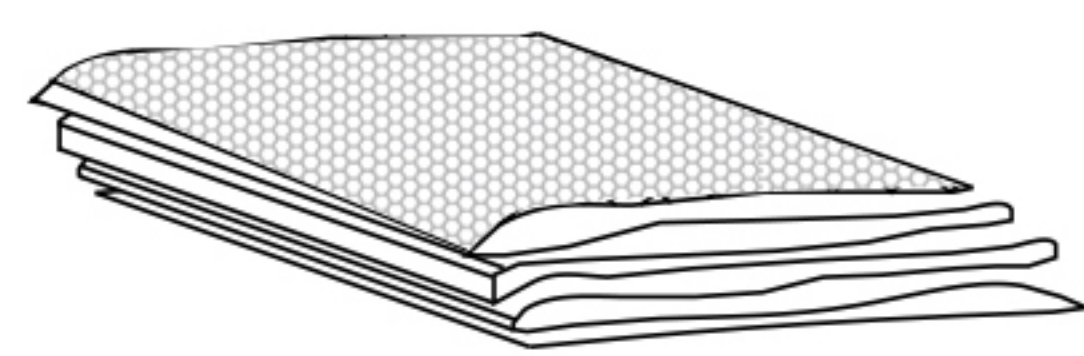


Z1 1pcs

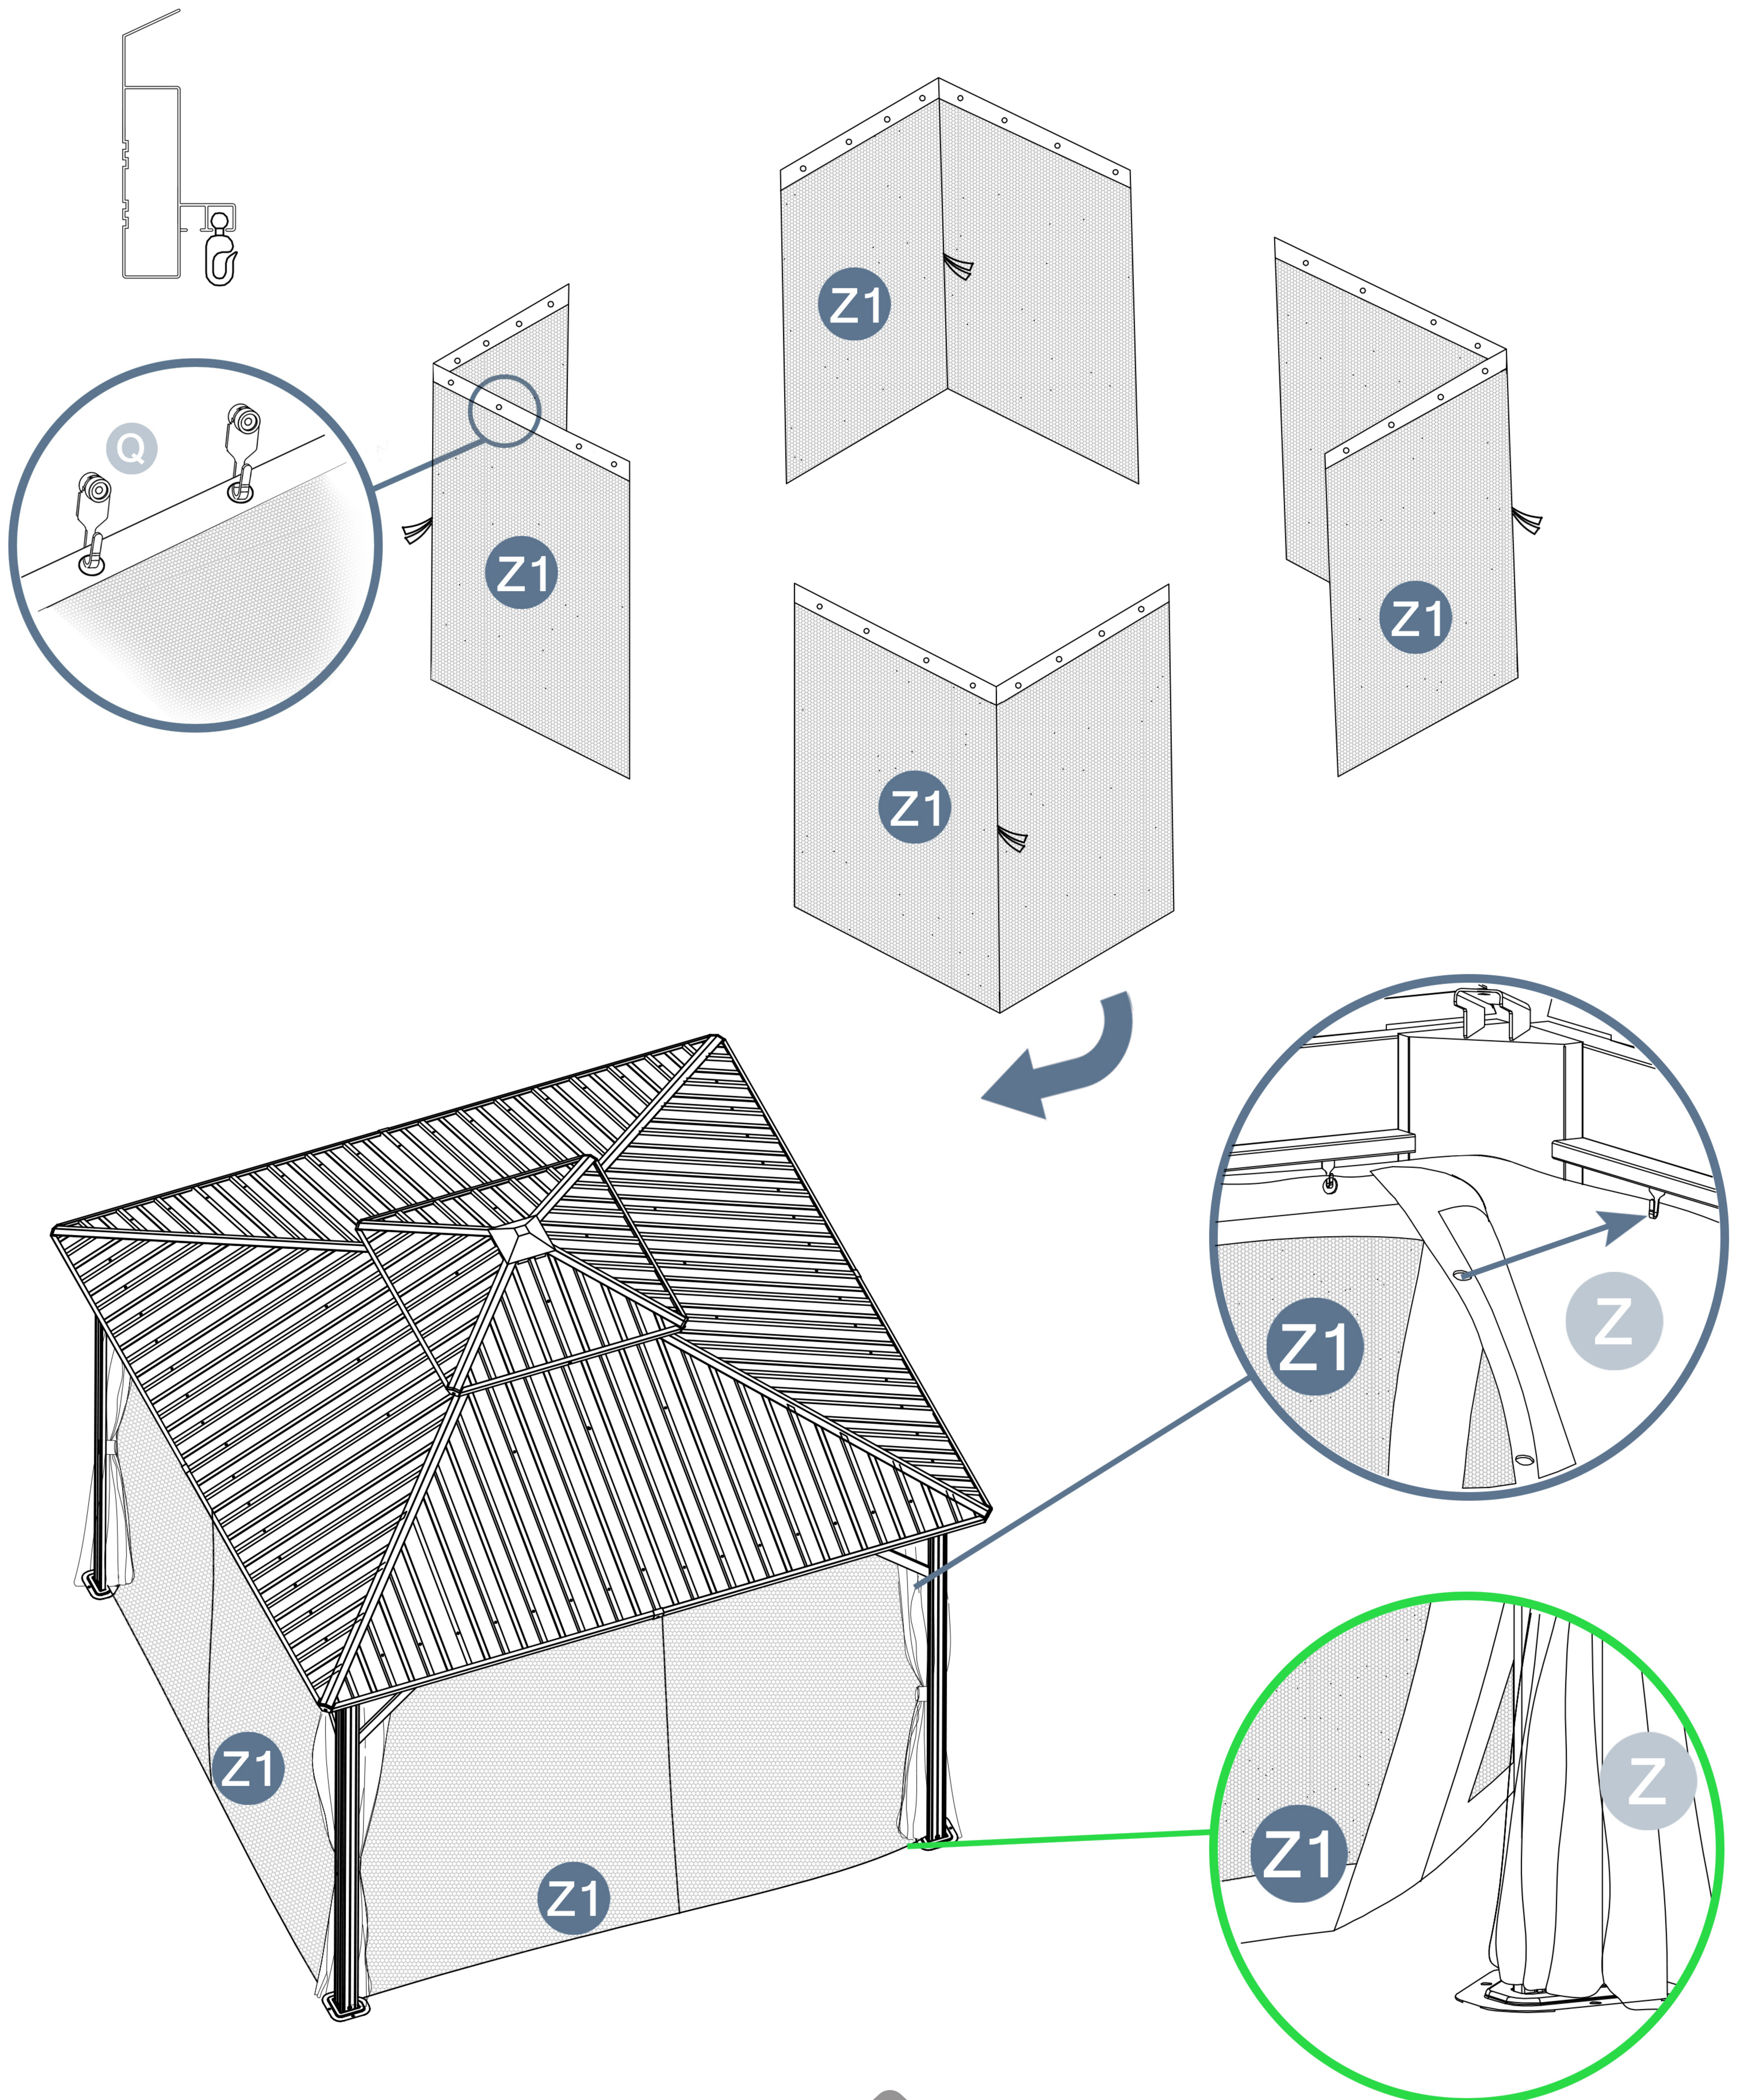


STEP 24

Parts required

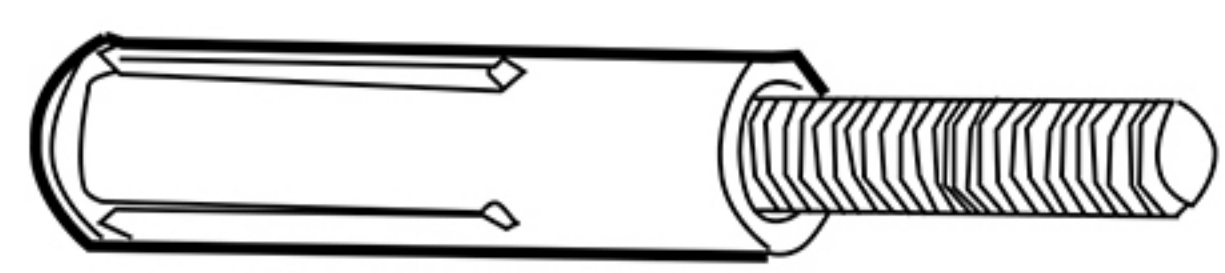

2


8pcs

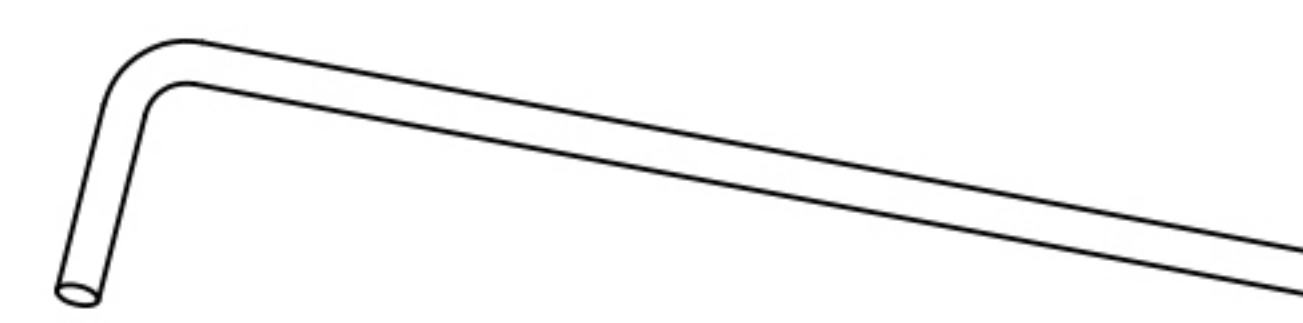

1

8pcs

To improve stability of gazebo, expansion screws and ground nails are very necessary. Expansion screws use for cement surfaces, ground nails use for grassy surfaces. Expansion screws and ground nails are included in the package.

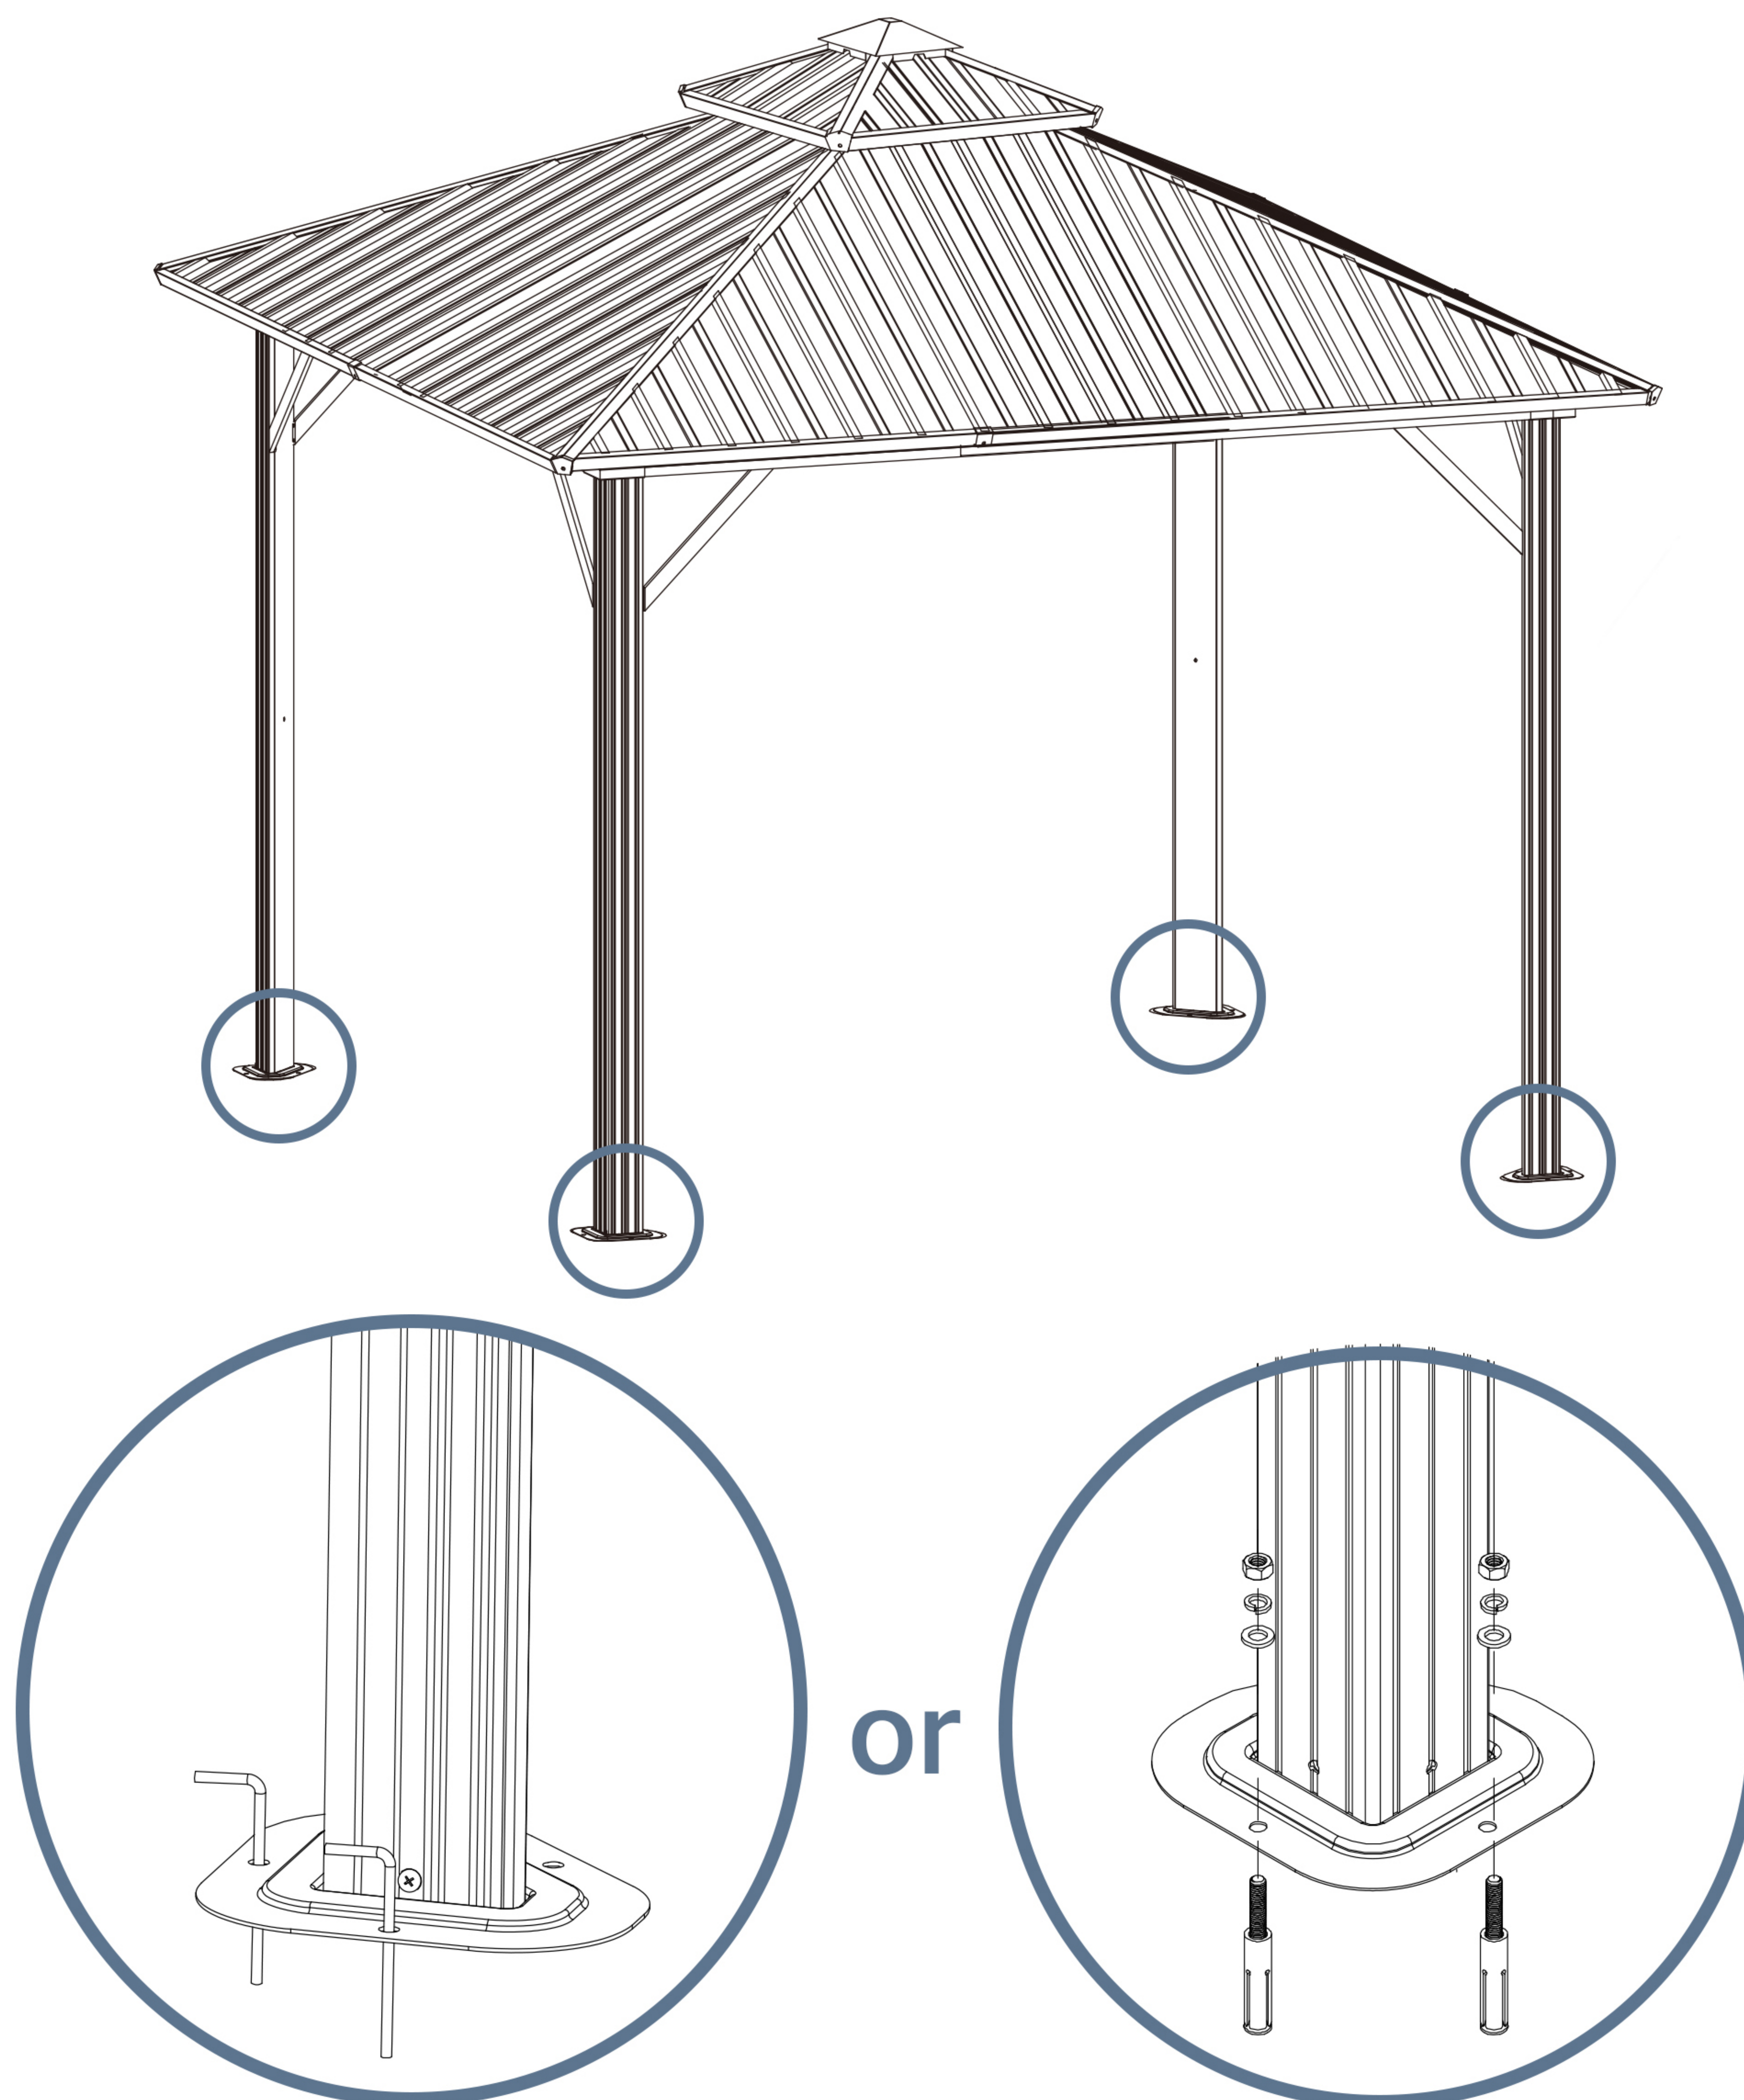

!!! For safety's stake, please check and make sure that all screws are tightened after all installation is complete.

Installation Completed


Hope you enjoy this product.

If you have any concerns about gazebo Installation, please feel free to contact us. We will reply within 24 hours.



E-mail: cs.helper01@gmail.com

10X10FT

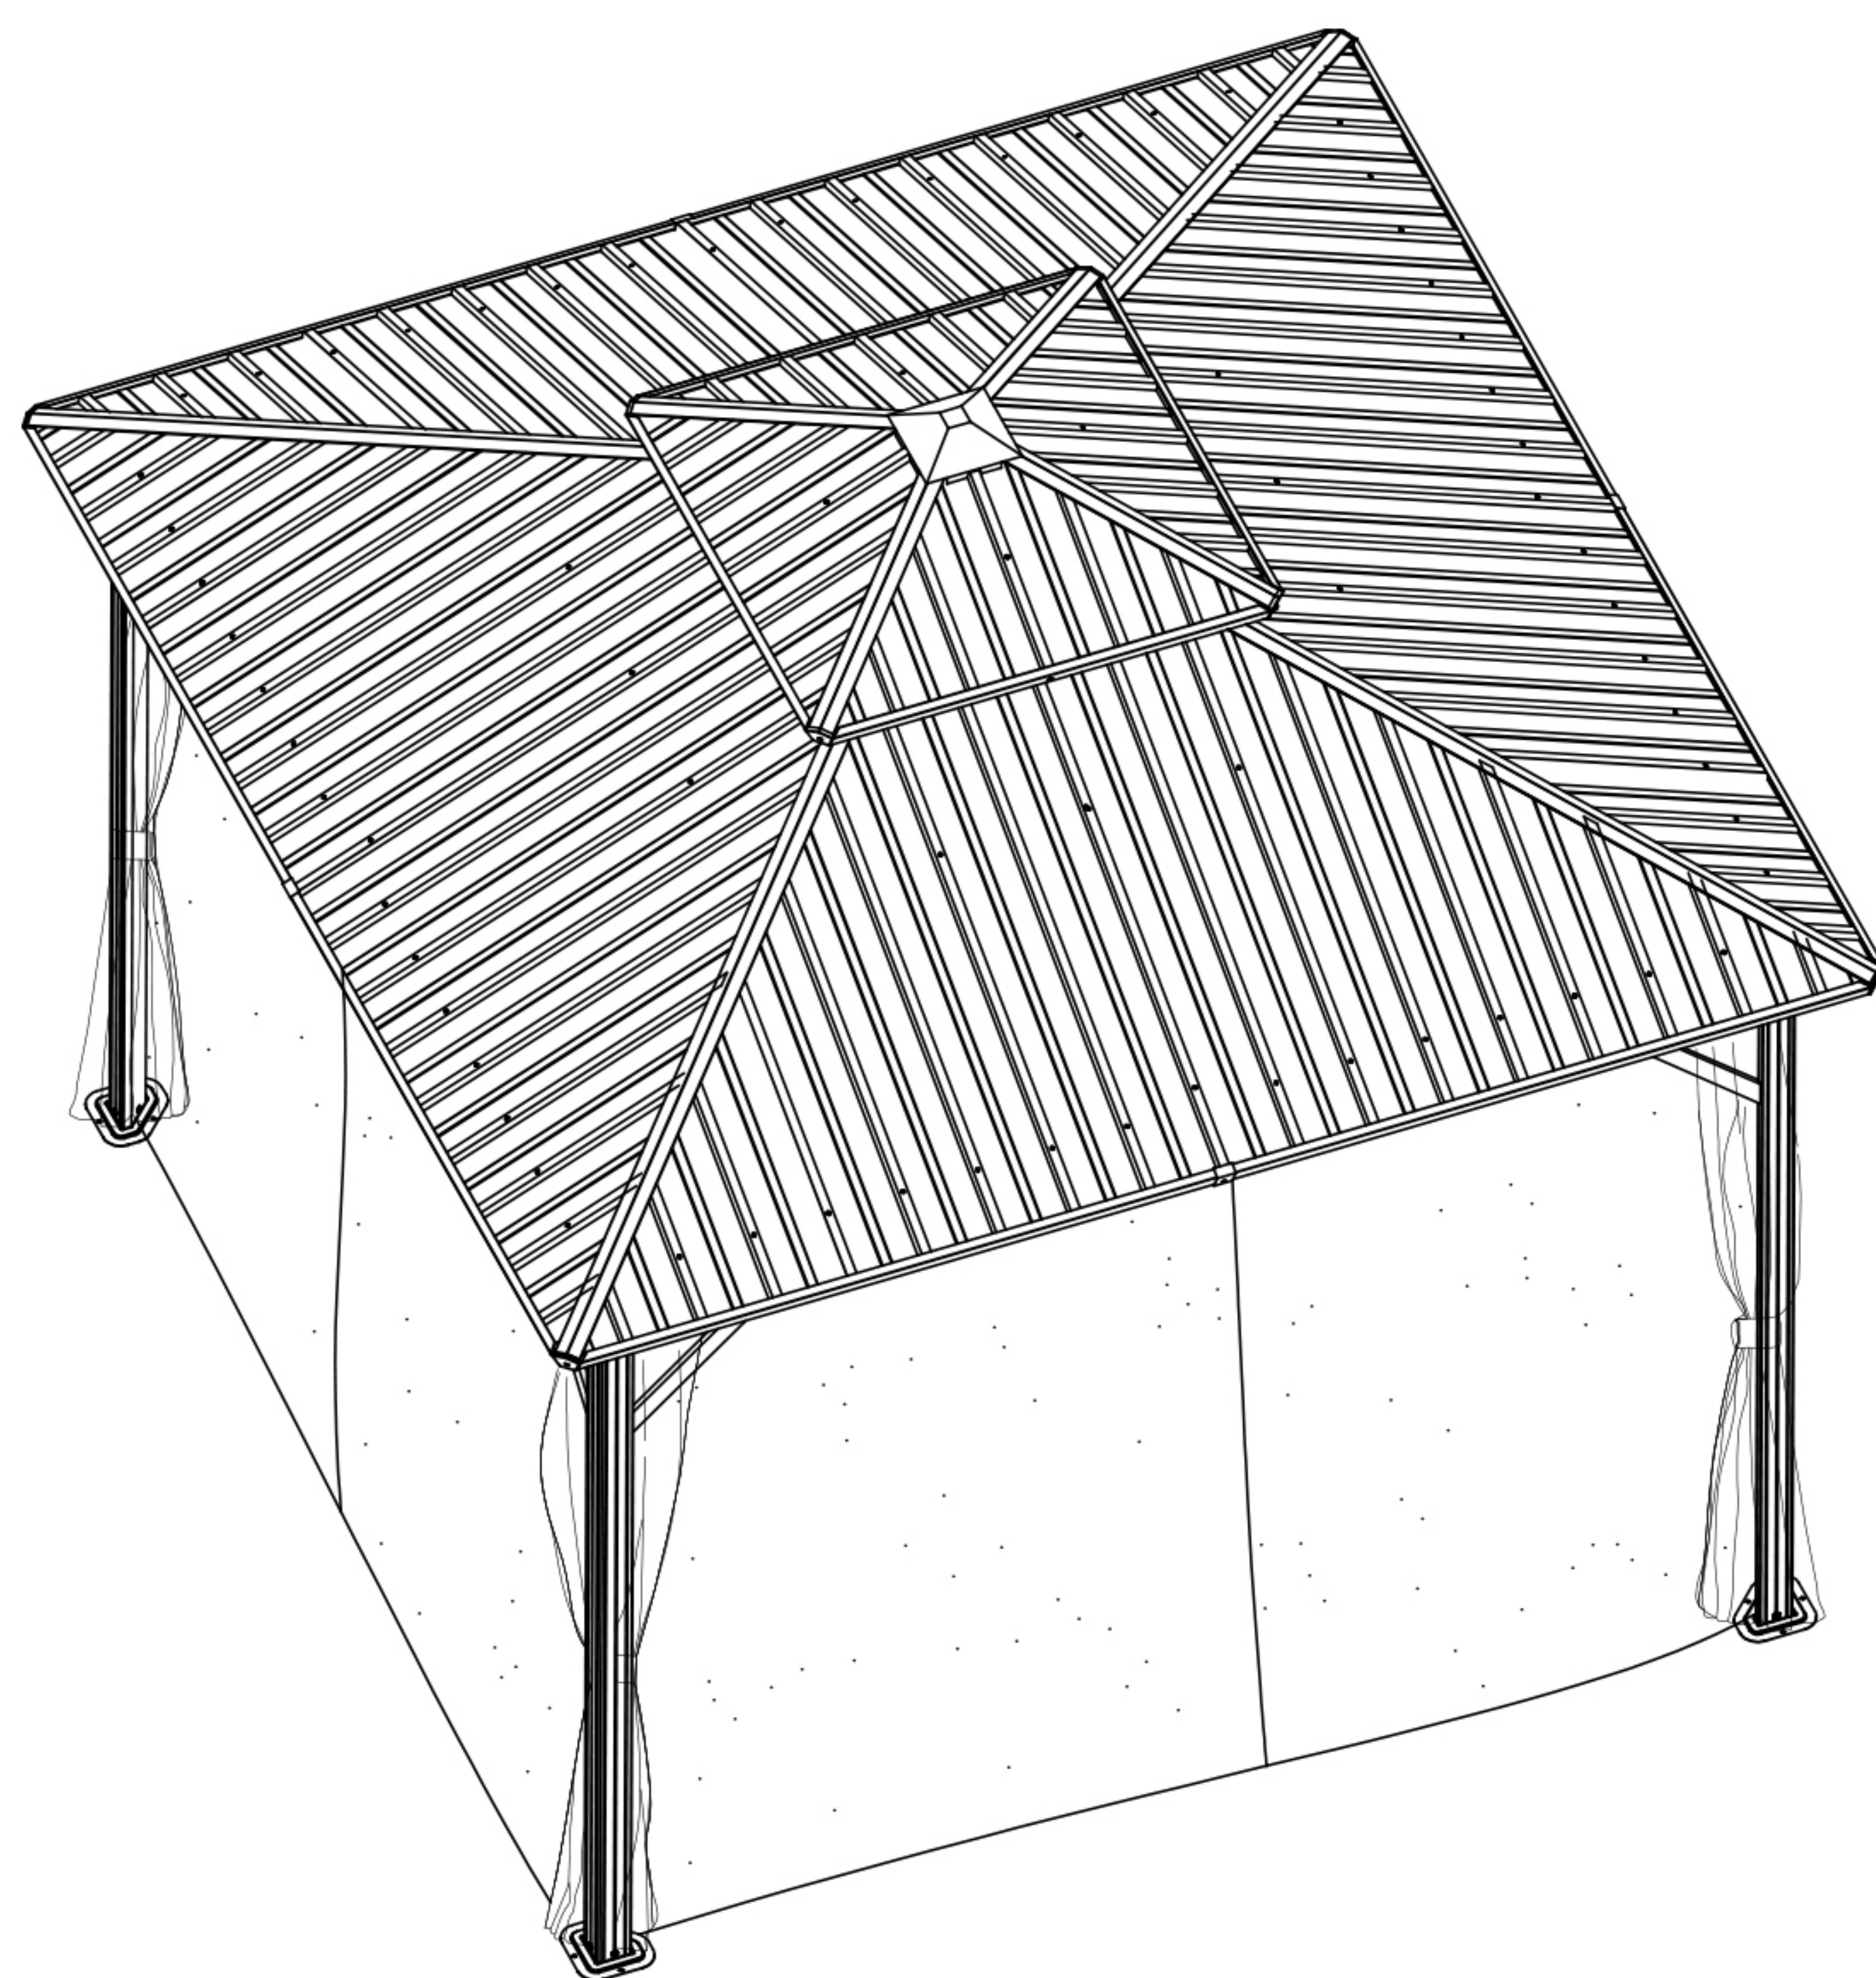

SKU:A-TPSB23-G029-1
A-TPSB23-G029-2
A-TPSB23-G029-3