



LED BED

ASSEMBLY INSTRUCTIONS

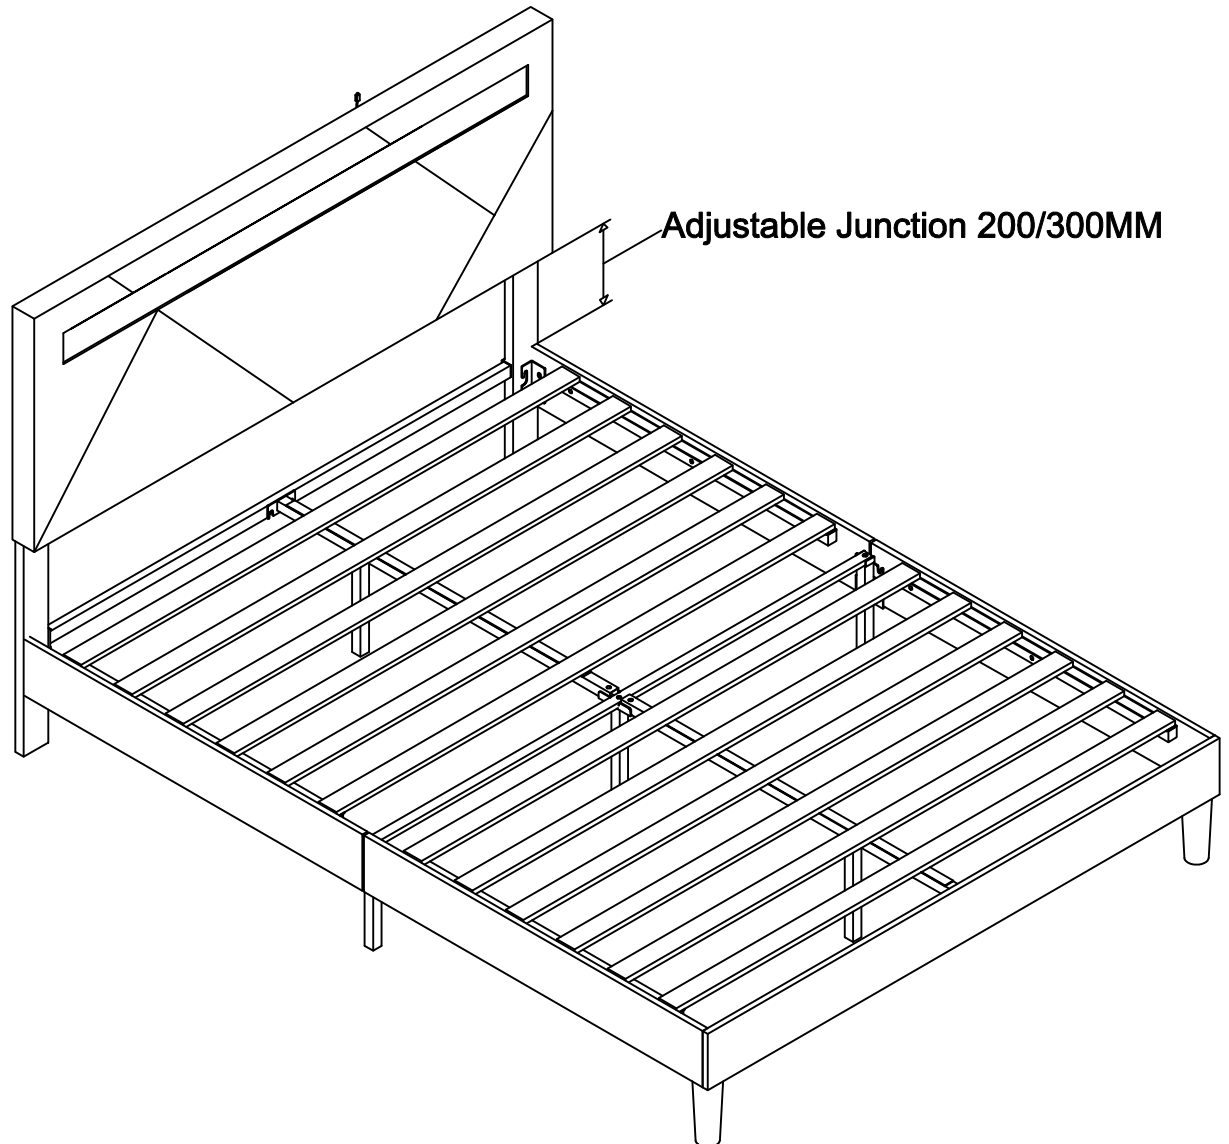






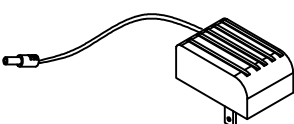
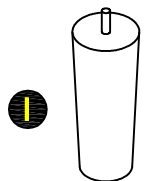
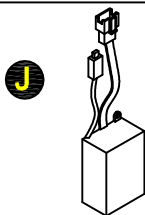

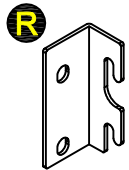
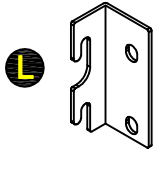


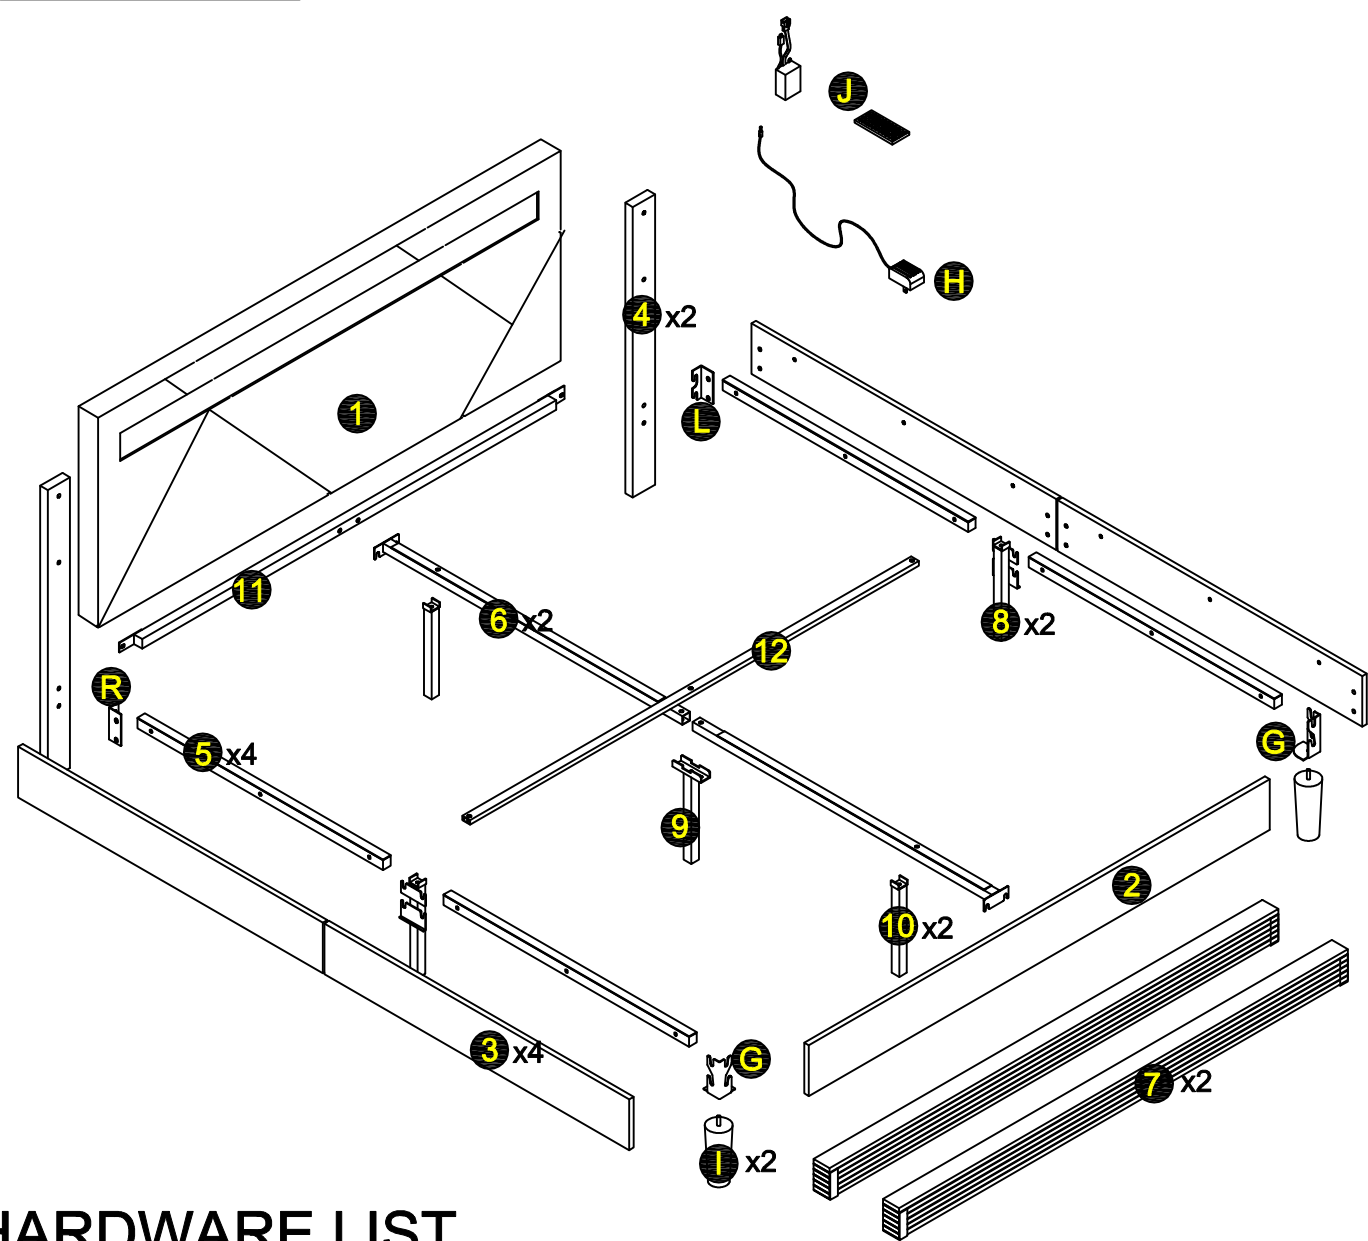Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.


PART LIST




HARDWARE LIST

 18mm M8 Bolt x 22		 25mm M8 Bolt x 10		 40mm M8 Bolt x 17		 45mm M8 Bolt x 4	
 Flat washer x 4		 x 1		 x 2		 x 1	
 x 2		 x 1		 x 1			
 x 1		 x 1					

1

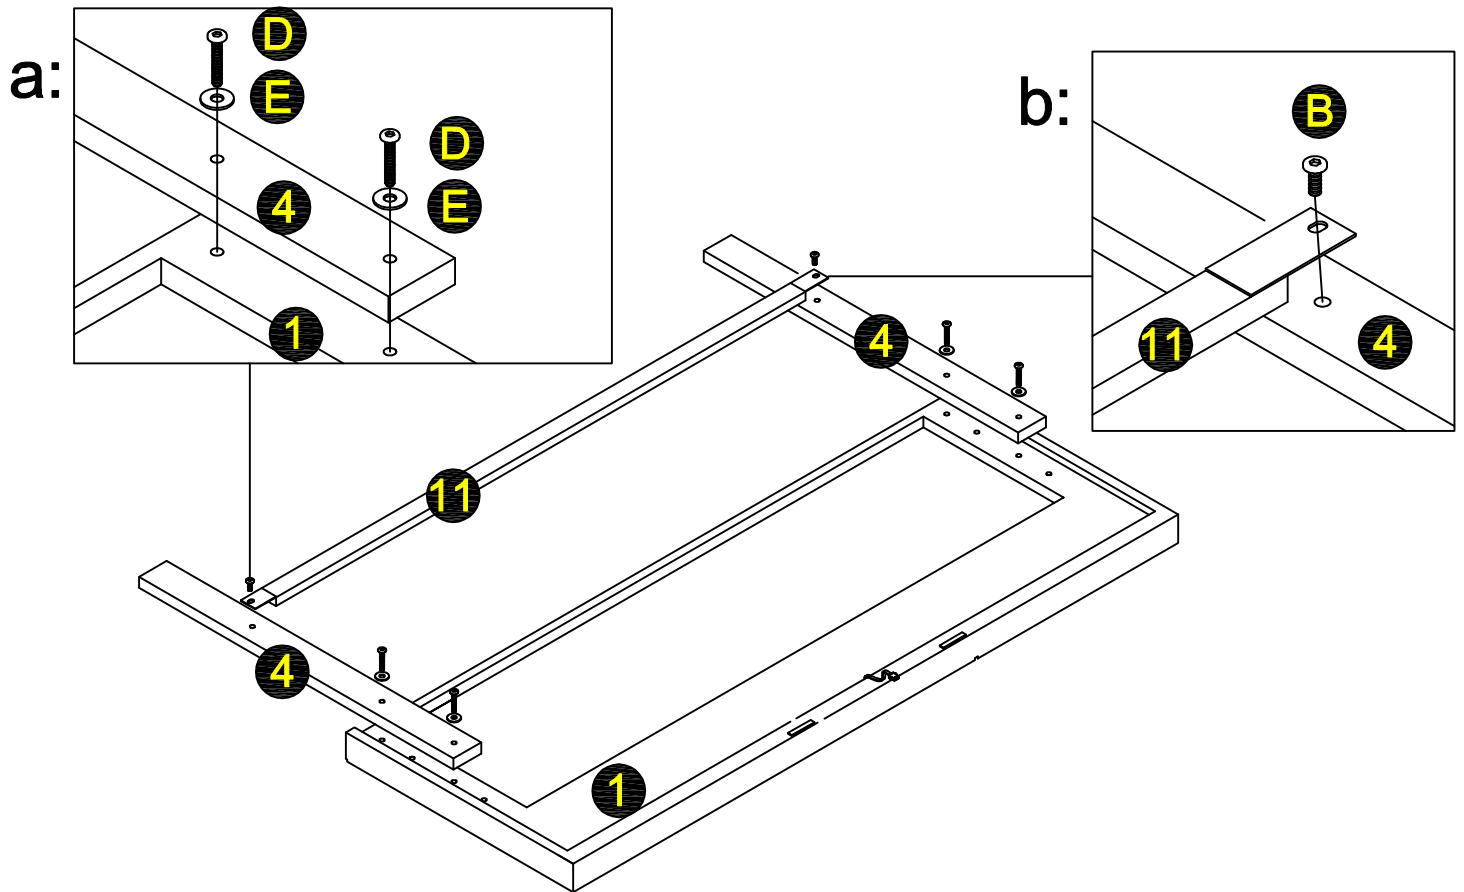


2

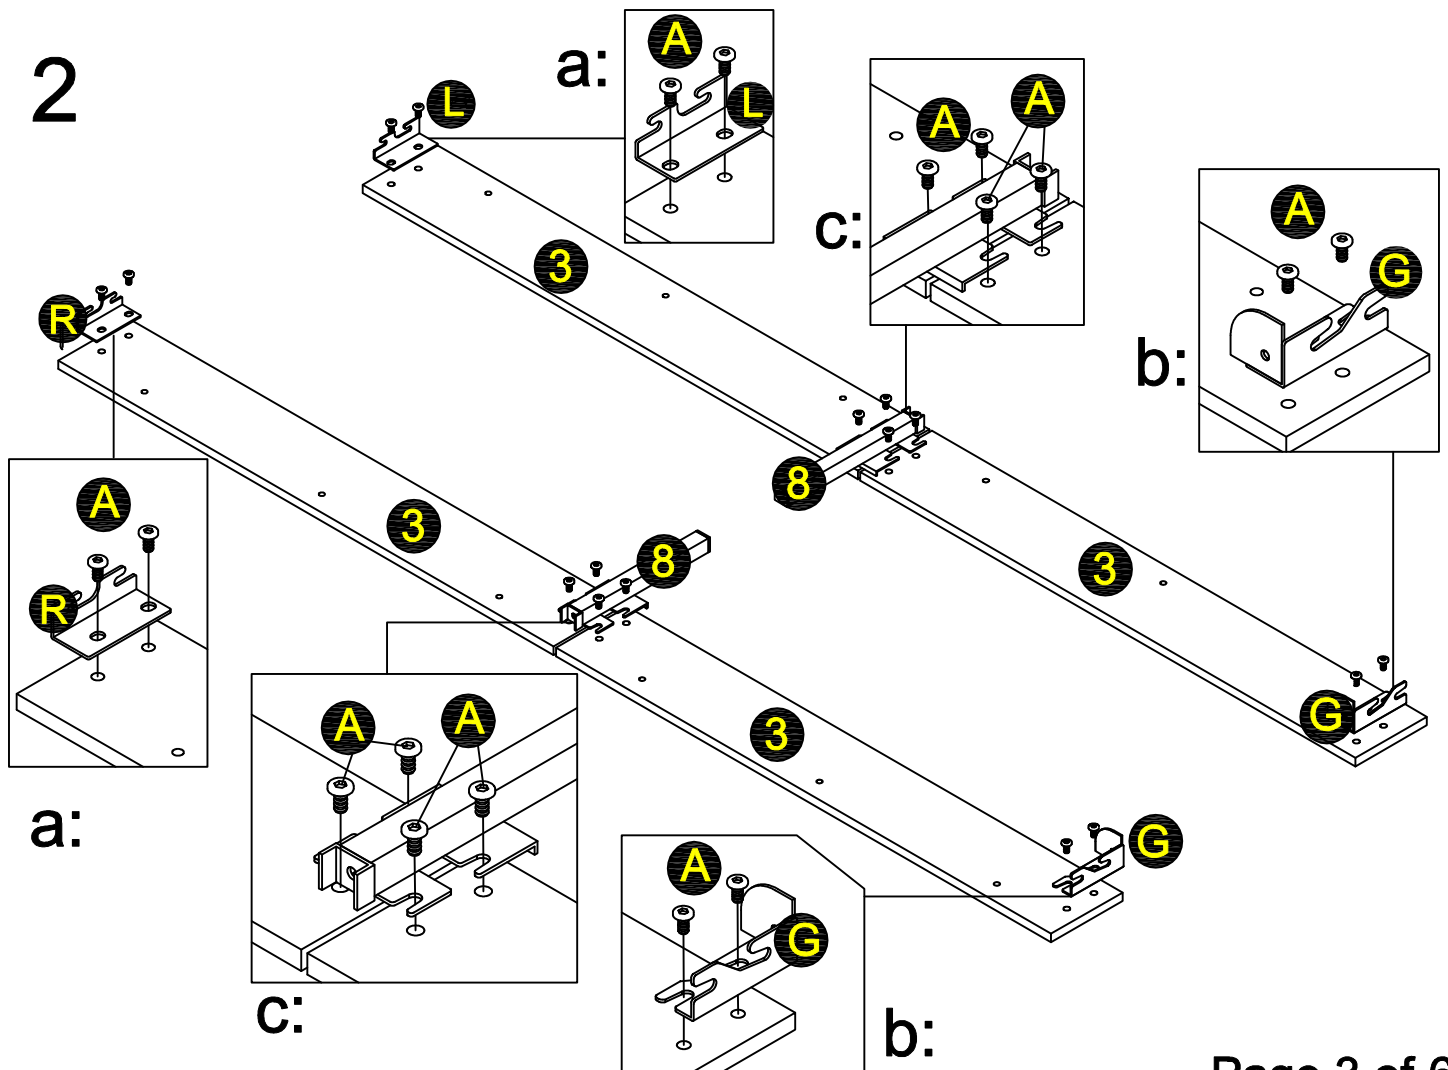


3


Black face up

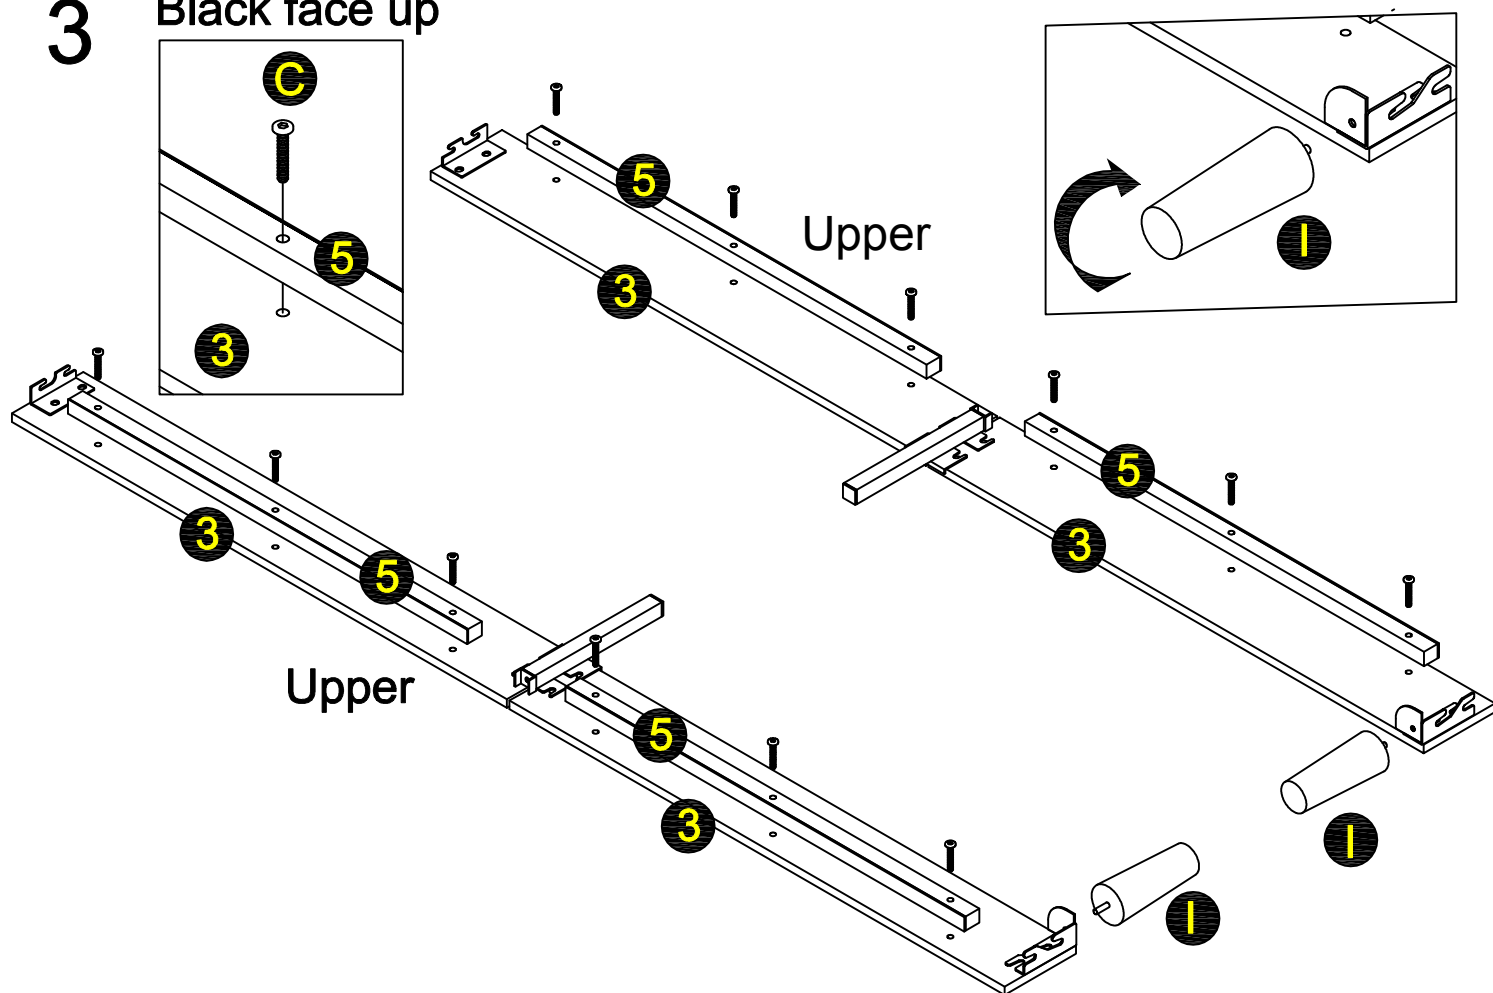


4

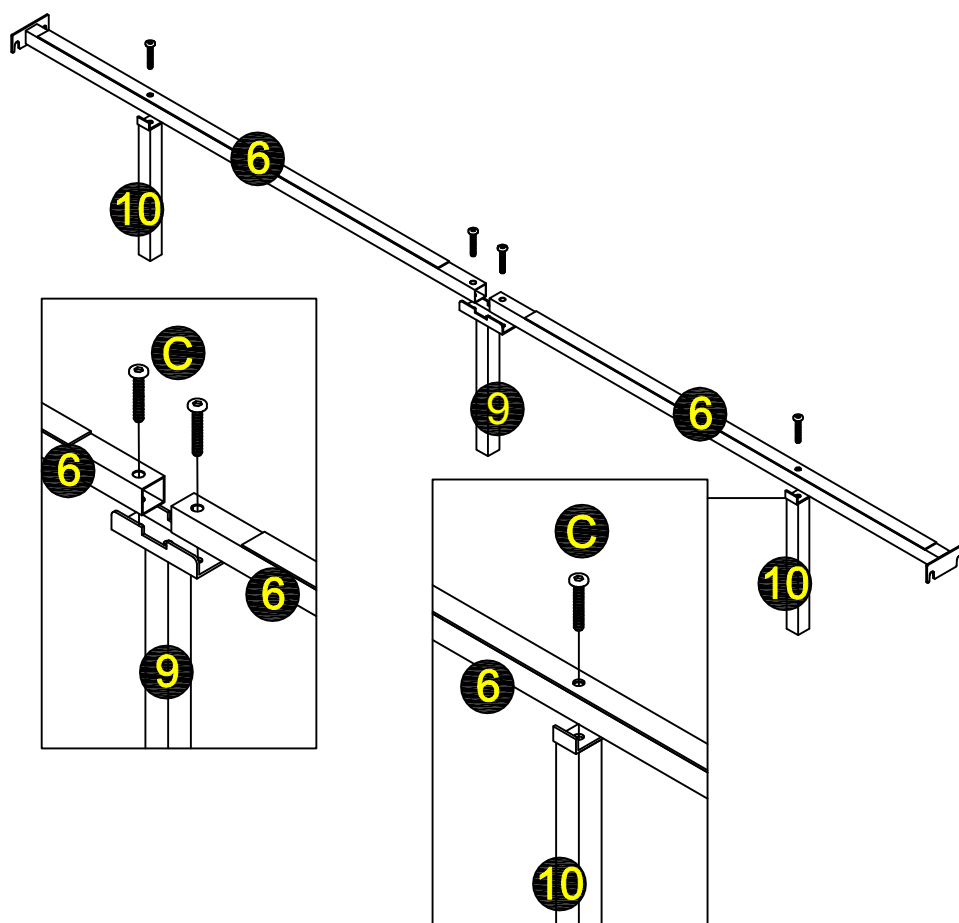

5

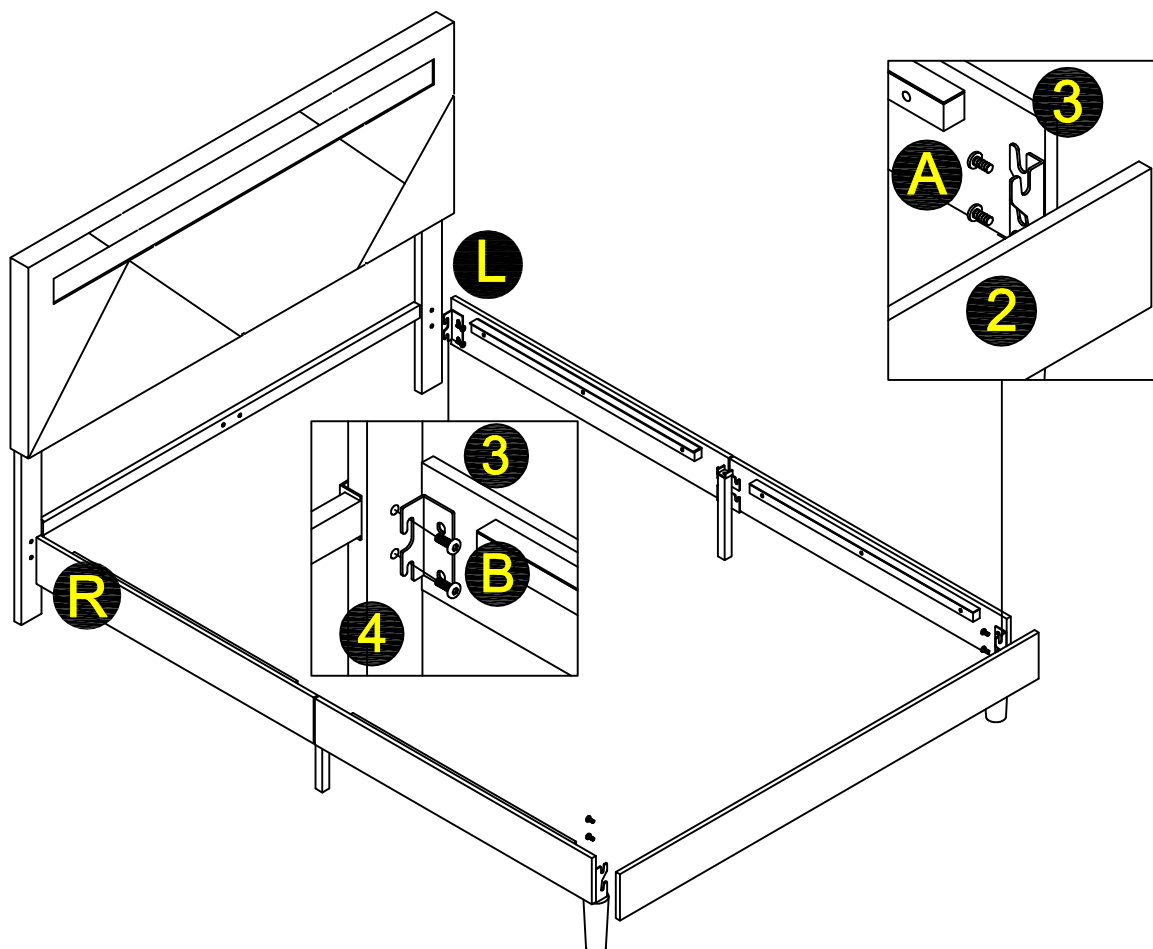


a1:

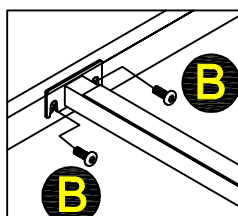


6



c:

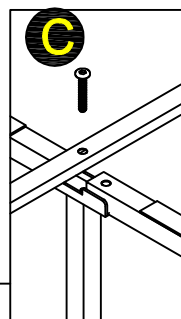


b:

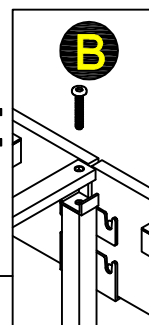



a2:

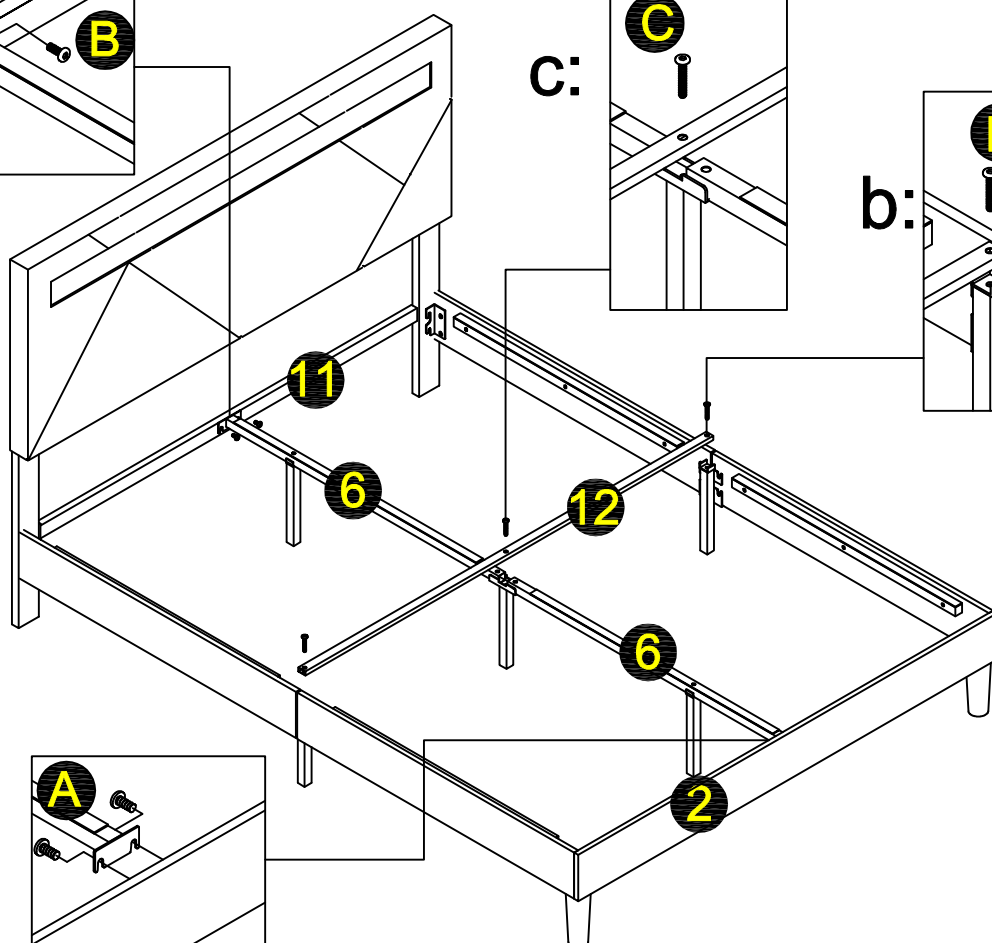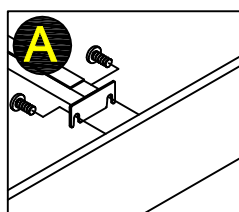

7

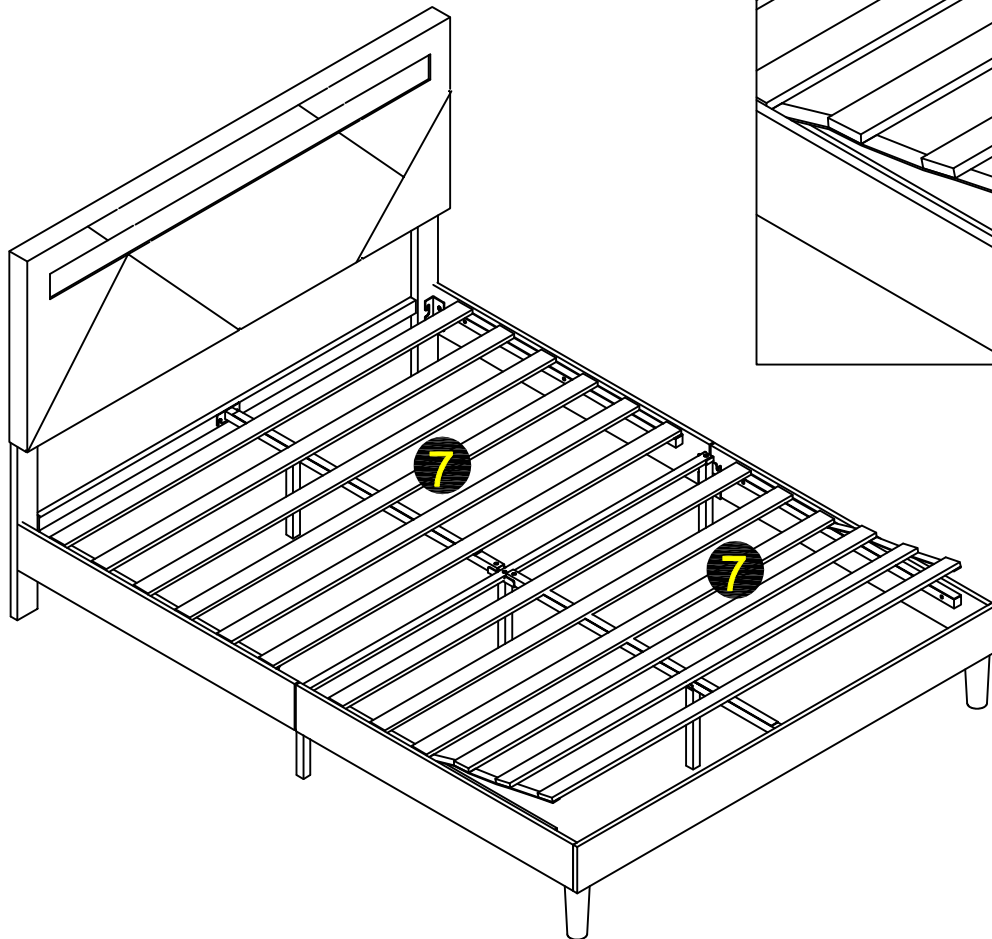

8

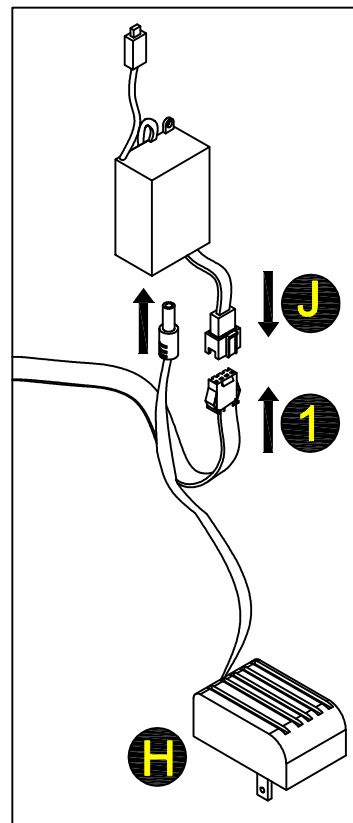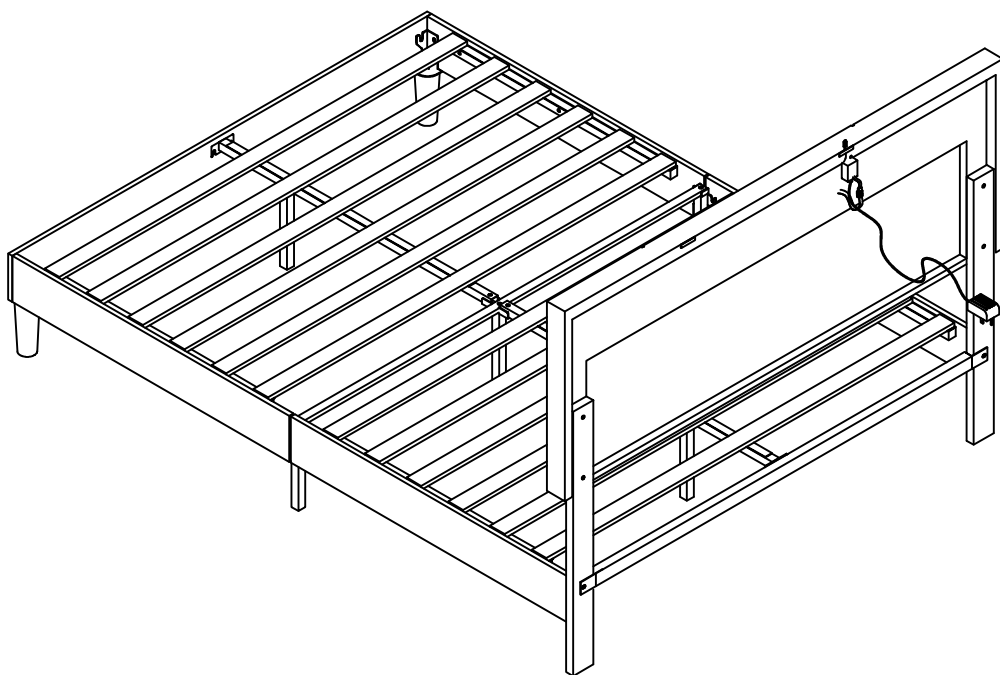

PLEASE SECURE/ATTACH INFRARED RECEIVER BY LEFT OR RIGHT ELASTIC STRAPS ACCORDING TO NEAREST POWER SOCKET/POINT FROM THE BED.