

Thank you for your purchase!
Your order ships in 2 separate boxes (Box A and Box B).
If you receive only one box, please don't worry.
The other is on the way.

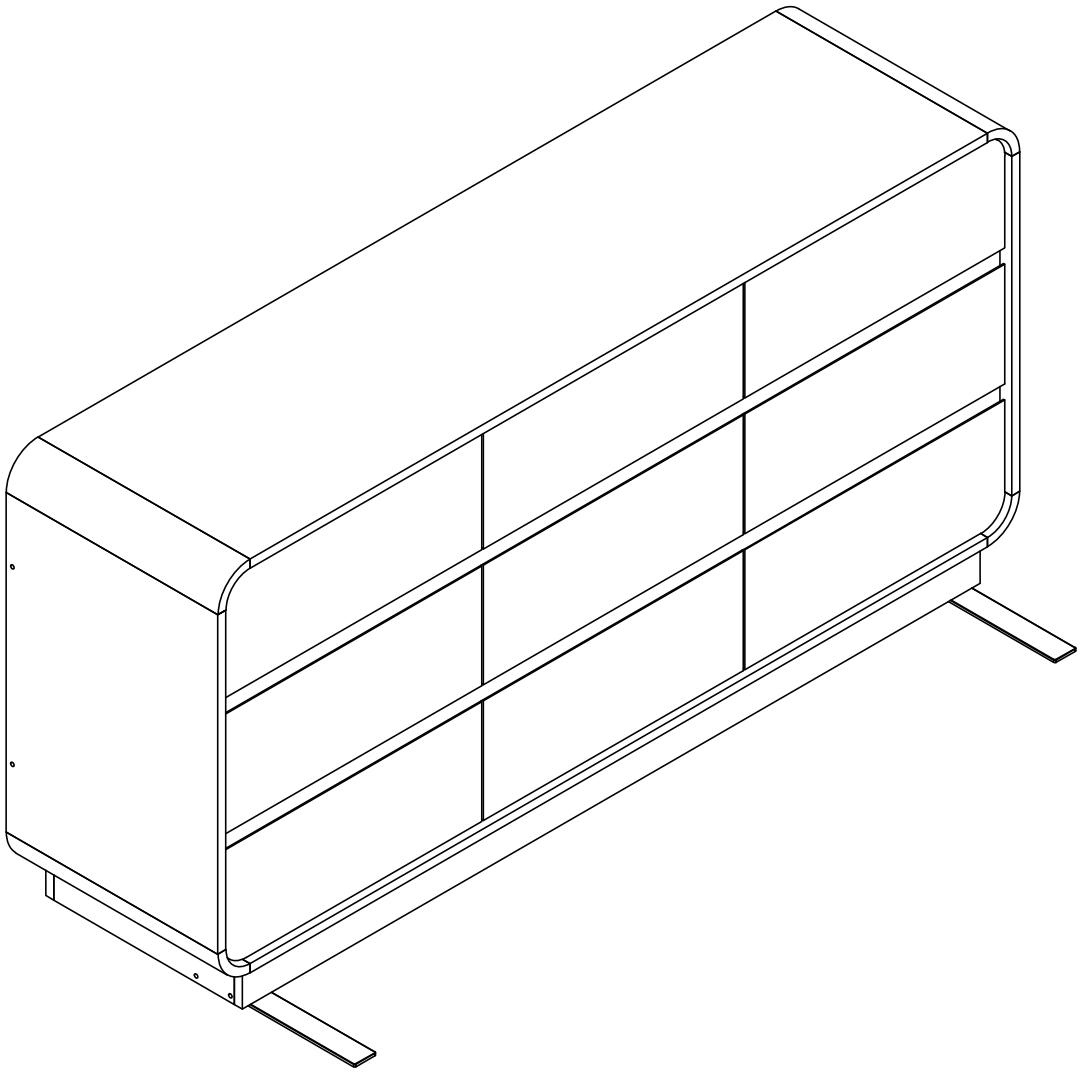






AJ-DJ505407

Version: 2.0

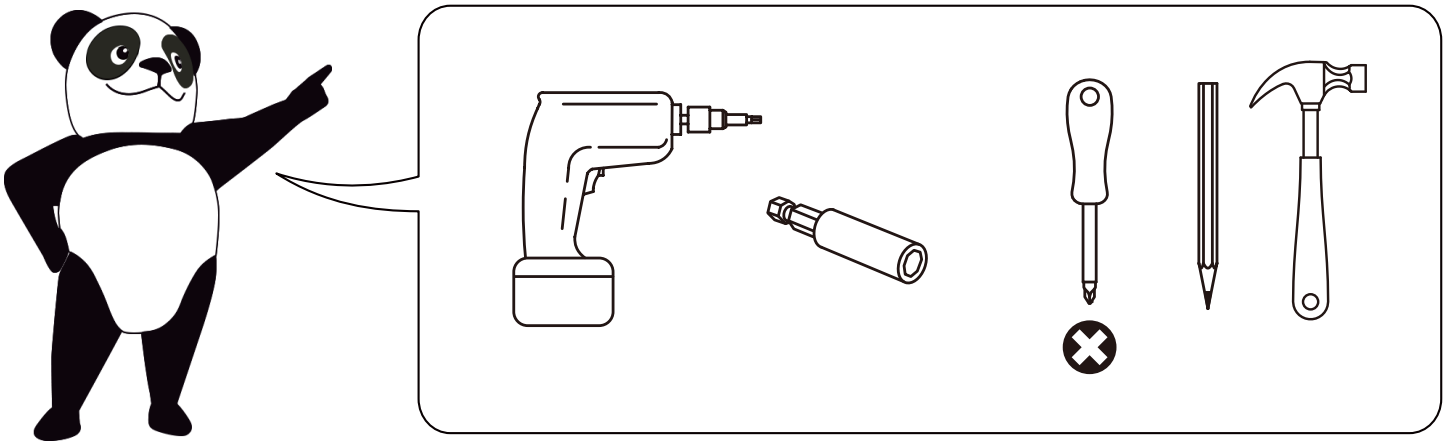

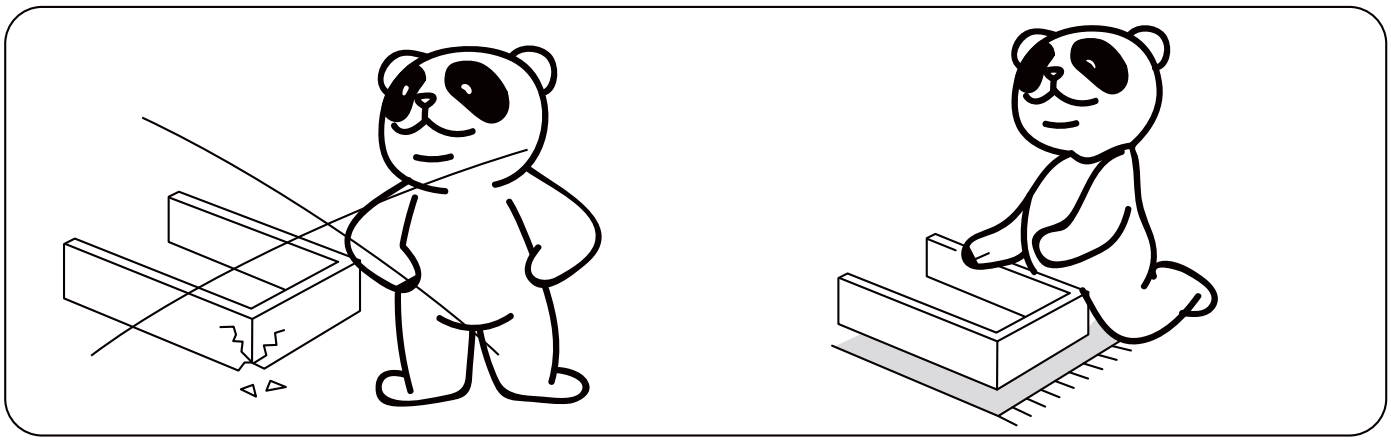

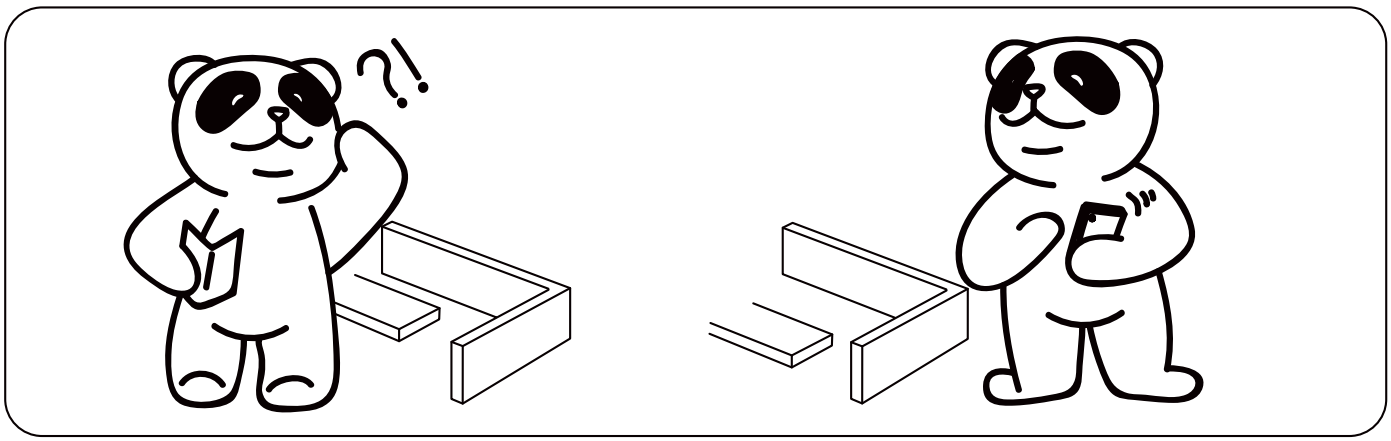

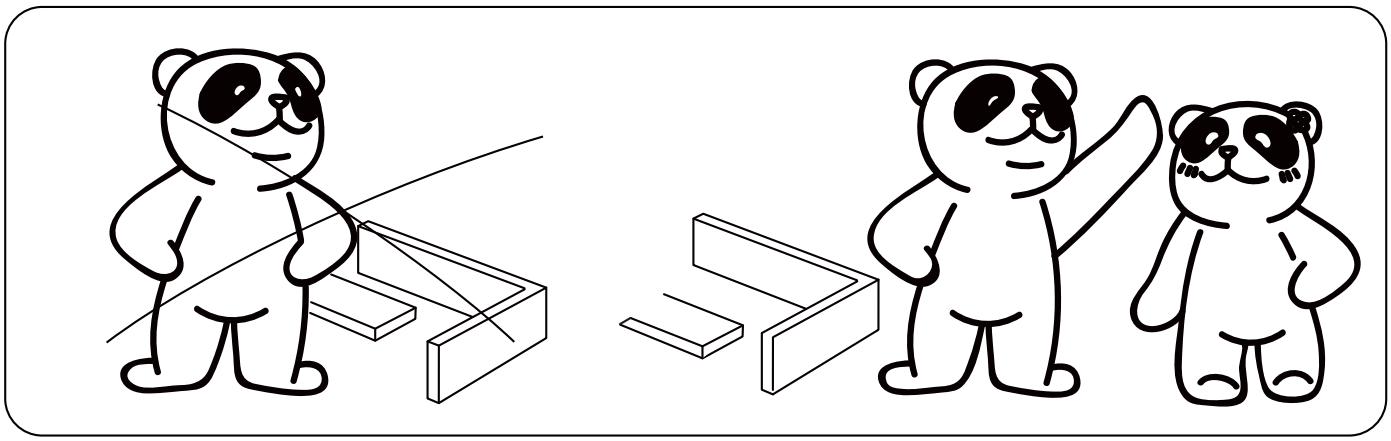


Installation parts

Box A




A
x73(+2)
Ø6x35mm



B
x97(+3)
Ø15x10mm



C
x72(+2)
Ø6x30mm




D
x63(+2)
Ø4x35mm




E
x108(+4)
Ø3.5x12mm




G
x2
Ø6x30mm




H
x24(+2)
Ø6x40mm

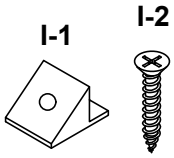


I
x16(+1)
Ø3x16mm

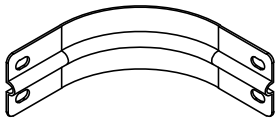

J
x4

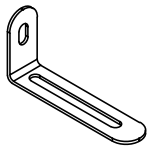


K
x2



L
x20(+2)
Ø4x12mm



M
x4(+1)
Ø5x40mm

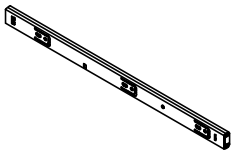


N
x6
L350mm




O
x4




P
x2

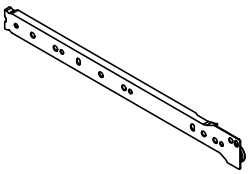


CL
x6
330mm

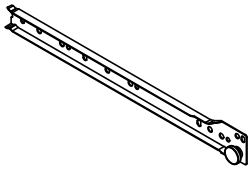

CR
x6
330mm

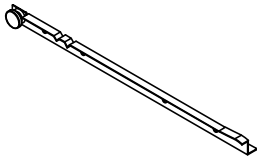


DL
x6
330mm

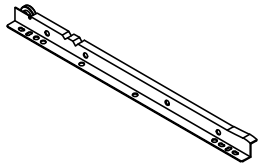


DL
x6
330mm

Mounting frame


Box A

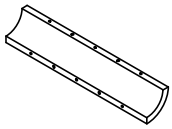


2
x4

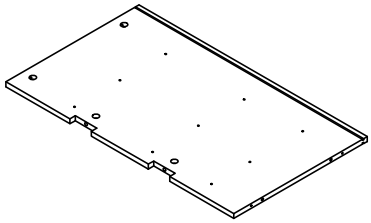


5
x2

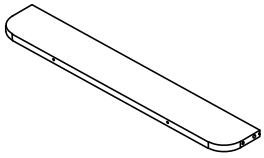


6
x2

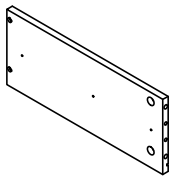


13
x3

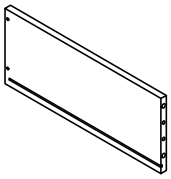

14
x3

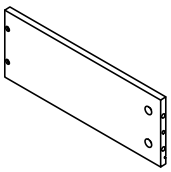


29
x6

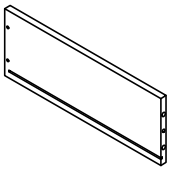


30
x6


Box B

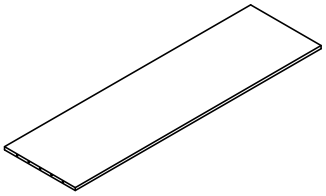


1
x1

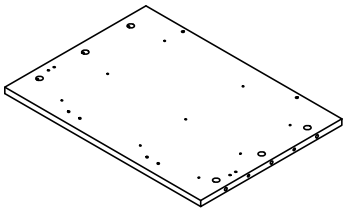


3
x1

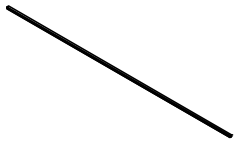


4
x1

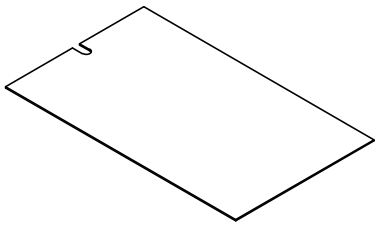


7
x2

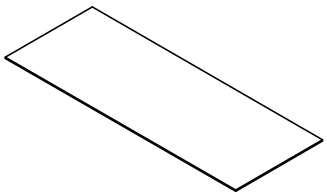


8
x2

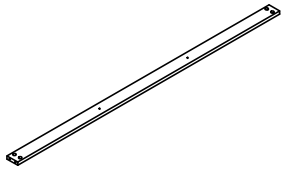

9
x2

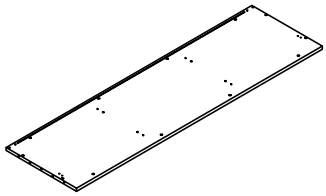


10
x1

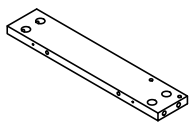


11
x1

Mounting frame


Box B

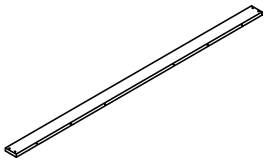


12
x1

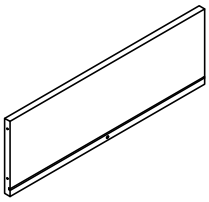


15
x3

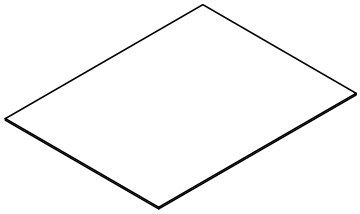


16
x3




17
x9

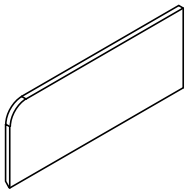


18
x1

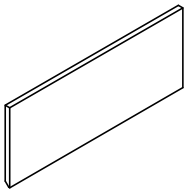


19
x1

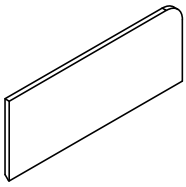


20
x1

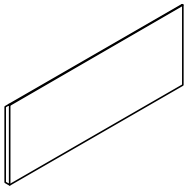


21
x1

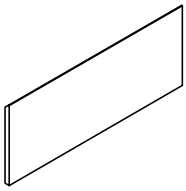


22
x1

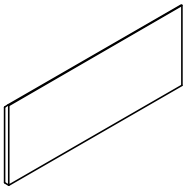


23
x1

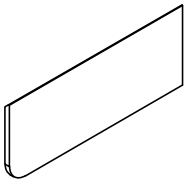


24
x1

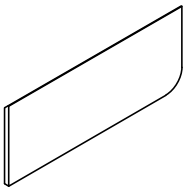


25
x1

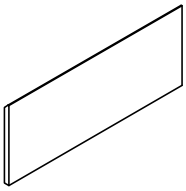


26
x1

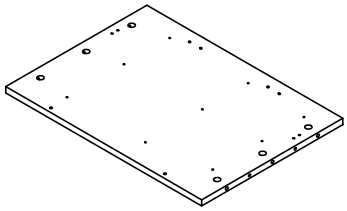

27
x1

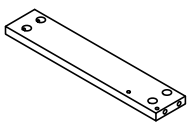


28
x1

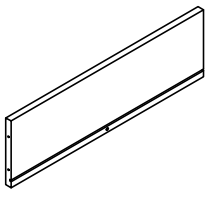


31
x6

Mounting frame

Box B

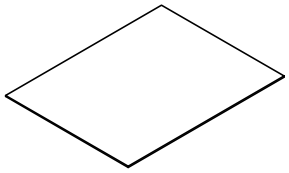


32
x6

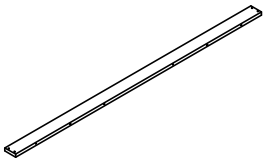



33
x1


Cam LockFasteningSystem


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

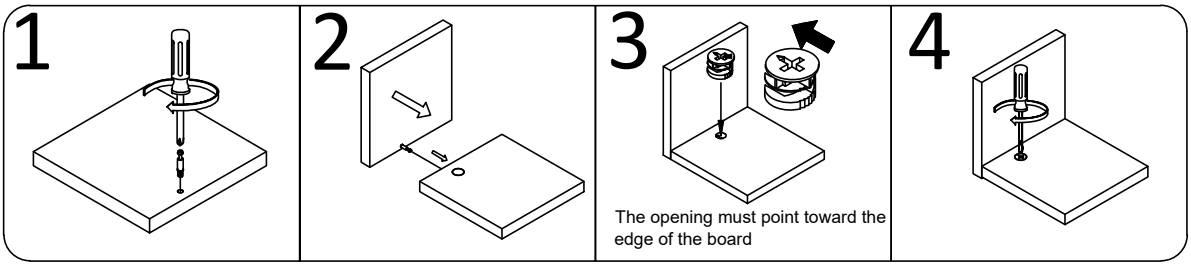

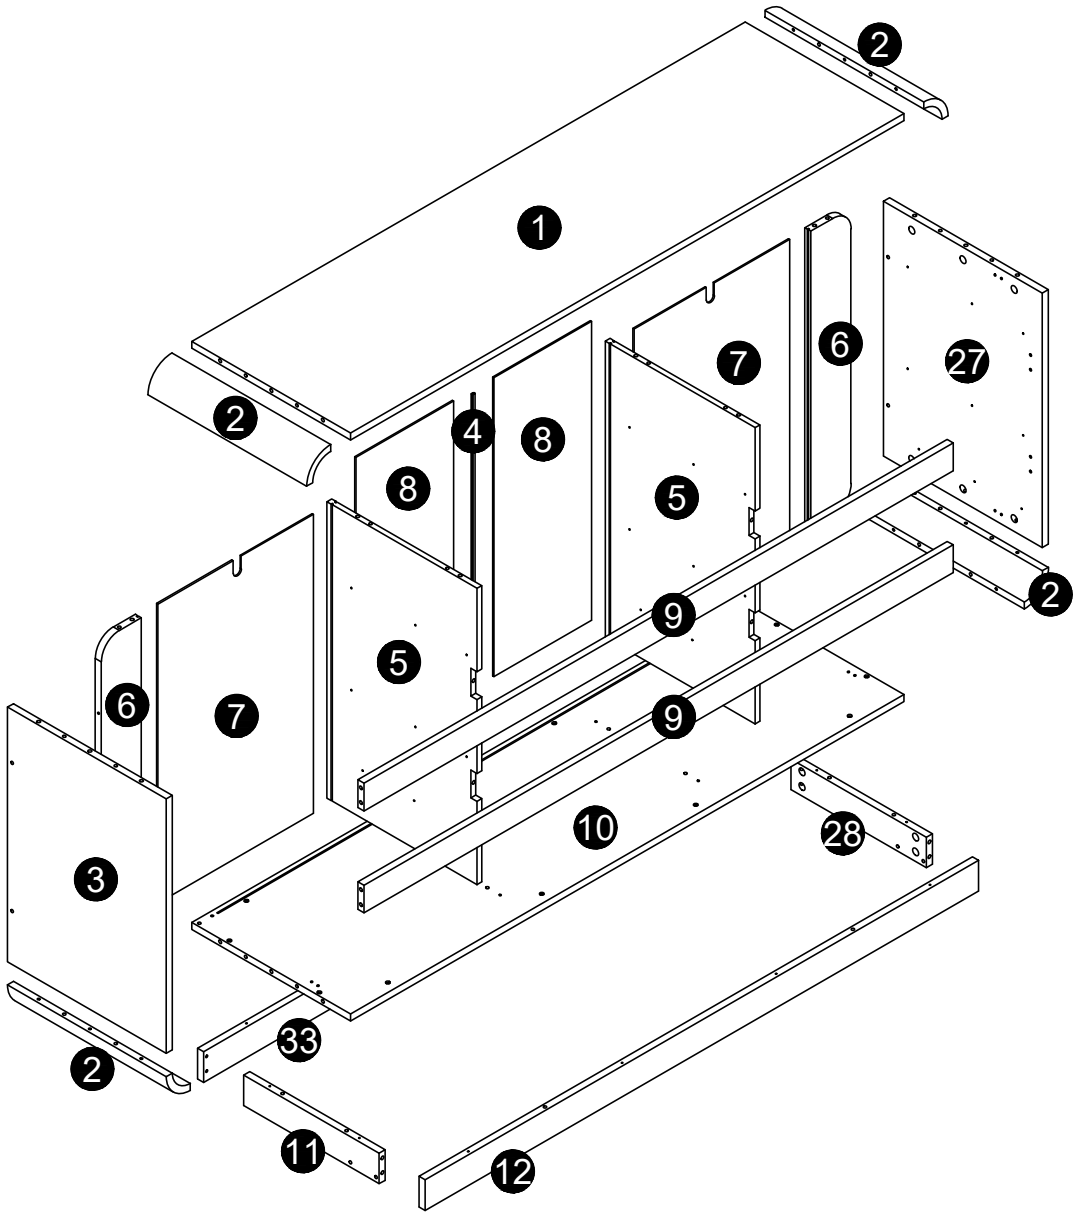
1
2
2
4
8
8
7
6
27
5
2
9
5
6
7
9
10
28
3
33
2
11
12

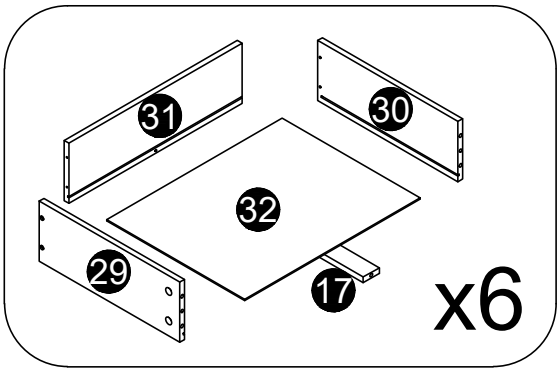

31
30
32
29
17
x6

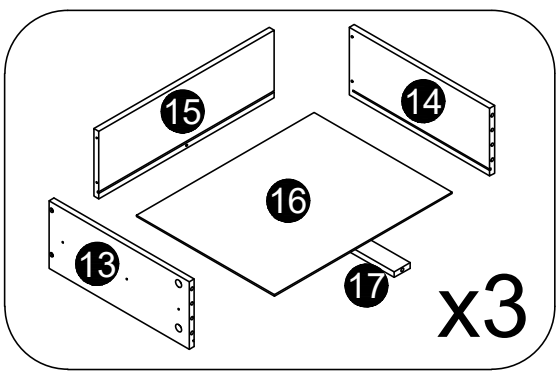
15
14
16
13
17
x3

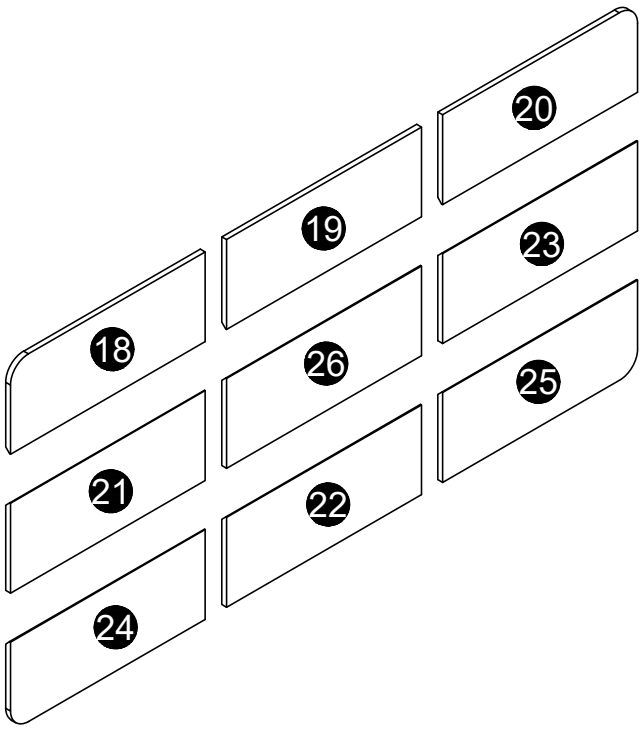
20
19
23
18
26
25
21
22
24

01

Move the black plastic up ward and pull out the parts.

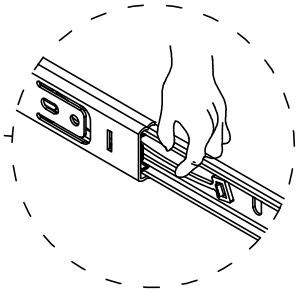

N	x6


02

E	x18


N-1	x2

CL	x2

CR	x2

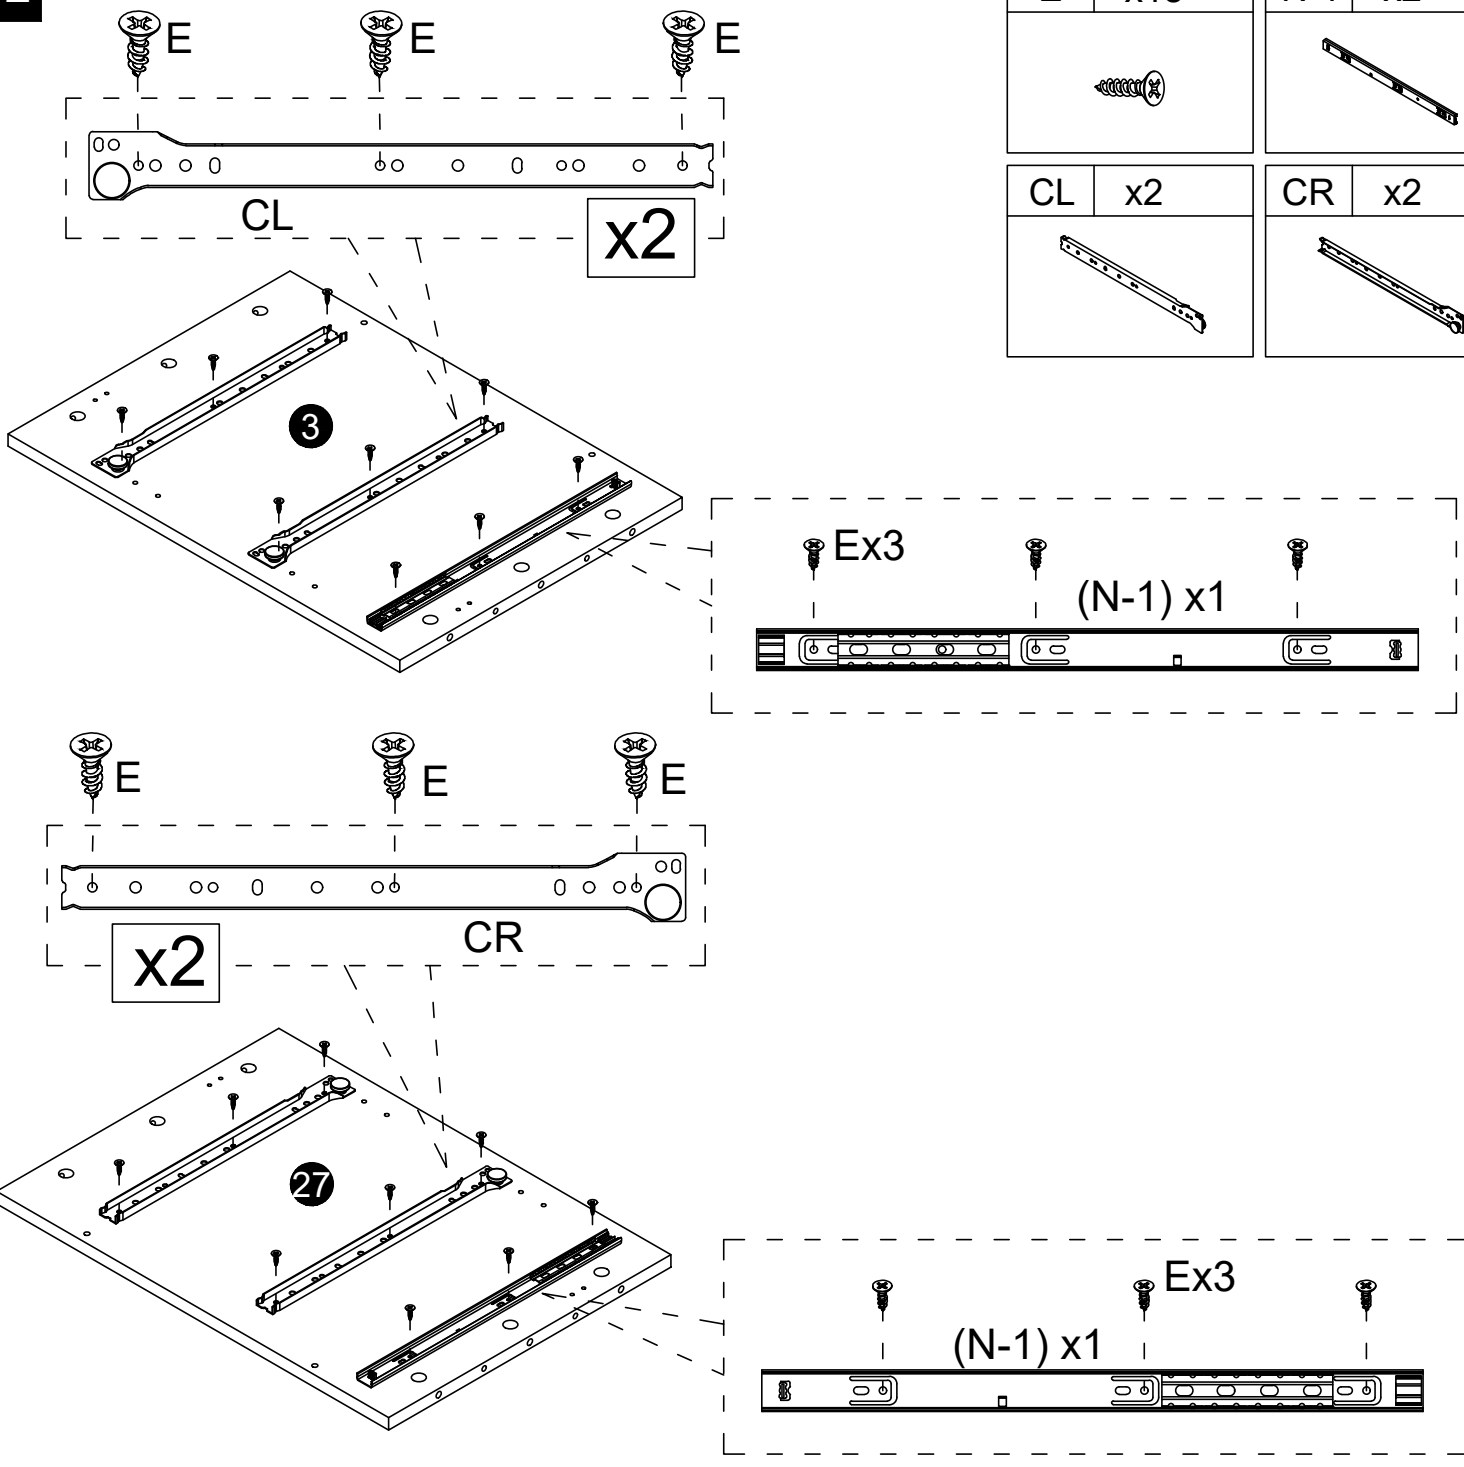

03

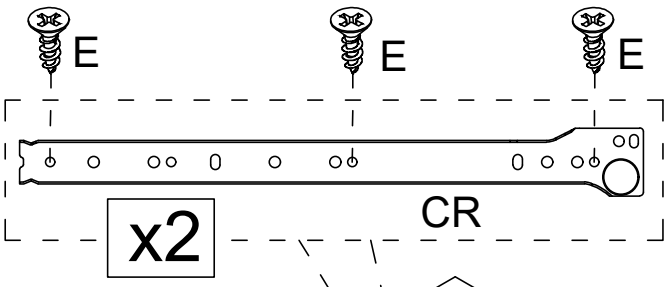


E	x36




N-1	x4



CL	x4




CR	x4





⚠


Pay attention to the installation position of the holes.

180°

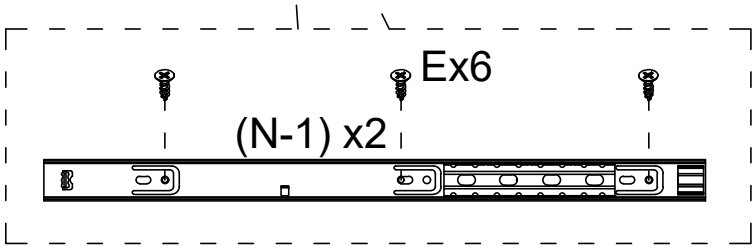


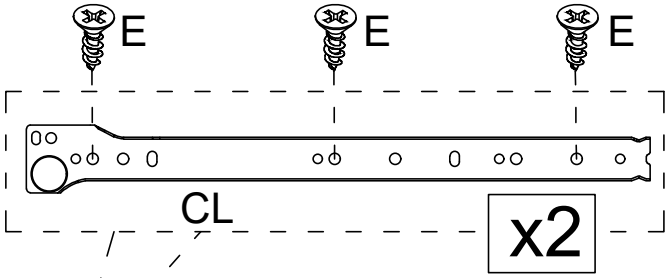

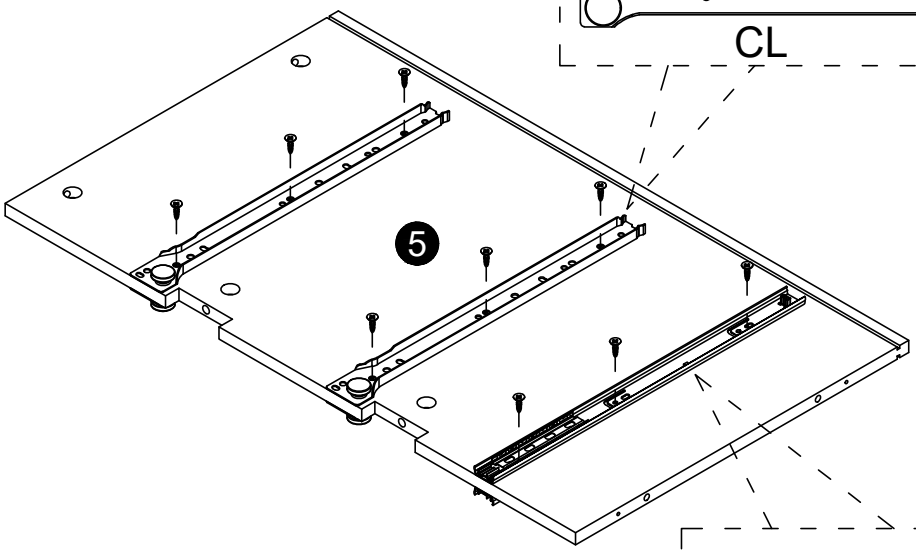


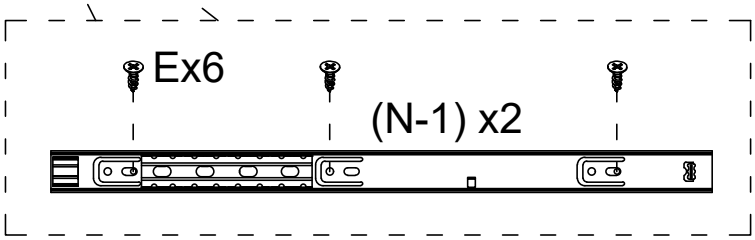


04

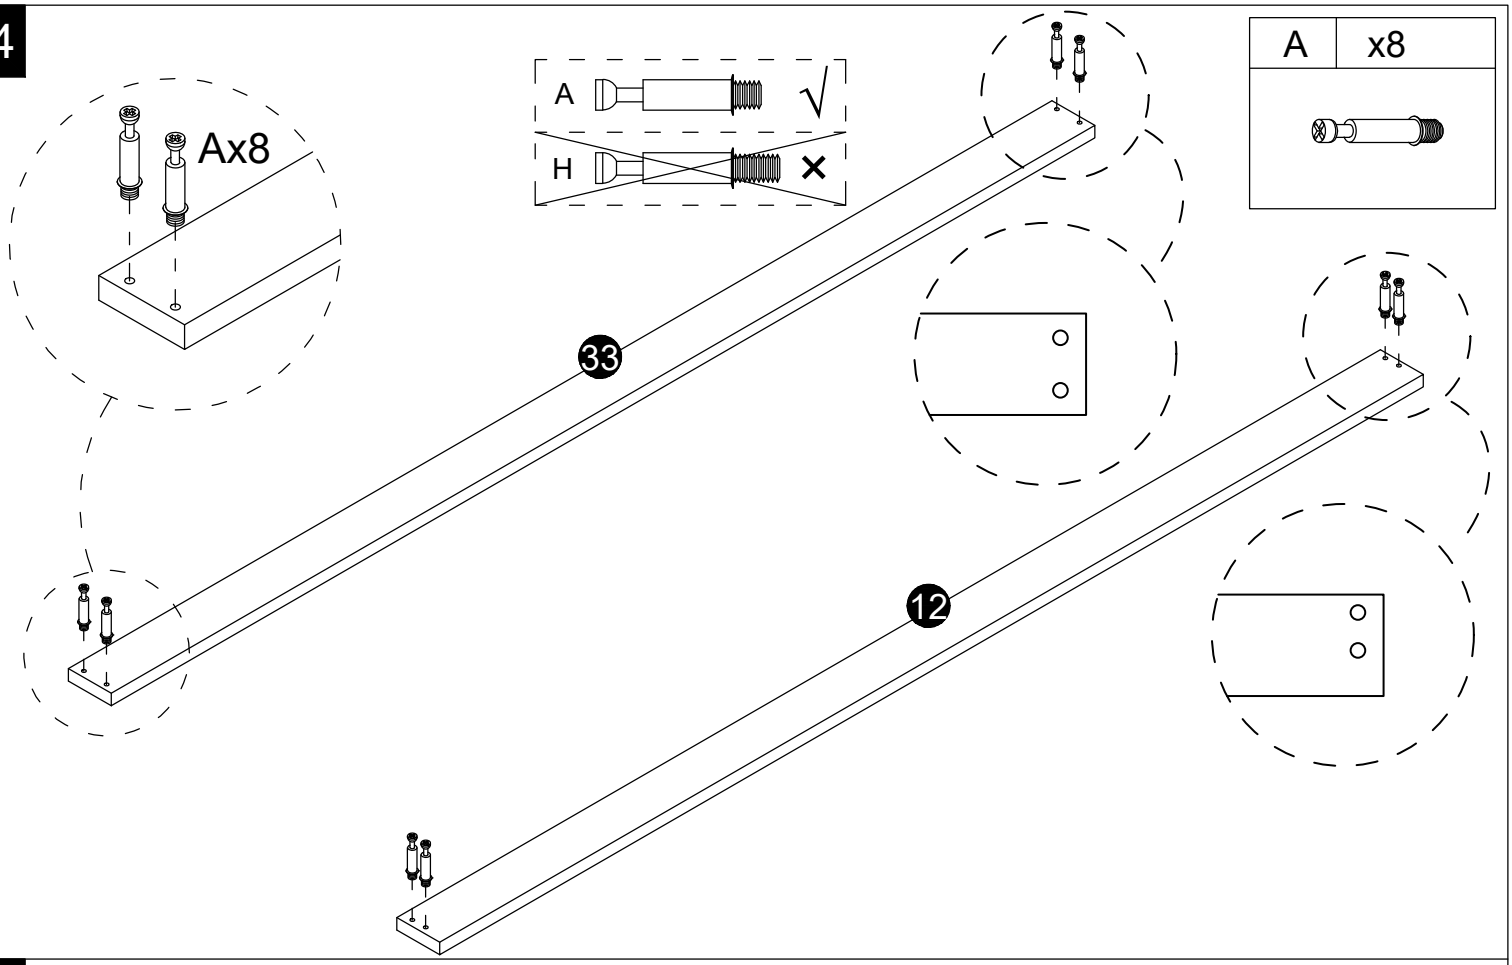

05

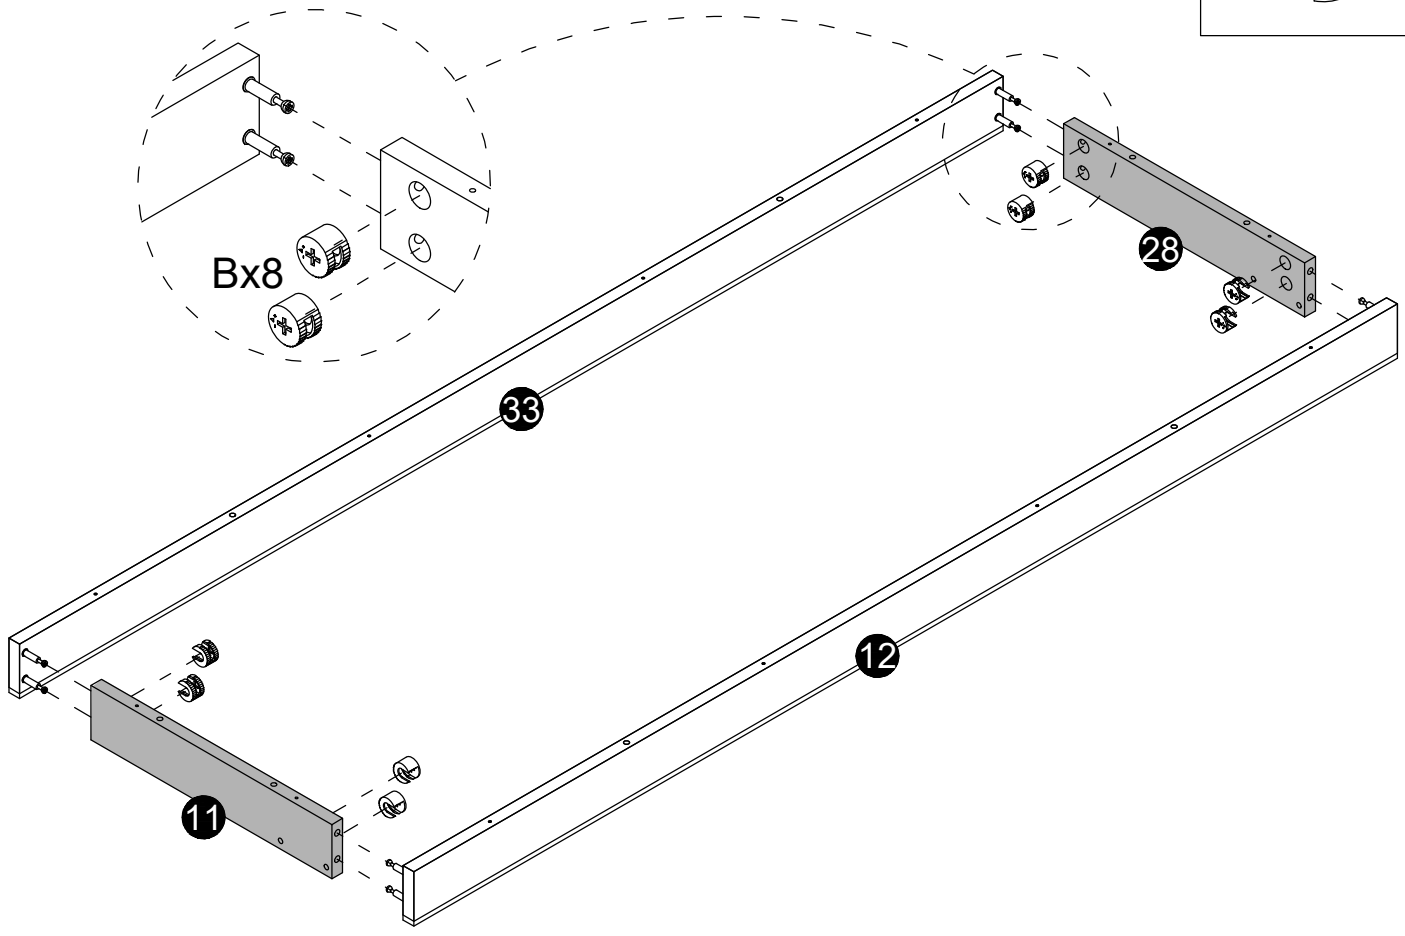

06

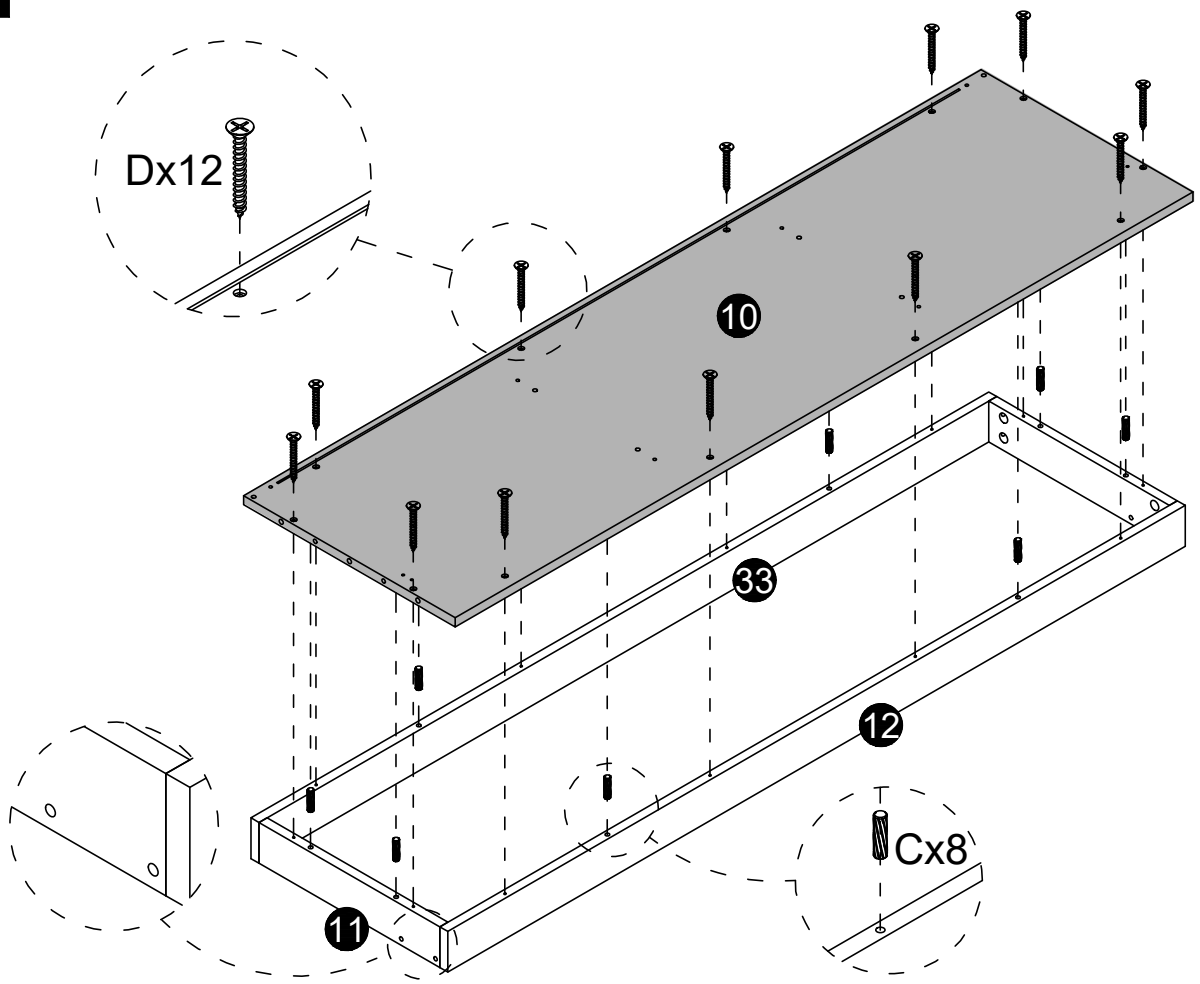


C	x8



D	x12



07

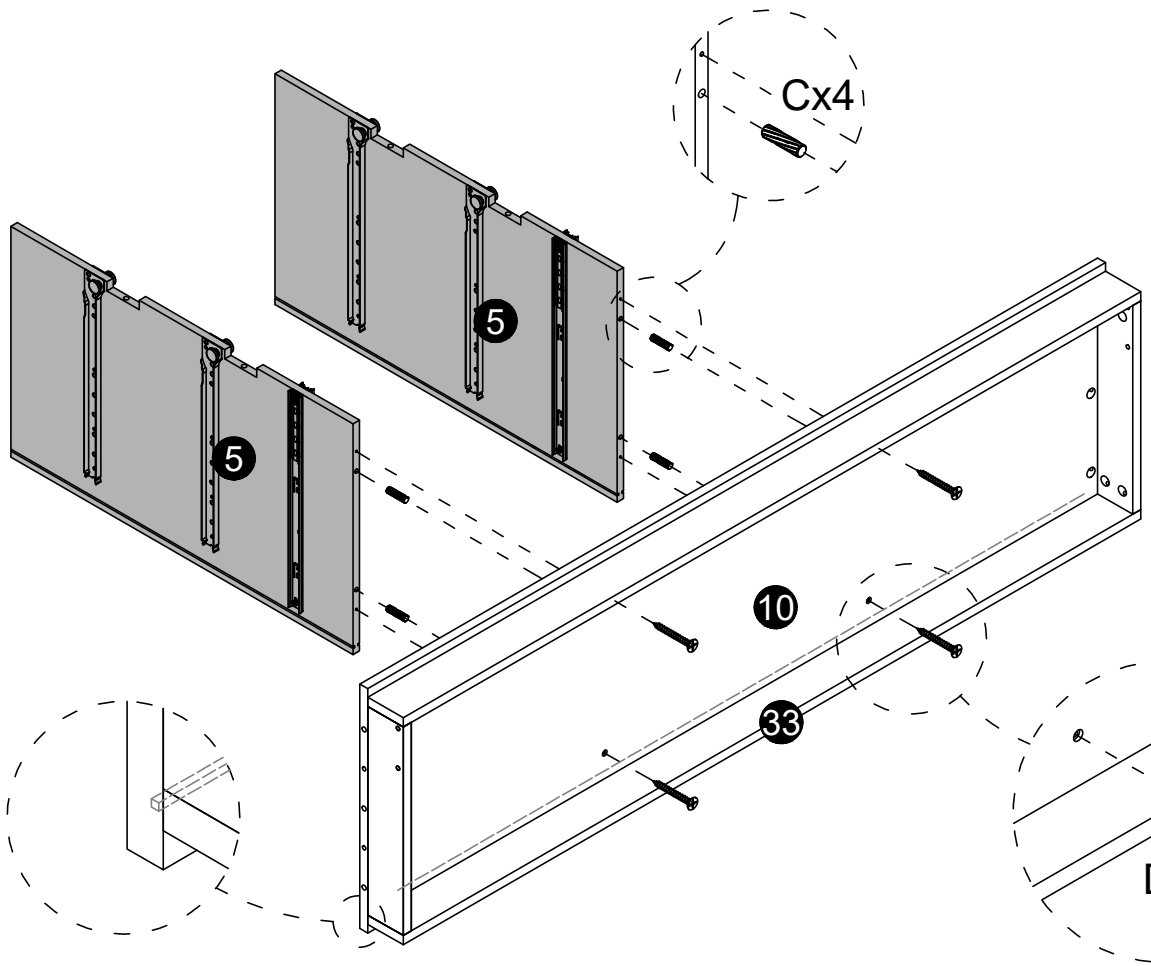


C	x4




D	x4



08

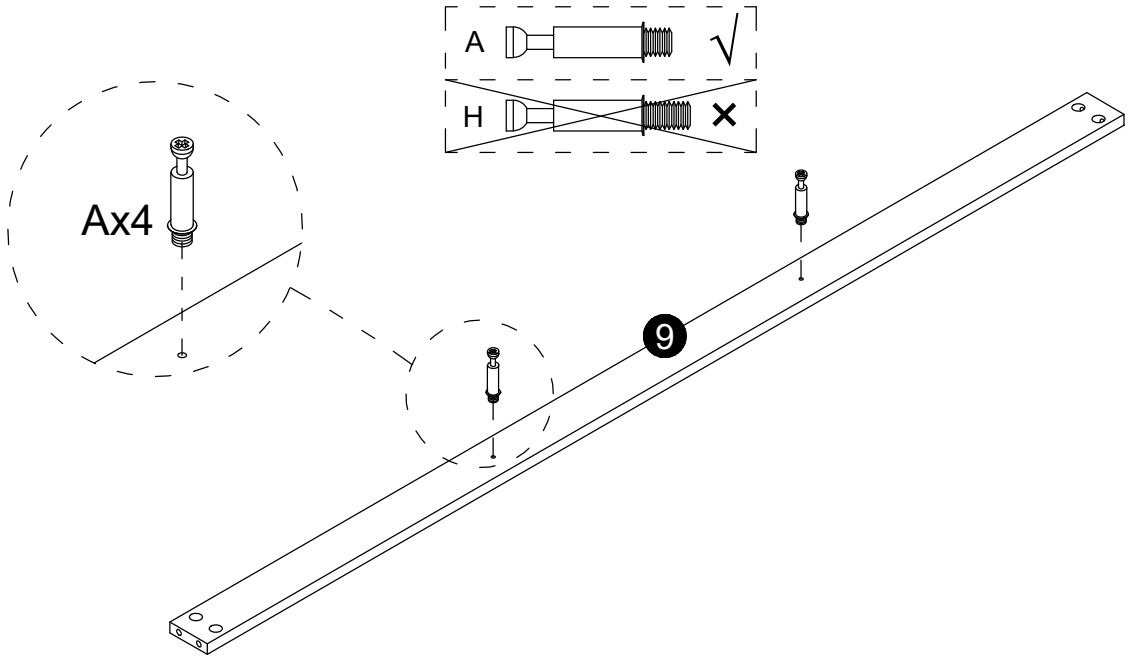

A	x4




x2


09

B	x4




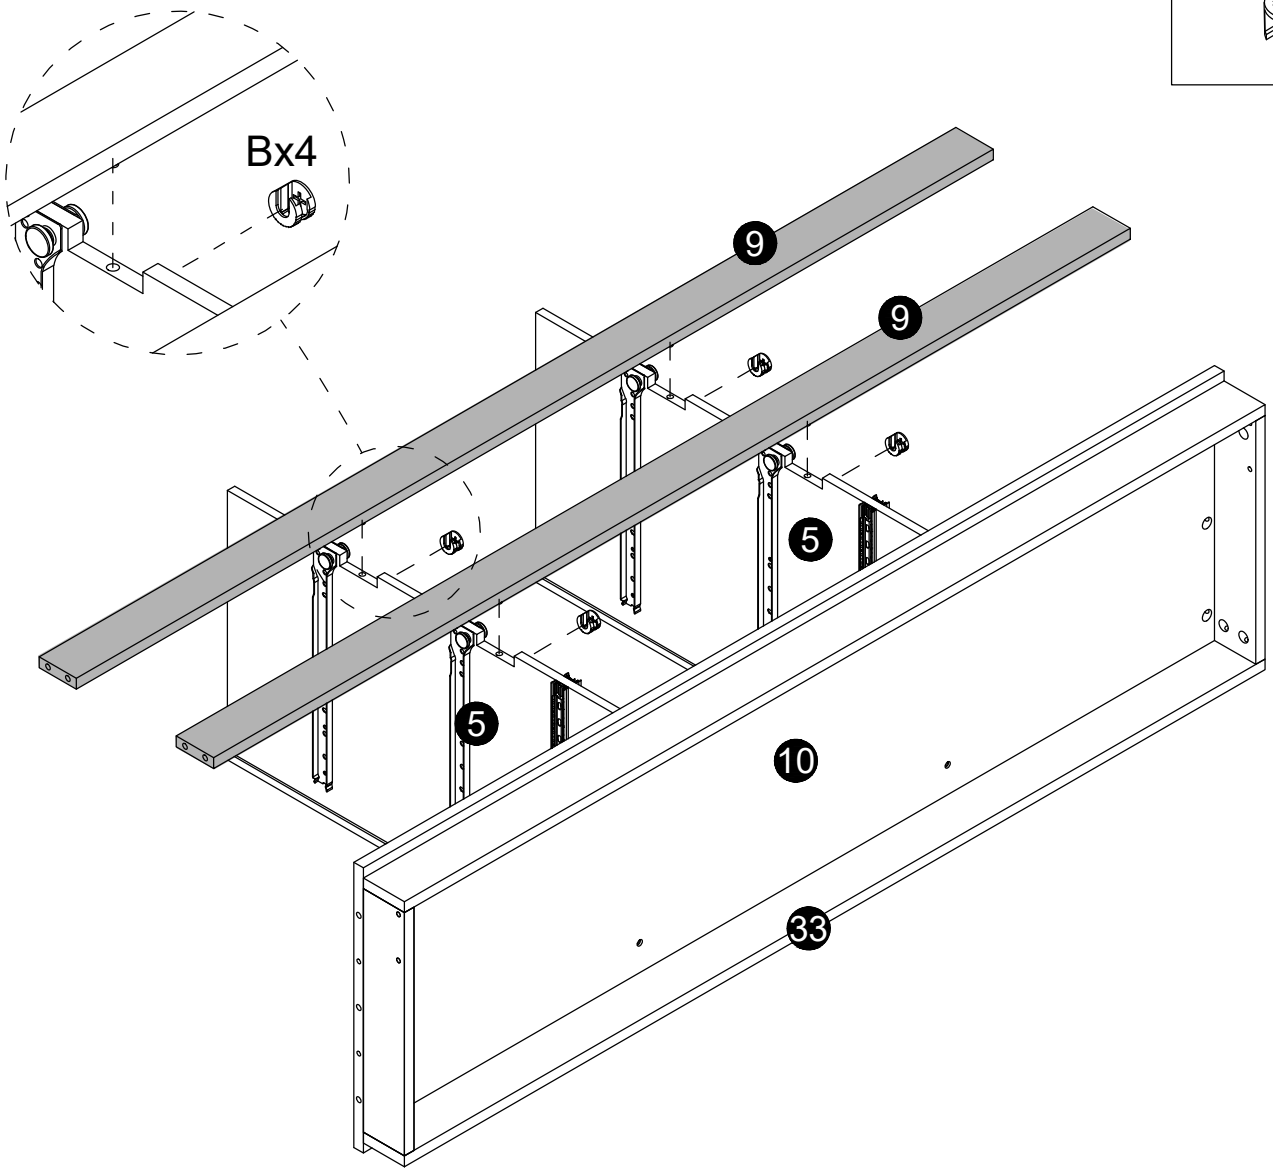

10

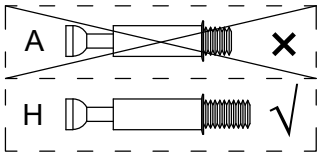

H	x24

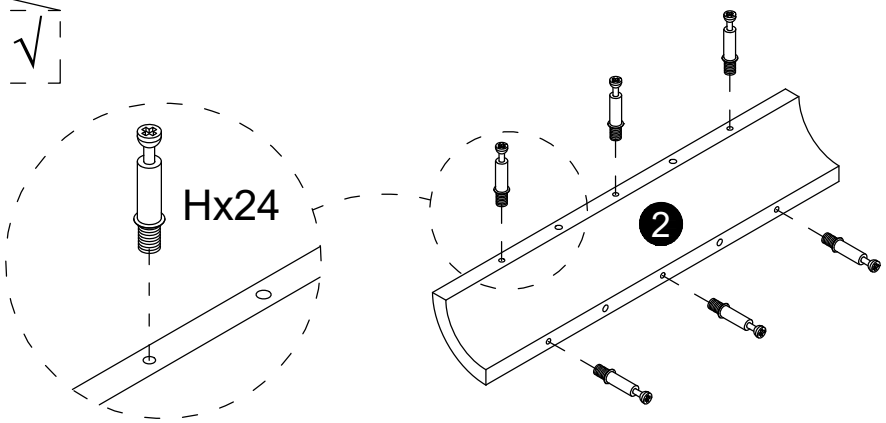


x4


11

A	x8


B	x6

C	x4

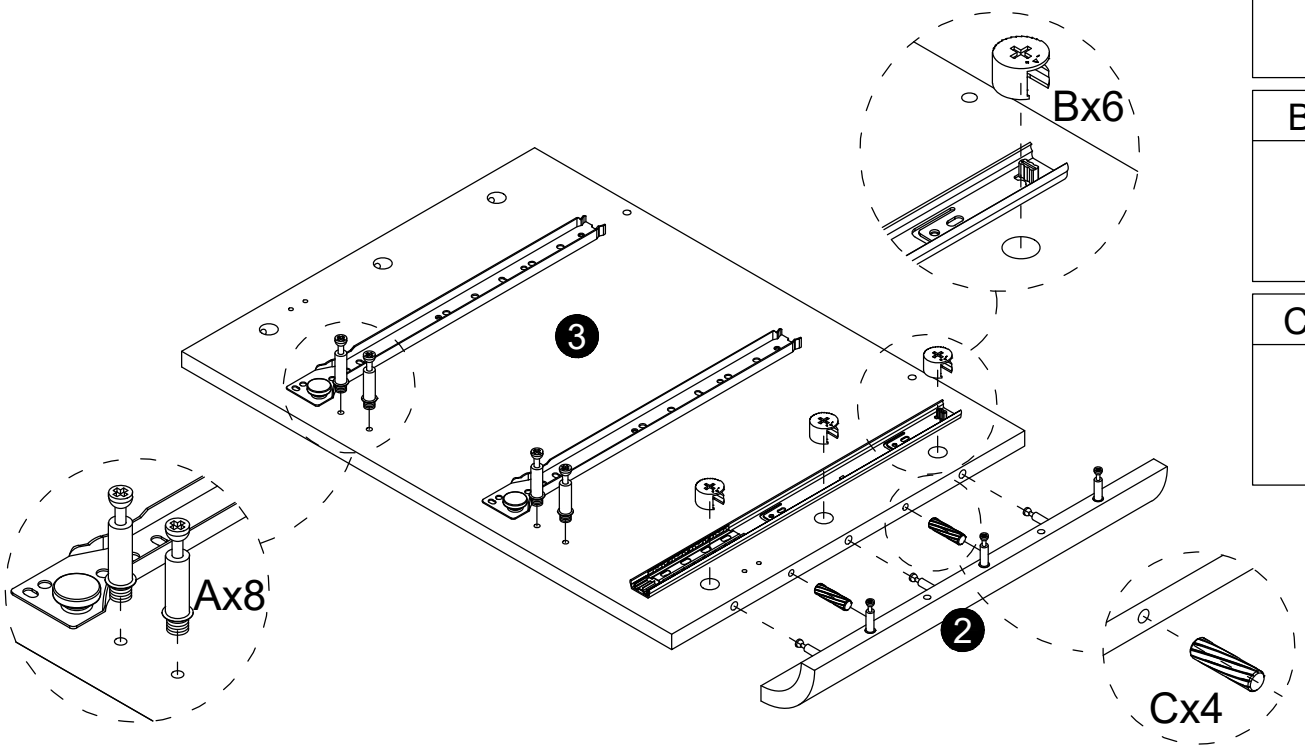

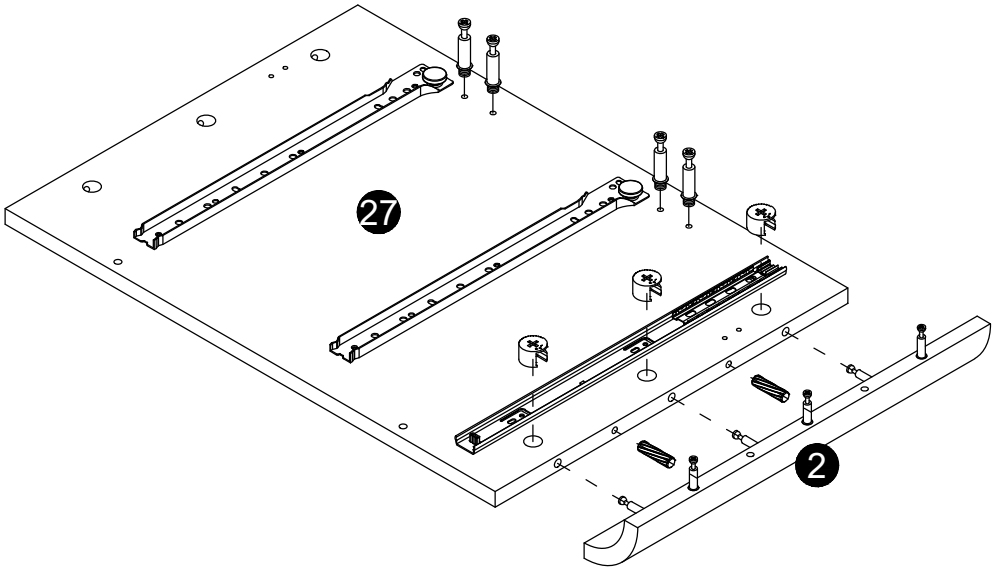

12

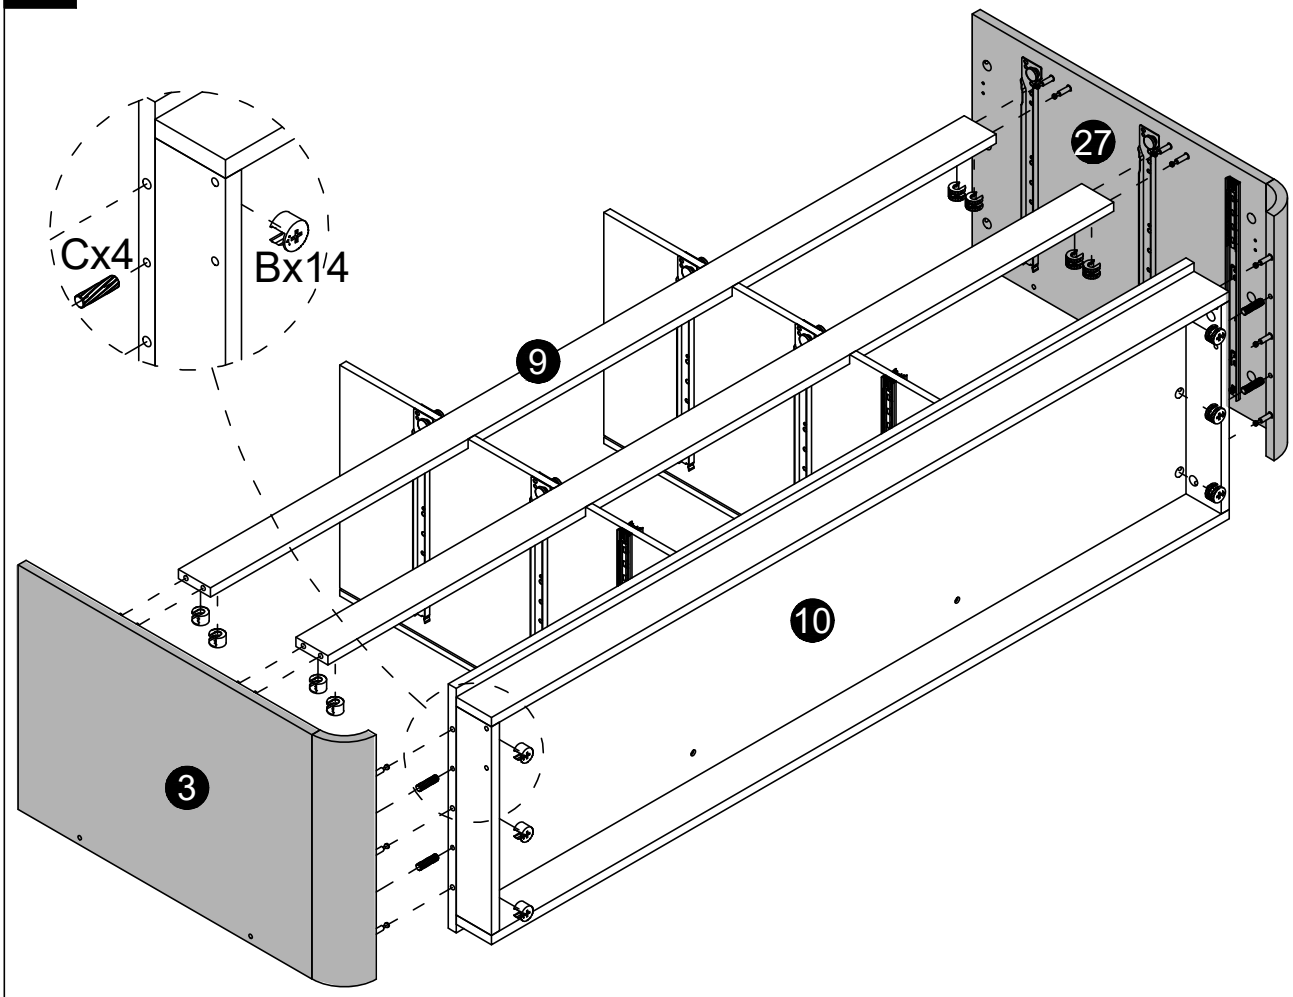


B	x14




C	x4



13

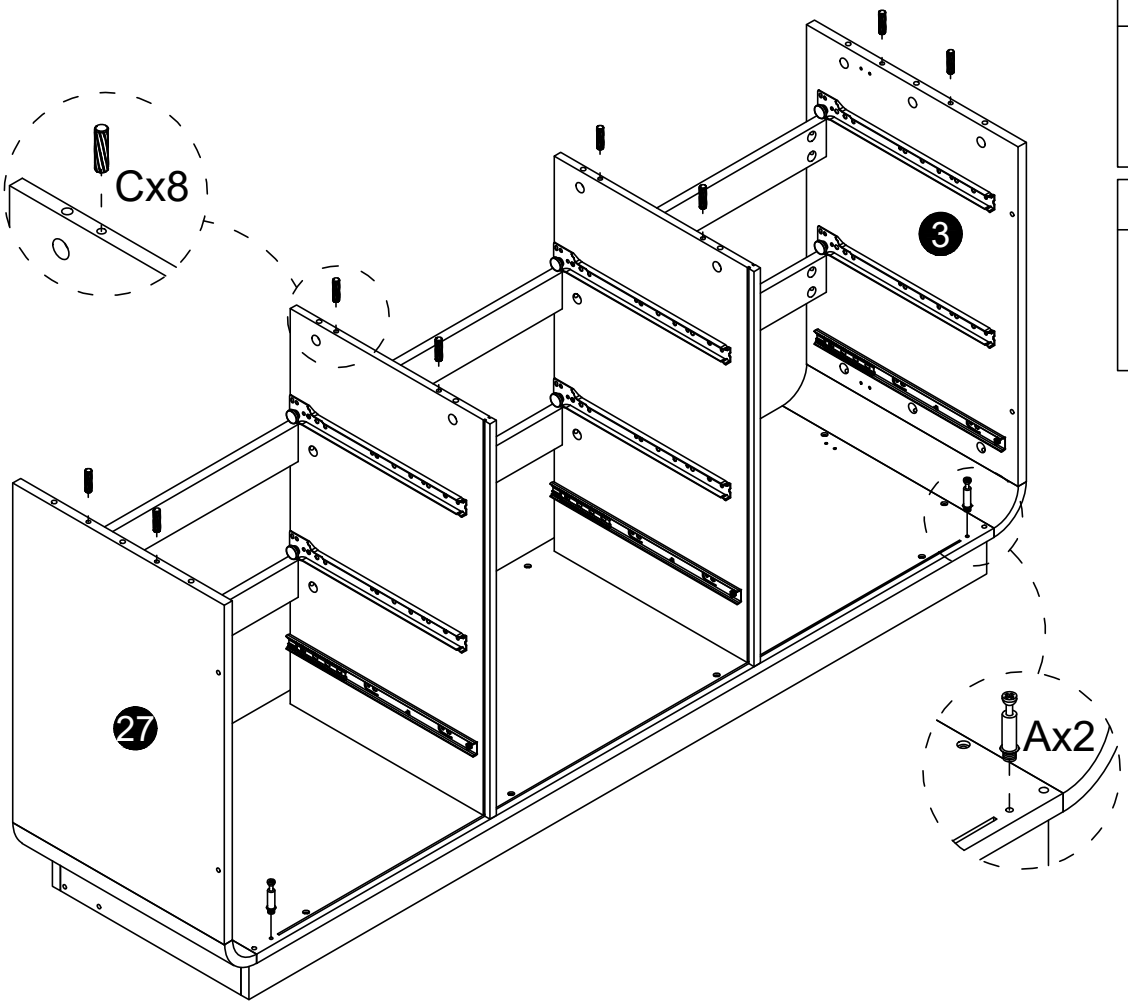


A	x2



C	x8



14

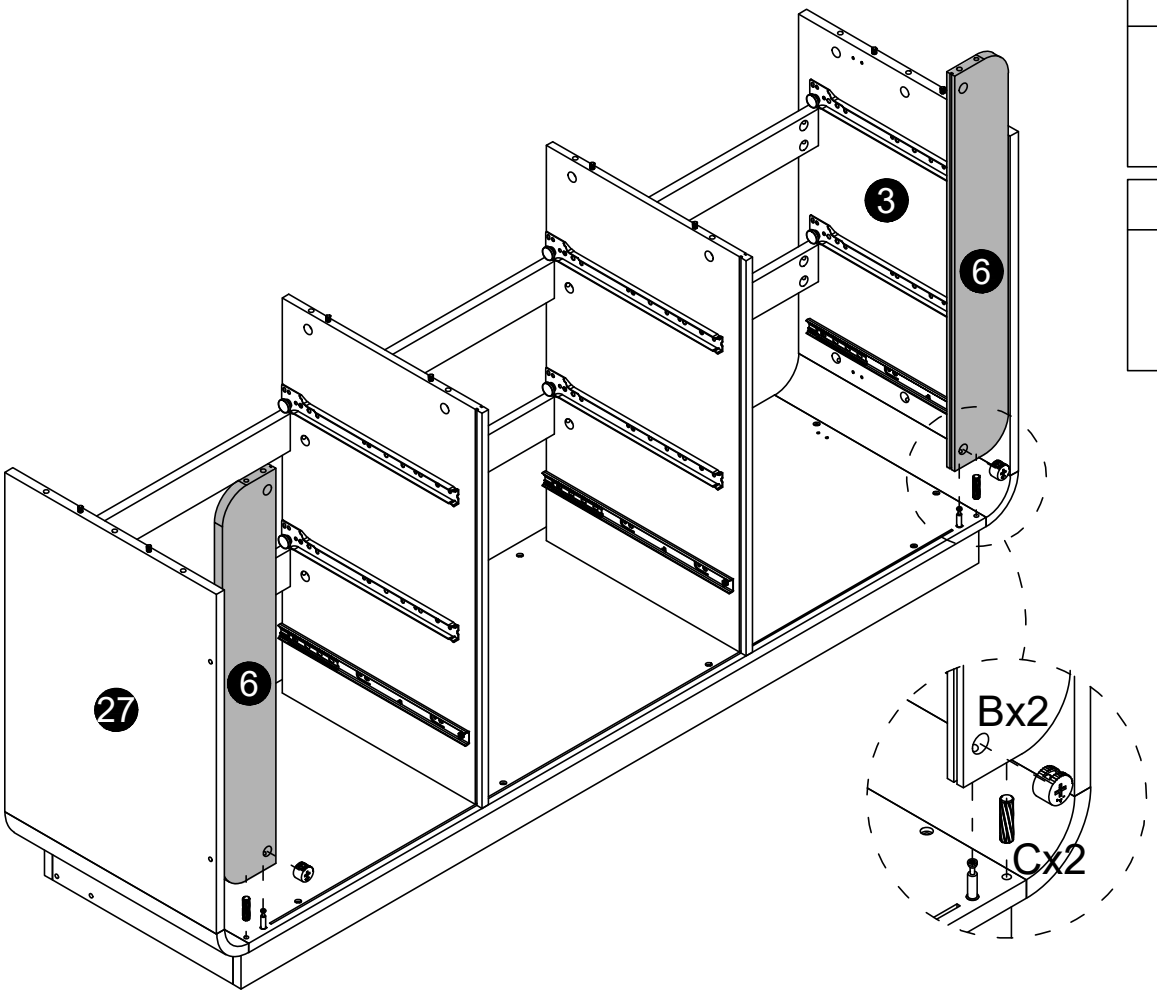


B	x2



C	x2



15

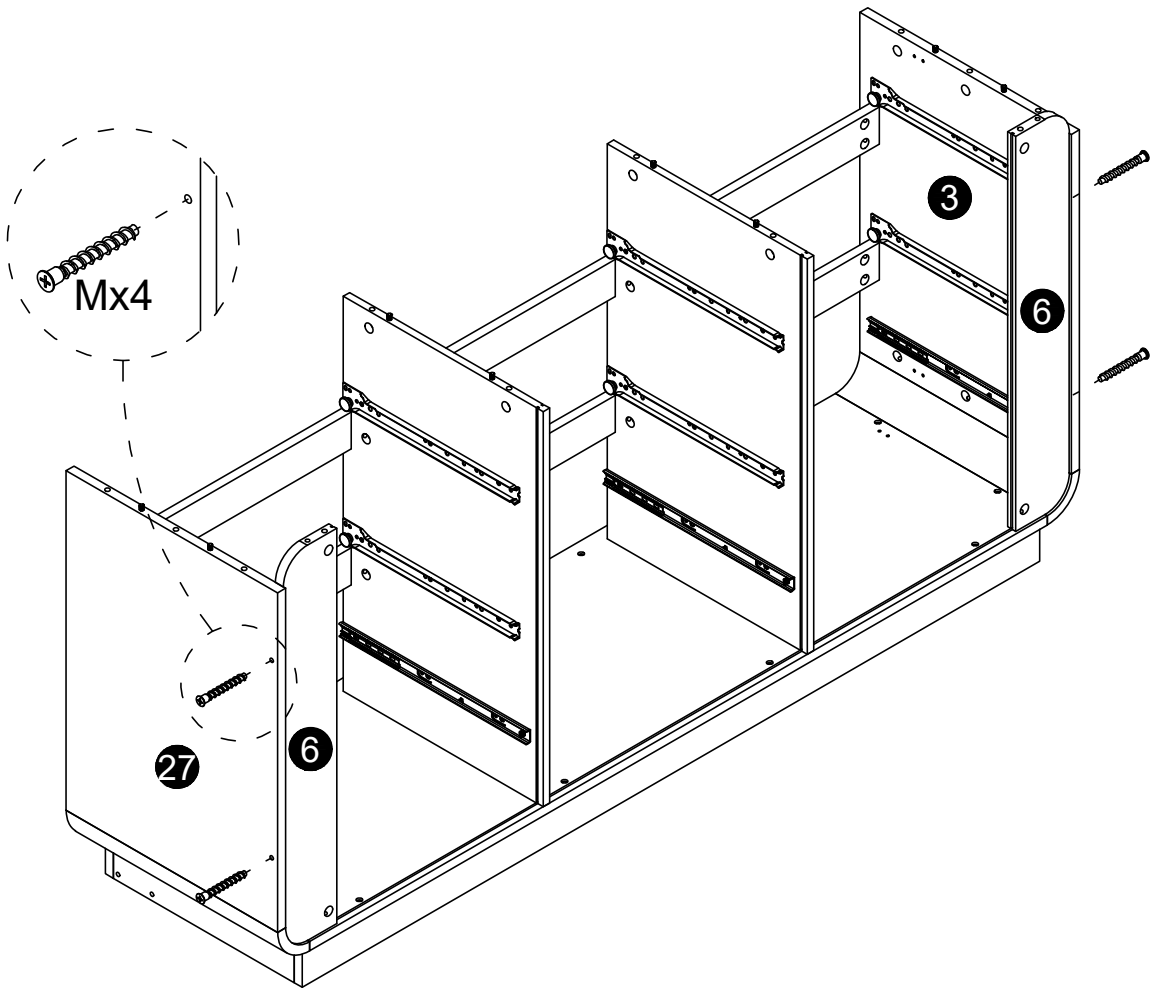


M	x4



16


C	x2

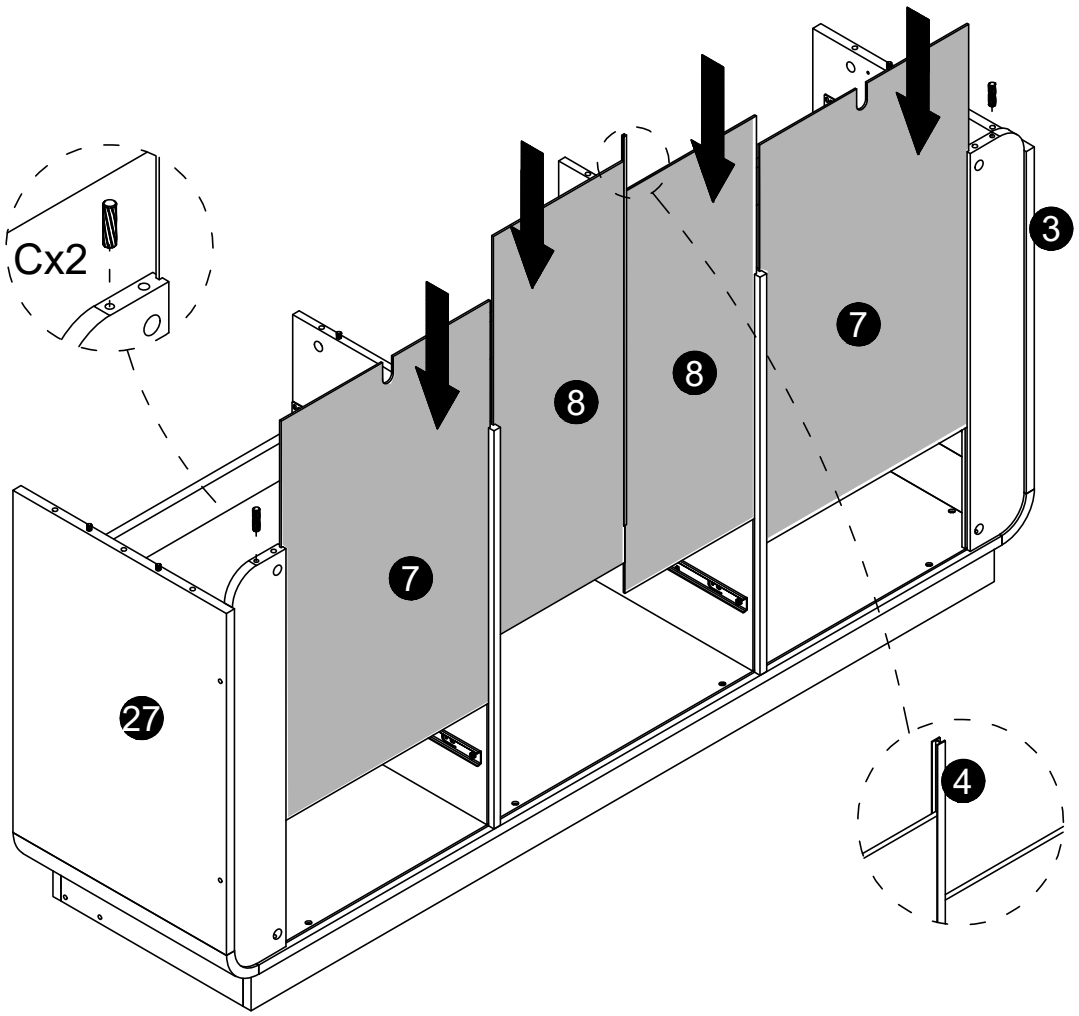

17

B	x6

C	x4

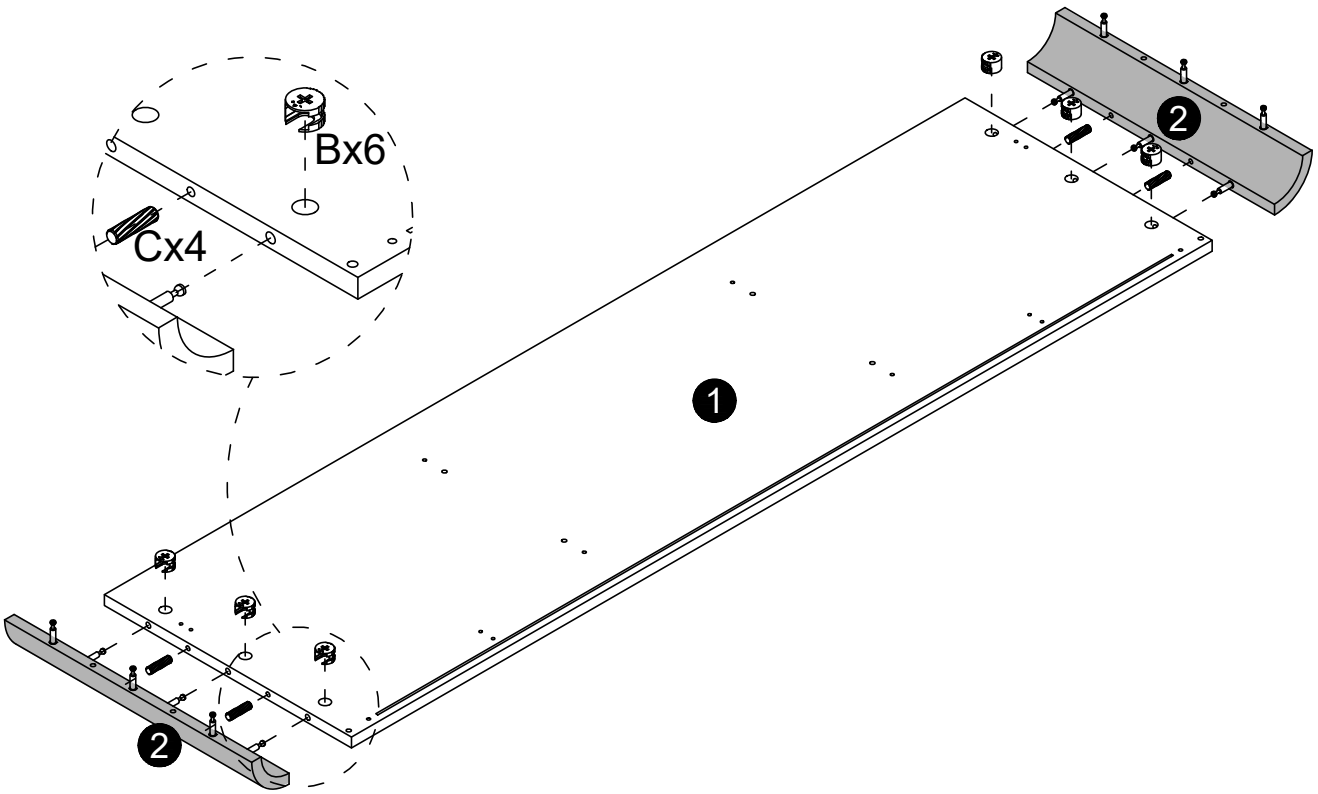


18

A	x6

K	x2

L	x4

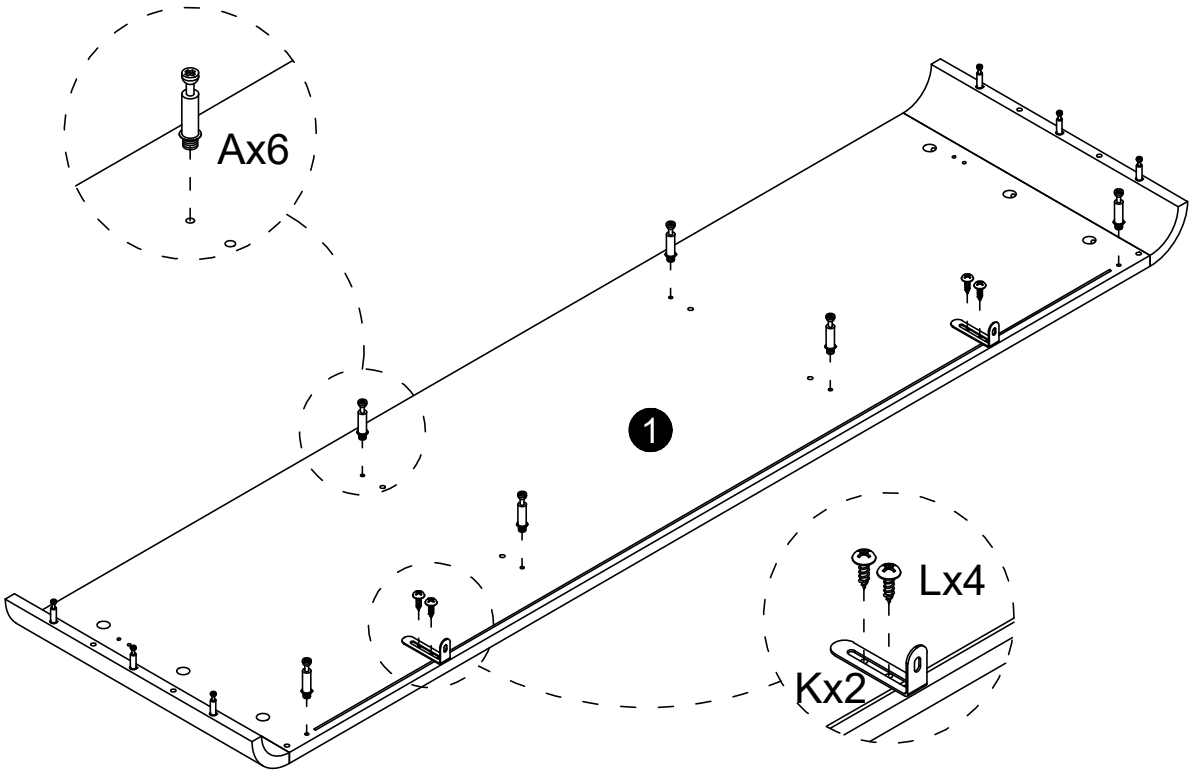


19


B	x12




Push inward

If this step is not easy to install, loosen the B screw first, and then press No.2 inward

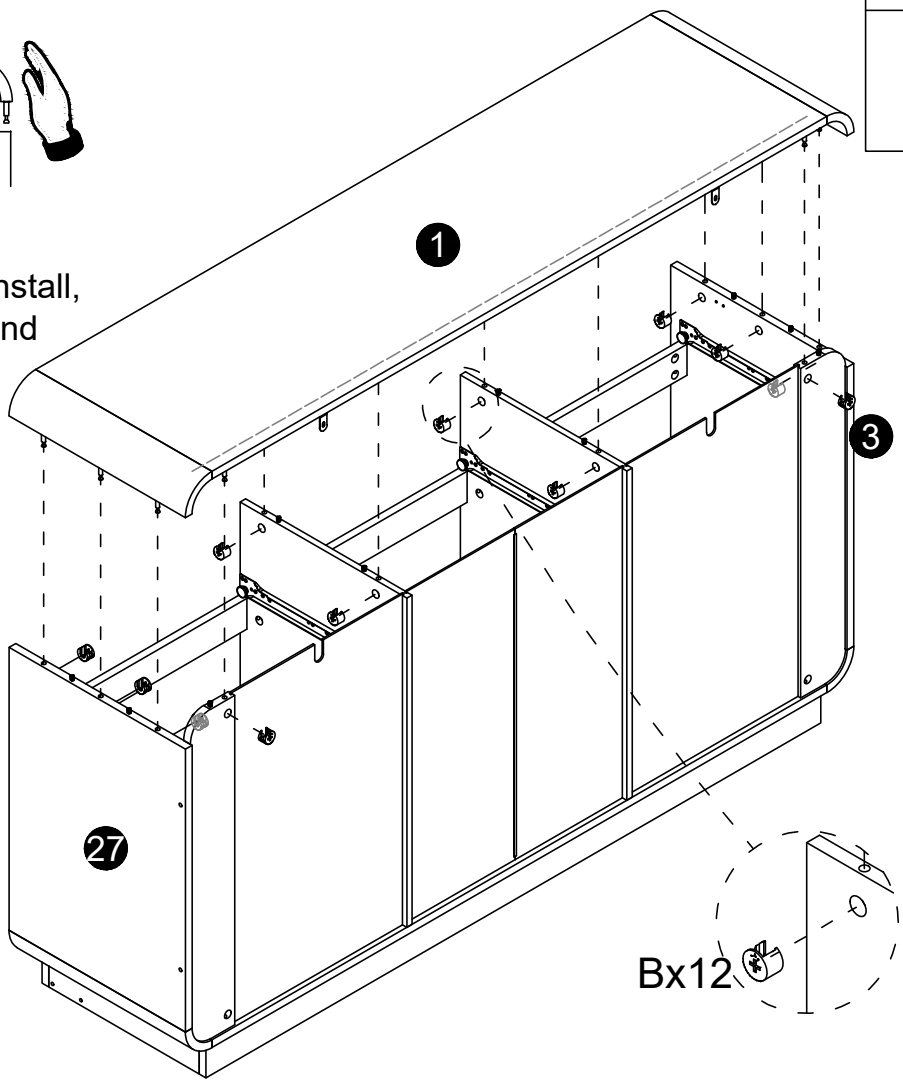


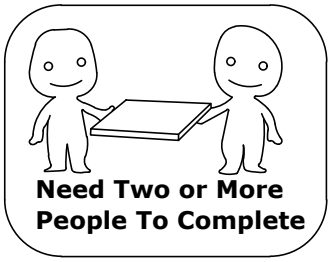

20

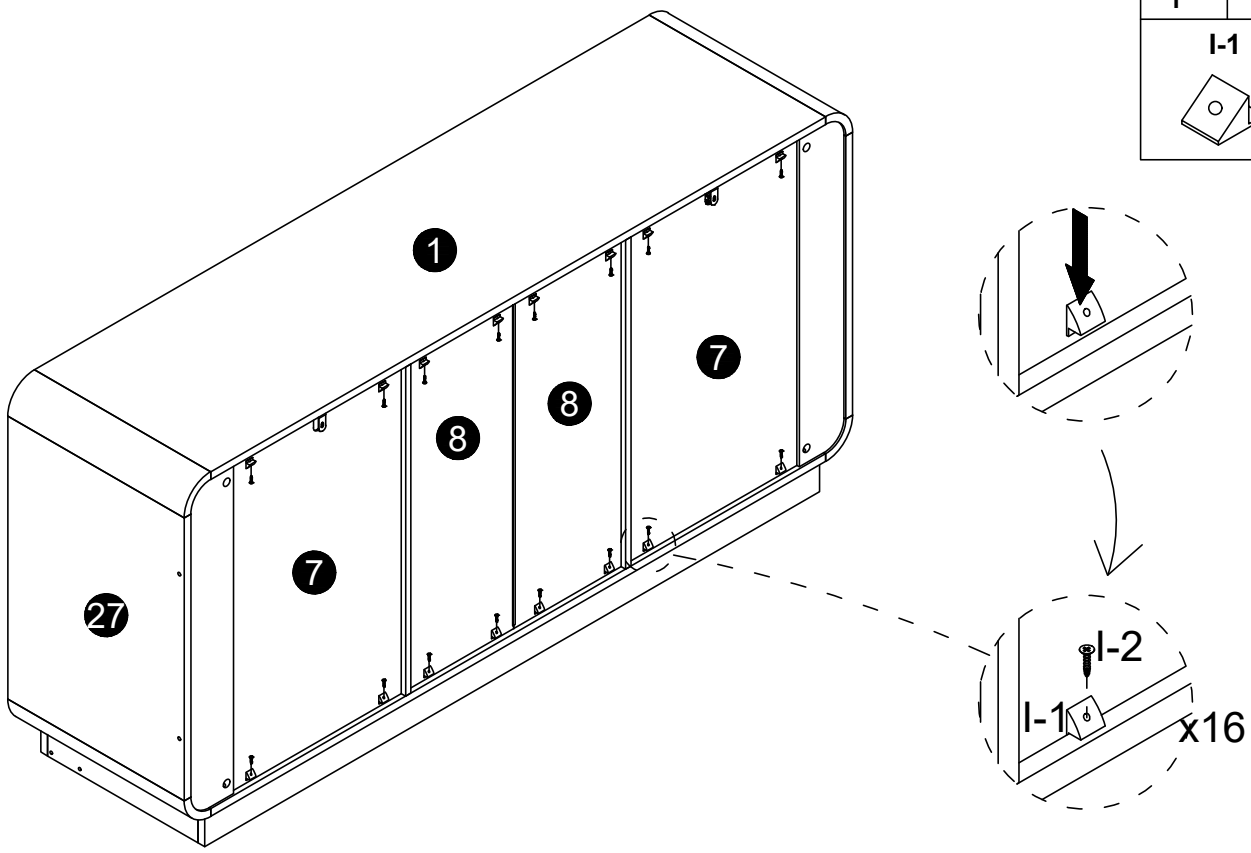

I x16
I-1
I-2
1
7
8
8
7
27
I-2
I-1
x16

21

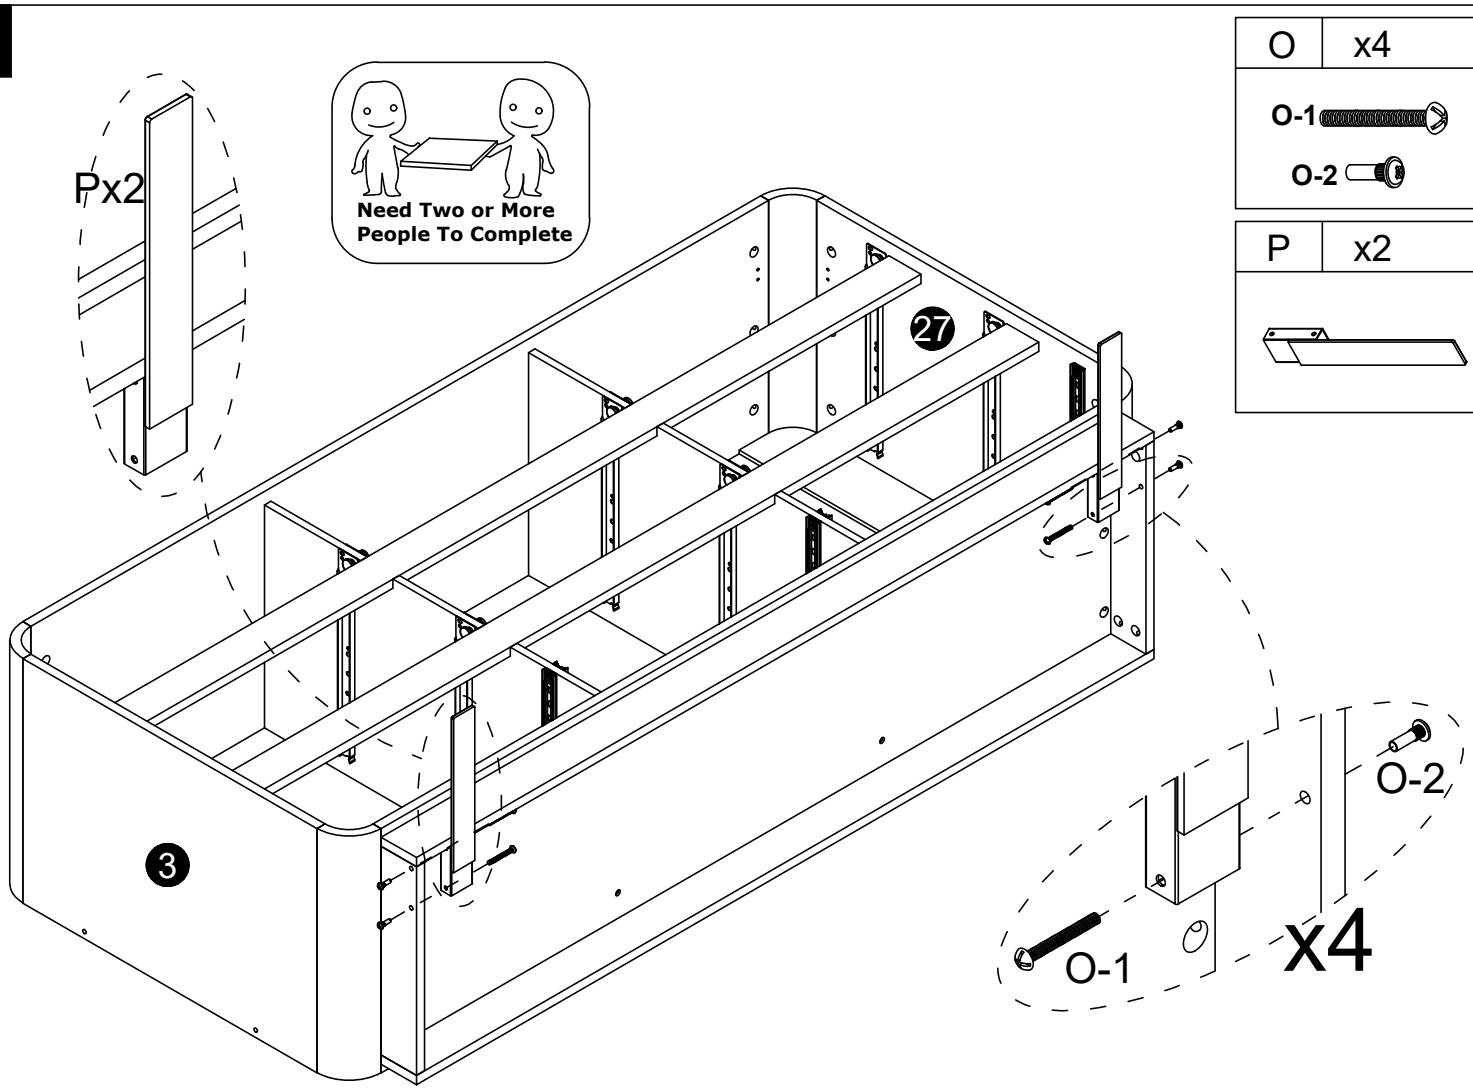

O x4
O-1
O-2
P x2
Px2
Need Two or More
People To Complete
27
3
O-2
O-1
x4

22


Step I: Mark the drilling positions on the wall with a pen.

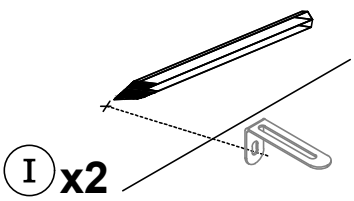

Step II: Drill holes using an electric drill for 6x30mm.

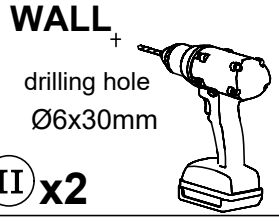

Step III: Use a hammer to drive screw into the wall.

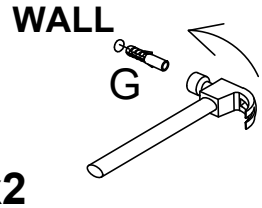

D	x2



G	x2




J	x4



L	x16




23

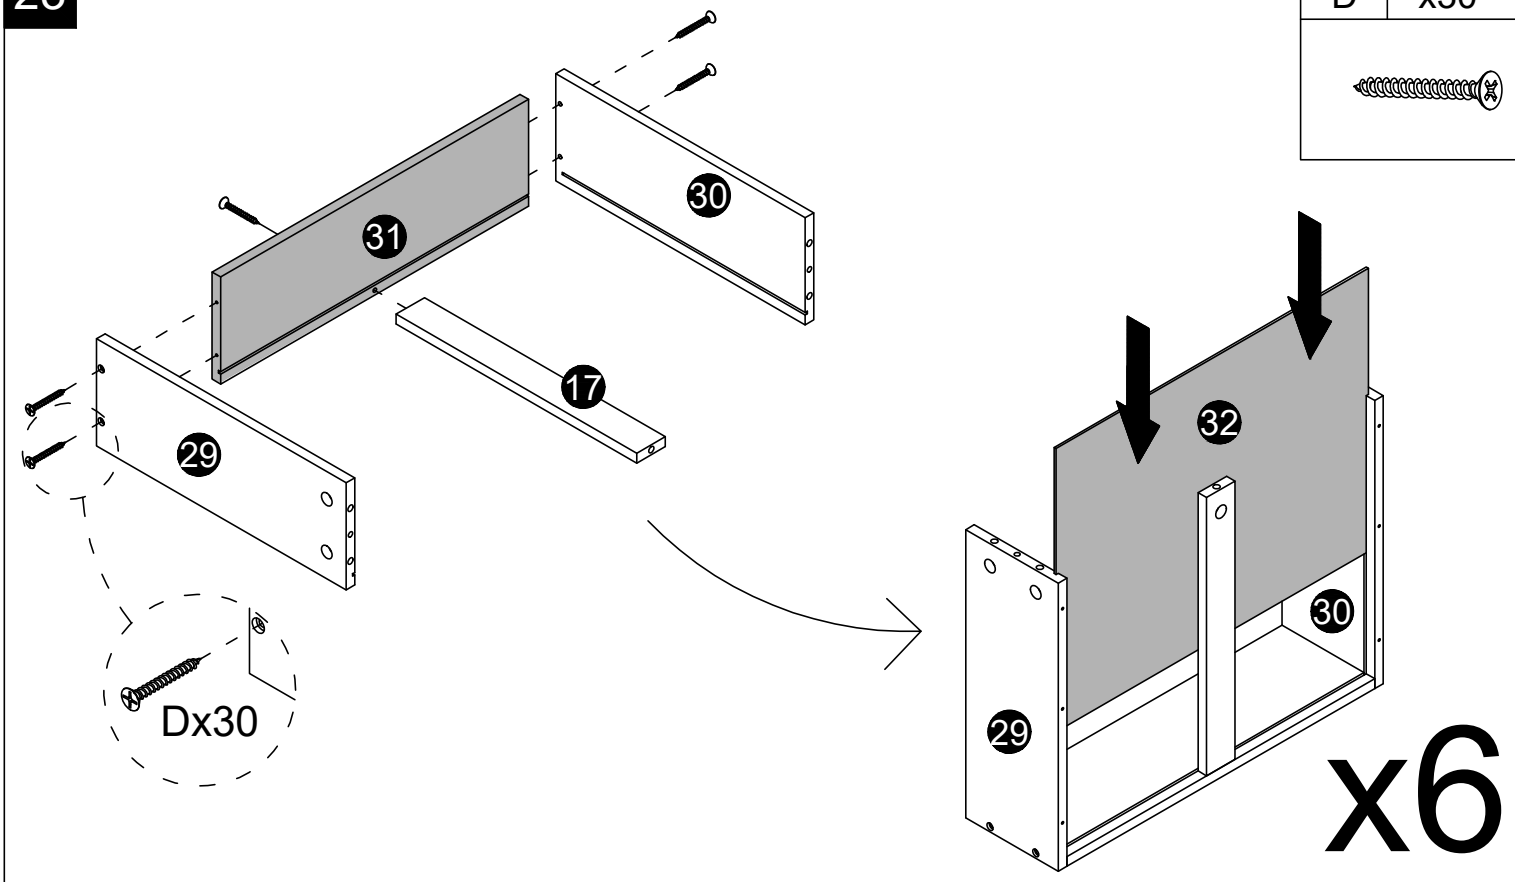


D	x30


24

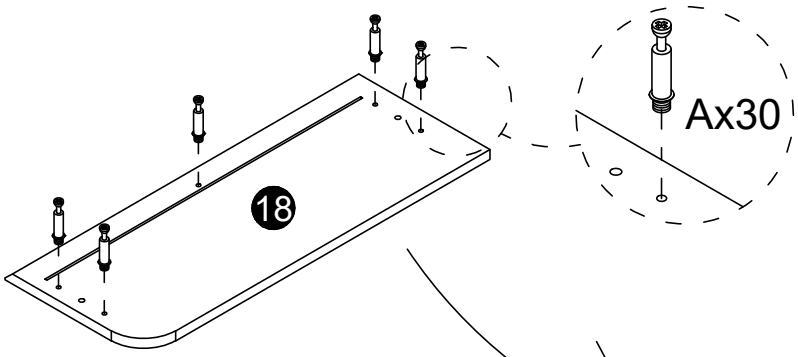

Note:There are various types of drawer surfaces(18~21,23and26). The picture shows one of them.

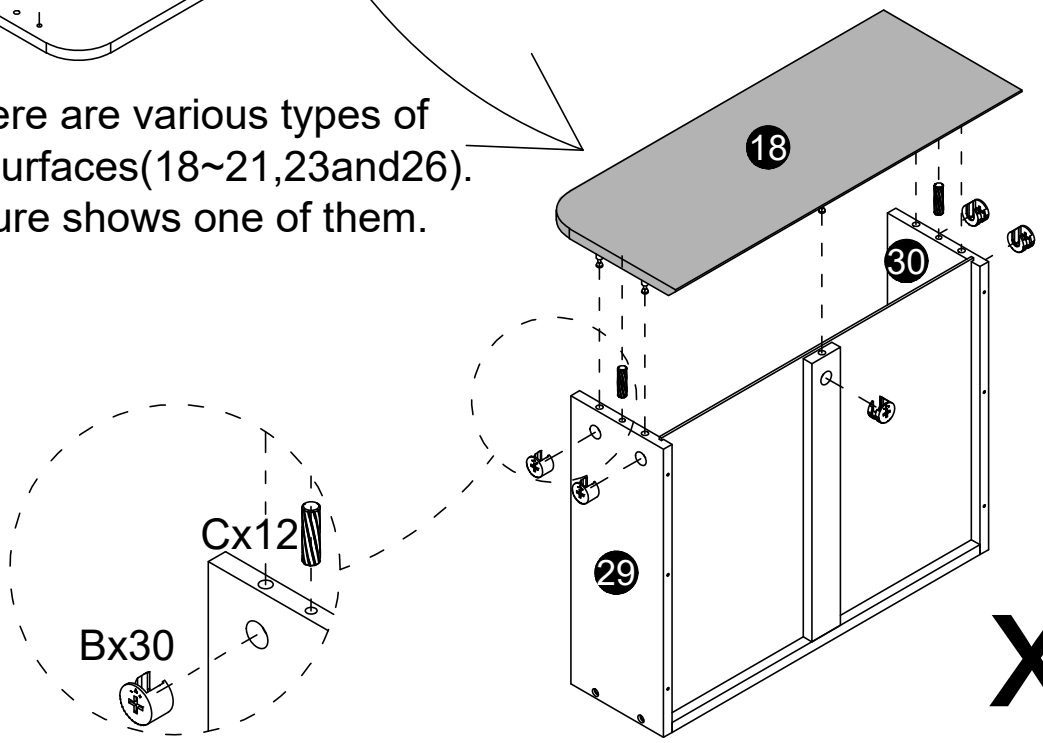

A	x30




B	x30



C	x12




25

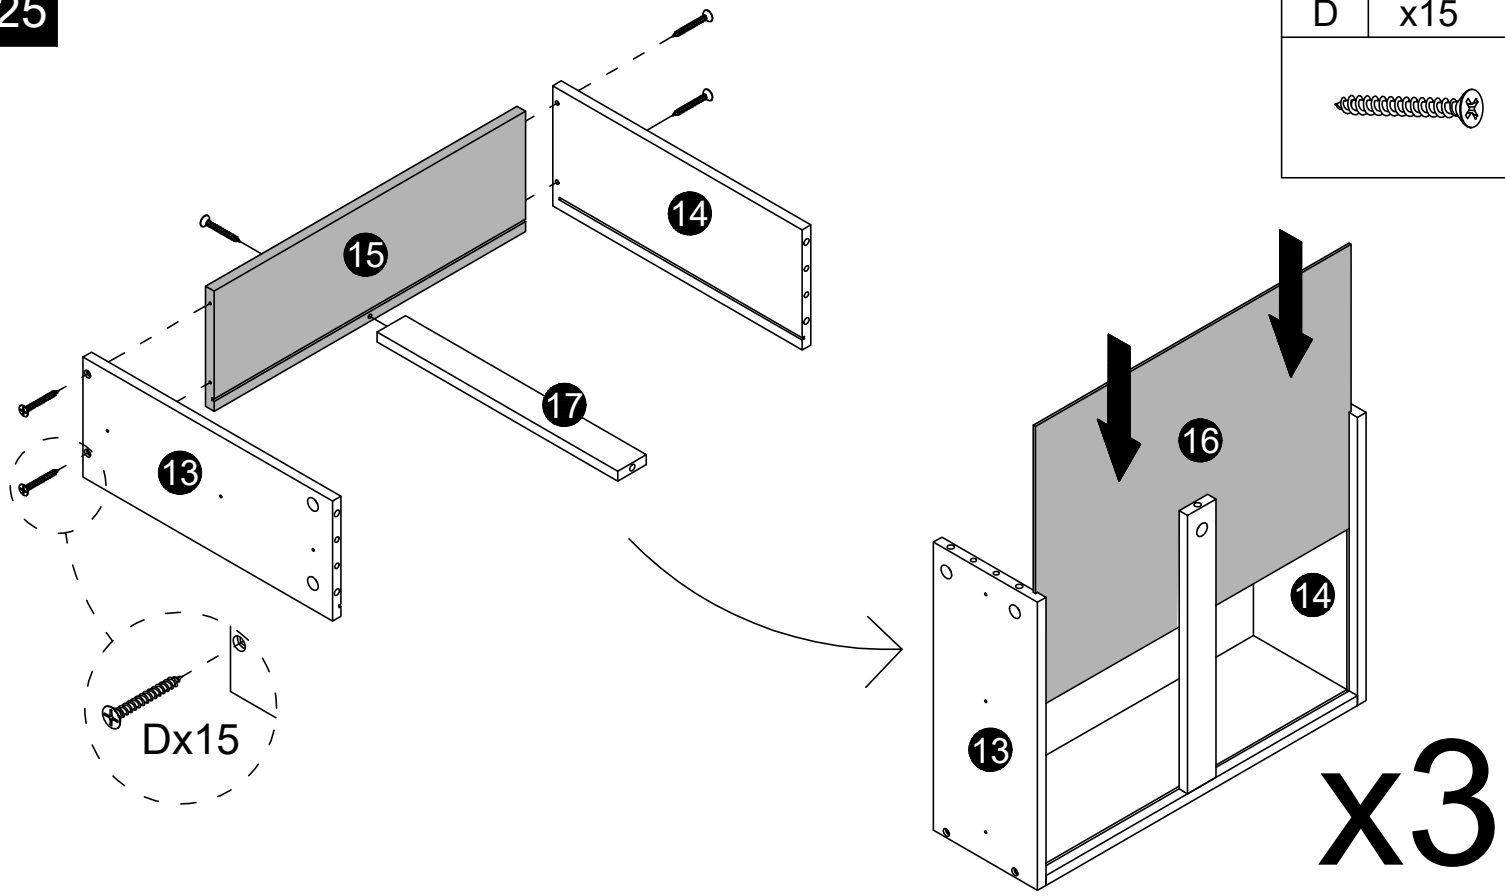


D	x15


26

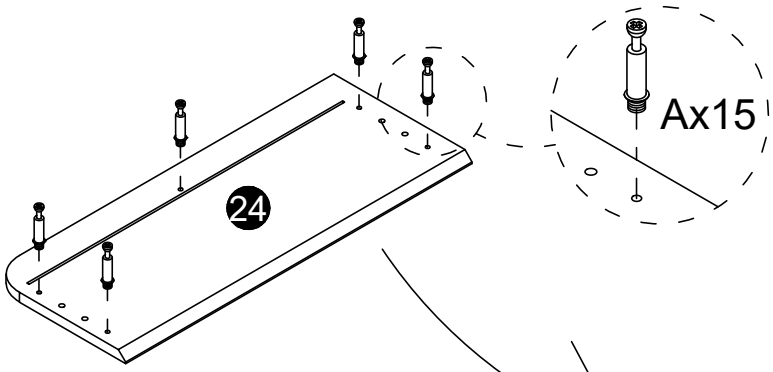

Note:There are various types of drawer surfaces(22,24and25). The picture shows one of them.

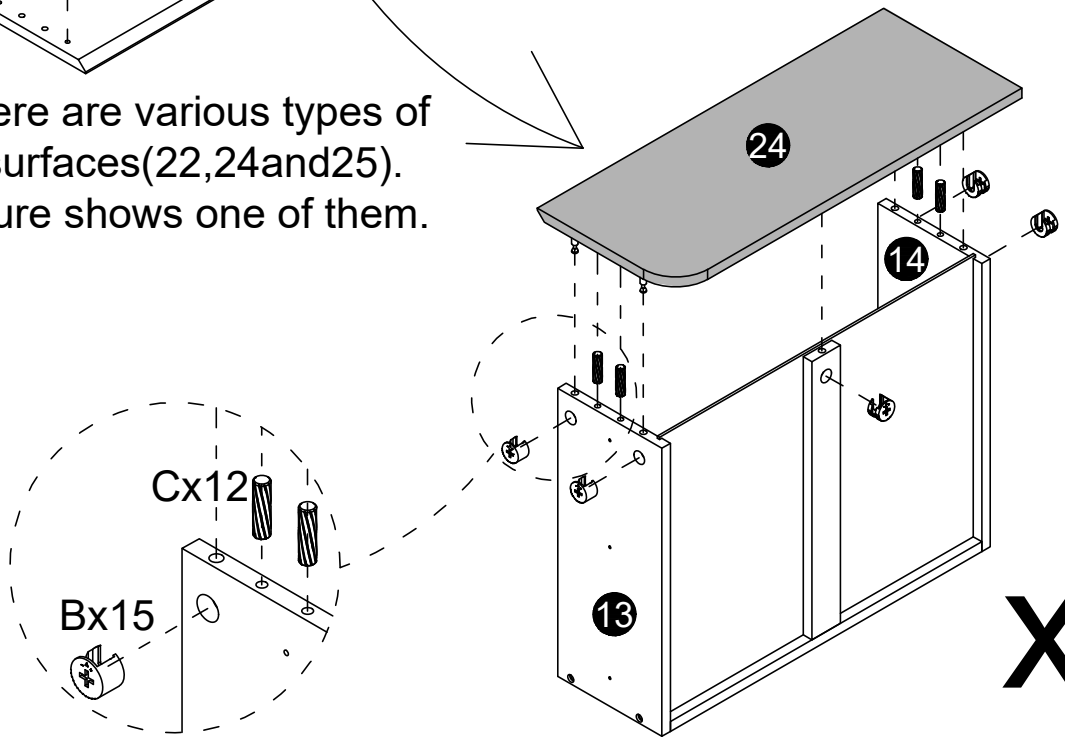

A	x15



B	x15




C	x12



27

Note:There are various types of drawer surfaces(18~21,23and26). The picture shows one of them.

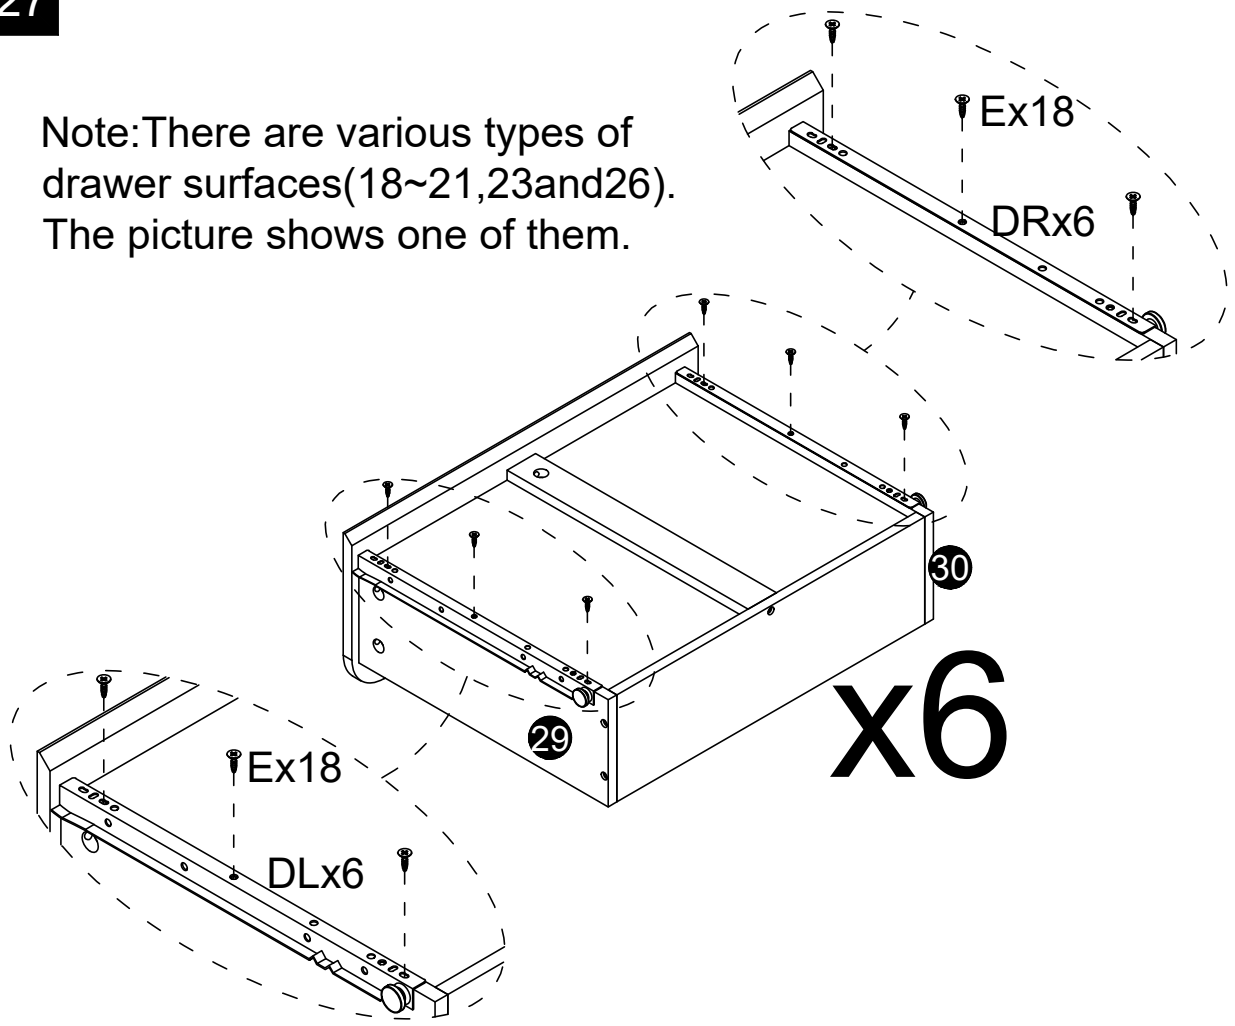


E	x36

DL	x6

DR	x6

28


Note:There are various types of drawer surfaces(22,24and25). The picture shows one of them.

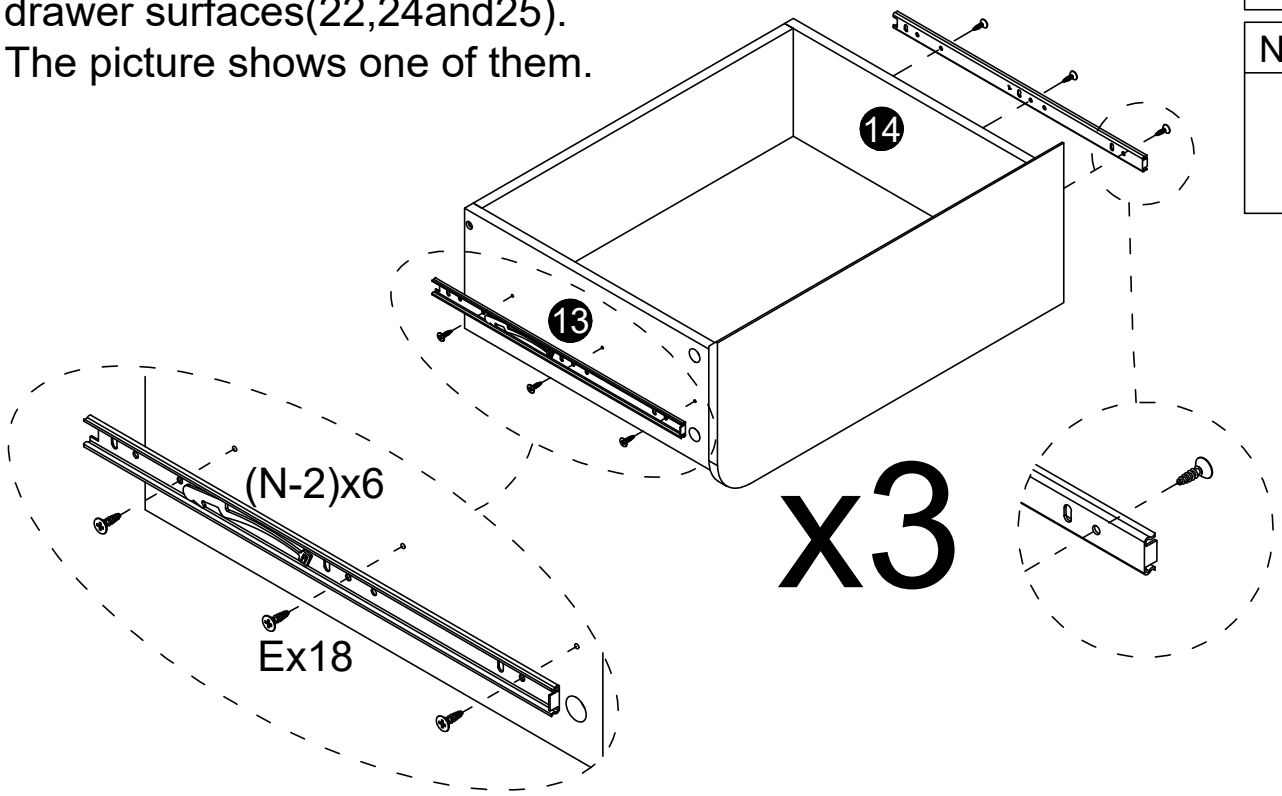


E	x18

N-2	x6

29

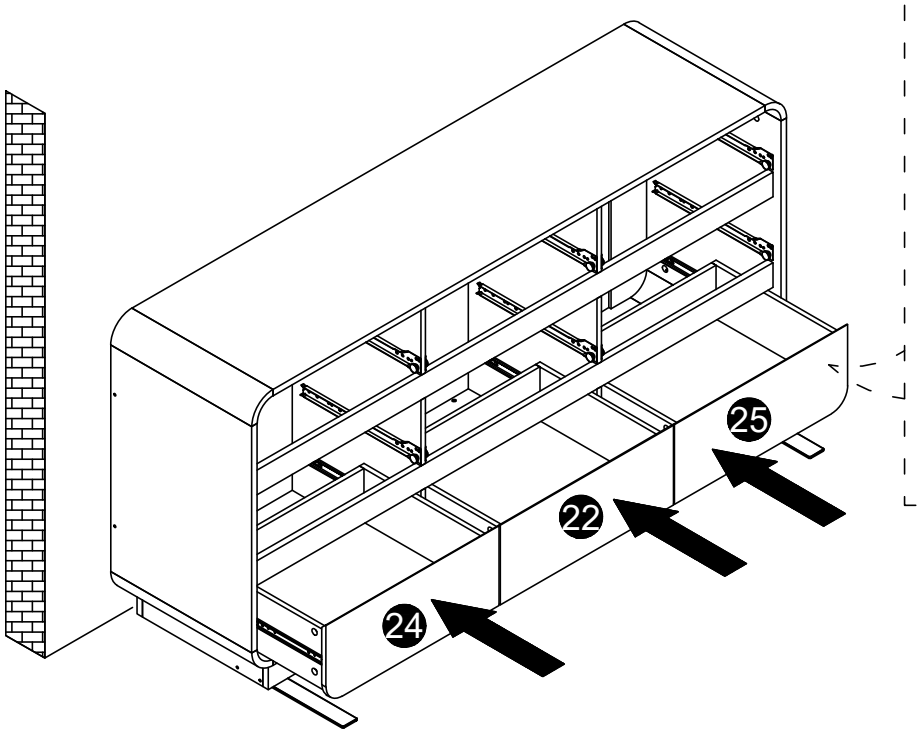

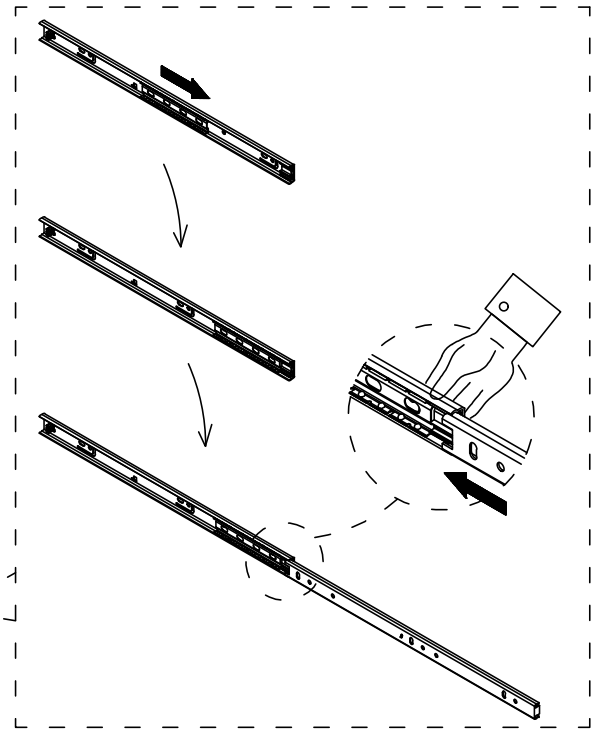

Please make sure to align the slide rail with the notch properly. Support it with your hand and push it in horizontally so that the sliding ball can fit into the groove and function properly.

30

