


Bedside Table A188A with Cabinet Installation Diagram

								
Foot Pad	Caster	Caster	Plum Blossom Screw	6cm Pointed Screw	2.5cm Flat Head Screw	Minimum Self tapping Screw	Plastic Part	Nut
A*4	B*4	C*2	D*4	E*12	F*4	G*27	H*2	I*2

							
3.5cm Flat Head Screw	Eccentric screw	Eccentric Bolt	4cm Pointed Screw	Door Stopper	Door Pivot	Metal Pin	Wrench
J*2	K*2	L*2	M*10	N*1	O*1	P*3	

Installation Principle of Eccentric Piece:

Warm Tip: Tighten the screws by 70% during installation, and then tighten them after the installation is completed!

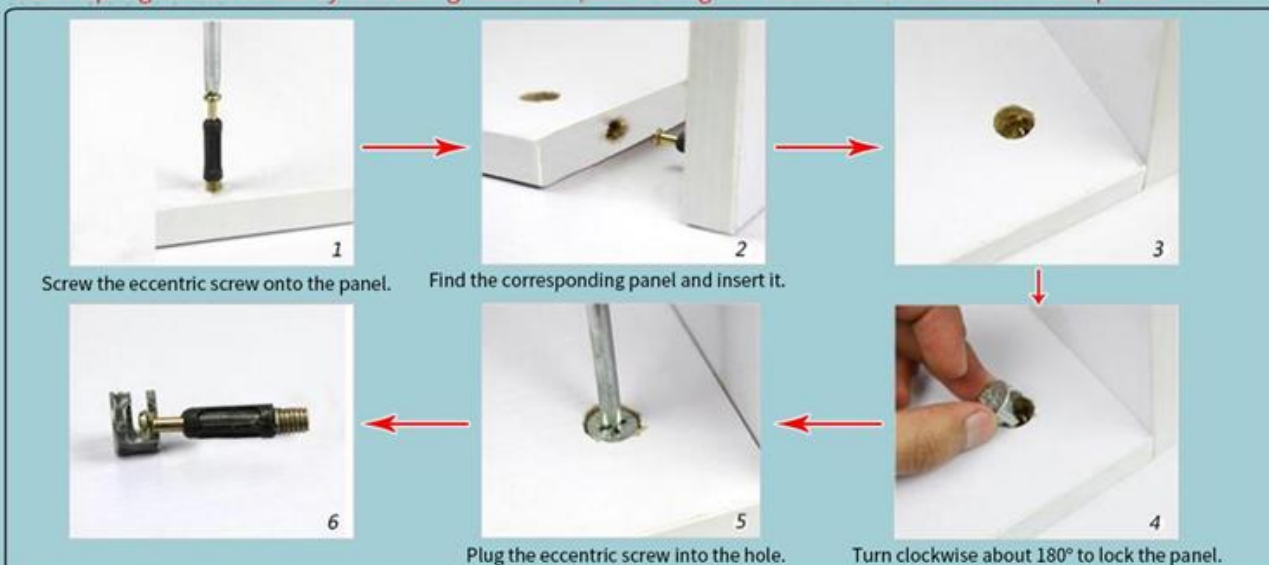

1 Screw the eccentric screw onto the panel.

2 Find the corresponding panel and insert it.

3 Plug the eccentric screw into the hole.


4 Turn clockwise about 180° to lock the panel.

5 Plug the eccentric screw into the hole.

6 Turn clockwise about 180° to lock the panel.

Step 1: Drawer Section Installation

<1>

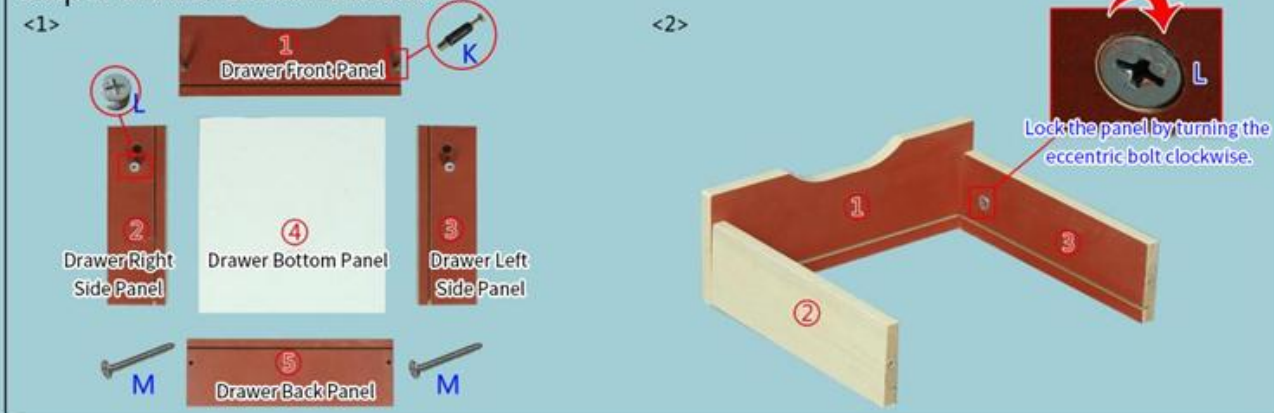

1 Drawer Front Panel

2 Drawer Right Side Panel

3 Drawer Left Side Panel

4 Drawer Bottom Panel


5 Drawer Back Panel

M

K

L

<2>

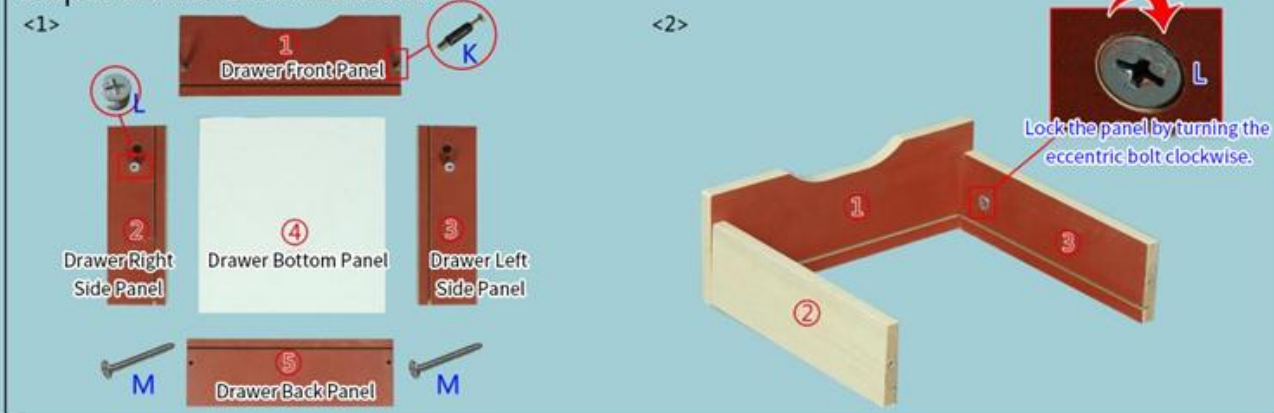

1 Drawer Front Panel

2 Drawer Right Side Panel

3 Drawer Left Side Panel

4 Drawer Bottom Panel

5 Drawer Back Panel

M

K

L

Lock the panel by turning the eccentric bolt clockwise.

<3>





<4>



Drawer Installation is Complete!

Panel Names and Panel Numbers:

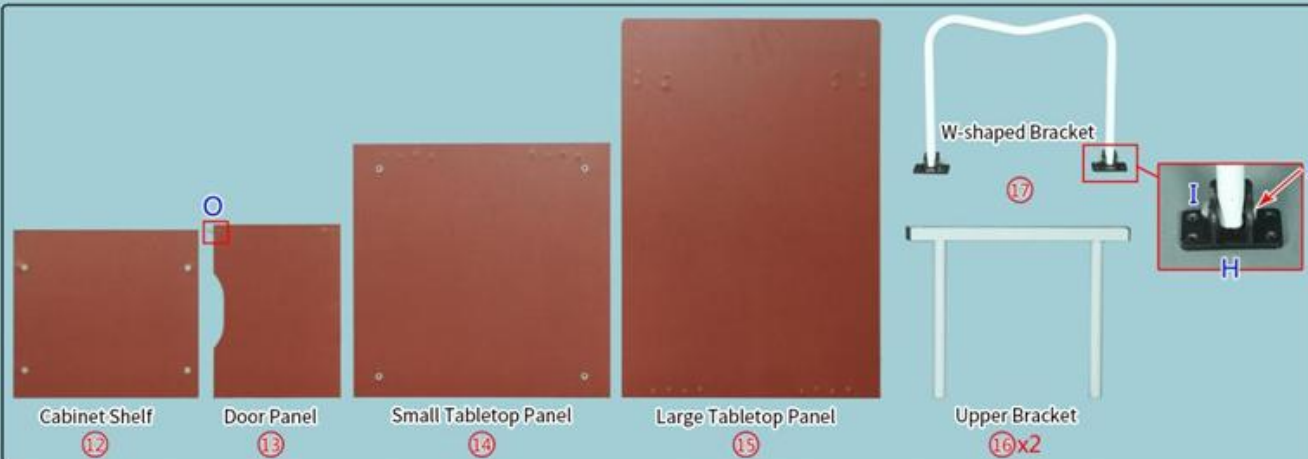
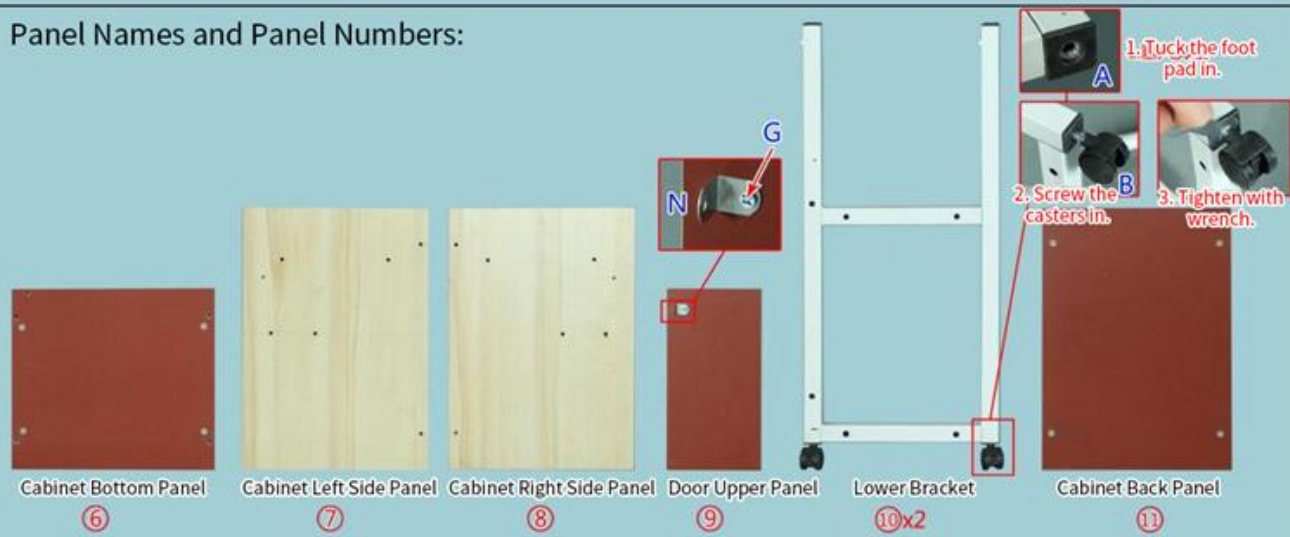


Step 2: Cabinet Boy Installation

<1>

Two holes are opposite to each other and are positioned upwards.




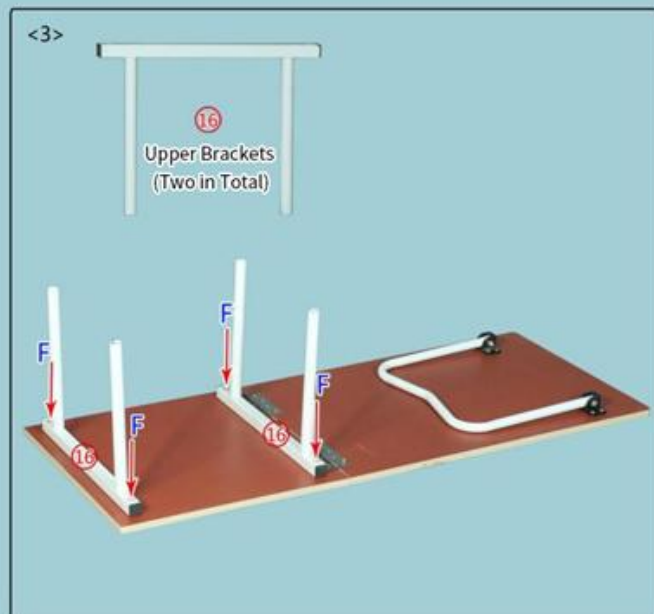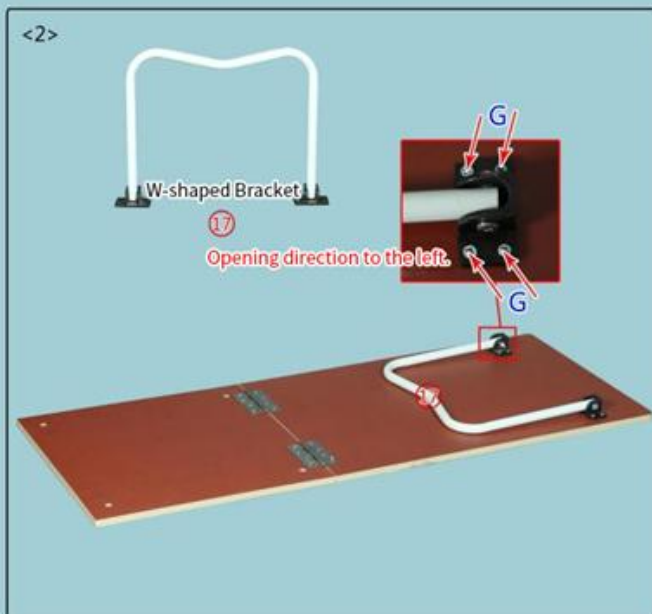

Step 4: Integral Part Installation



<2> Push the drawer in slowly.
Method 1: Insert the metal pin after pushing the drawer in.
Method 2: Insert the metal pin and push the drawer in at a 45 degree angle.

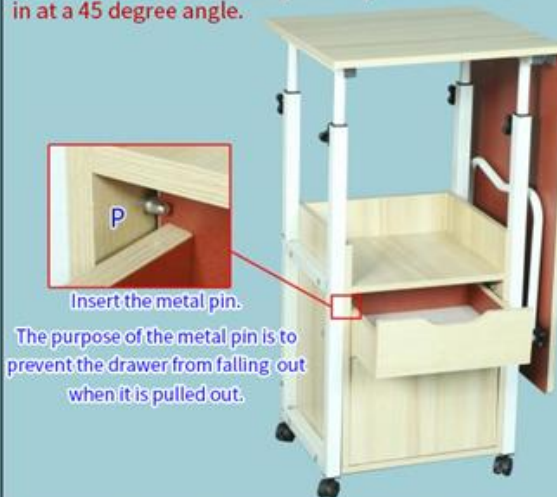

<3> Installation Completed

Completed Image



