

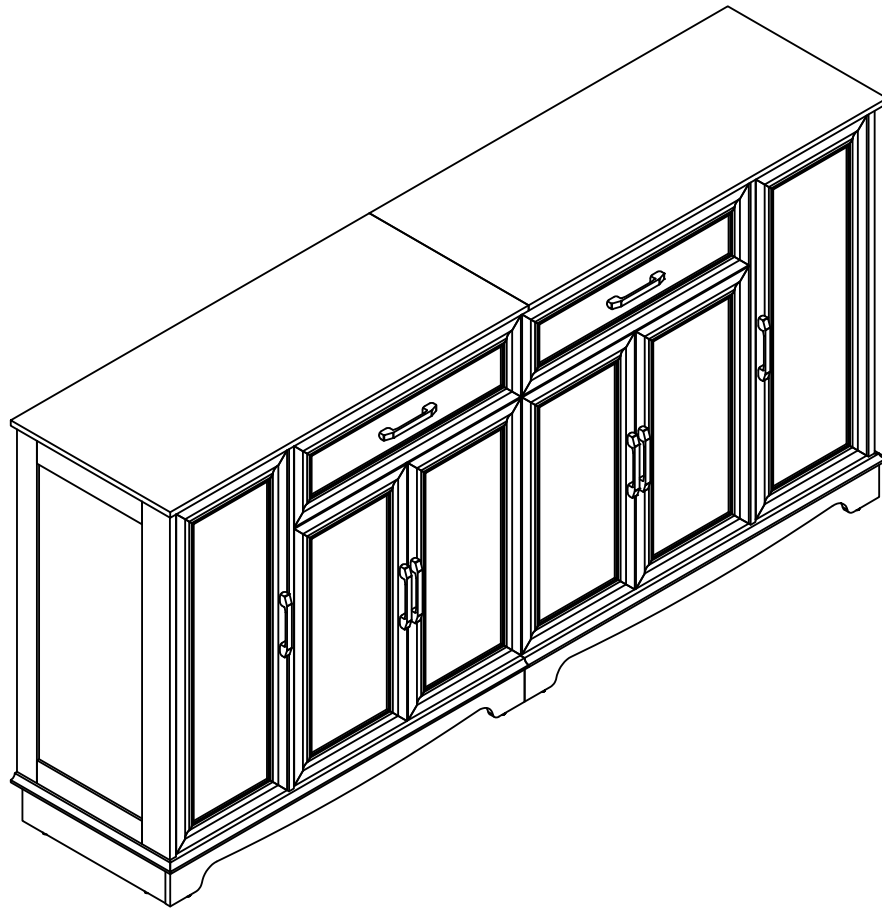
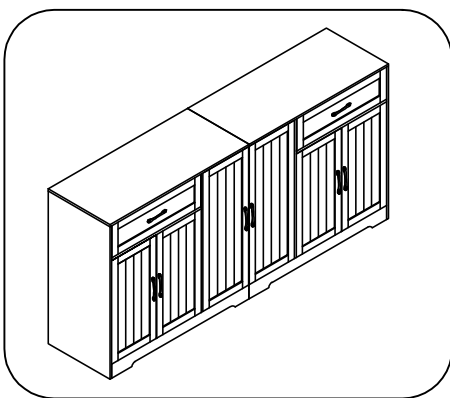


ASSEMBLING INSTRUCTION

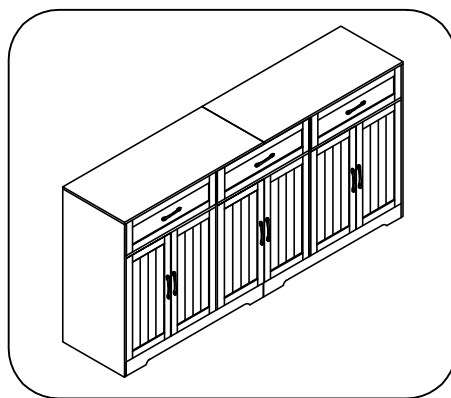

Furniture Set

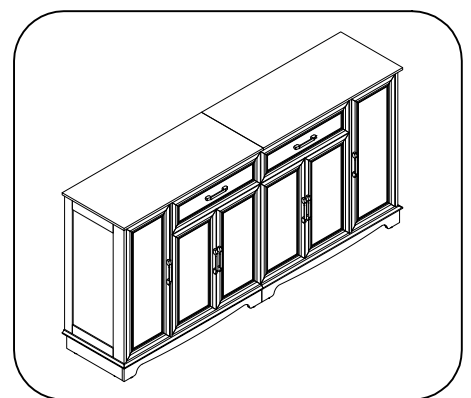

Warm Tips:

If you experience any issues with damaged or missing parts, or notice a quality defect, we kindly ask you to share the part number along with photos of the issue. Once we have reviewed and confirmed the details, we will provide appropriate solutions, including arranging a replacement. We sincerely appreciate your understanding and patience! This instruction booklet contains important safety information. please read and keep for future reference.

TIPS BEFORE YOU START



1. Before assembling your furniture, please check that all parts are present and laid out.
2. Before initiating each assembly step, please confirm required parts are identified.
3. Please ensure adequate space and assistance for safe assembly of large items.
4. We recommend assembling the product near its intended placement area to avoid relocation after assembly.
5. We recommend to place components on soft surfaces (e.g., carpet, blanket) during assembly to prevent damage of the item.
6. Please do not overtighten any fittings, as this may damage the product. We recommend hand-tightening rather than using power tools.
7. Please position fully assembled product on flat, stable surfaces with even support.
8. Please do not stand on or use this product as a step ladder.
9. Product is designed exclusively for indoor household use in non-industrial environments.
10. Please lift with proper body mechanics to prevent injury and product damage.


CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Periodically inspect and retighten all fittings as needed to maintain structural integrity.
- ✓ Periodically inspect all screws and retighten if necessary to maintain product stability.
- ✓ For optimal glass cleaning, apply a dedicated glass cleaner using a microfiber cloth to prevent streaks.
- ✓ Avoid liquid contact to prevent structural warping and surface delamination; immediately wipe any spills.
- ✓ Avoid placing hot objects (e.g., hot beverages) directly onto surfaces to prevent thermal shock and permanent discoloration.
- ✓ Lift the unit with multiple personnel using proper technique; dragging or pushing risks structural failure and injury.

ASSEMBLY REQUIREMENTS

- ✓ Equipment: phillips head screwdriver.
- ✓ 2 x adults required.
- ✓ 2m x 2m assembly space required.
- ✓ 1.5 hour assembly time approx.

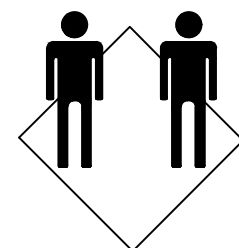

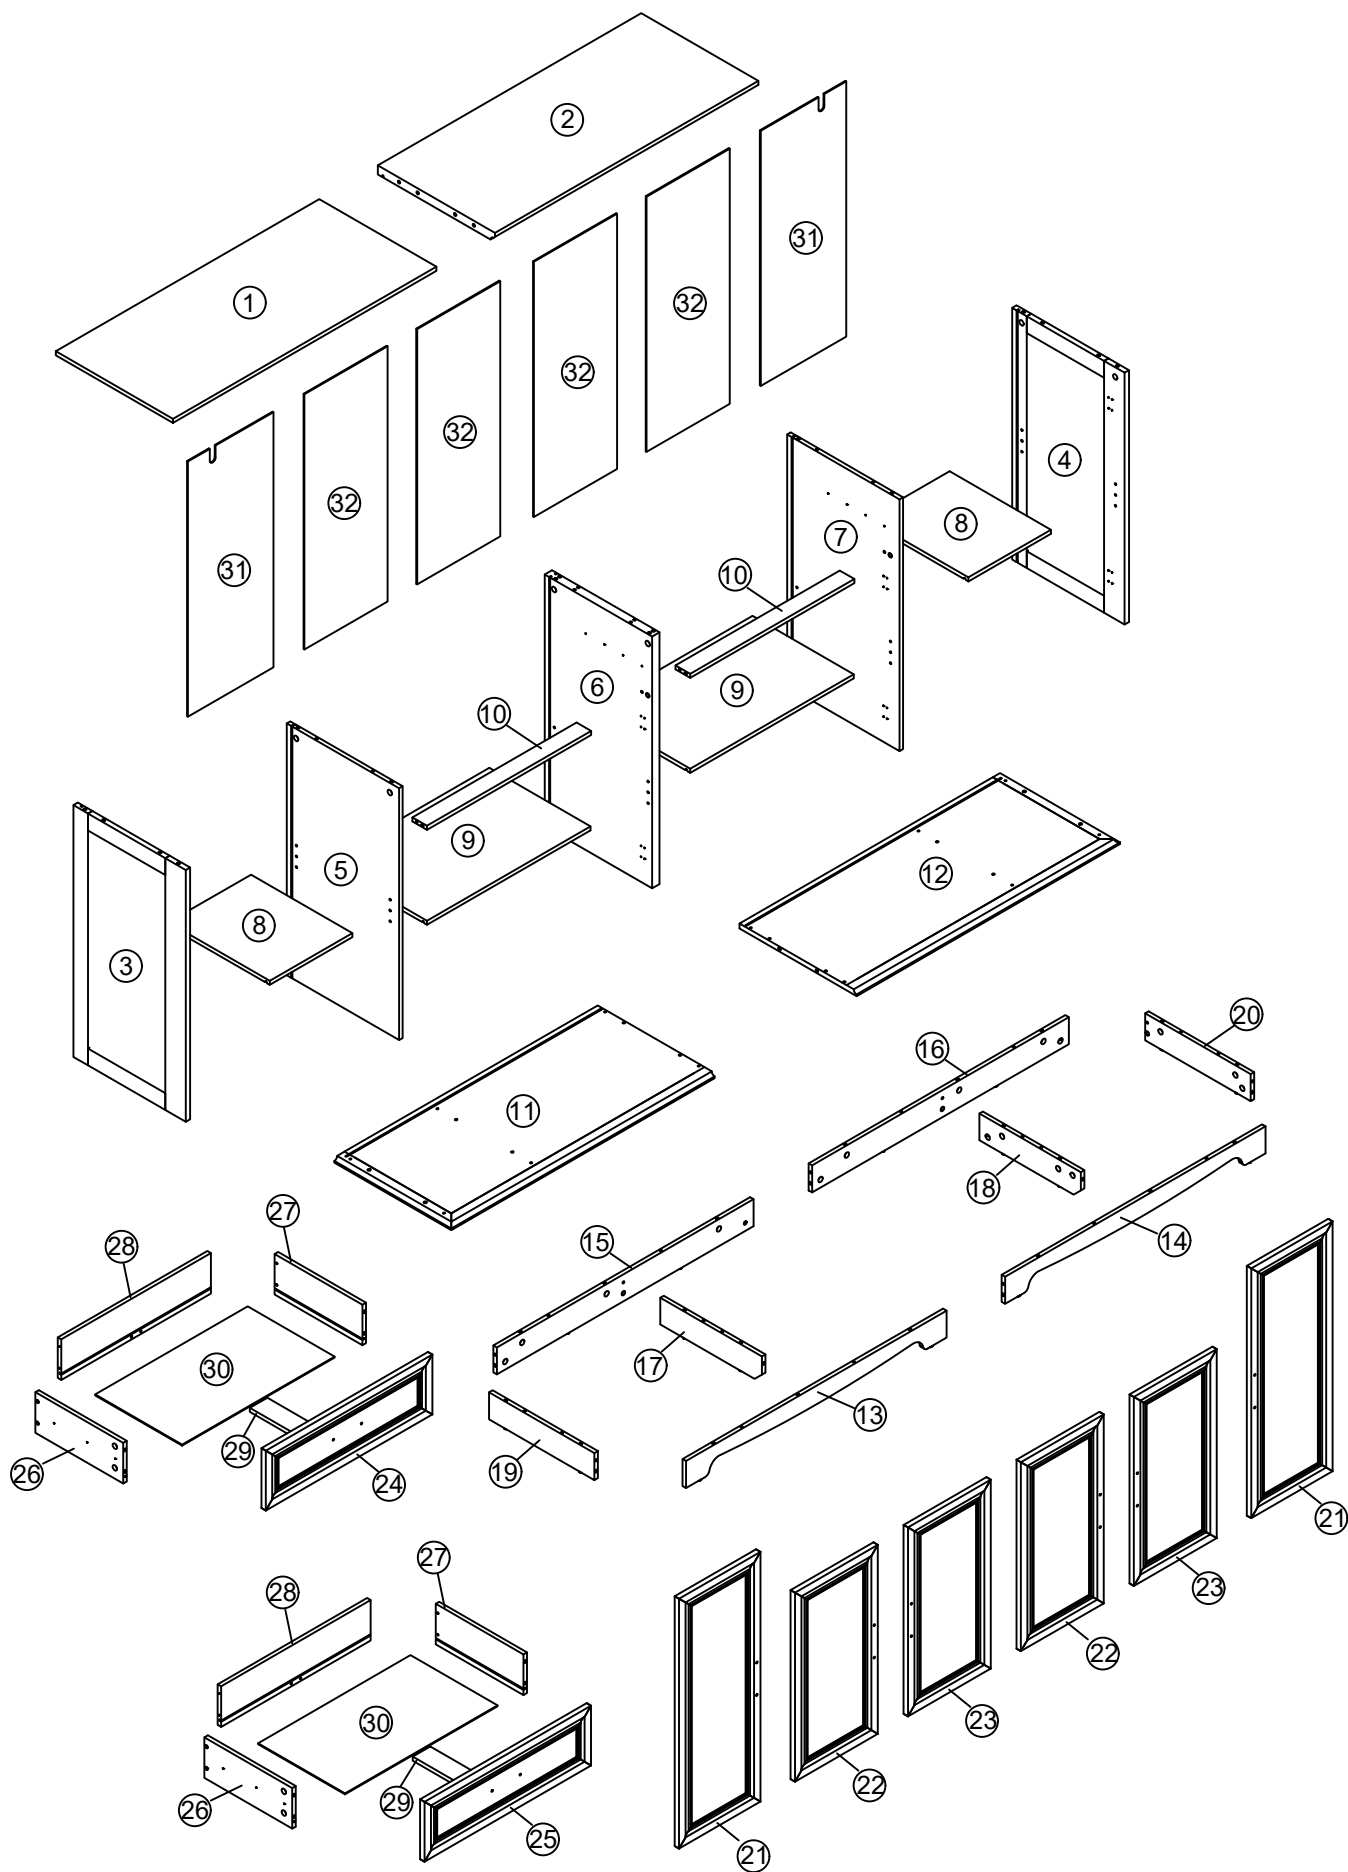




Ø15*9.5mm

A


X58

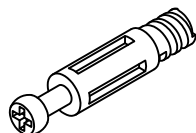

Ø6.5*35mm

B


X42

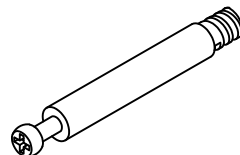

Ø6.5*60mm

C


X4



Ø6*30mm

D


X42

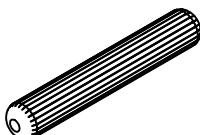

Ø6*40mm

E


X2



Ø8*30mm

F


X8

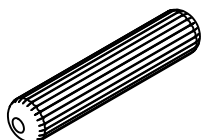

Ø8*40mm

G


X4



Ø5*16mm

H


X16



Ø3.5*12mm

I


X104

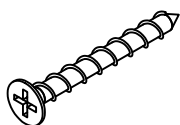

Ø4*35mm

J


X24



M4*9mm

K


X4

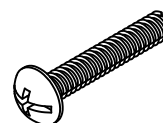

M4*18mm

L


X12

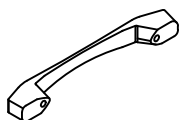

133*12.5*18mm

M


X8

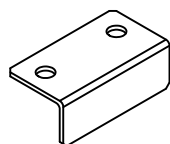

30*16*11mm

N


X2

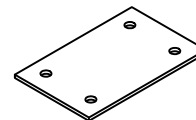

60*38*1.5mm

O


X2

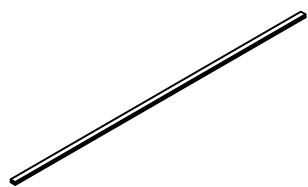

744*12*6.5mm

P

X2

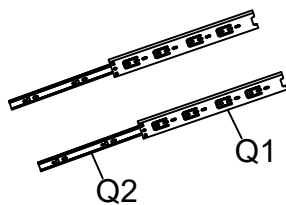

300mm

Q


X2set



Ø9.5*10mm

R


X4

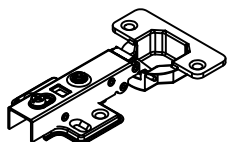

Ø26mm

S

X4

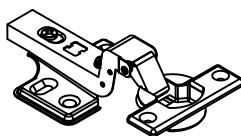


Ø26mm

T

X8




Ø3*14mm



U

X48

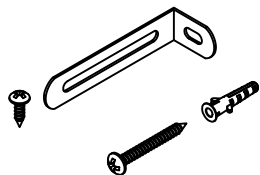

V


X2set



Ø21mm

W


X20



Ø5.5*135mm

X

X1

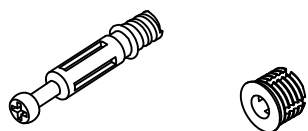

Ø6.5*35mm

Y


X10



Ø4*12mm

Z
















X8















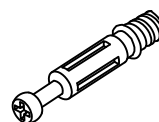




Ø6.5*35mm

AA

X2

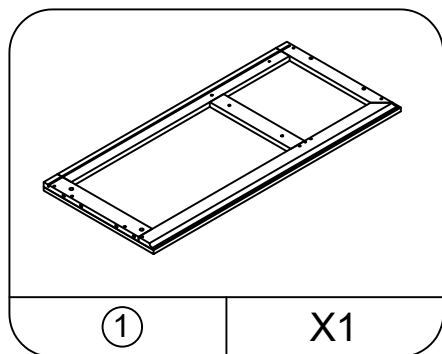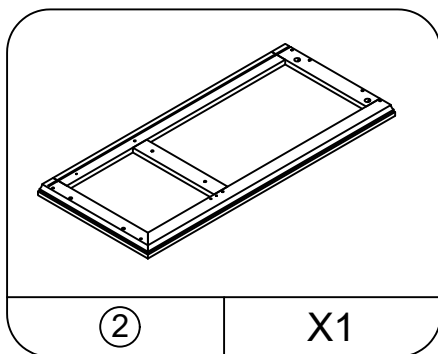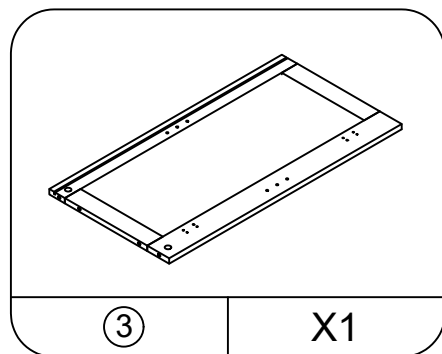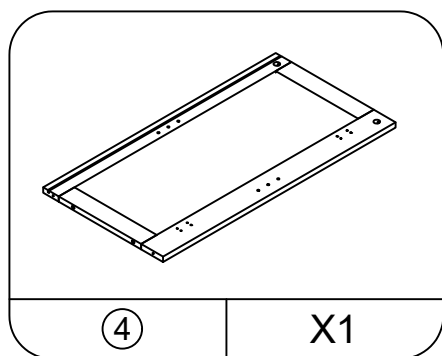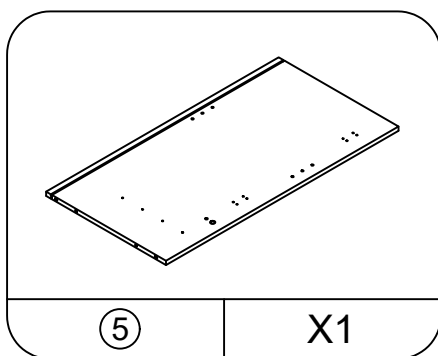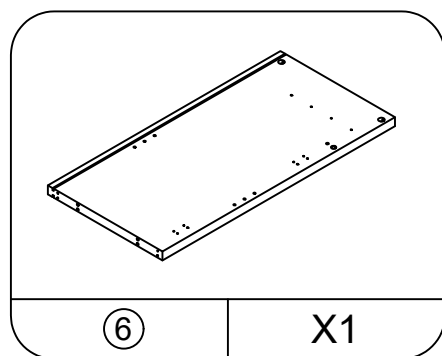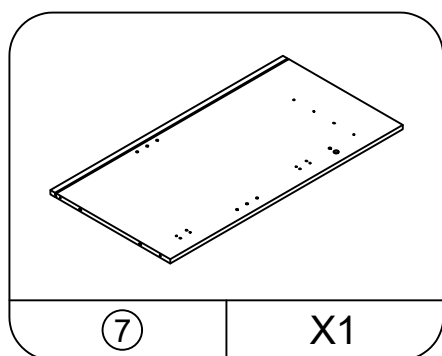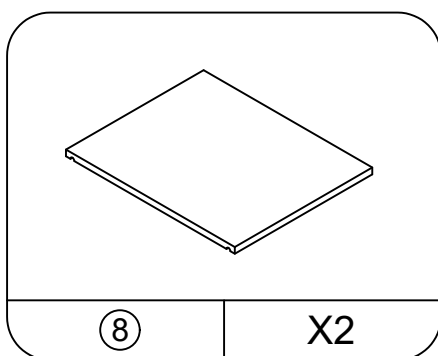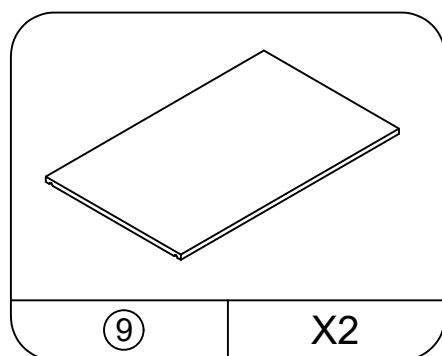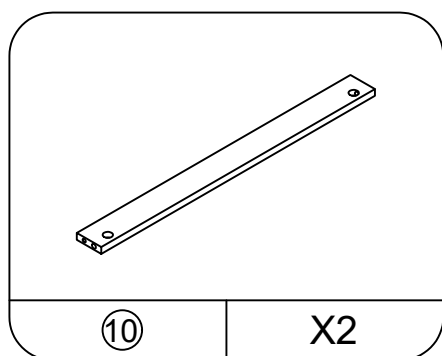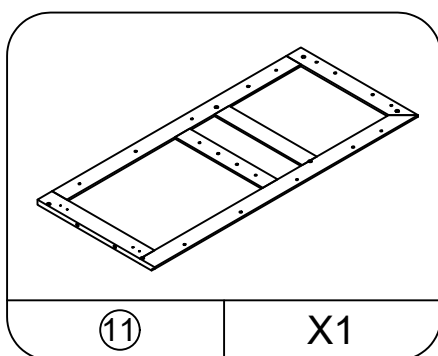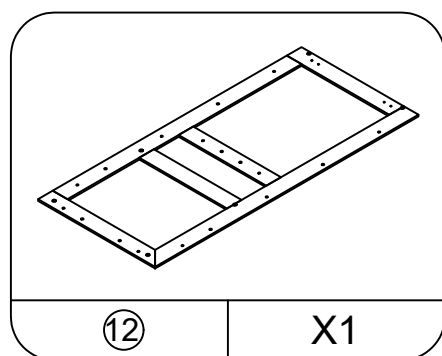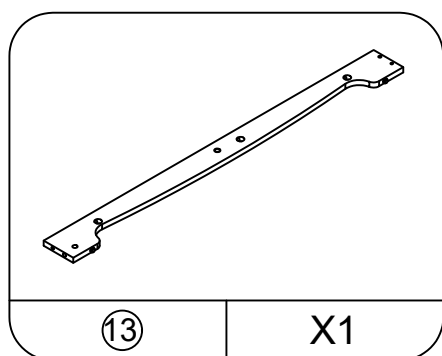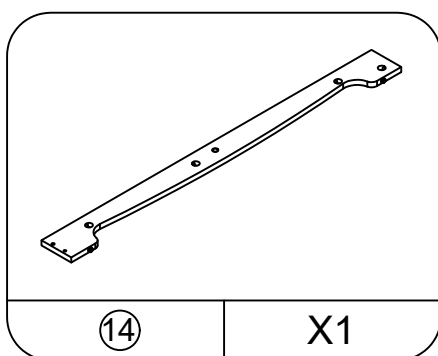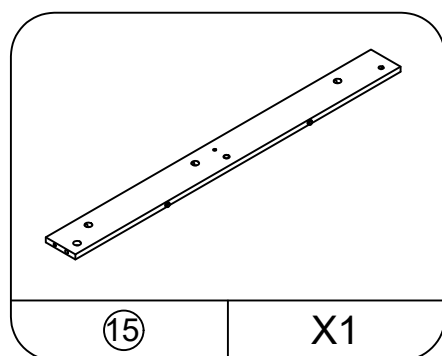

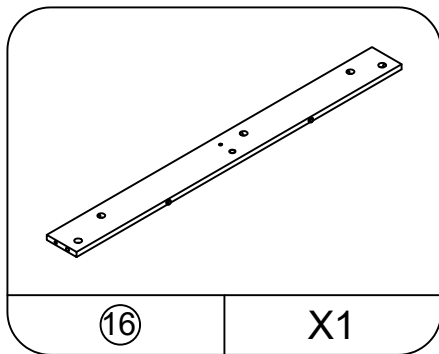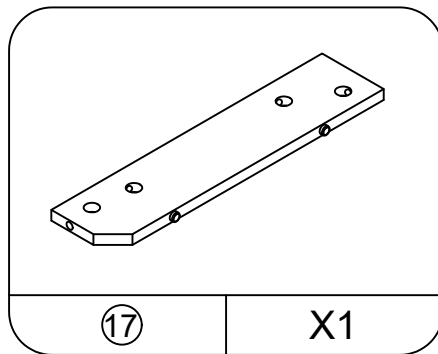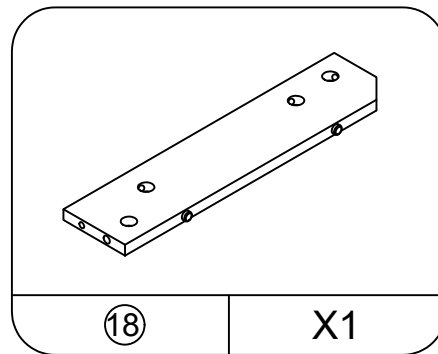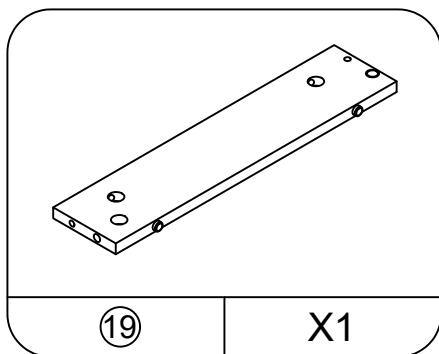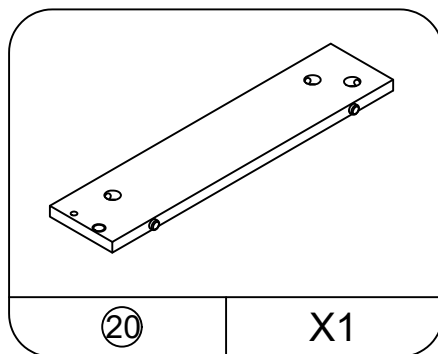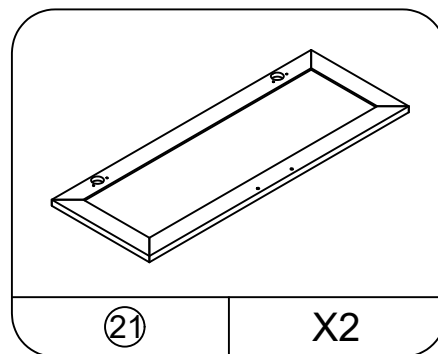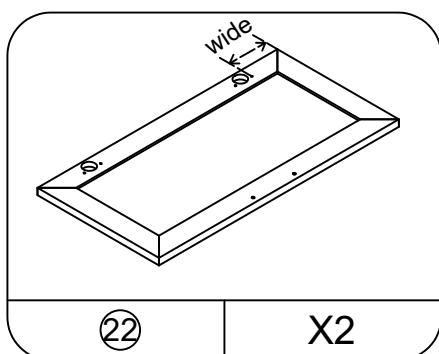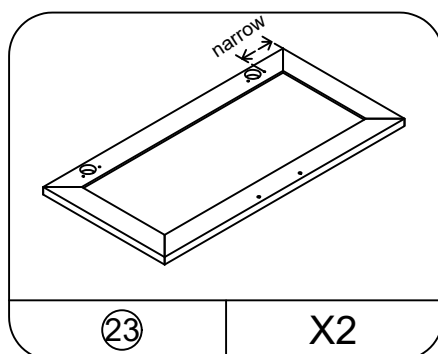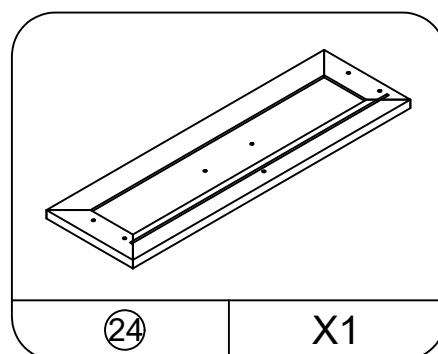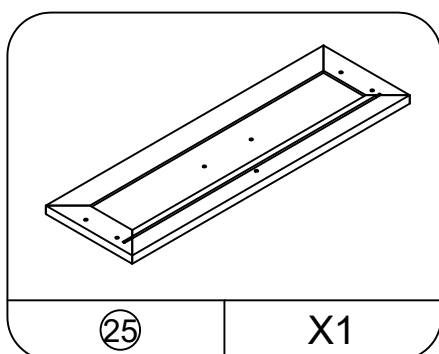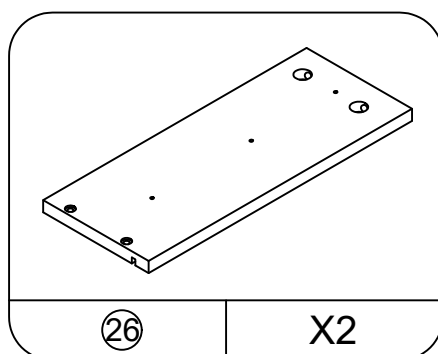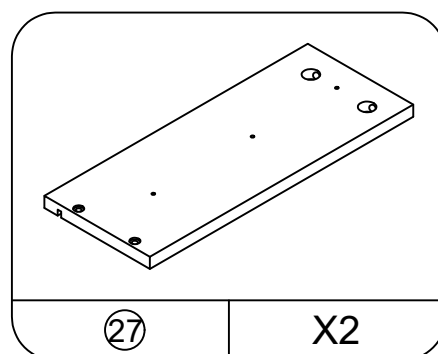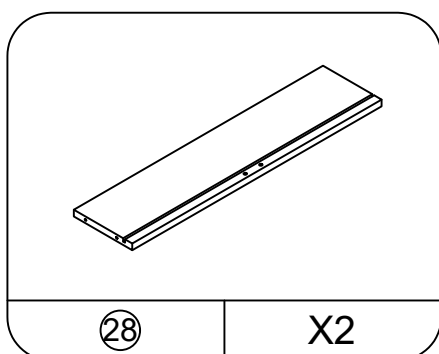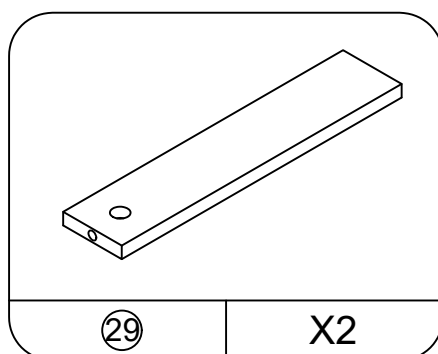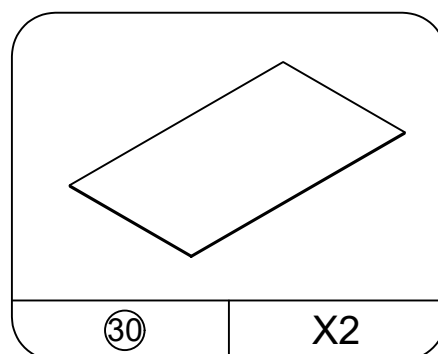

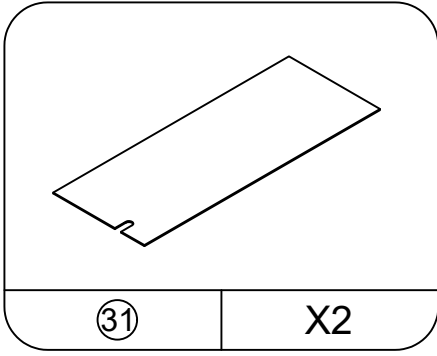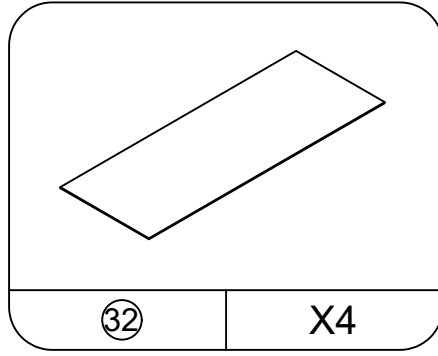


Step:1


WARNING

HOW TO SEPARATE BALL BEARING SLIDE.


- 1) Pull toward arrow to open the slide until its stops and then flip it over.

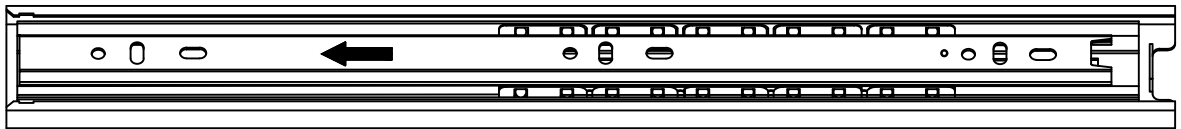


- 2) Push plastic lever down and pull apart.

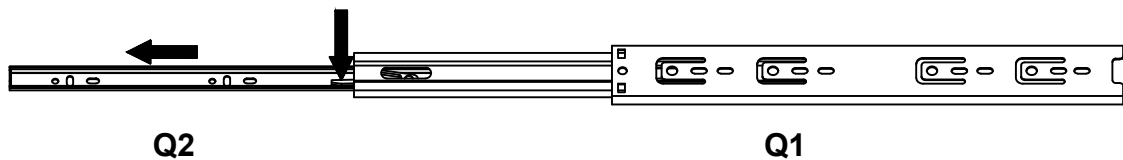

Cabinet Slide Rail

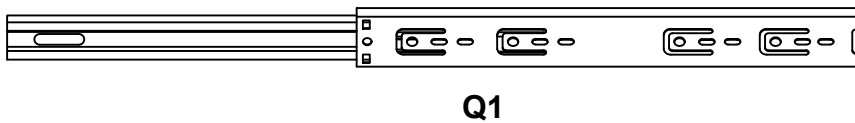



Drawer Slide Rail



Step:2

Slide Opening



I	 Ø3.5*12mm	X4
Q1	 300mm	X1
Y	 Ø6.5*35mm	X1

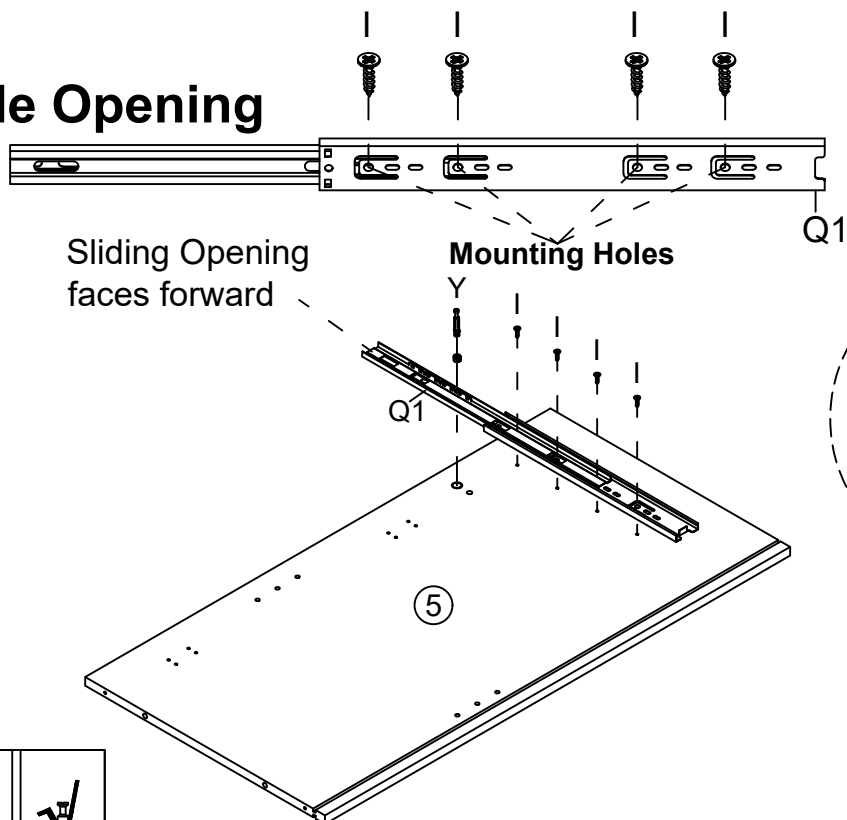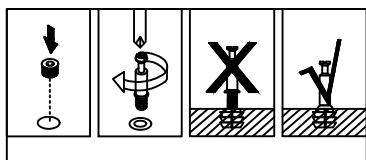

Step:3

Slide Opening

I	 Ø3.5*12mm	X4
Q1	 300mm	X1
Y	 Ø6.5*35mm	X1

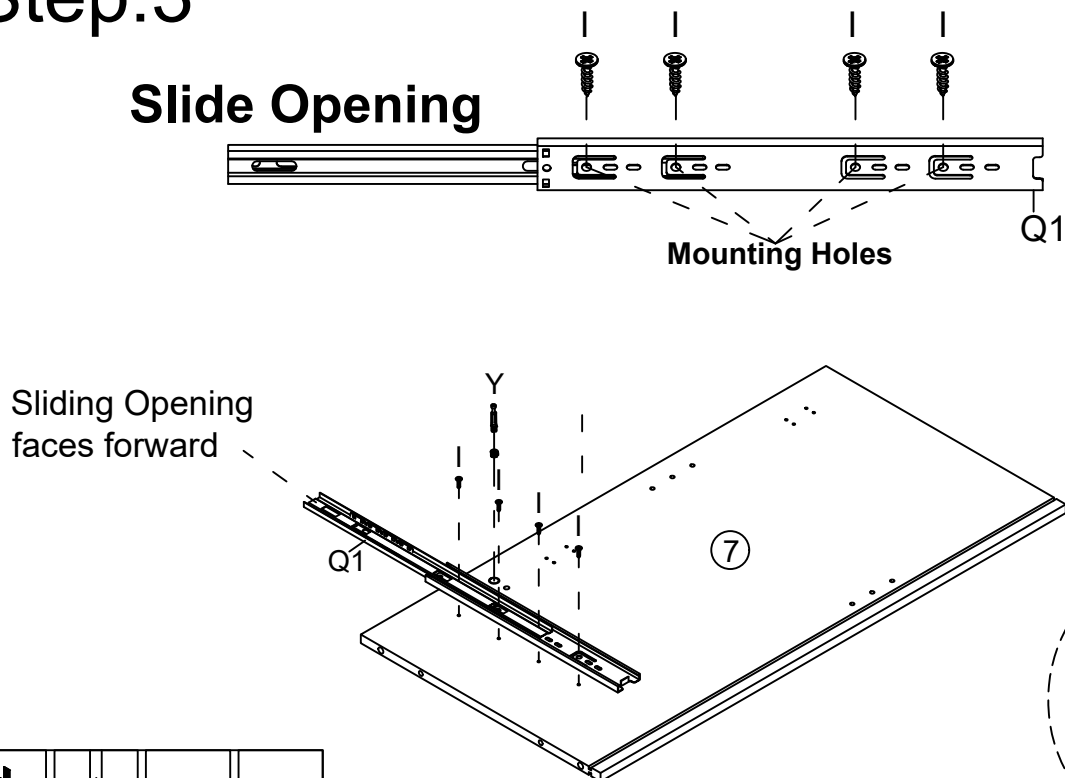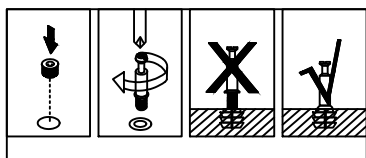

Step:4

Slide Opening

Sliding Opening
faces forward



Mounting Holes

Q1


FLIP OVER

Sliding Opening
faces forward



I	 Ø3.5*12mm	X8
Q1	 300mm	X2
Y	 Ø6.5*35mm	X2

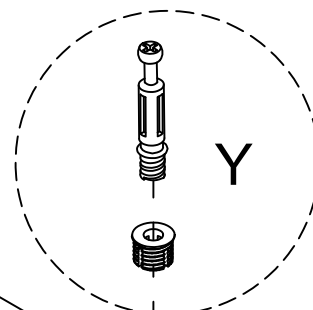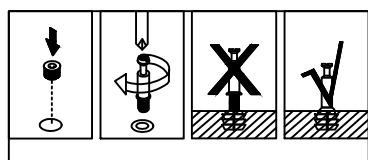


Step:5

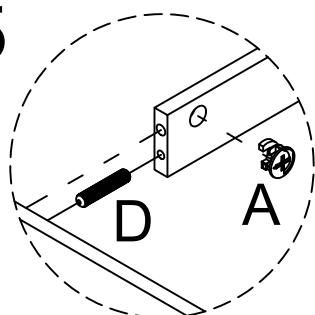


A	 Ø15*9.5mm	X2
D	 Ø6*30mm	X2

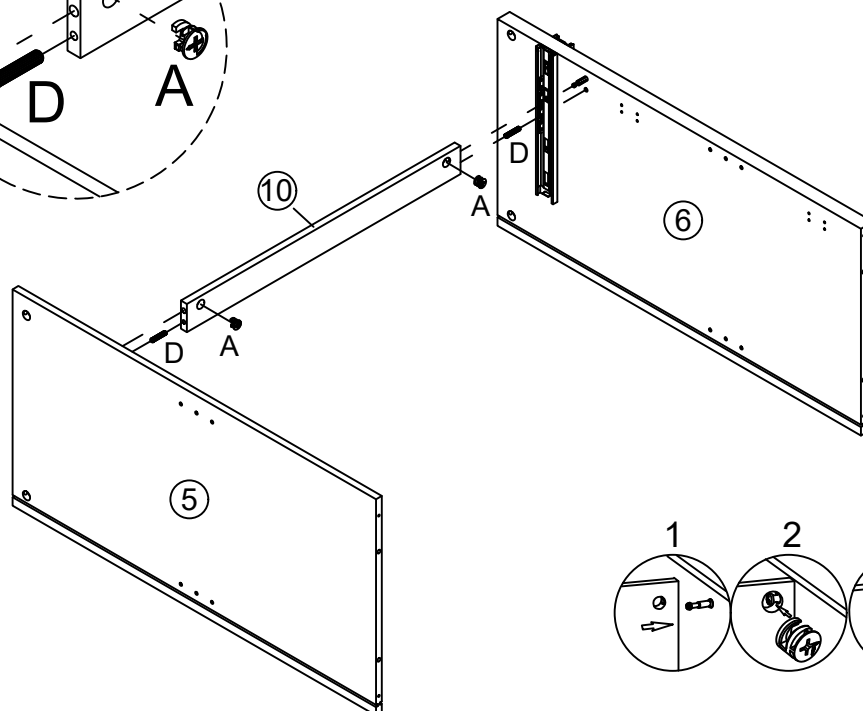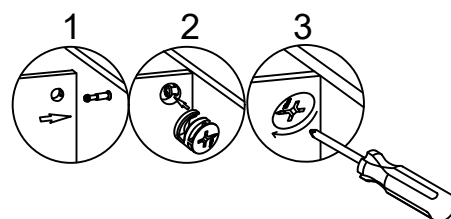

Step:6


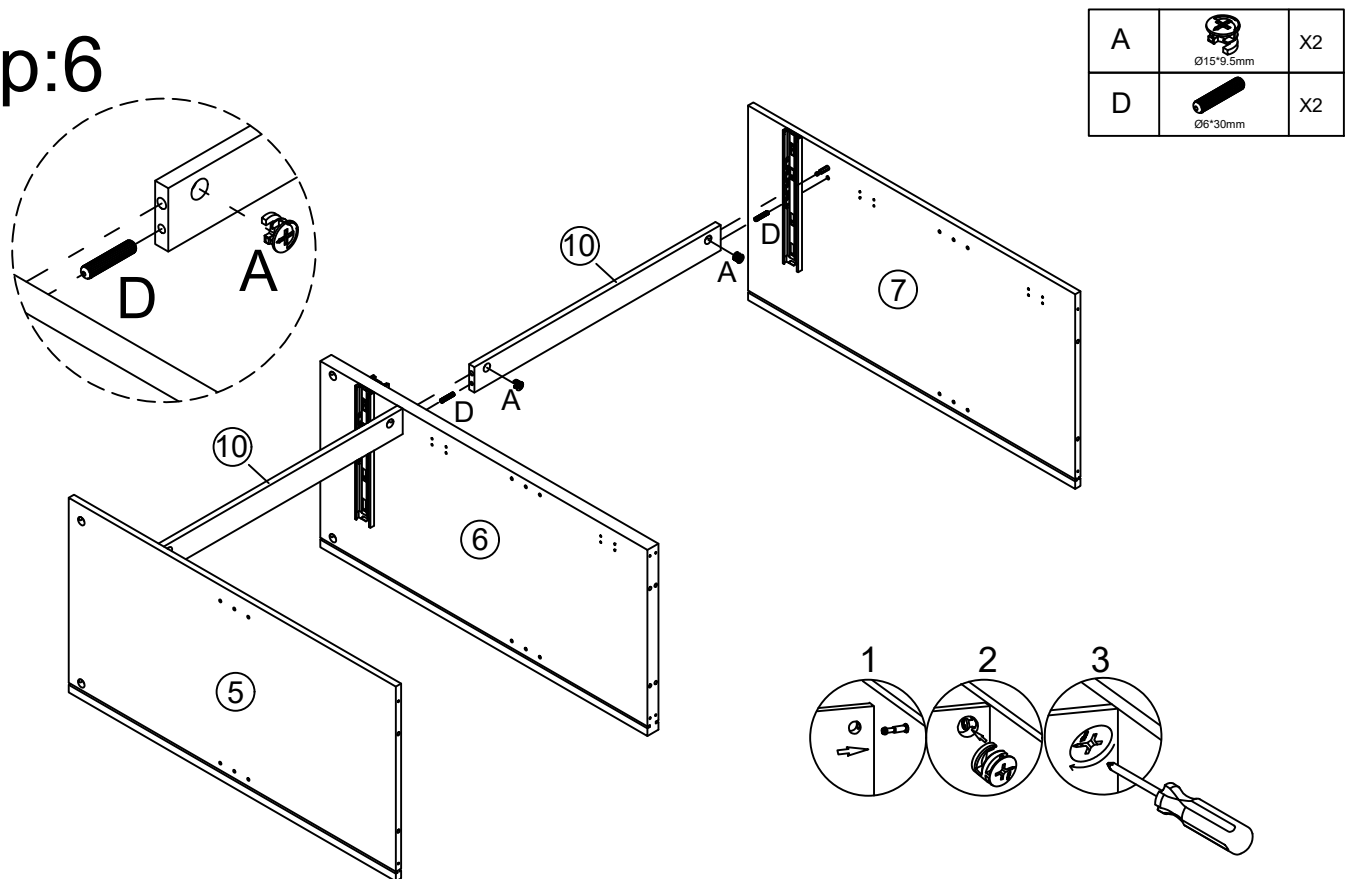


Step:7

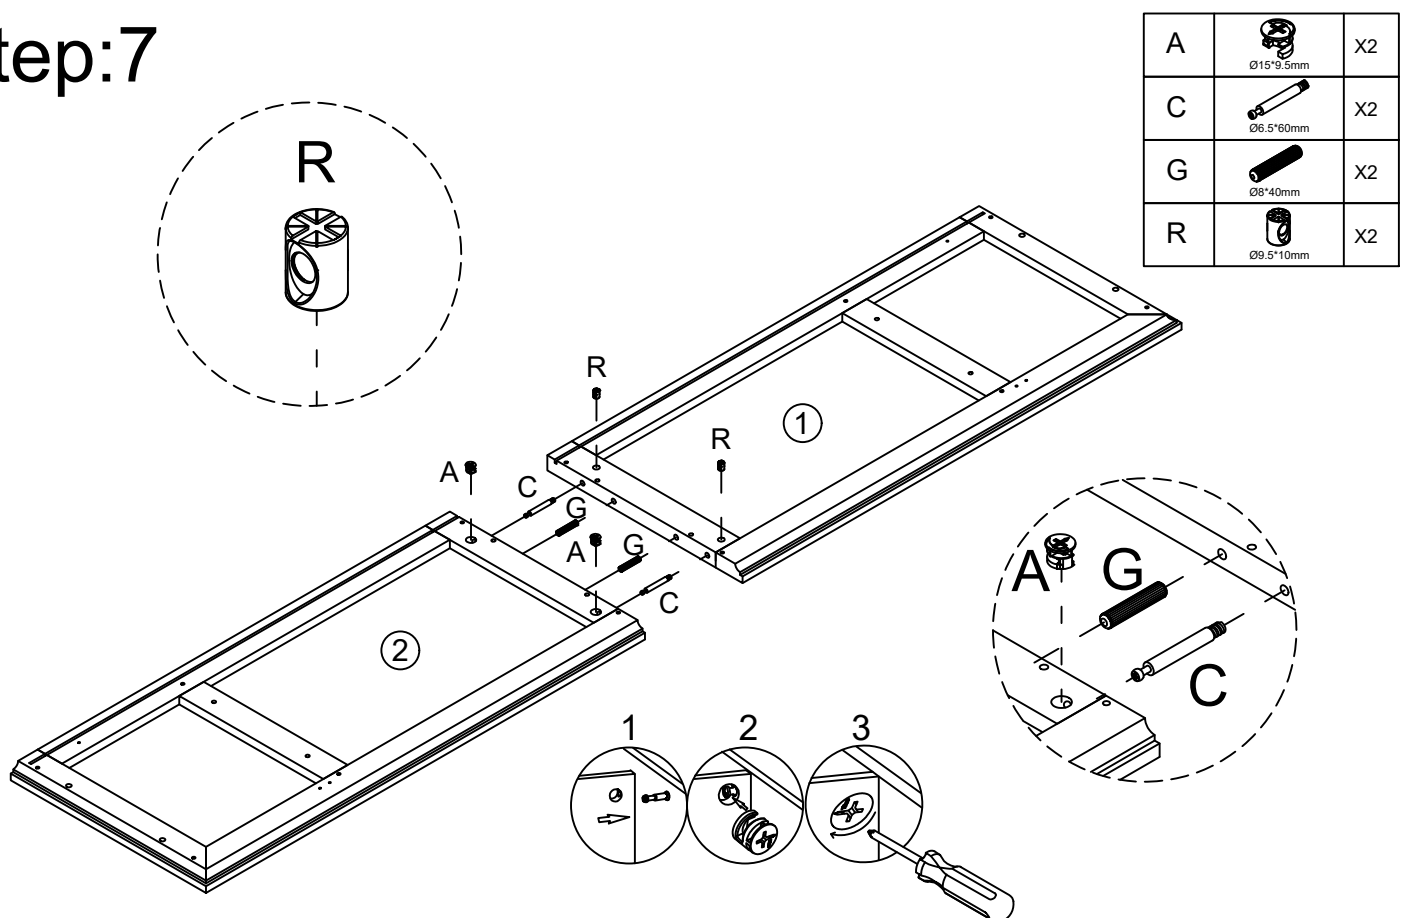

Step:8

B	 Ø6.5*35mm	X12
I	 Ø3.5*12mm	X4
N	 30*16*11mm	X2
V	 30*16*11mm	X2

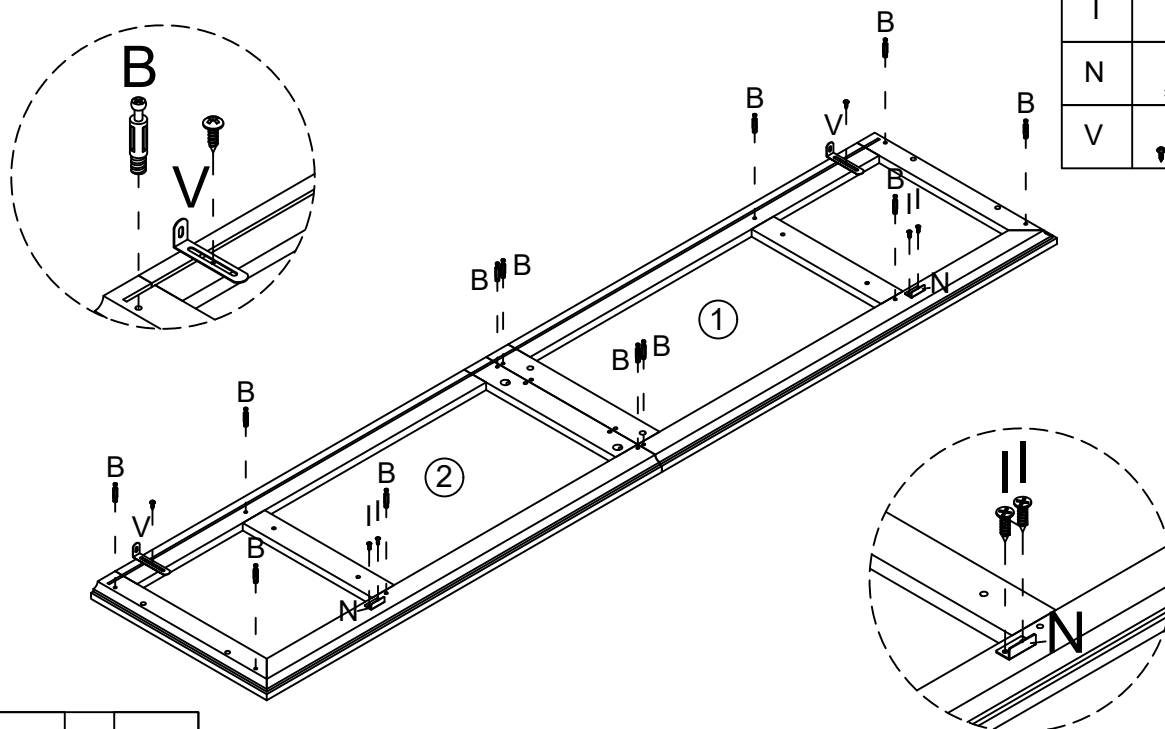
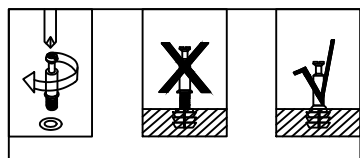


Step:9




Two people are needed to assist.


A	 Ø15*9.5mm	X8
D	 Ø6*30mm	X8

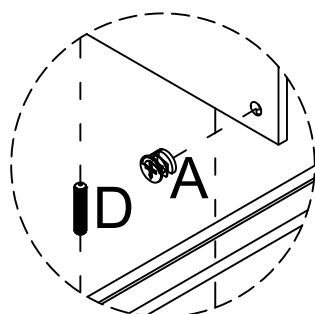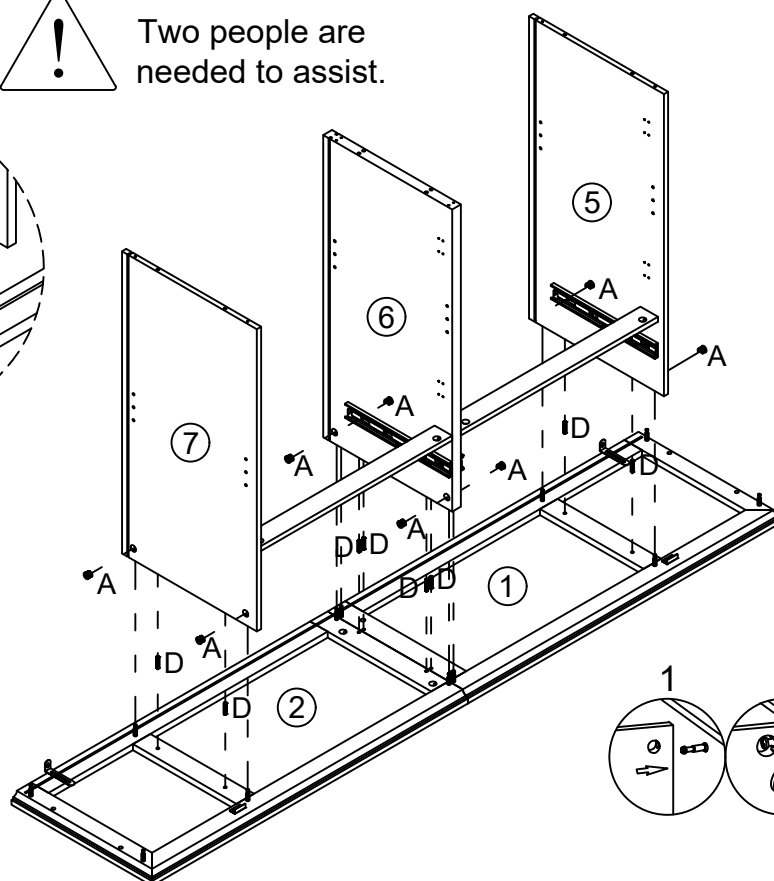

Step:10

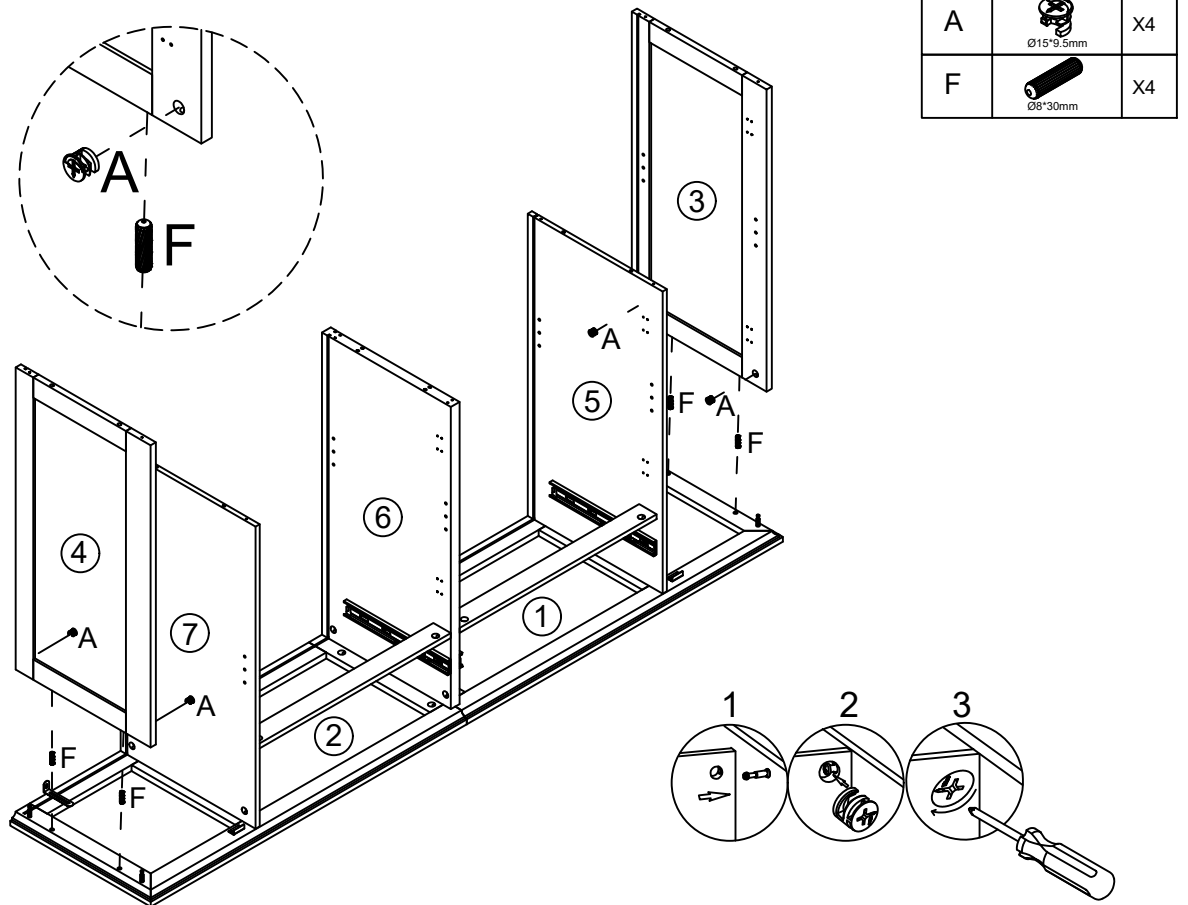


Step:11

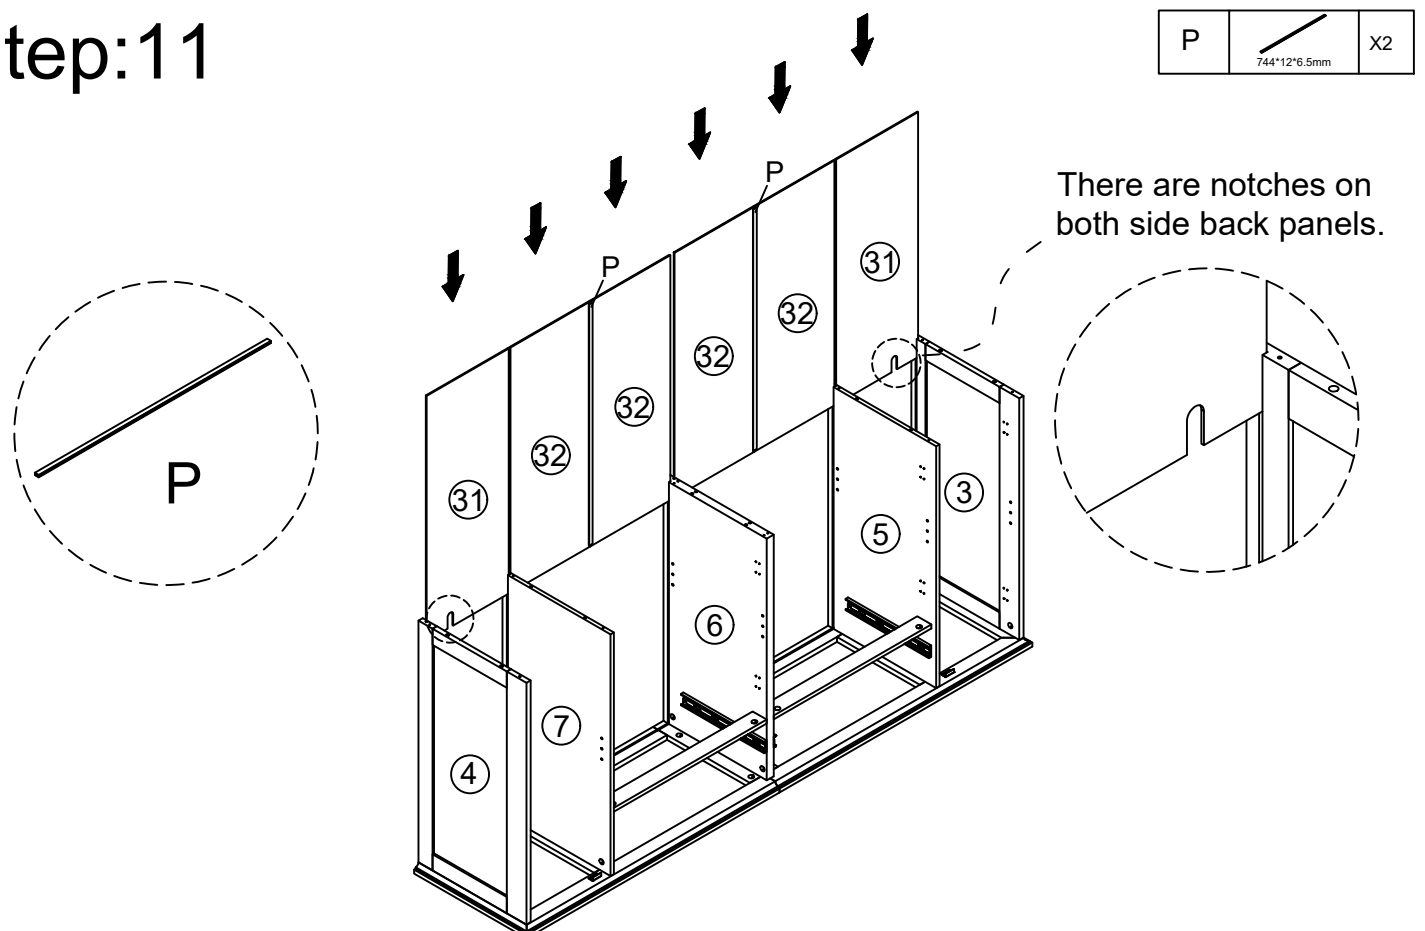


Step:12

G	 Ø8*40mm	X2
---	--	----


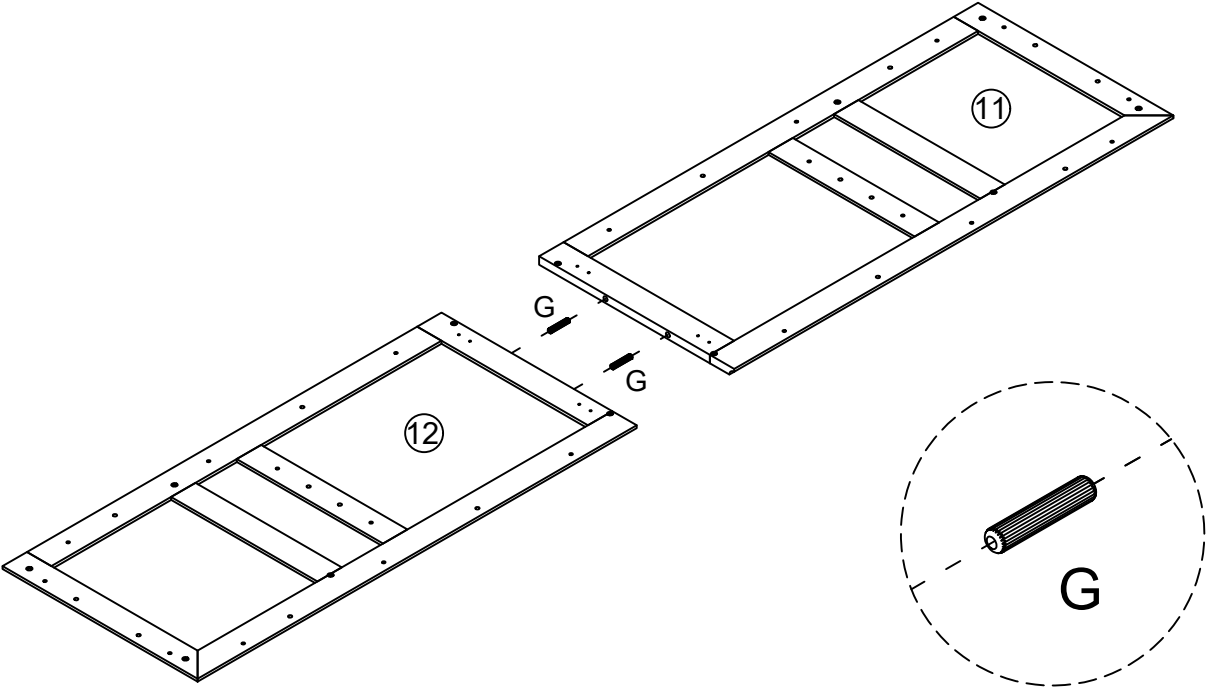


Step:13


O	 60*38*1.5mm	X2
Z	 Ø4*12mm	X8

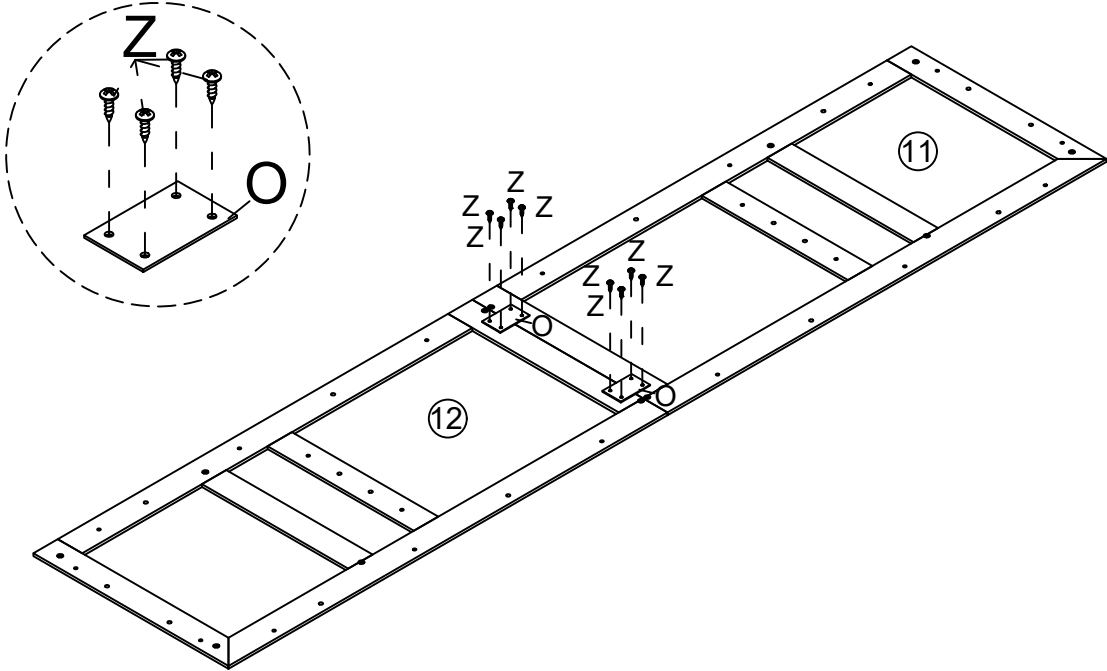




Step:14

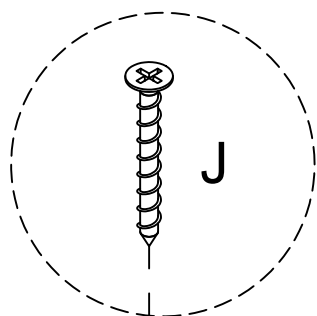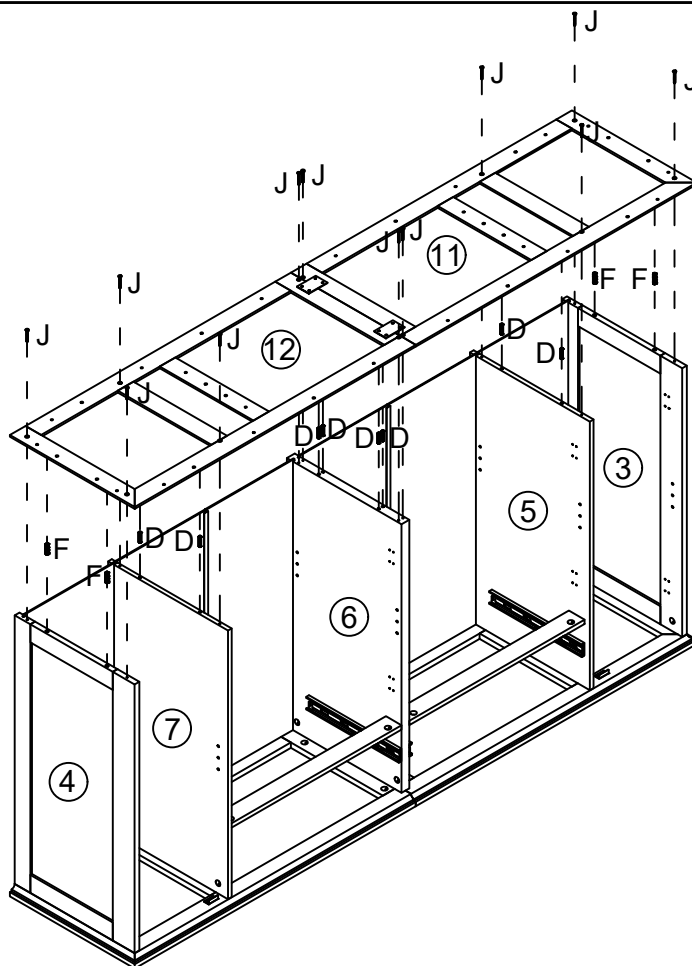




D		X8
F		X4
J		X12

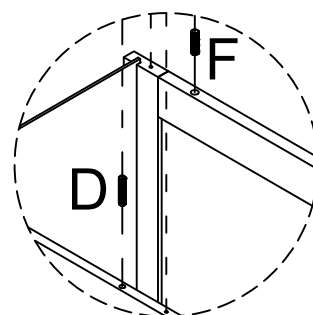


Step:15

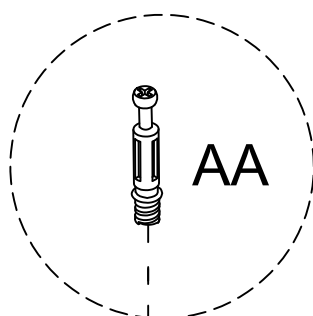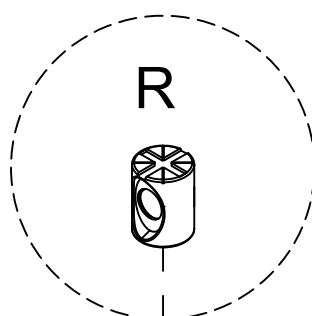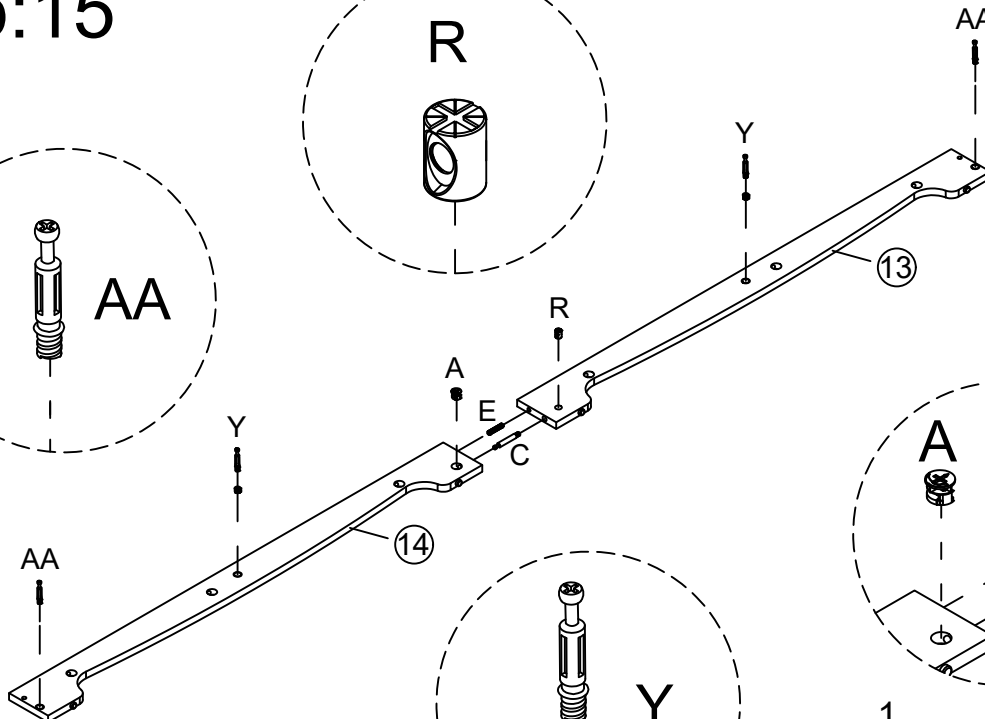


A		X1
C		X1
E		X1
R		X1
Y		X2
AA		X2

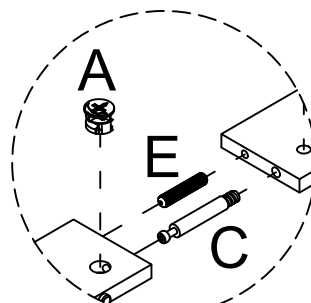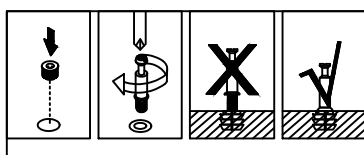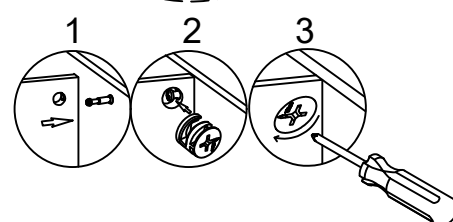

Step:16


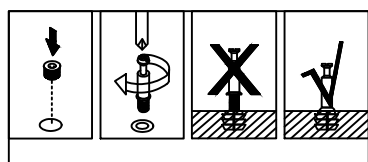


A	 Ø15*9.5mm	X1
C	 Ø6.5*60mm	X1
E	 Ø6*40mm	X1
R	 Ø9.5*10mm	X1
Y	 Ø6.5*35mm	X2

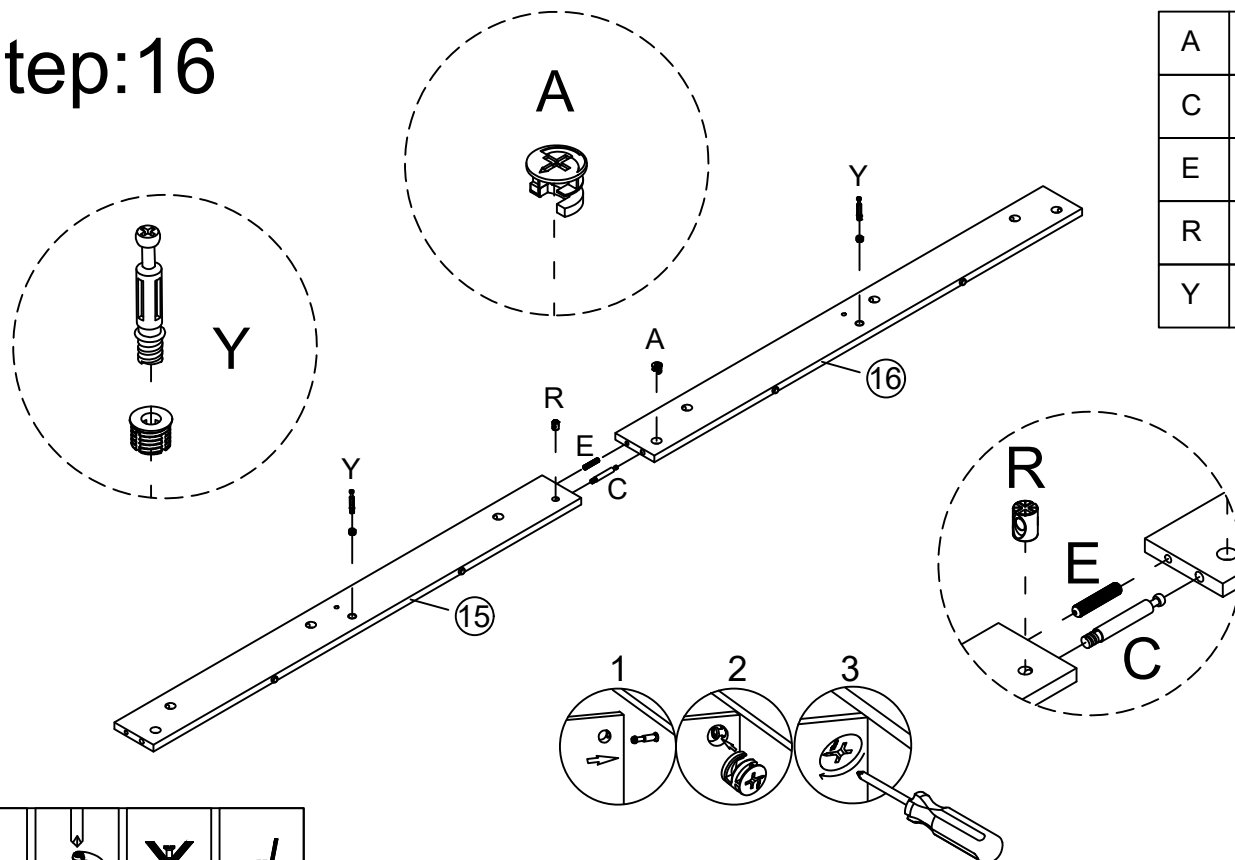


Step:17


Y	 Ø6.5*35mm	X2
---	--	----

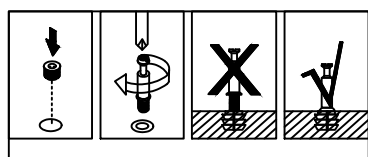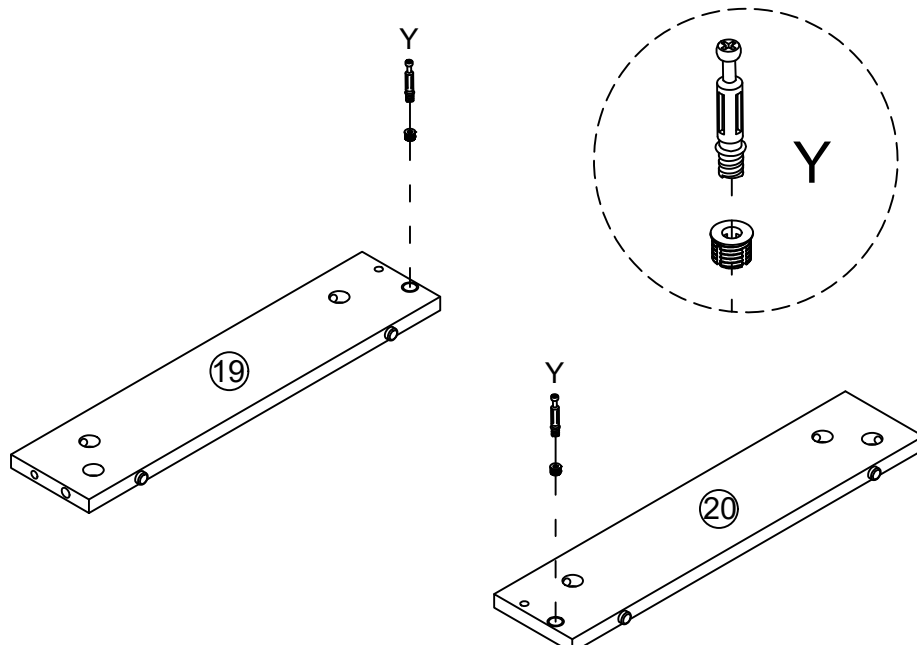

Step:18




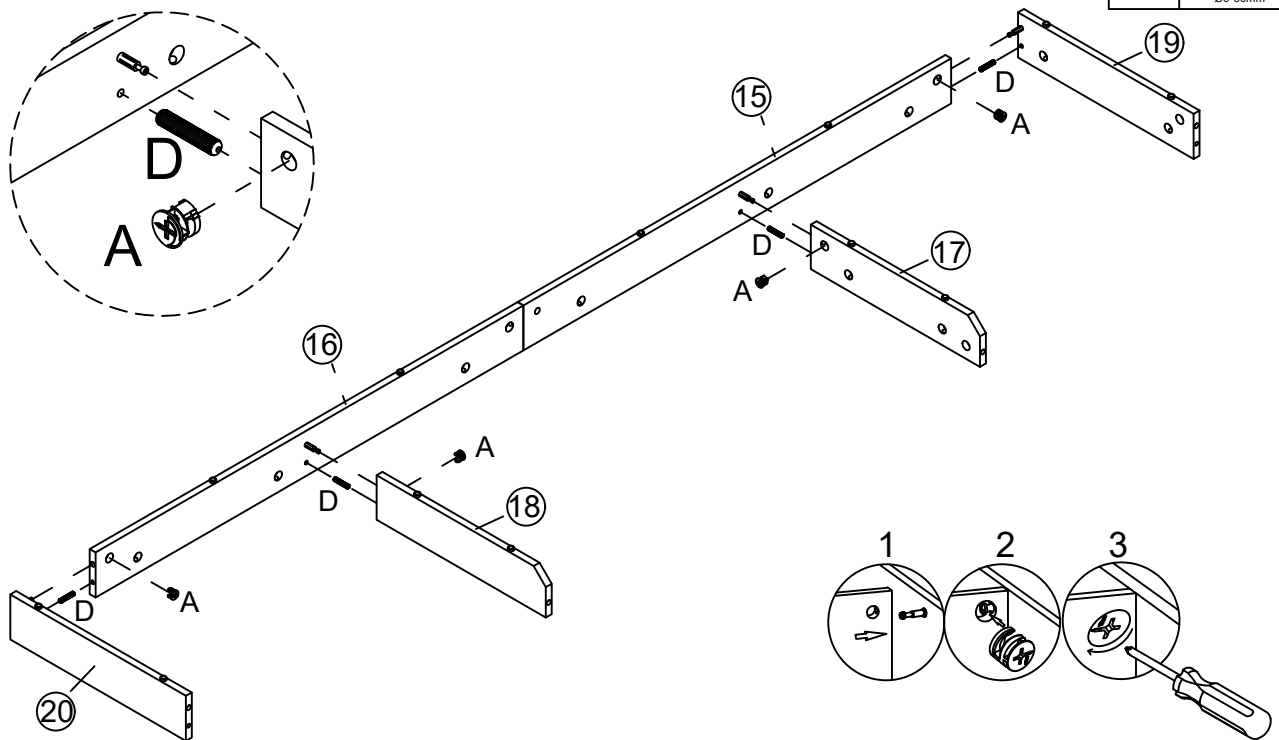


Step:19

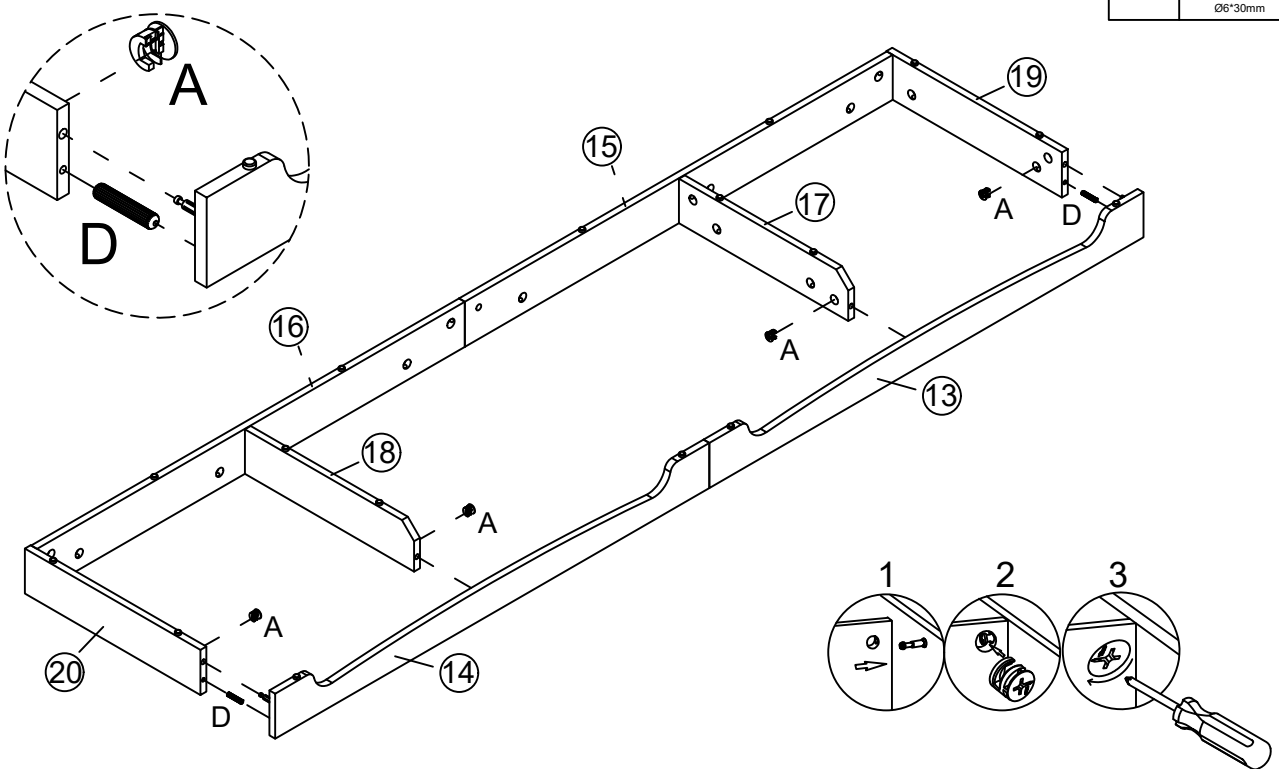




Step:20

B	 Ø6.5*35mm	X20
D	 Ø6*30mm	X16

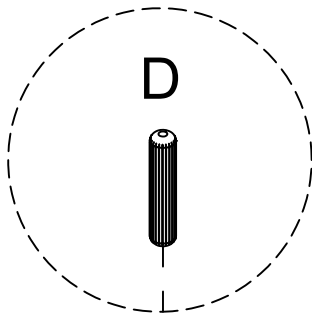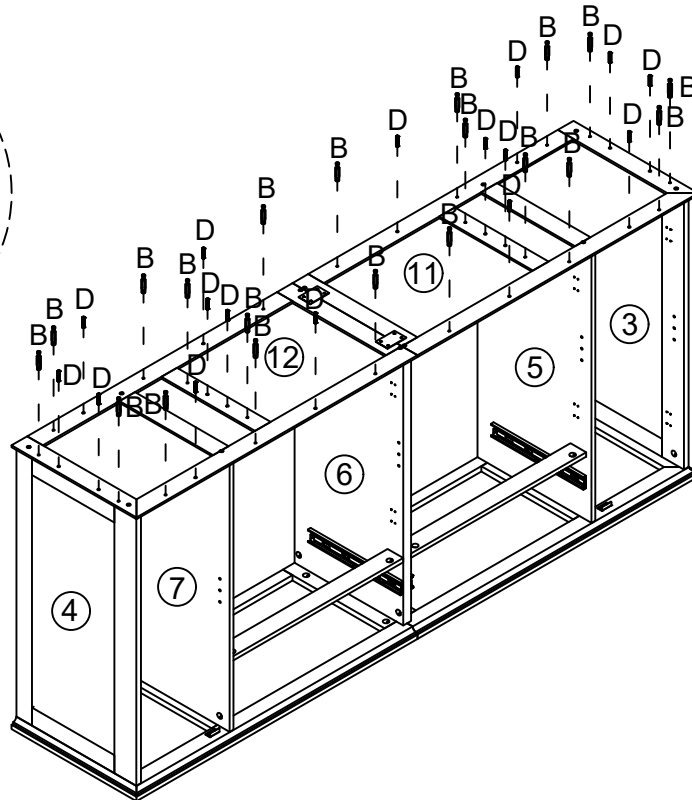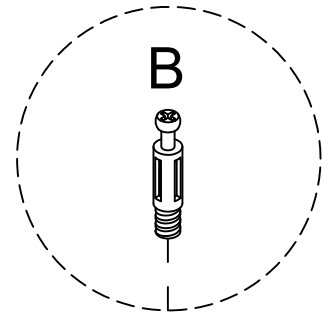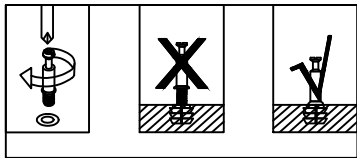


Step:21

A	 Ø15*9.5mm	X20
---	--	-----

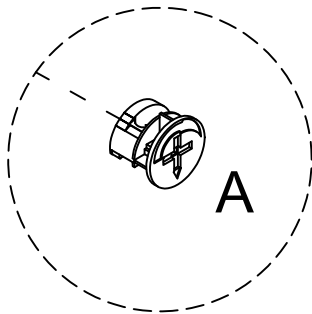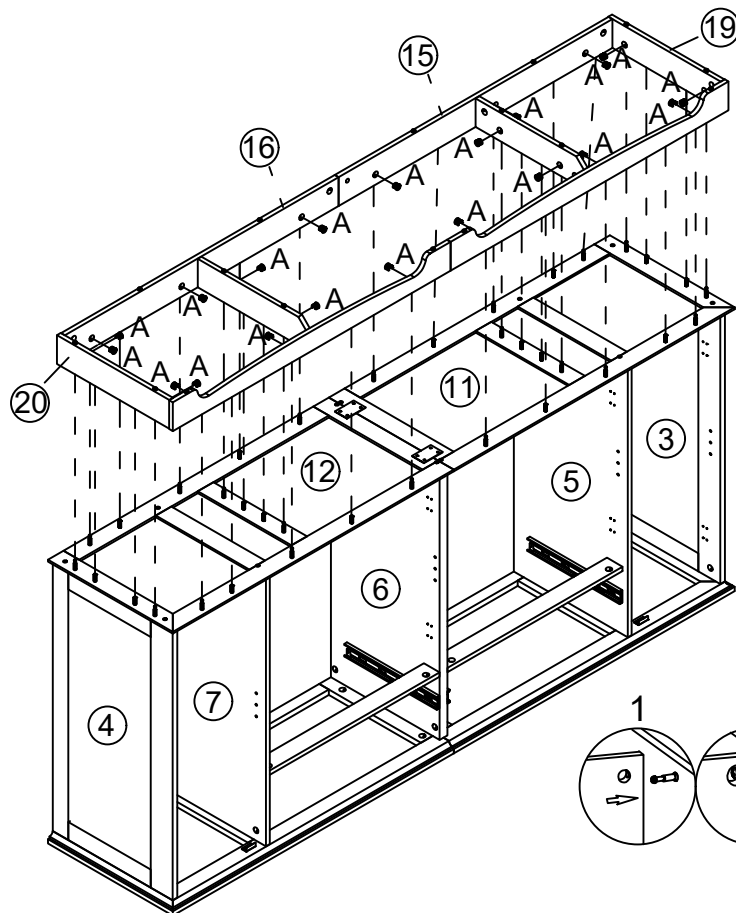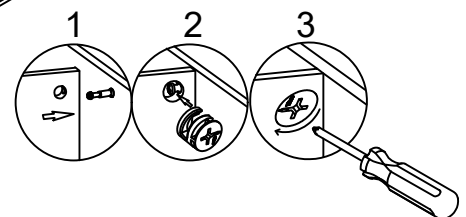

Step:22



U	 Ø3*14mm	X48
---	---	-----

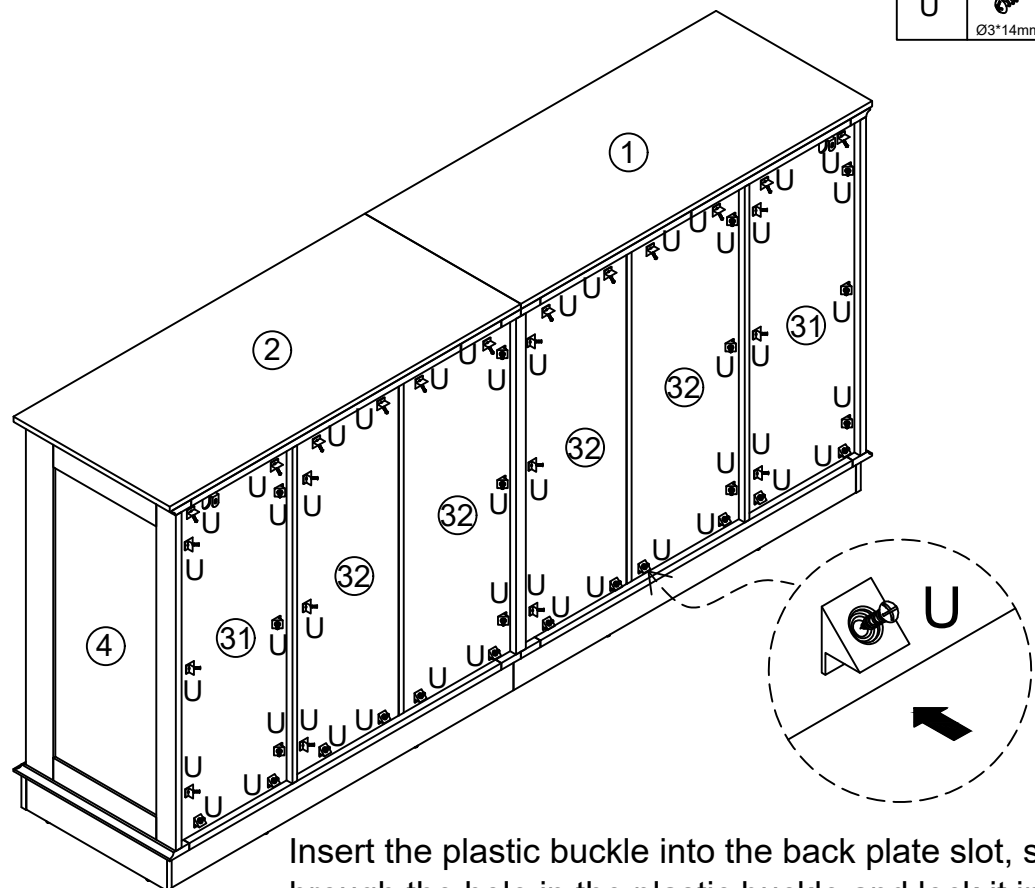



Insert the plastic buckle into the back plate slot, screw through the hole in the plastic buckle and lock it in place.

Step:23



H	 Ø5*16mm	X16
---	---	-----

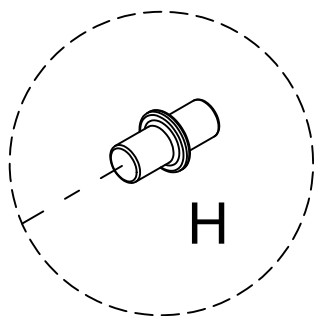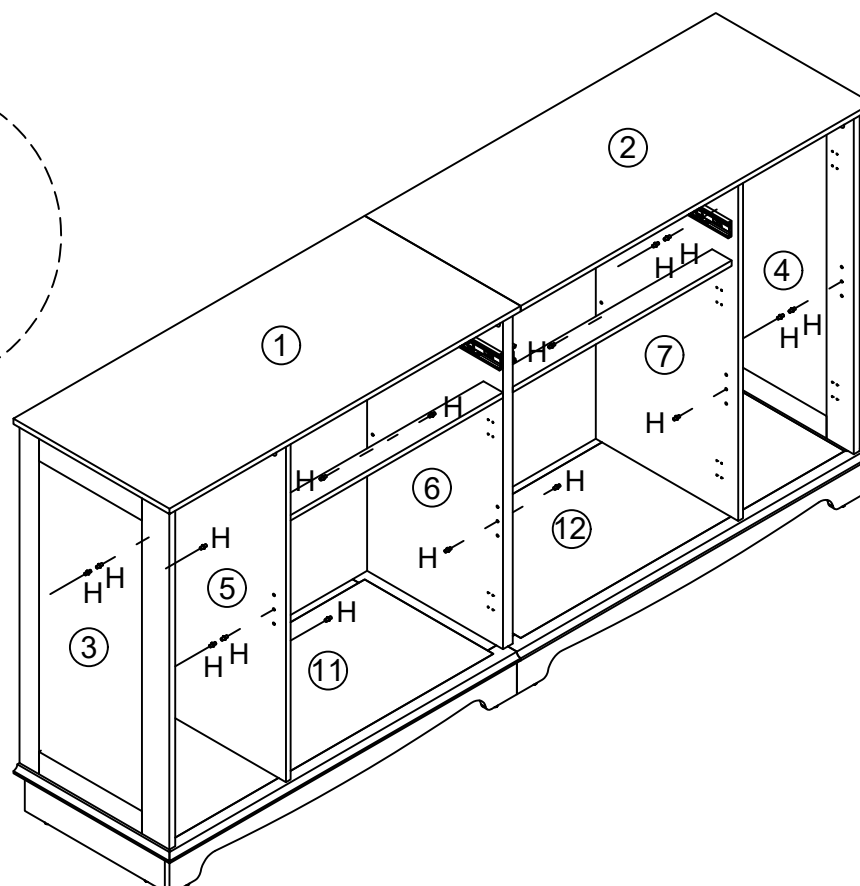


Step:24

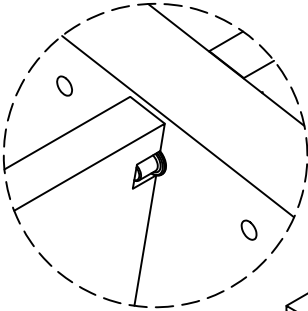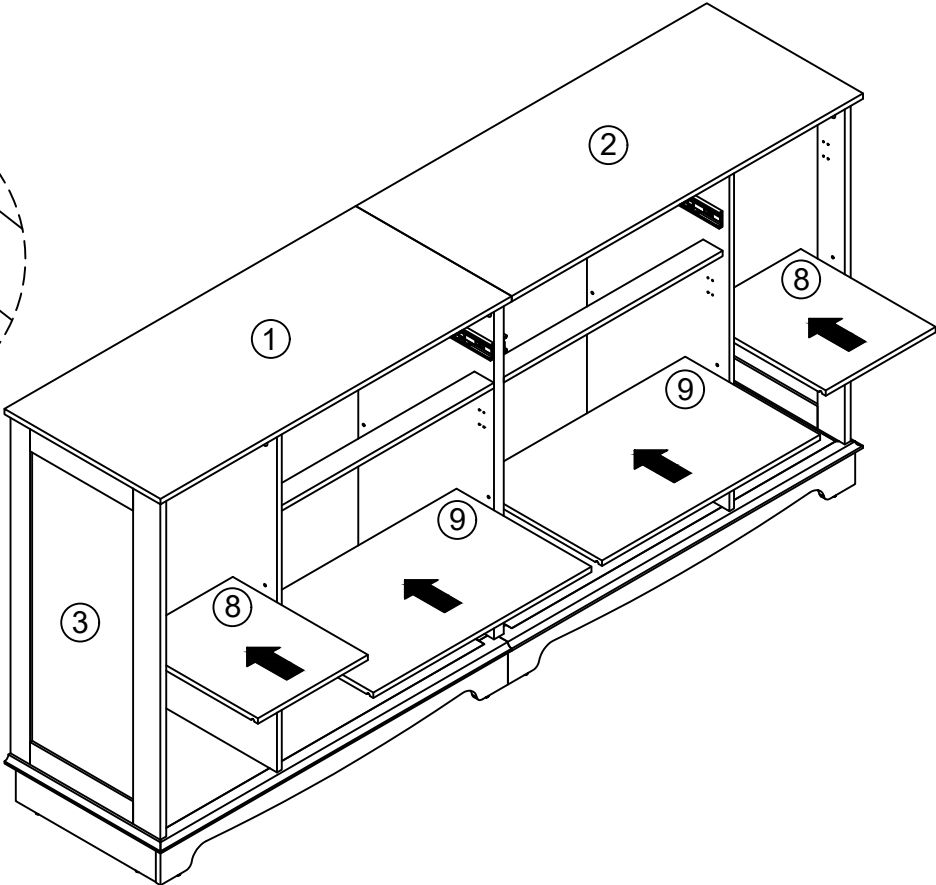

Step:25

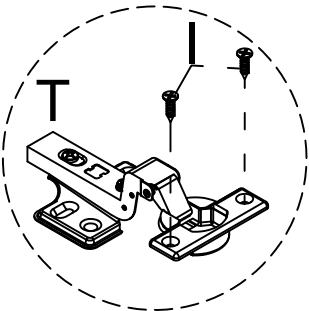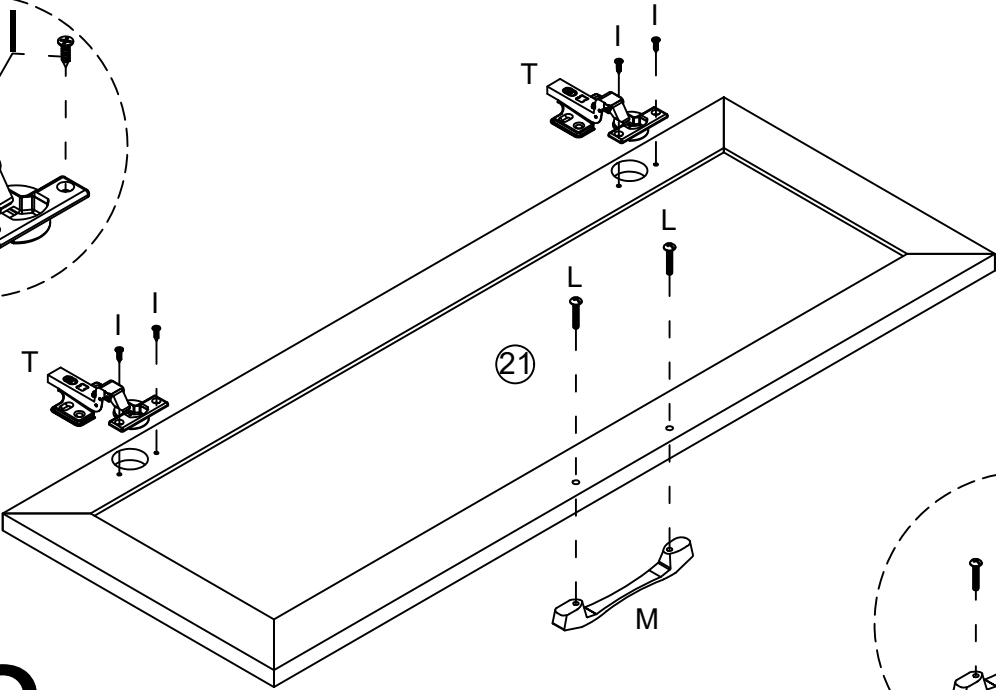


I	 Ø3.5*12mm	X8
L	 M4*18mm	X4
M	 133*12.5*18mm	X2
T	 Ø26mm	X4

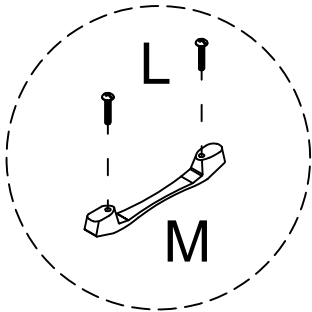


X2


Step:26

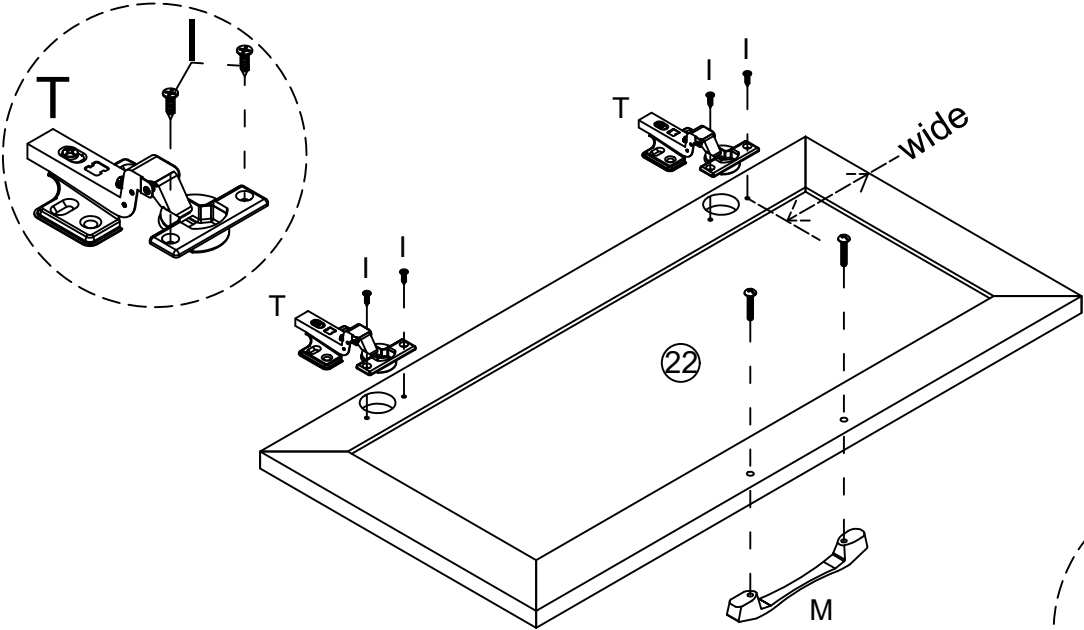


I	 Ø3.5*12mm	X4
L	 M4*18mm	X2
M	 133*12.5*18mm	X1
T	 Ø26mm	X2

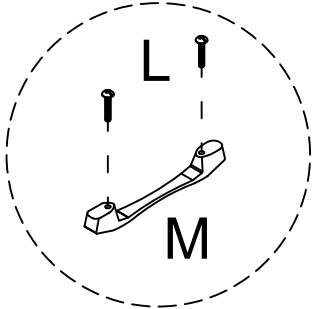



Step:27

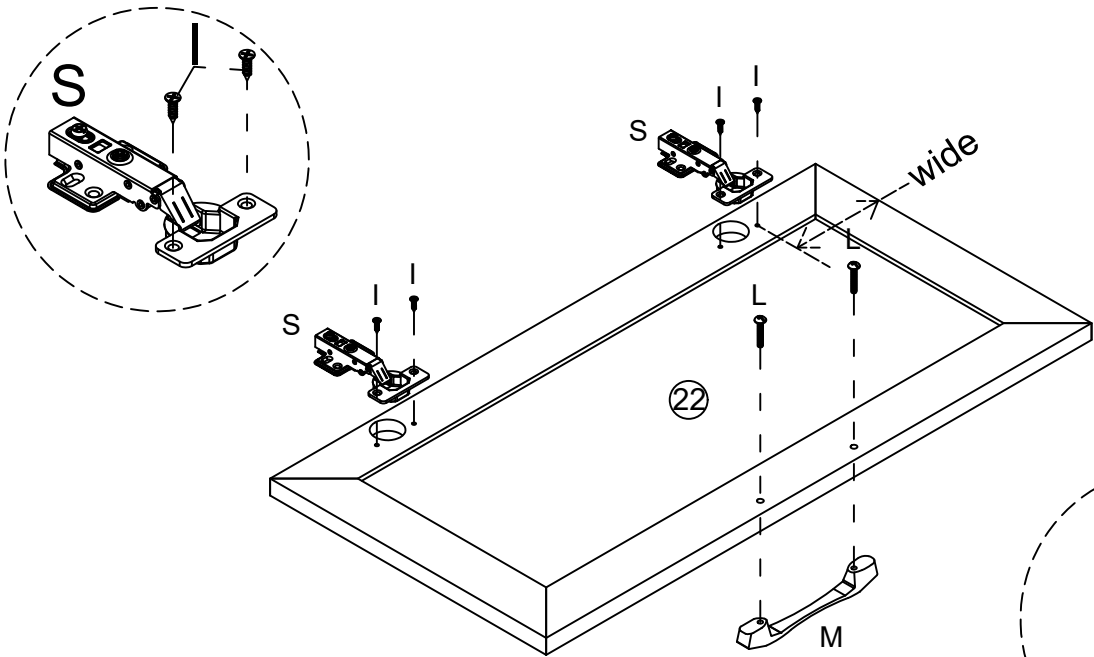


I	 Ø3.5*12mm	X4
L	 M4*18mm	X2
M	 133*12.5*18mm	X1
S	 Ø26mm	X2

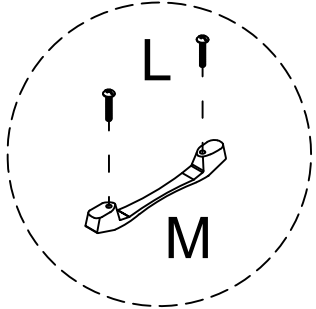



Step:28

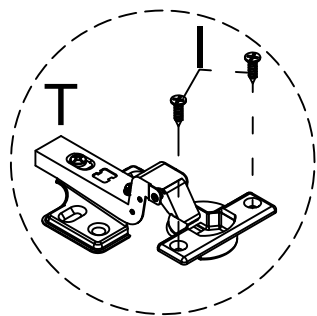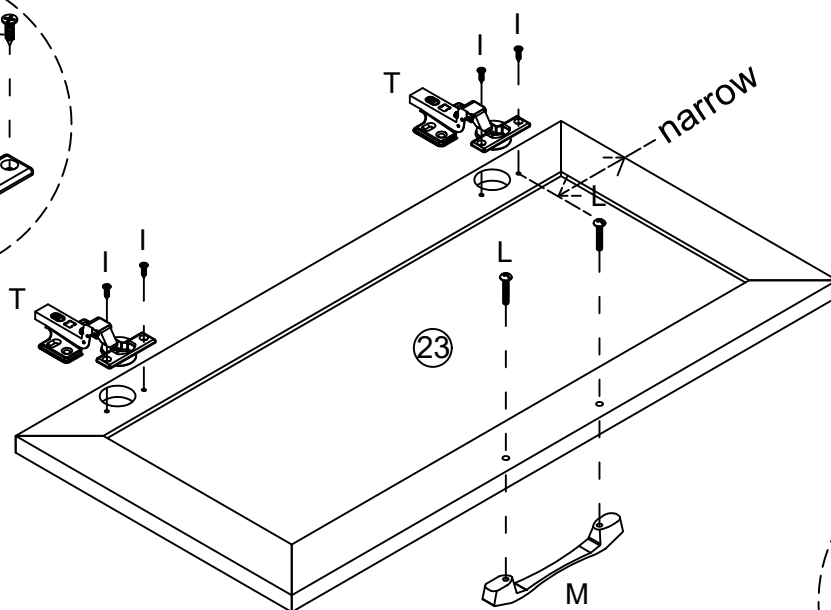


I	 Ø3.5*12mm	X4
L	 M4*18mm	X2
M	 133*12.5*18mm	X1
T	 Ø26mm	X2

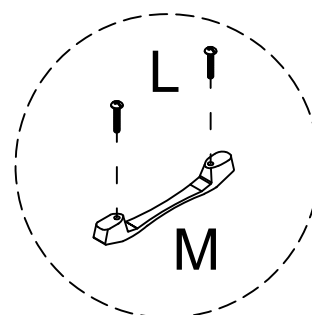

Step:29

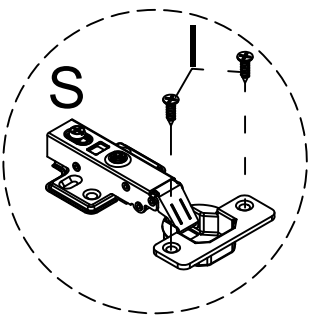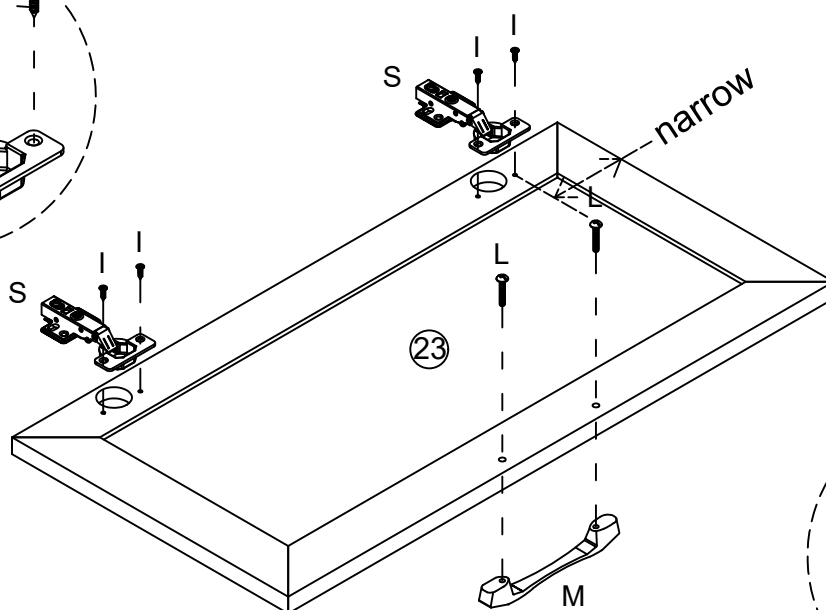


I	 Ø3.5*12mm	X4
L	 M4*18mm	X2
M	 133*12.5*18mm	X1
S	 Ø26mm	X2

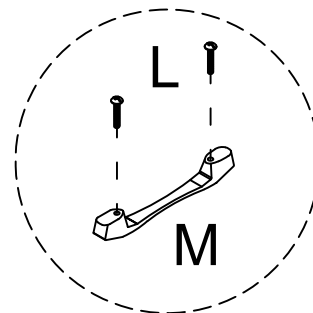


Step:30


I	 Ø3.5*12mm	X32
---	---	-----

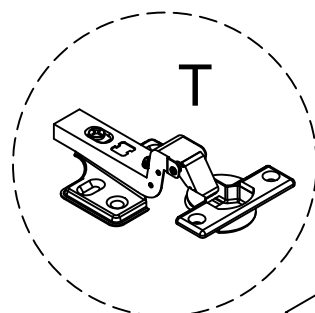

Use a large radius hinge here.

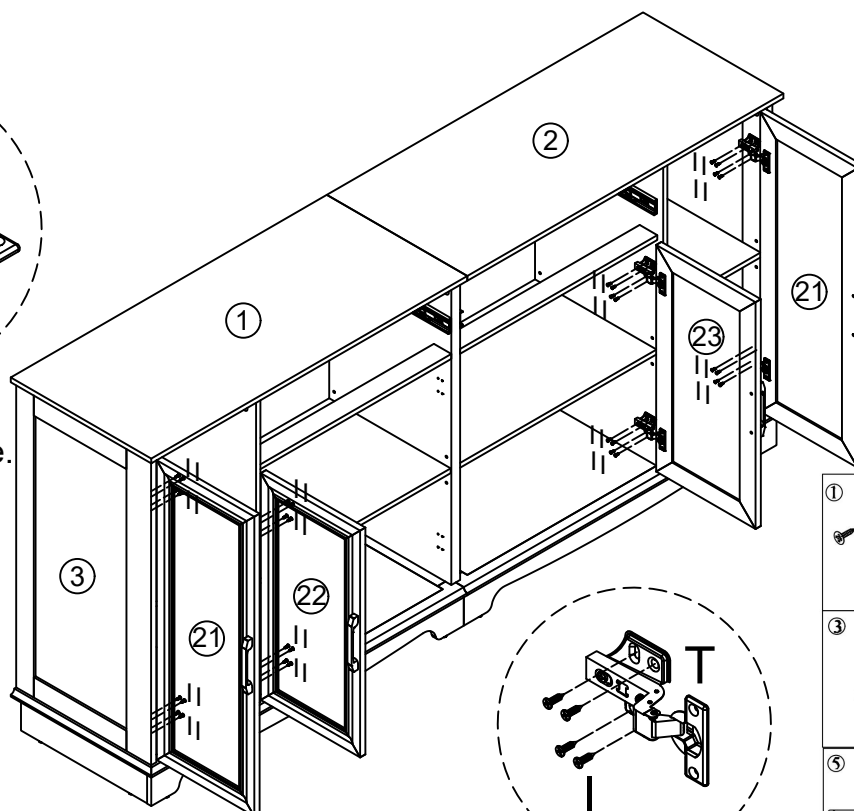


Doors Adjustment

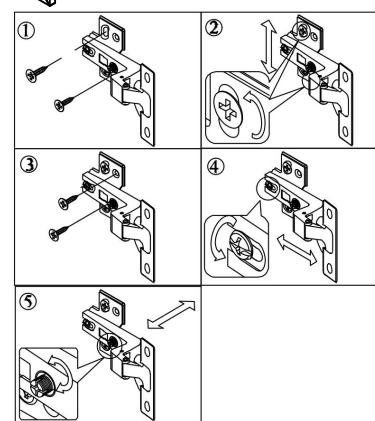


Step:31


I	 Ø3.5*12mm	X16
---	---	-----

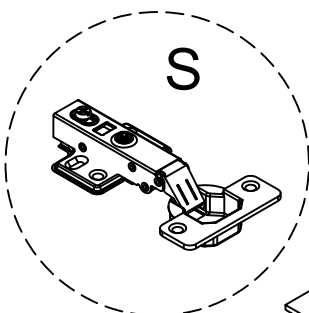

Use a straight arm hinge here.



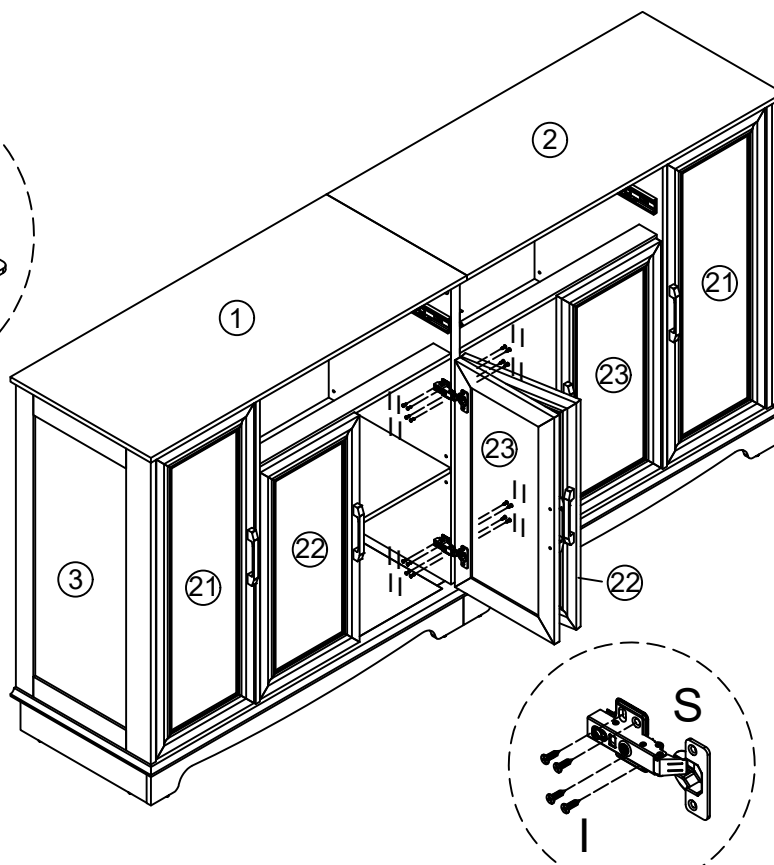


Doors Adjustment



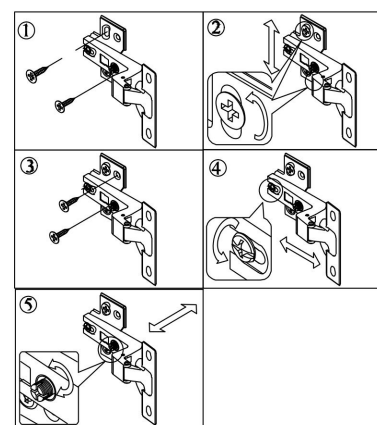


Step:32



A		X5
B		X5
J		X6
K		X2
M		X1

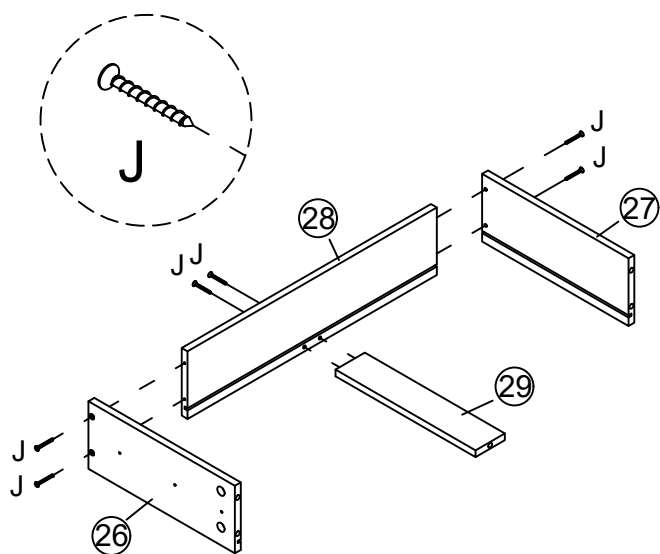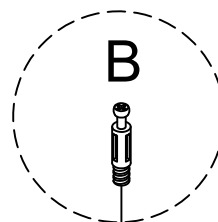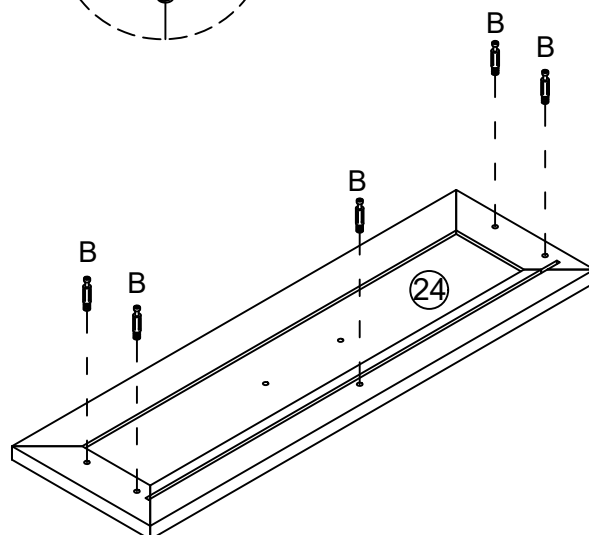


Step 1

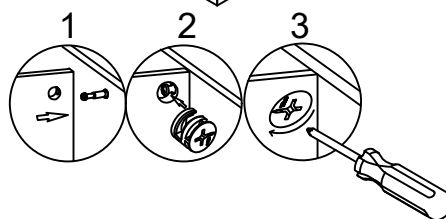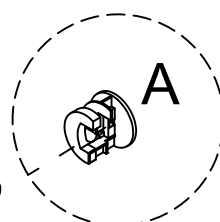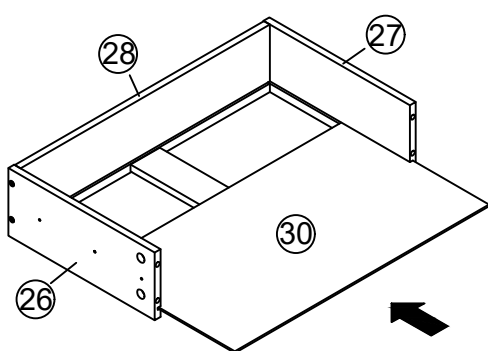



Step 2

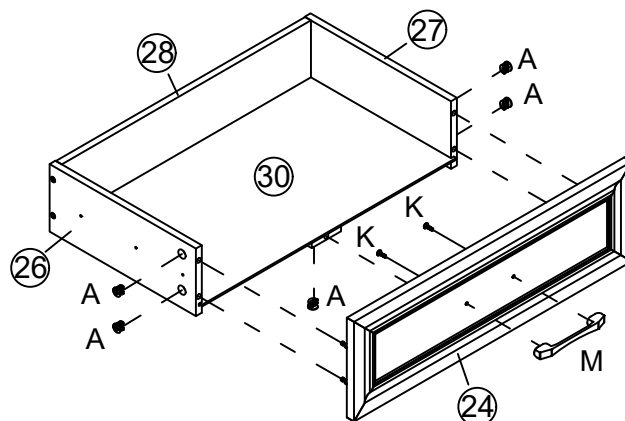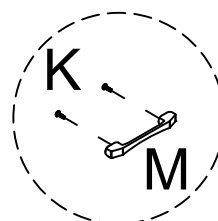


Step 3

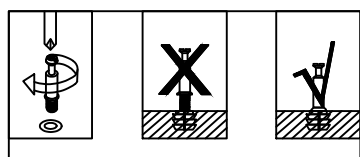



Step:33

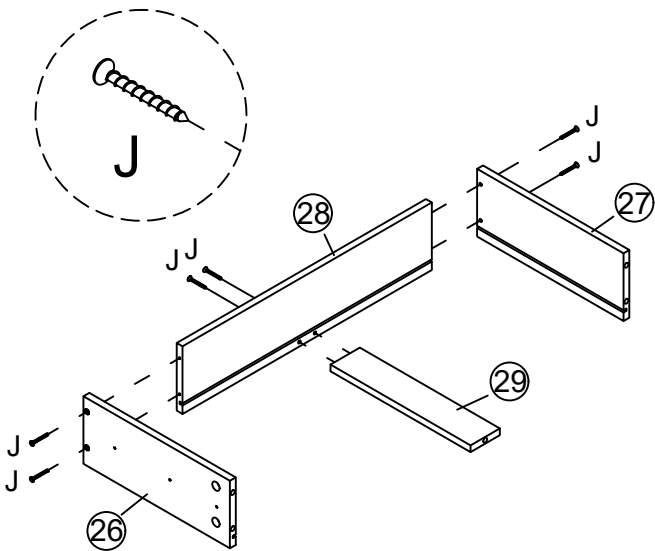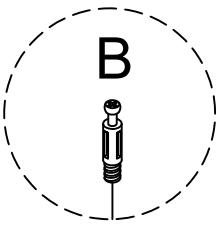



A	 Ø15*9.5mm	X5
B	 Ø6.5*35mm	X5
J	 Ø4*35mm	X6
K	 M4*9mm	X2
M	 133*12.5*18mm	X1

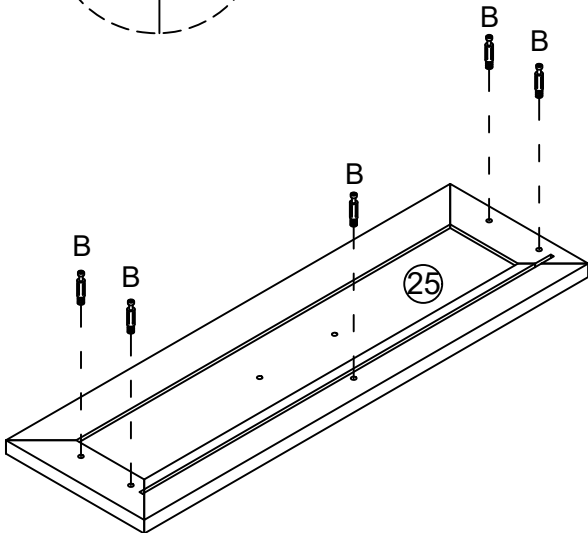


Step 1

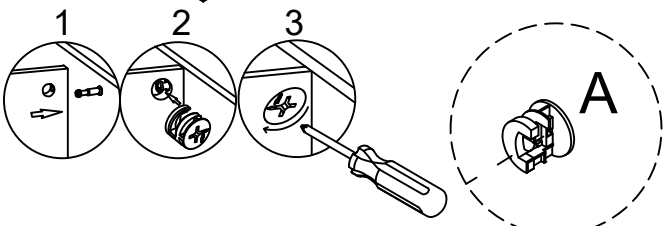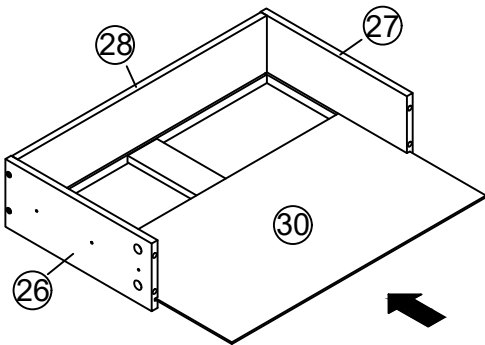

Step 2

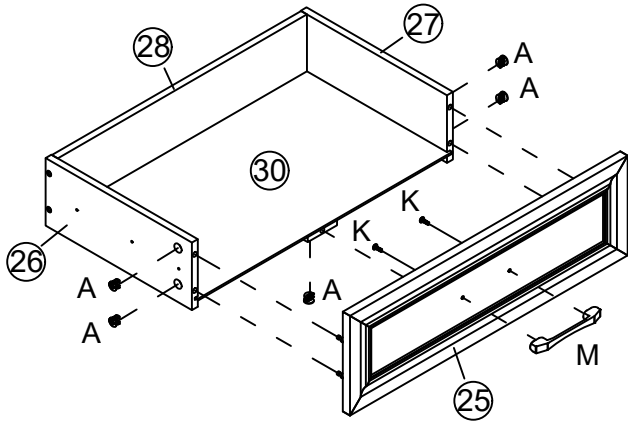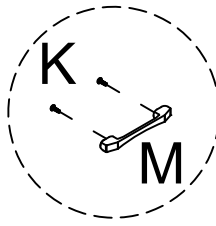


Step 3

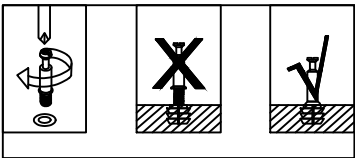

Step:34


Open end

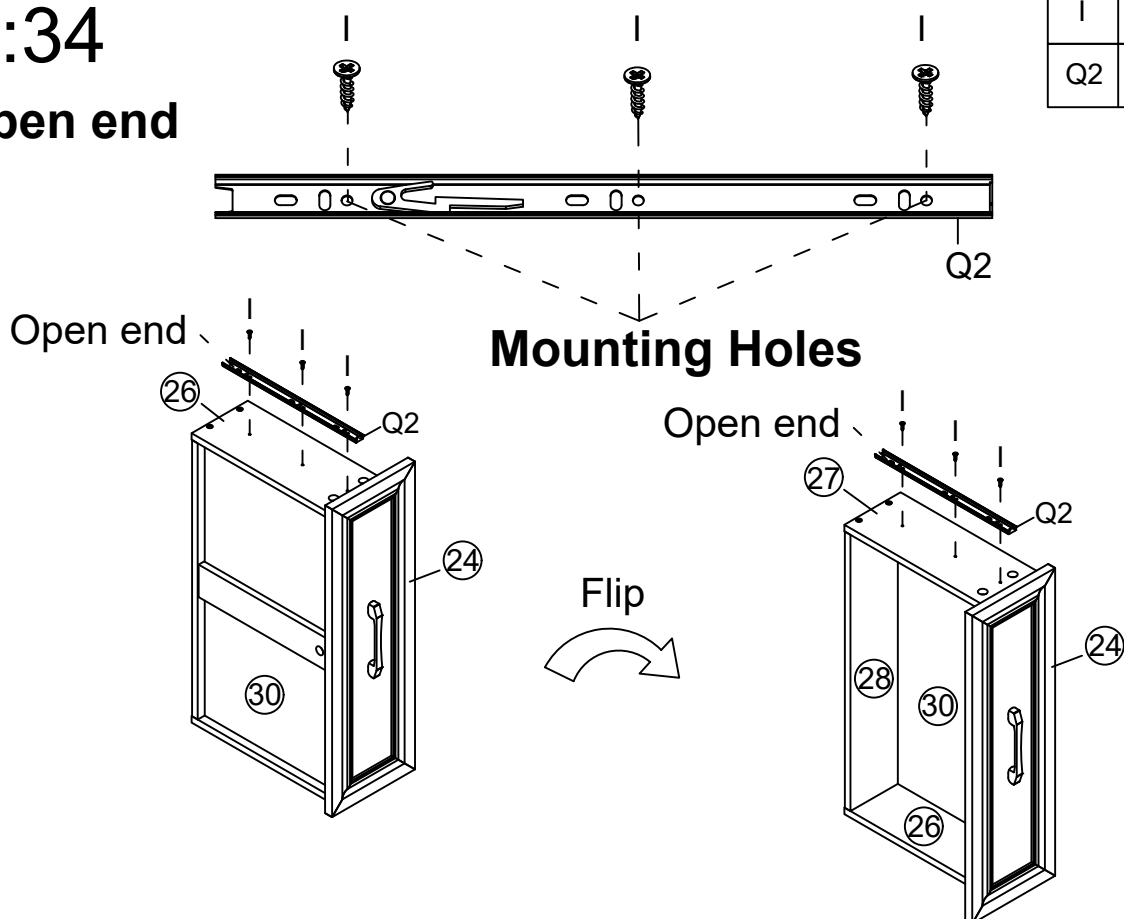

I		X6
Q2		X2

Step:35

Open end

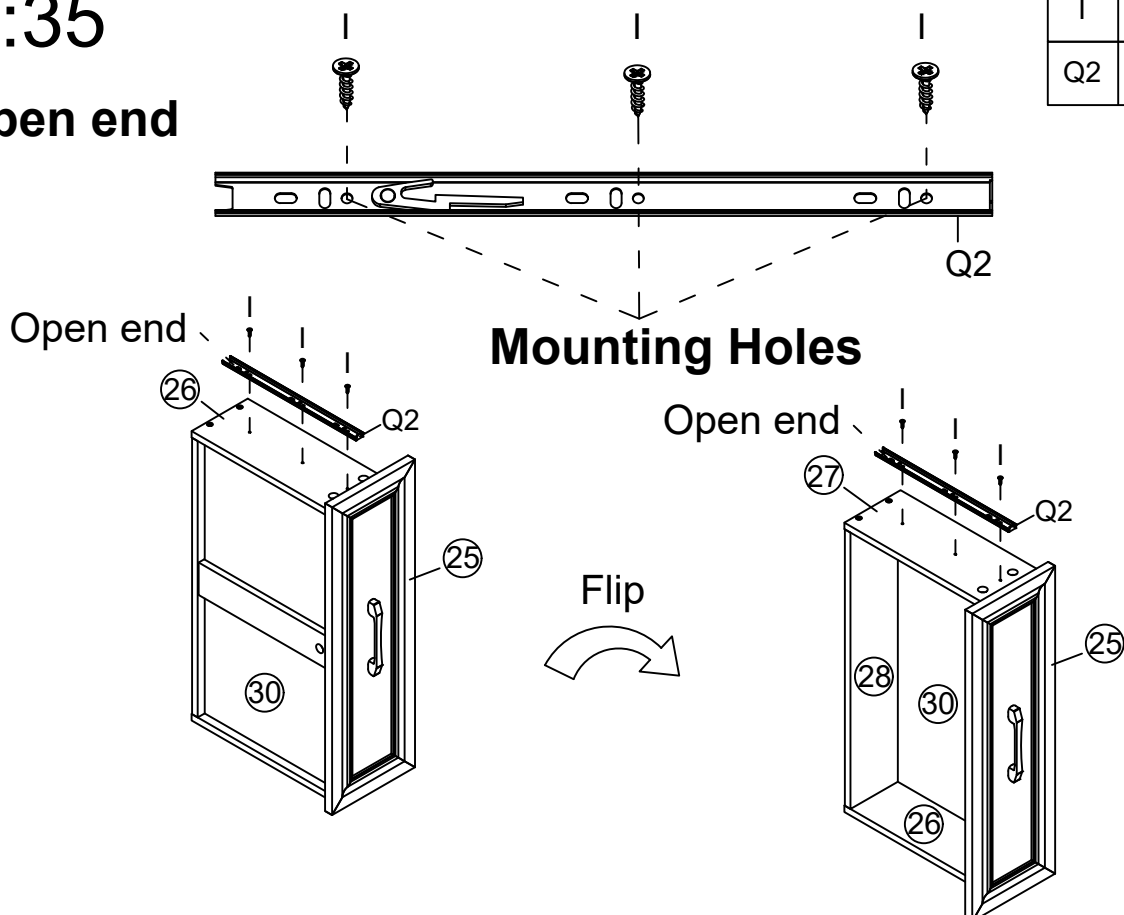





I		X6
Q2		X2

Step:36

W




X20

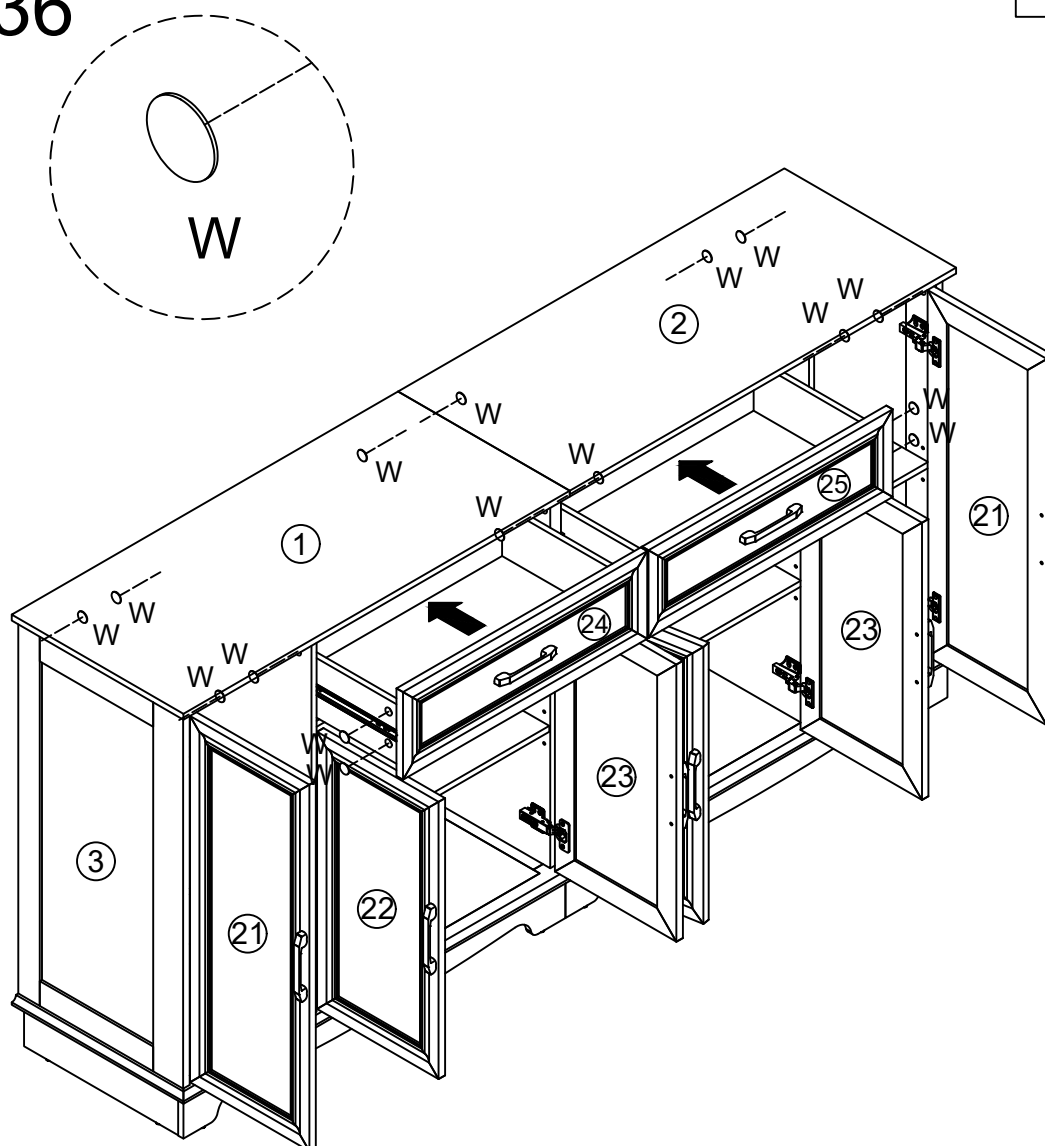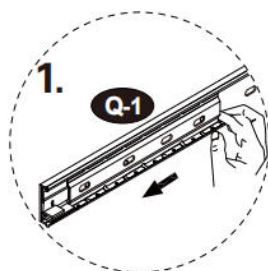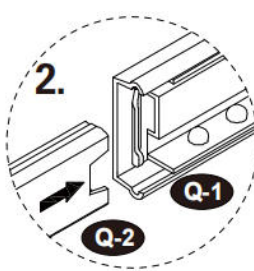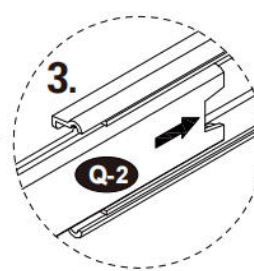

REMARK: Align the slide runners on the drawer with the unit and push it carefully inside until it stops.

▲ If the drawer does not go in smoothly please take it out and repeat the step.

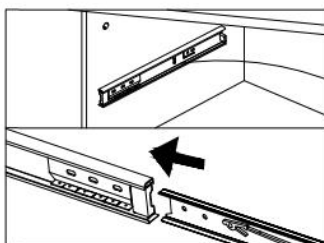

Please push the steel ball to the front first, then install the drawer.

REMARK

1. First, slide the ball on both sides of the slide to the outside.
2. When installing the drawer, align both sides first, and then push both sides inward at the same time.


Step:37

V




X2


Install the tipping restraint hardware

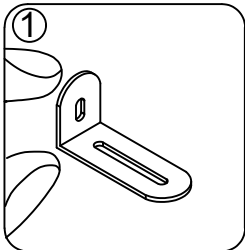


1. make mark on the wall

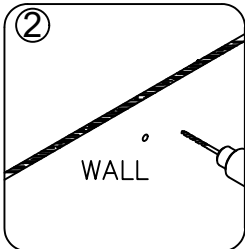

2. drill two Ø6 holes on the wall

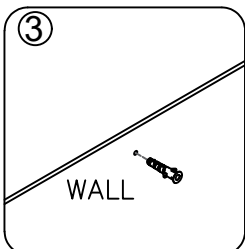


3. put two anchors in the holes

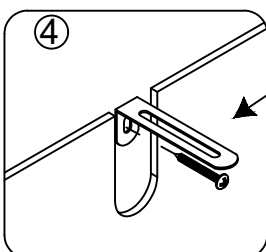

4. fix the device on the wall by the long screws



NOTE: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware may be required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

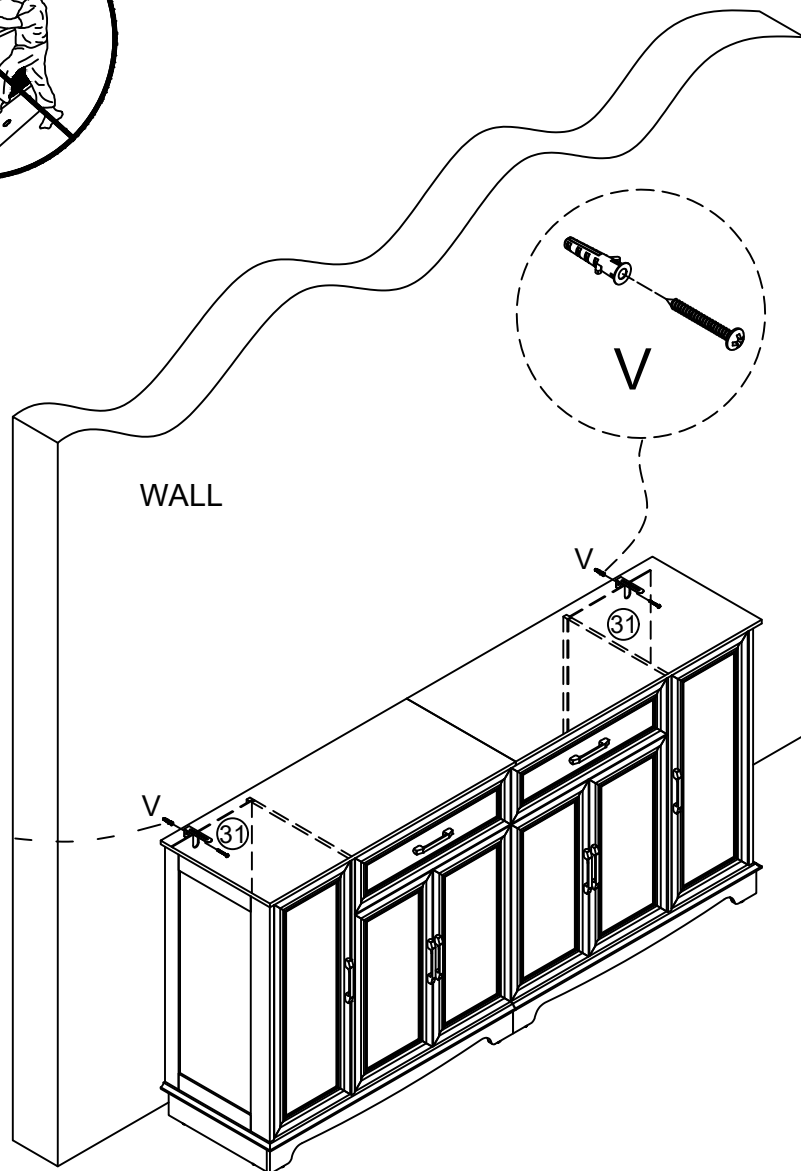

Here the door panel needs to be opened and the anti-tipping device installed.