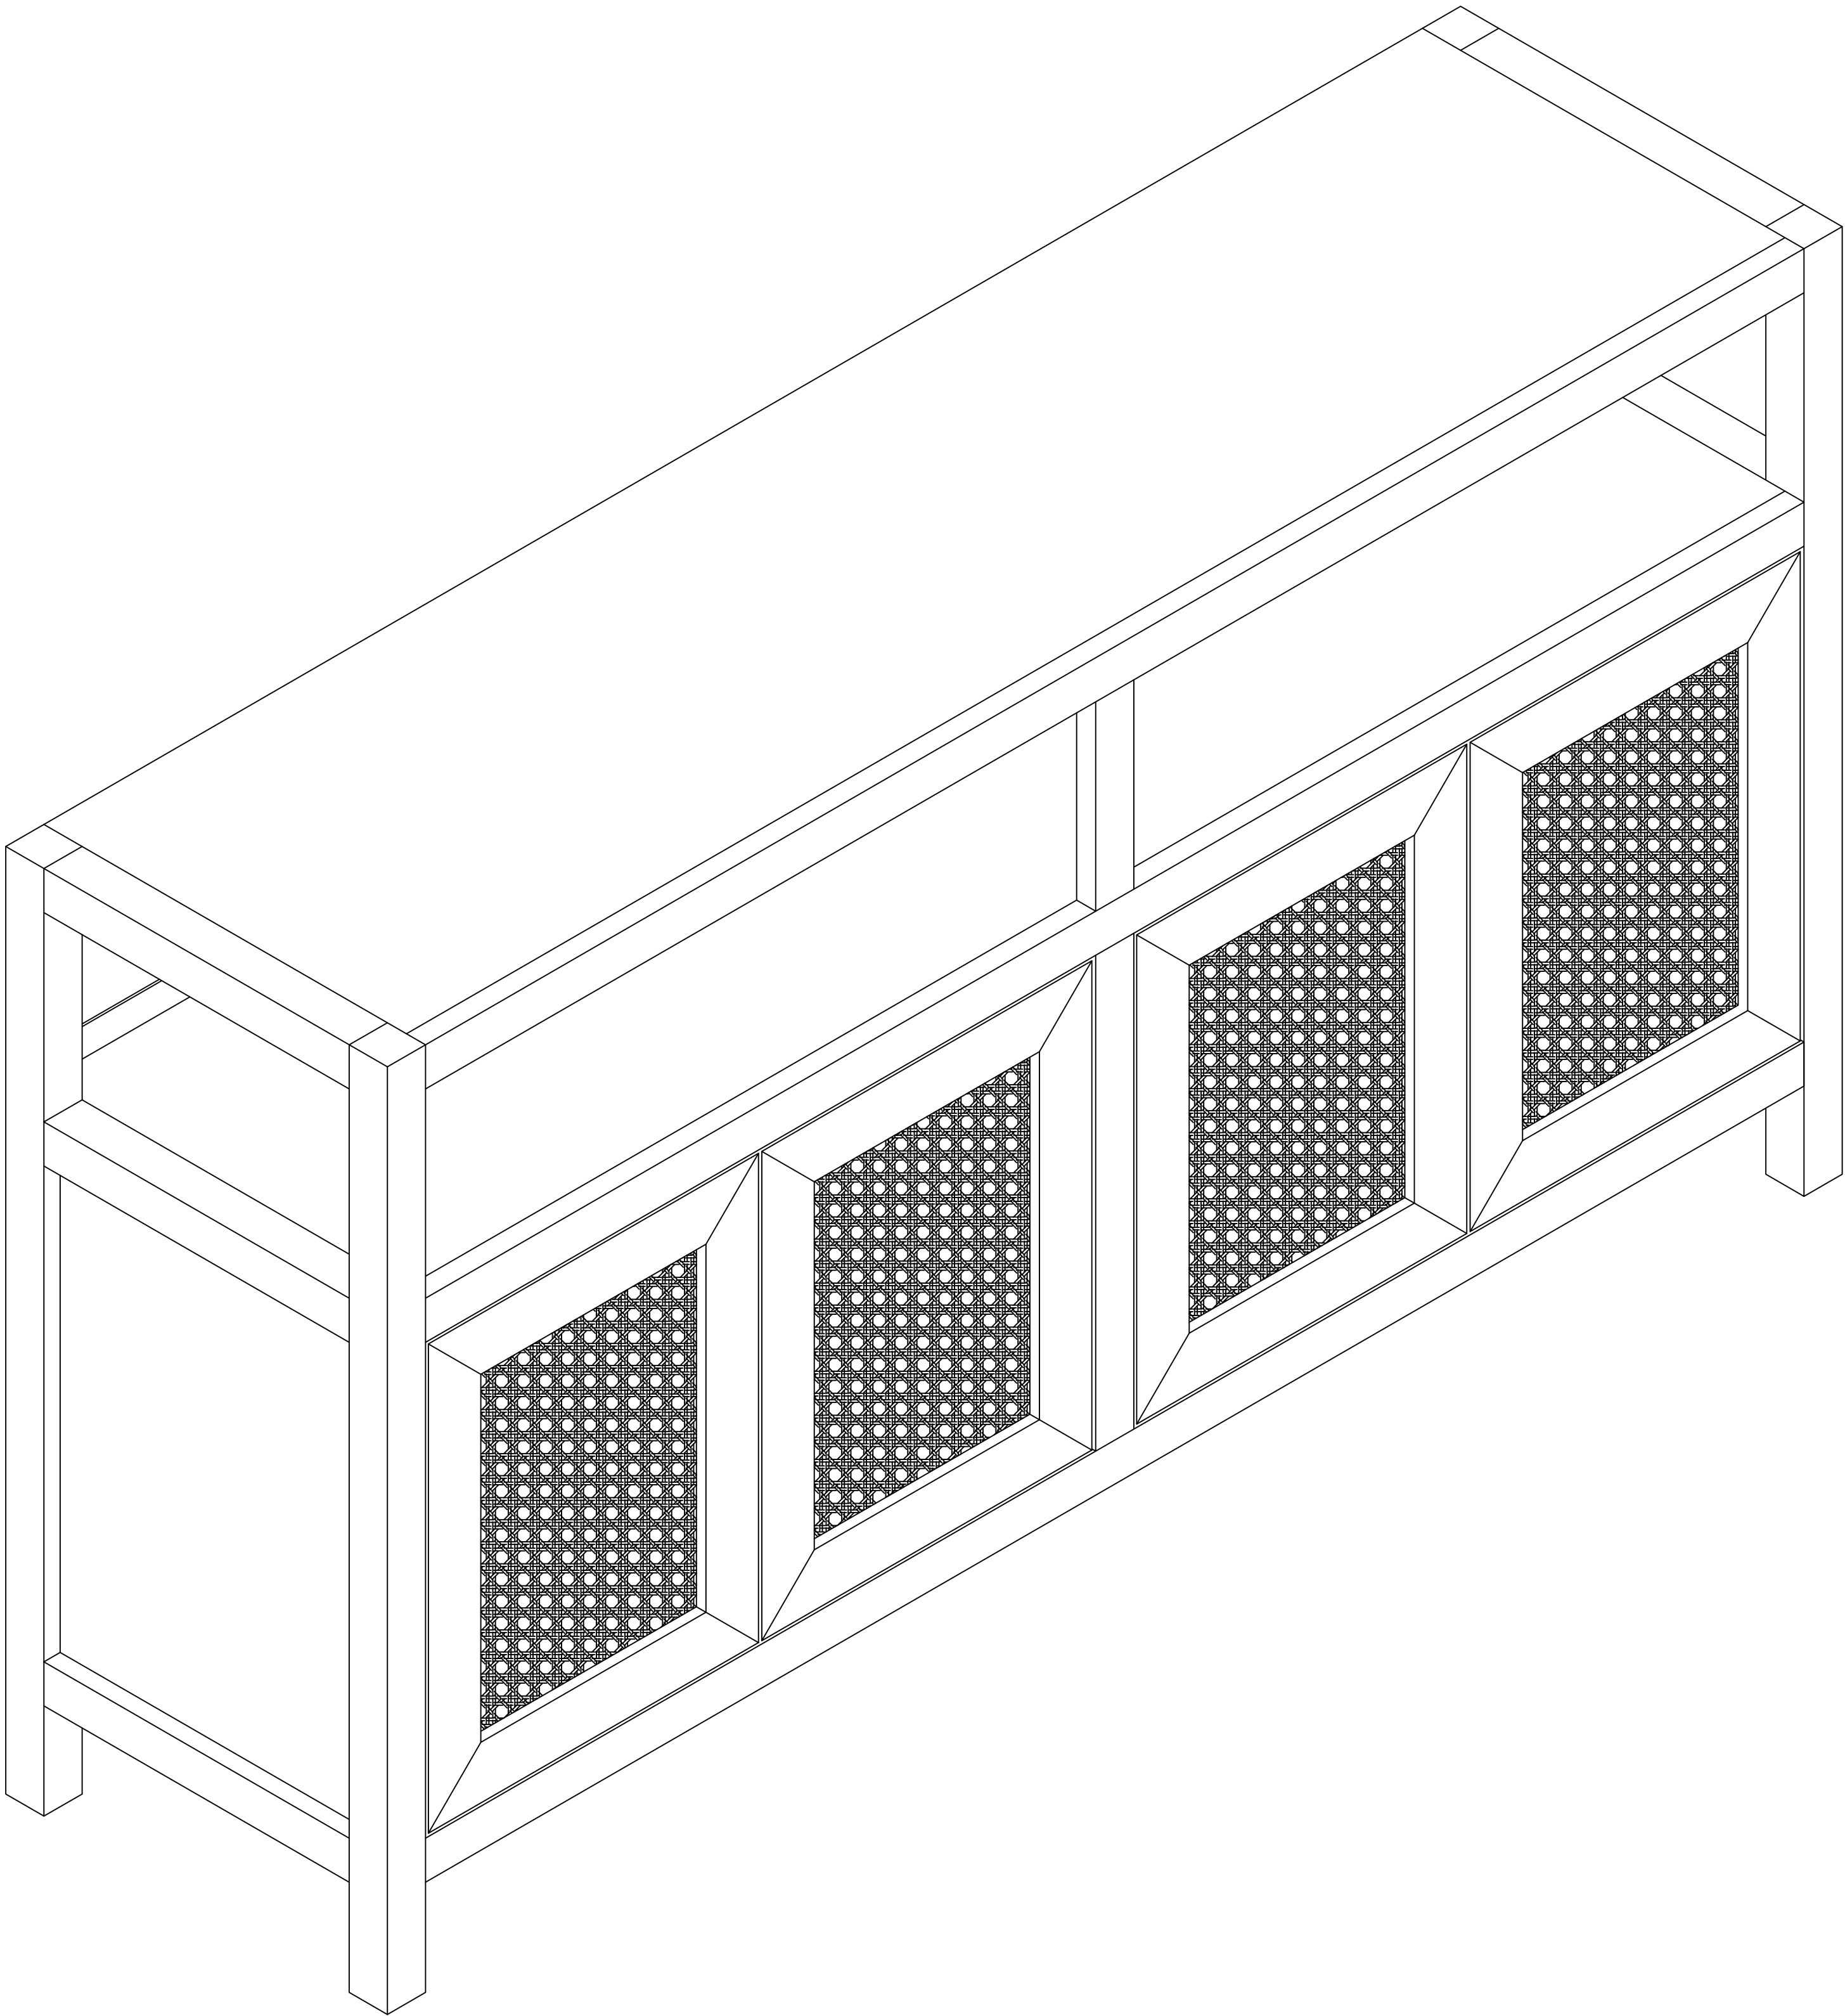


ASSEMBLY INSTRUCTION
SIDEBOARD



ASSEMBLY INSTRUCTION

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- To reduce the likelihood of damaging your product please ensure that your power drill is set on low torque setting.



Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING


In order to help prevent overturning - please follow these instructions

To help prevent product toppling over please follow the below steps:-

- Use the anti tip strap or wall fixing method provided (if applicable)
- Do not allow children to climb or hang on the furniture
- Do not open more than one drawer at a time
- Do not place heavy items in the top drawers
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose



Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type

Tools required




Philips screwdriver (medium & large)

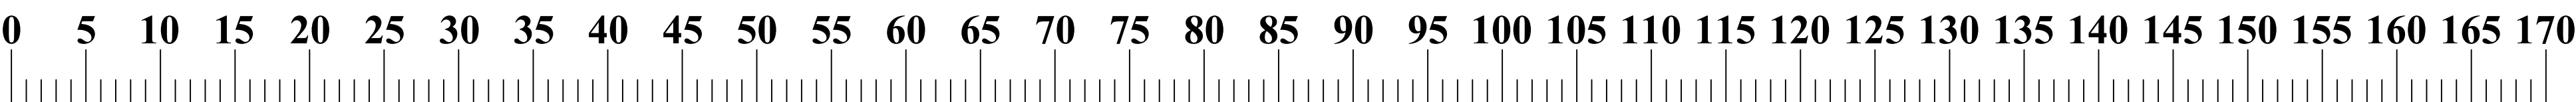Ruler - Use this ruler to help correctly identify the screws


































The screws length is measured from the head to the point (16mm screw shown).

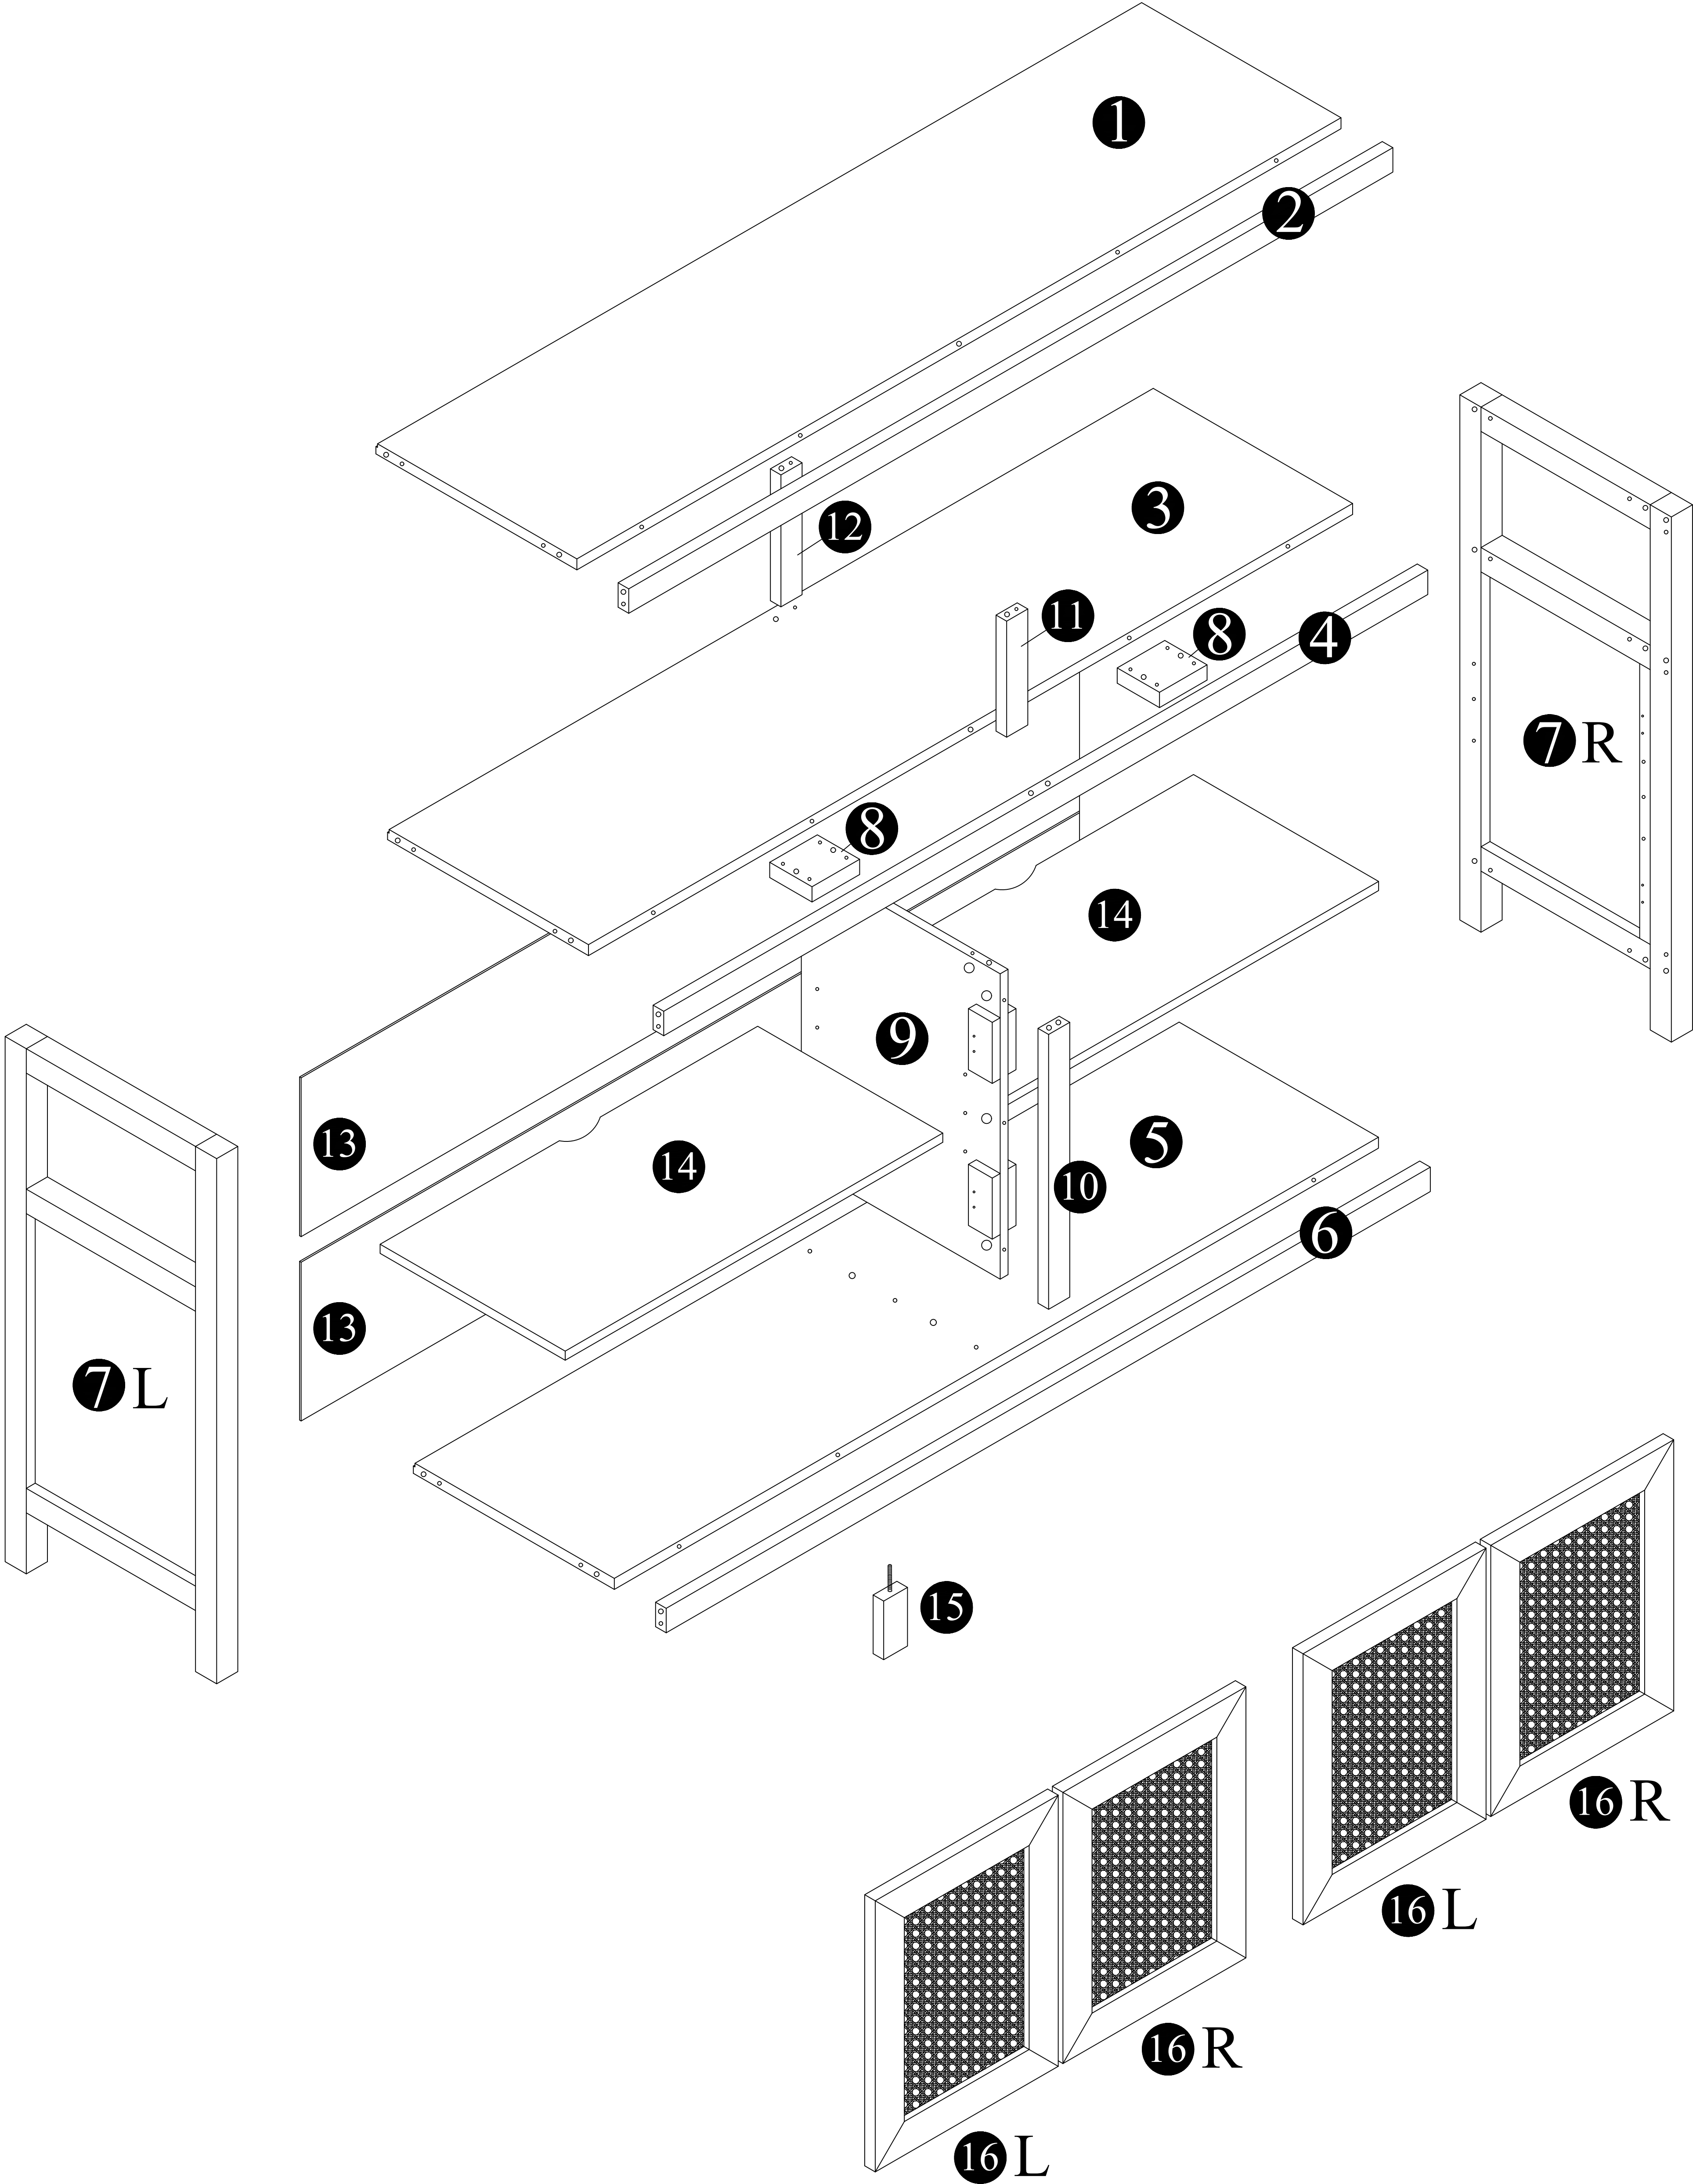ASSEMBLY INSTRUCTION




ASSEMBLY INSTRUCTION

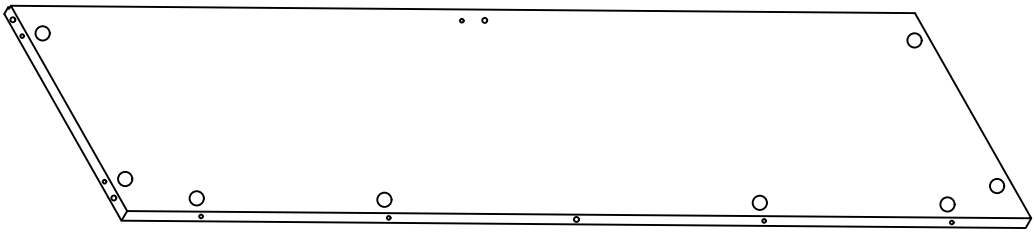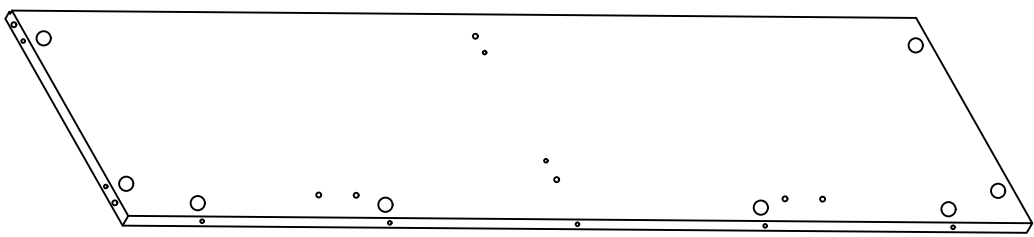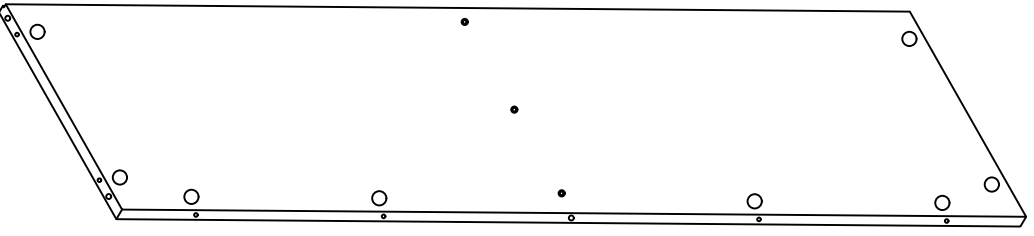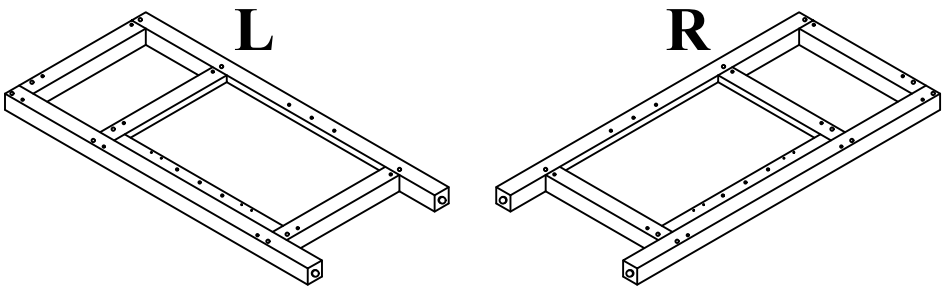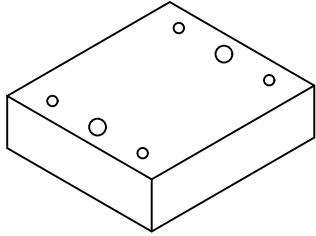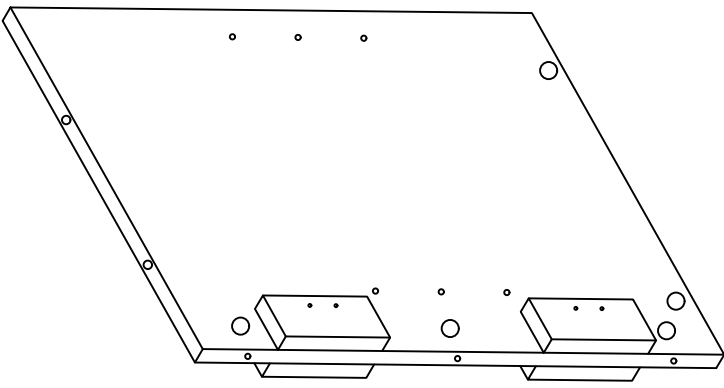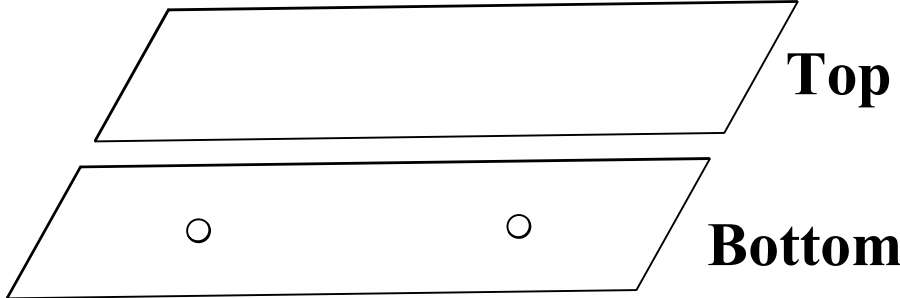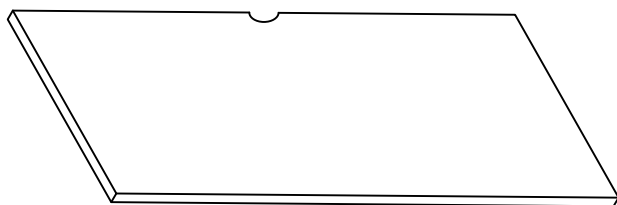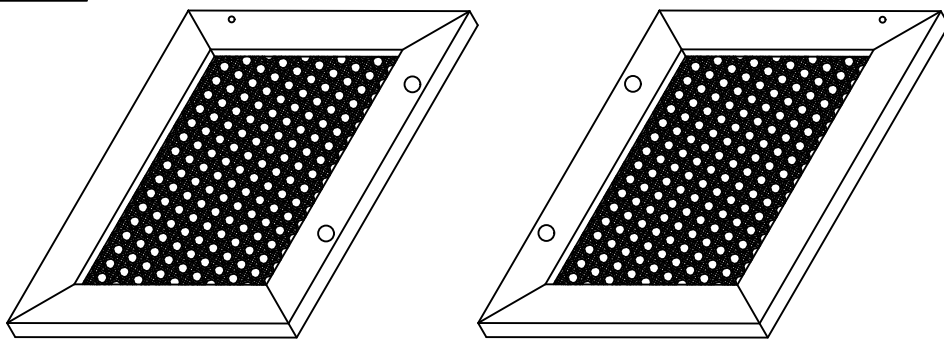PART LIST			
1		2	
Top panel - 1pc		Top rail - 1pc	
3		4	
Middle panel - 1pc		Middle rail - 1pc	
5		6	
Bottom panel - 1pc		Bottom rail - 1pc	
7		8	
Side panel - 2pcs		Supporting block - 2pcs	
9		10	
Center panel - 1pc		Center rail - 1pc	
11		12	
(Top) Front rail - 1pc		(Top) Back rail - 1pc	
13		14	
Back panel - 2pcs		Shelves - 2pcs	
15		16	
Center leg - 1pc		Doors - 4pcs (2L2R)	

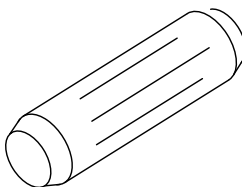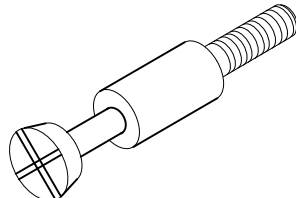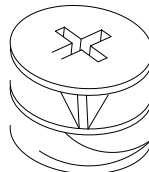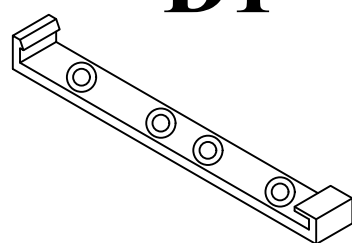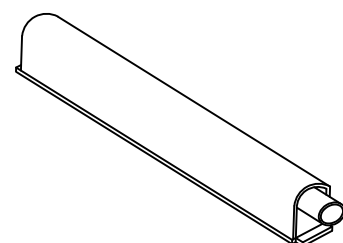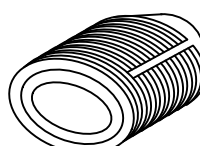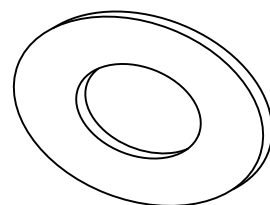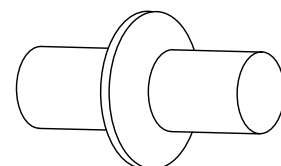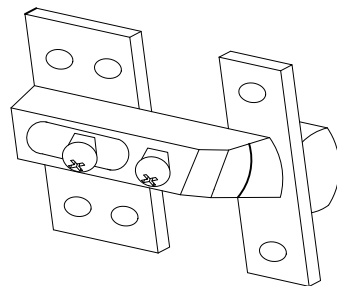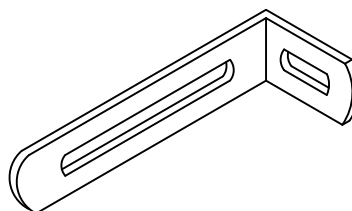HARDWARE LIST													
A		B1			B2		C						
													
M8*30mm							M4*32mm						
Wood dowel (33pcs)		Minifix (39pcs)			Minifix cap (39pcs)		Wood screw (11pcs)						
D		D1		D2		D3		D4		D5		E	
													
Holder (1pc)		Rebound mechanism (1pc)		Plastic fitting (1pc)		Washer (1pc)		M3*12mm Screw (1pc)		M3.5*16mm			
Rebound device (4sets)										Wood screw (60pcs)			
F		G			H			I					
													
M3*12mm					1470mm			7/8					
Wood screw (42pcs)		Metal shelf support (8pcs)			H connector (1pc)			Soft close hinges (8pcs)					
J		J1		J2		J3		J4		J5		ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)	
													
2pcs		2pcs		2pcs		2pcs		4pcs					
Anti tipping kit													


ASSEMBLY INSTRUCTION

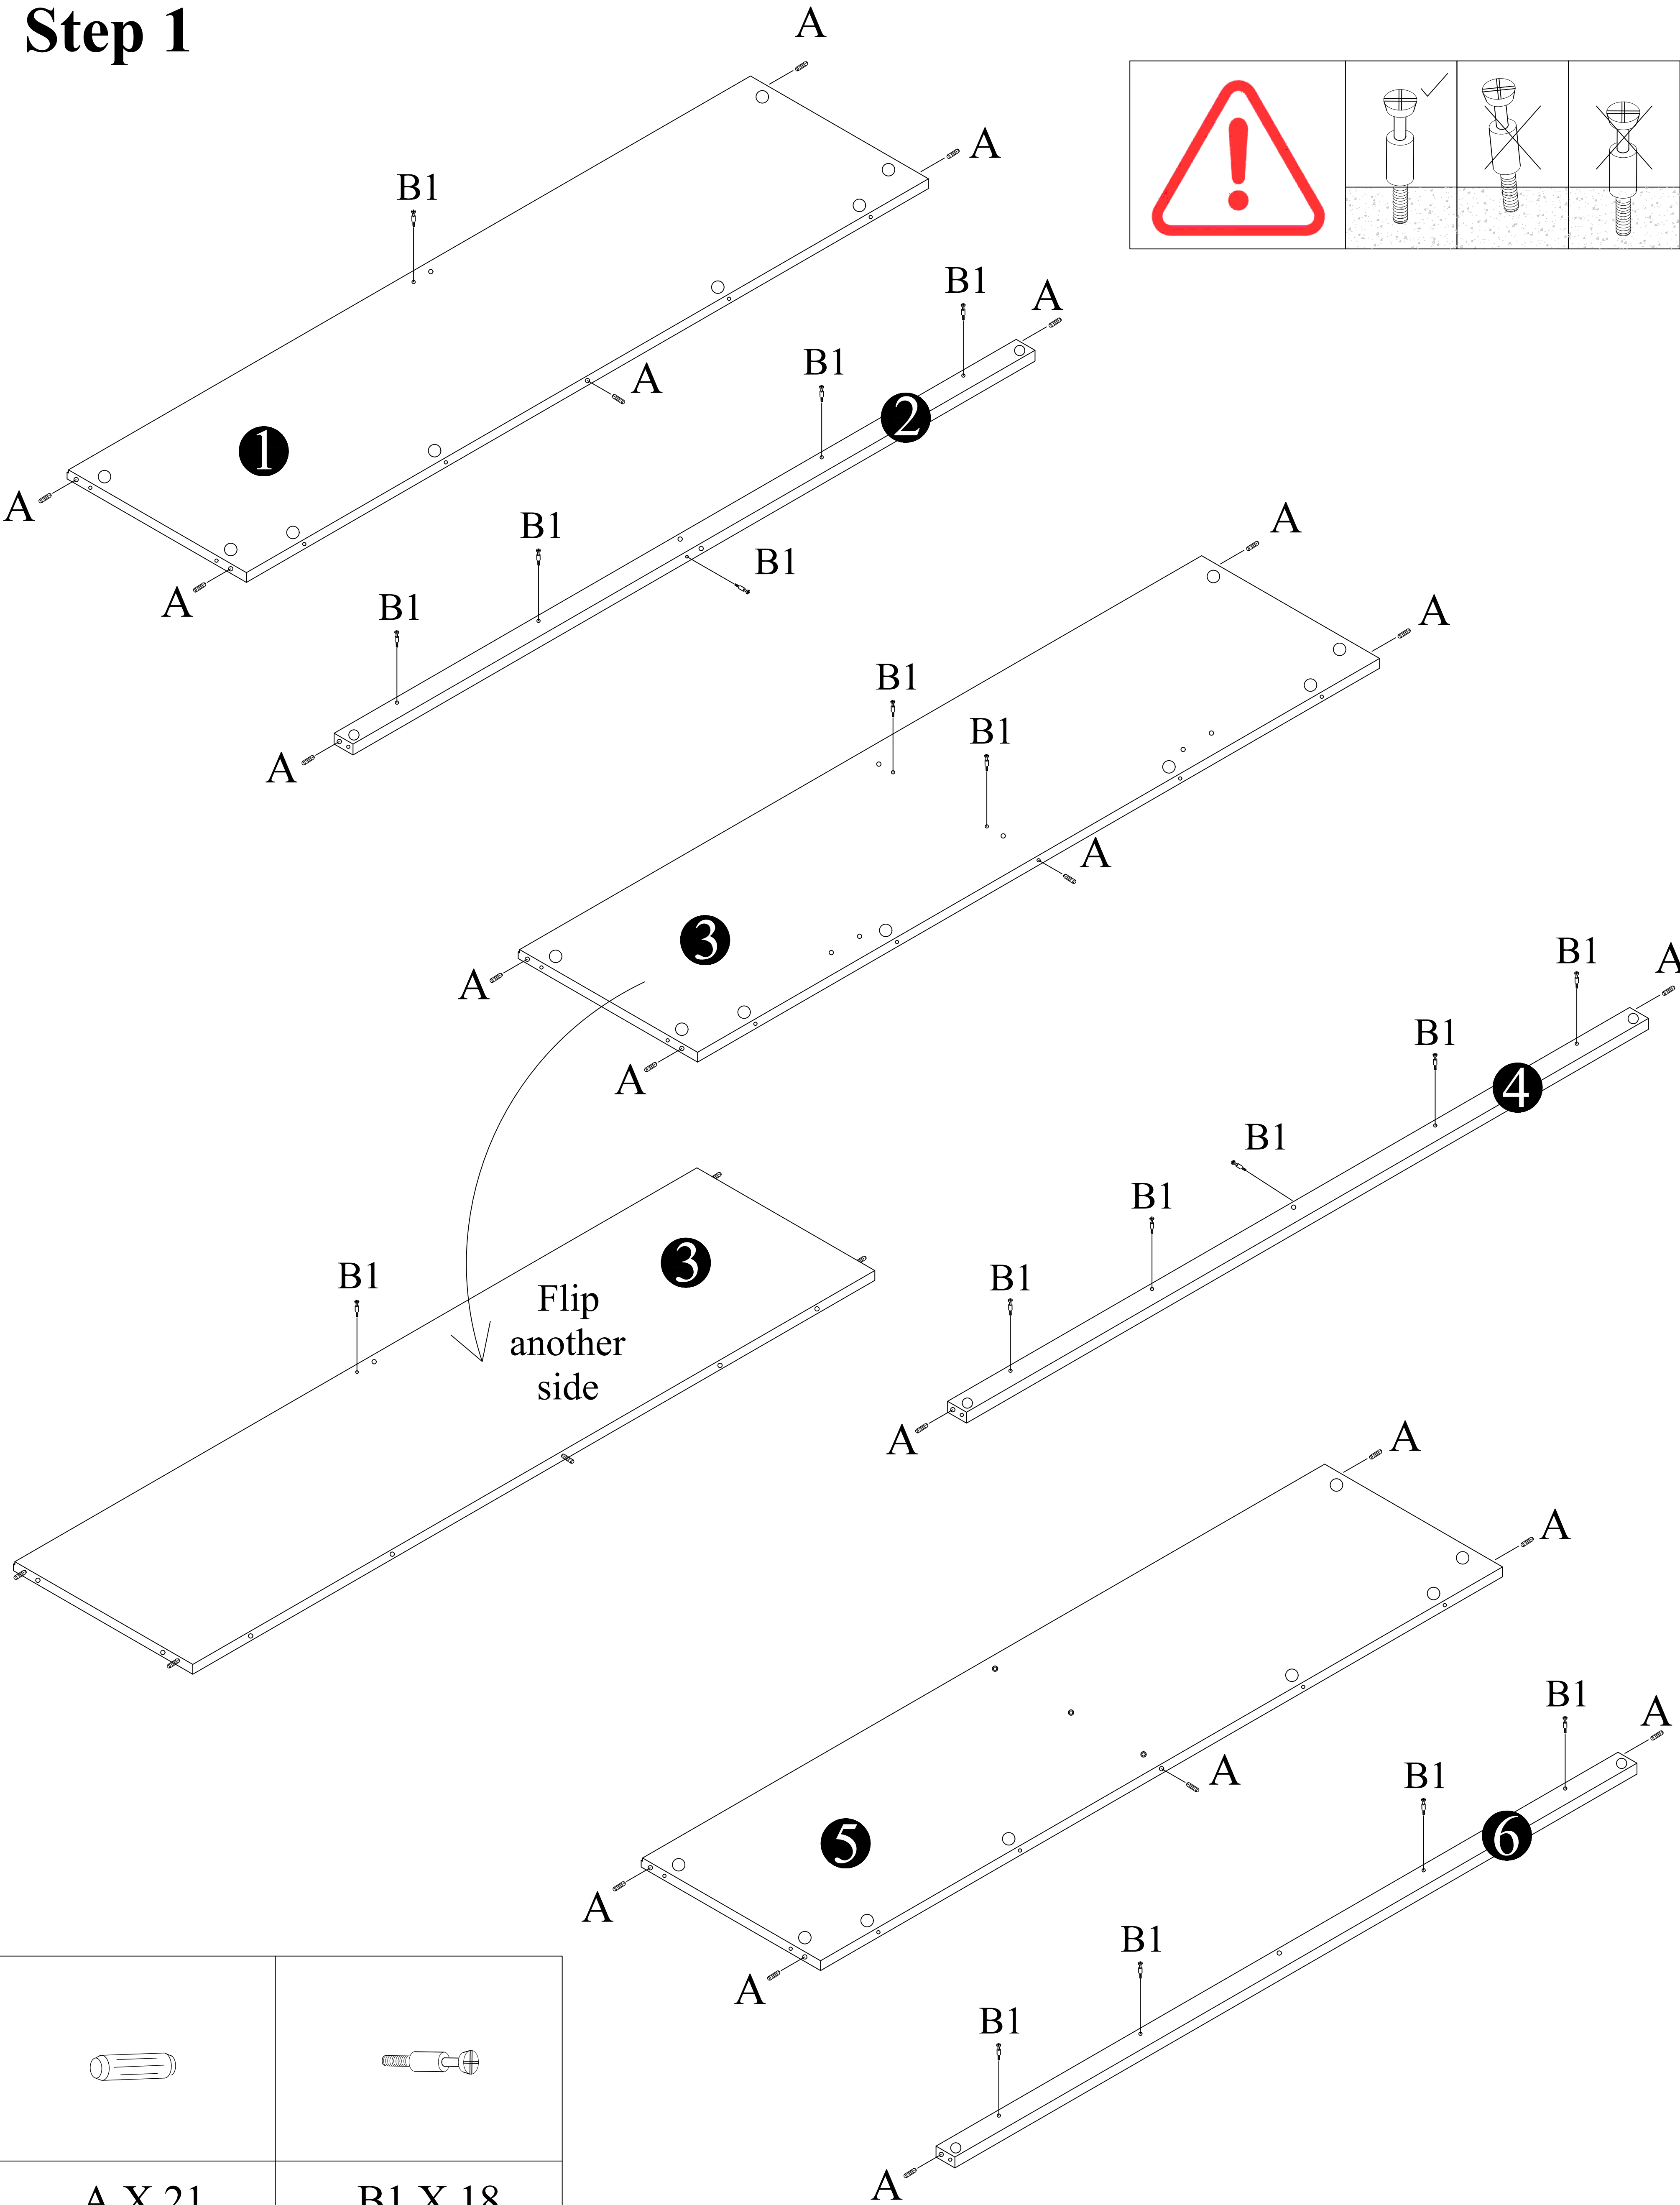Step 1




ASSEMBLY INSTRUCTION

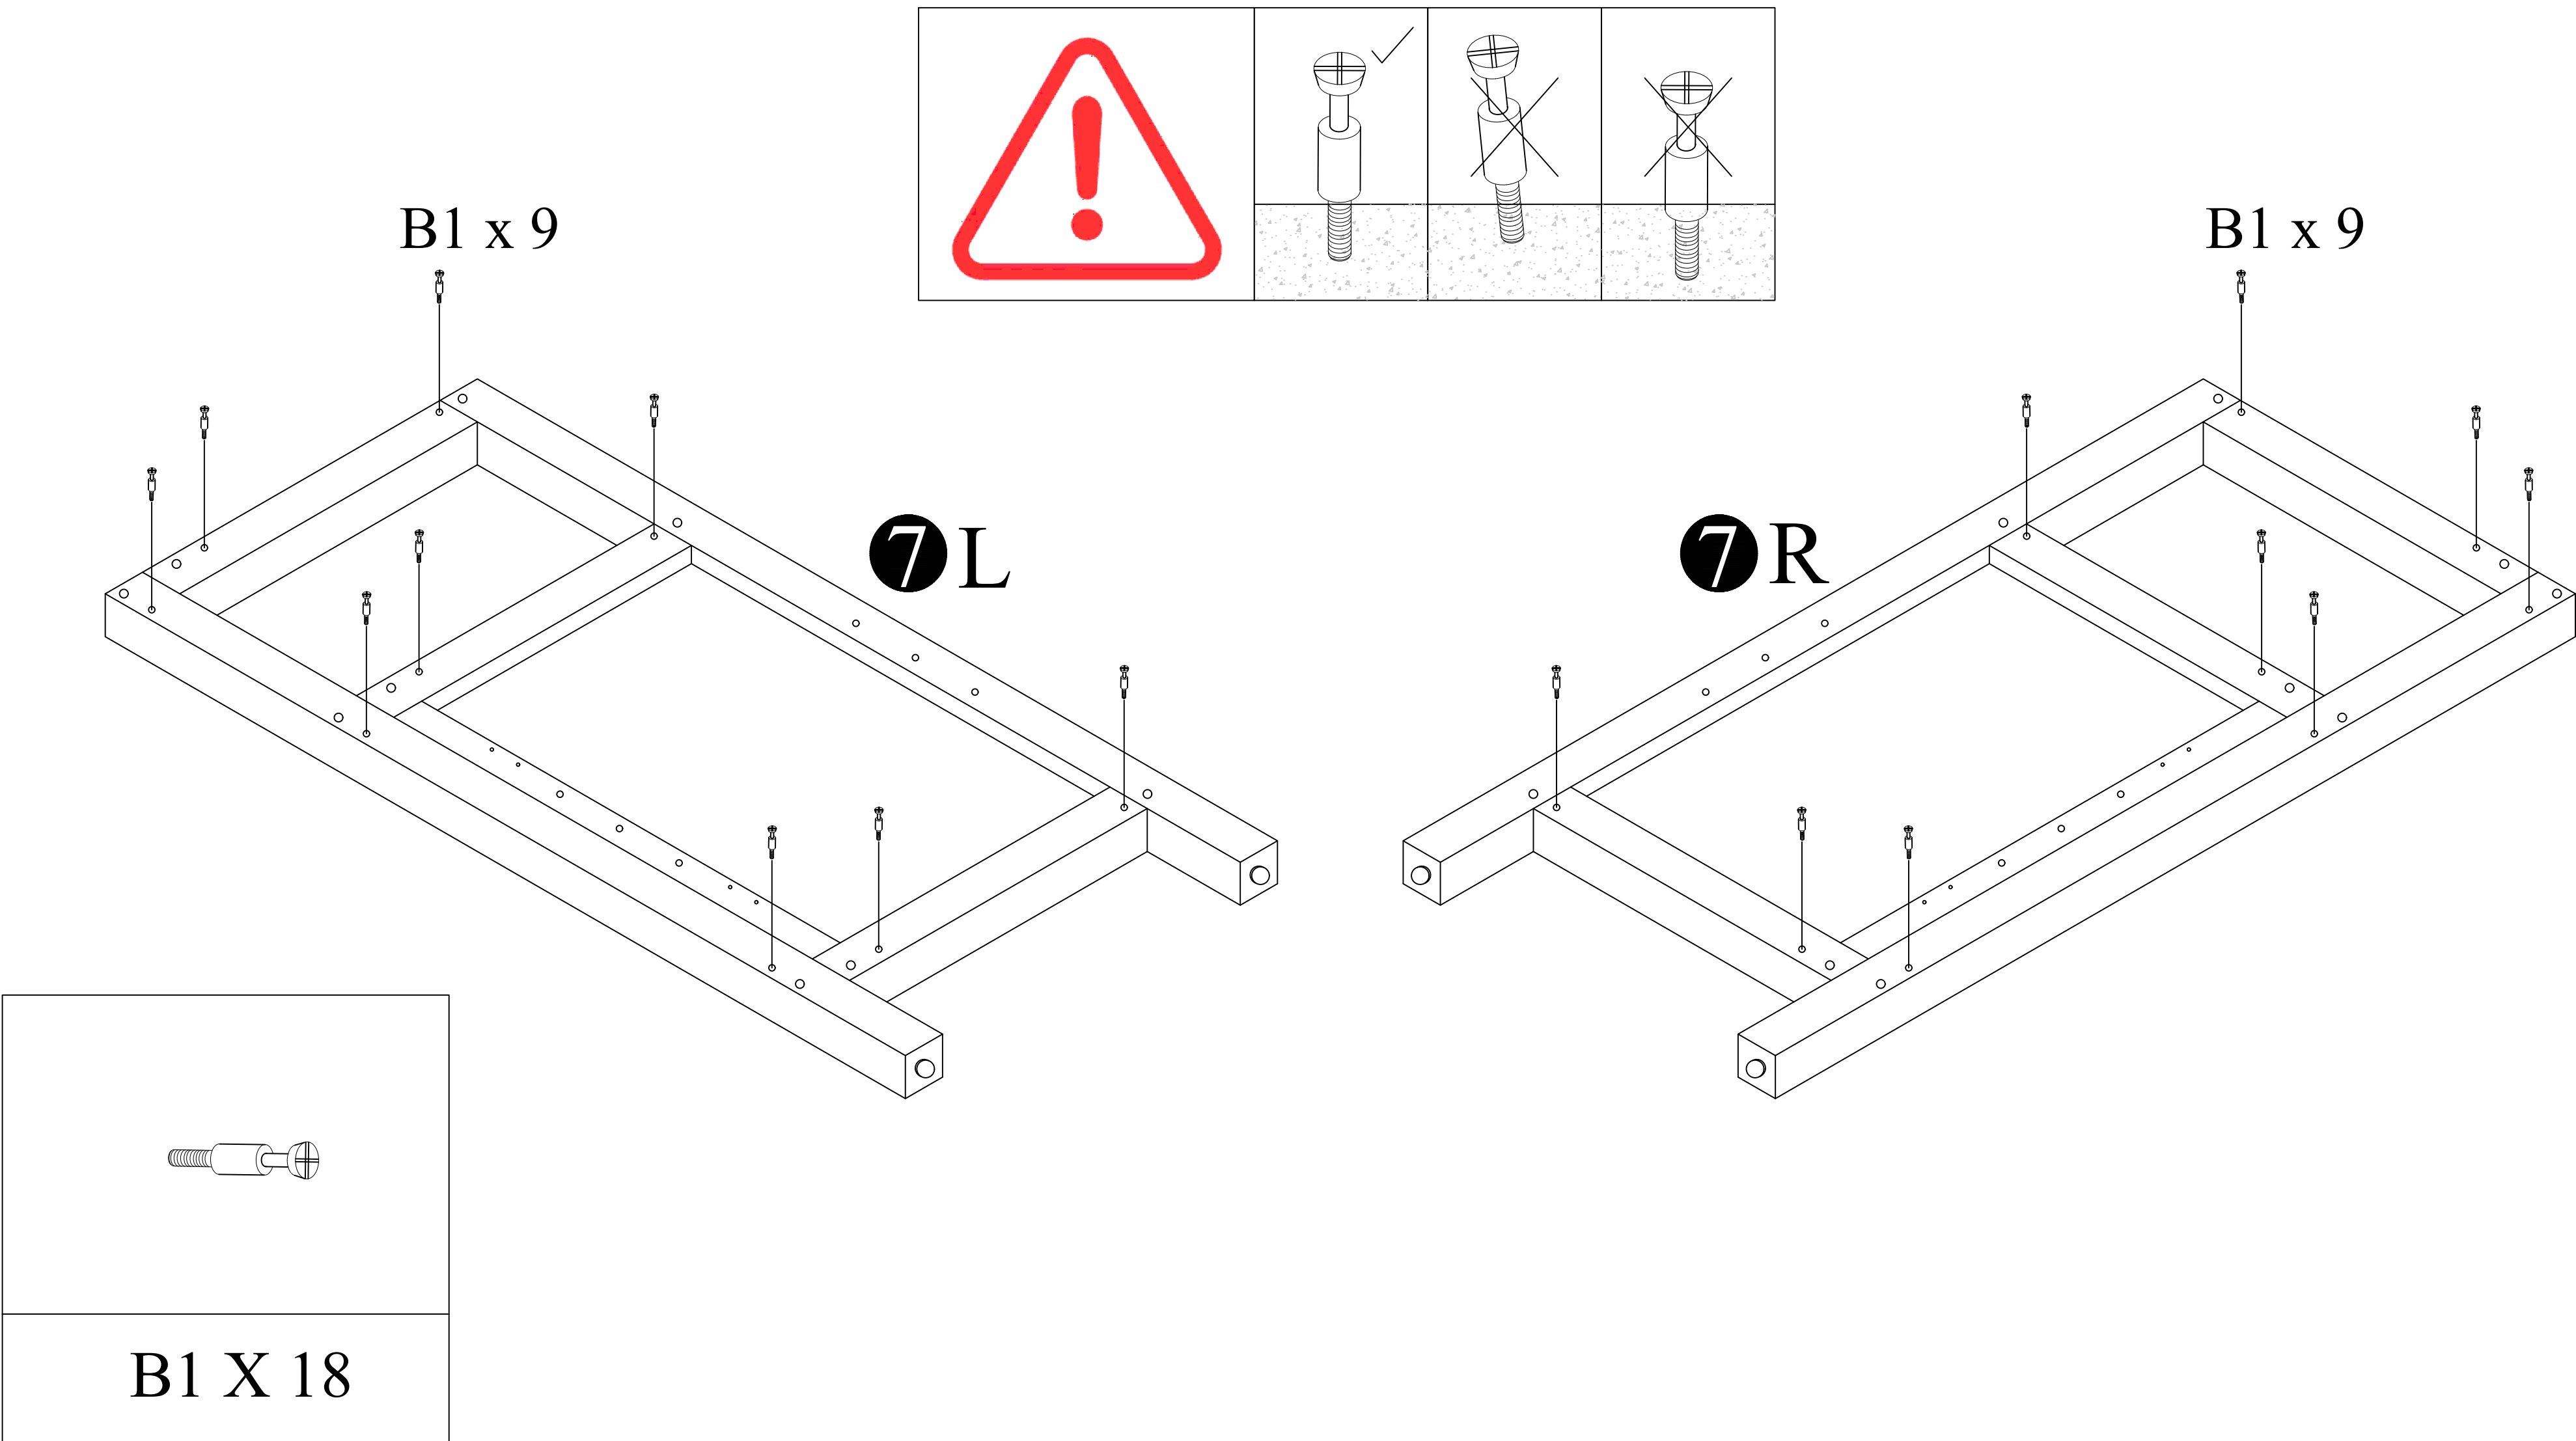Step 2






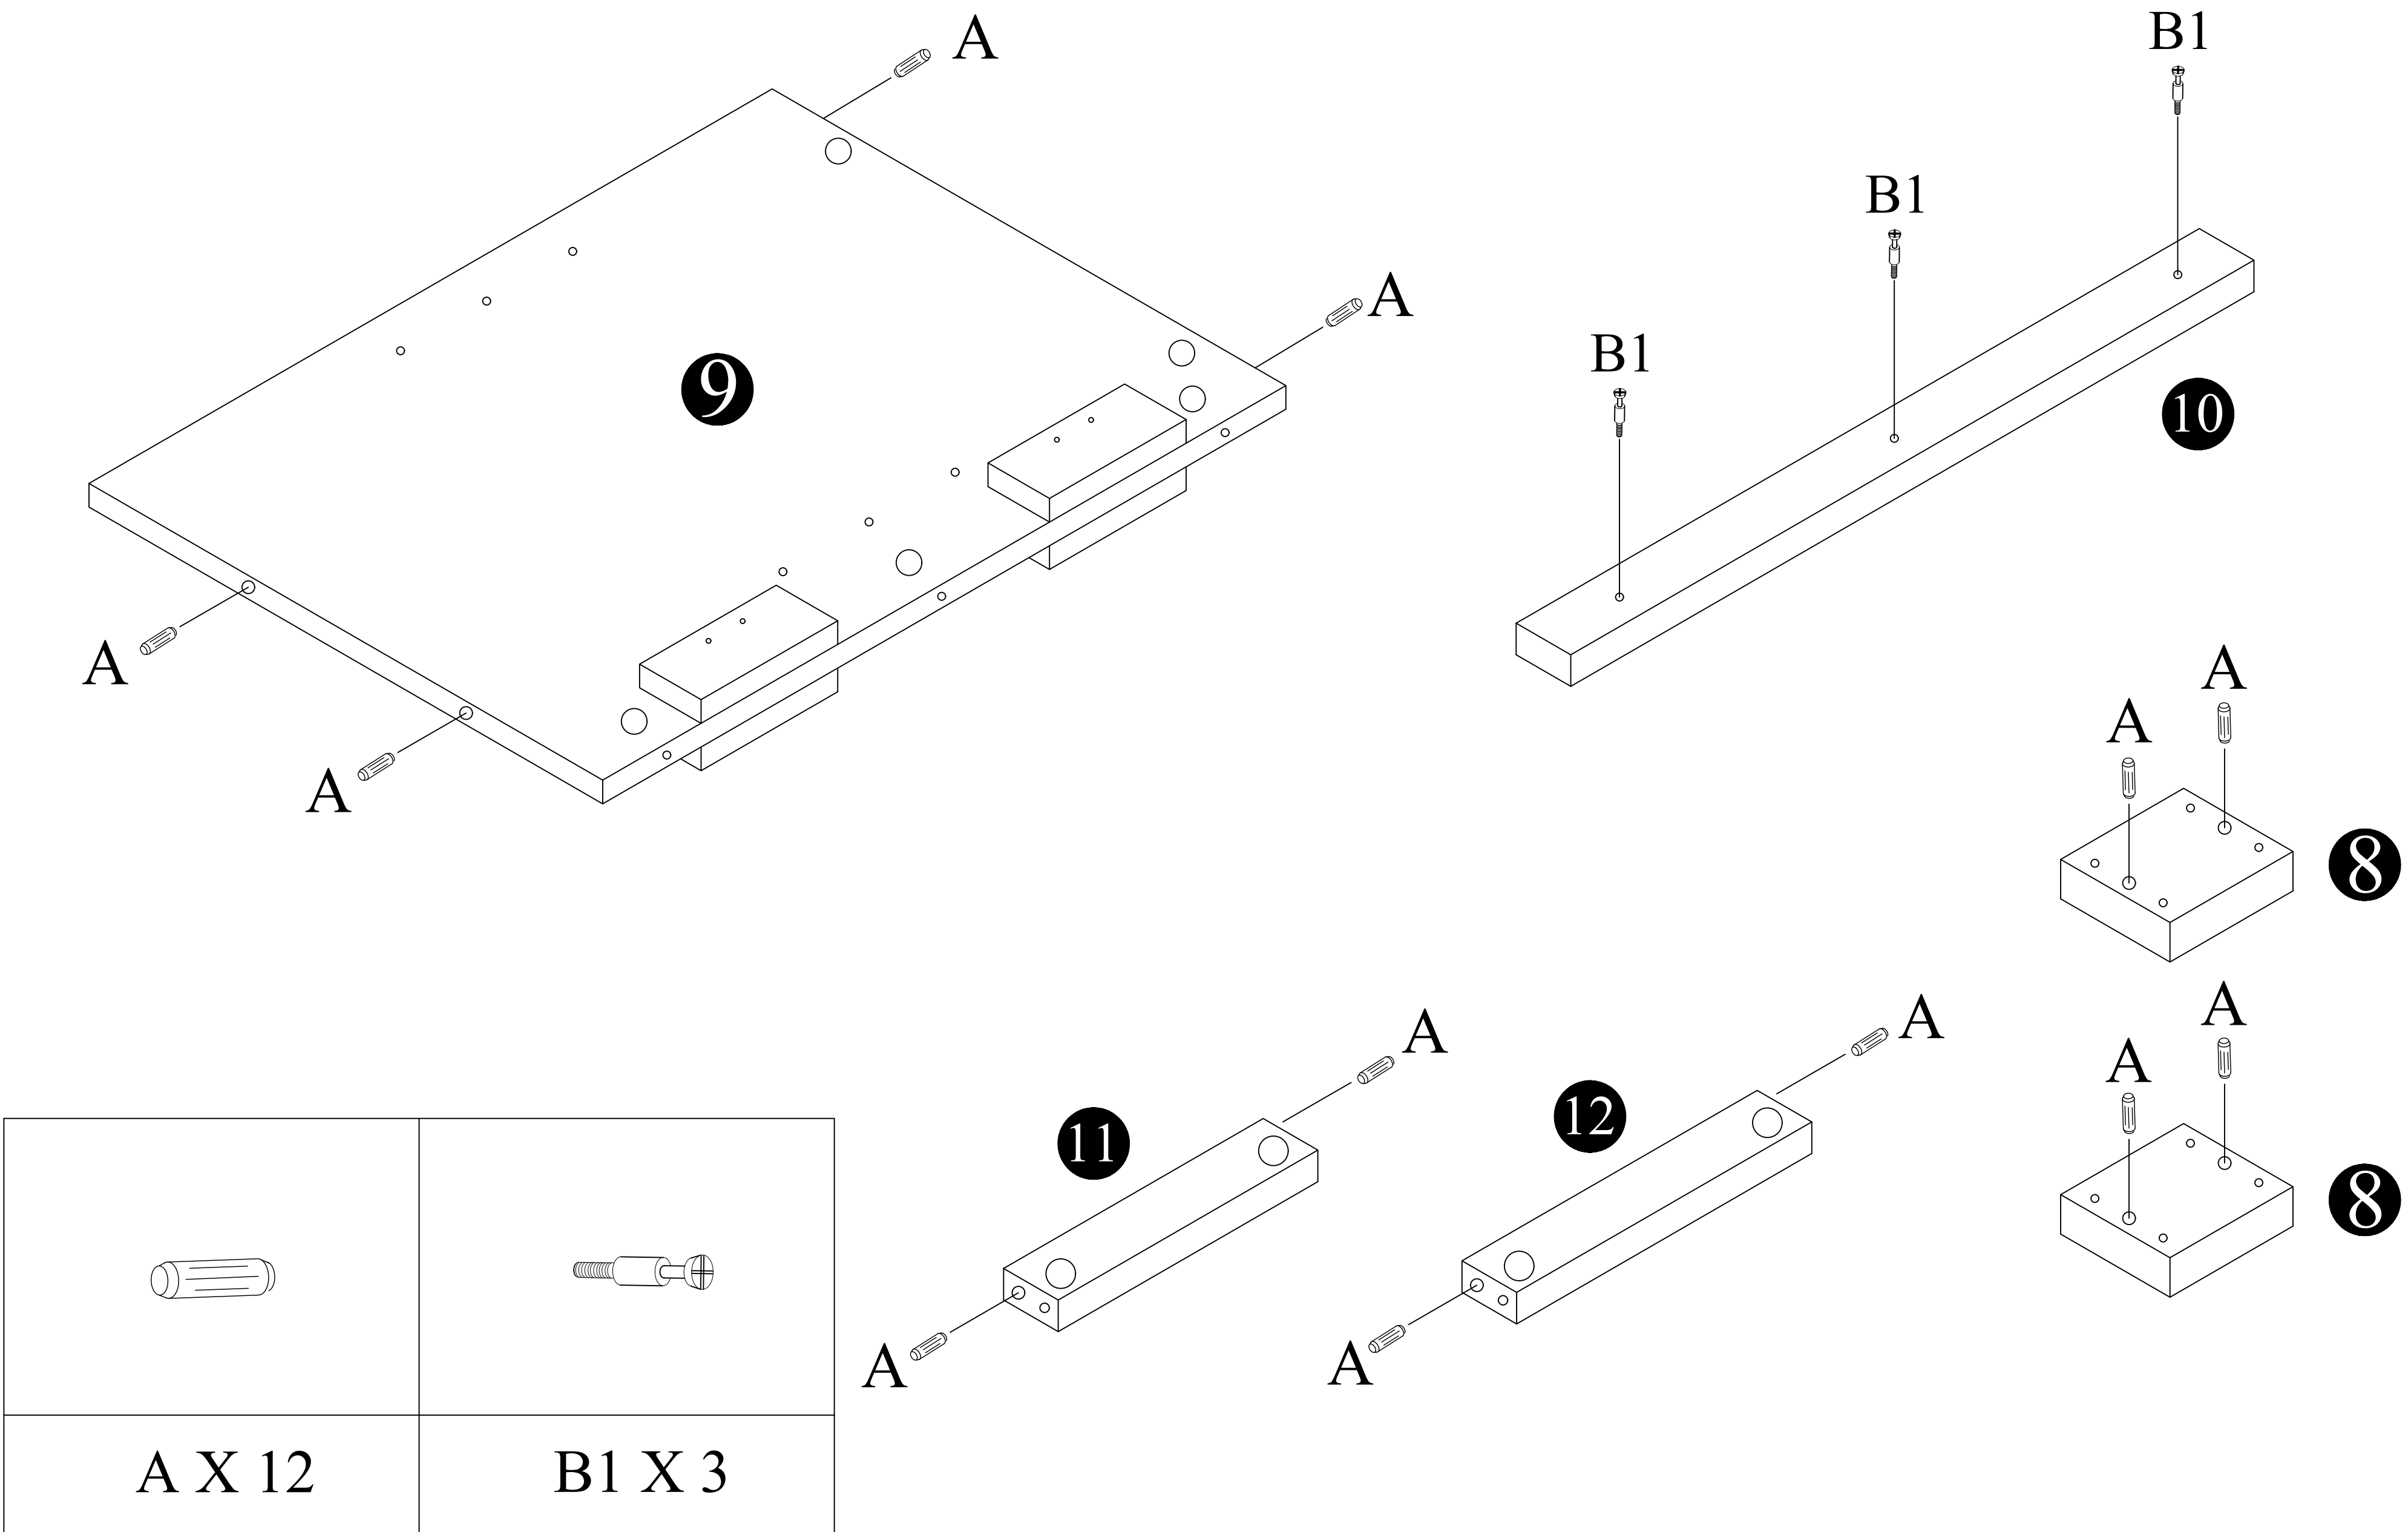Step 3




ASSEMBLY INSTRUCTION


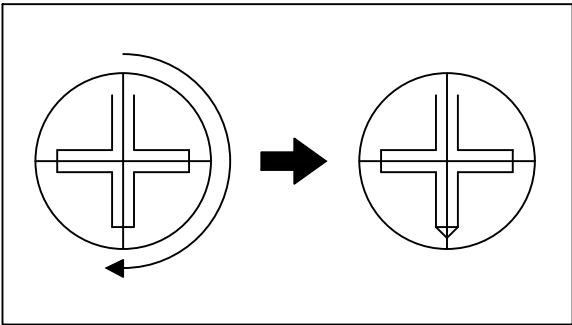
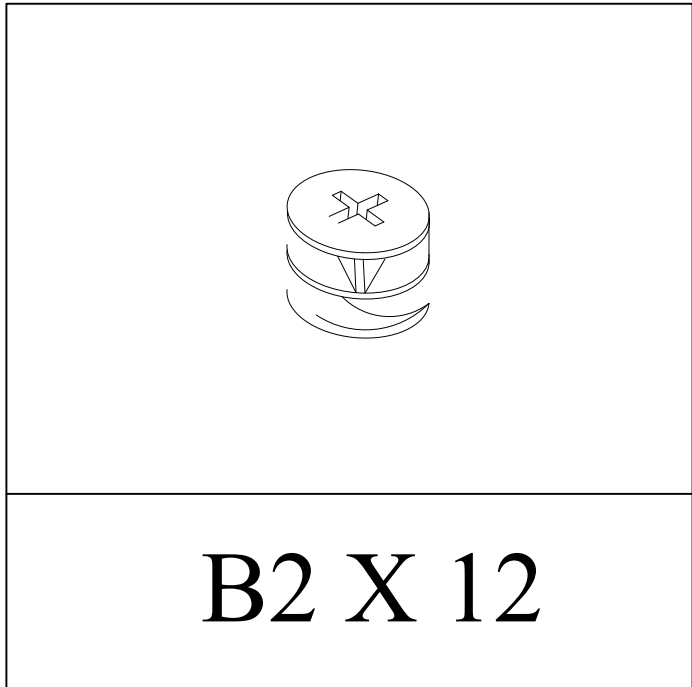
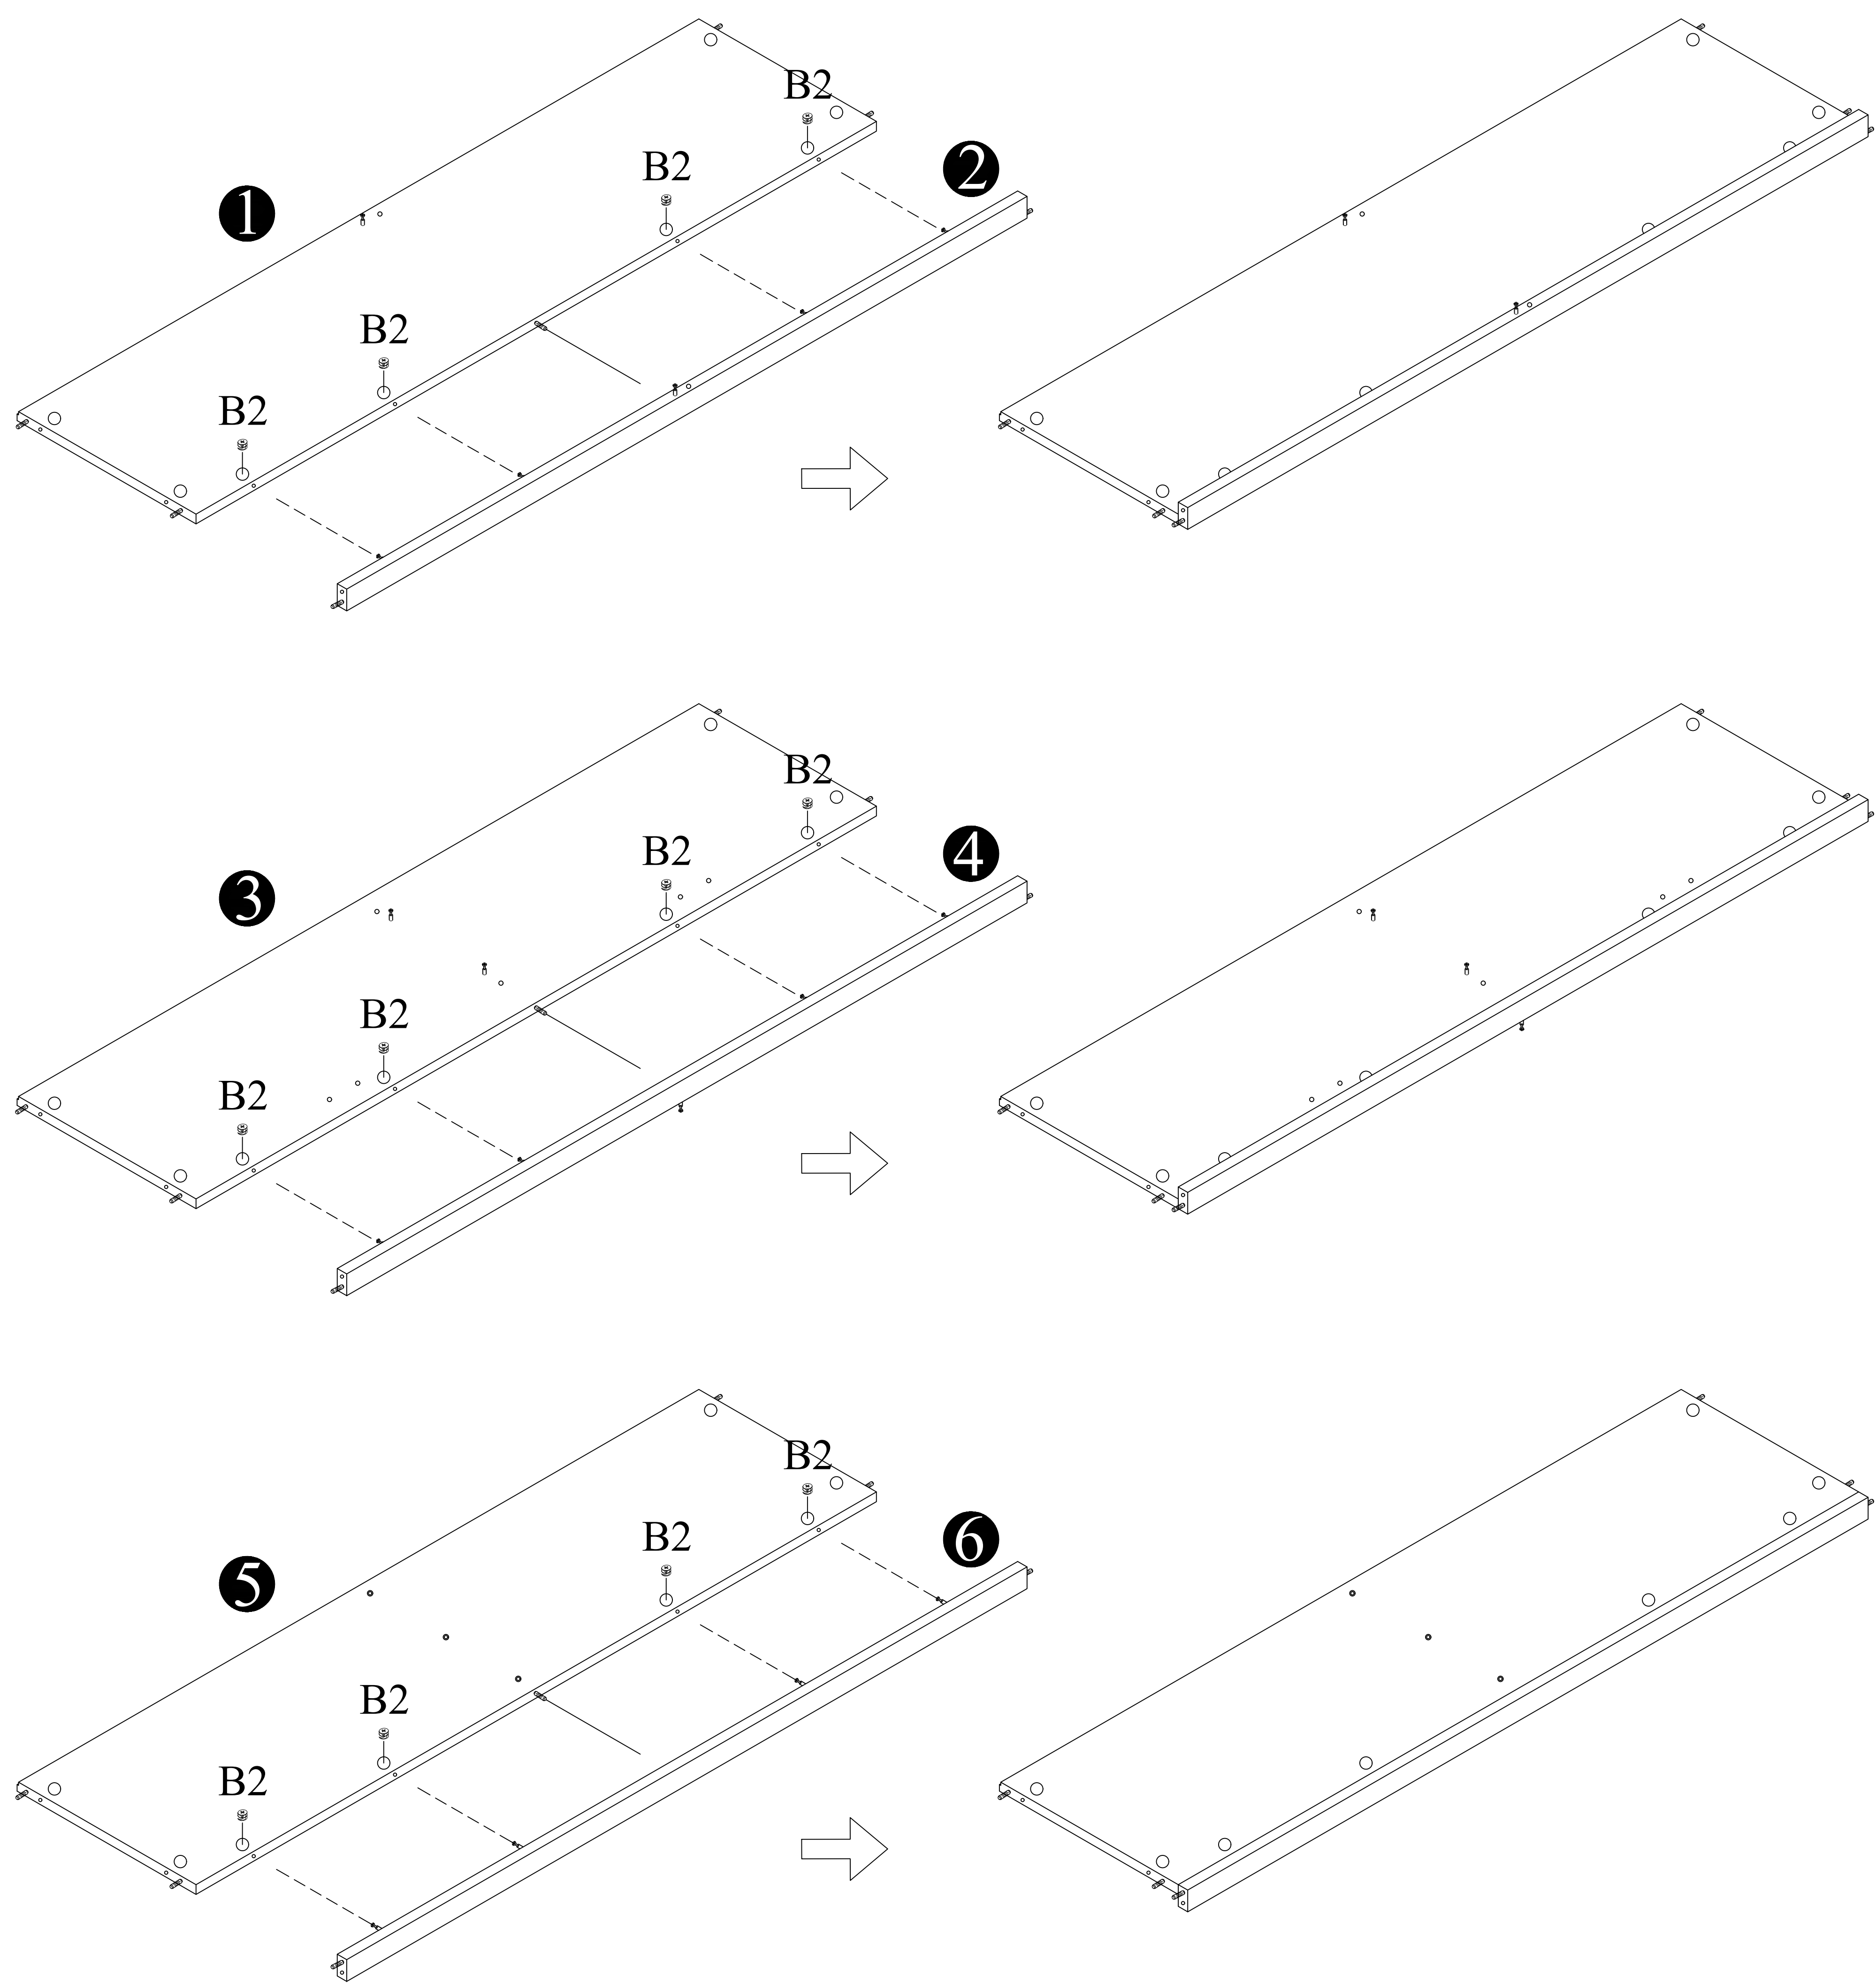
Step 4



ASSEMBLY INSTRUCTION

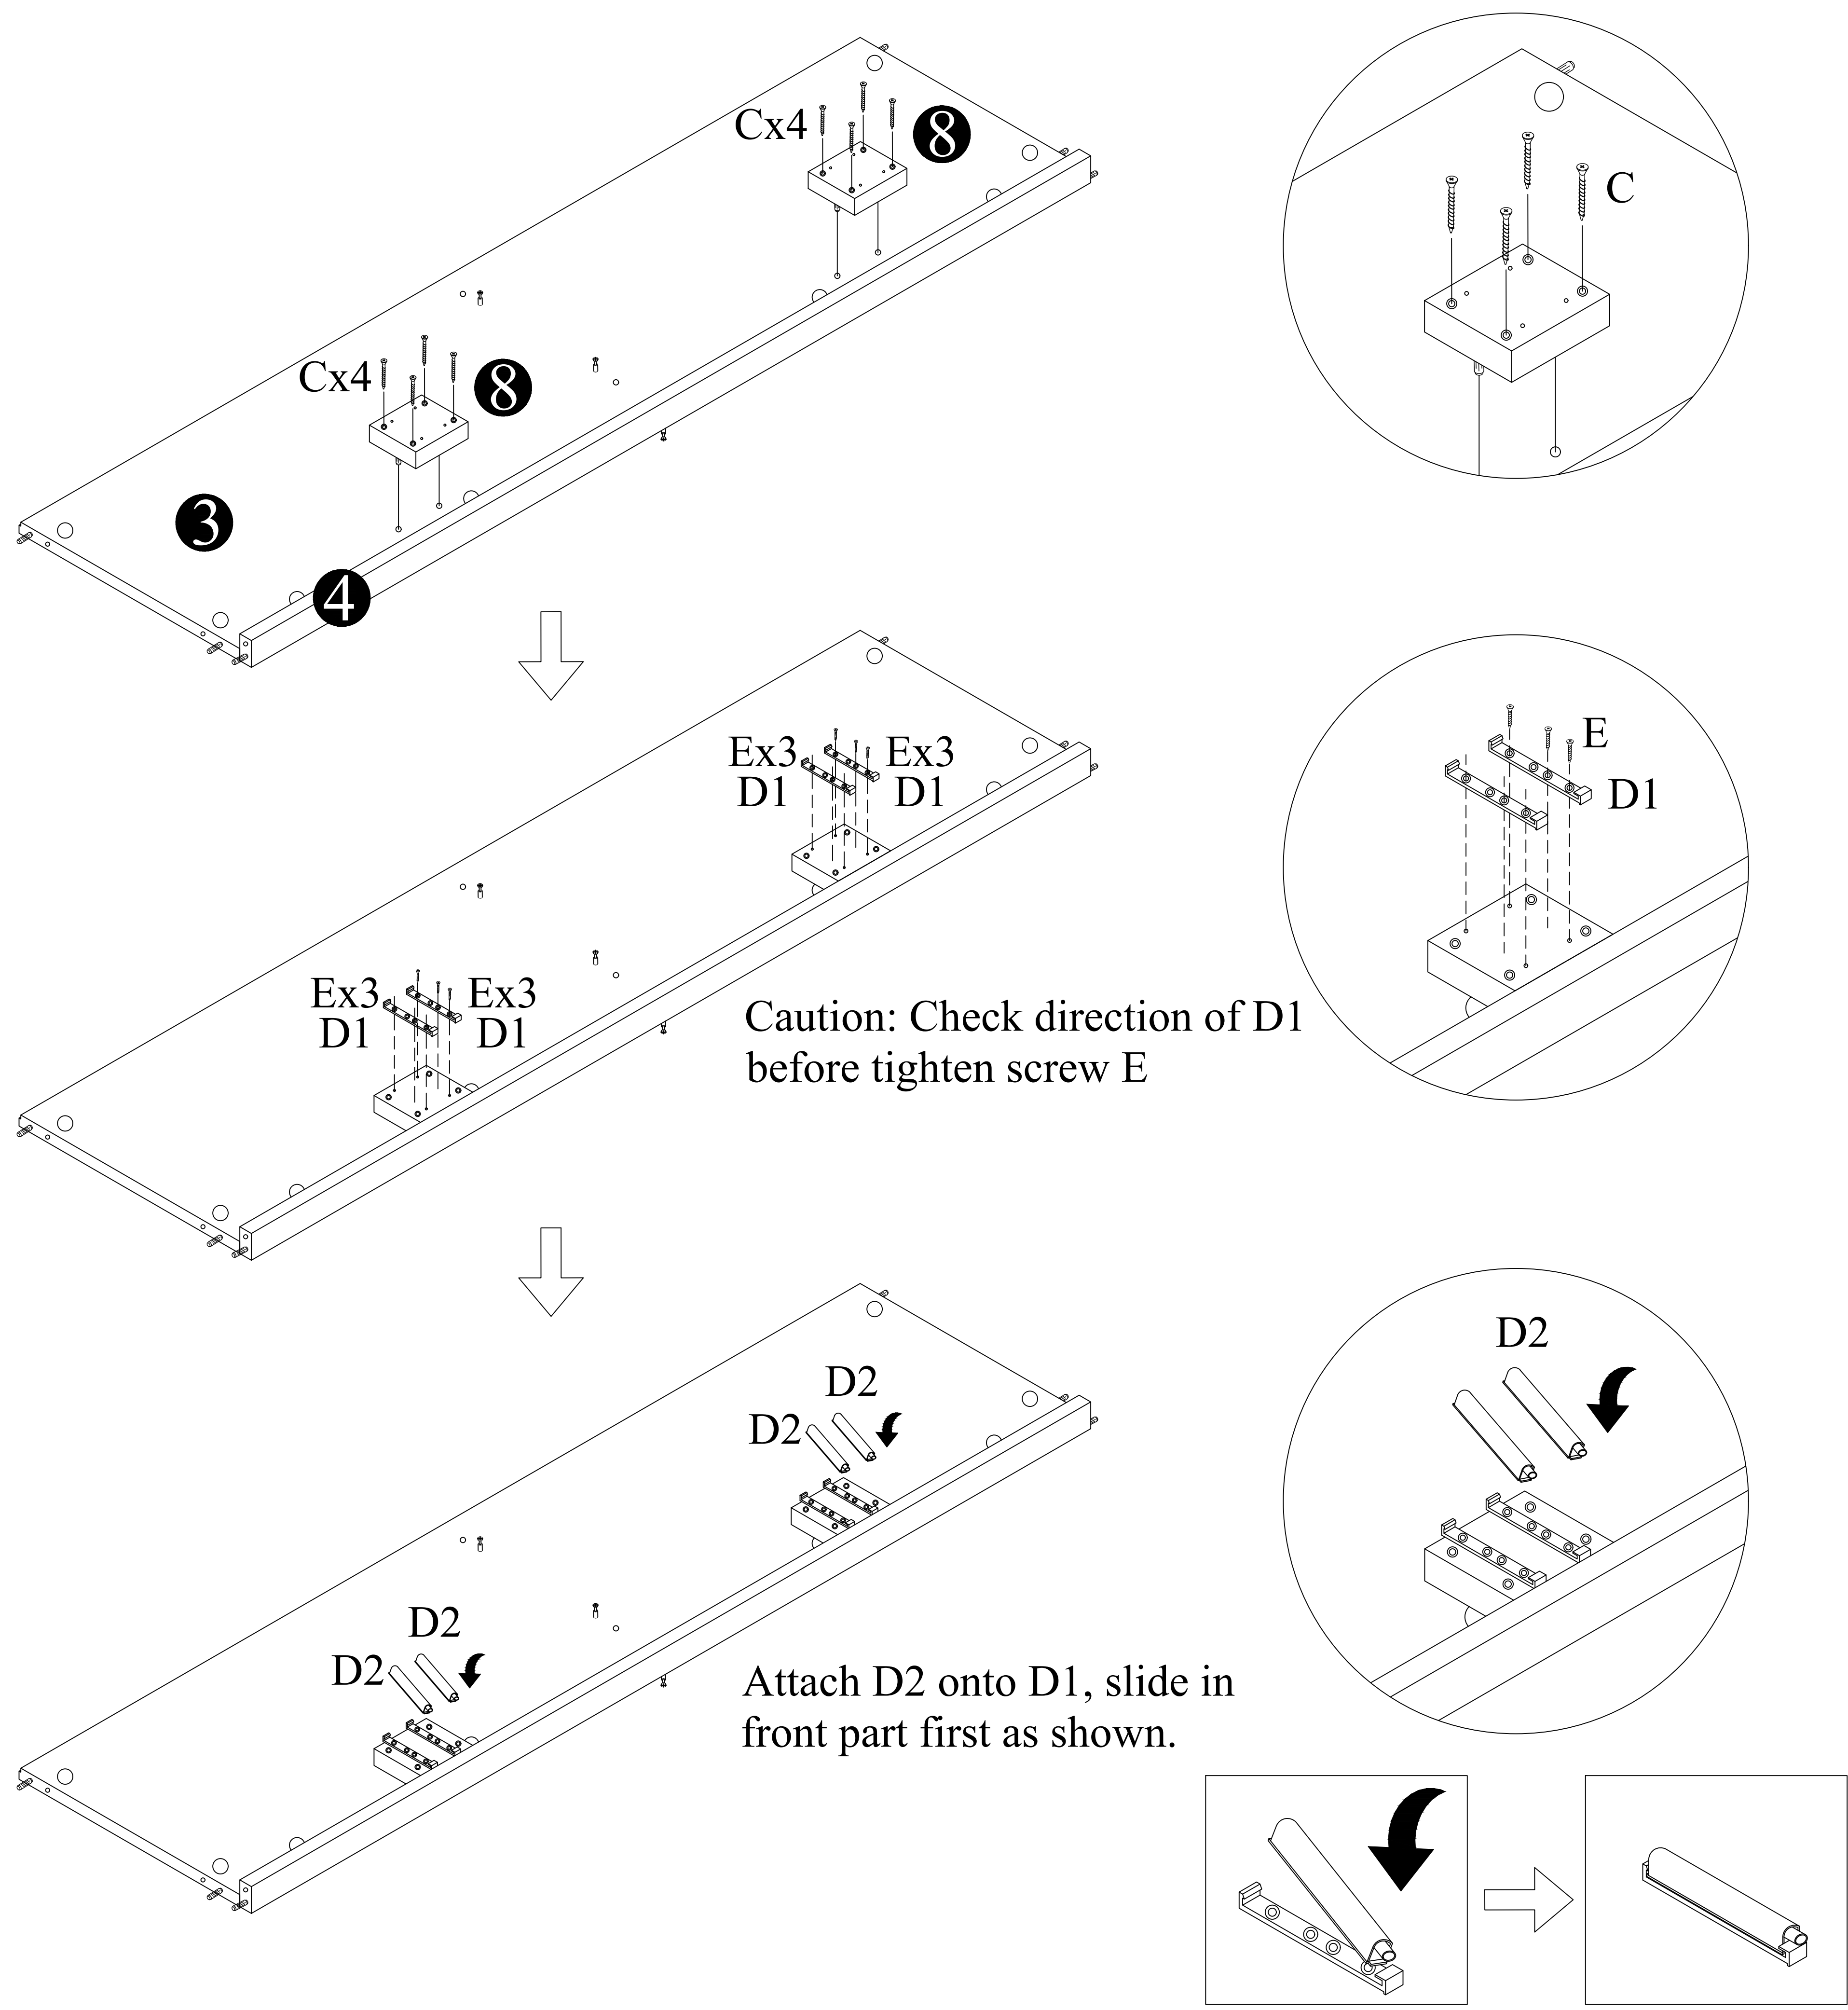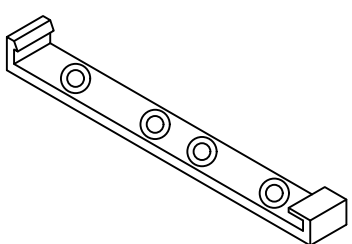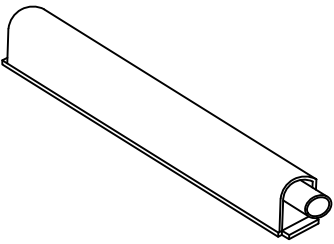
Step 5 Push rebound device installation, please make sure all steps illustrated are strictly followed to avoid malfunction of hardware in daily use. **Make sure D2 is working before installation.**




 M4*32mm			 M3.5*16mm
C X 8	D1 X 4	D2 X 4	E X 12

ASSEMBLY INSTRUCTION

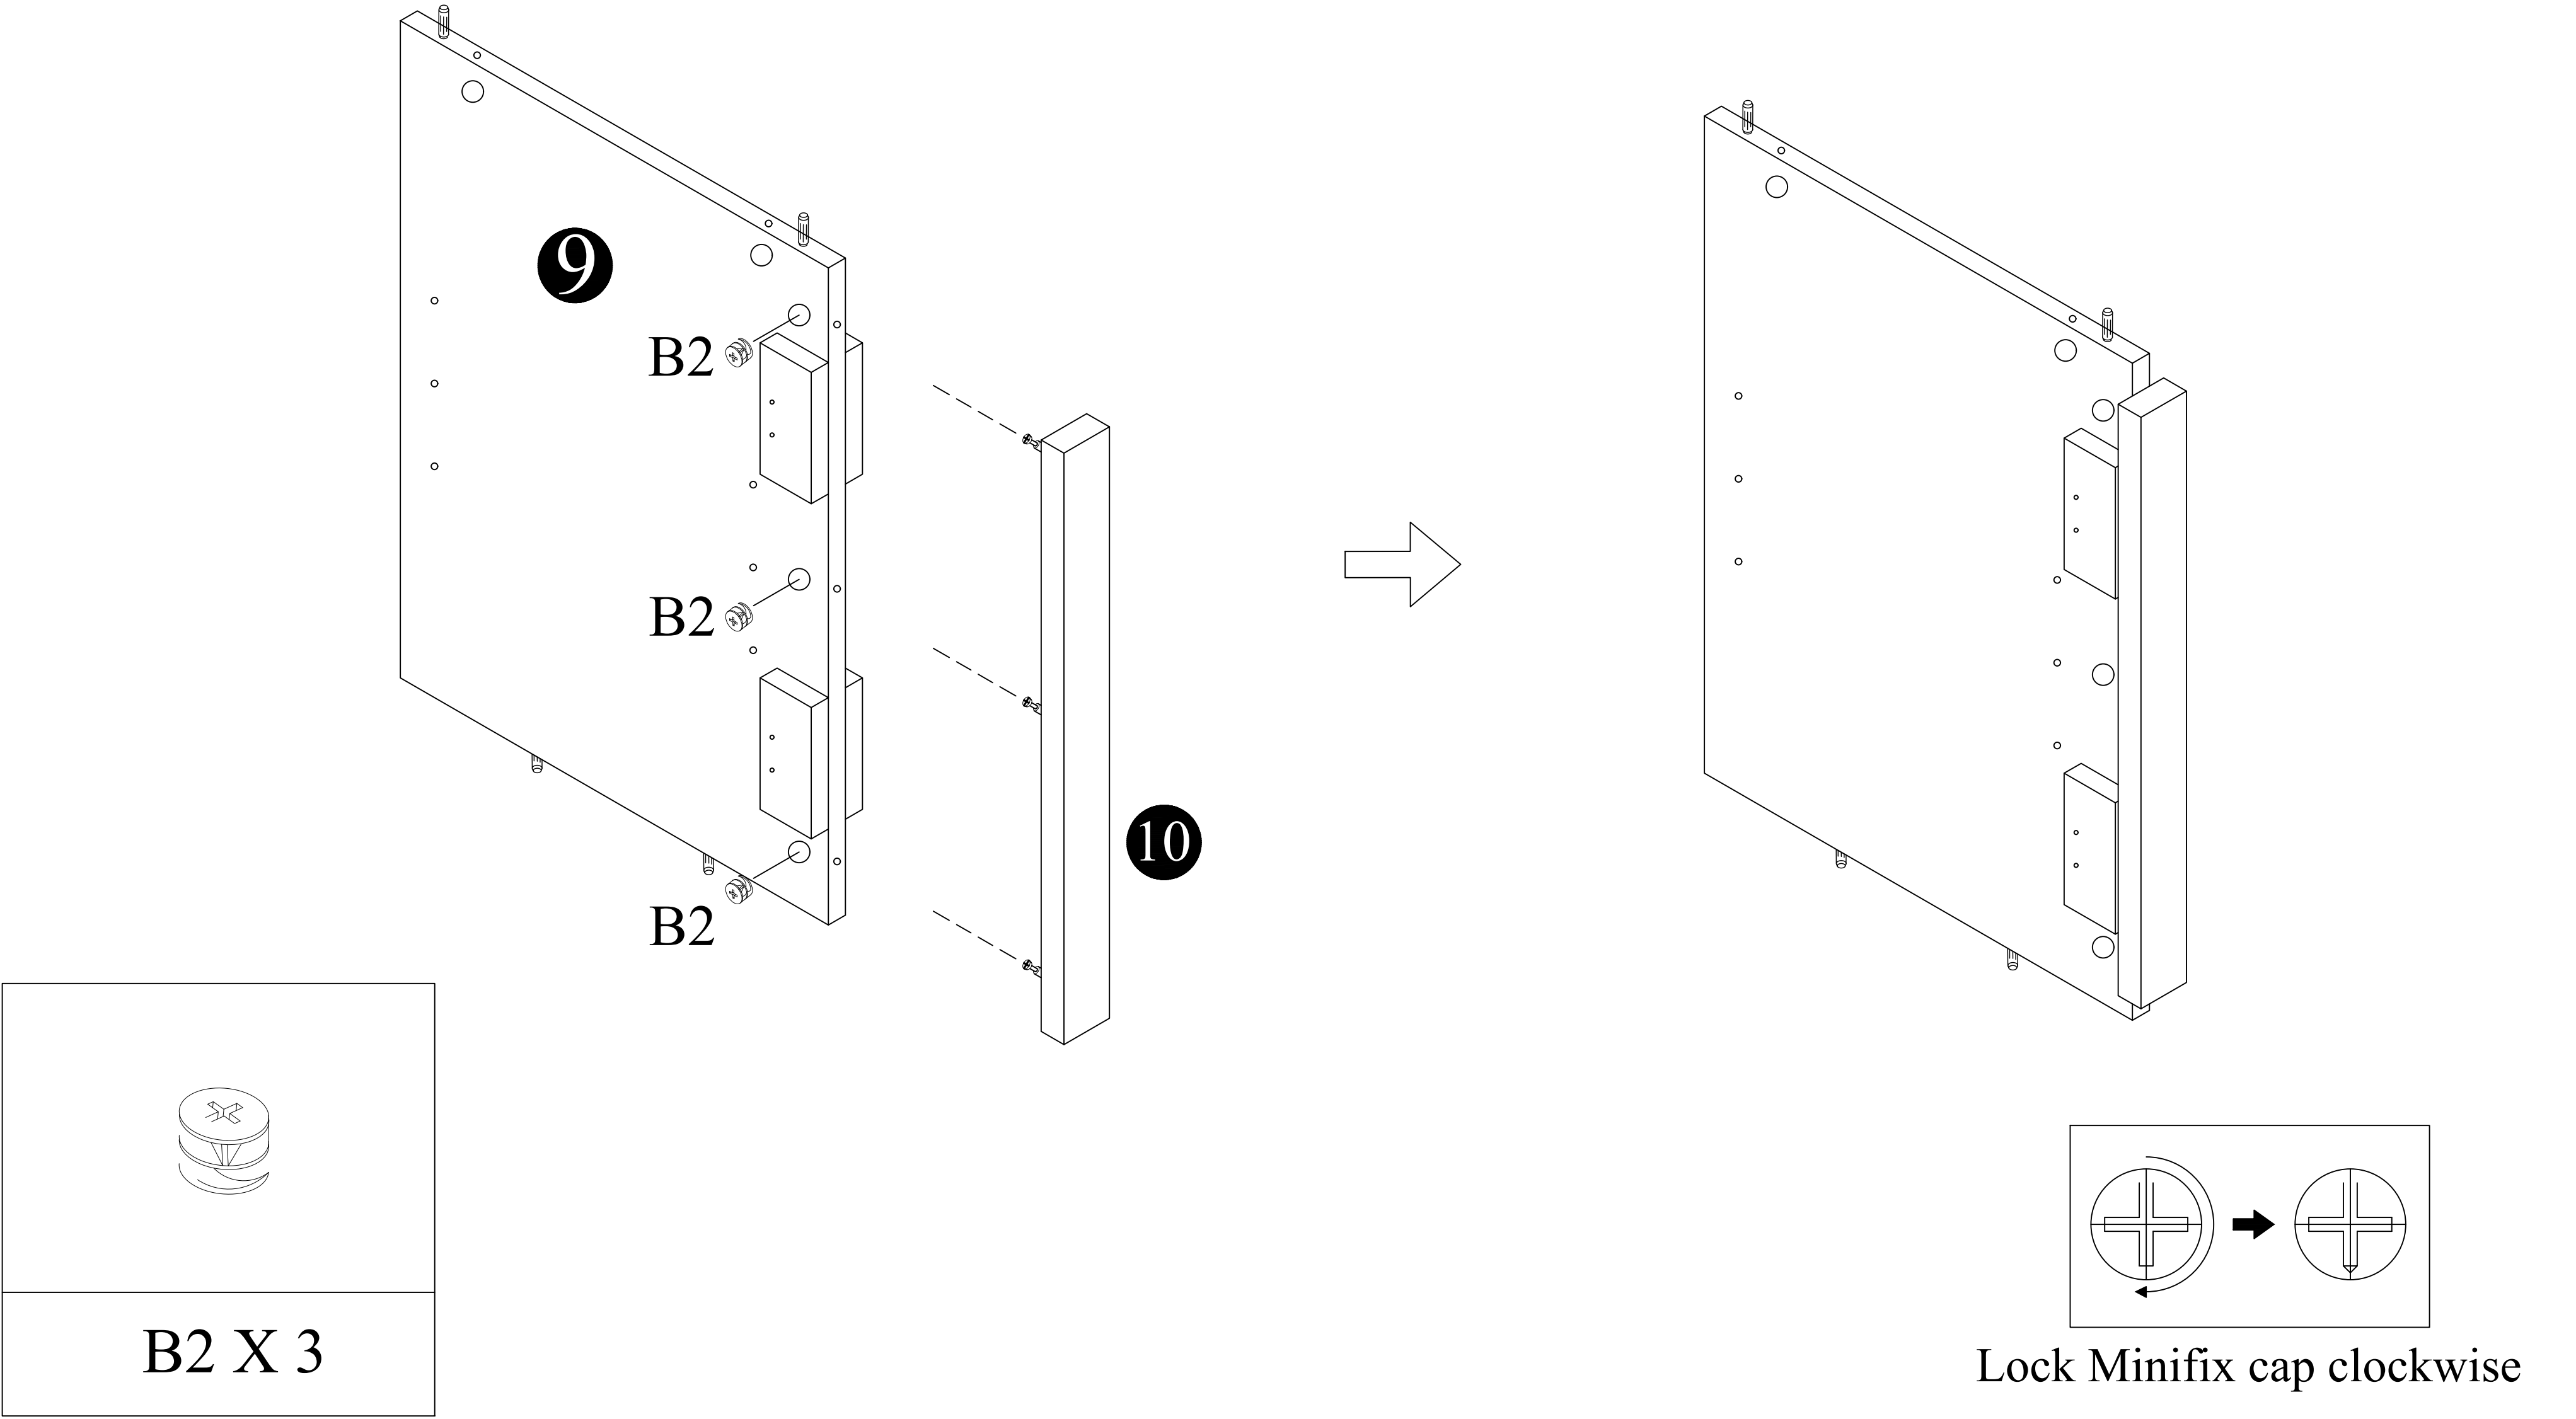Step 6






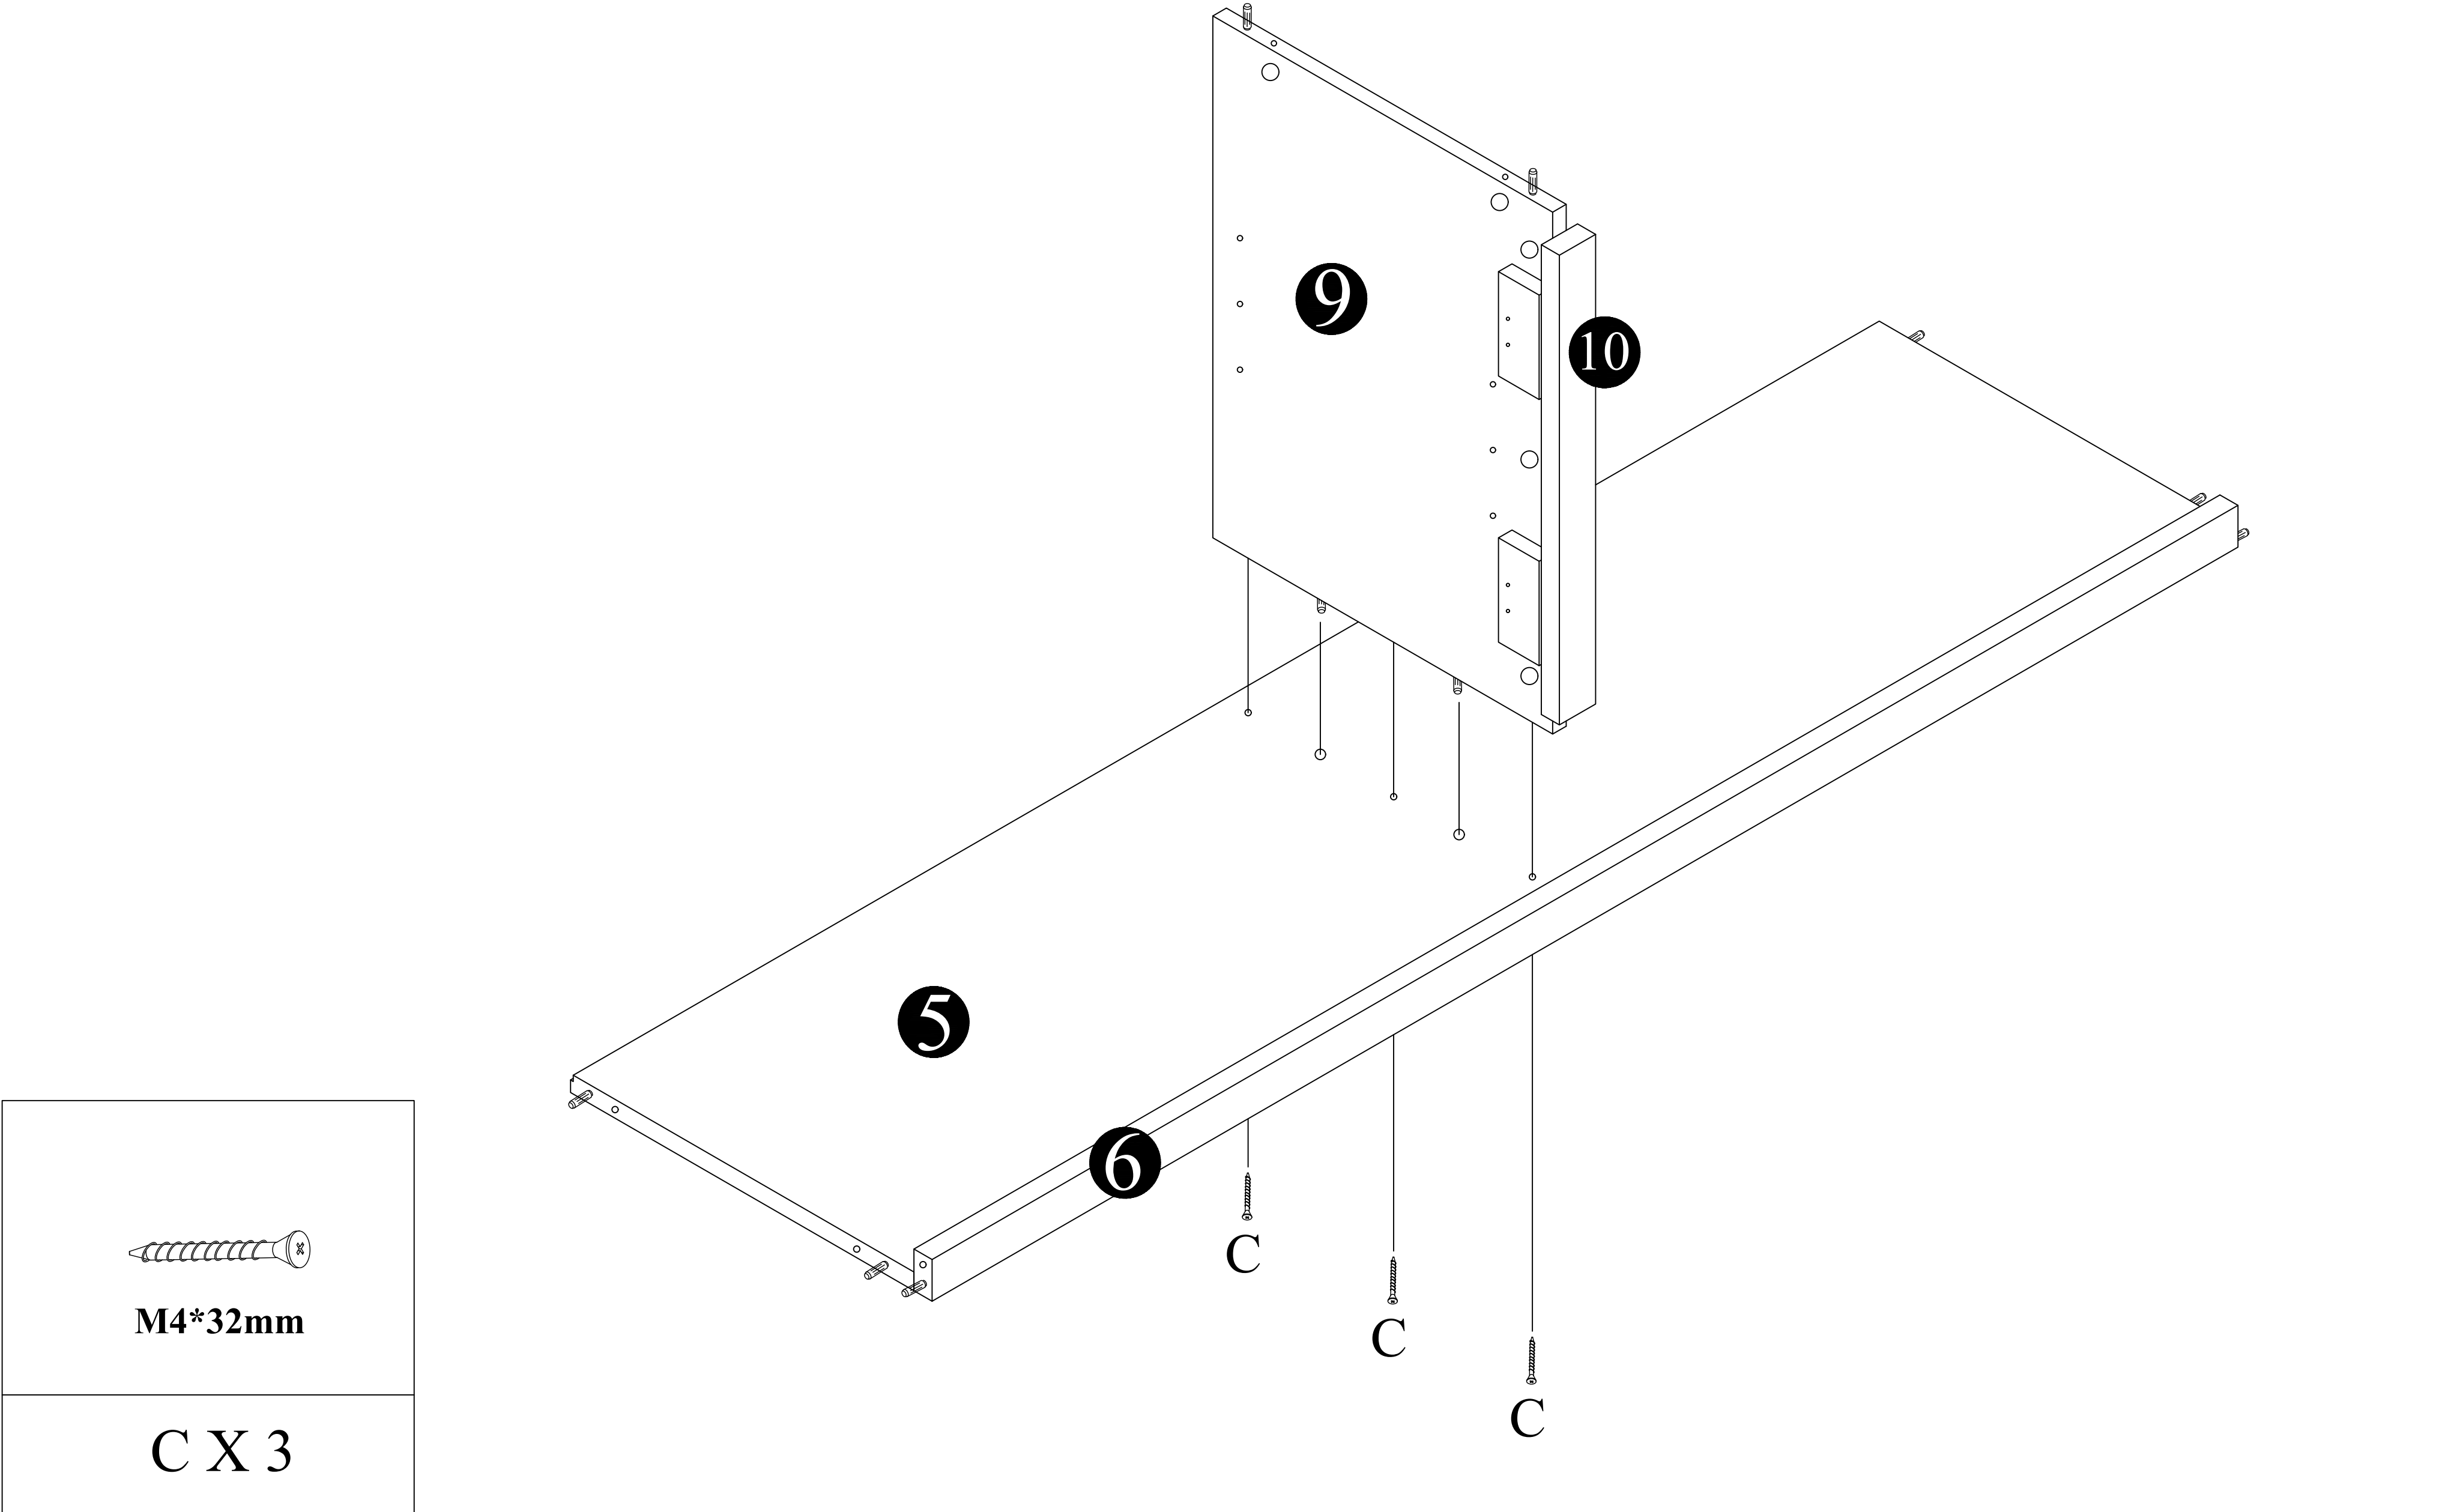Step 7






ASSEMBLY INSTRUCTION

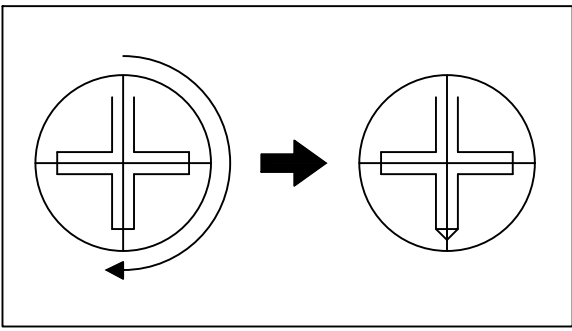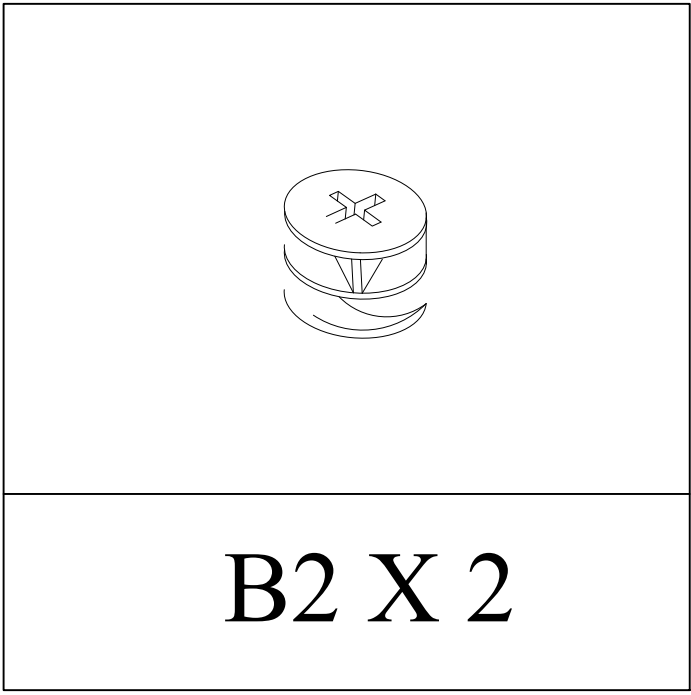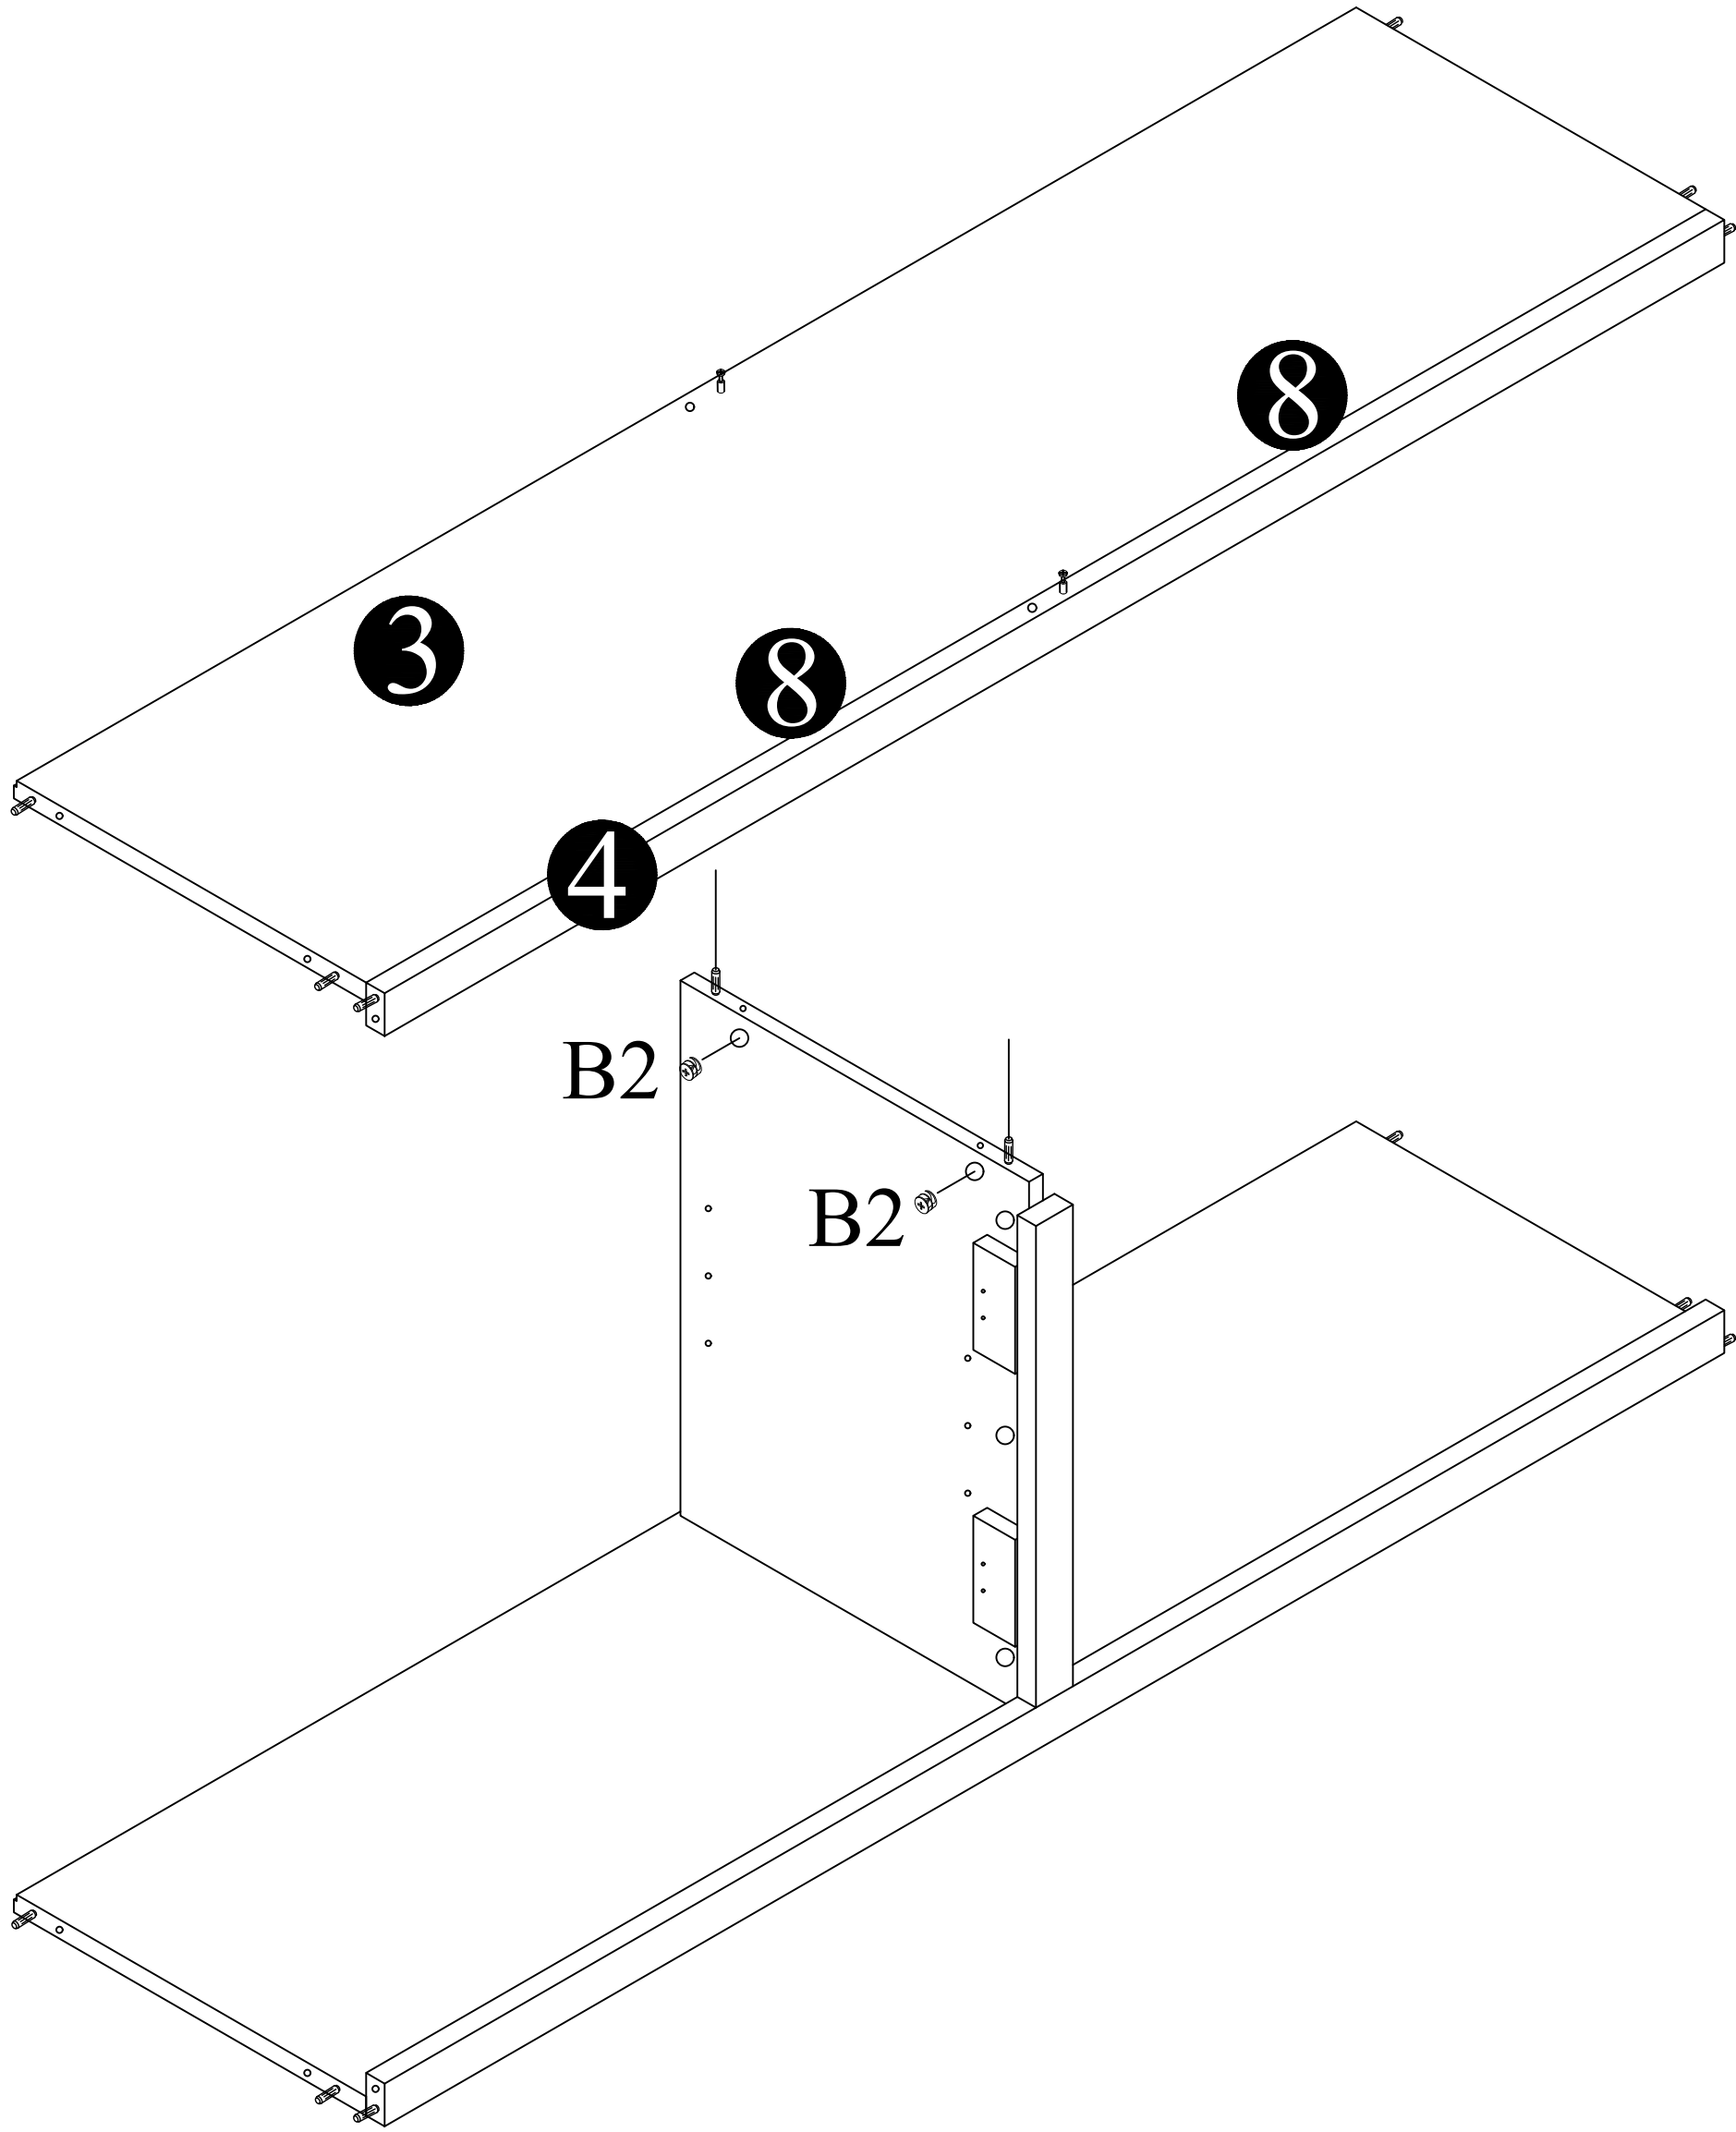Step 8



Lock Minifix cap clockwise

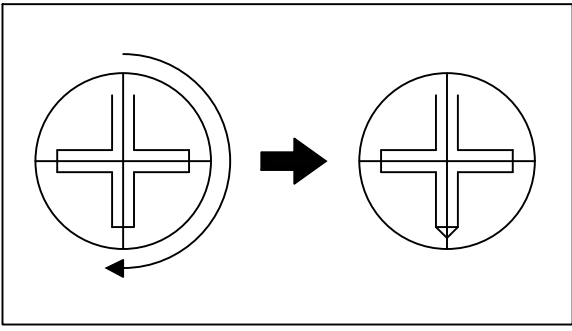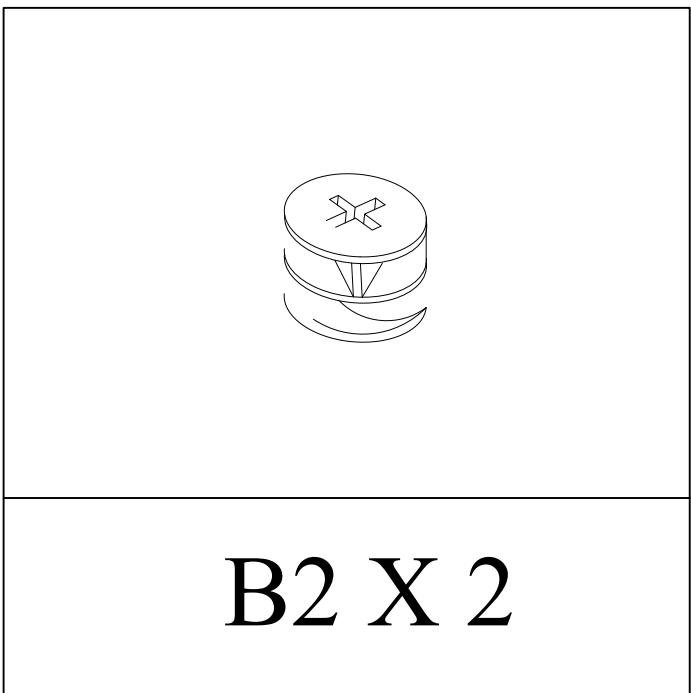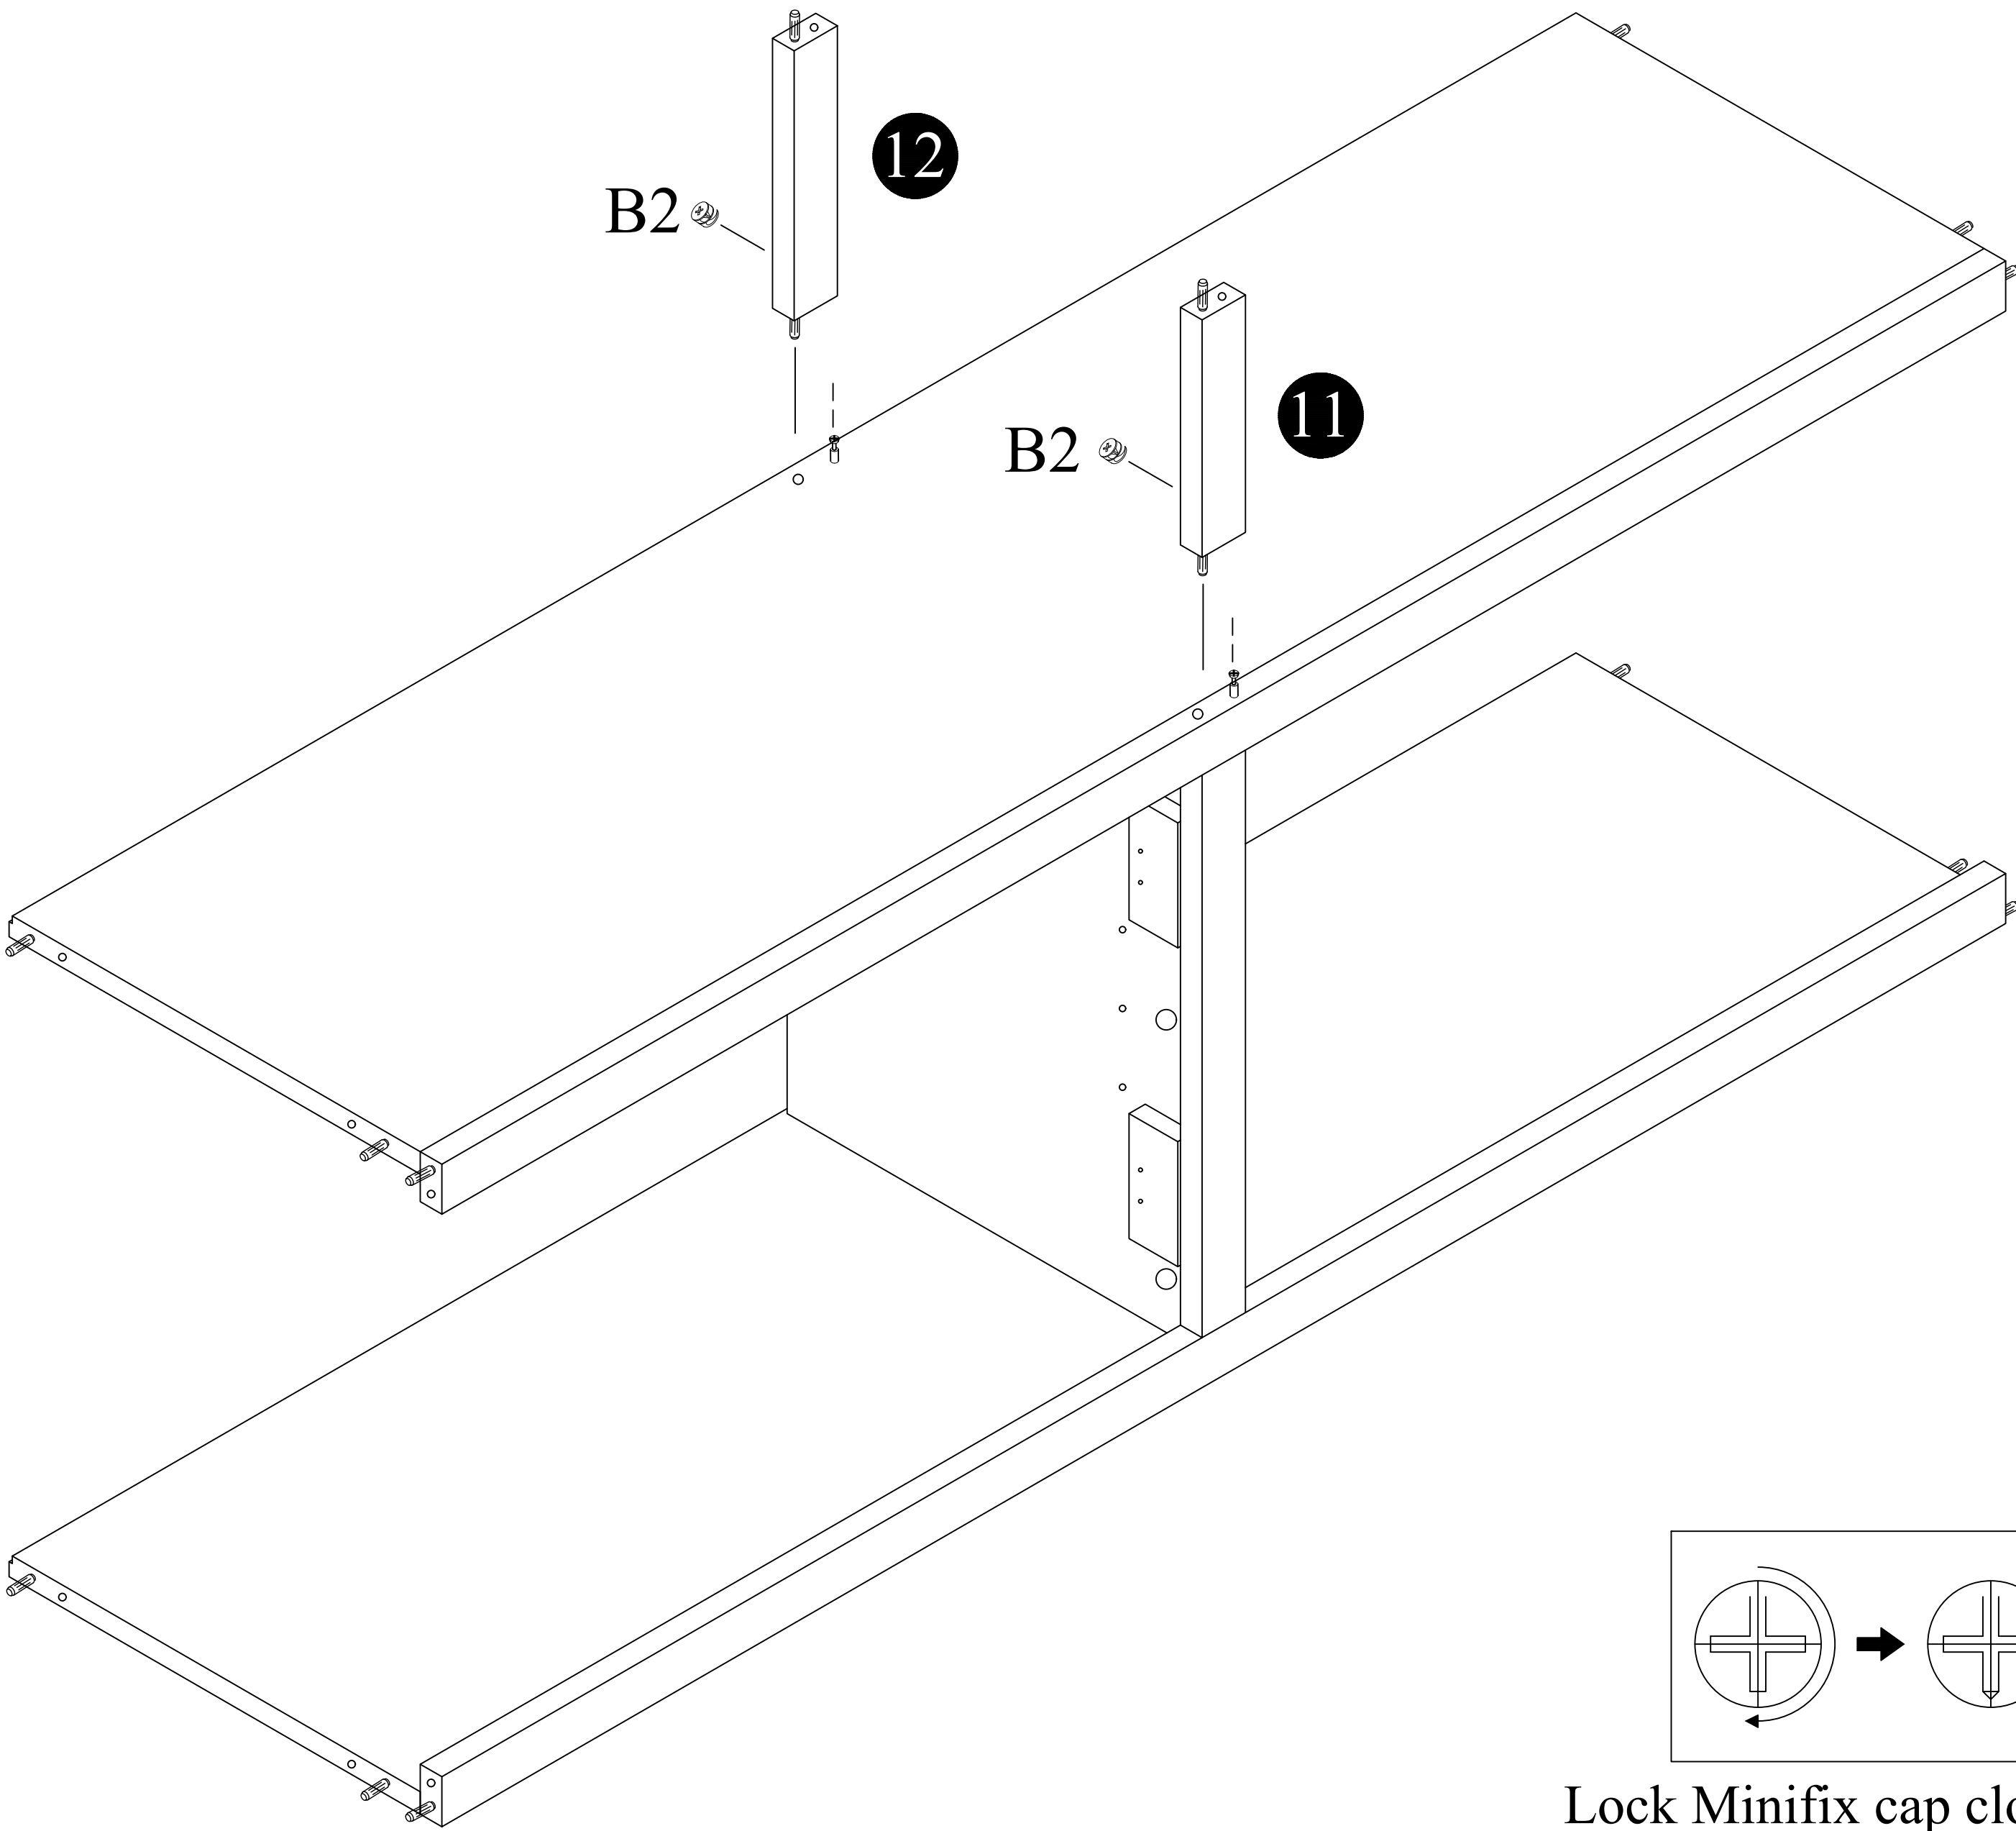
Step 9




Lock Minifix cap clockwise

ASSEMBLY INSTRUCTION

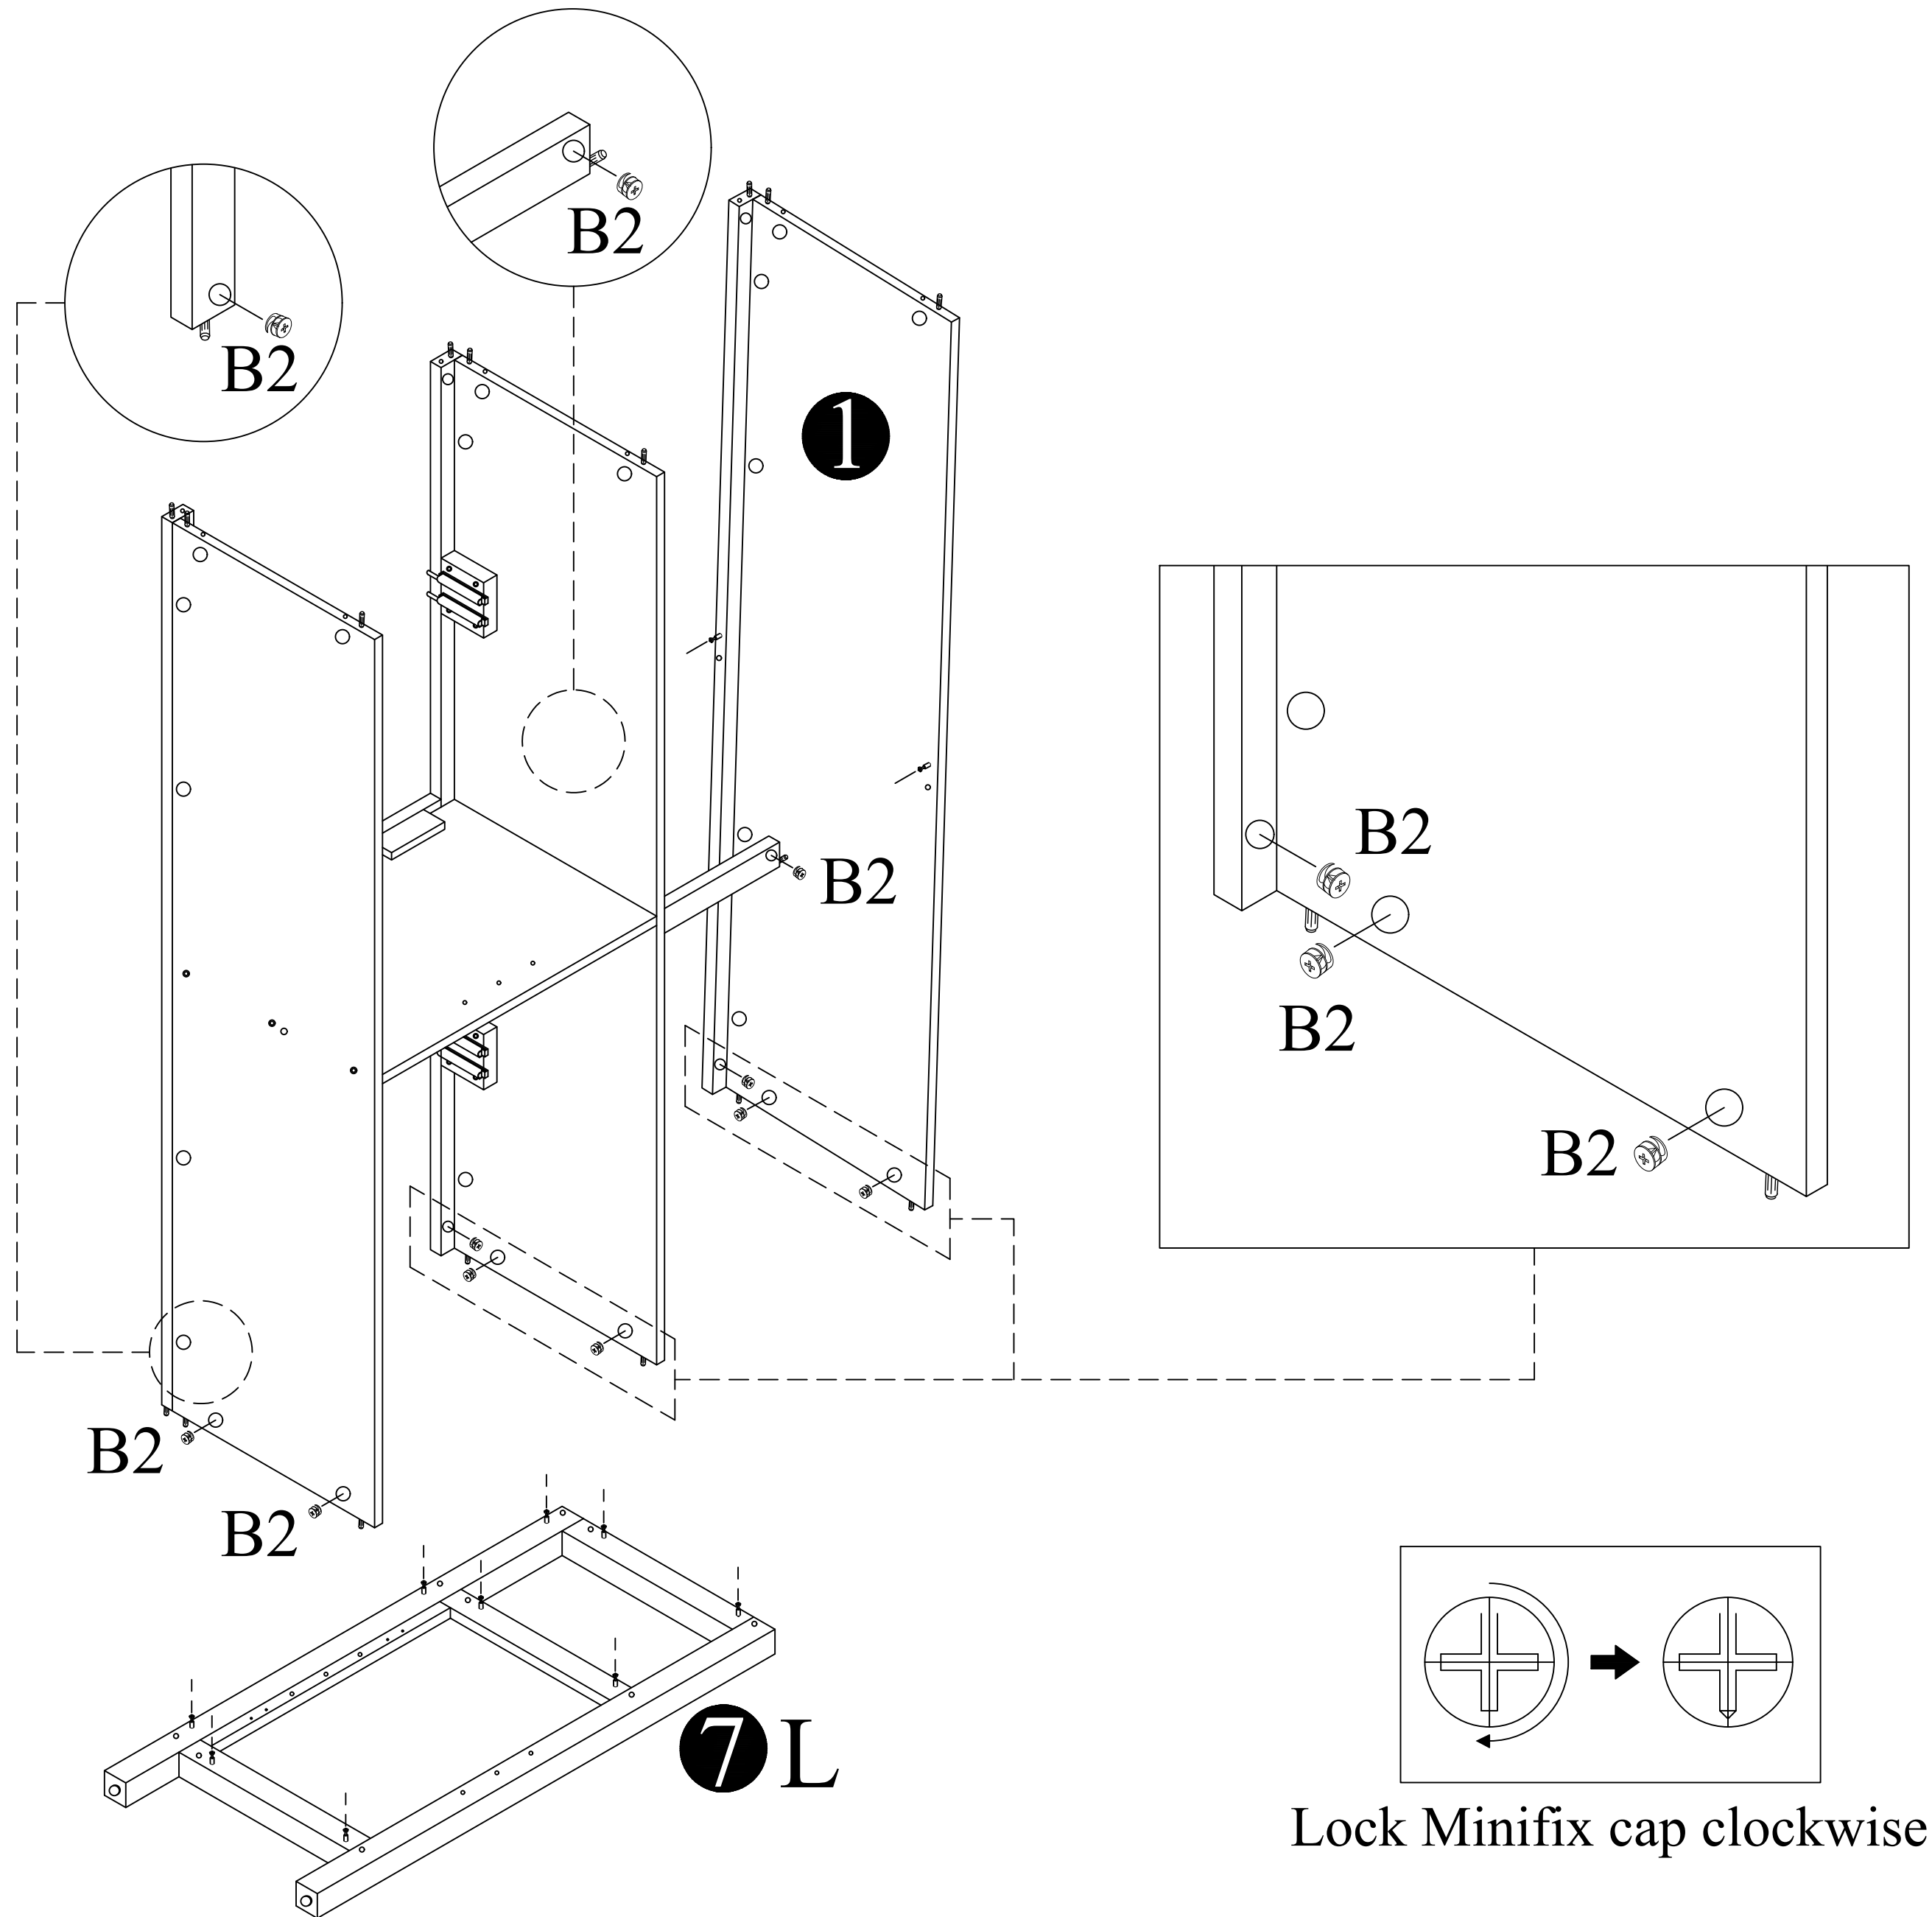Step 10




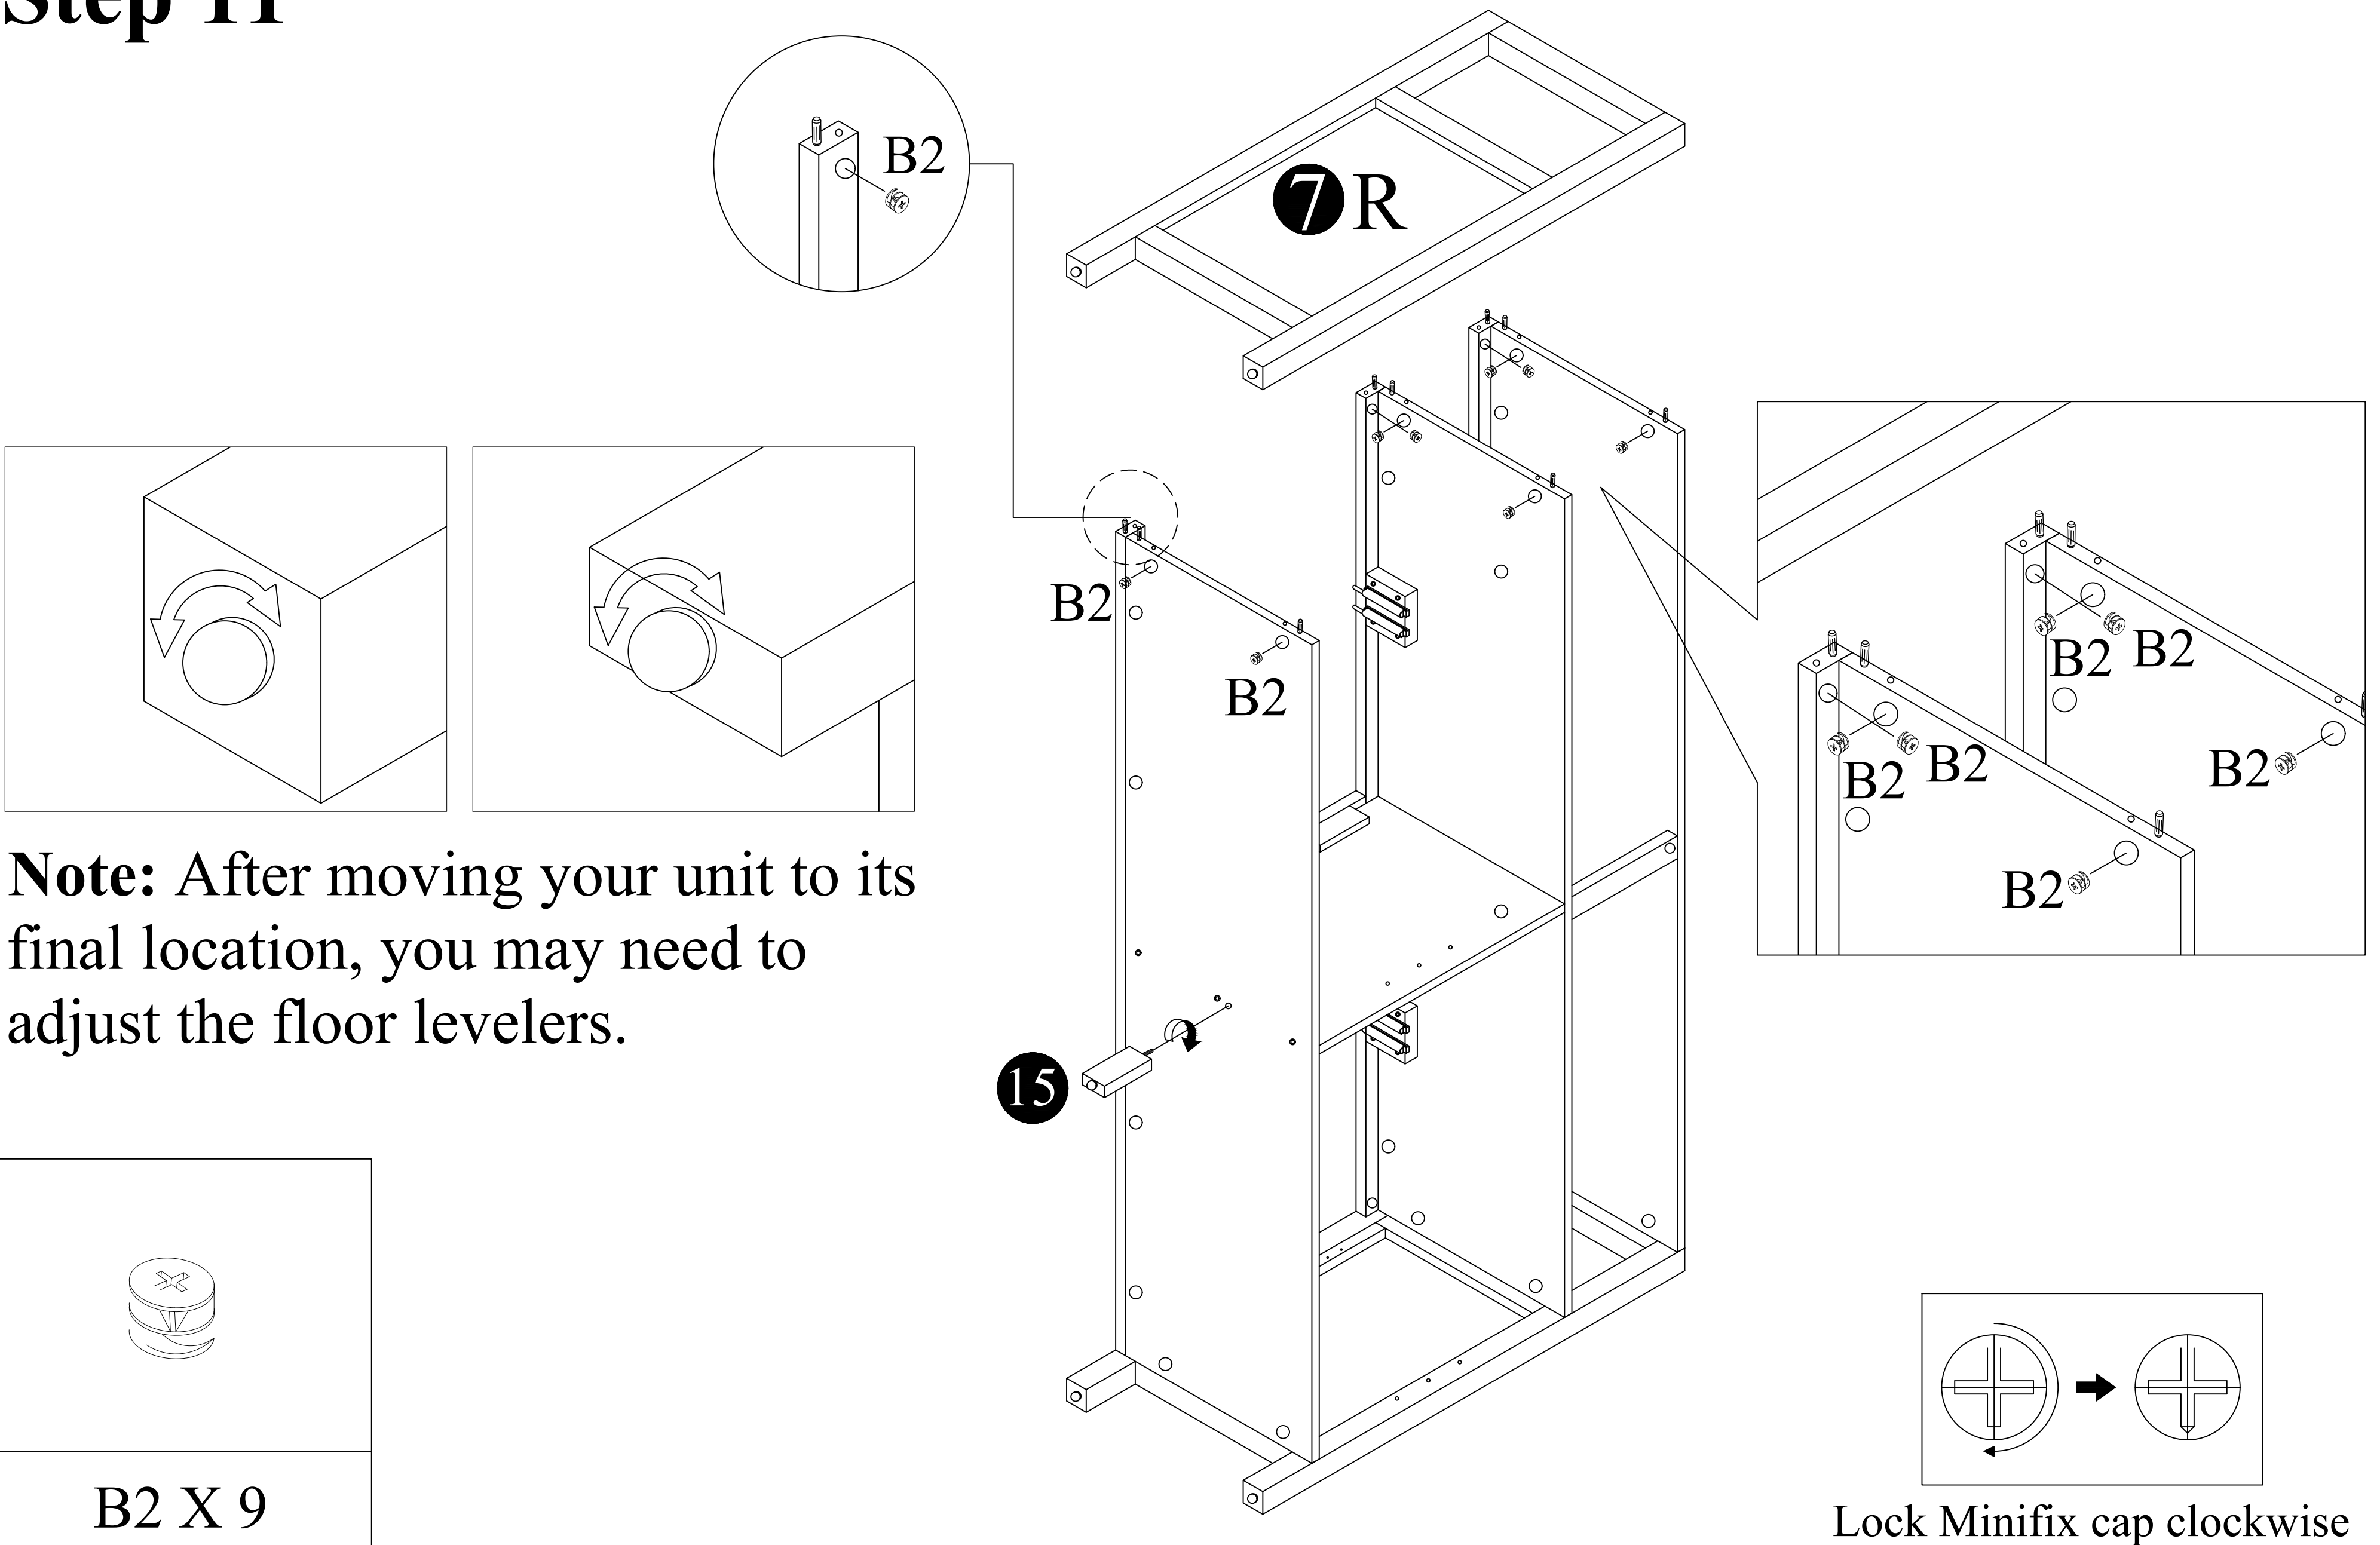Step 11




ASSEMBLY INSTRUCTION

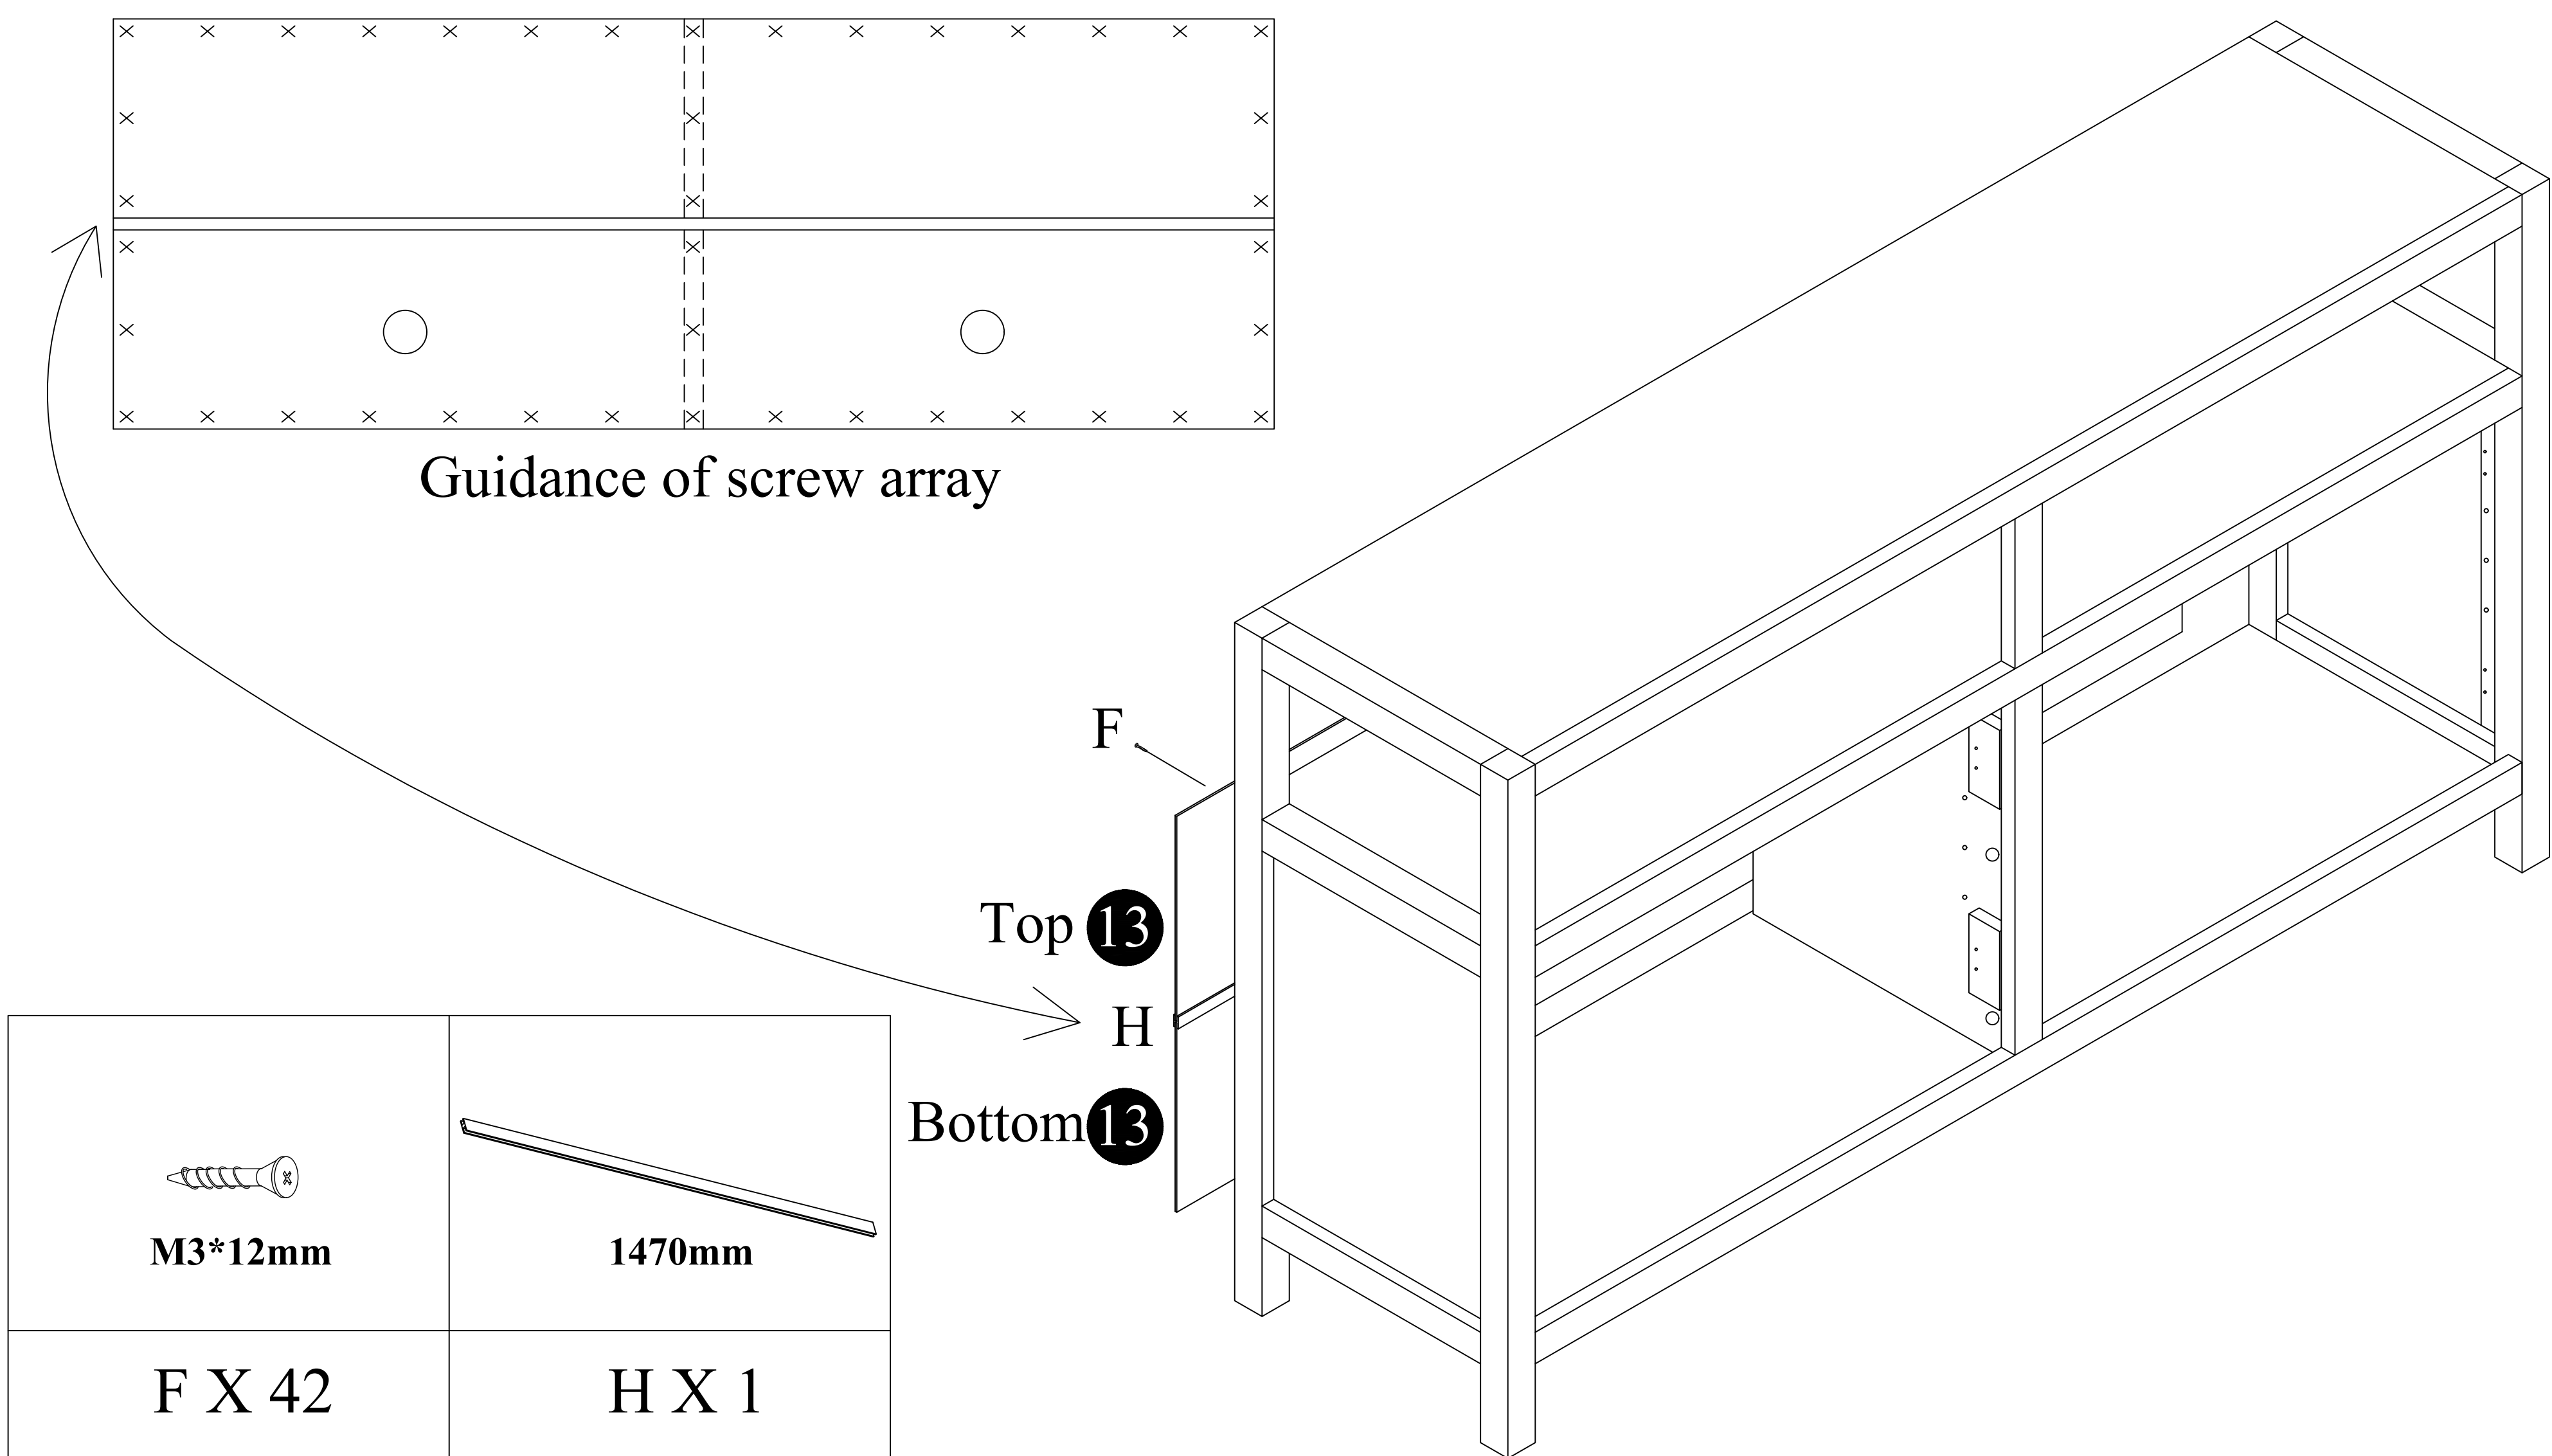Step 12




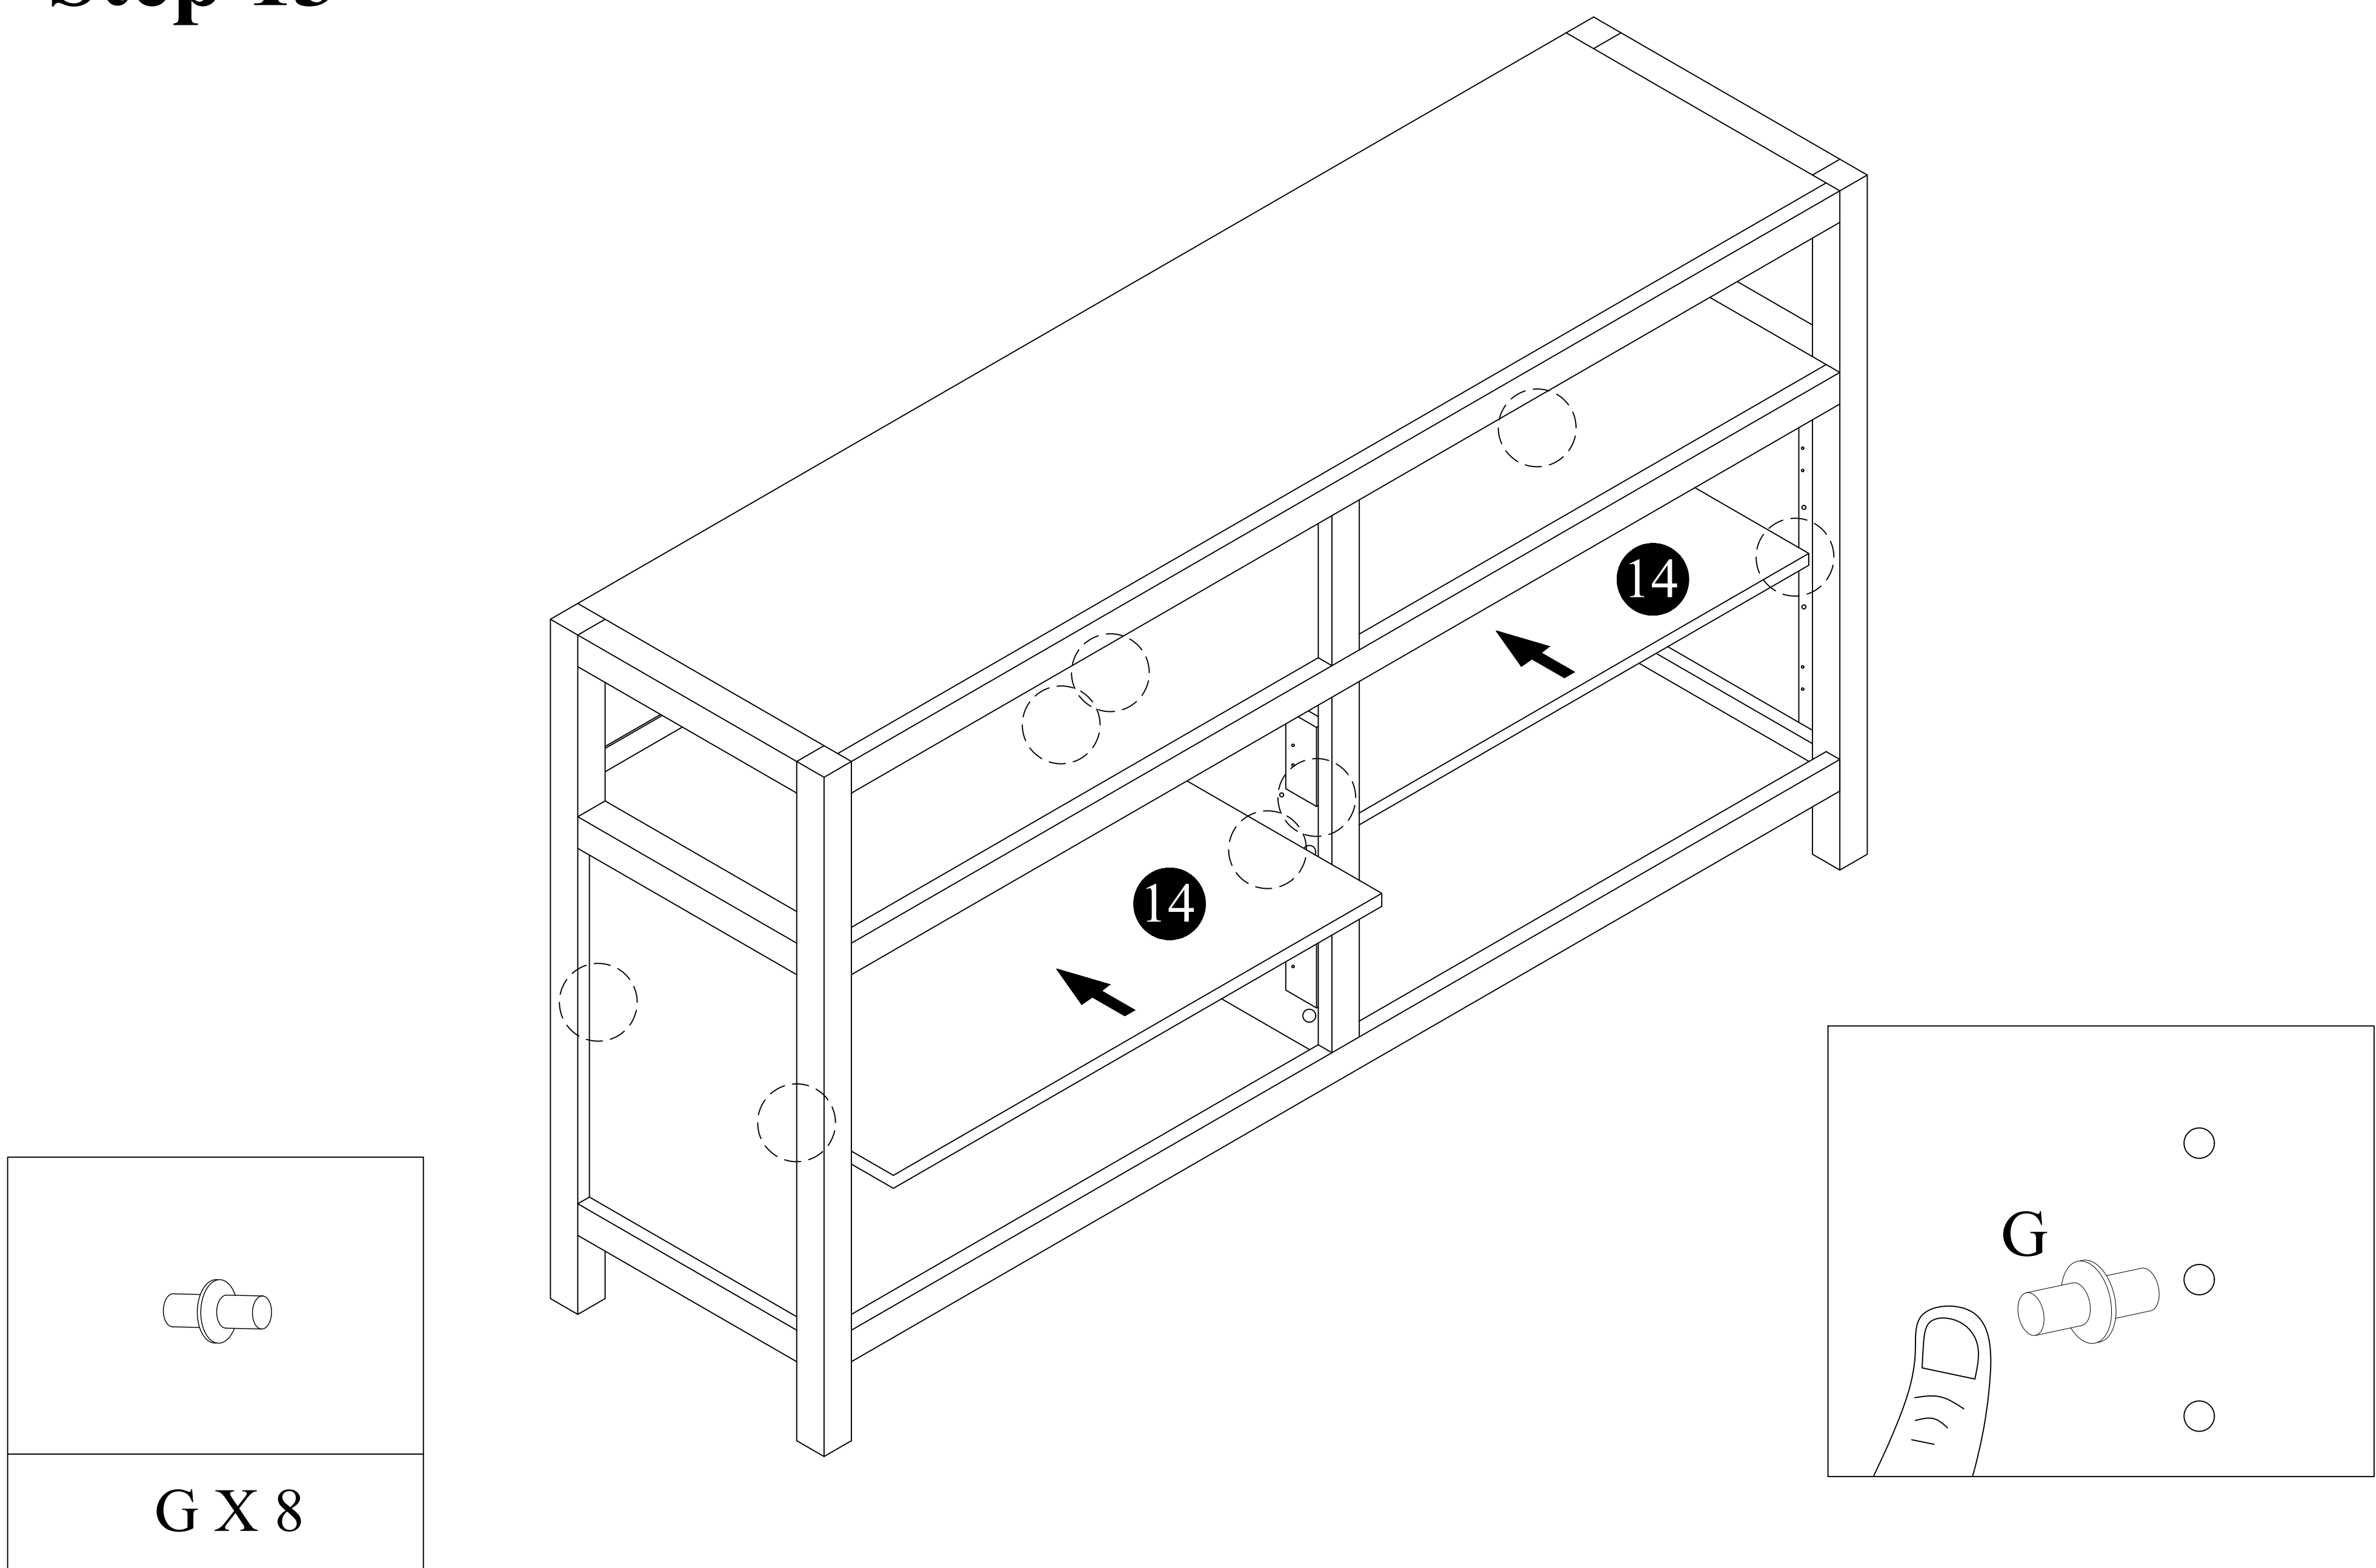Step 13






ASSEMBLY INSTRUCTION

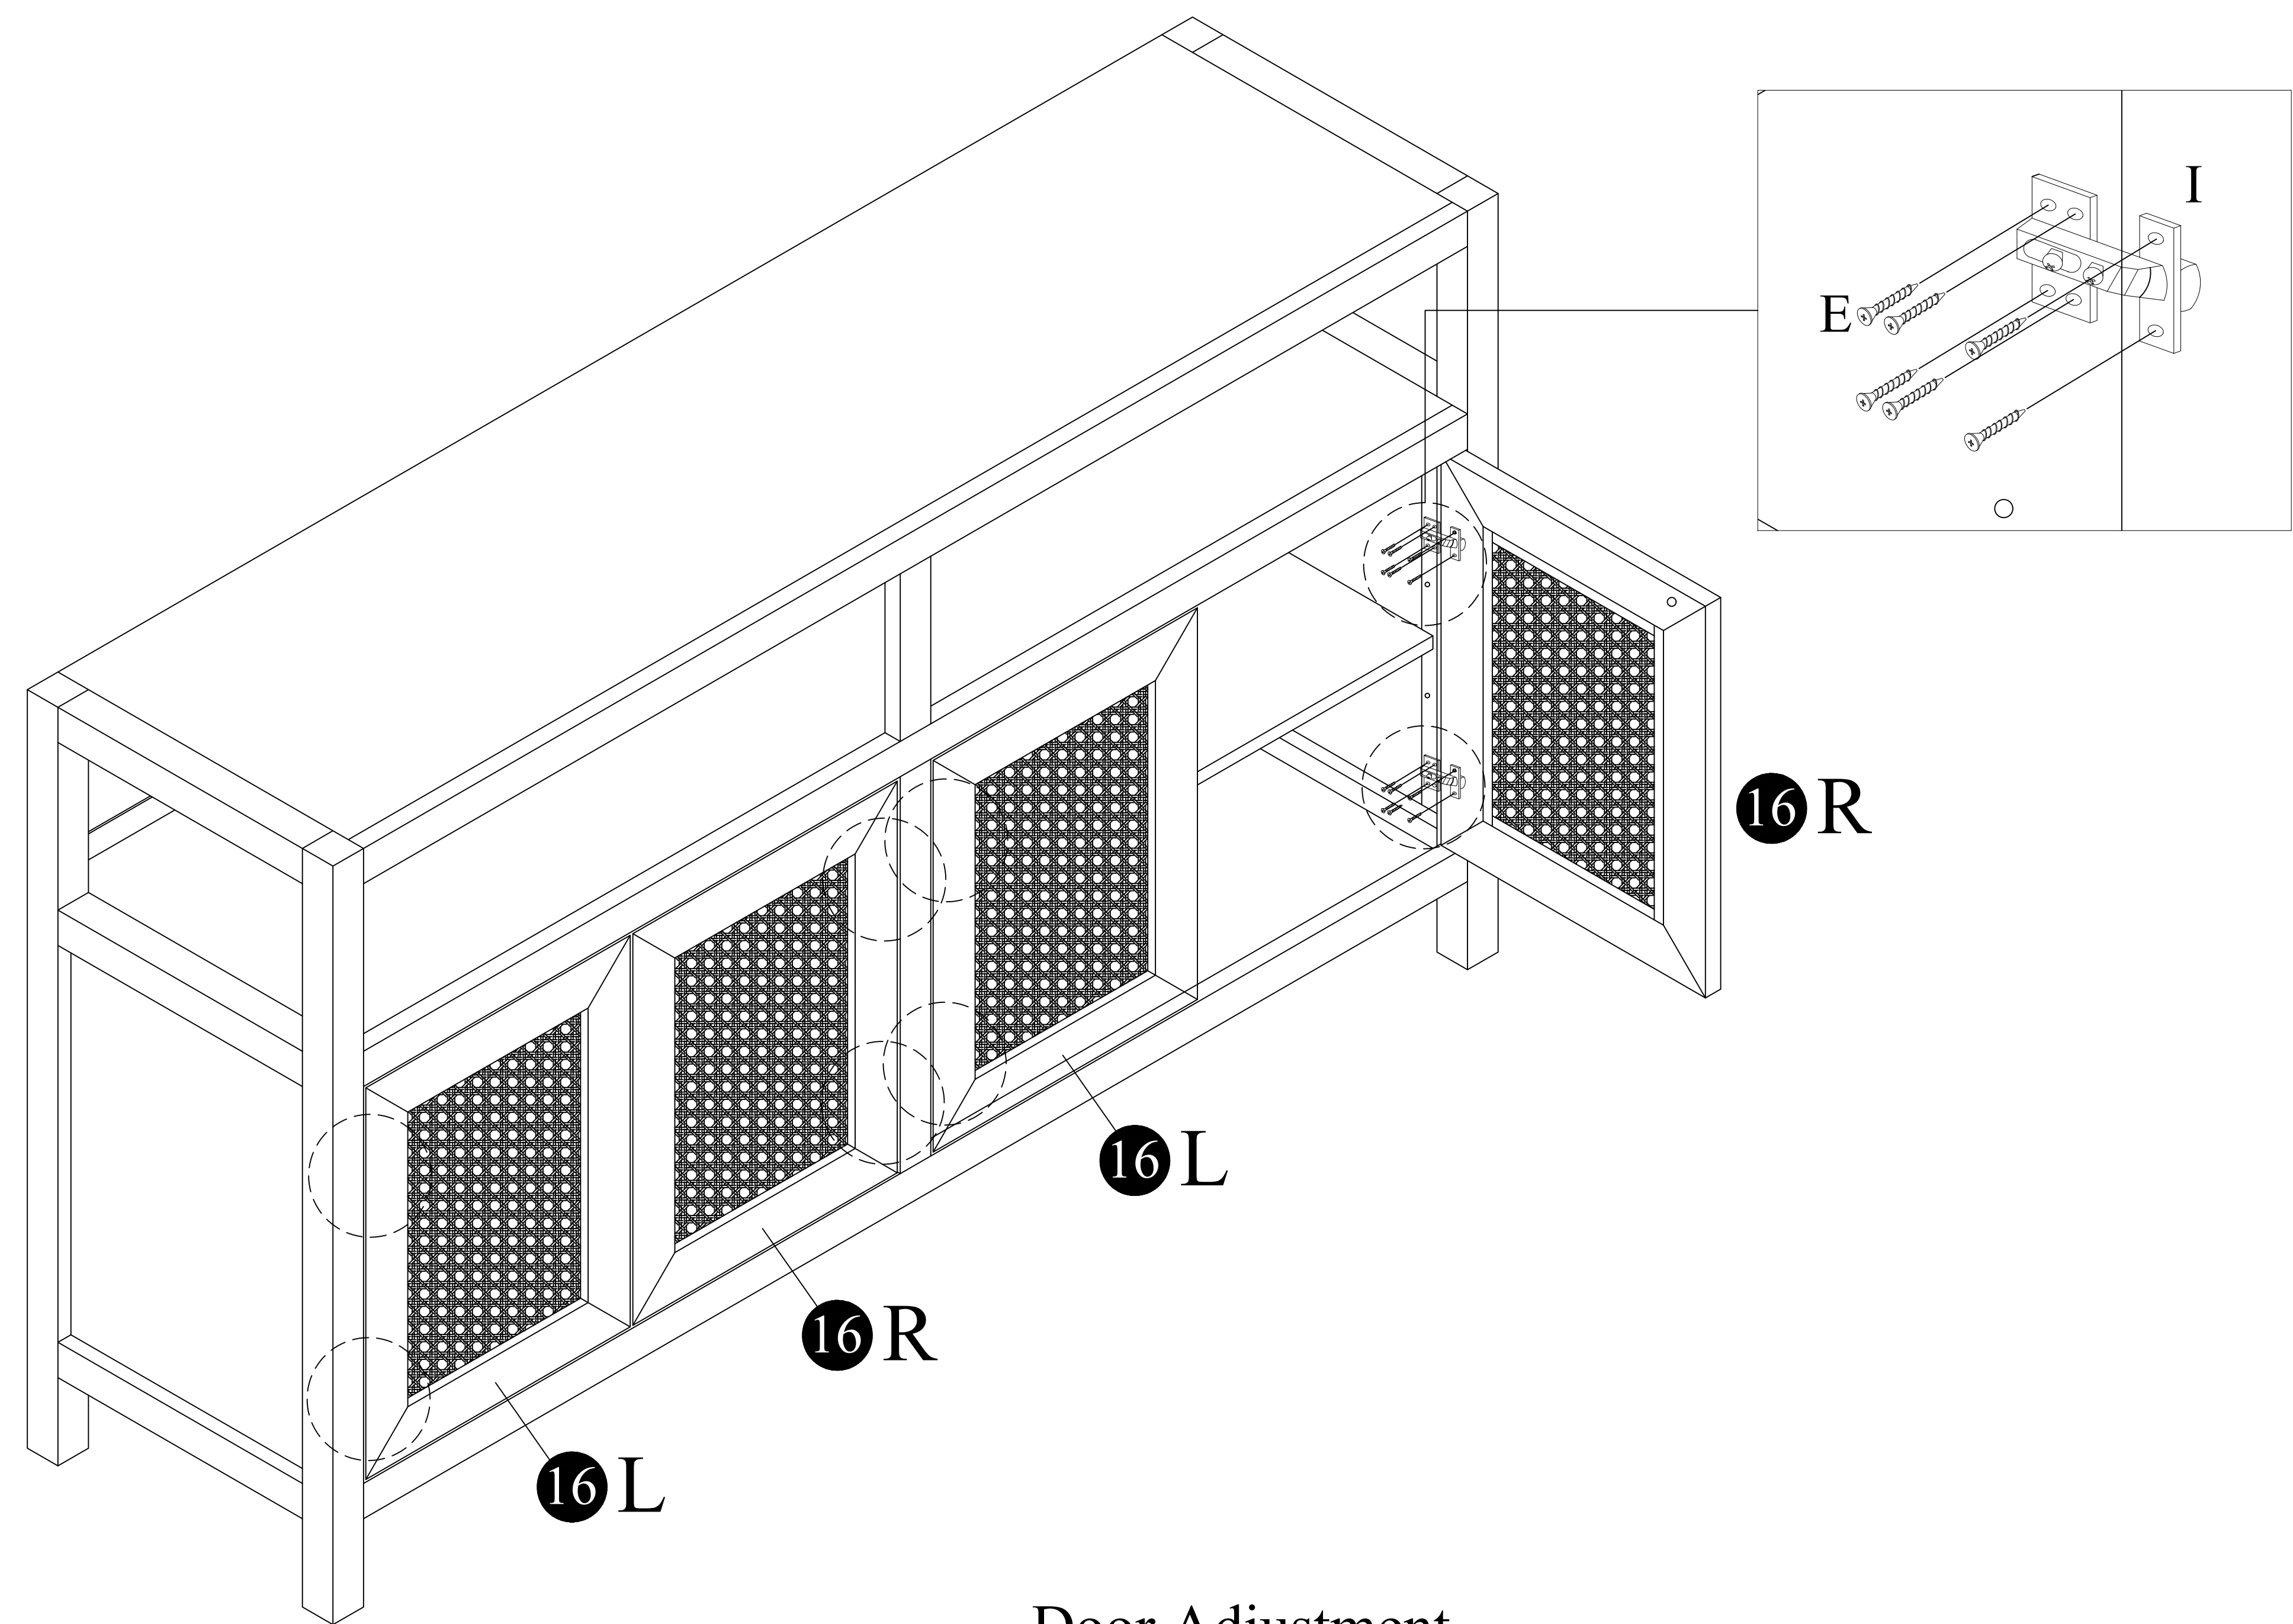Step 14






Door Adjustment


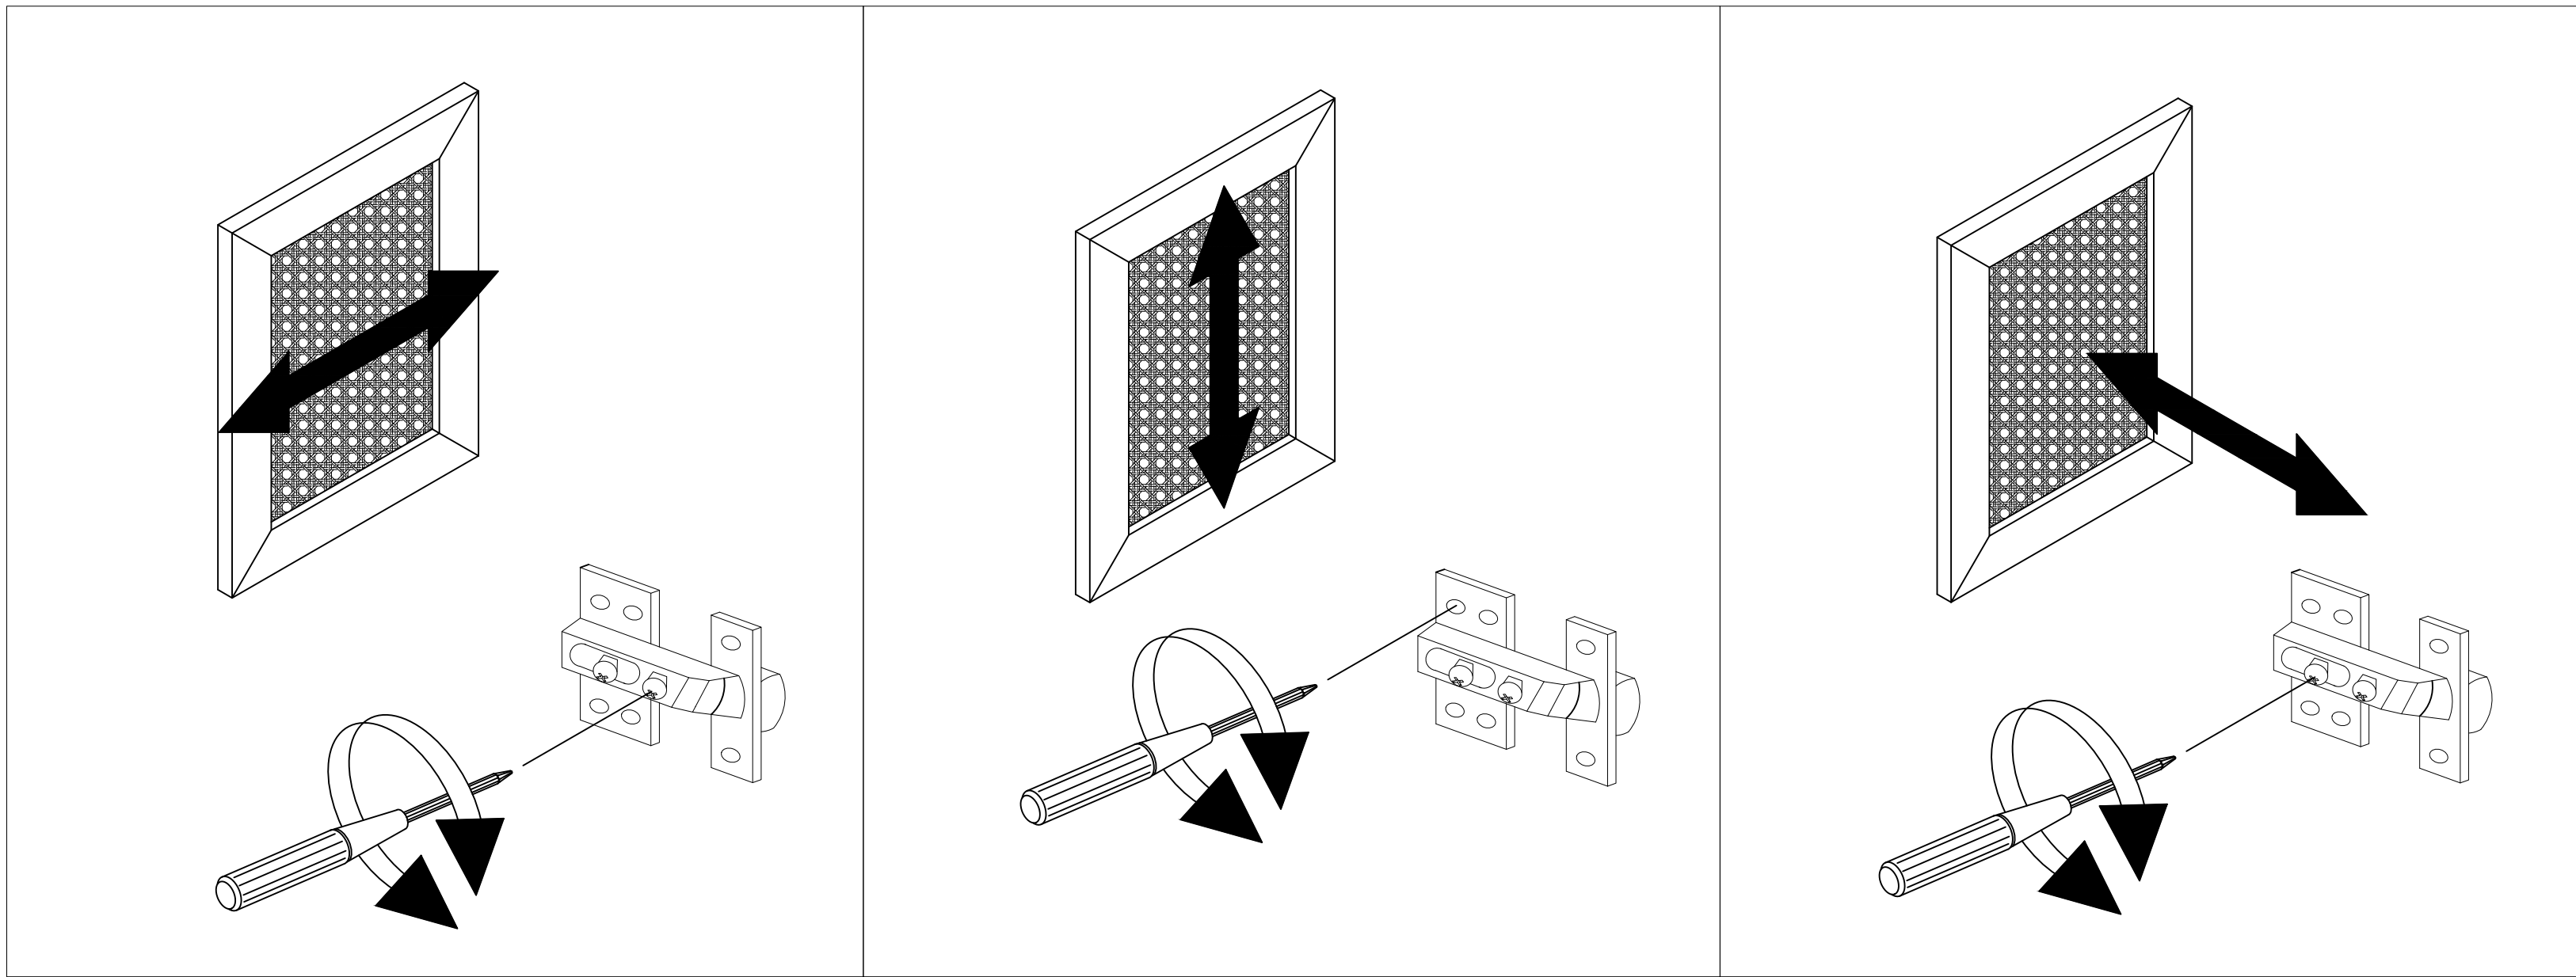


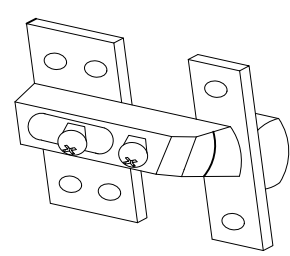
	 M3.5*16mm
I X 8	E X 48

ASSEMBLY INSTRUCTION

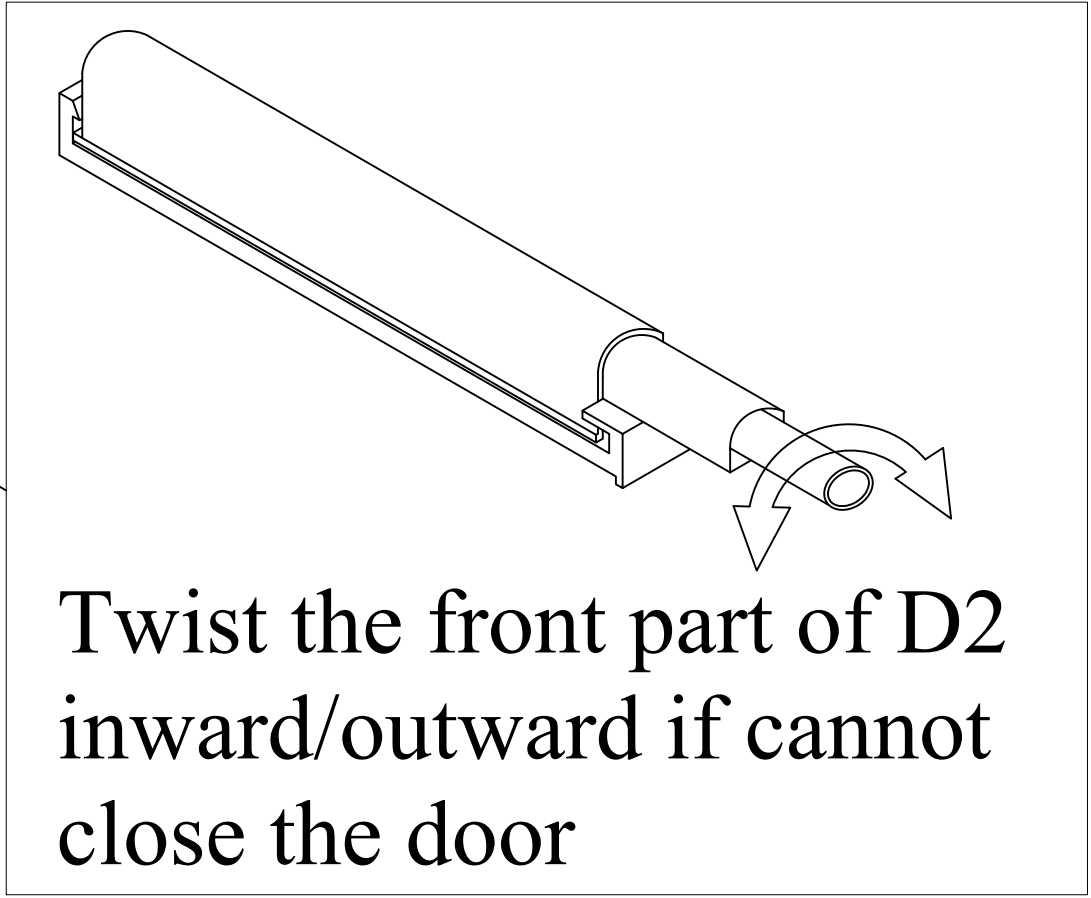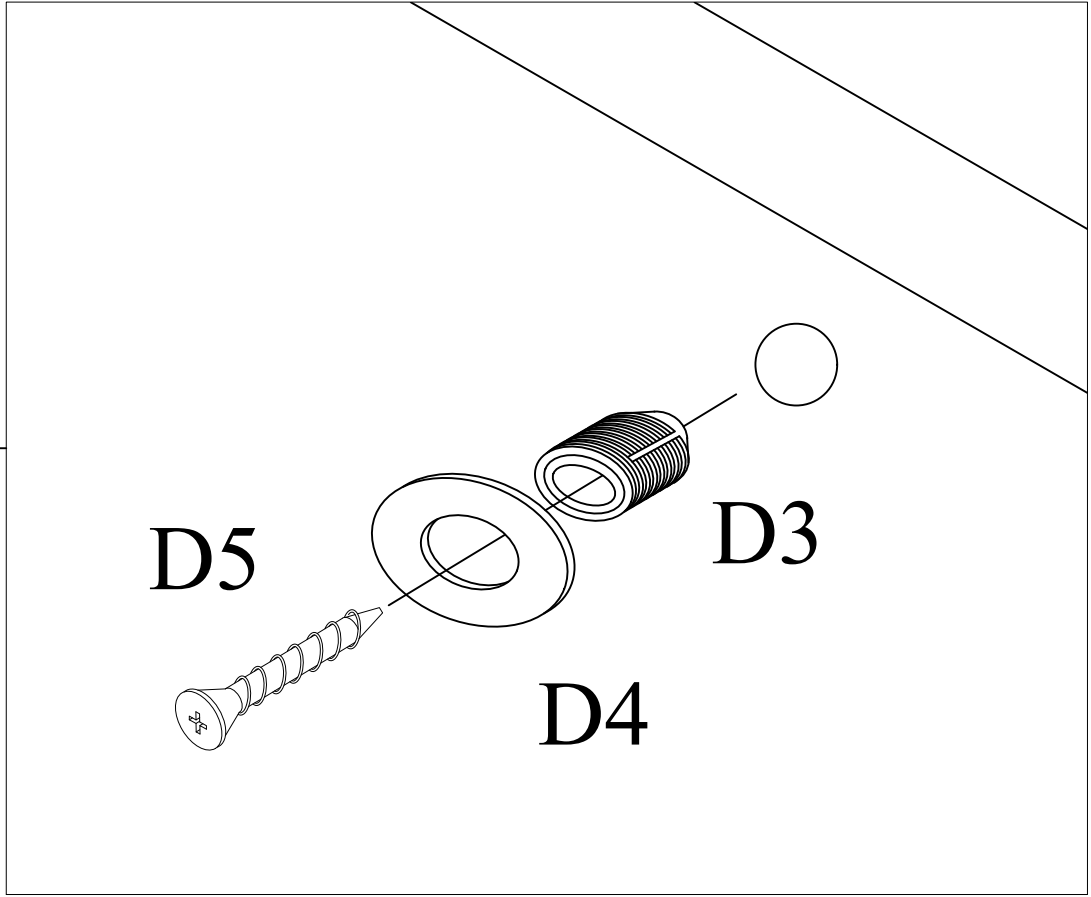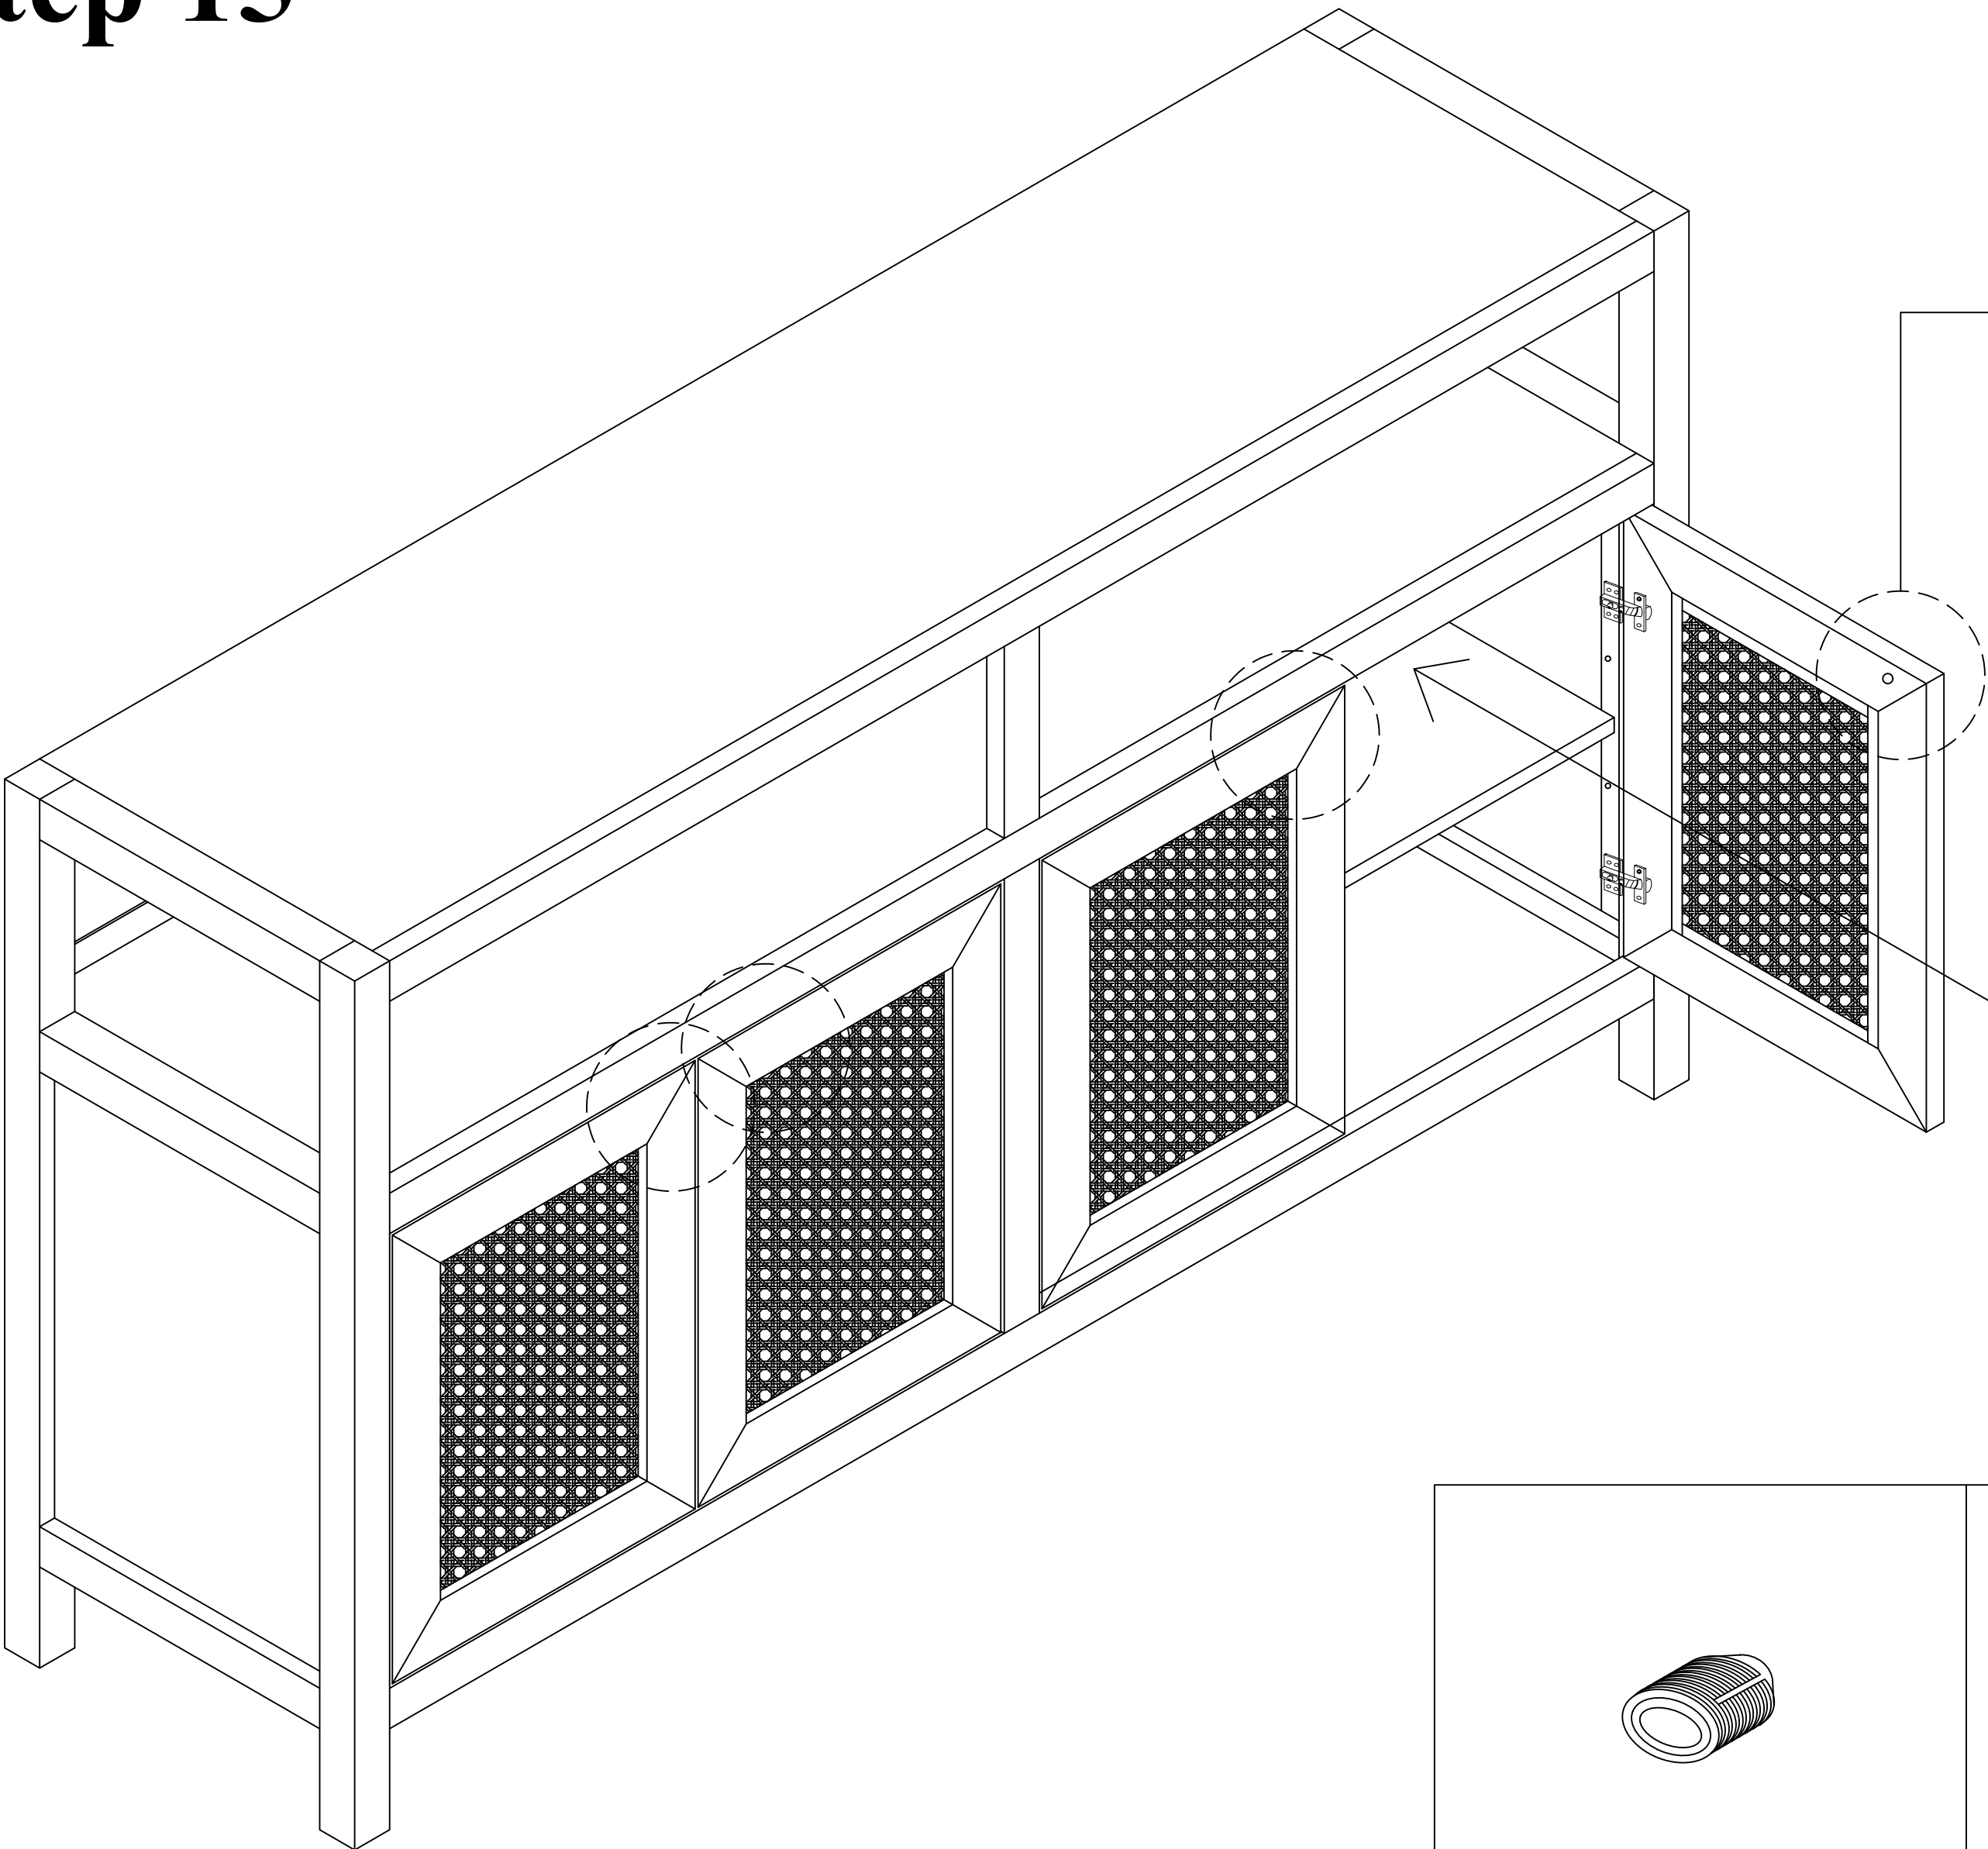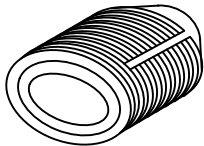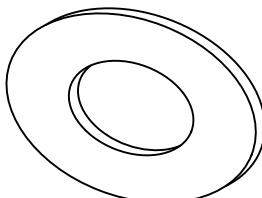Step 15






		 M3*12mm
D3 X 4	D4 X 4	D5 X 4

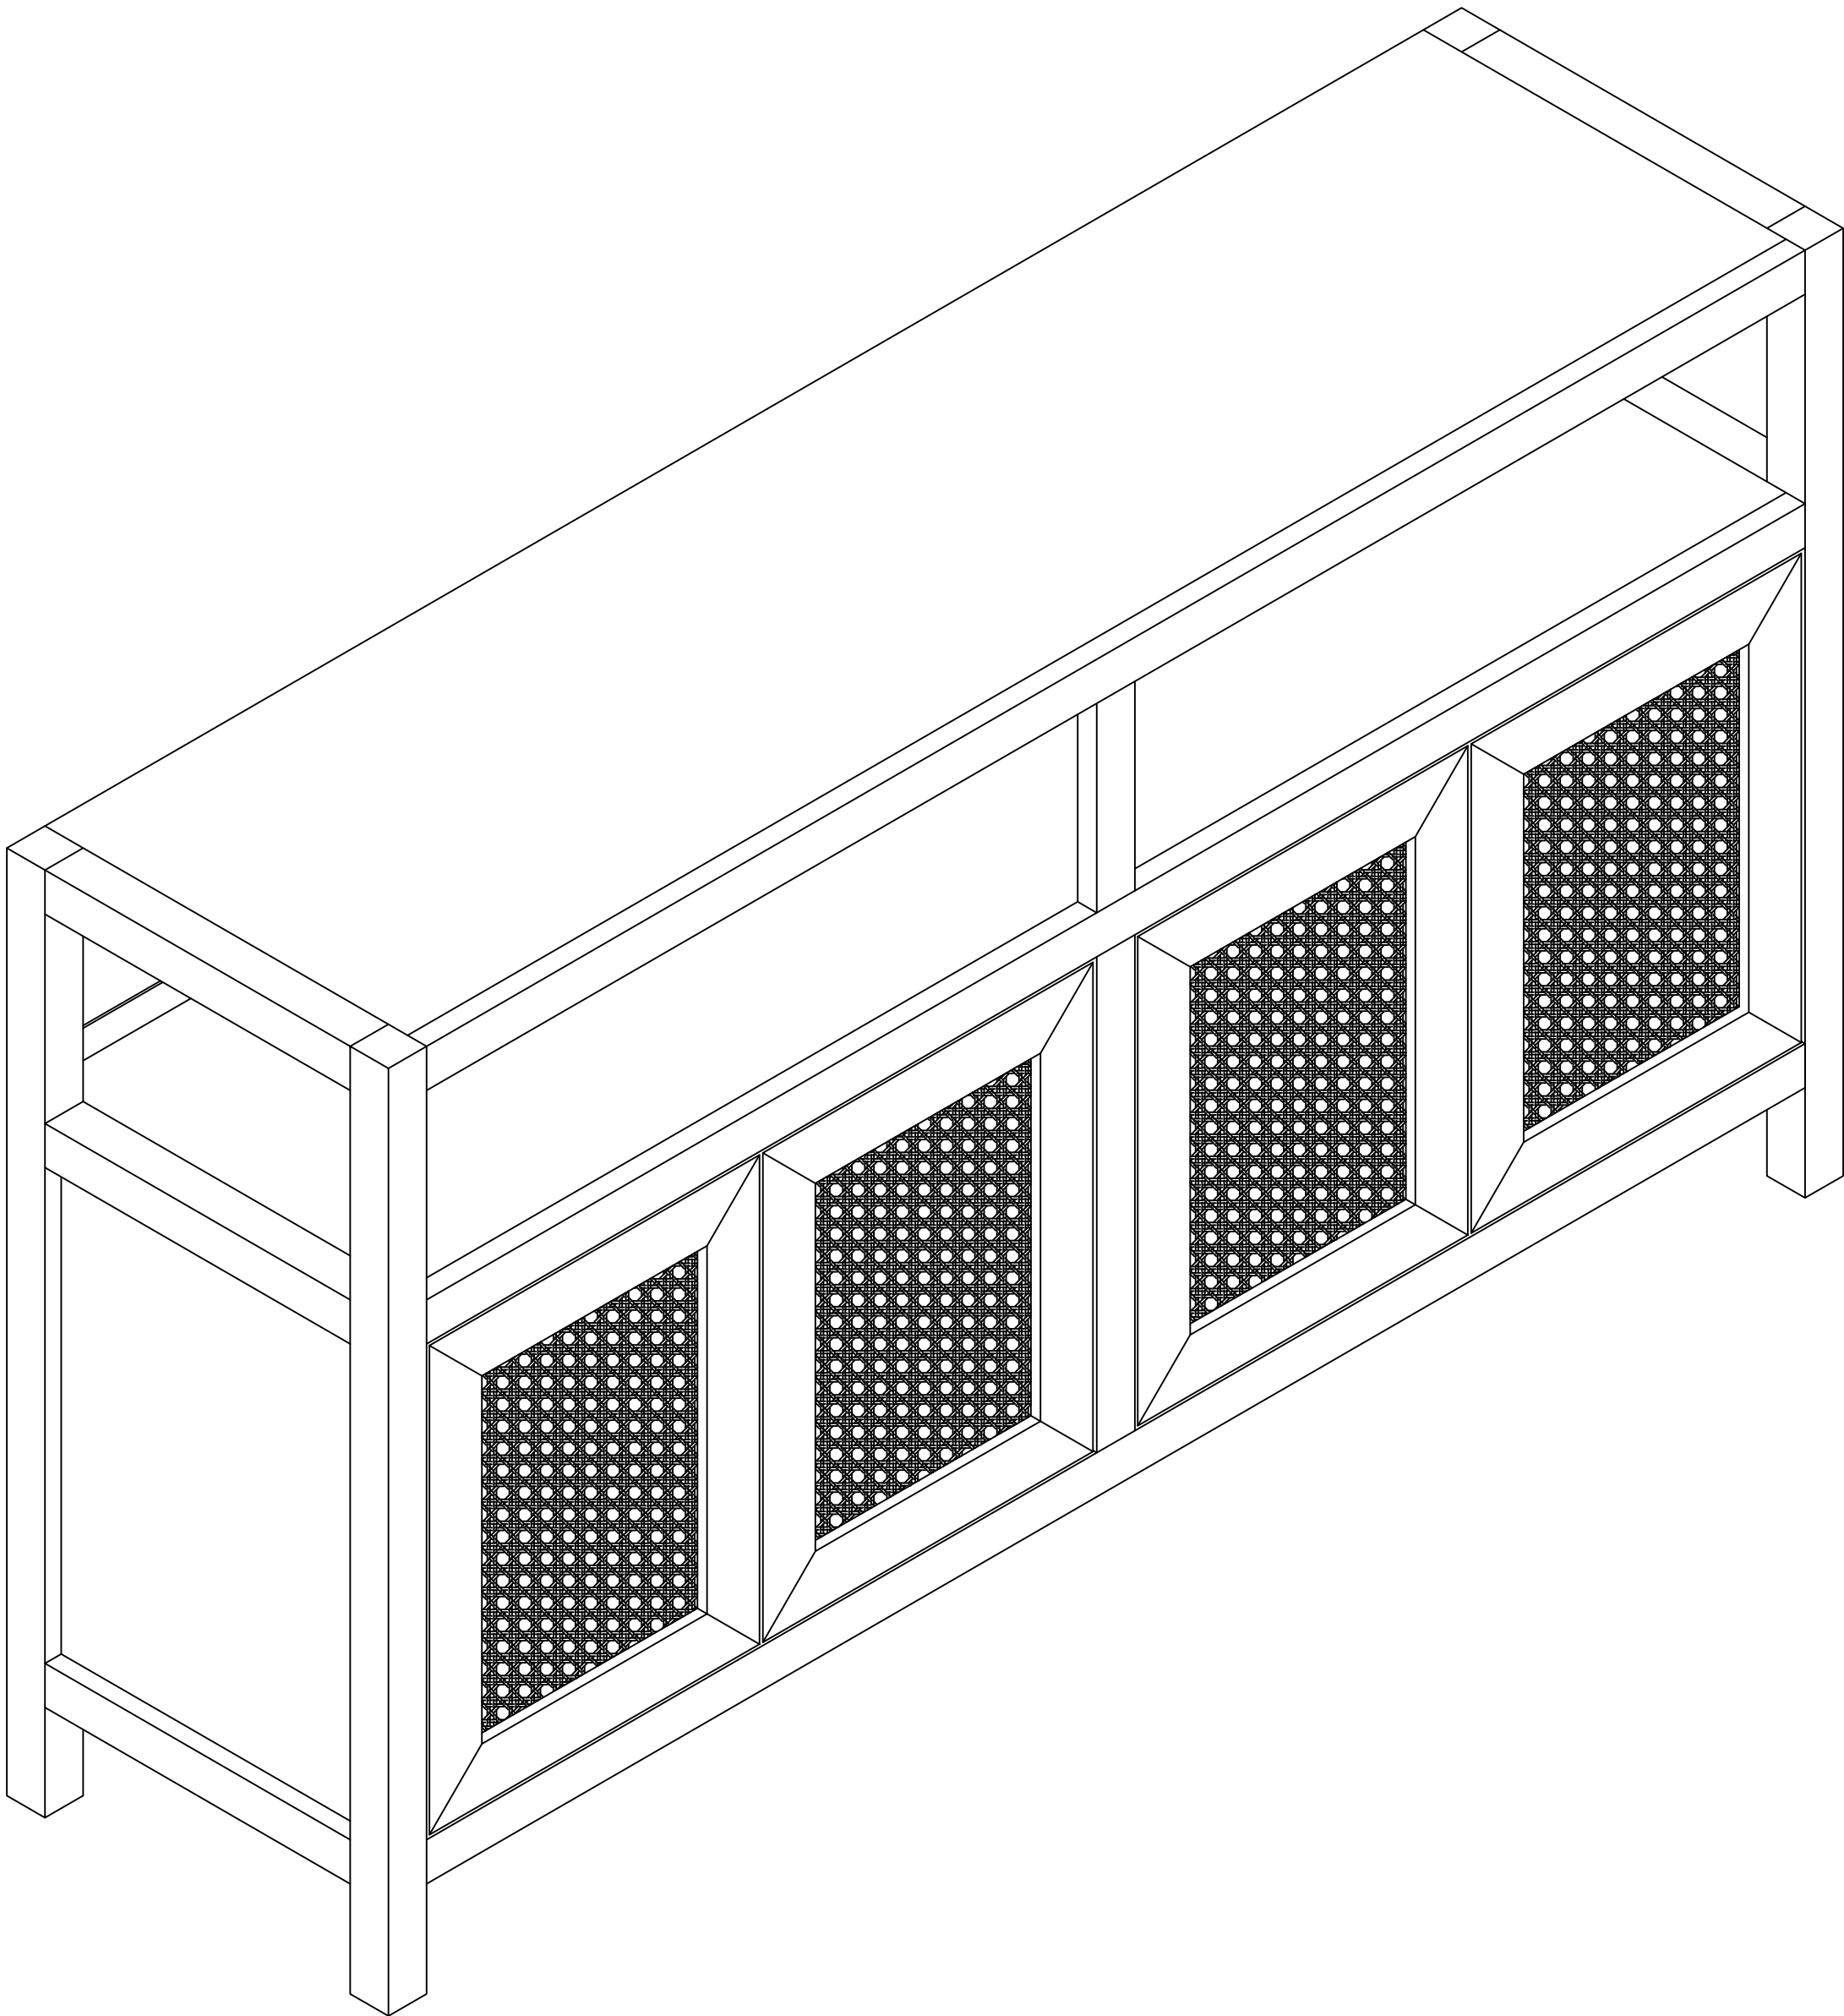



Assembly is complete.

Please refer next page
for anti-tipping kit
installation.

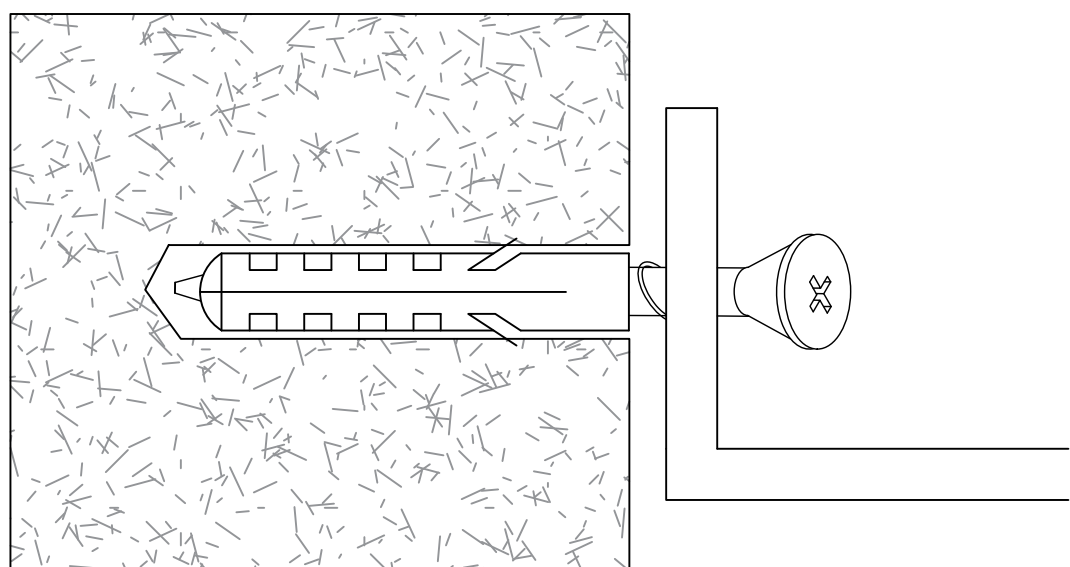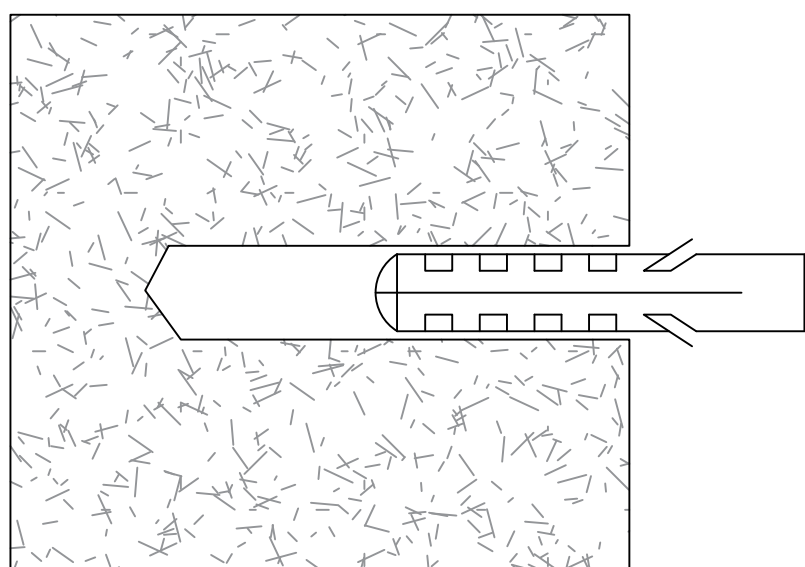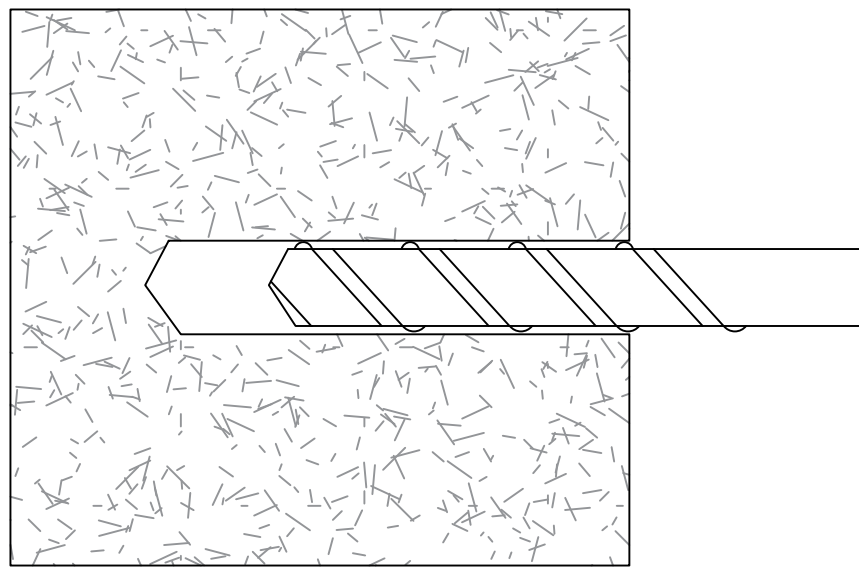ANCHORING CABINET



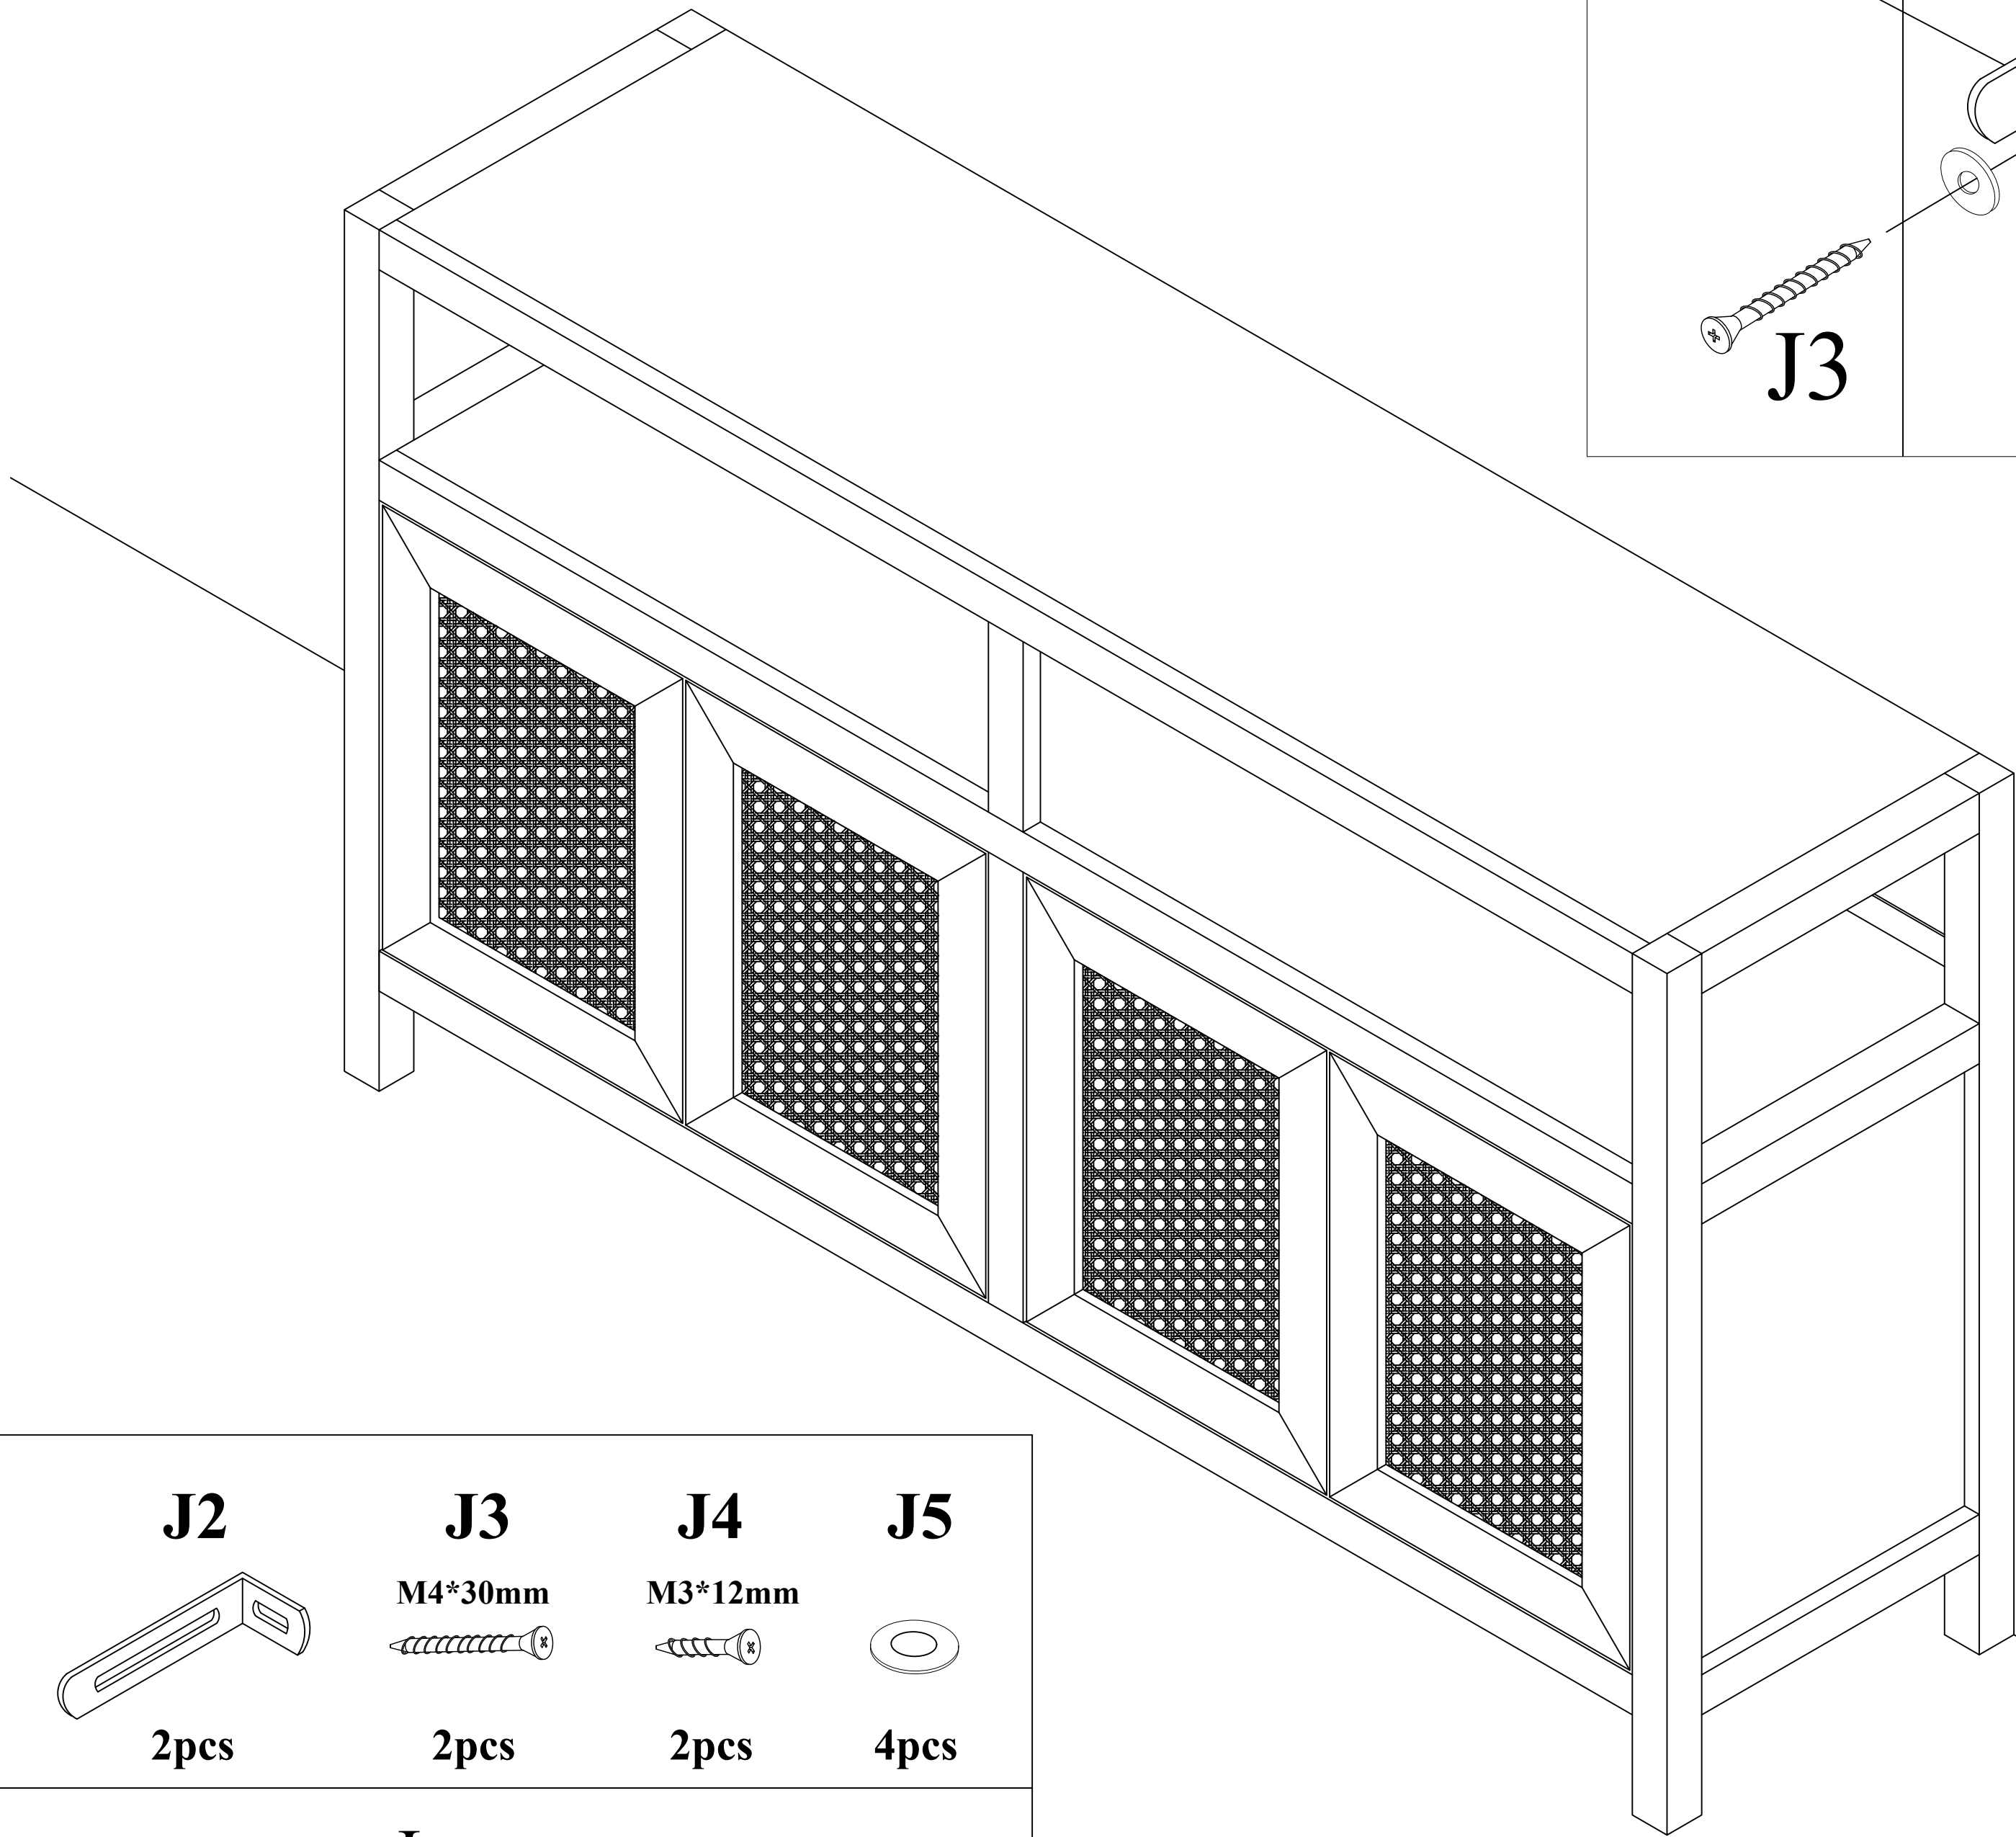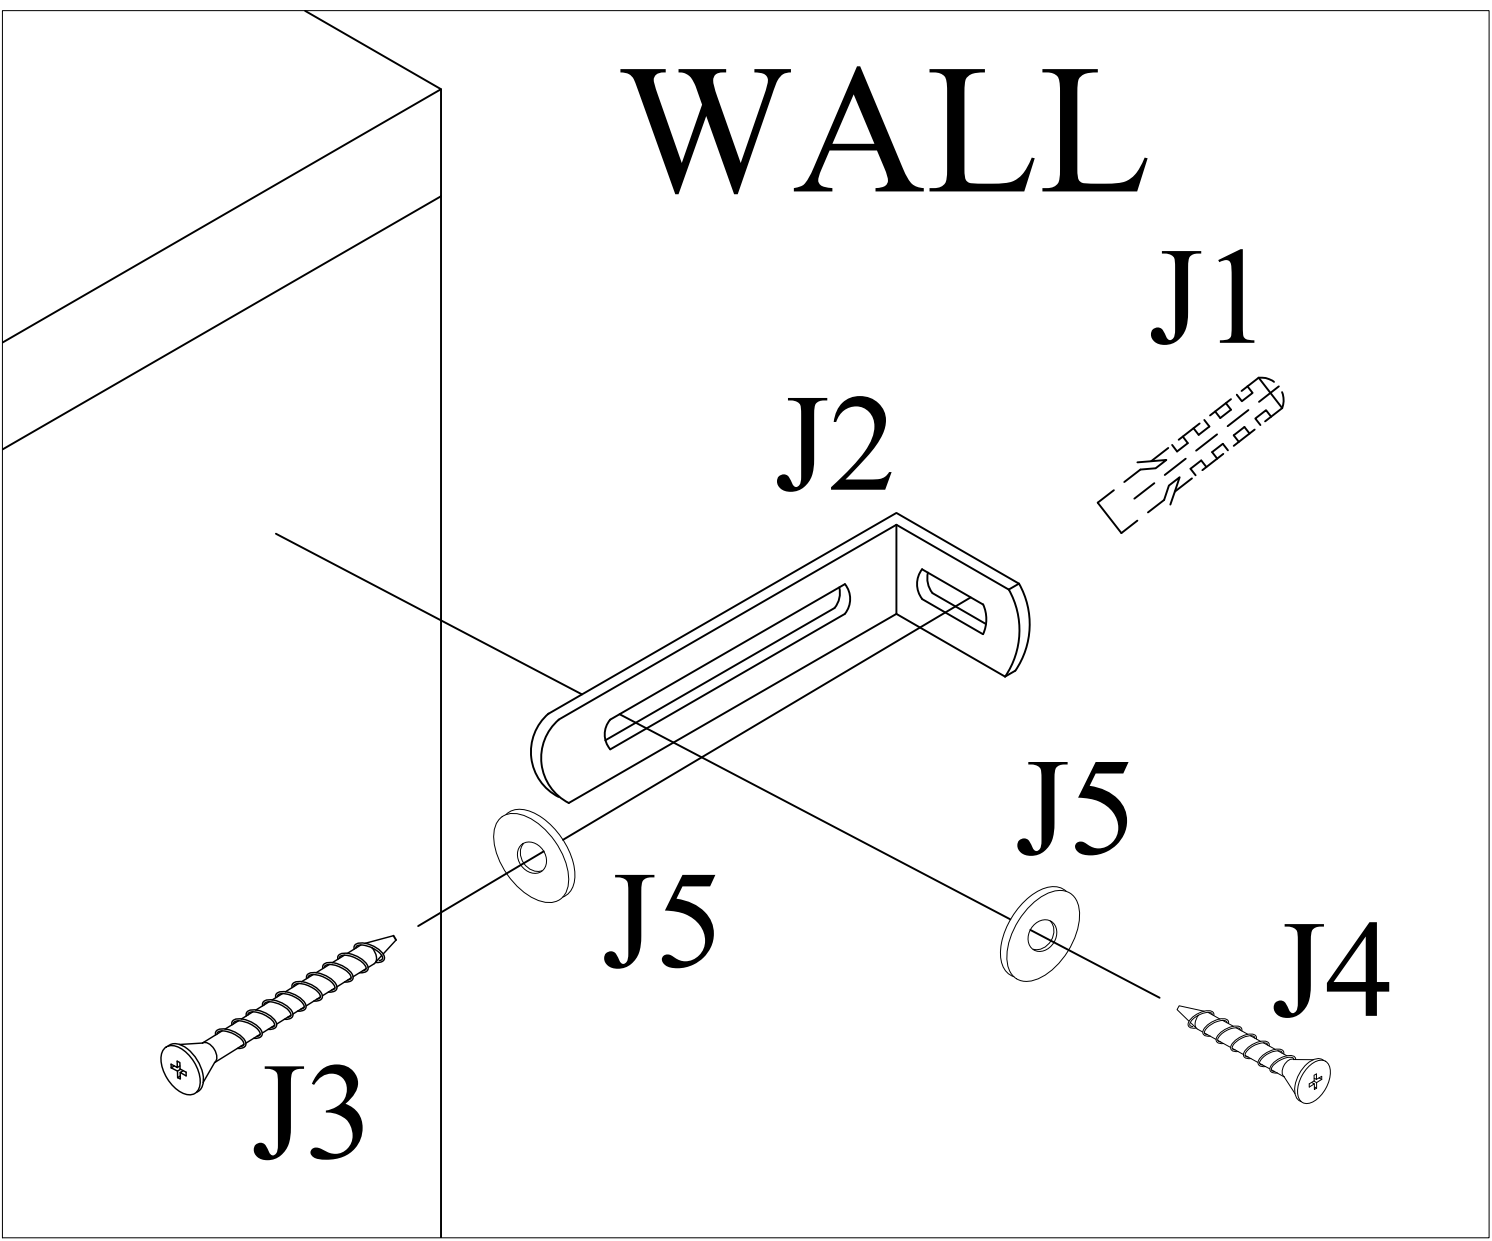- 1. Use electric drill to drill a hole on the wall, the diameter and depth need to keep same with wall plug (J1) provided (4*30mm)
- 2. Use a rubber hammer to knock wall plug (J1) into the wall
- 3. Insert the longer screw (J3) through washer (J5) & L bracket (J2) provided as shown below. Attach screw & washer (J4,J5) onto cabinet's sides to hold it.



WALL

J1	J2	J3	J4	J5
M4*30mm	M3*12mm			
2pcs	2pcs	2pcs	2pcs	4pcs
J				