














KINCAID

-SOLID WOOD SINCE 1946-

www.kincaidfurniture.com
phone :828-728-3261.

607-637 Queen Anne Arm Chair Assembly Instruction Hardware List

CODE	DESCRIPTION	QTY
A	 Bolts "Ó"7 B8\$, "5/3 16\$	4
B	 Bolts "Ó"7 B8\$, "4\$	4
C	 Bolts "Ó"7 B8\$, "3/3 14\$	4
D	 Flat washer "Ó"7 B8\$, "3;	12
E	 Lock washer "Ó"7 B8\$	12
F	 Allen Key 100*50*5 MM	1
G	 Bolts "Ó"3 16\$, "3/3 14\$	2
H	 Lock washer "Ó"3 16\$	2
I	 Allen Key 100*50*4 MM	1
J	 Wood Plug	2
K	 Screws #8 * 1"	2
L	 Wood	2

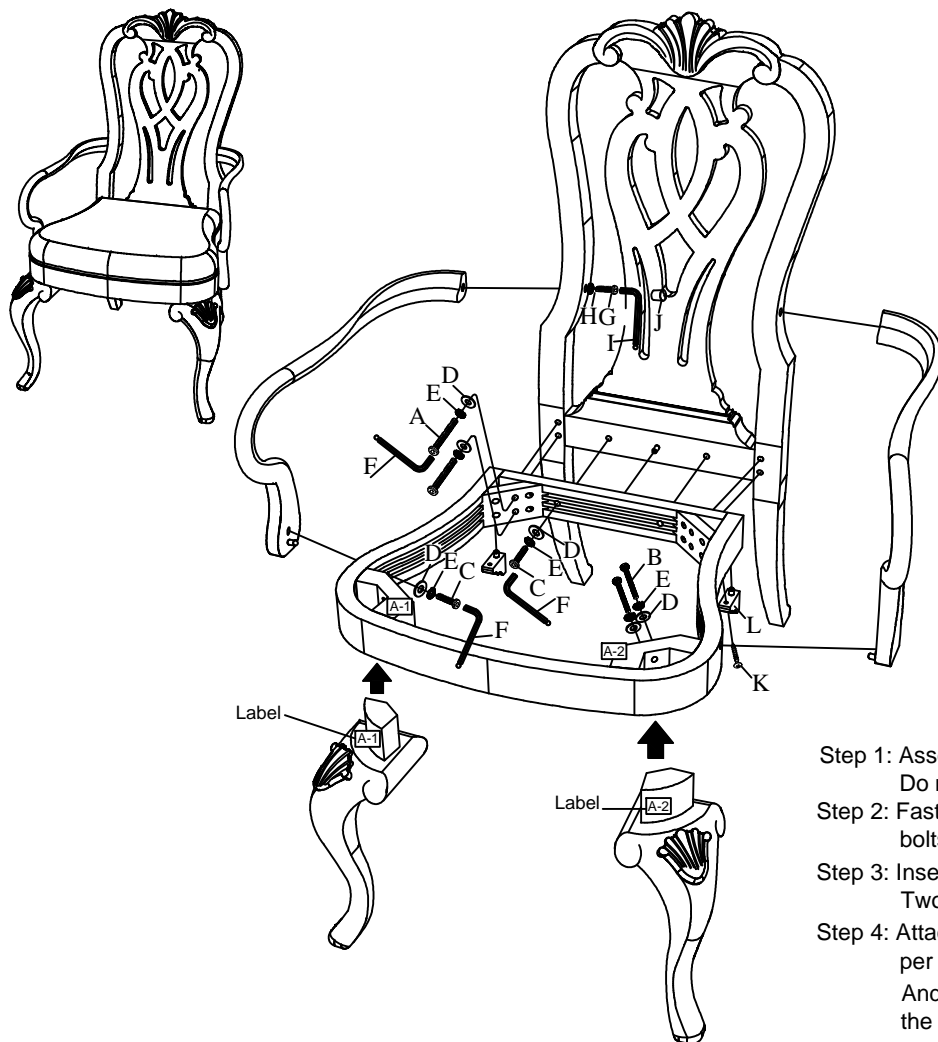

IMPORTANT NOTES

- . Place all wooden parts on clean and smooth surface such as rug or carpet to prevent the parts from being scratched.
- . Check to be sure that you have all parts and hardware.
- . Remove all wrapping materials, including staples and packing straps before you start to assemble.
- . Do not tighten all crews and bolts until completely assembled.
- . Keep all hardware out of the reach of children

- Step 1: Assemble the seat frame with the chair back with flat washer (D), lock washer (E) and bolt (C). Do not tighten the bolt now.
- Step 2: Fasten the chair frame to the back leg with flat washer (D), lock washer (E) and bolt (A). Two bolts per leg. Tighten the bolts (A) and (B) with Allen key (F).
- Step 3: Insert the front legs to the apron and secure with flat washer (D), lock washer (E) and bolt (B). Two bolts per leg. Tighten the bolts (B) with Allen key (F).
- Step 4: Attach the arm to apron side, secure with flat washer (D), lock washer (E) and bolt (C). One bolts per arm. Tighten the bolts (C) with Allen key (F).
And to Chair back side, secure with lock washer (H) and bolt (G). One bolts per arm. Tighten the bolt (G) with Allen key (I) And Plug the wooden Plug (J) after Tightening the bolts.
- Step 5: Attach wind (L) to the apron use dowel as guide and tighten with screws (K).

MADE IN VIETNAM