



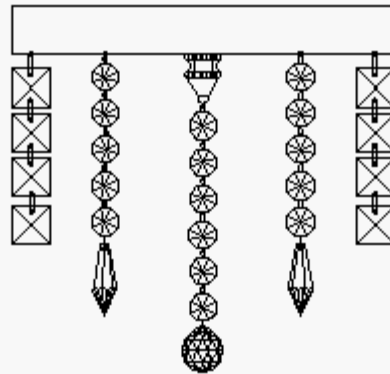


Installation instructions

	 Expansion screws	 Self tapping screw	 Zero line — Fire
1. Make a hole in the ceiling with an electric drill	2. inflated screw plug particles in the hole in the ceiling	3. self tapping screws at the plug screwed into the fixed expansion rubber	4. hang up the main body, the main line of the lamp is connected with the zero line fire line in the home



Be careful

1. install gloves when installing, do not install it on the wet ceiling
2. please comply with the installation instructions when installing the luminaire