

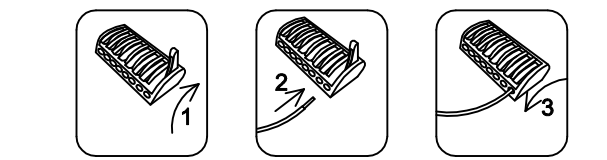
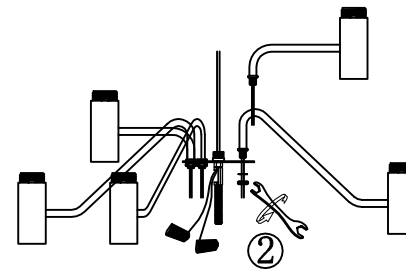
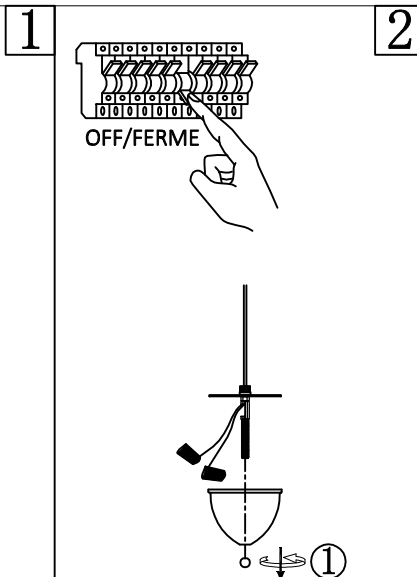


INSTRUCTIONS

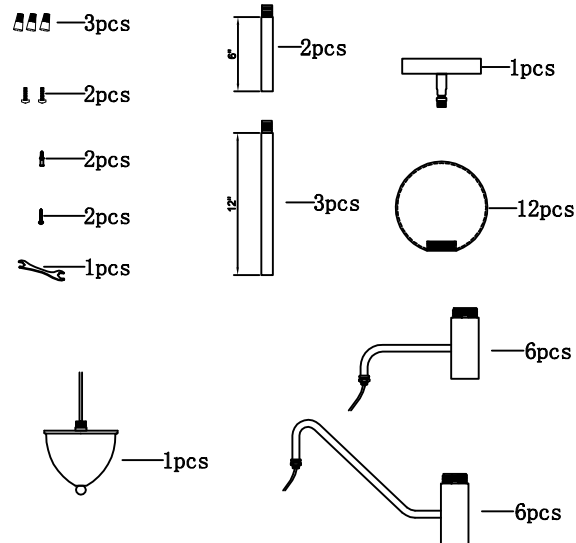


Step 1: Push the orange clip to the vertical position.
 Step 2: Insert the wire into the clip hole (make sure the wire is inserted all the way to the bottom of the hole).
 Step 3: Press the orange clip firmly (make sure the wire won't fall out).

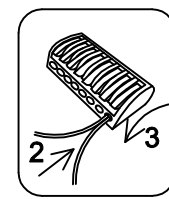



A wire clamp hole can hold 2 or 3 black or white wires, NEVER mix the black and white wires in the same orange clip. An orange clip for all the black wires, and another orange clip for all the white wires.

Wiring Instructions:
 L(live wire) to connect the black wire
 N(neutral wire) to connect the white wire

NOTE: Ensure all white wires are together in the same orange clip, and all black wires are together in the same orange clip.

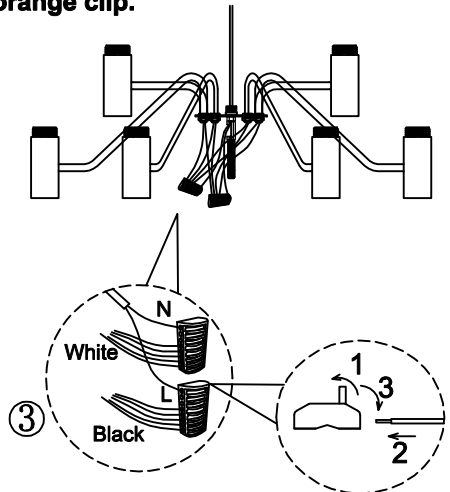

Wiring Instructions:
 L(live wire) to connect the black wire
 N(neutral wire) to connect the white wire

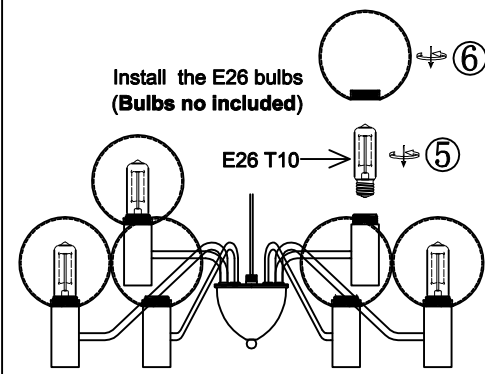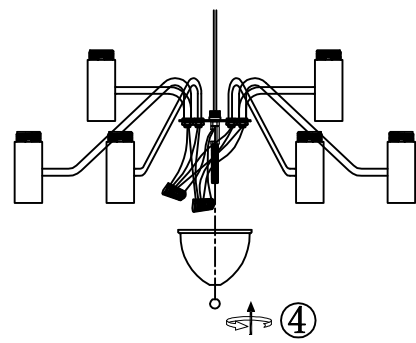


Install the E26 bulbs
 (Bulbs no included)

E26 T10

Product Features

Material: Metal+Glass
 Color: Gold
 Base Type: E26 T10
 Bulb Included: NO
 Voltage: 110- 130VAC
 Maximum Wattage: MAX 60W

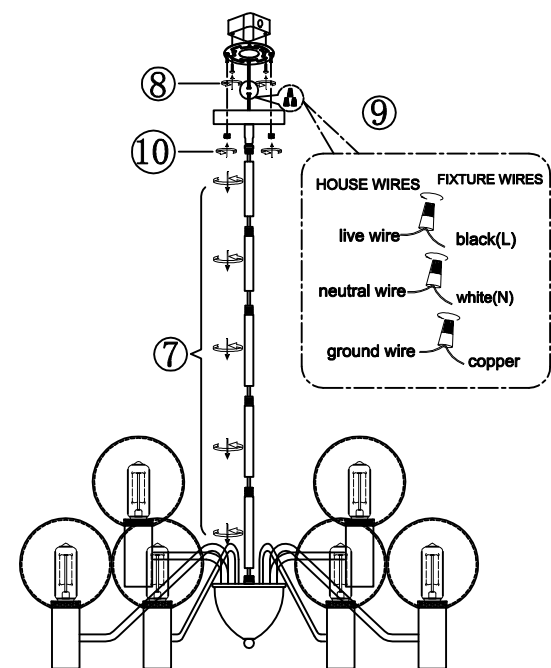

HOUSE WIRES FIXTURE WIRES
 live wire black(L)
 neutral wire white(N)
 ground wire copper