
TV Stand

Assembly Instructions - Please keep for future reference

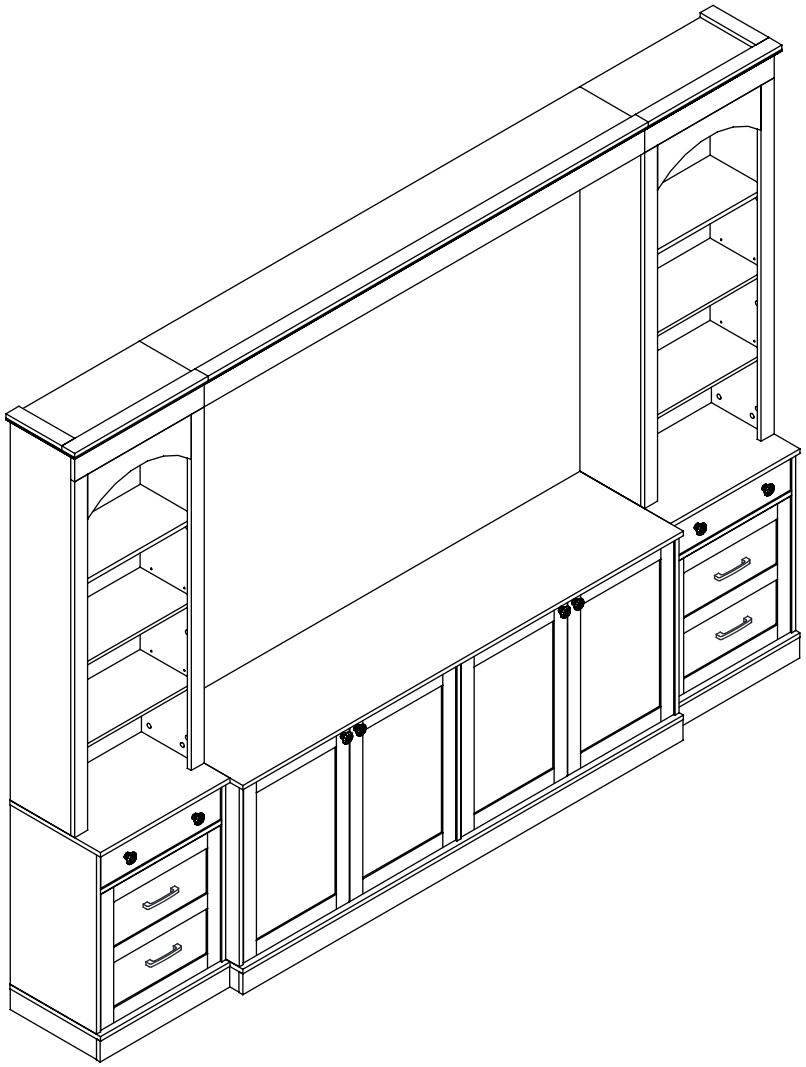


Dimensions

Width-107.48inch

Depth-15.75inch

Height-78.74inch

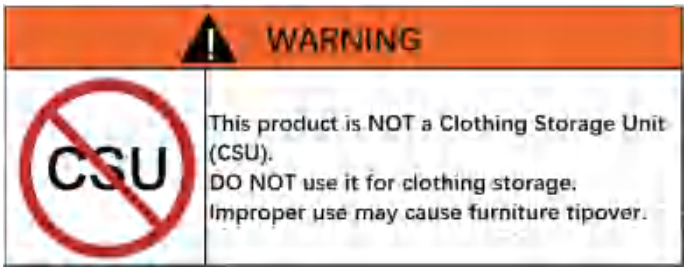

Important – Please read these instructions fully before starting assembly

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning – please follow these instructions


To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Using Camlocks


Step 1

Connect the male camlock as diect-ed in the assembly instructions using a scewdriver.

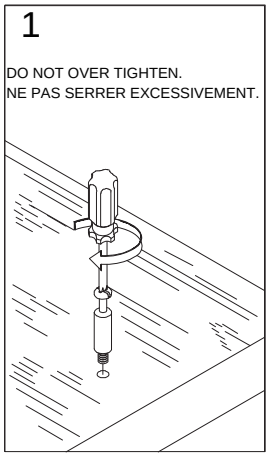

Step 2


Push the male camlock into the entry hole.

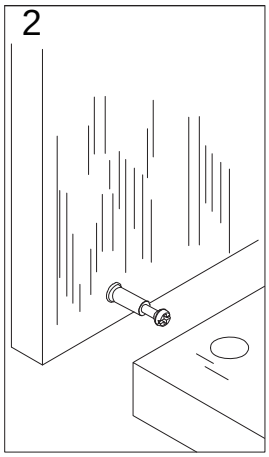

Step 3

Insert the female camlock as shown in the instruction.

Note:ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

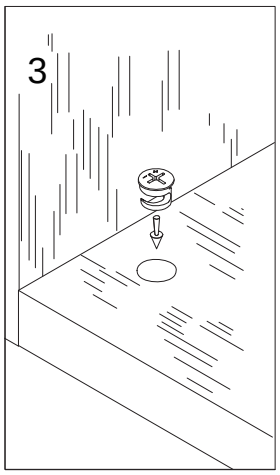


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

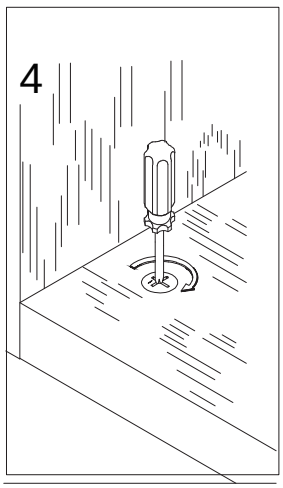










Assembly Instructions

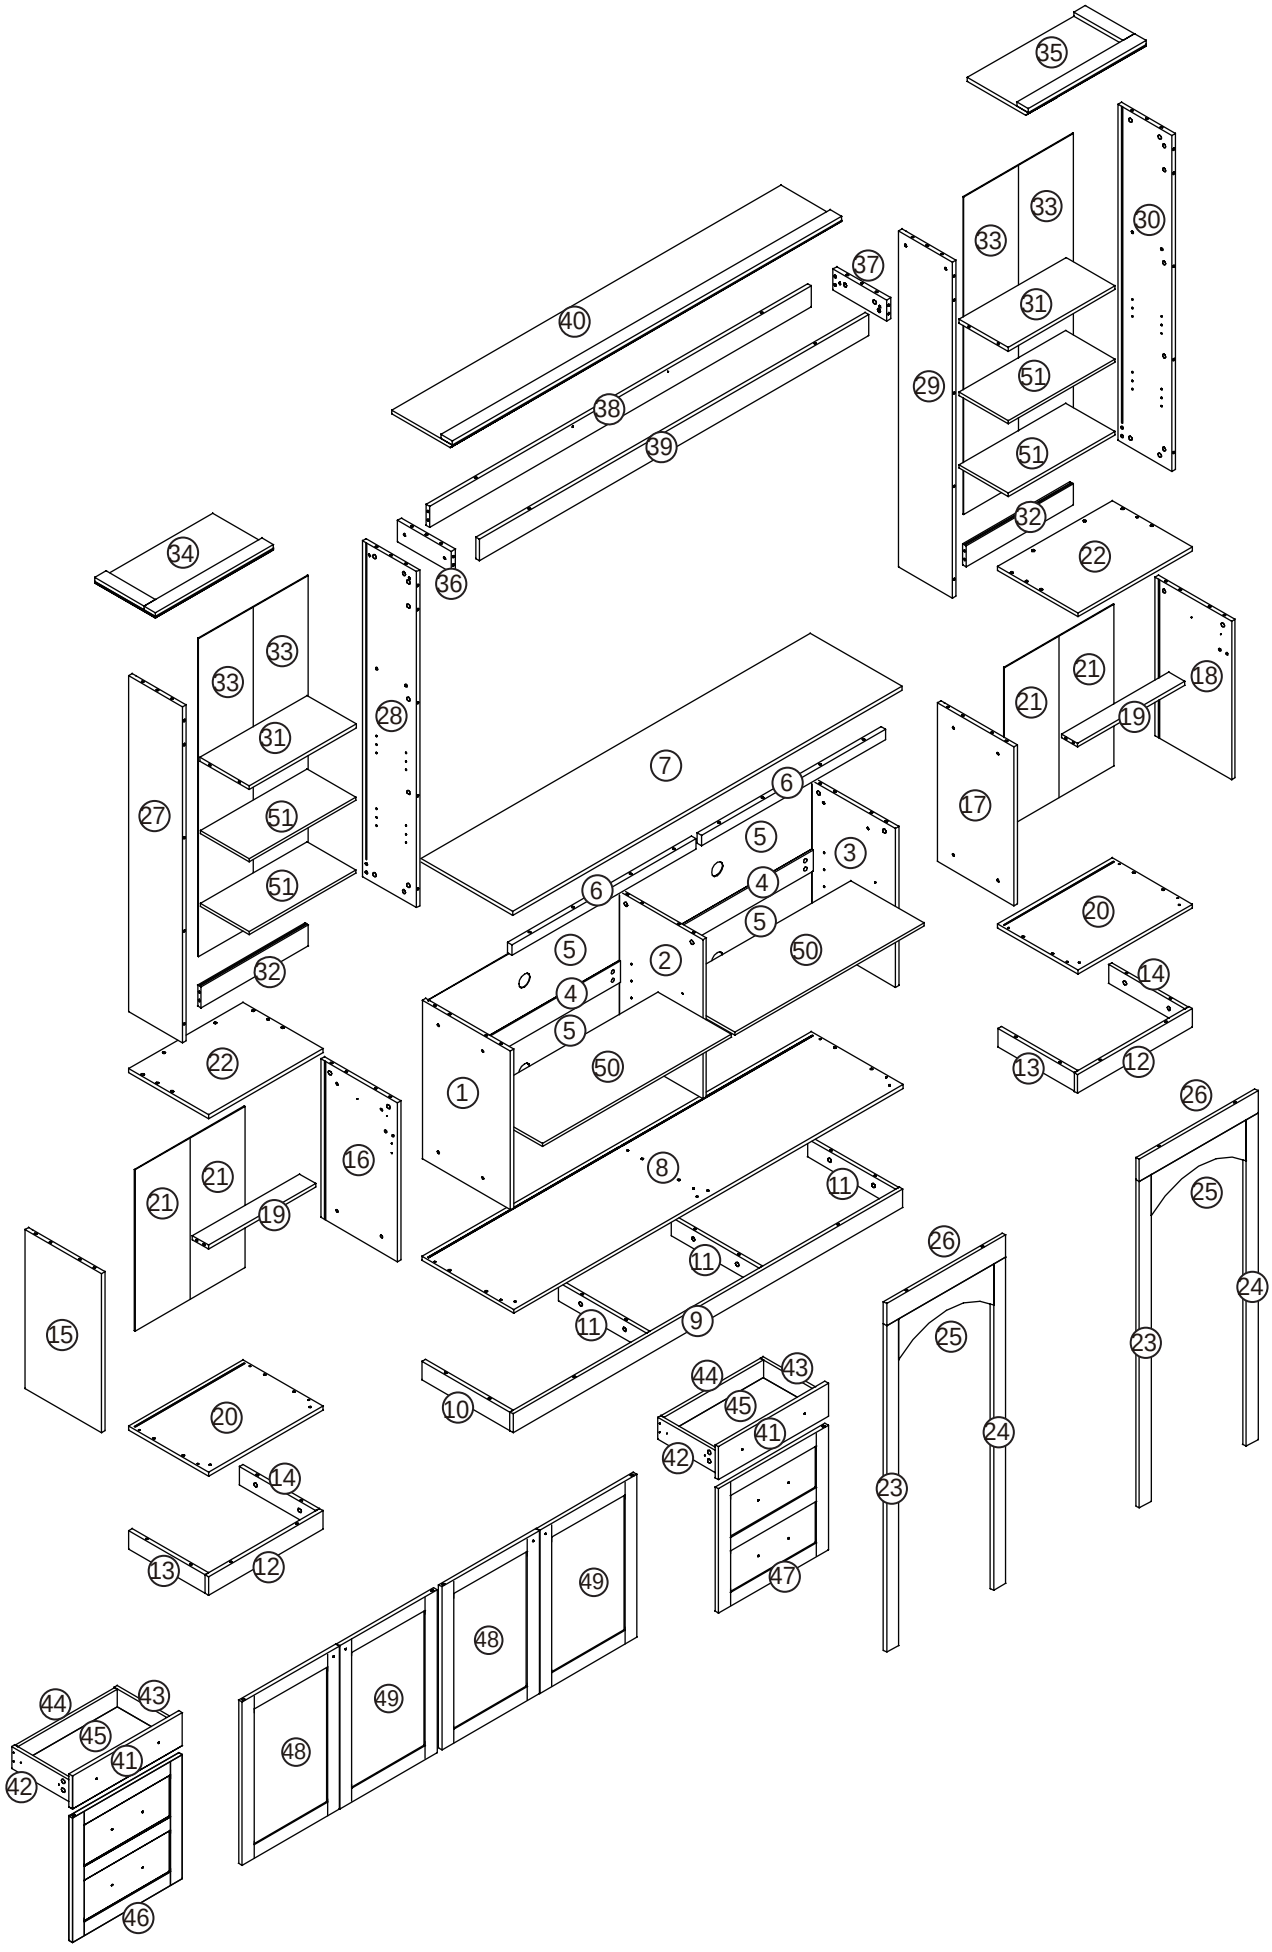

Assembly Instructions

There are 3 boxes of this product

















BOX-1

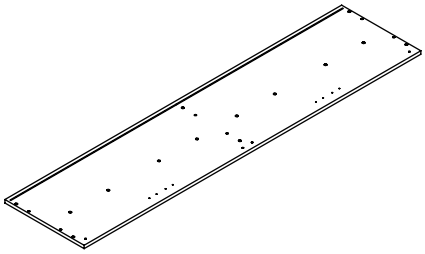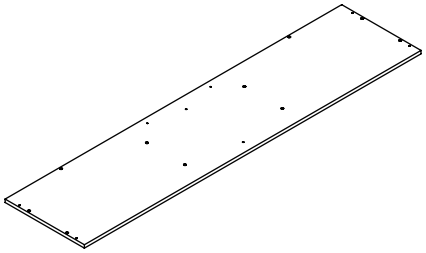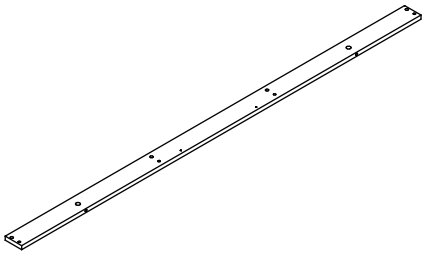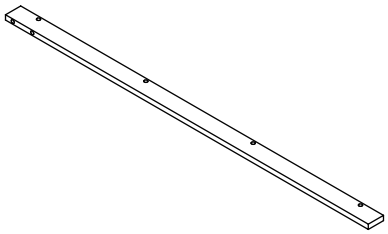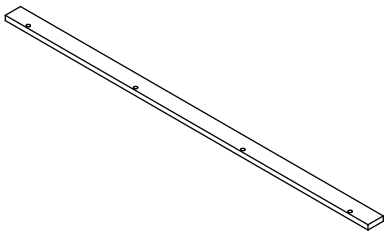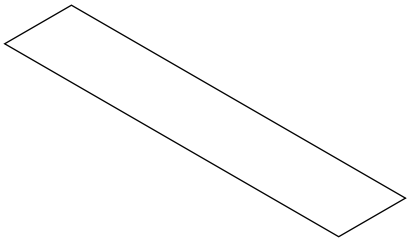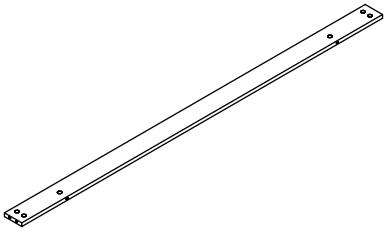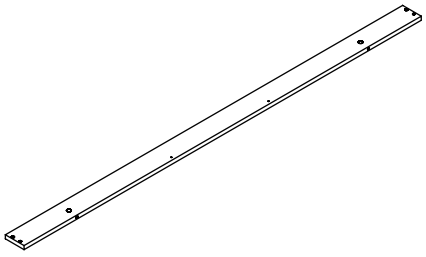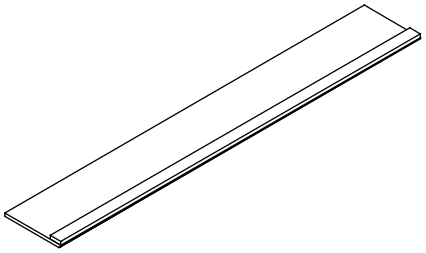 1700*400*15mm ⑦ X 1	 1700*400*15mm ⑧ X 1	 1700*70*15mm ⑨ X 1
 1190*50*15mm ㉓ X 2	 1190*50*15mm ㉔ X 2	 1201*239.5*3mm ㉝ X 4
 1666*80*15mm ㊳ X 1	 1700*80*15mm ㊴ X 1	 1700*265*30mm ㊵ X 1

Assembly Instructions

There are 3 boxes of this product




























BOX-2

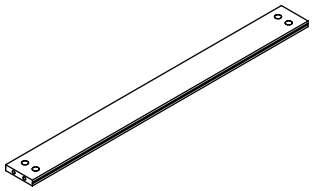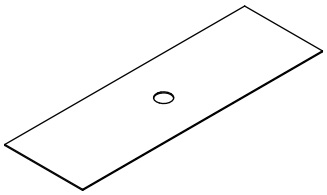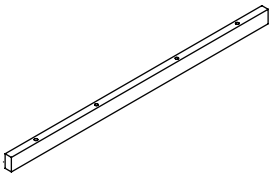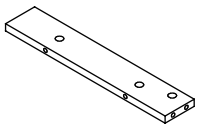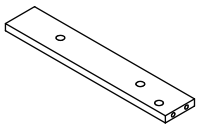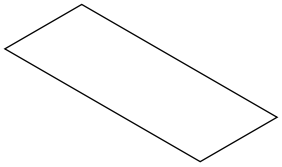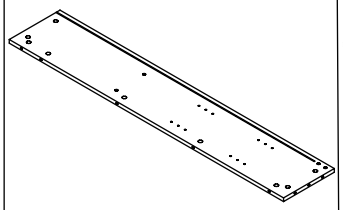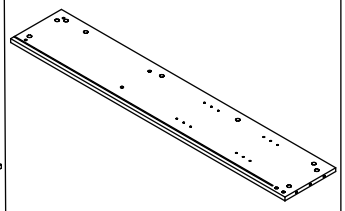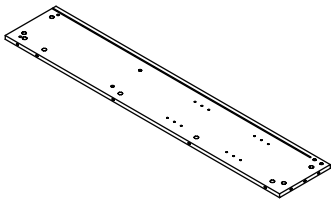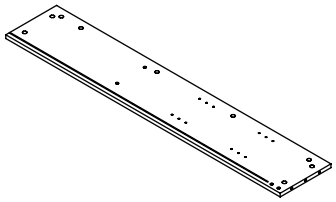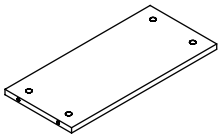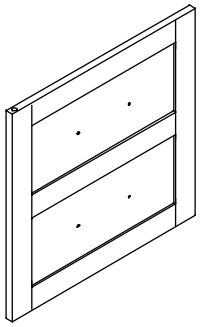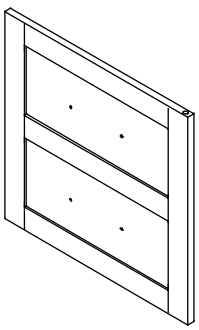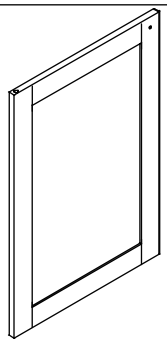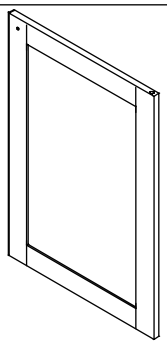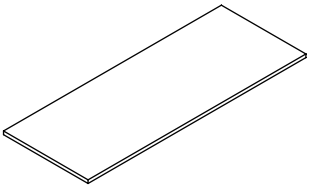 826*80*15mm ④ X 2	 836*271*3mm ⑤ X 4	 816*40*20mm ⑥ X 2	 384*70*15mm ⑩ X 1
 384*70*15mm ⑪ X 3	 610*239.5*3mm ㉑ X 4	 1270*235*15mm ㉗ X 1	 1270*235*15mm ㉘ X 1
 1270*235*15mm ㉙ X 1	 1270*235*15mm ㉚ X 1	 467*214*15mm ㉛ X 2	 462*453*15mm ㊻ X 1
 462*453*15mm ㊼ X 1	 594*409*15mm ㊽ X 2	 594*409*15mm ㊾ X 2	 825*320*15mm ㊿ X 2

Assembly Instructions

There are 3 boxes of this product













BOX-3

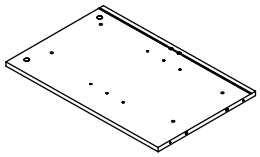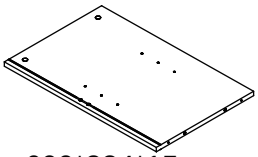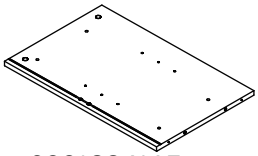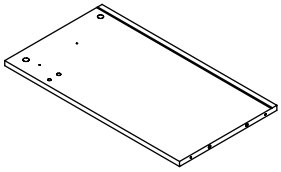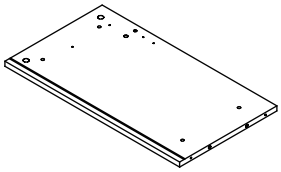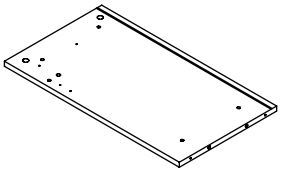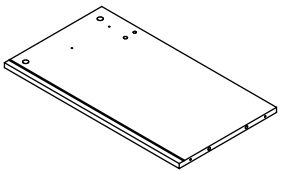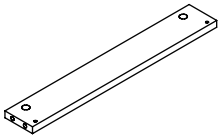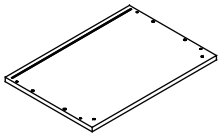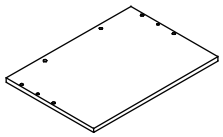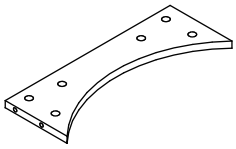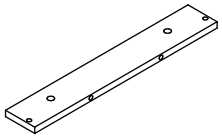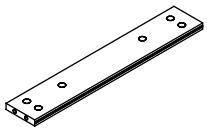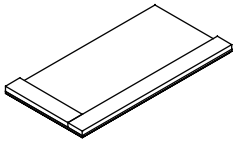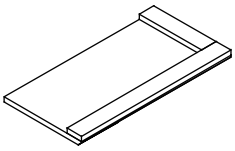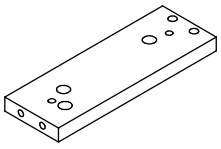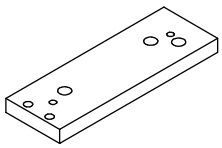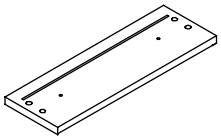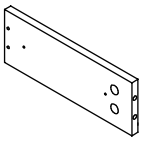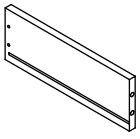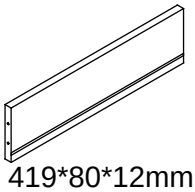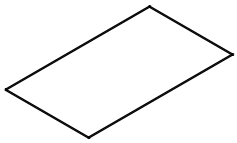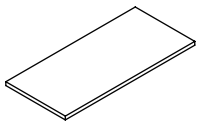 600*384*15mm ① X 1	 600*384*15mm ② X 1	 600*384*15mm ③ X 1	 500*70*15mm ⑫ X 2
 334*70*15mm ⑬ X 2	 334*70*15mm ⑭ X 2	 600*334*15mm ⑮ X 1	 600*334*15mm ⑯ X 1
 600*334*15mm ⑰ X 1	 600*334*15mm ⑱ X 1	 468*70*15mm ⑲ X 2	 500*350*15mm ⑳ X 2
 500*350*15mm ㉒ X 2	 400*150*15mm ㉕ X 2	 500*80*15mm ㉖ X 2	 468*80*15mm ㉜ X 2
 515*265*30mm ㉞ X 1	 515*265*30mm ㉟ X 1	 235*80*15mm ㊱ X 1	 235*80*15mm ㊲ X 1
 462*120*15mm ㊶ X 2	 250*80*12mm ㊷ X 2	 250*80*12mm ㊸ X 2	 419*80*12mm ㊹ X 2
 430*248*3mm ㊺ X 2	 465.5*214*12mm ㊶ X 4	 Hardware Pack X1	


Components-Fittings



Please check you have all the panels listed below

Note:The quantitie below are the correcet amount to complete the assembly.In some cases more fittings may be supplied than are required.

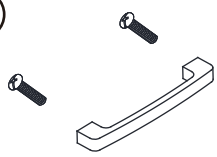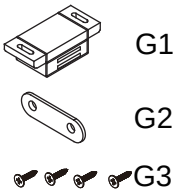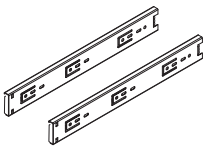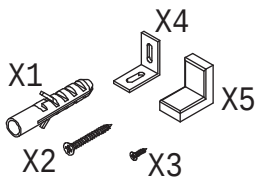
Ⓐ  Cam Bolt x 142+3	Ⓑ  Cam Bolt x 8+2	Ⓒ  Cam Lock x 150+4	Ⓓ  8*30mm Dowel x 52+2
Ⓔ  Handle x 4	Ⓕ  Handle x 8	Ⓖ  G1 G2 G3 door holder x 6	Ⓗ  5*40mm Screw x 14+2
Ⓙ  4*35mm Screw x 8+2	Ⓚ  225mm Drawer slide x 2	Ⓛ  Rotating shaft x 12+1	Ⓜ  Metal shelf support x 24+2
Ⓝ  Perfect Fit x 54	Ⓞ  felt x 55+2	Ⓟ  Angle iron x 6	Ⓡ  6*25mm Screw x 12+1
Ⓢ  Clamp plate nut x12+1	Ⓣ  6*50mm Screw x 8+1	Ⓤ  Back panel buckle x 52+2	Ⓥ  3.5*12mm Screw x 80+3
Ⓧ  Anti dumping x 4 set	Ⓨ  Screwdriver x 2		


Step 1

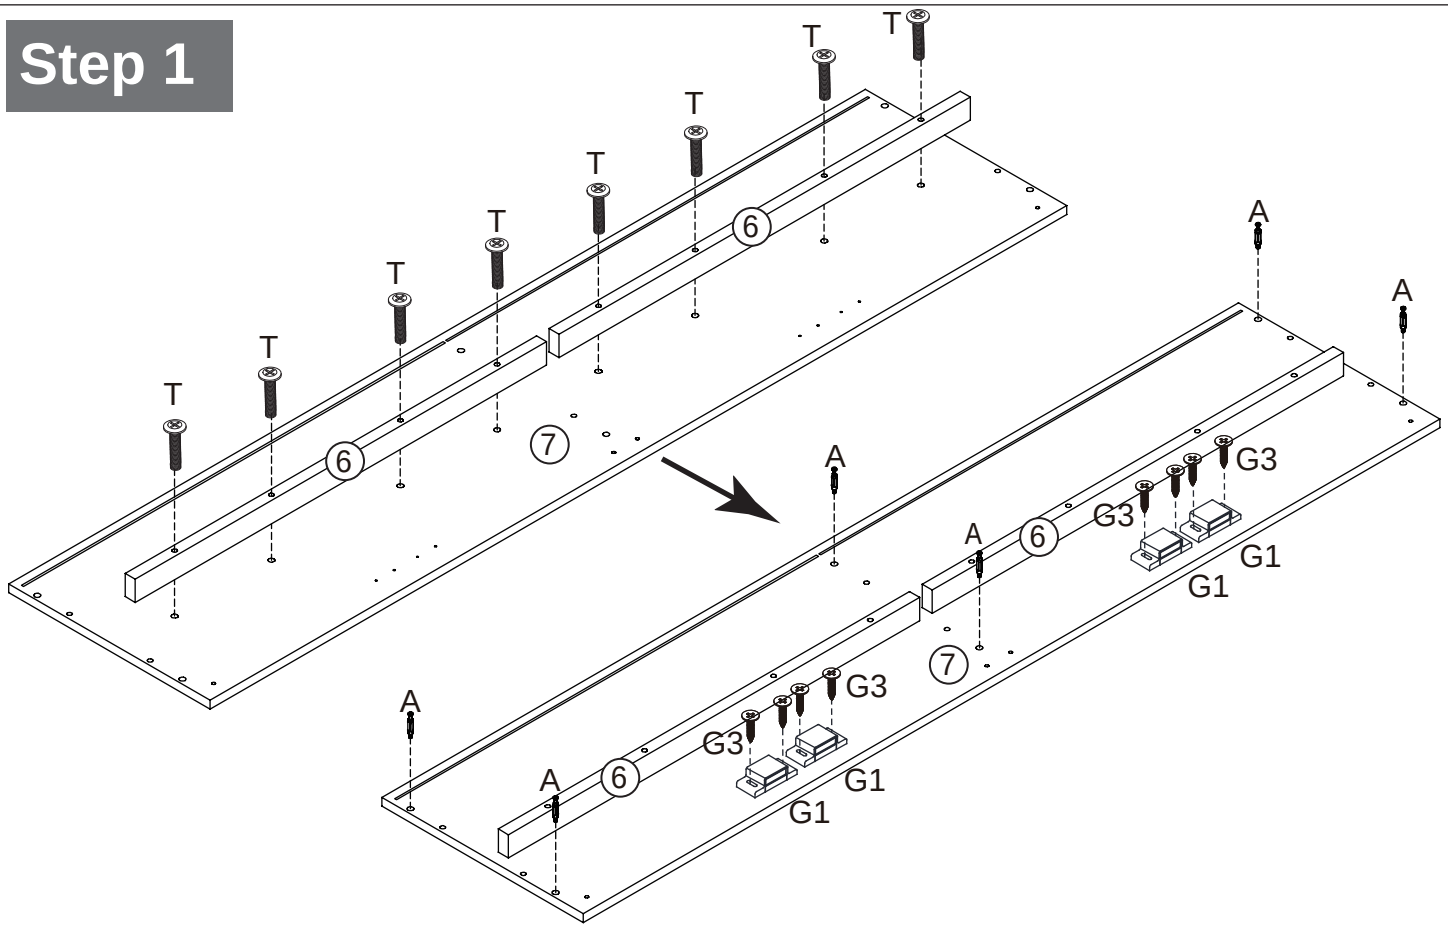


A*6	G1*4	G3*8	T*8
			


Step 2

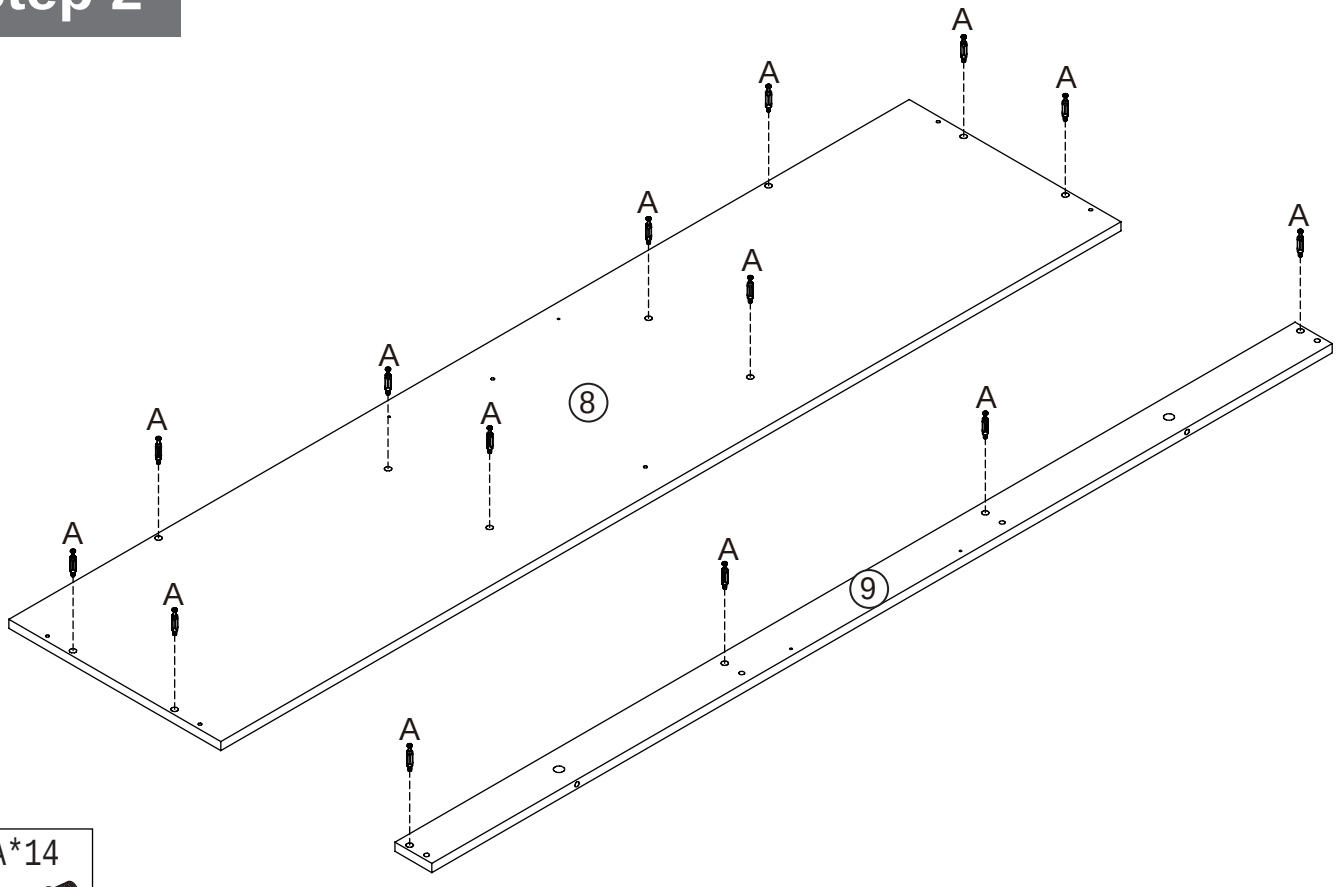


A*14


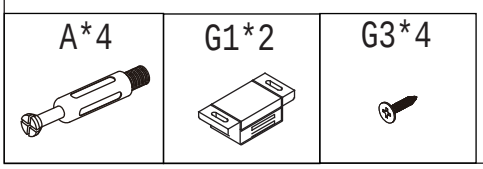
Step 3

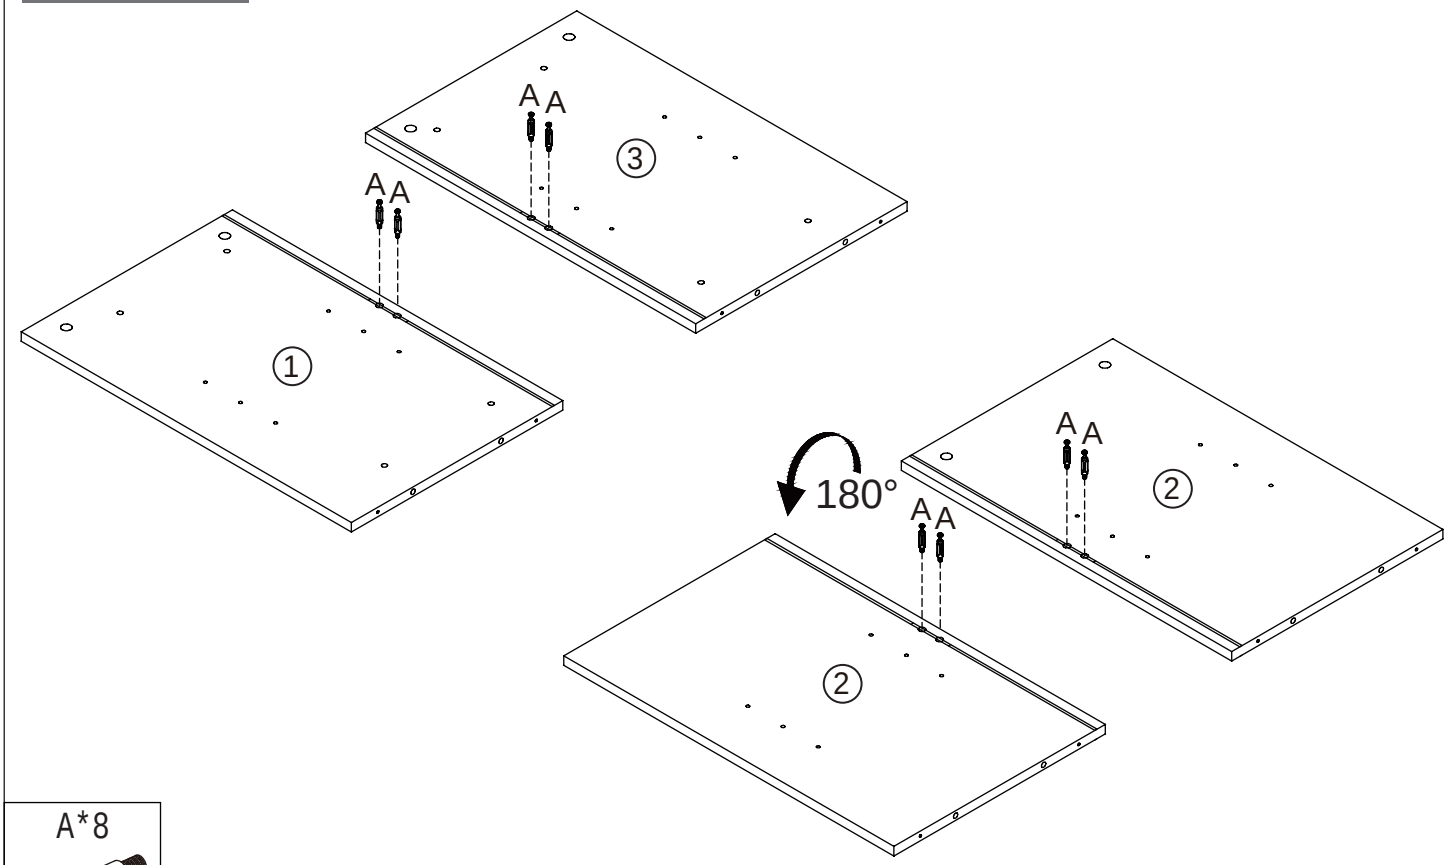

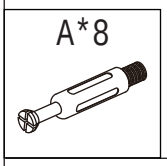



Step 4

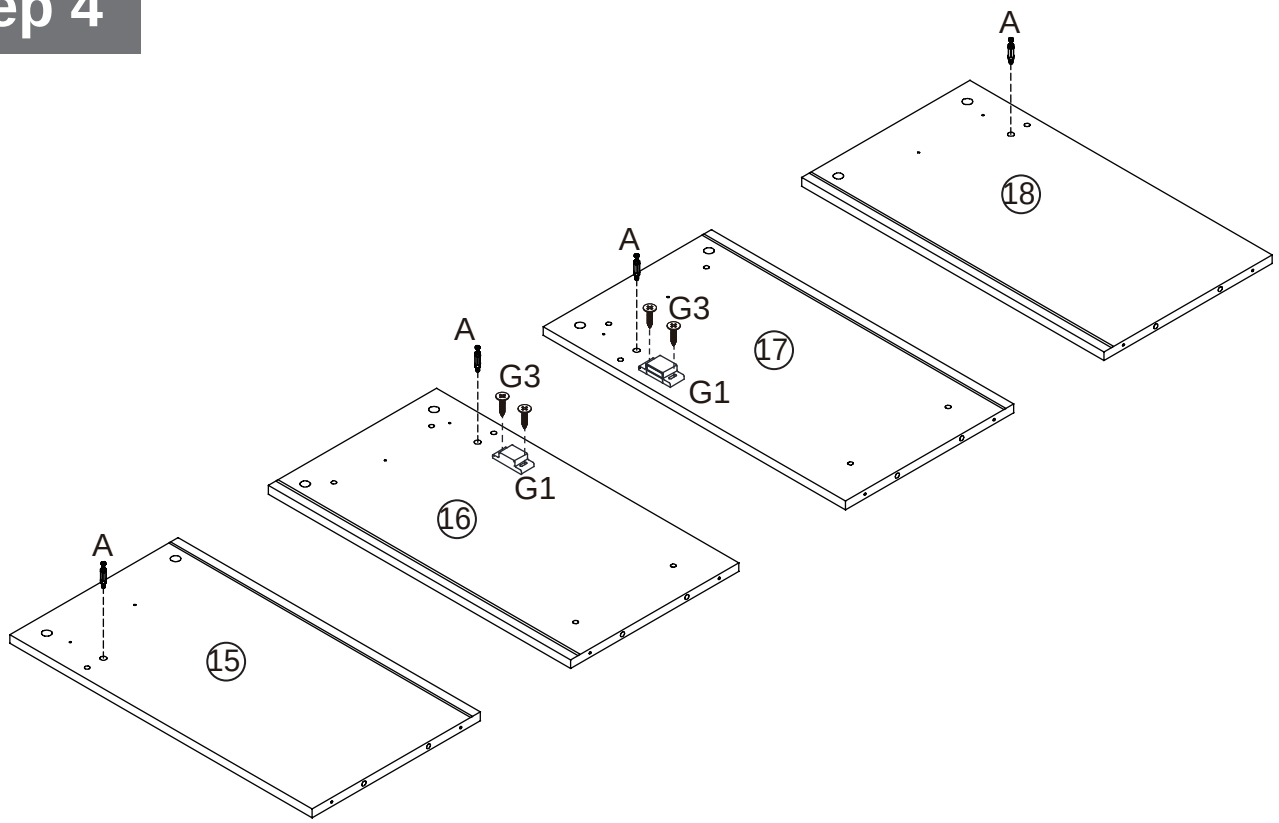





Step 5 Step X2

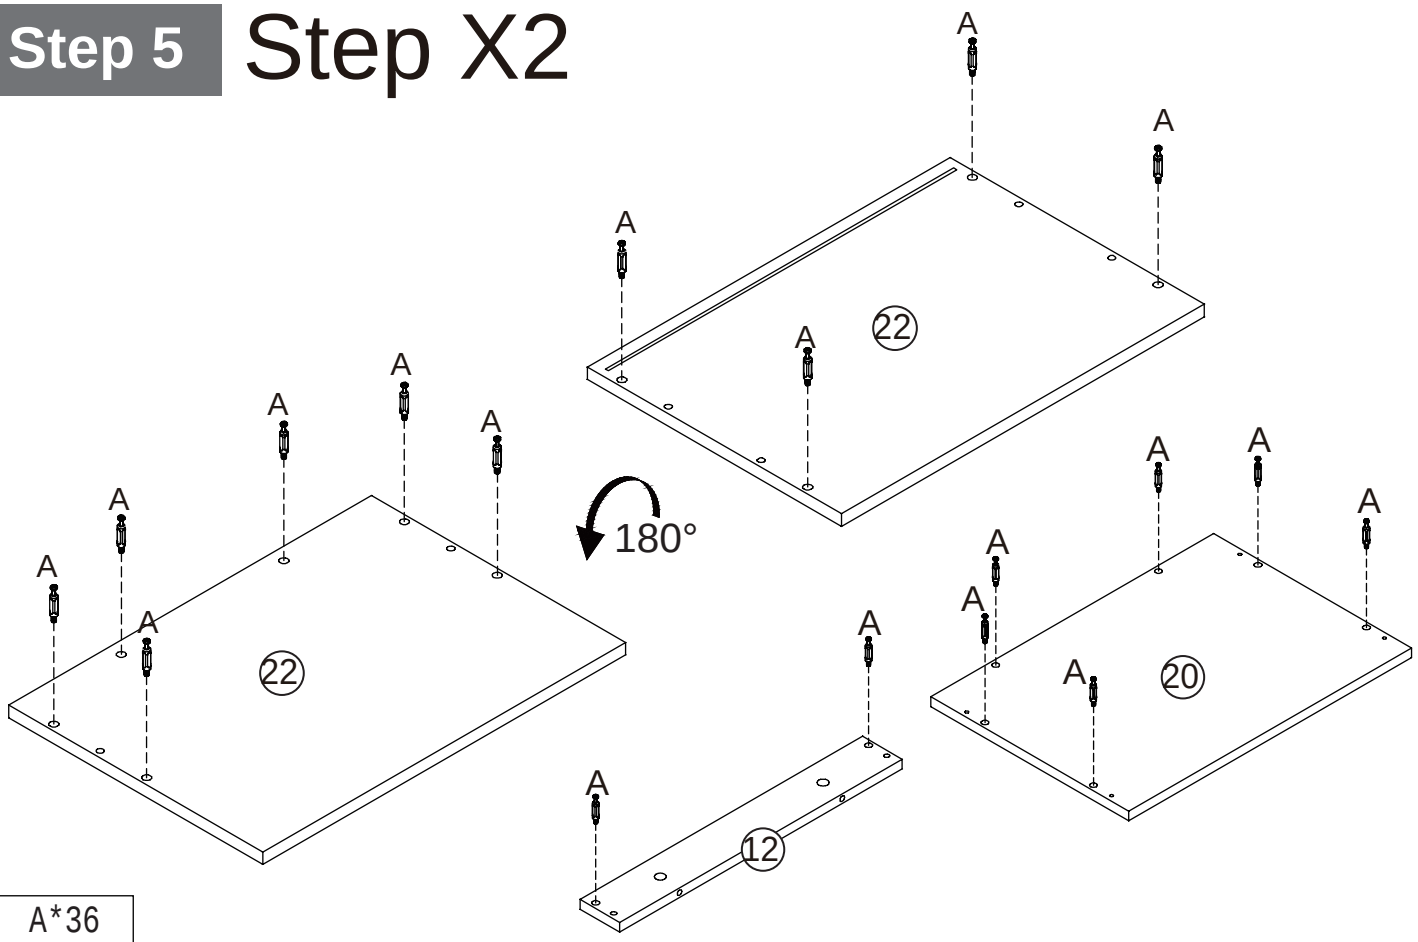

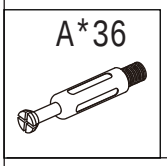



Step 6 Step X2

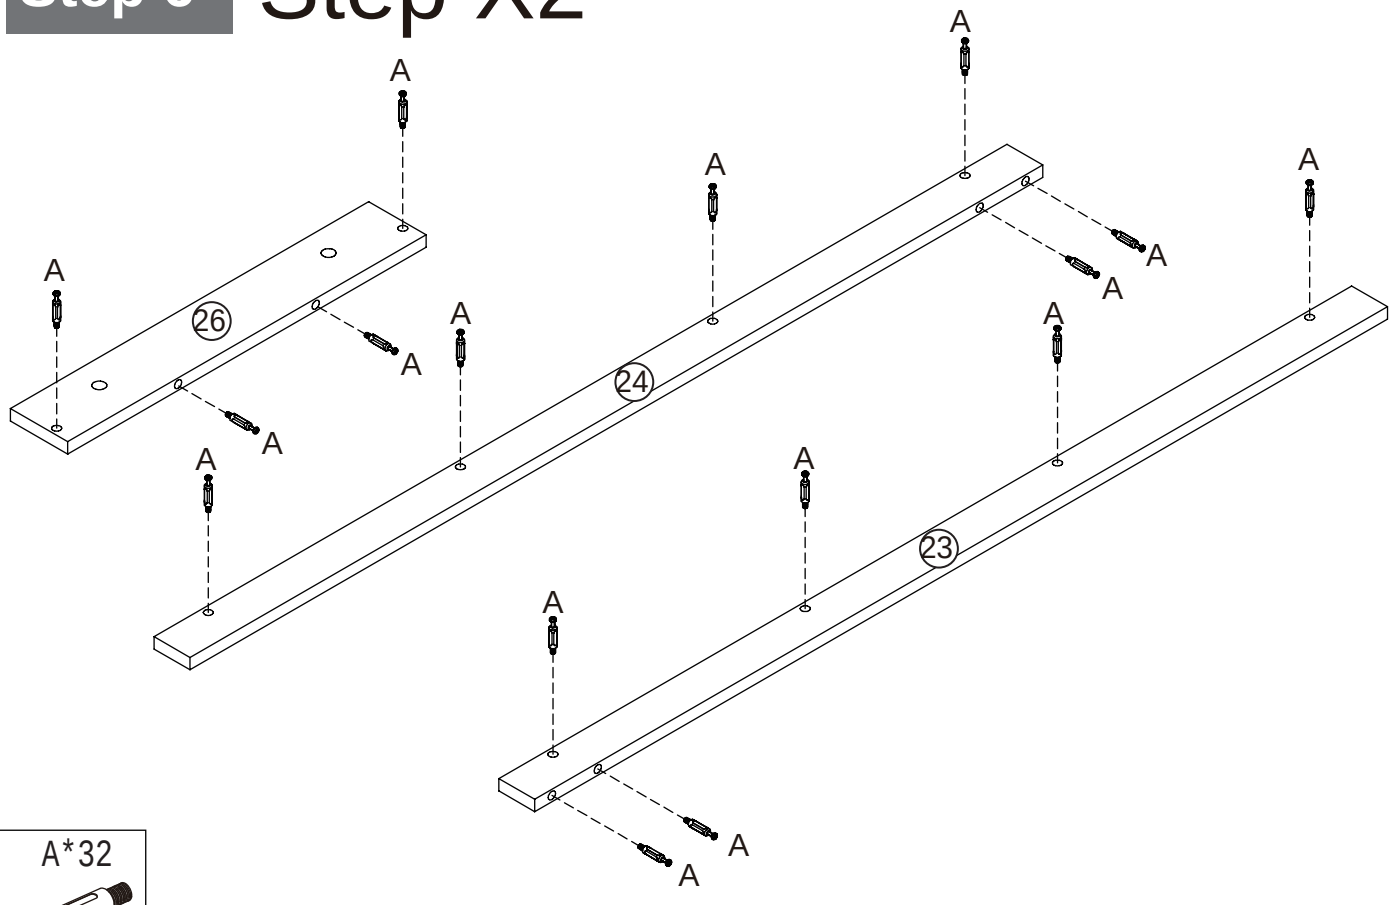

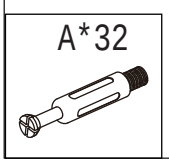



Step 7

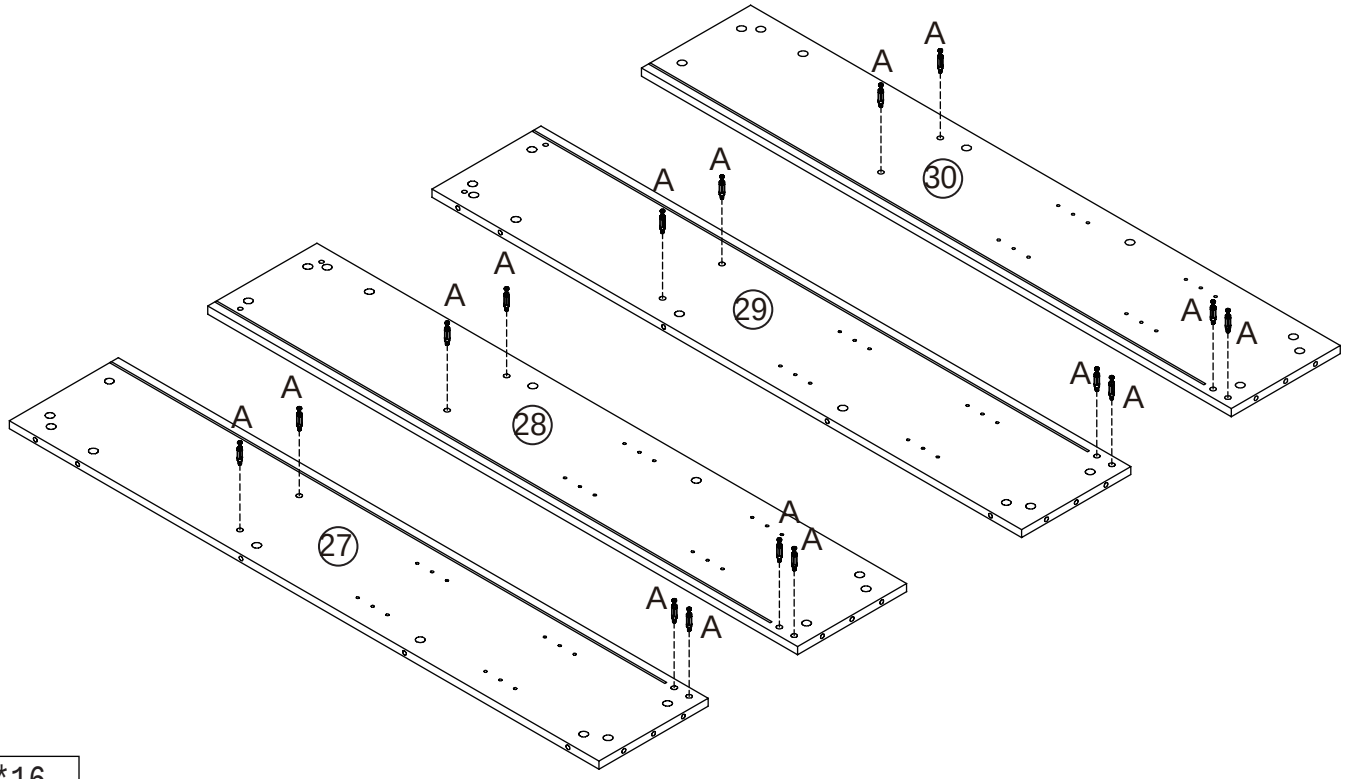

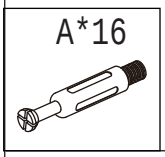



Step 8

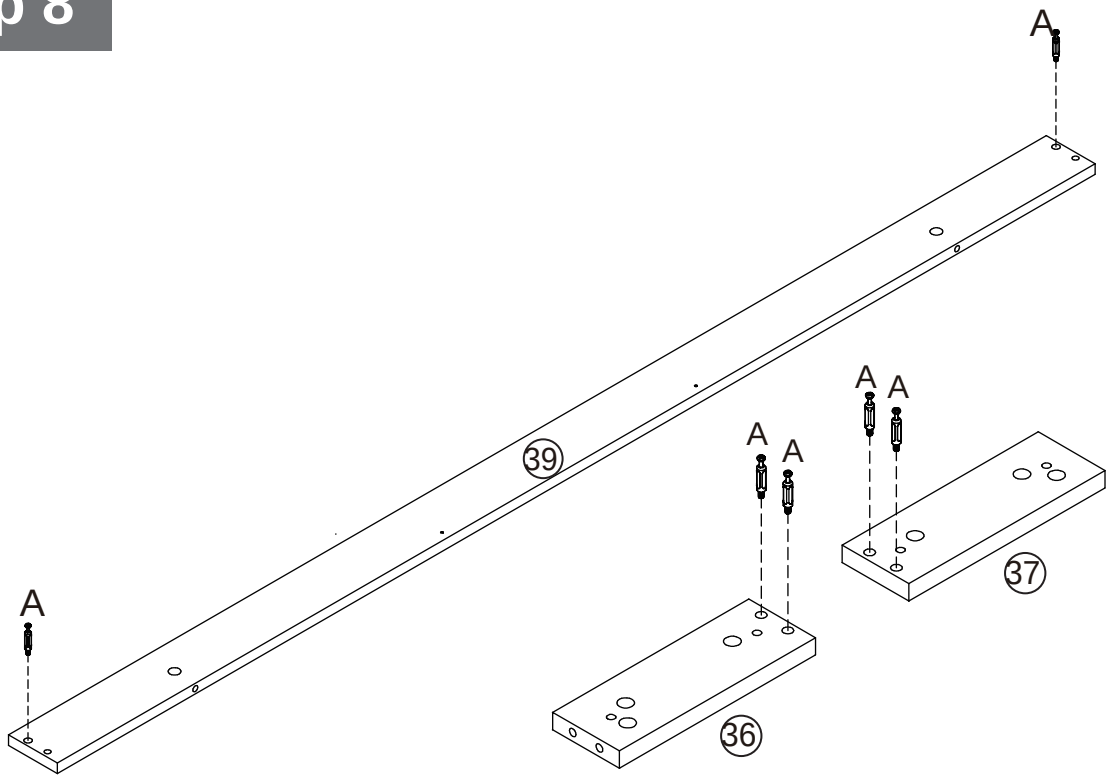

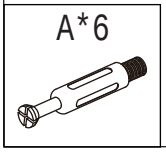



Step 9

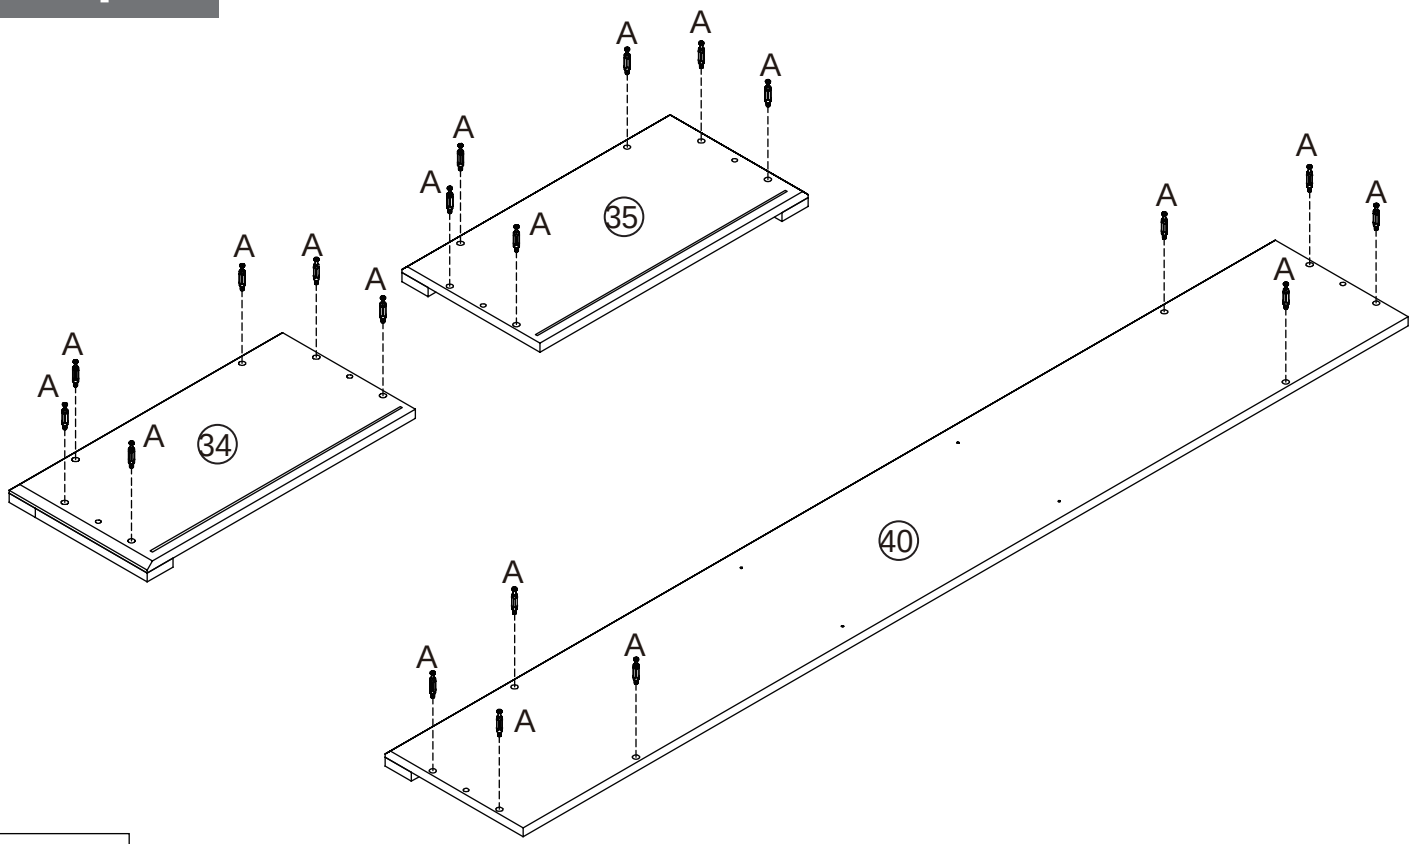


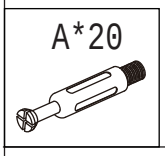


Step 10 Step X2


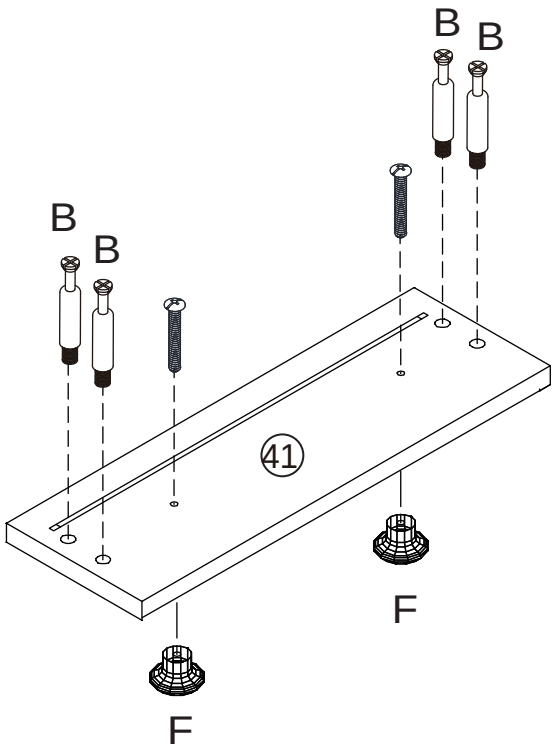


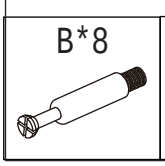

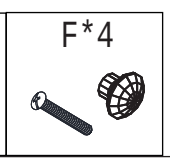



Step 11

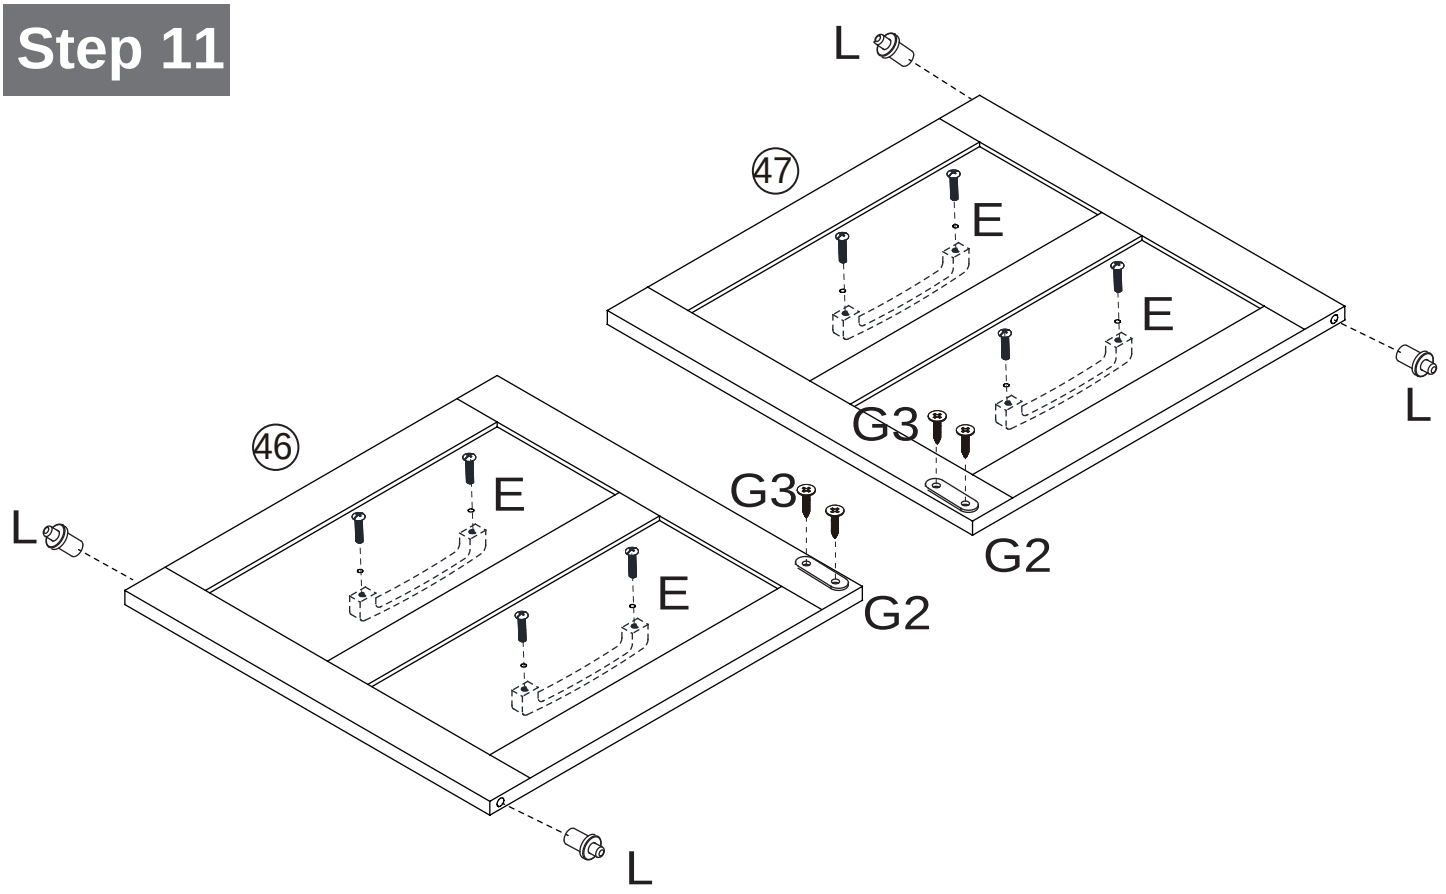


G2*2	G3*4	E*4	L*4
			


Step 12 Step X2

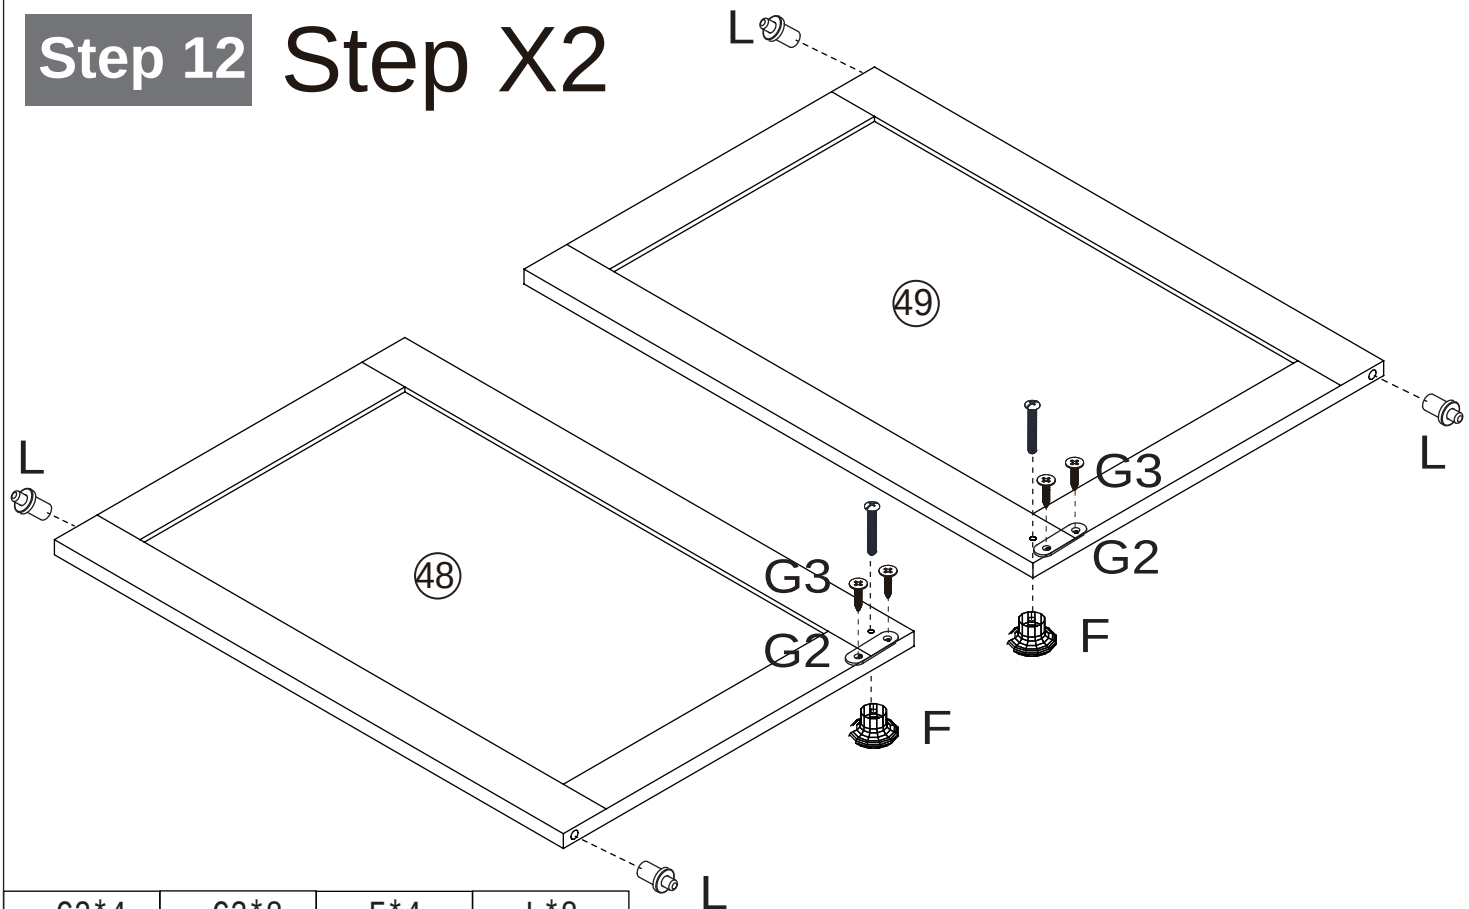


G2*4	G3*8	F*4	L*8
			


Step 13

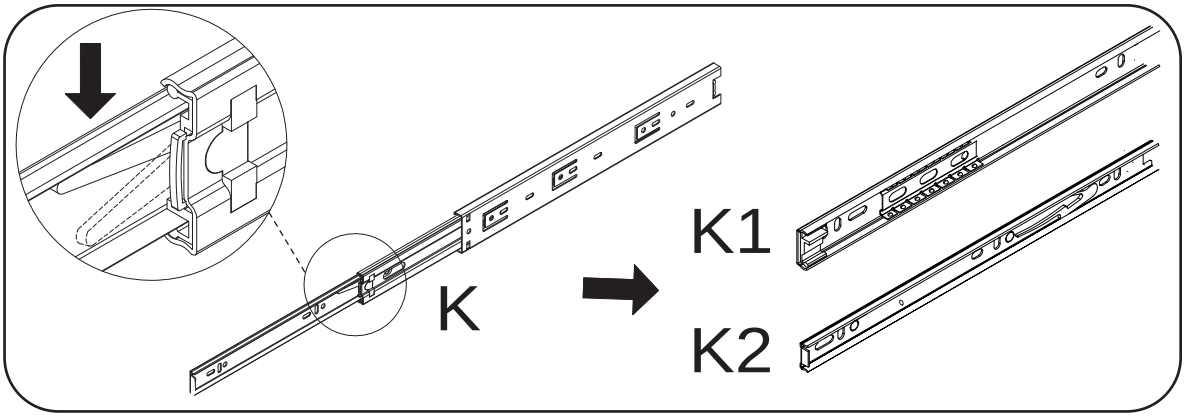


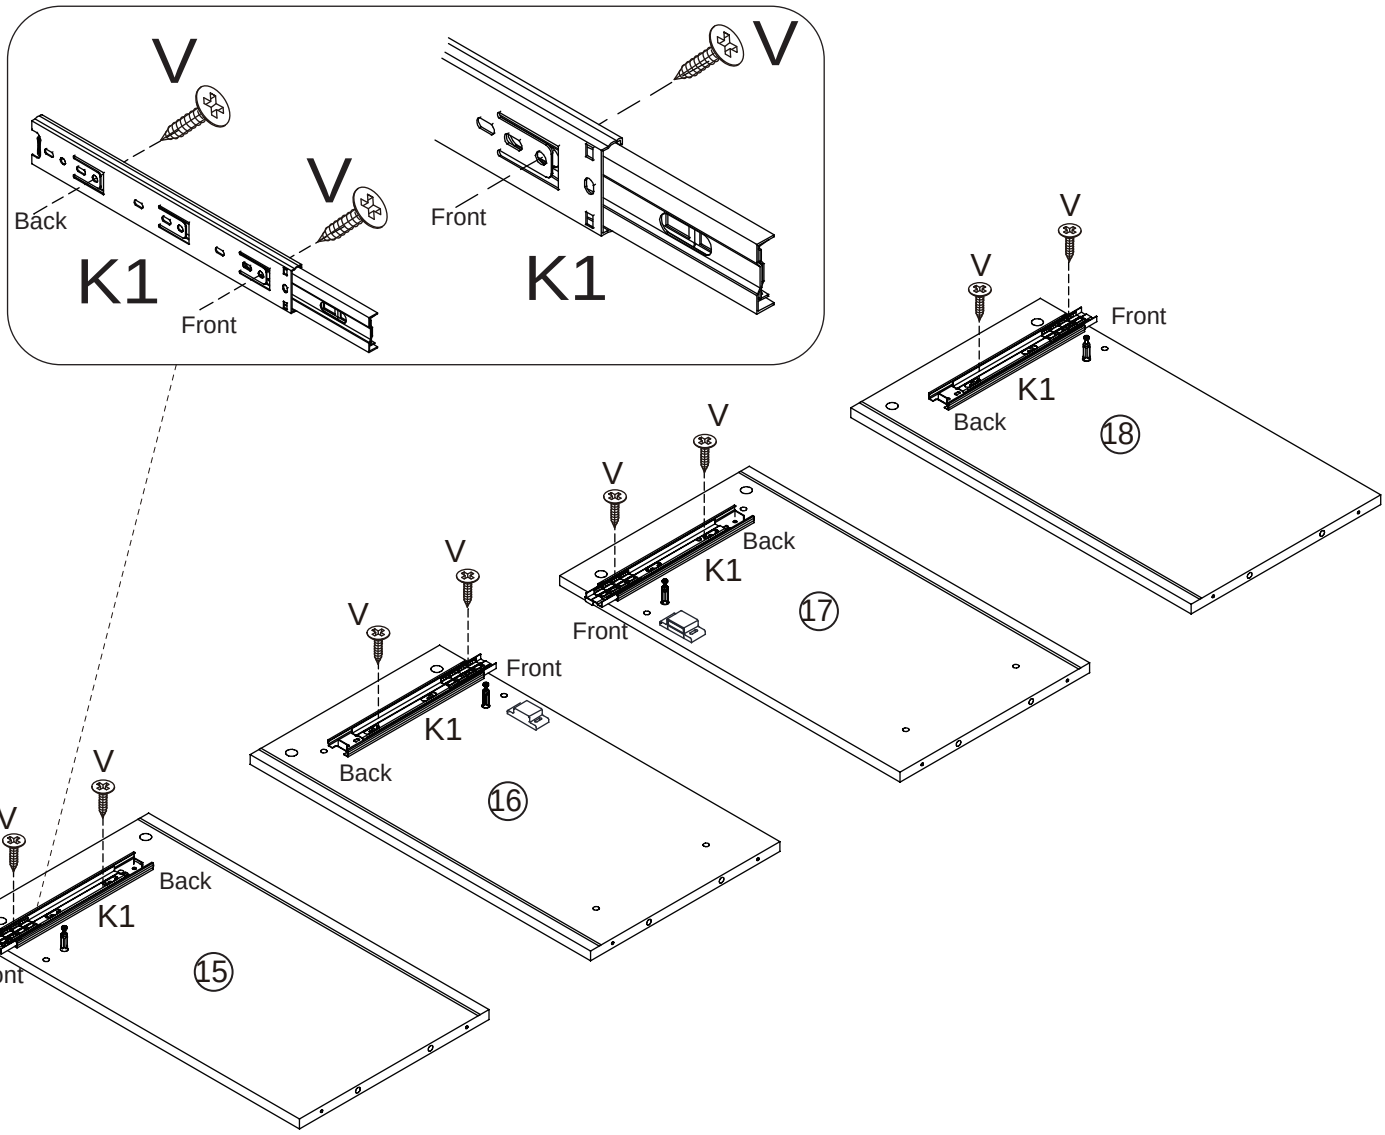

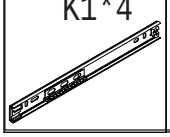K1*4	V*8
	

Step 14

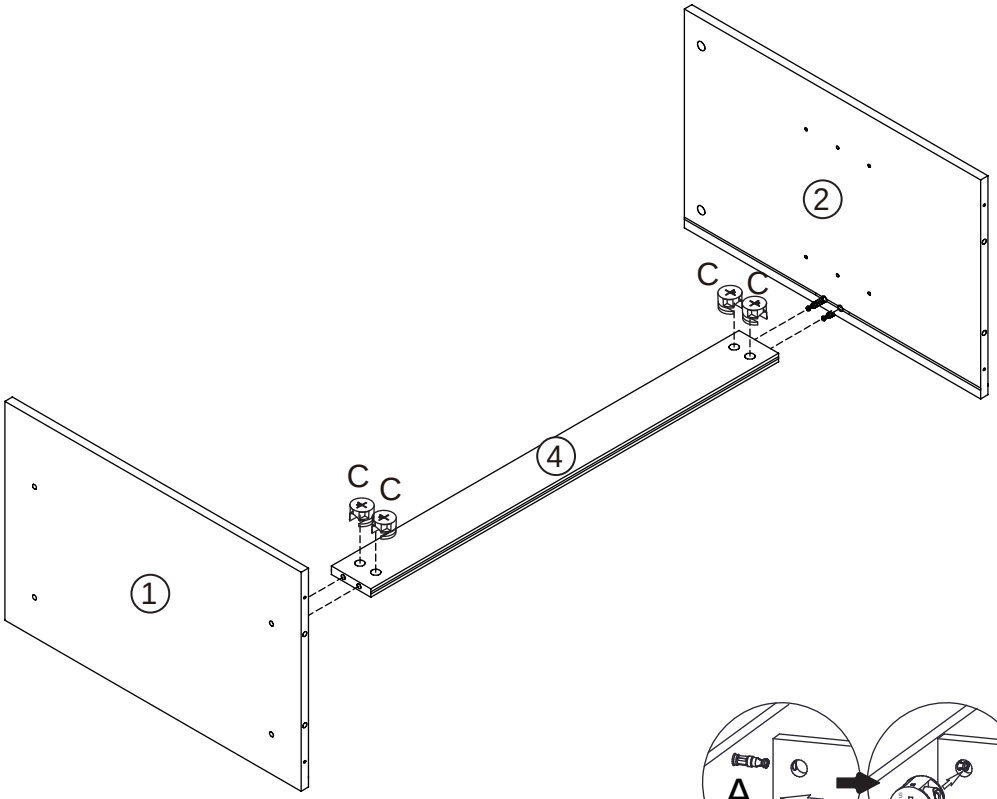


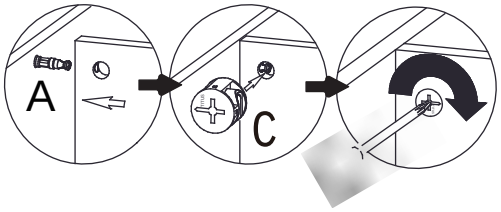

C*4




Step 15

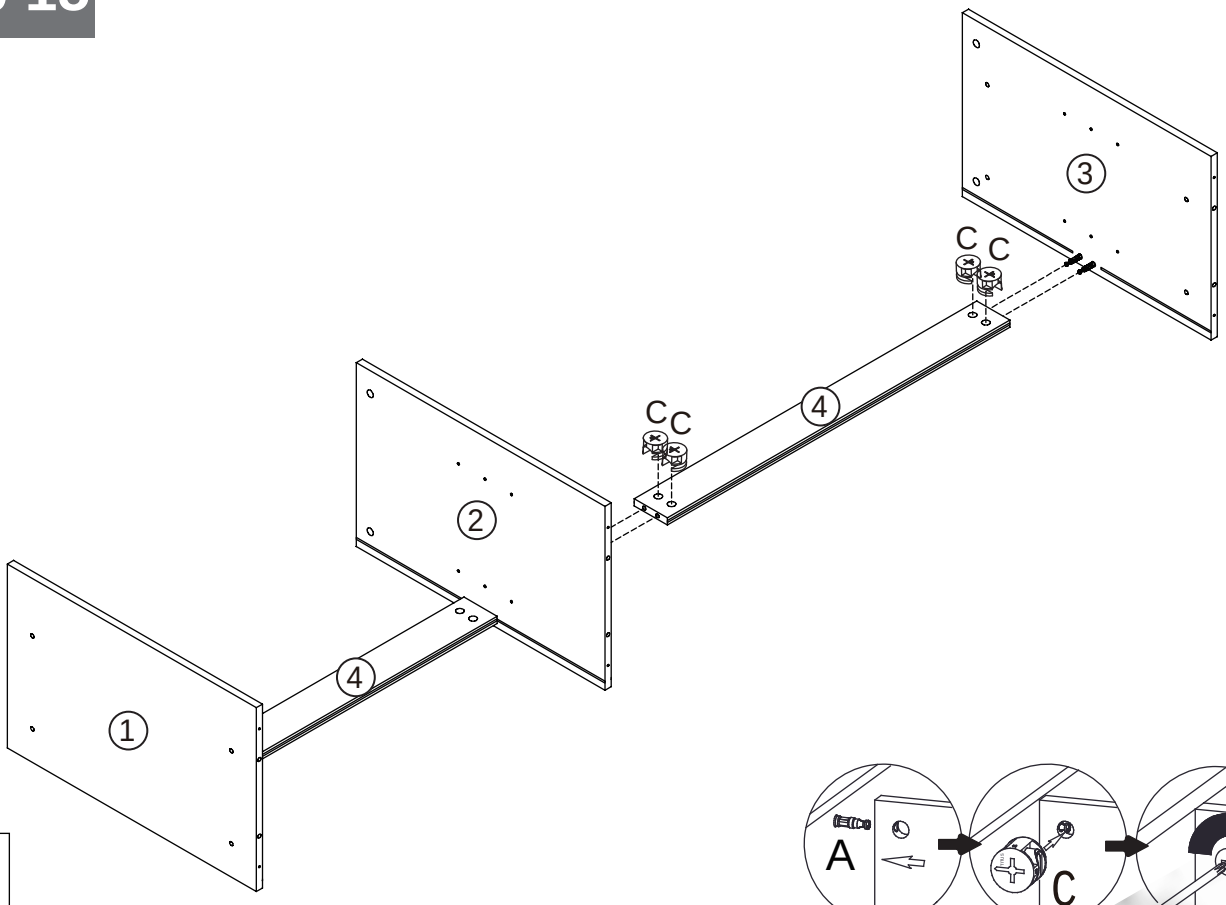


C*4



Step 16

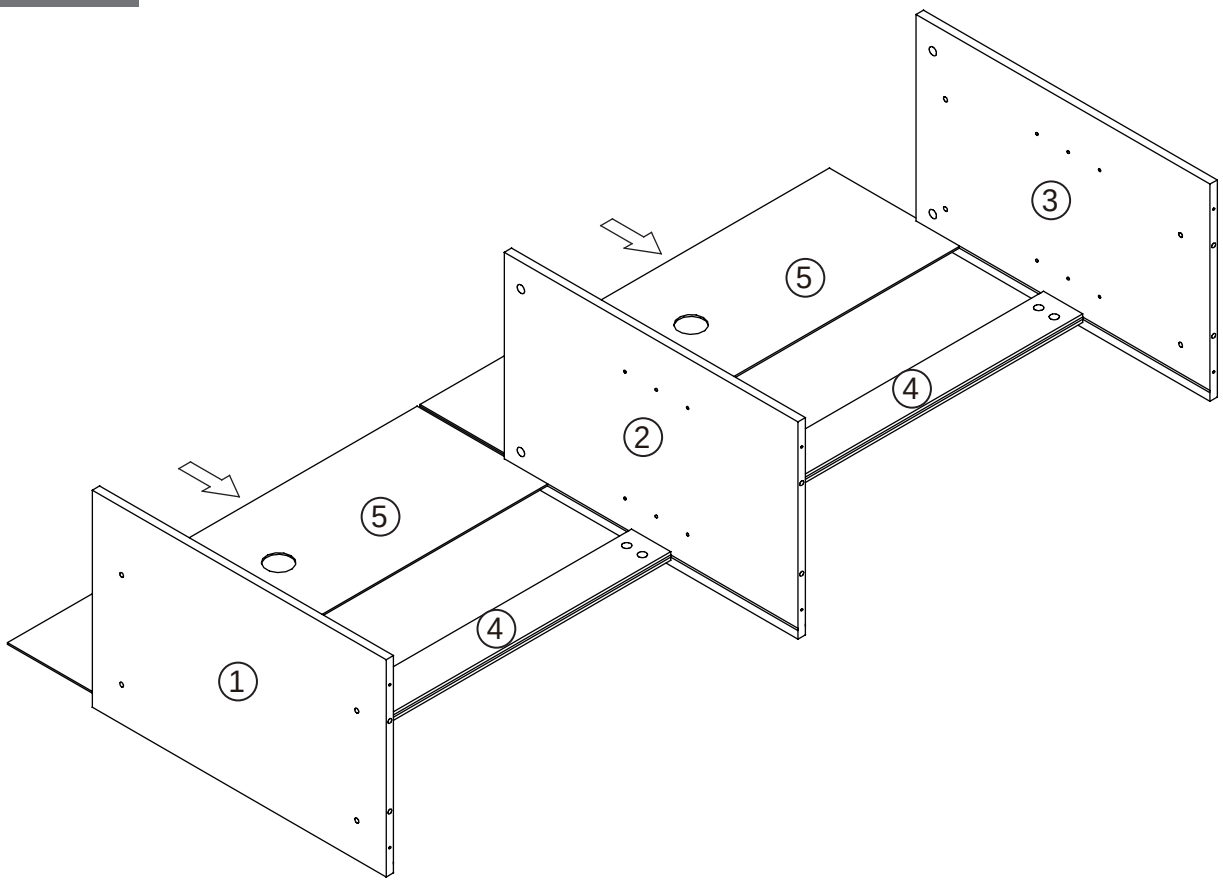


Step 17

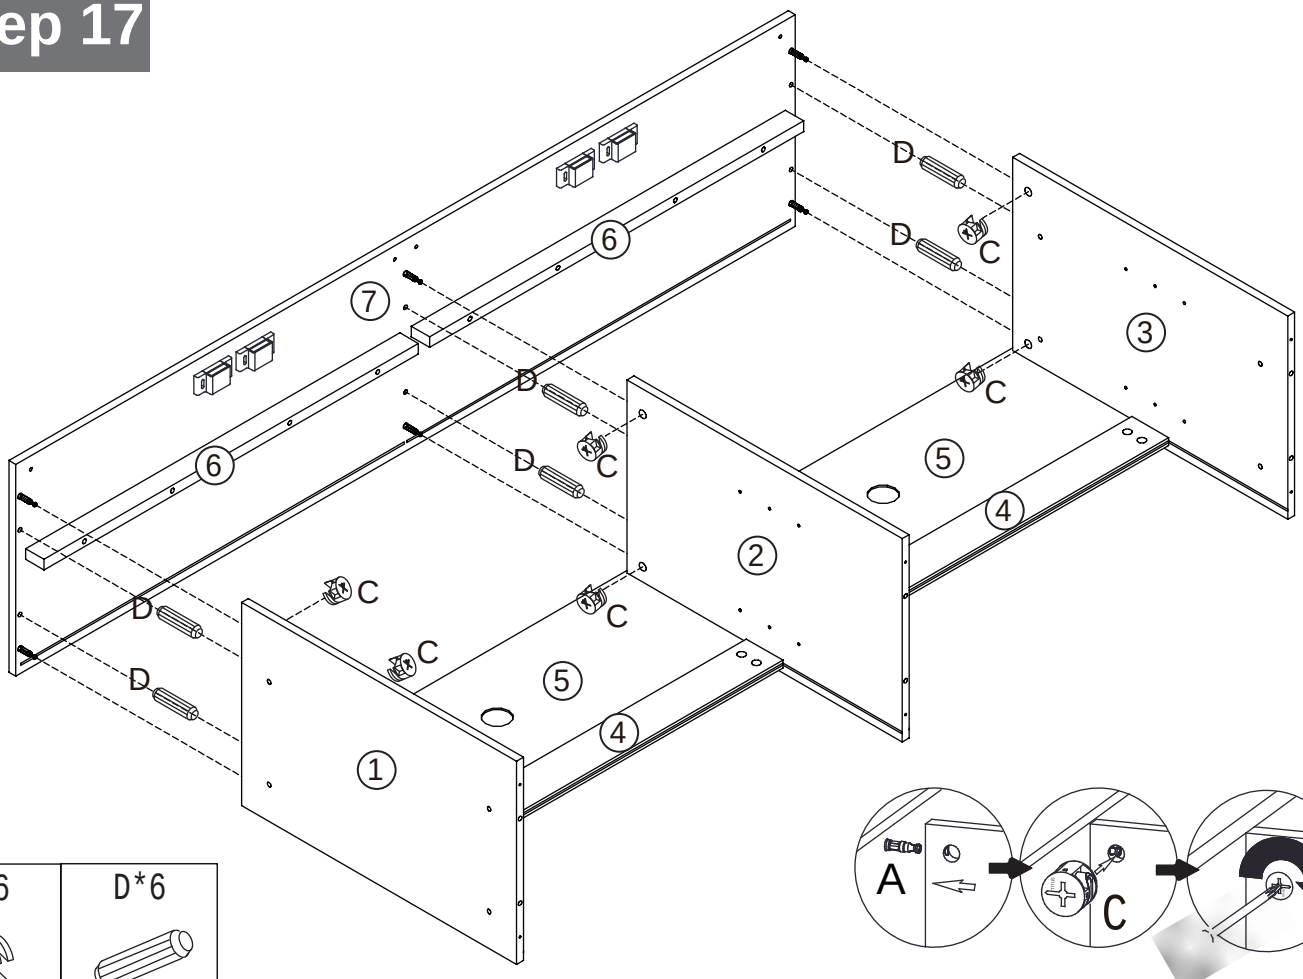



C*6	D*6
	

Step 18

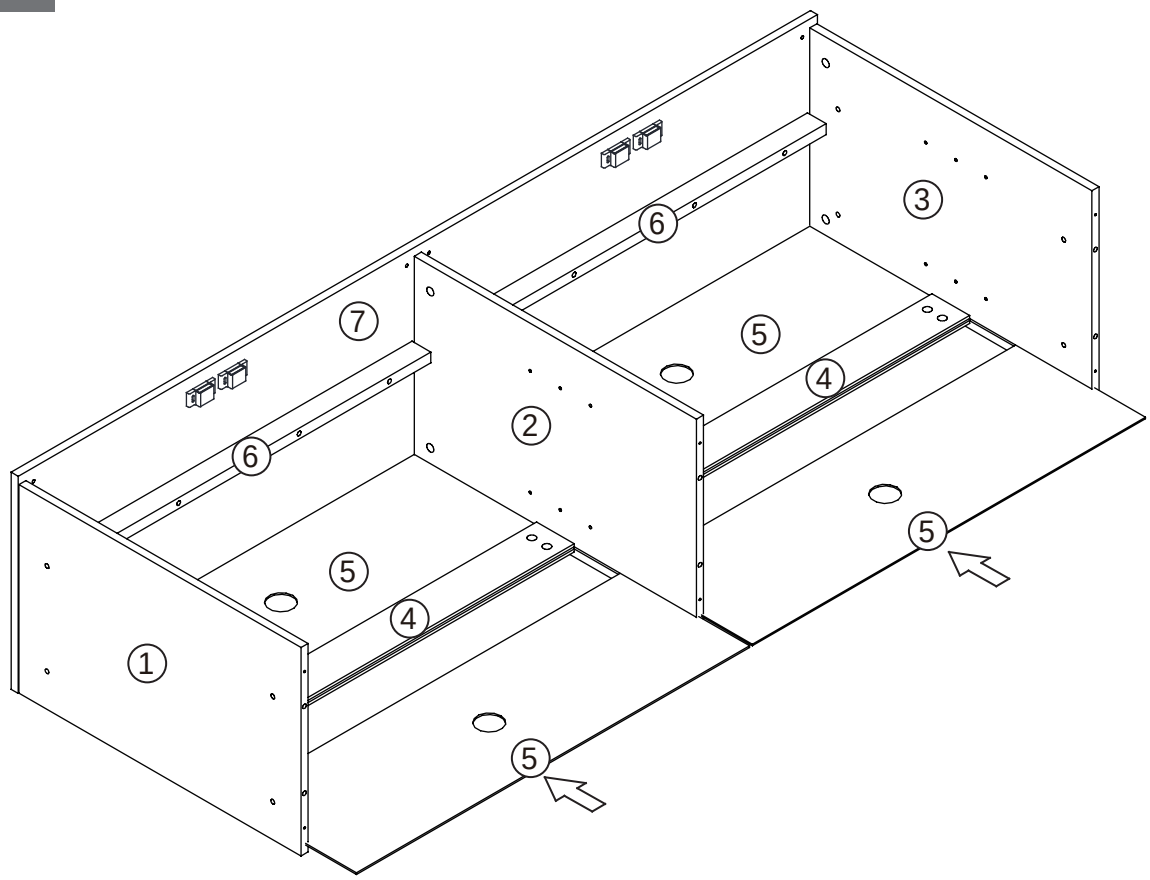



Step 19

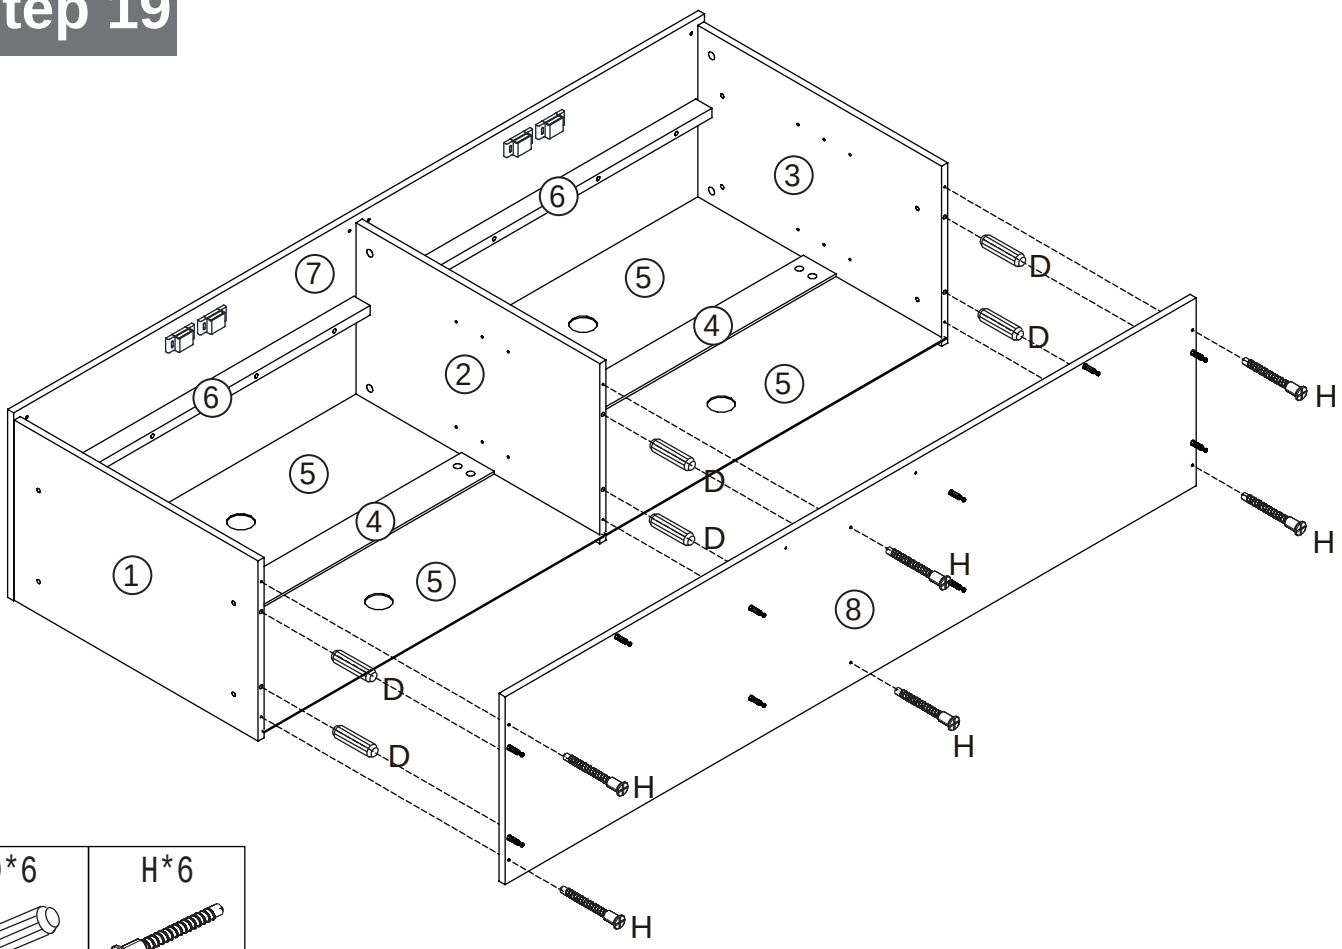


D*6	H*6
	


Step 20

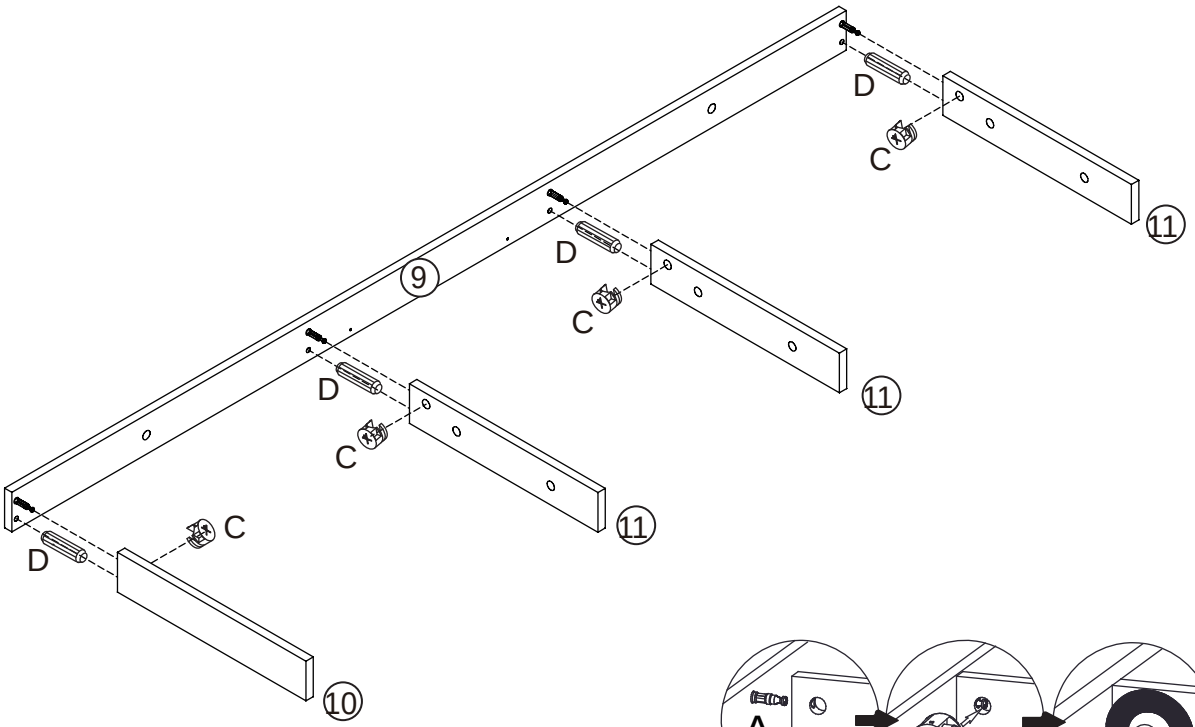

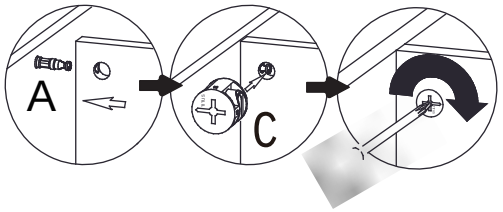


C*4	D*4
	


Step 21

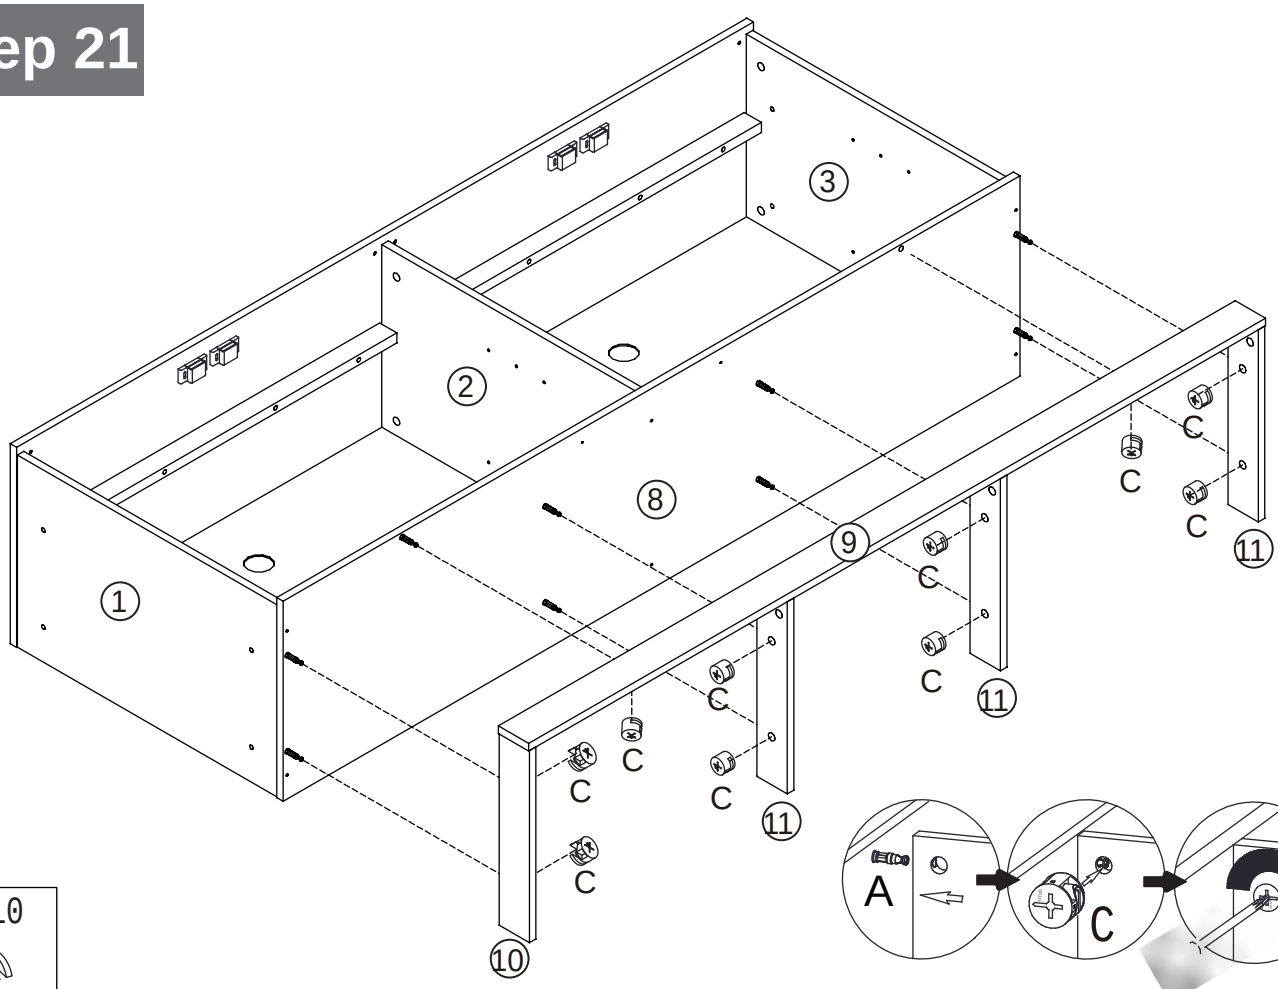


C*10


Step 22

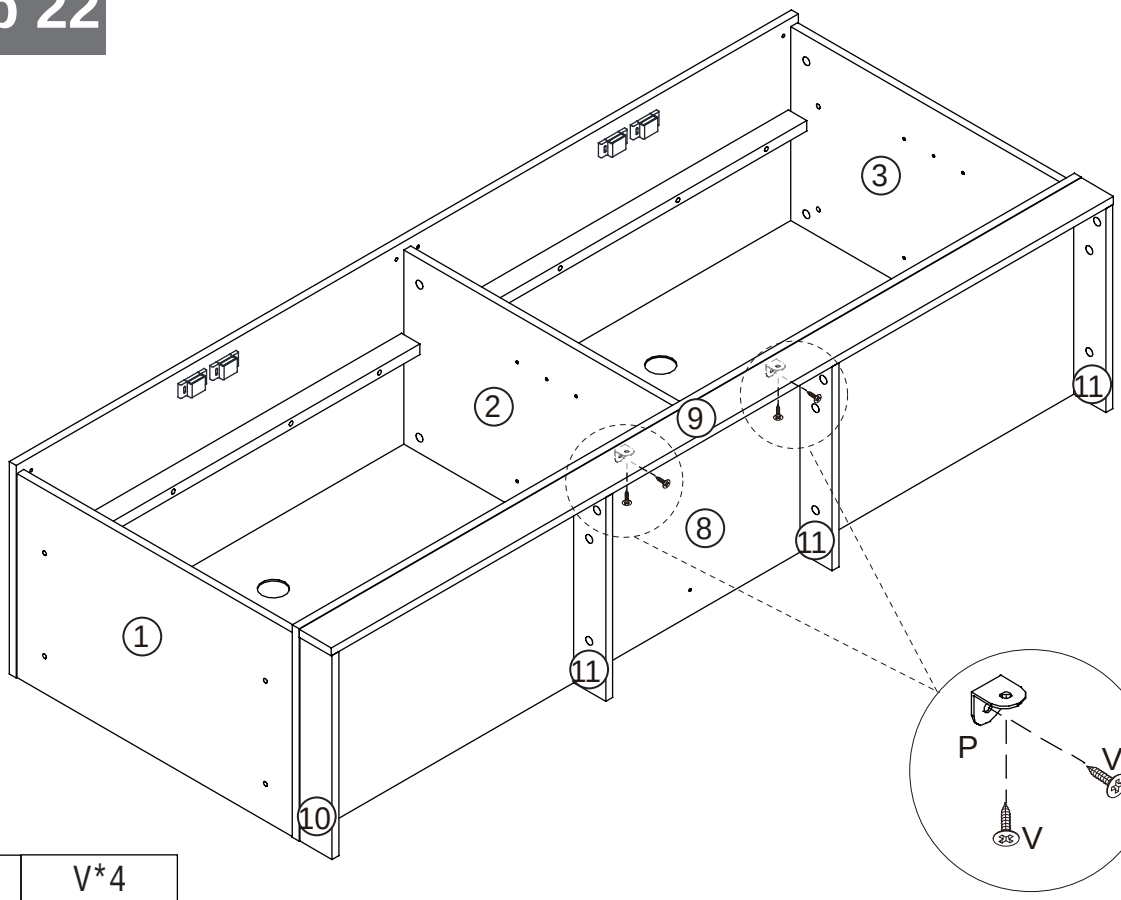


P*2	V*4
	


Step 23

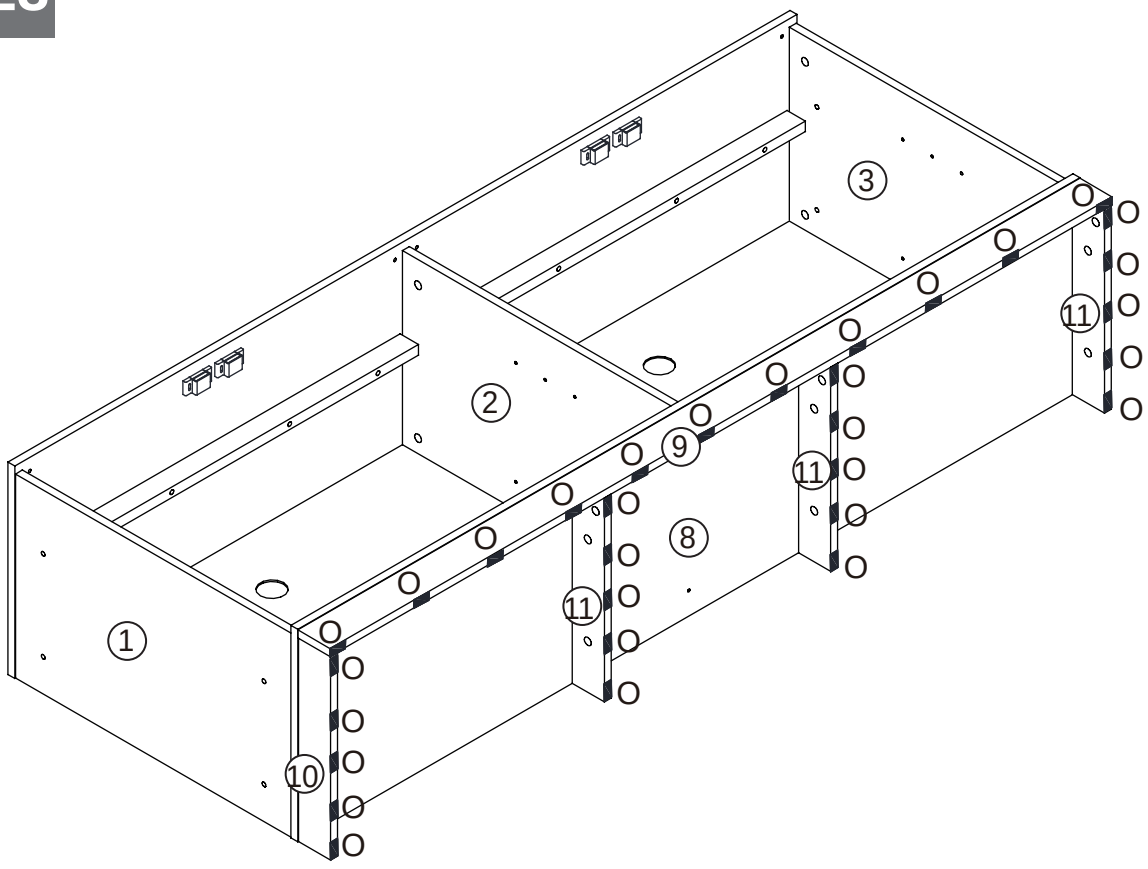


0*31



Step 24 Step X2

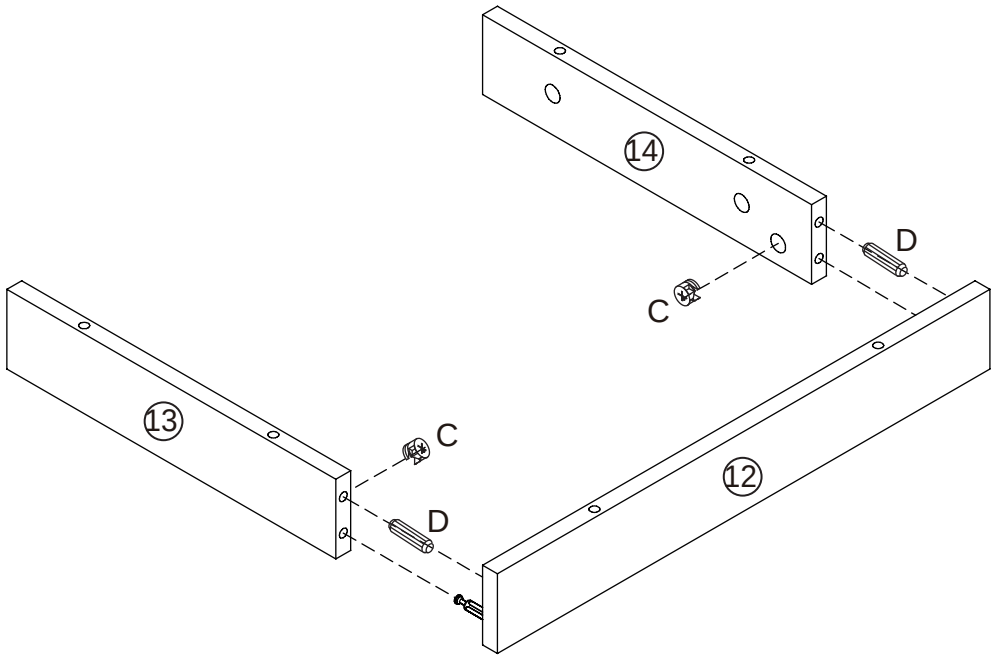


C*4	D*4
	

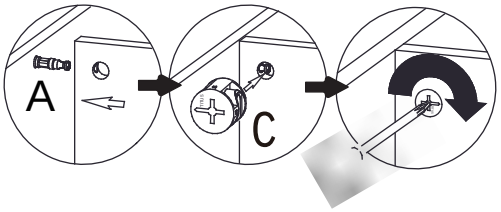


Step 25 Step X2

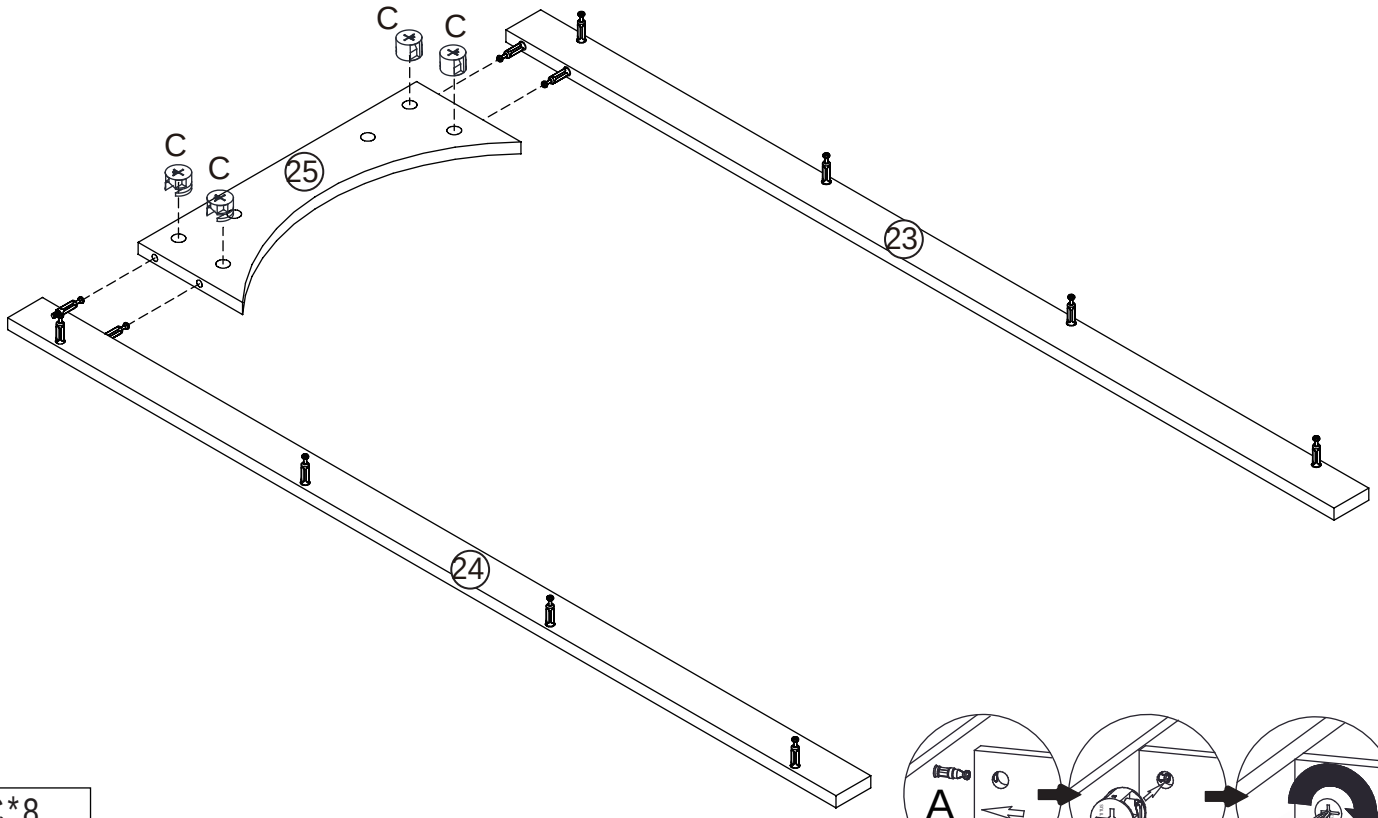


C*8

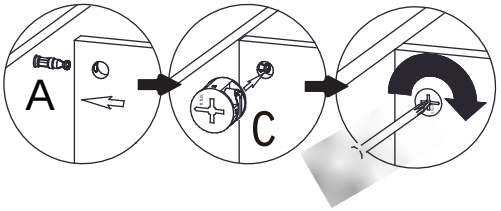
Step 26 Step X2

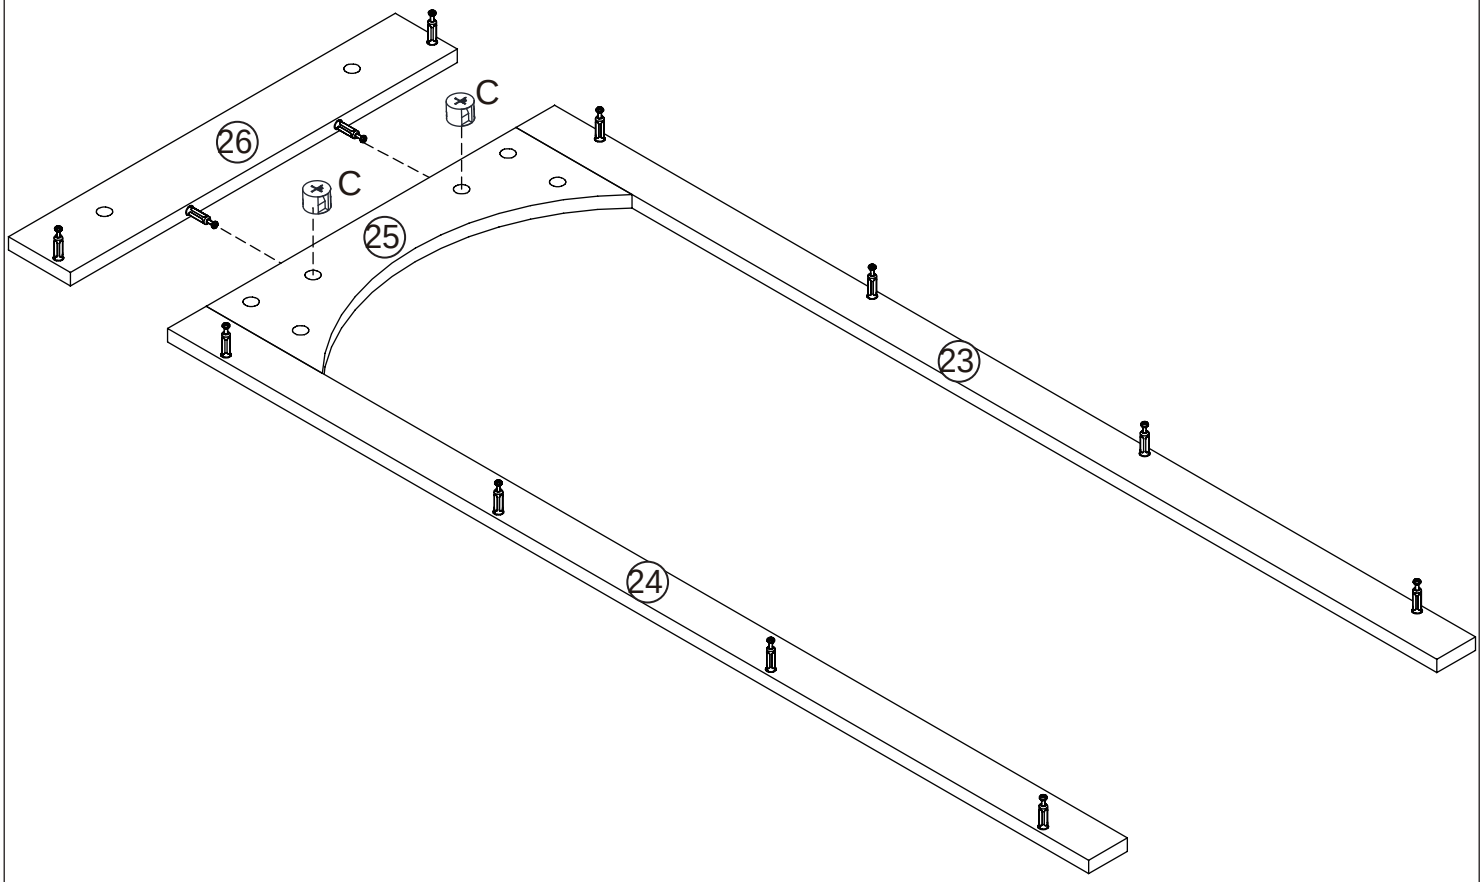



C*4

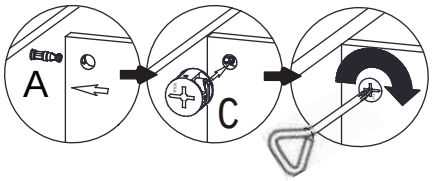


Step 27

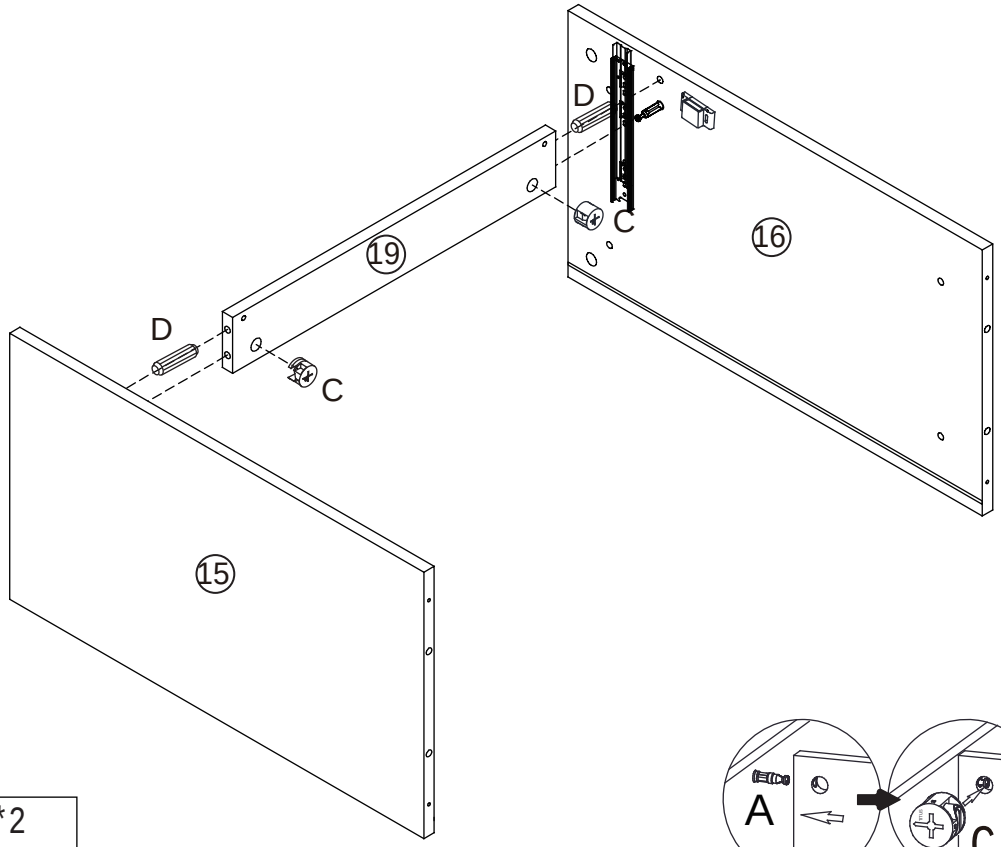


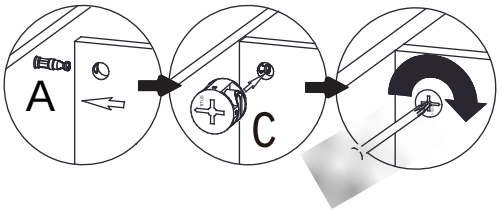


C*2	D*2
	

Step 28

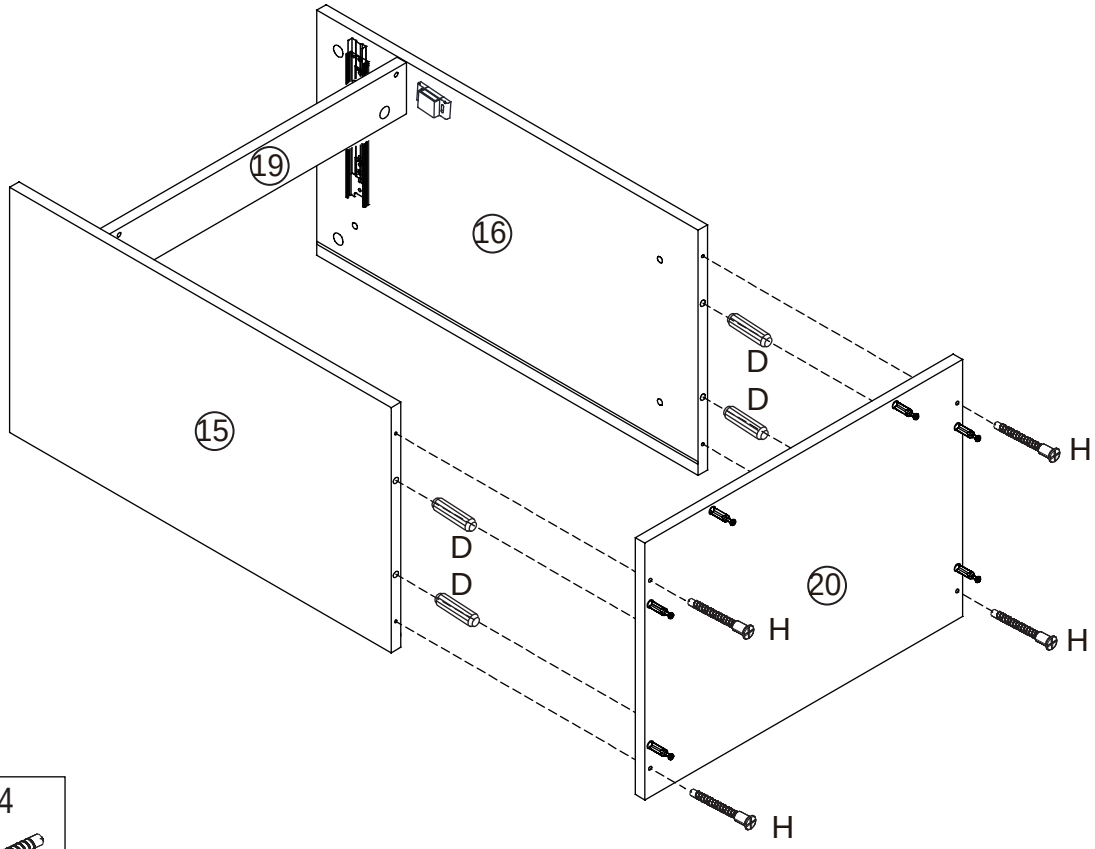

D*4	H*4
	


Step 29

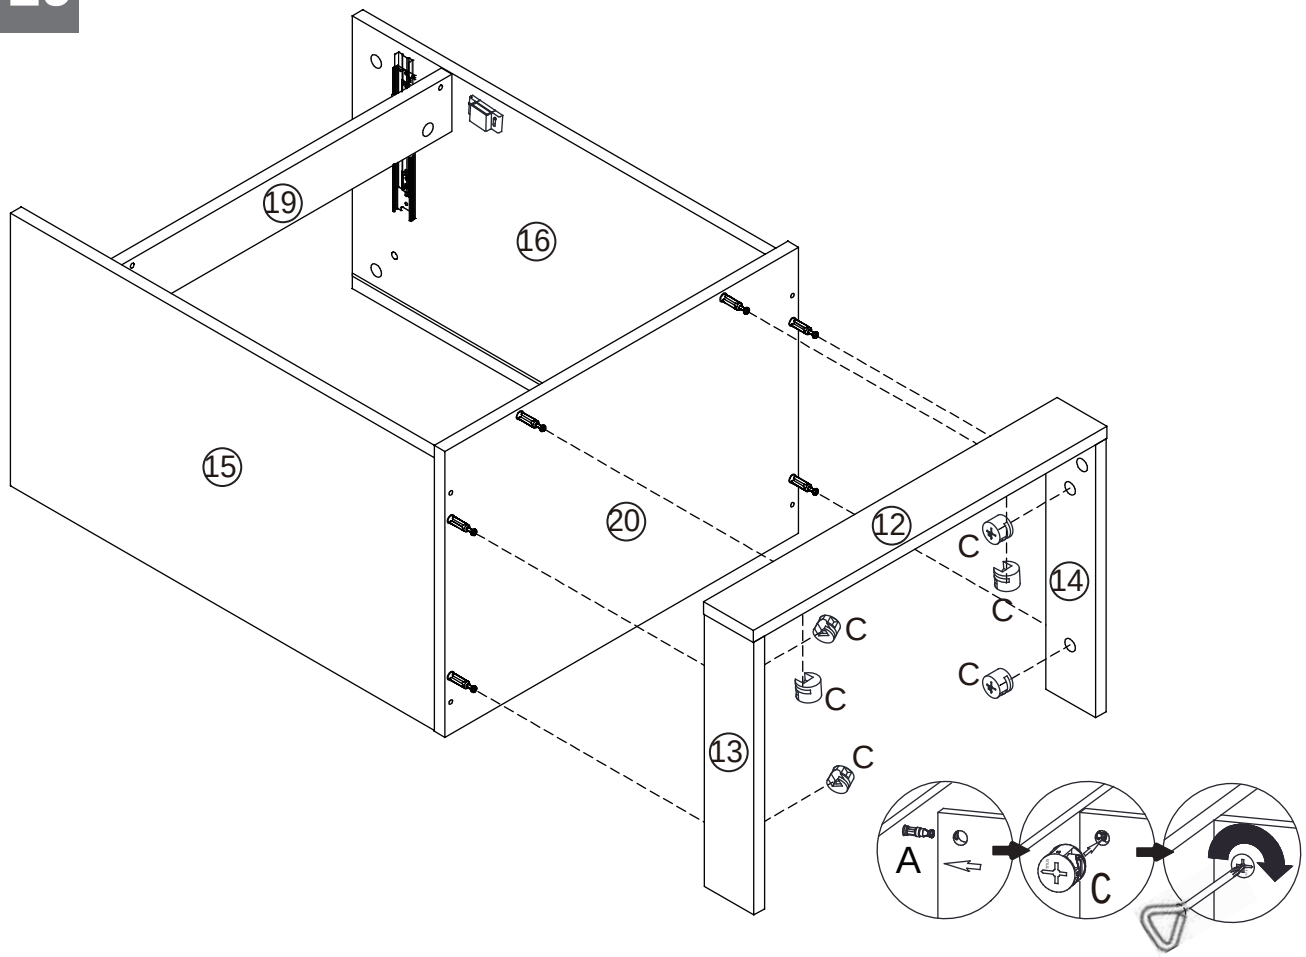

C*6




Step 30

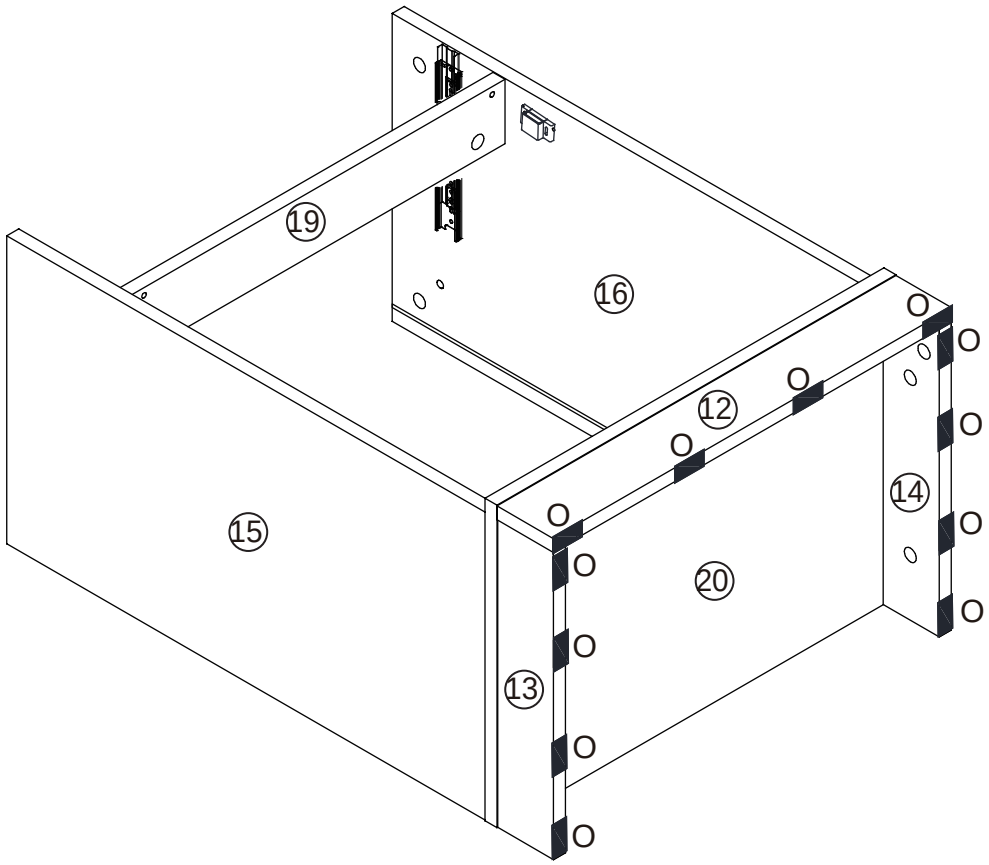


0*12





Step 31

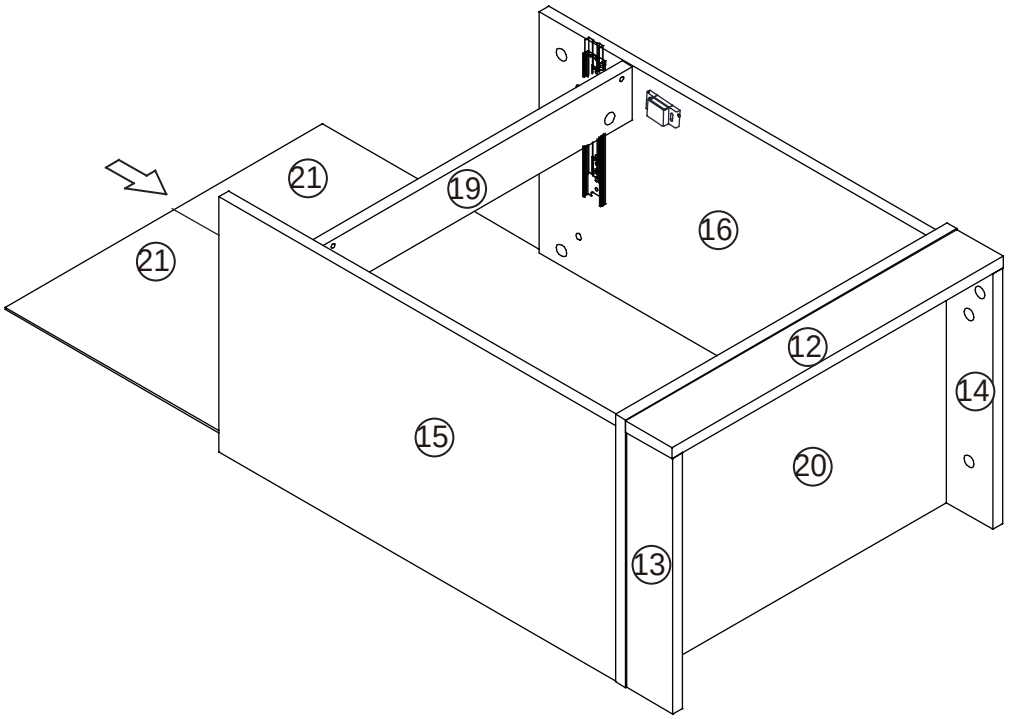


Step 32

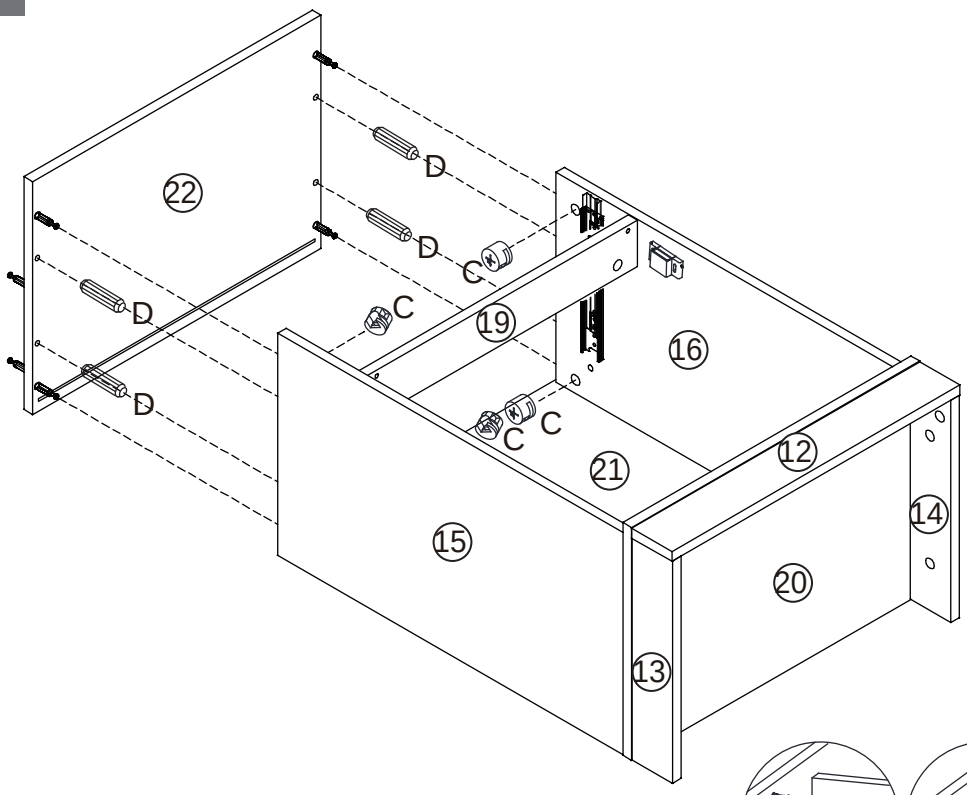

C*4	D*4
	

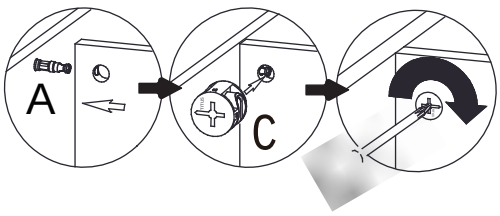


Step 33

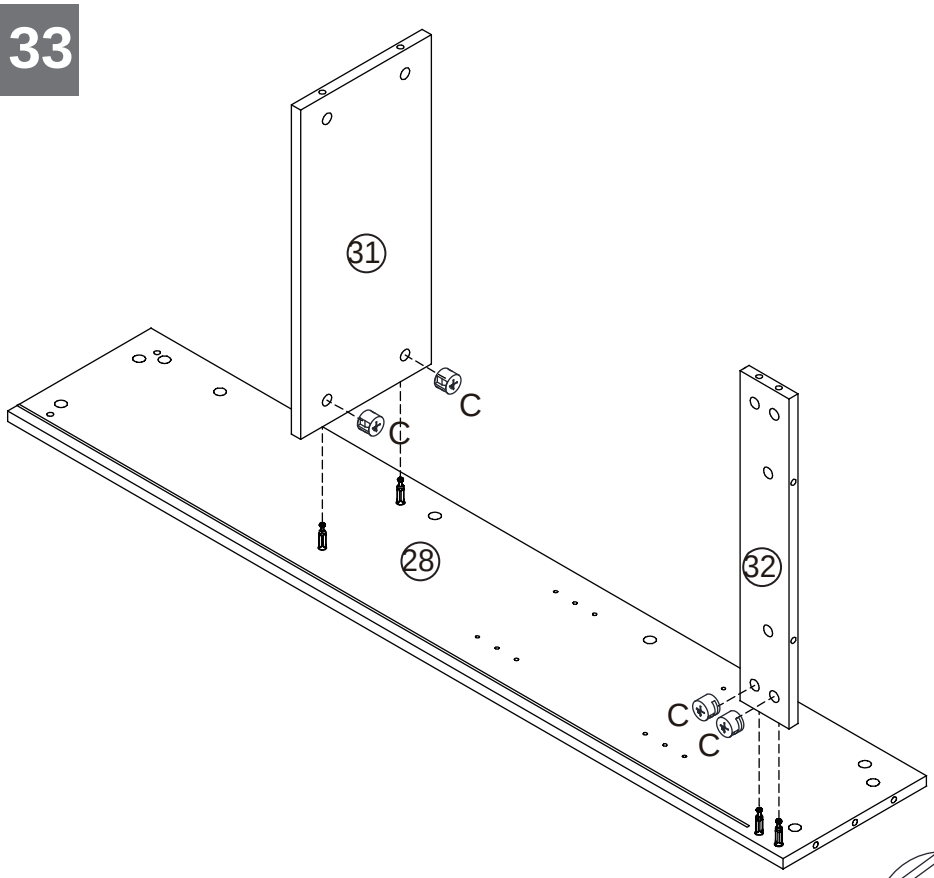


C*4




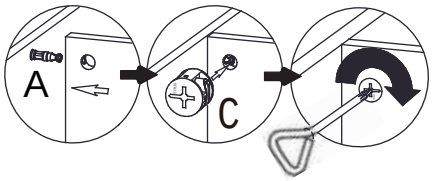


Step 34

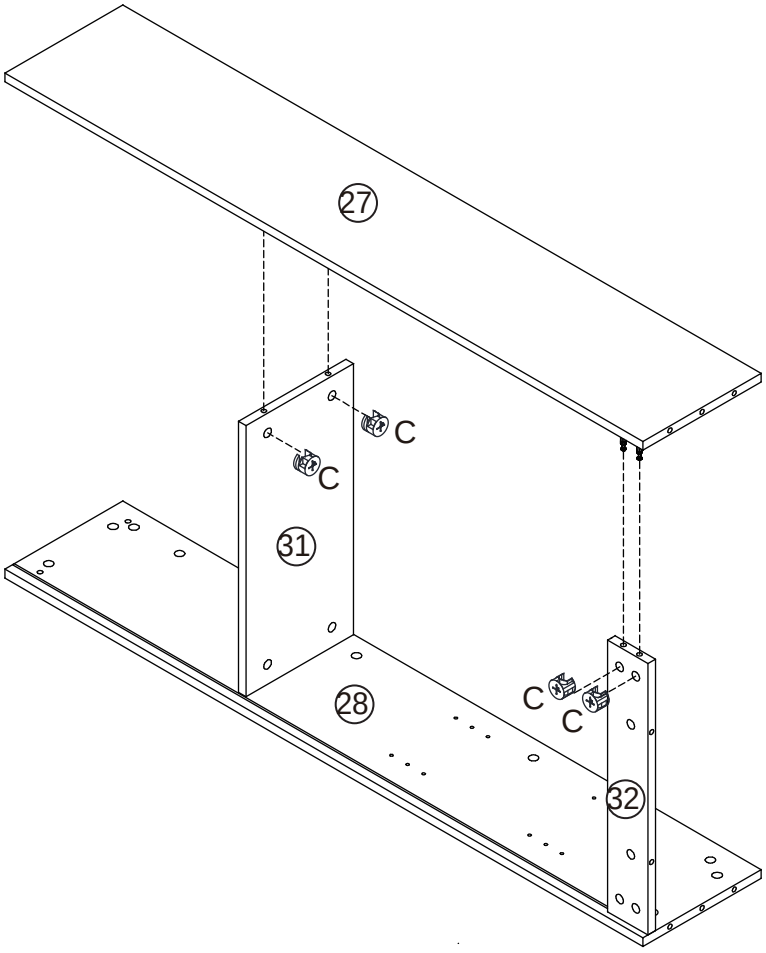


C*4

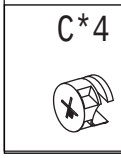

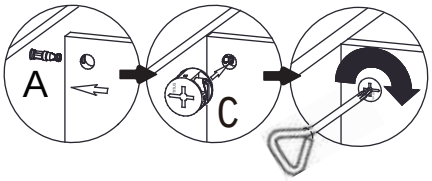


Step 35

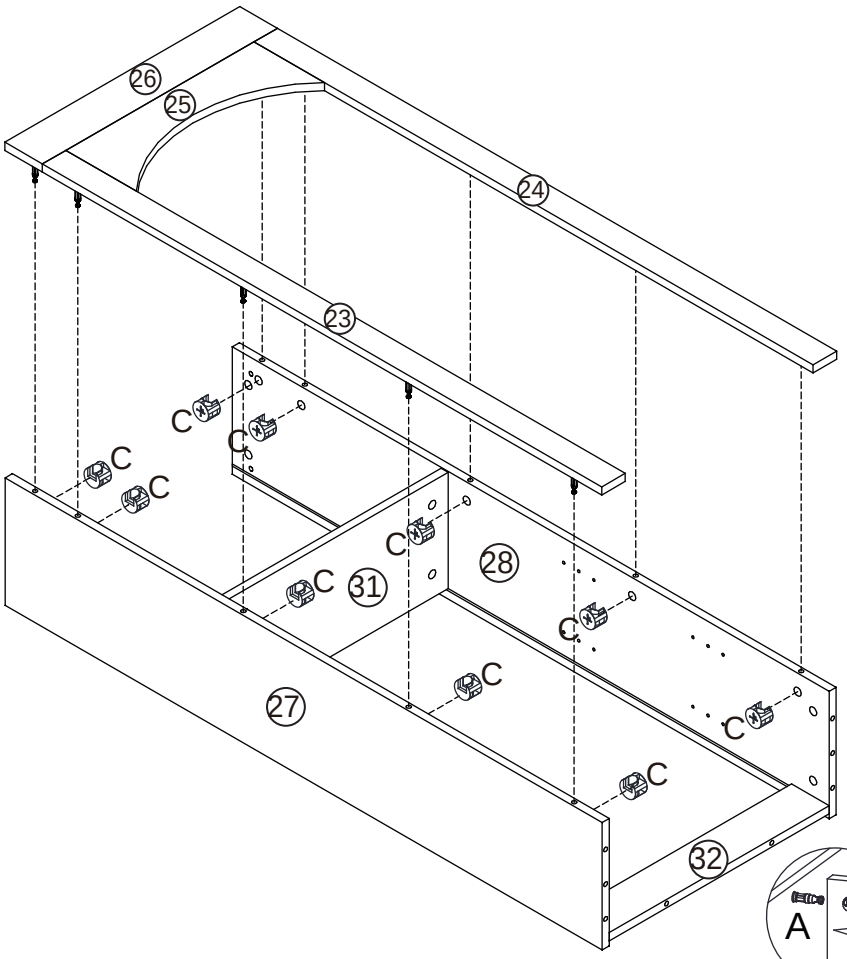


C*10




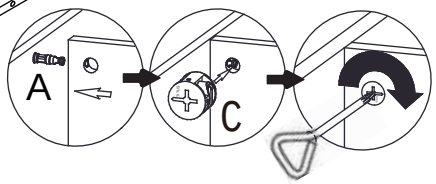

Step 36

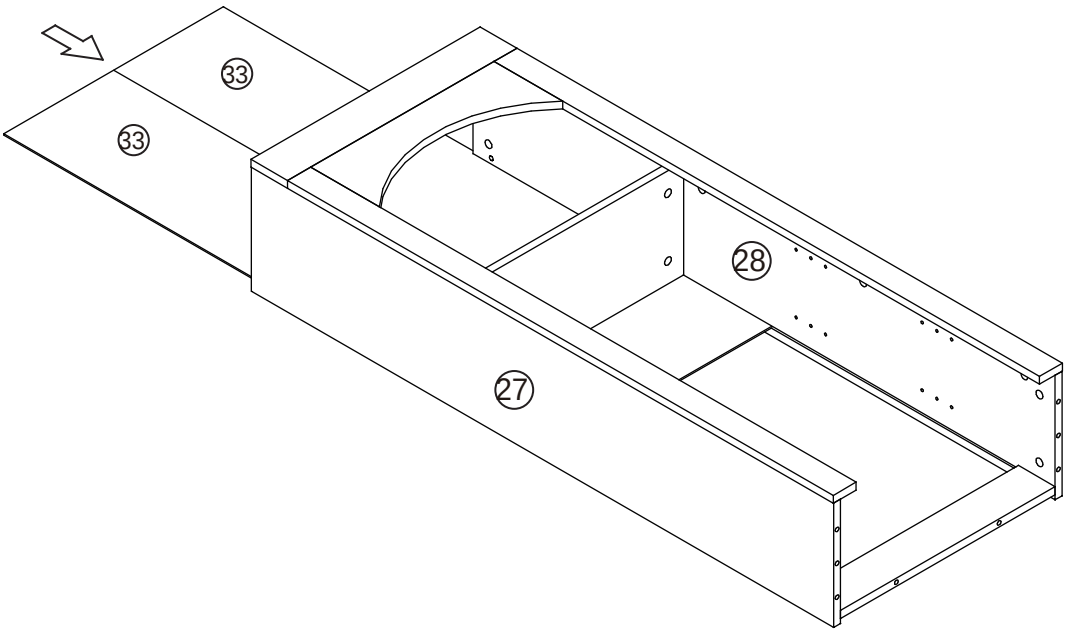


Step 37

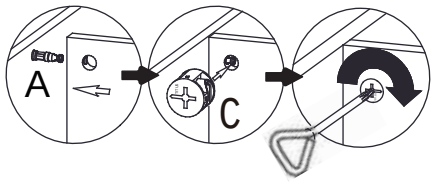


C*6	D*2
	


Step 38

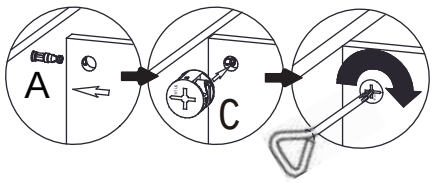


C*6	D*2


Step 39


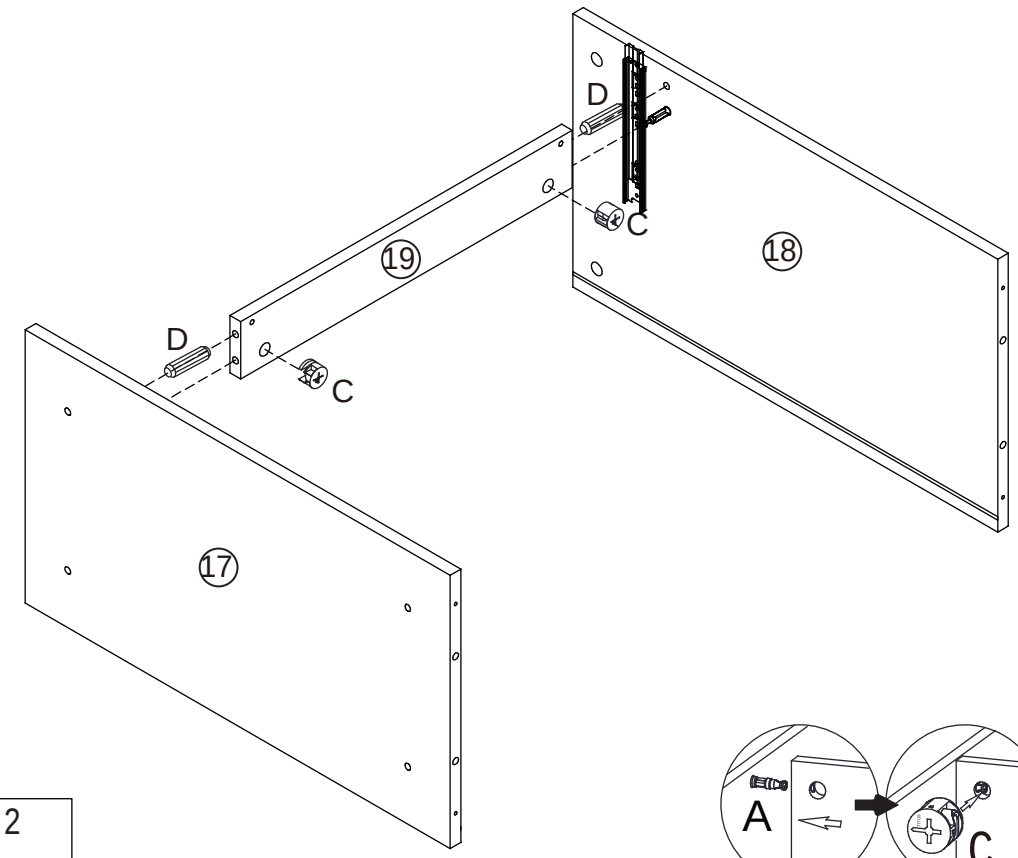


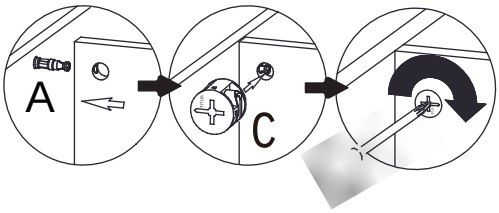


C*2	D*2
	

Step 40

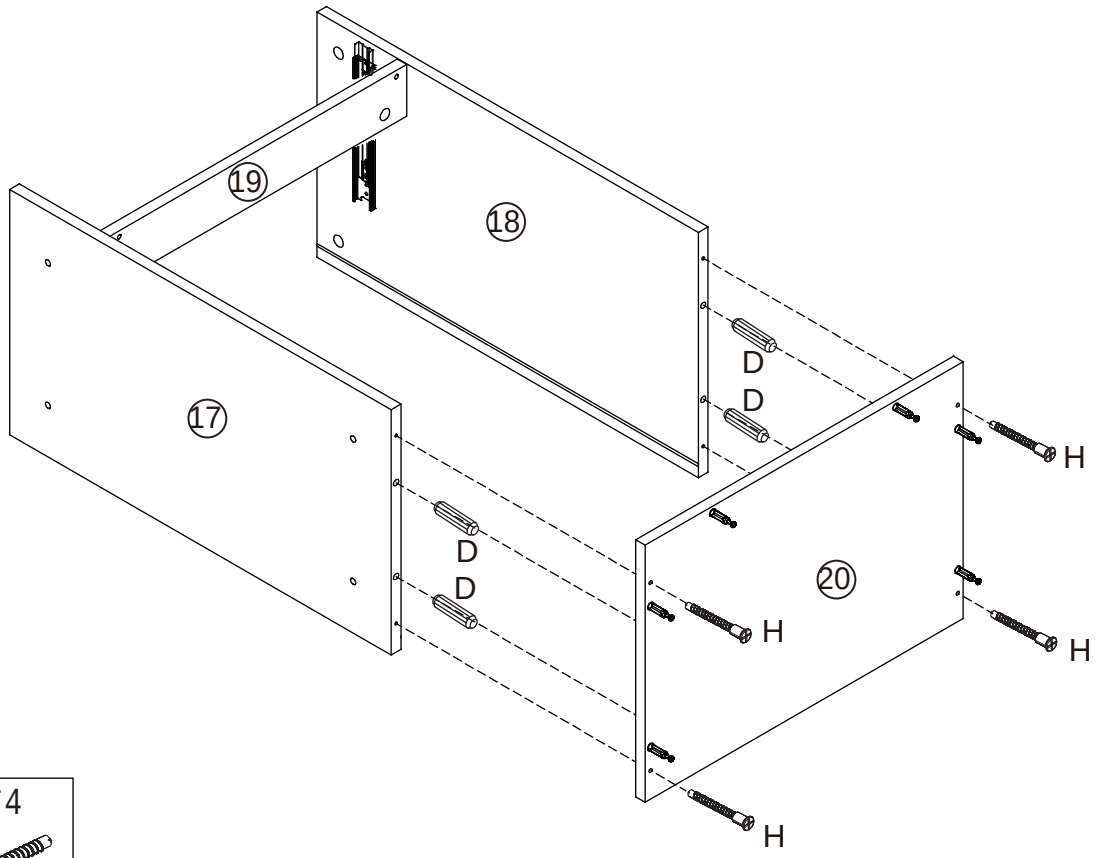


D*4	H*4
	

Step 41

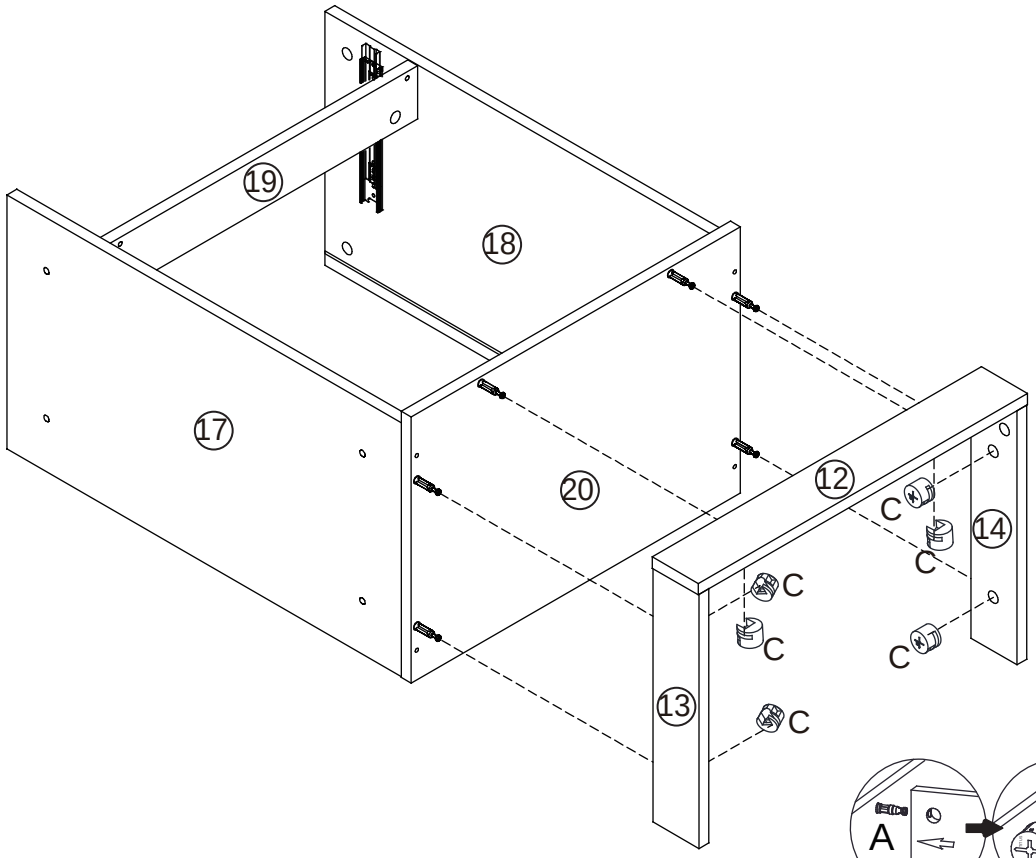


C*6



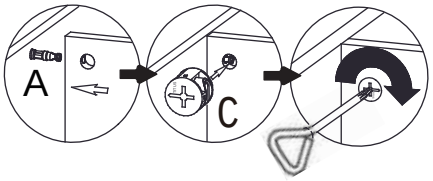


Step 42

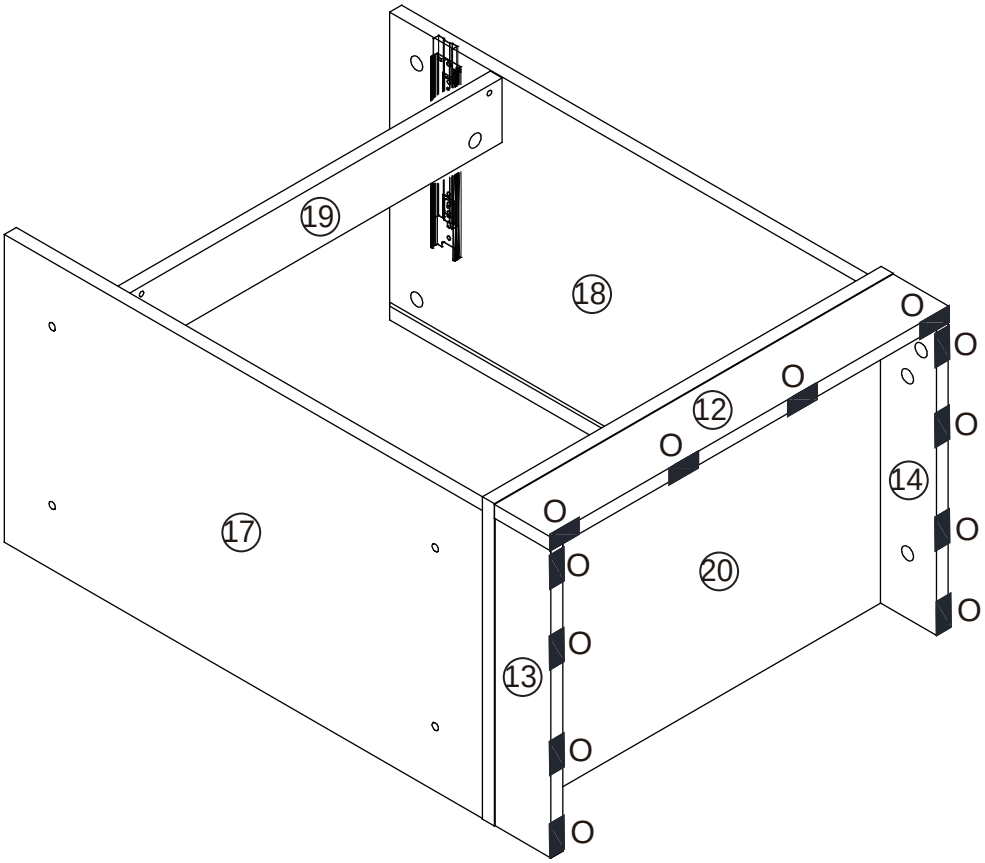


0*12





Step 43

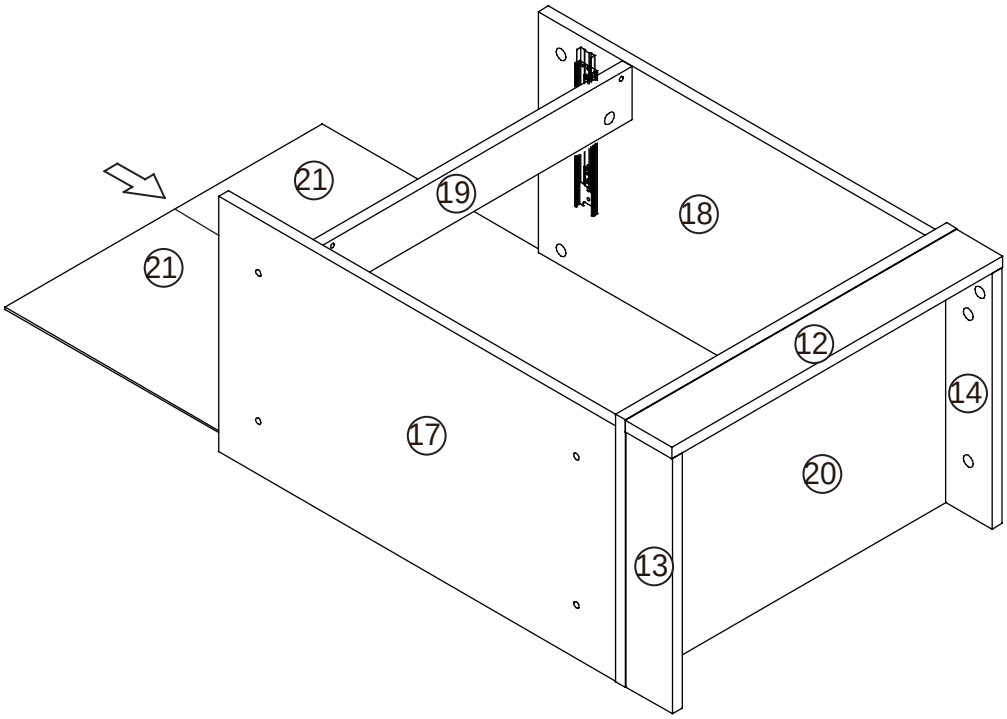


Step 44

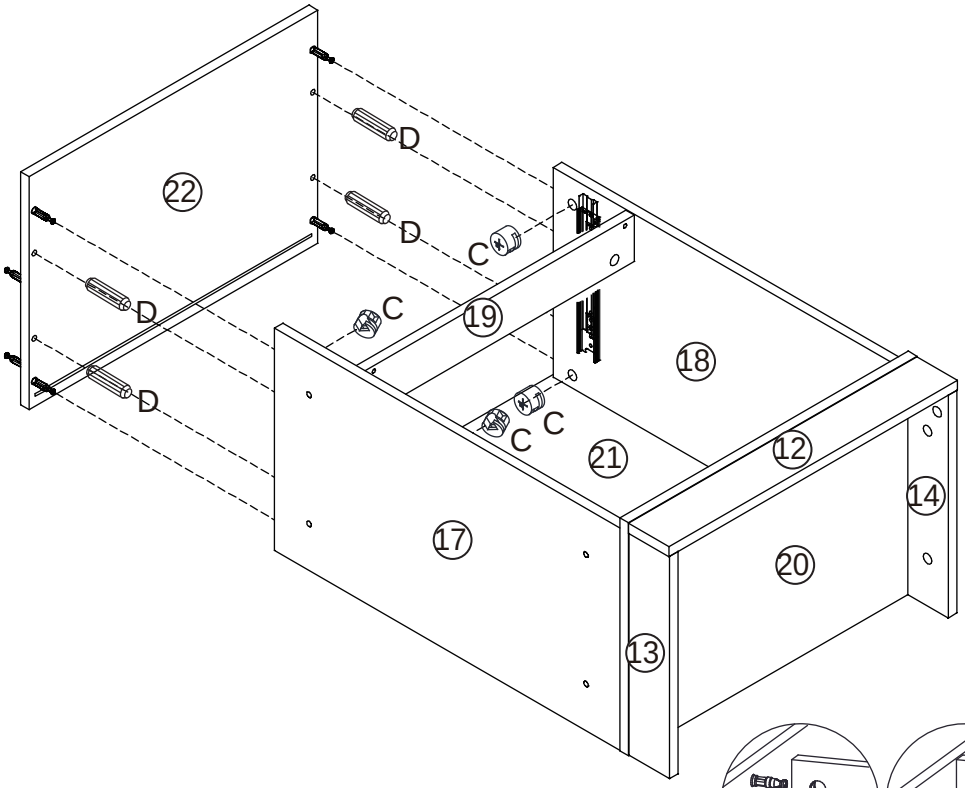


C*4	D*4
	

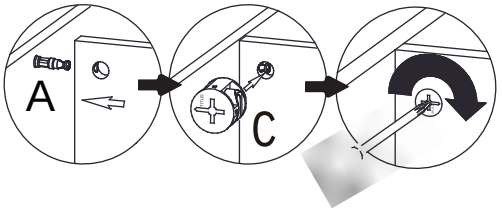


Step 45

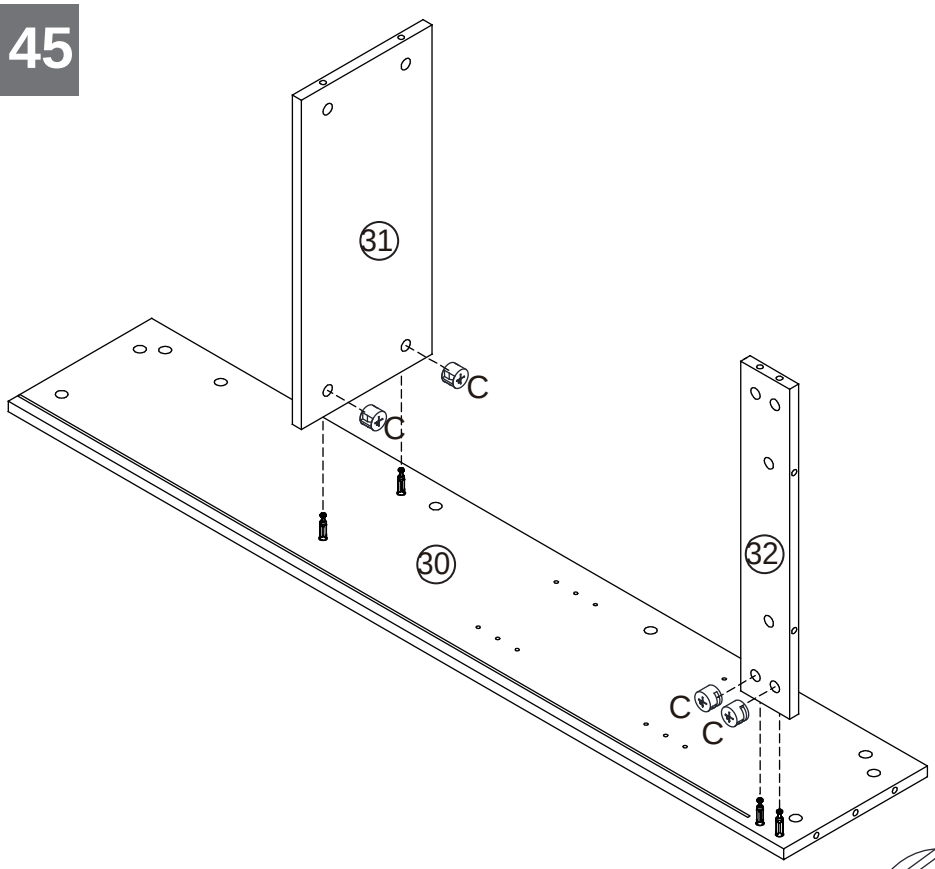


C*4

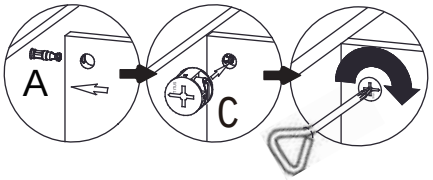


Step 46

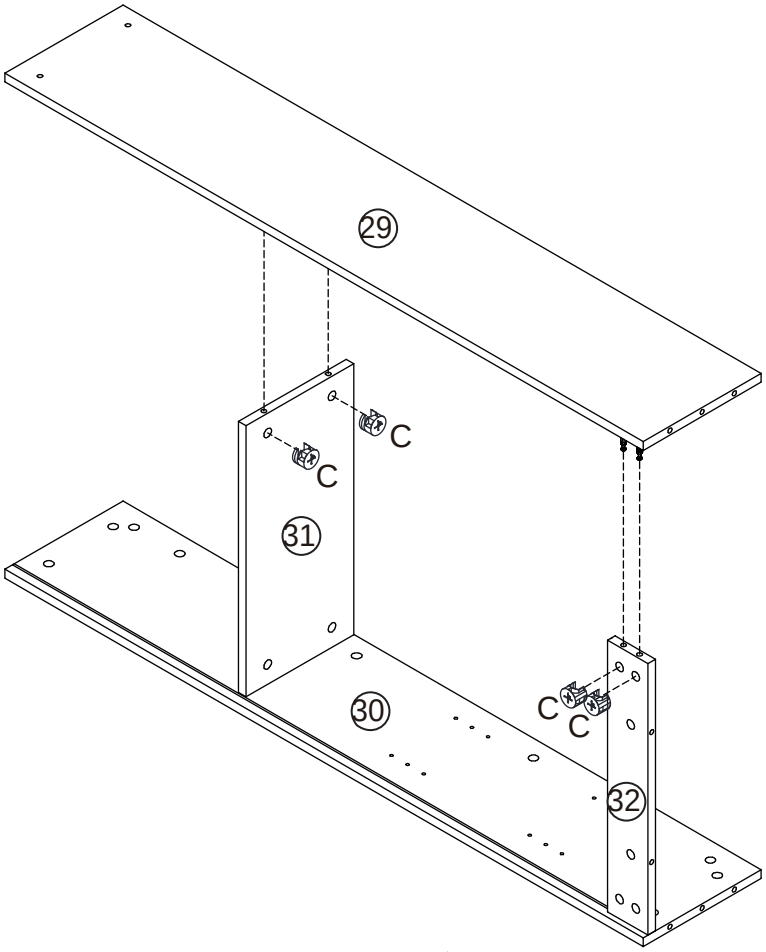

C*4

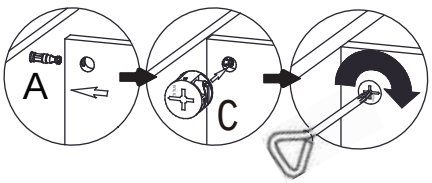


Step 47

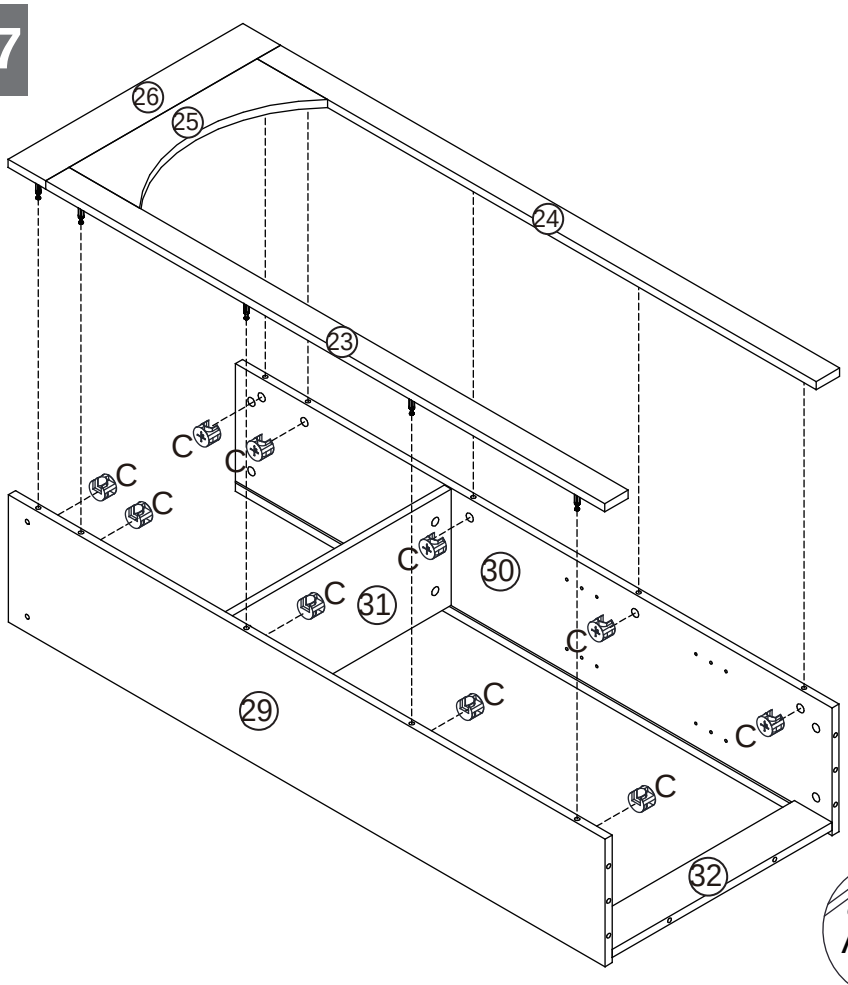


C*10




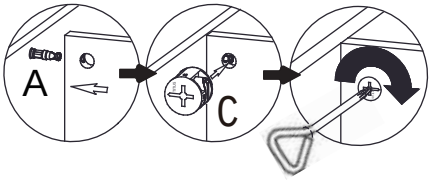

Step 48

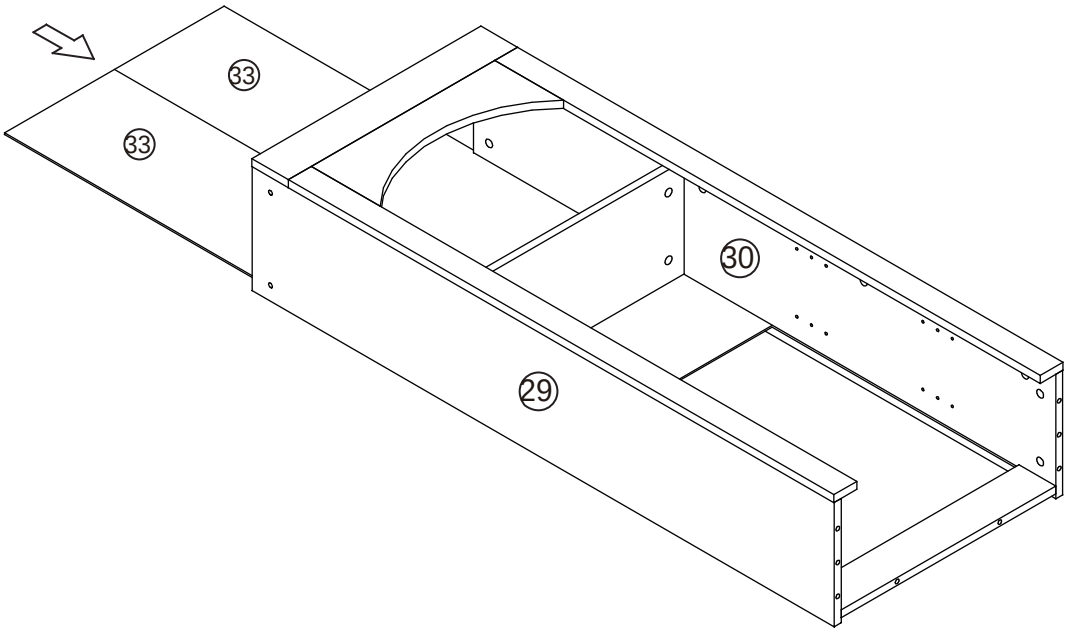


Step 49

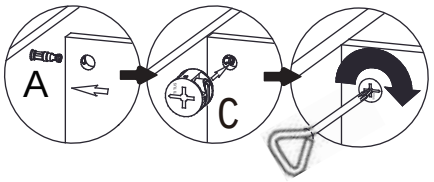


C*6	D*2


Step 50

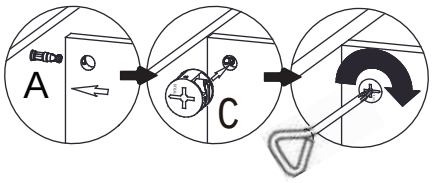

C*6	D*2


Step 51

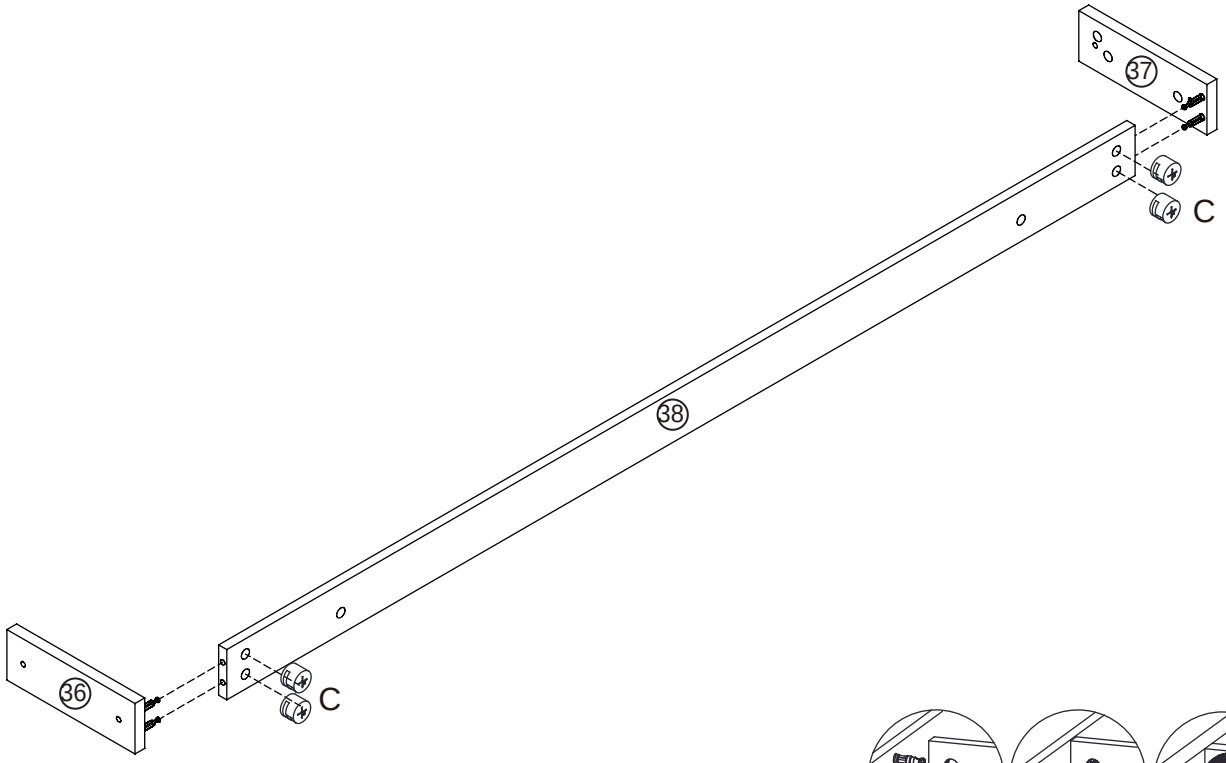


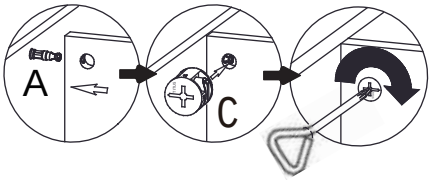


C*4



Step 52

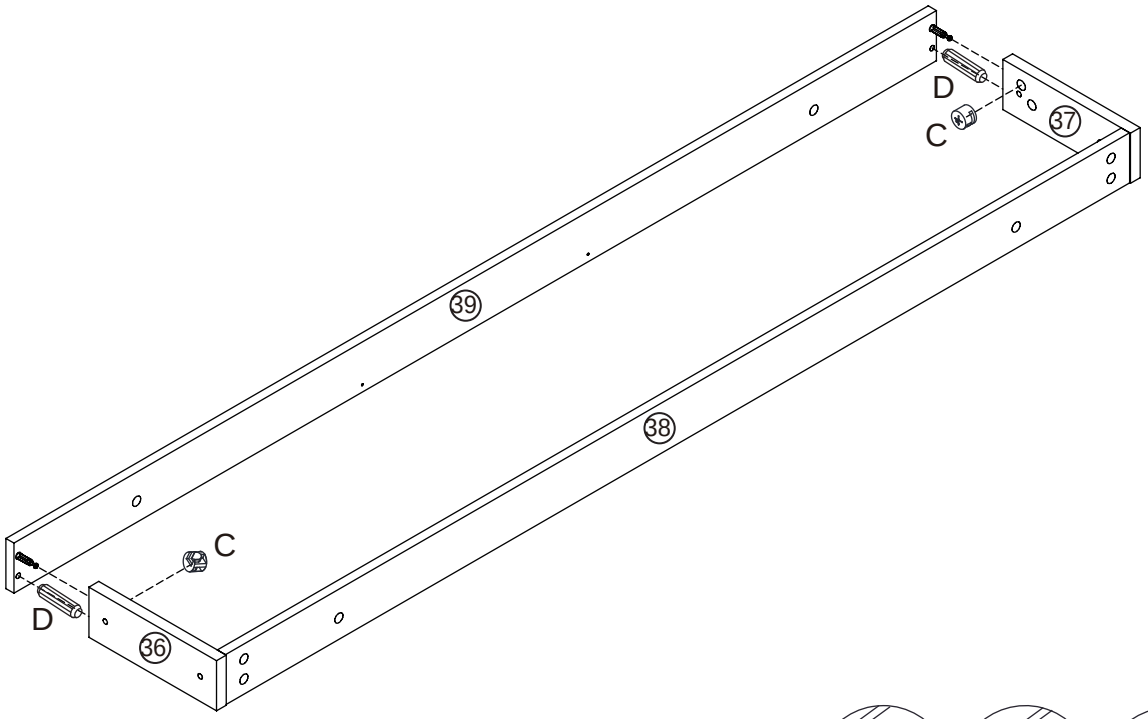


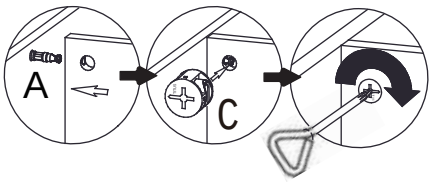


C*2	D*2
	


Step 53

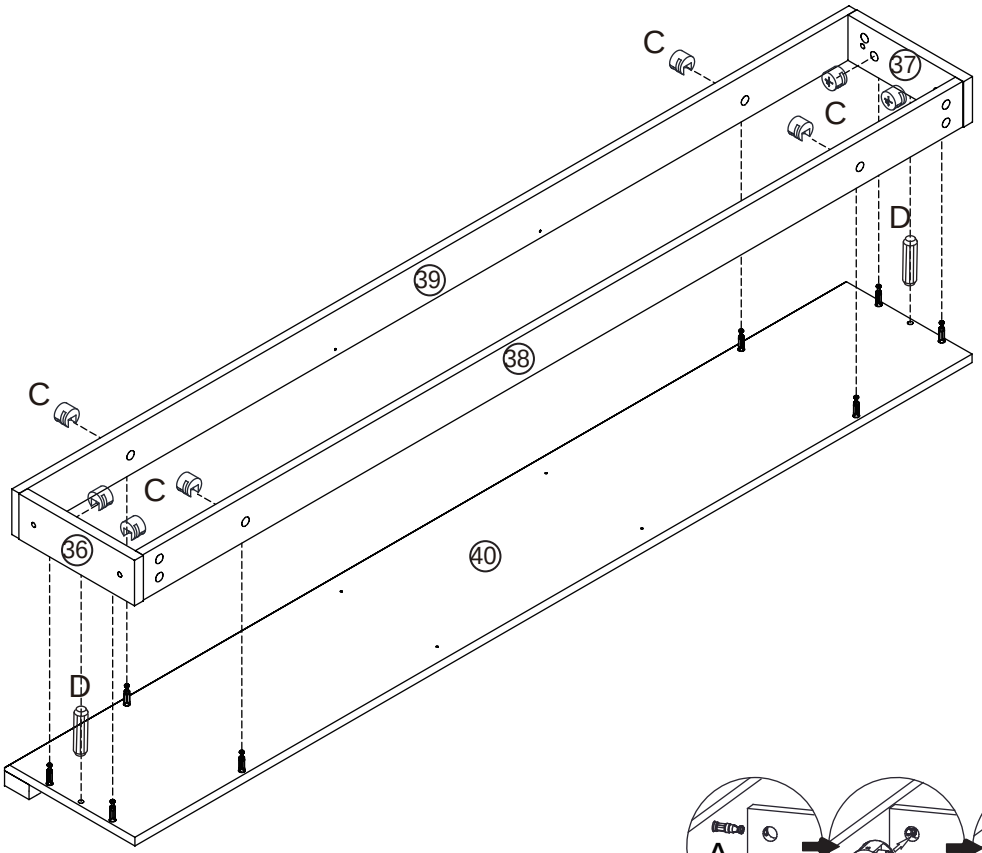


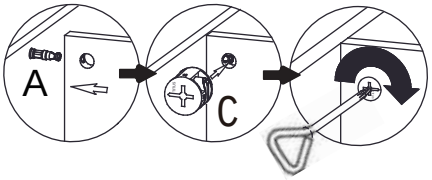

C*8	D*2
	

Step 54

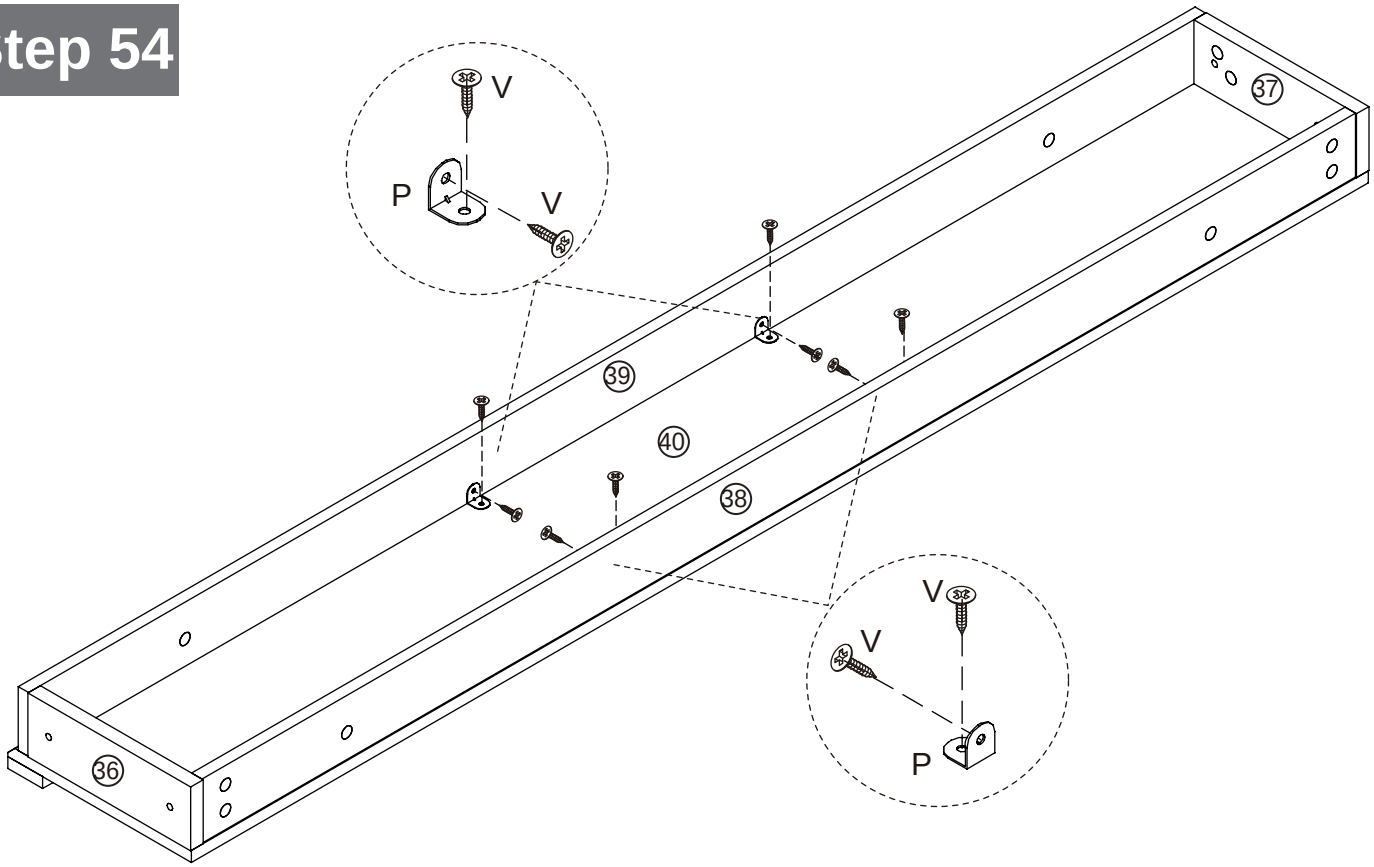


P*4	V*8
	


Step 55

It's better if two people work together on this step.

Please flip carefully!

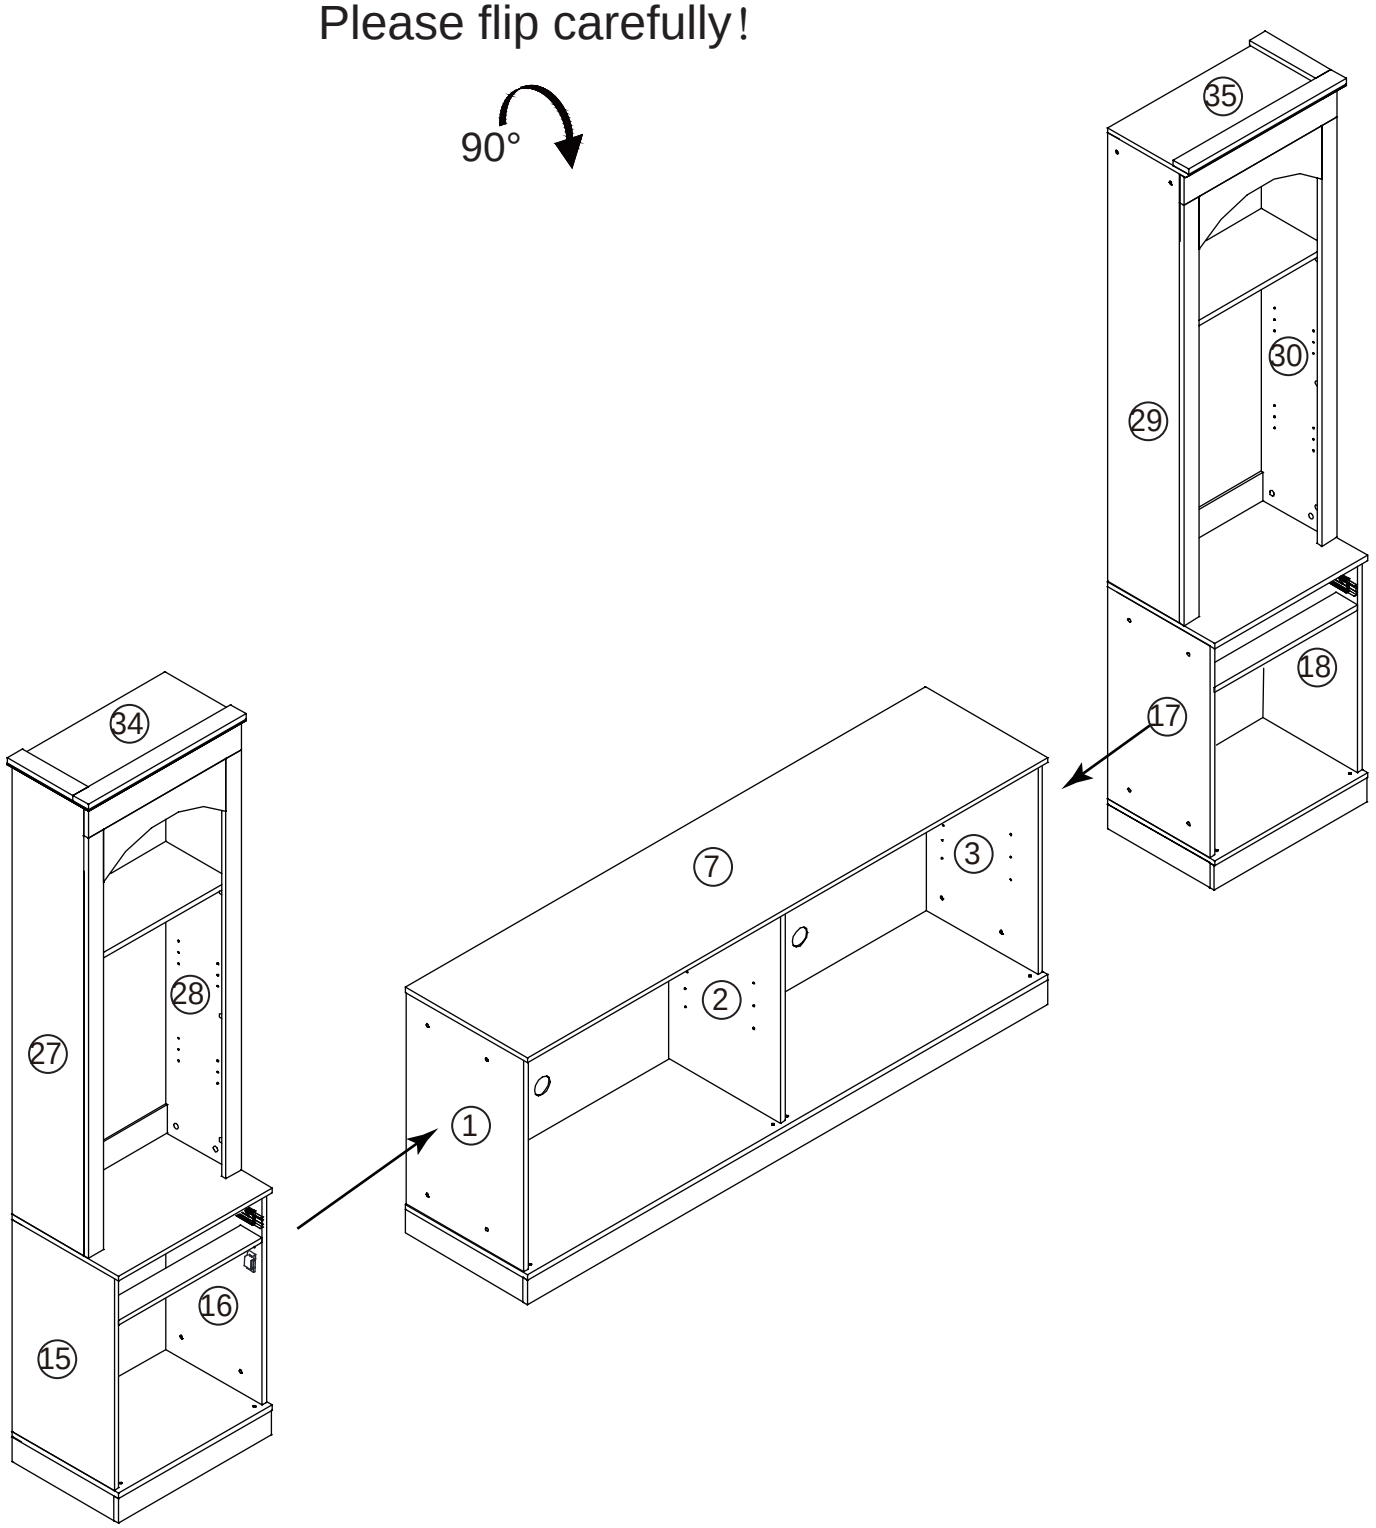


Step 56

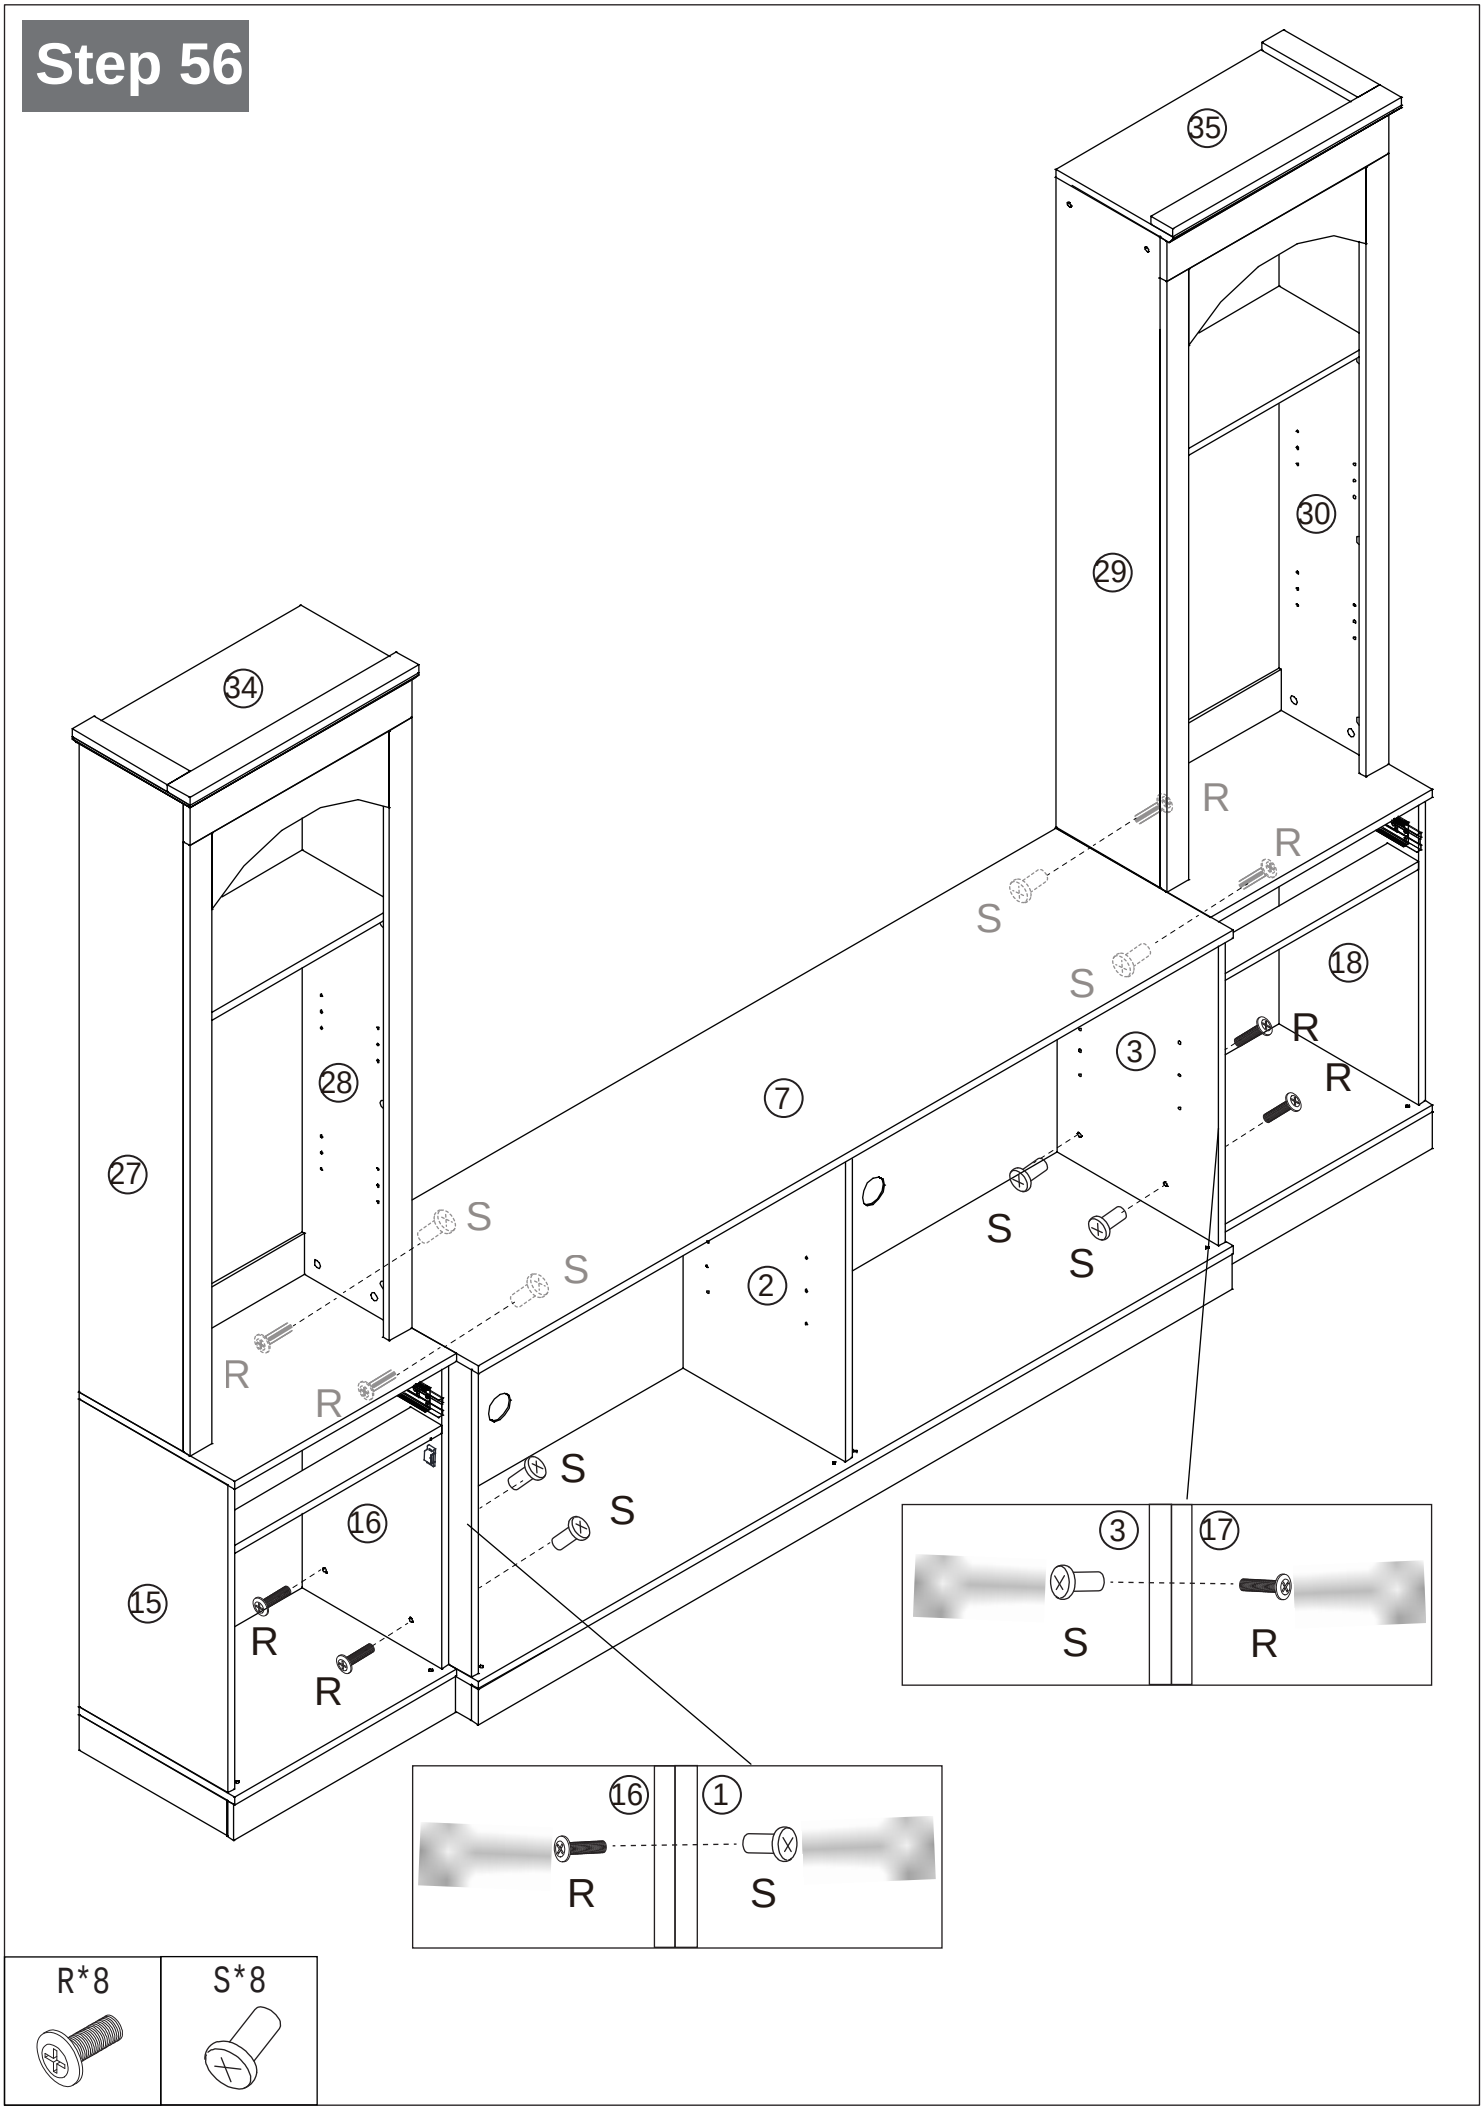


R*8	S*8

Step 57


It's better if three people work together on this step.

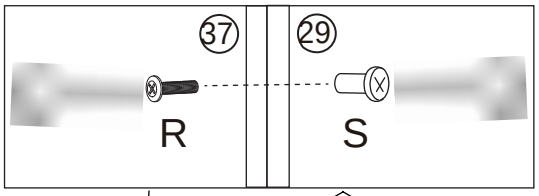


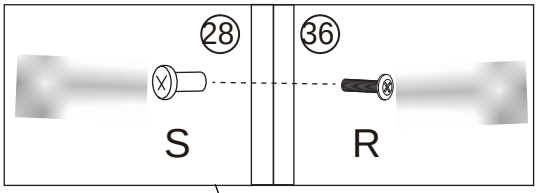


R*4	S*4
	


Step 58 Step X2

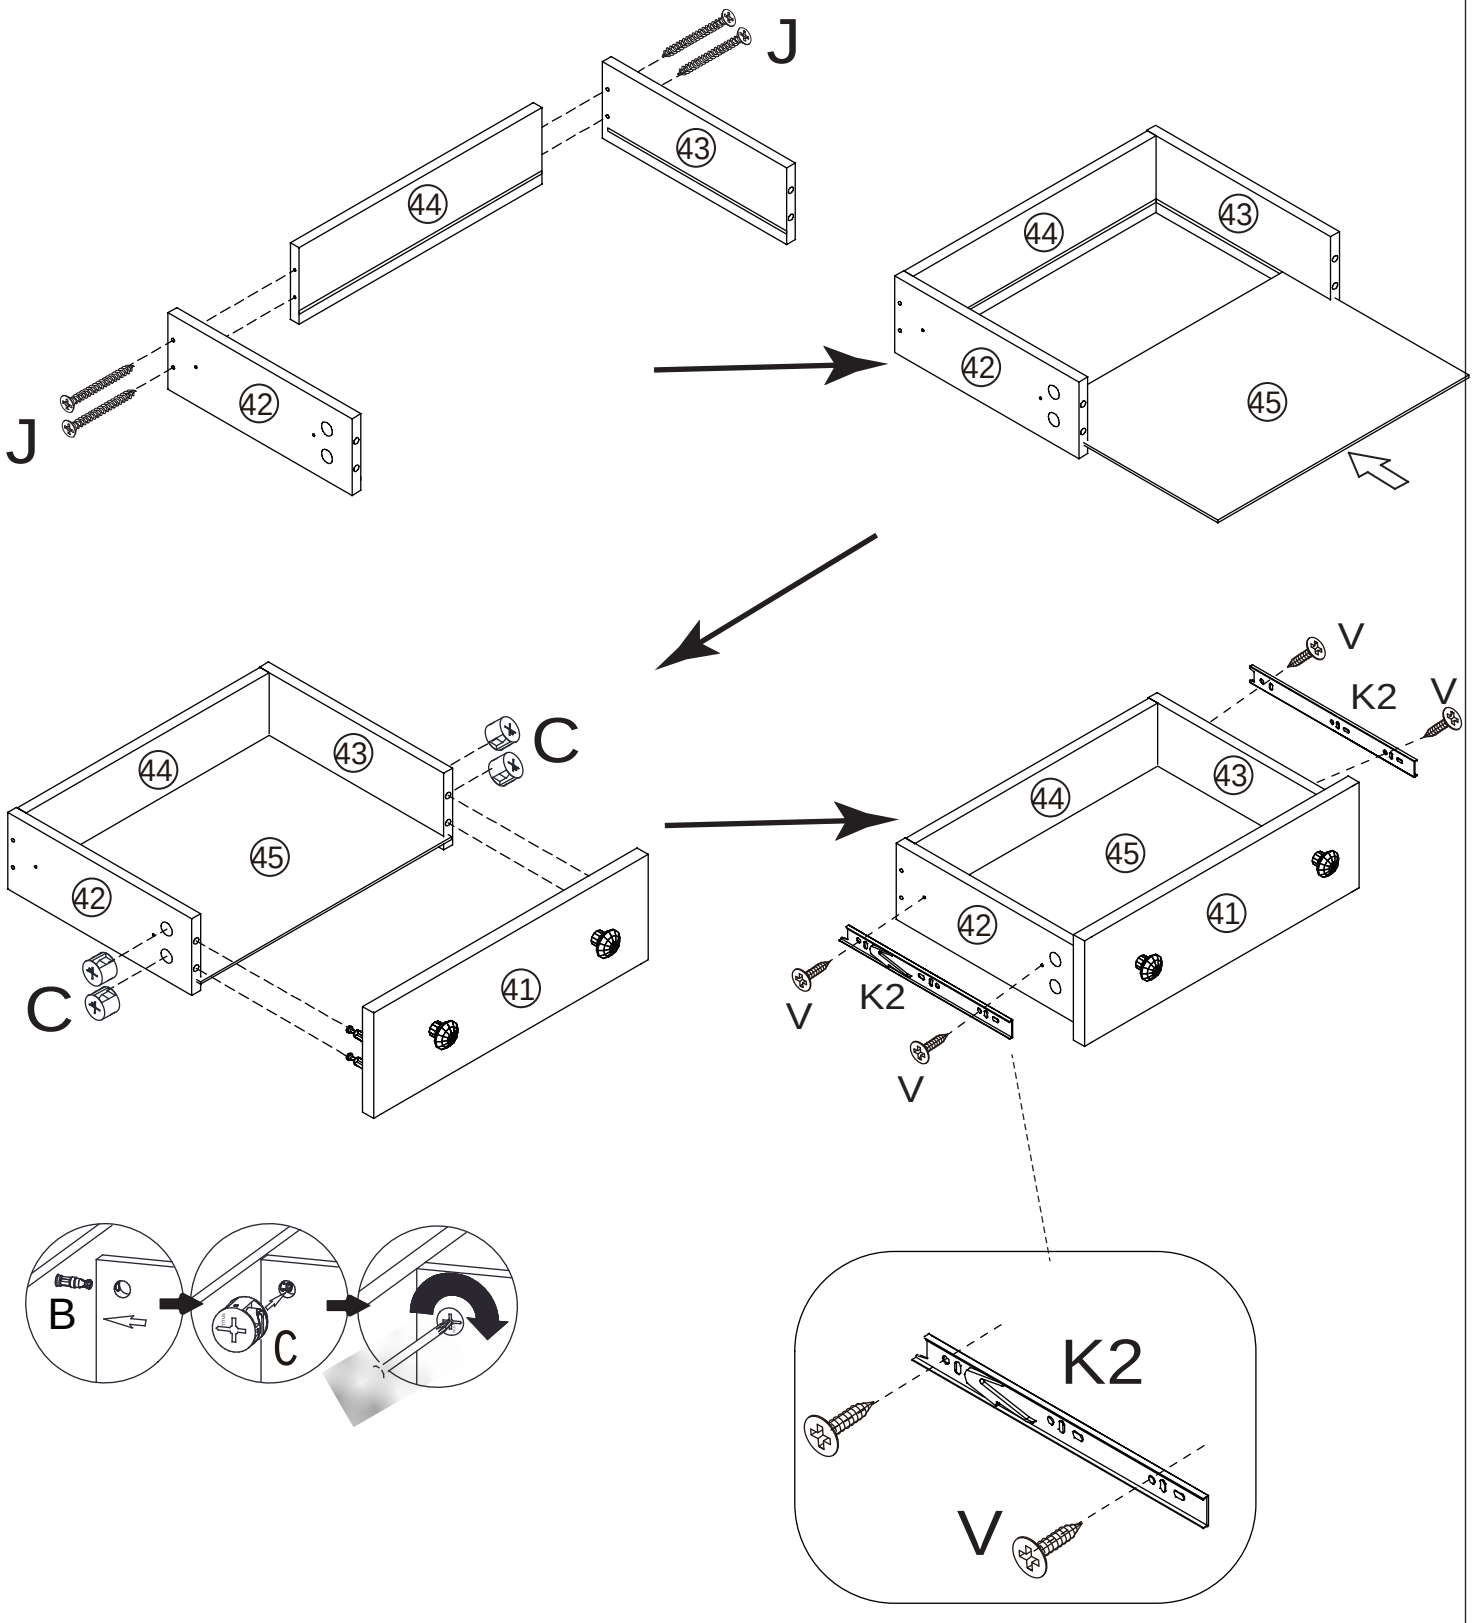


C*8	J*8	K2*4	V*8
			

Step 59

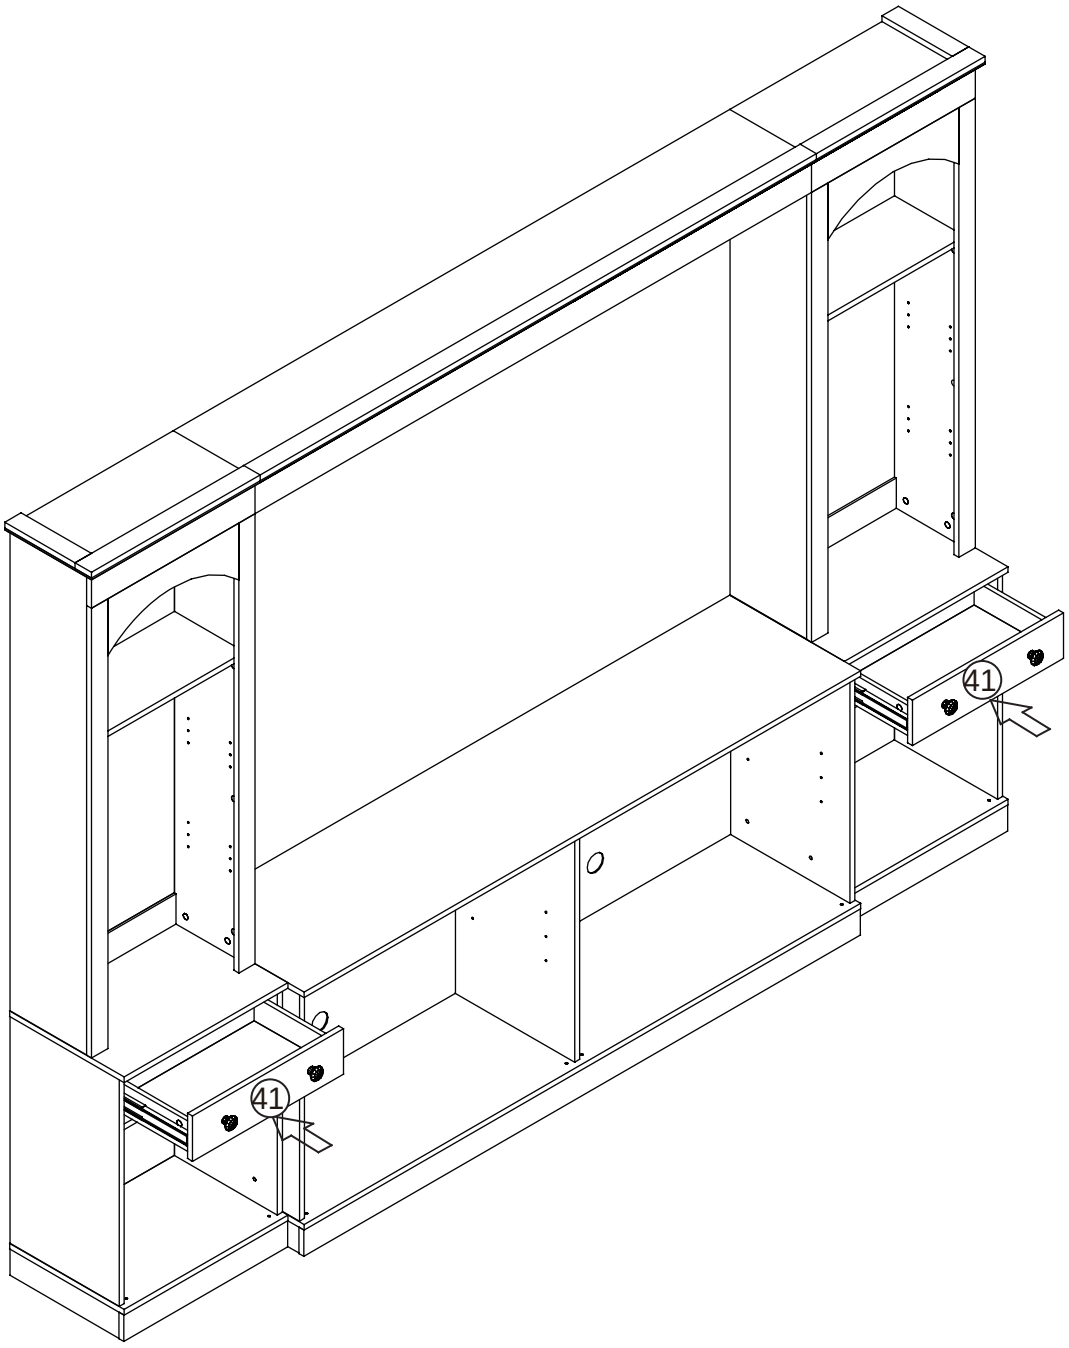

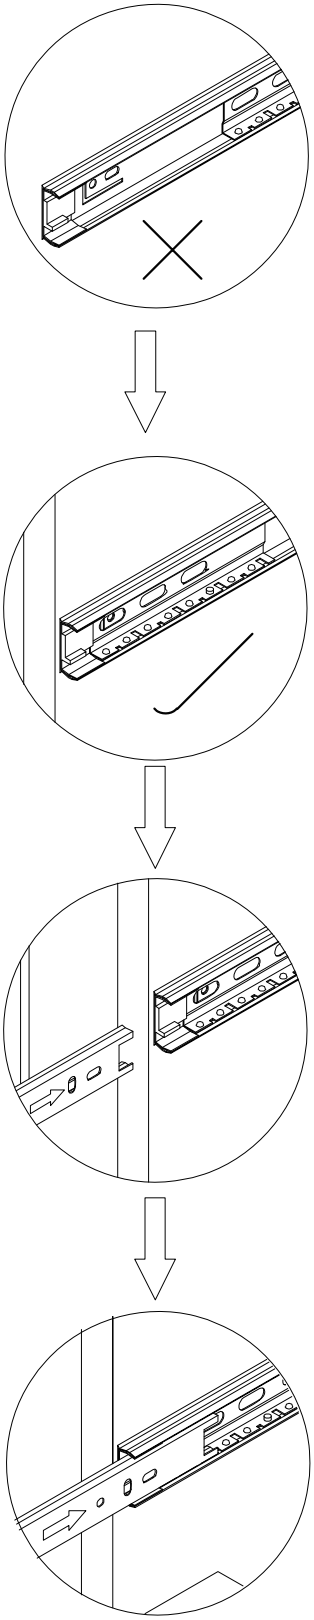


Step 60

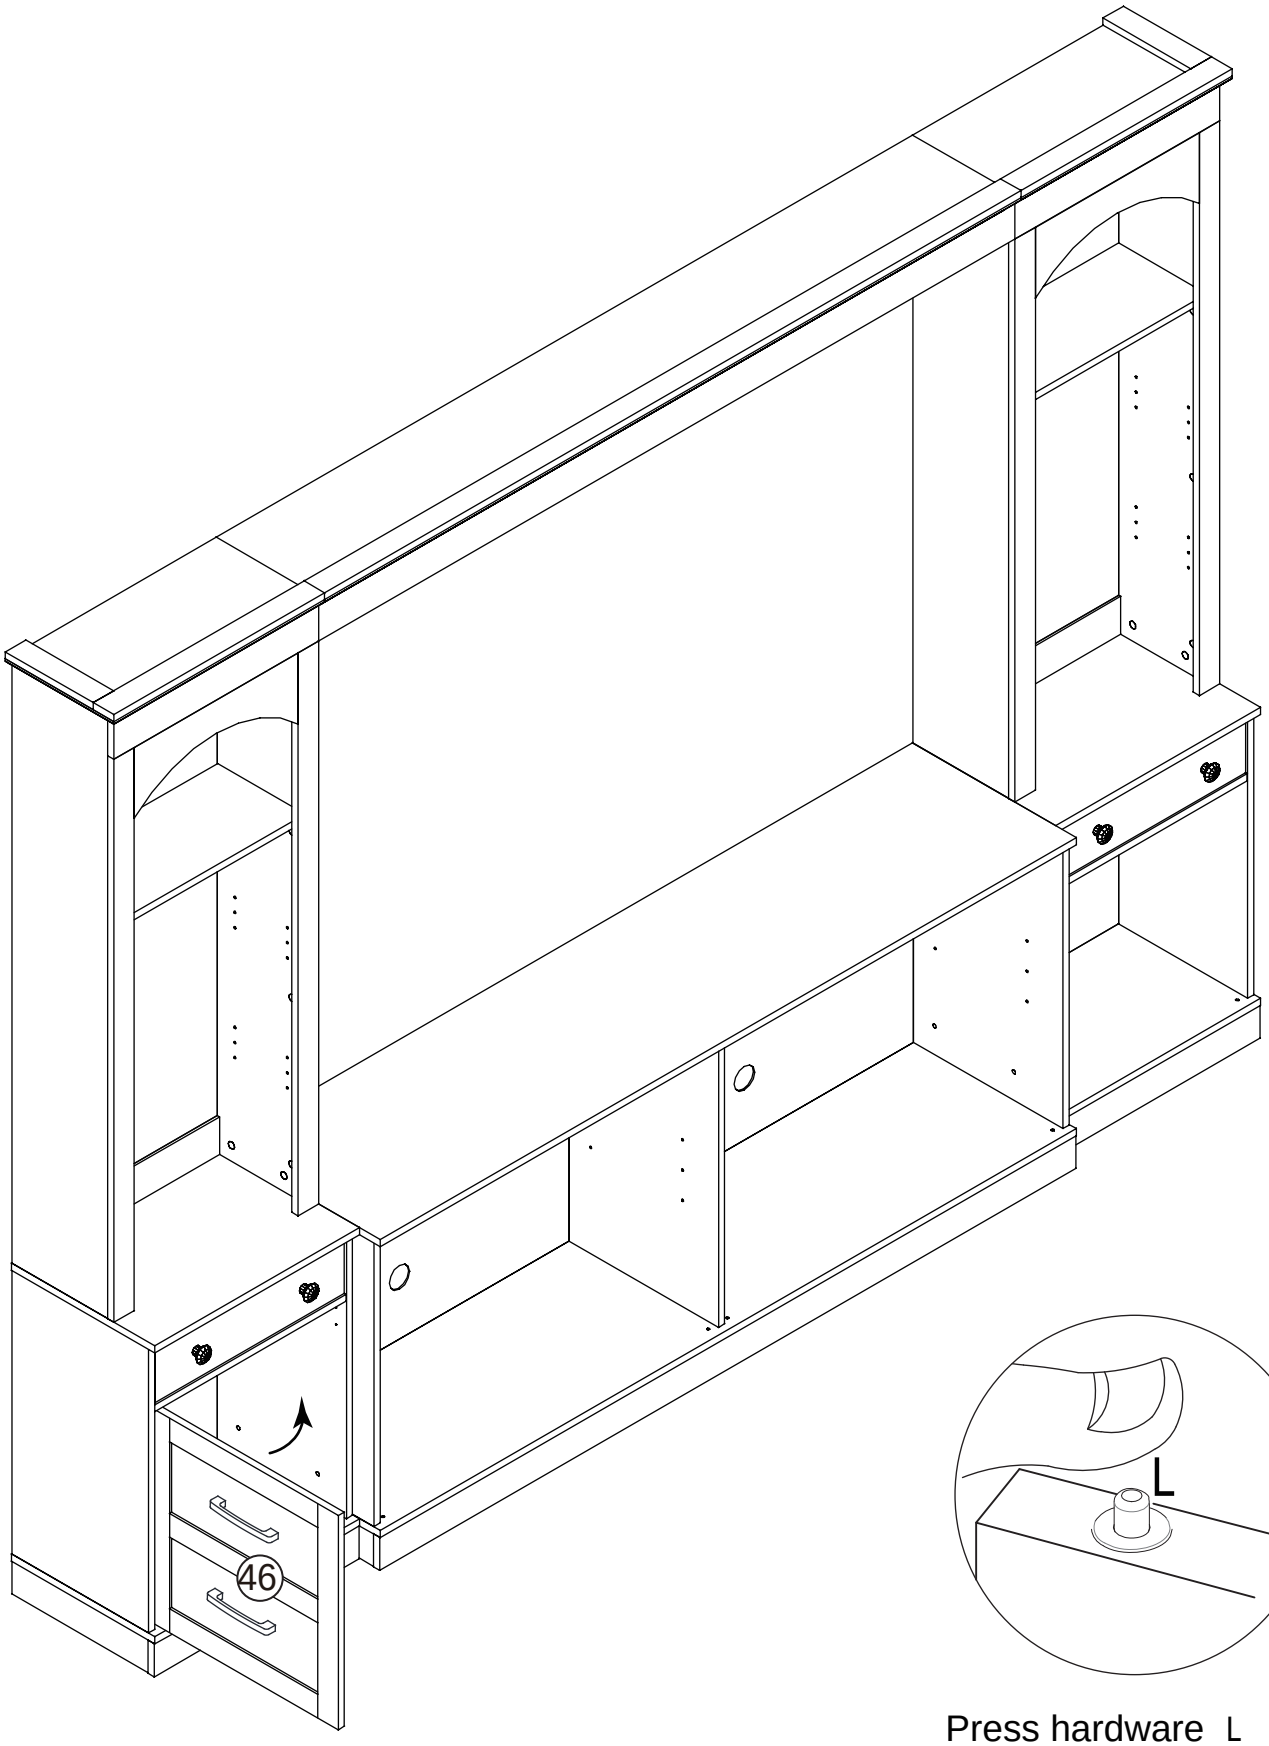


Press hardware L
and then slot in to
the hole at cabinet.

Step 61

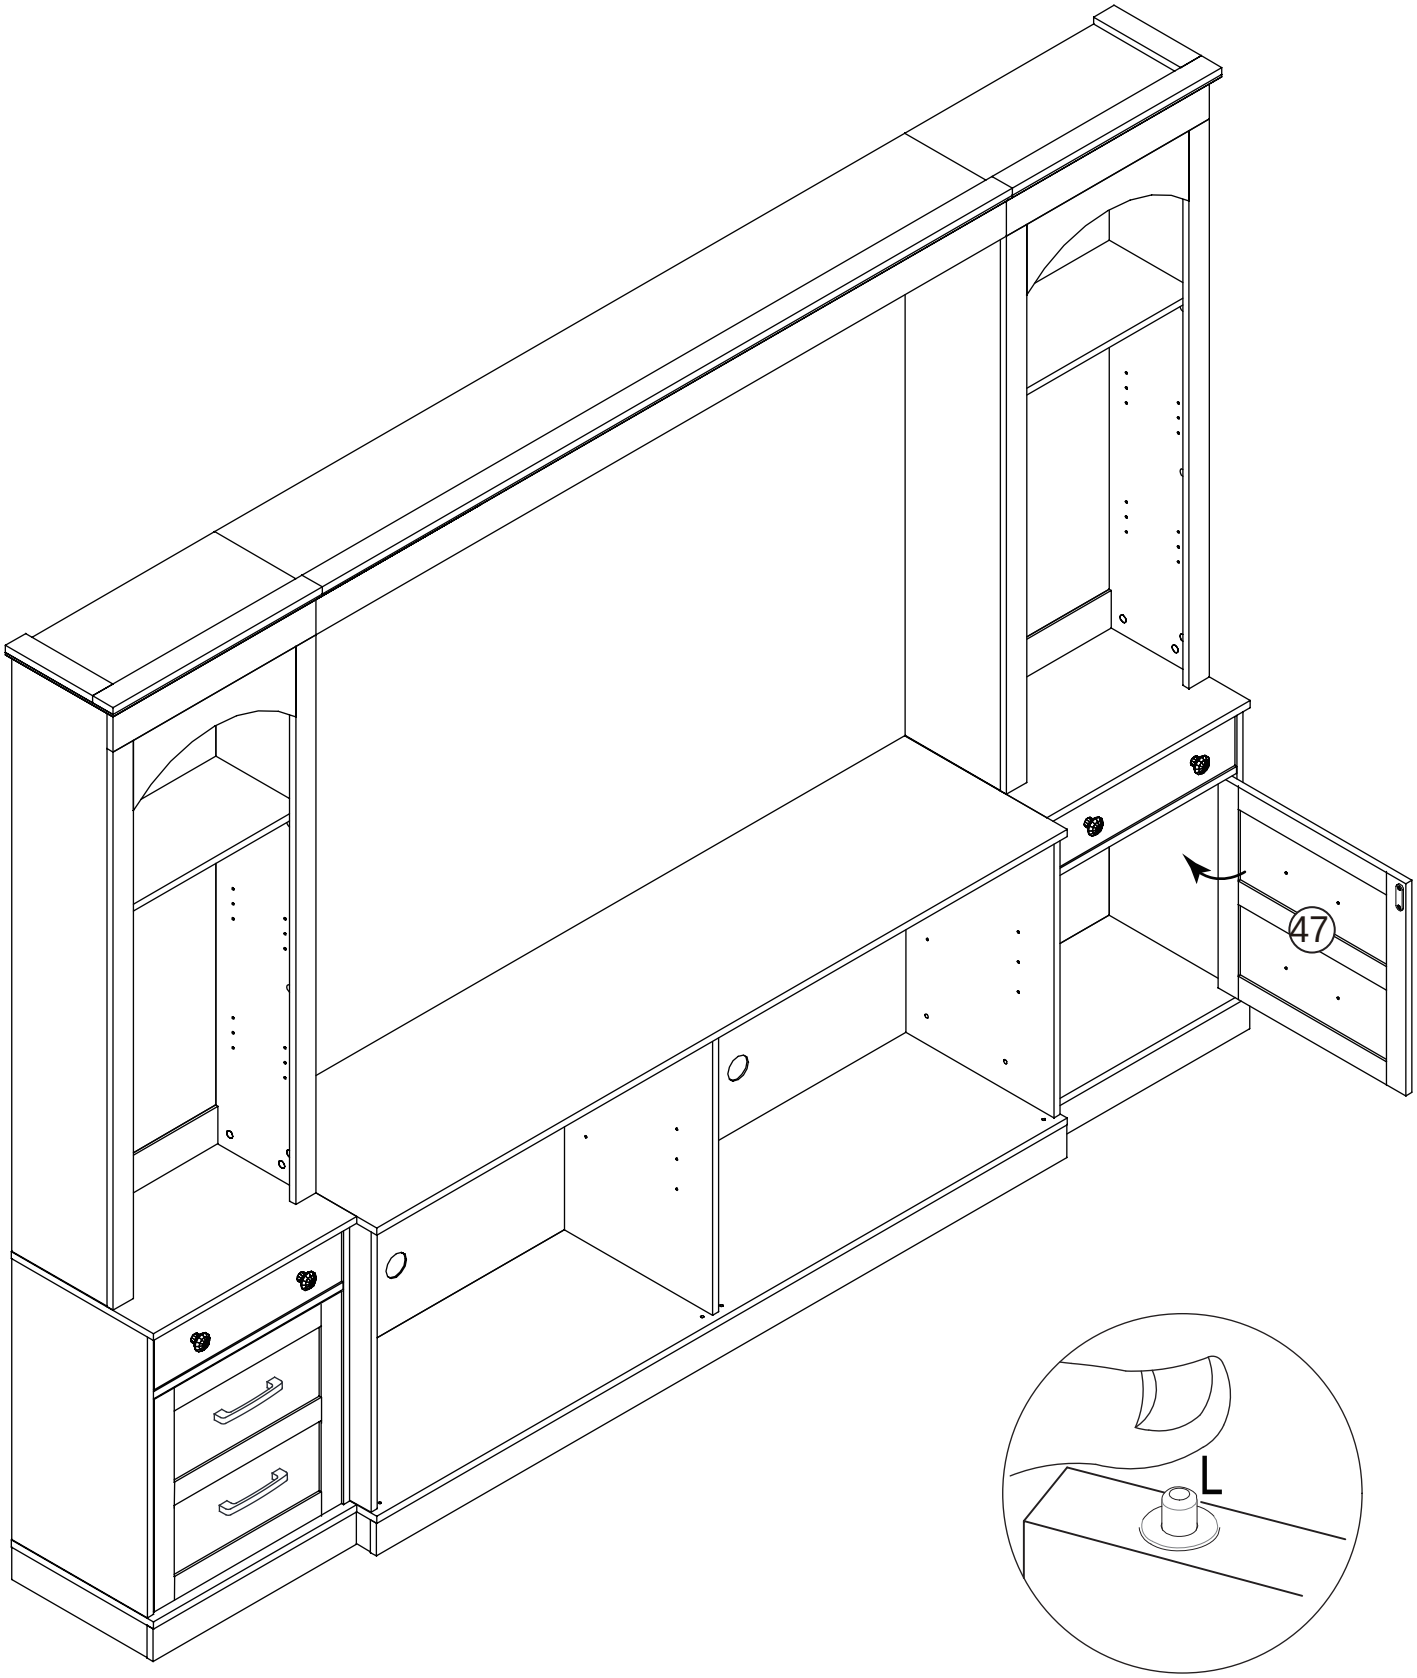


Press hardware L
and then slot in to
the hole at cabinet.


Step 62

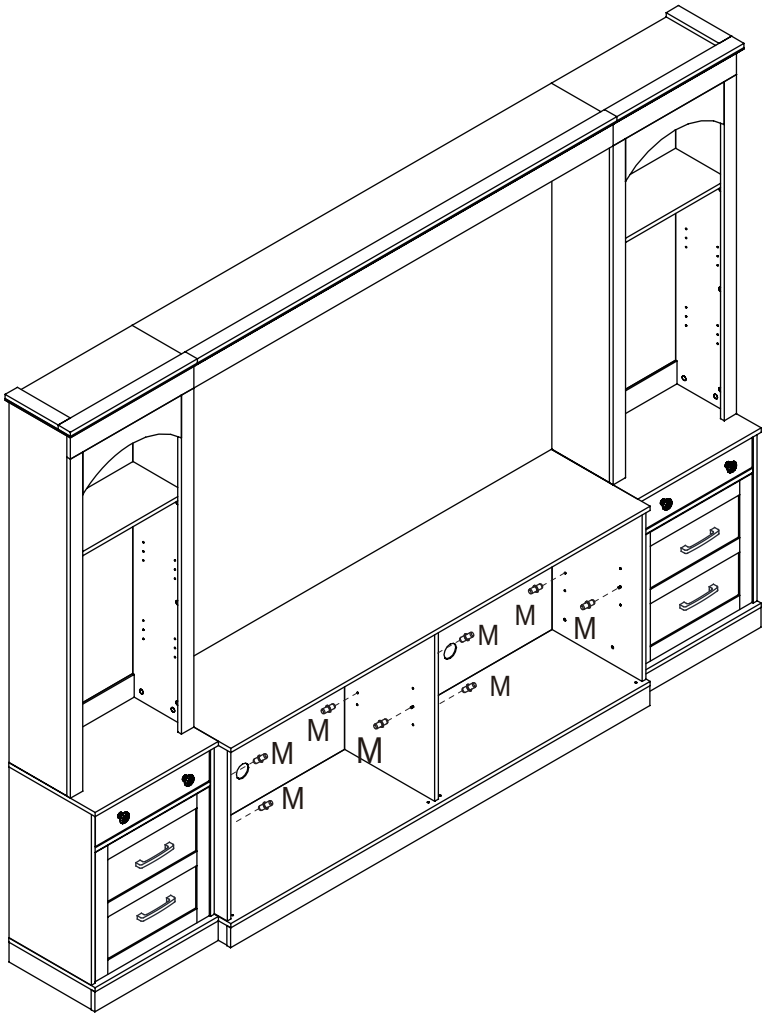


M*8





Step 63

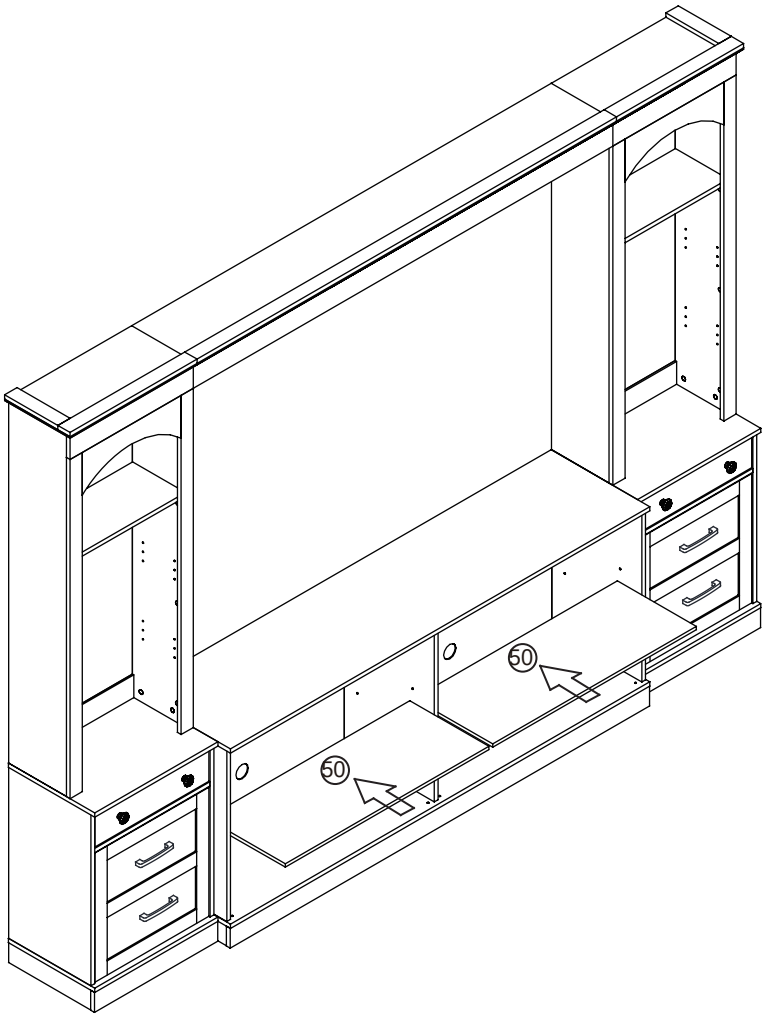

Step 64

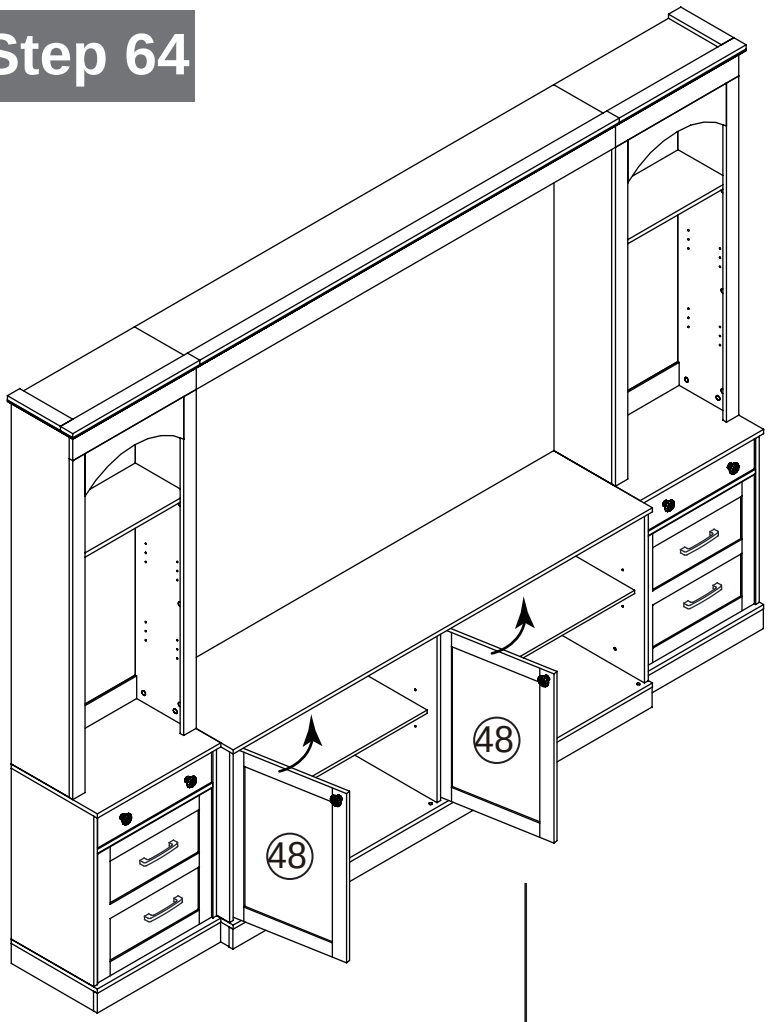


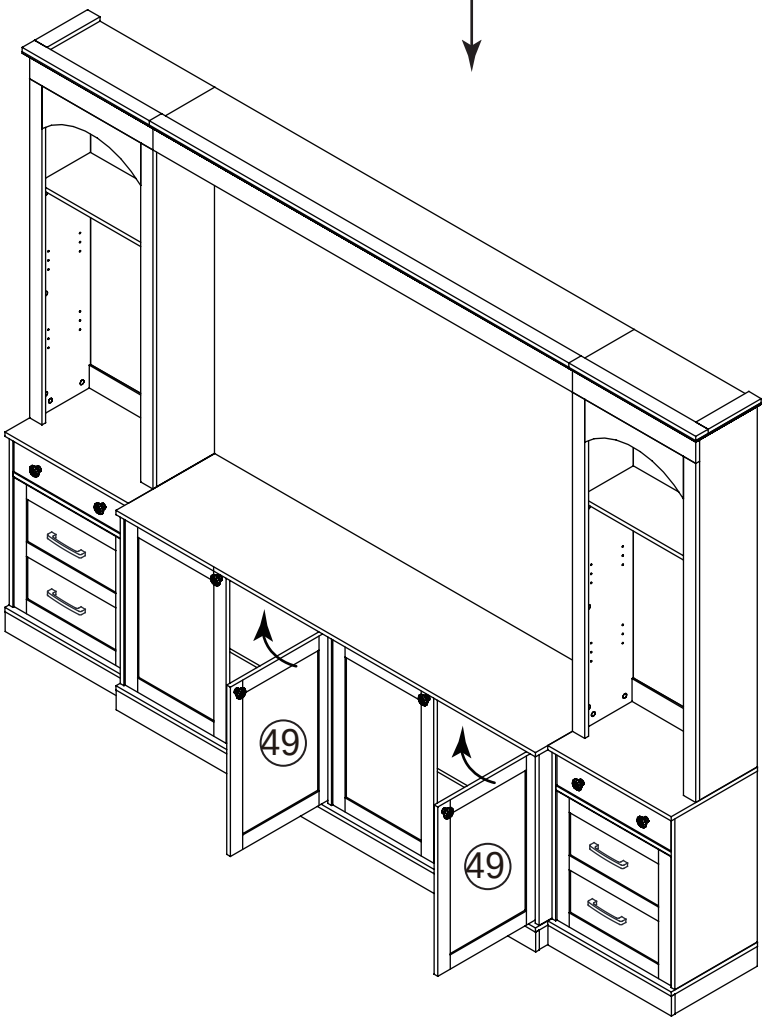

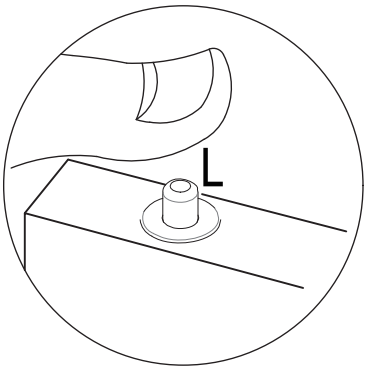


Press hardware L and then slot in to the hole at cabinet.


Step 65

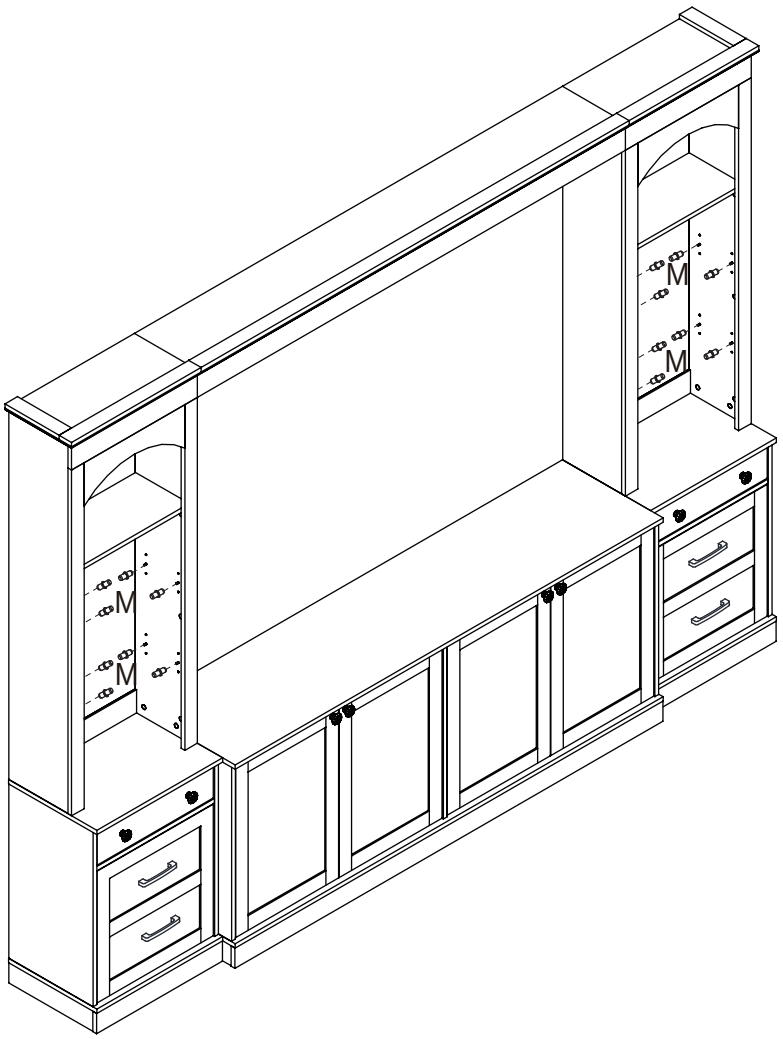


M*16



Step 66

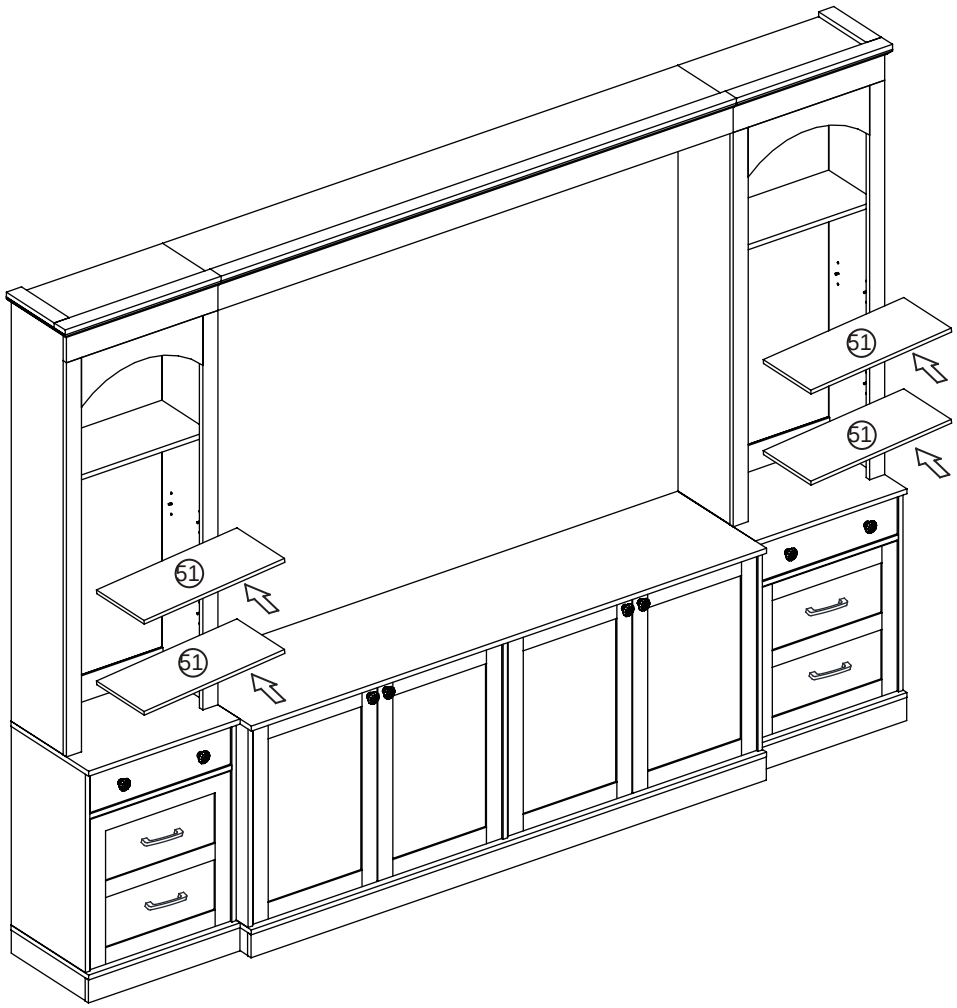


Step 67

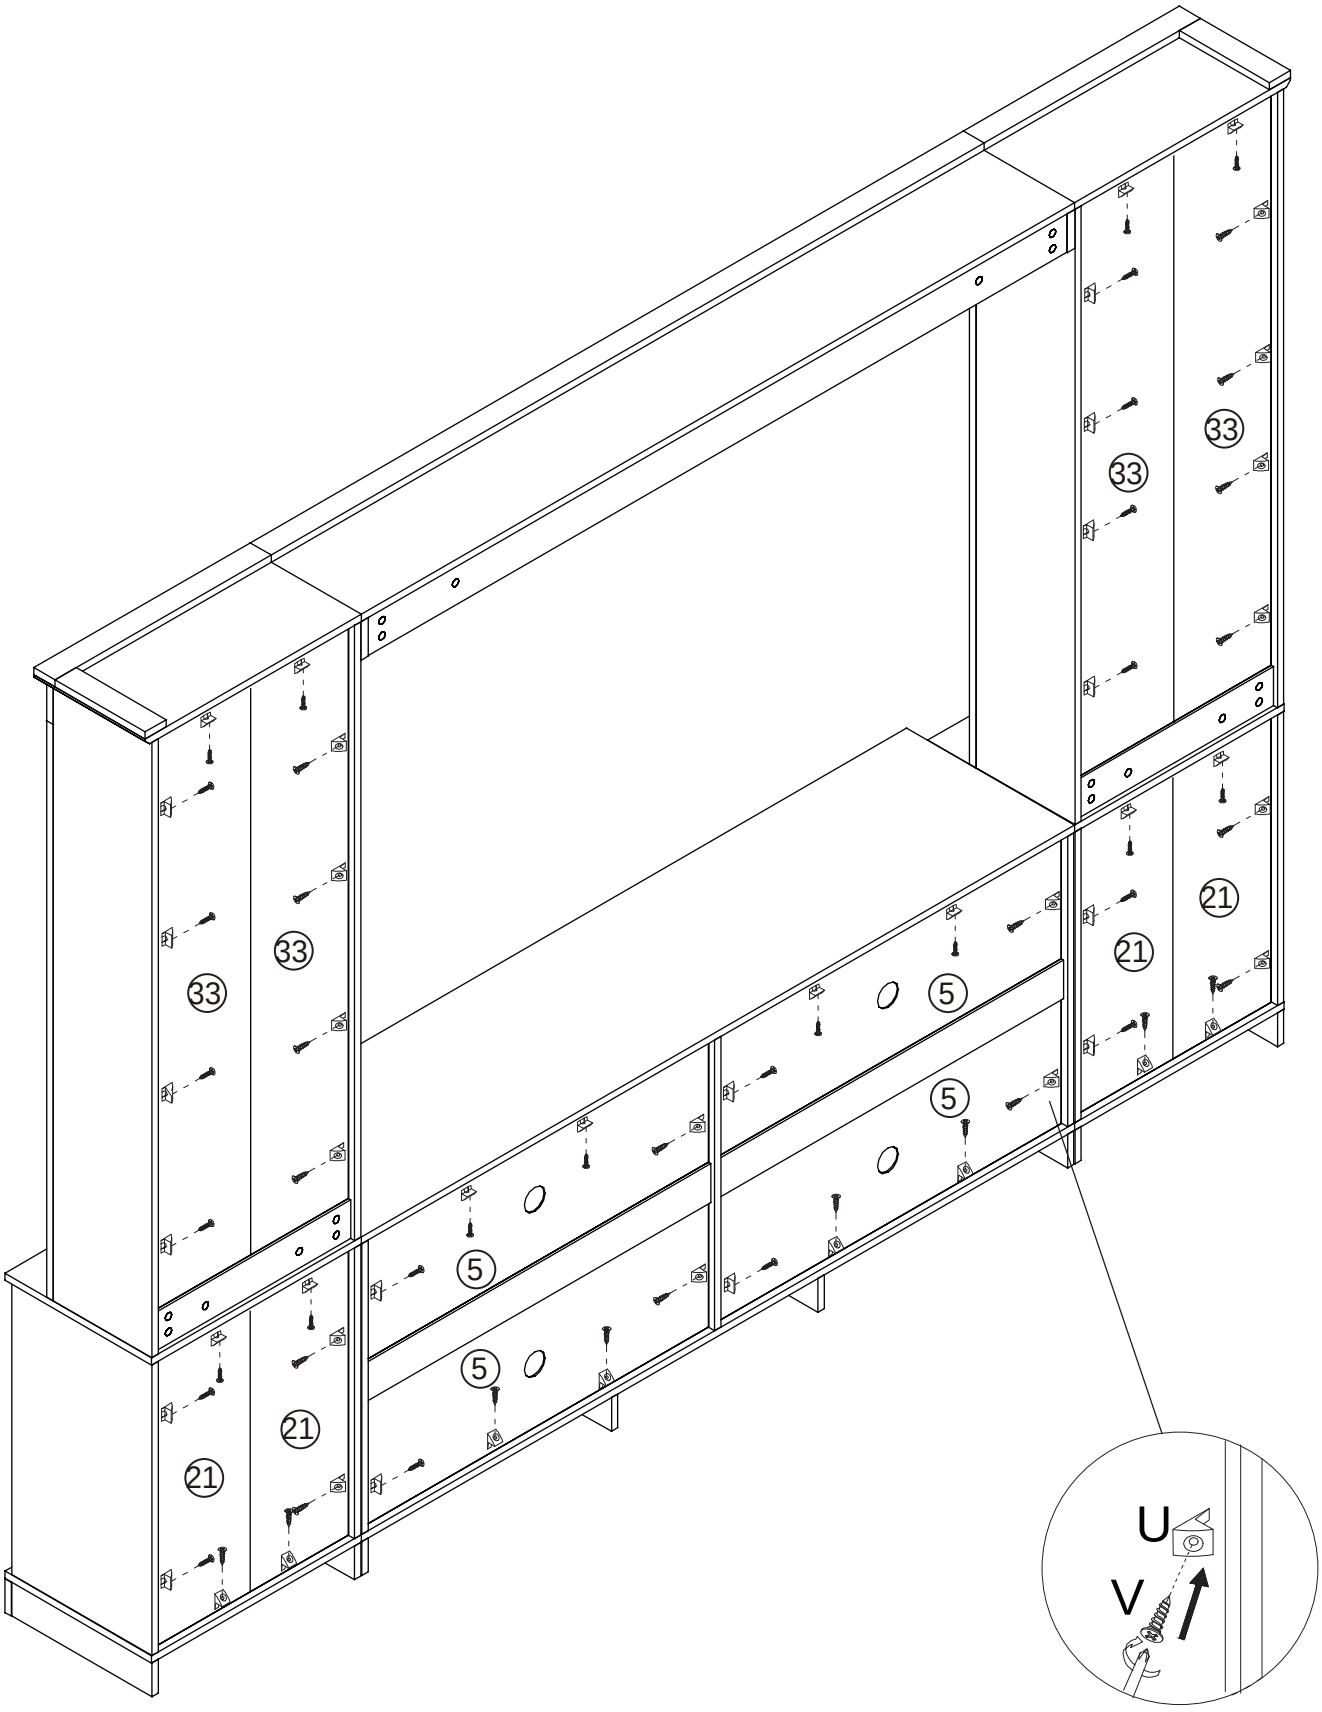


U*52	V*52
	

As the picture shows,
Fix hardware "U" into the gap with screws to make the back panel more stable.

Step 68

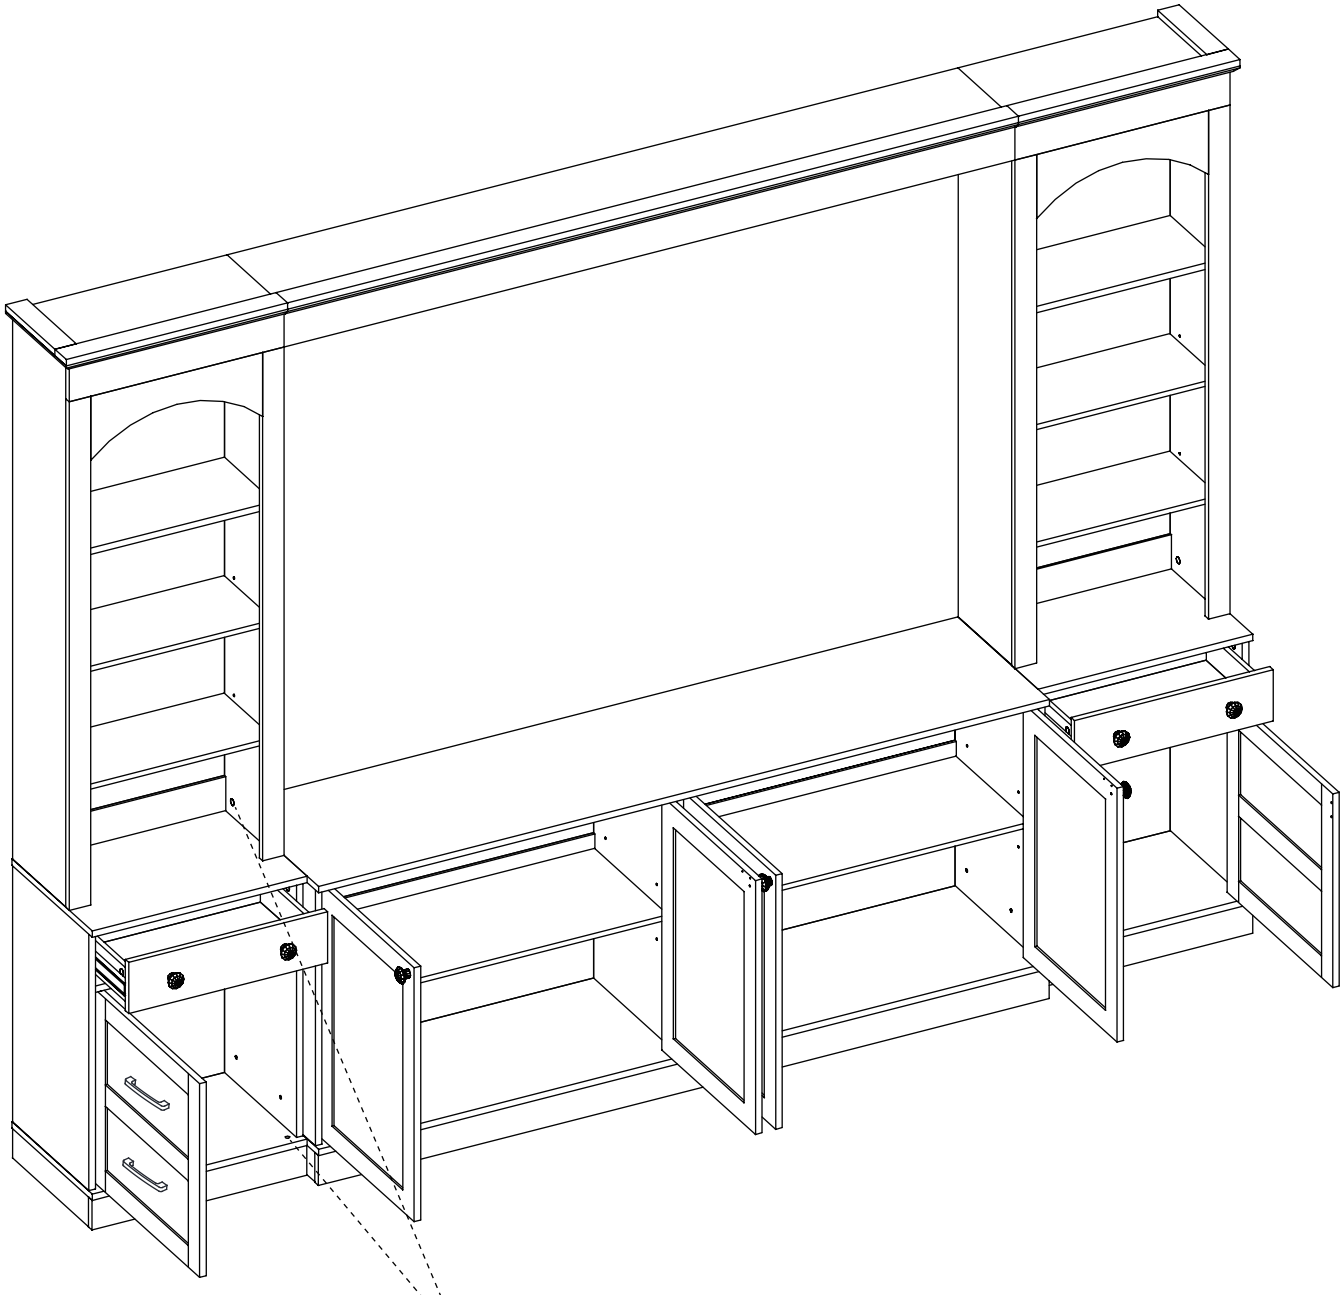

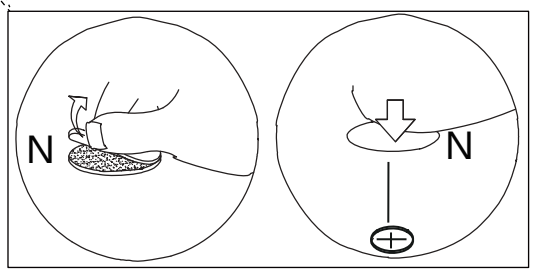



N*54




Please stick the hardware "N" on the exposed hole that makes your product more beautiful.

Step 69

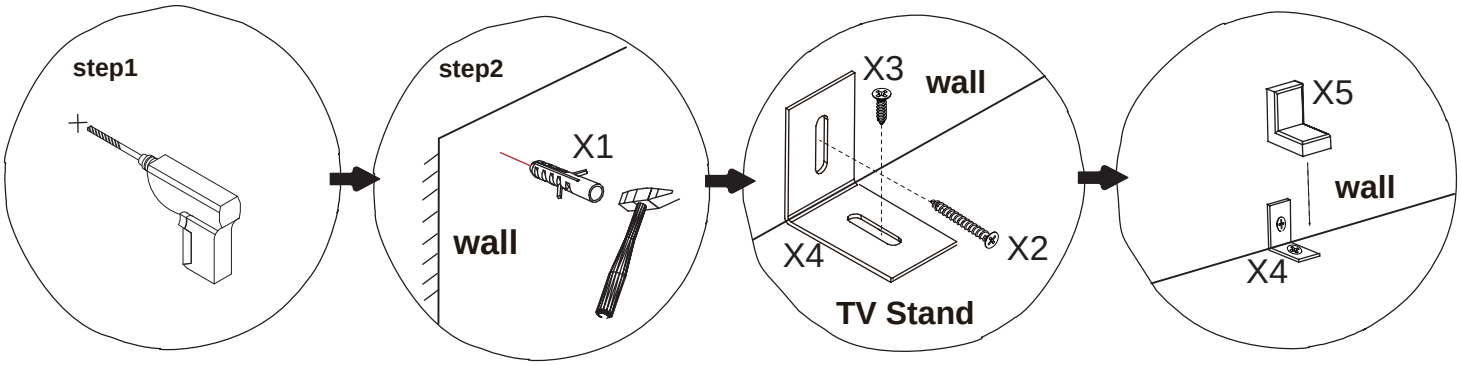
step1
step2
X1
wall
X3
wall
X4
X2
TV Stand
X5
wall
X4

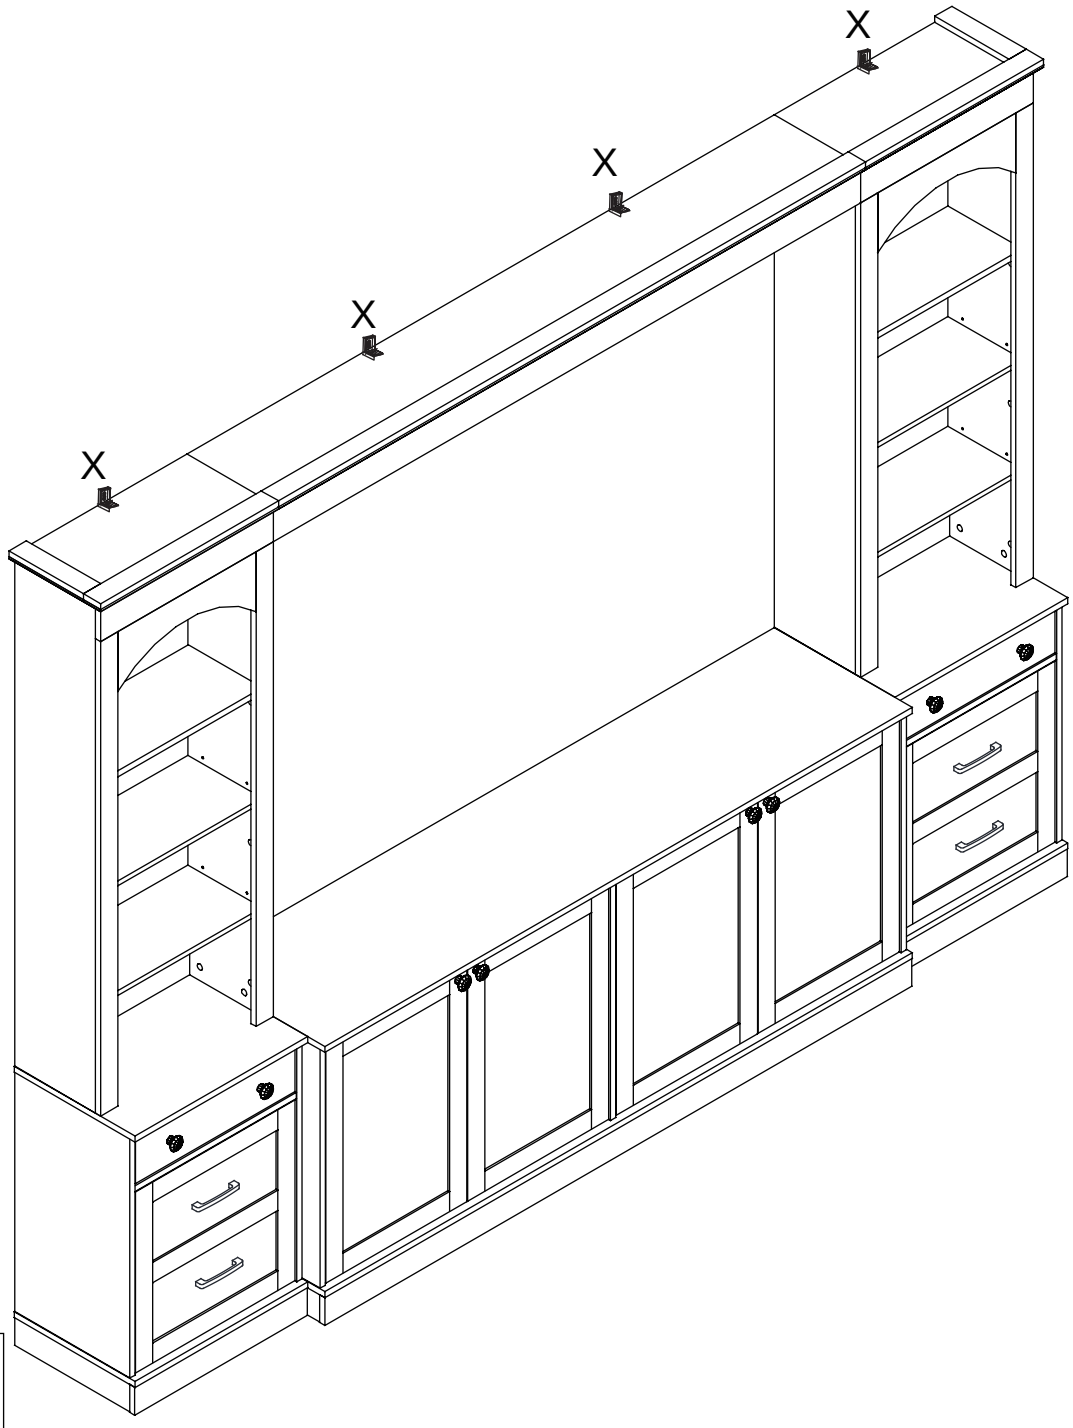
X
X
X
X

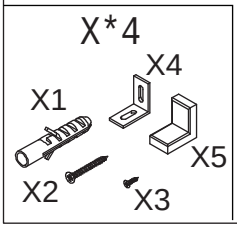
X*4
X4
X1
X5
X2
X3

FINISH

