

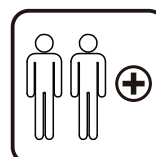
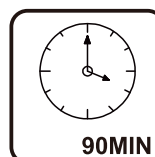
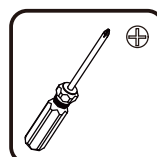
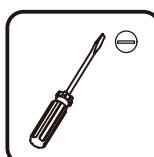



Installation & Assembly

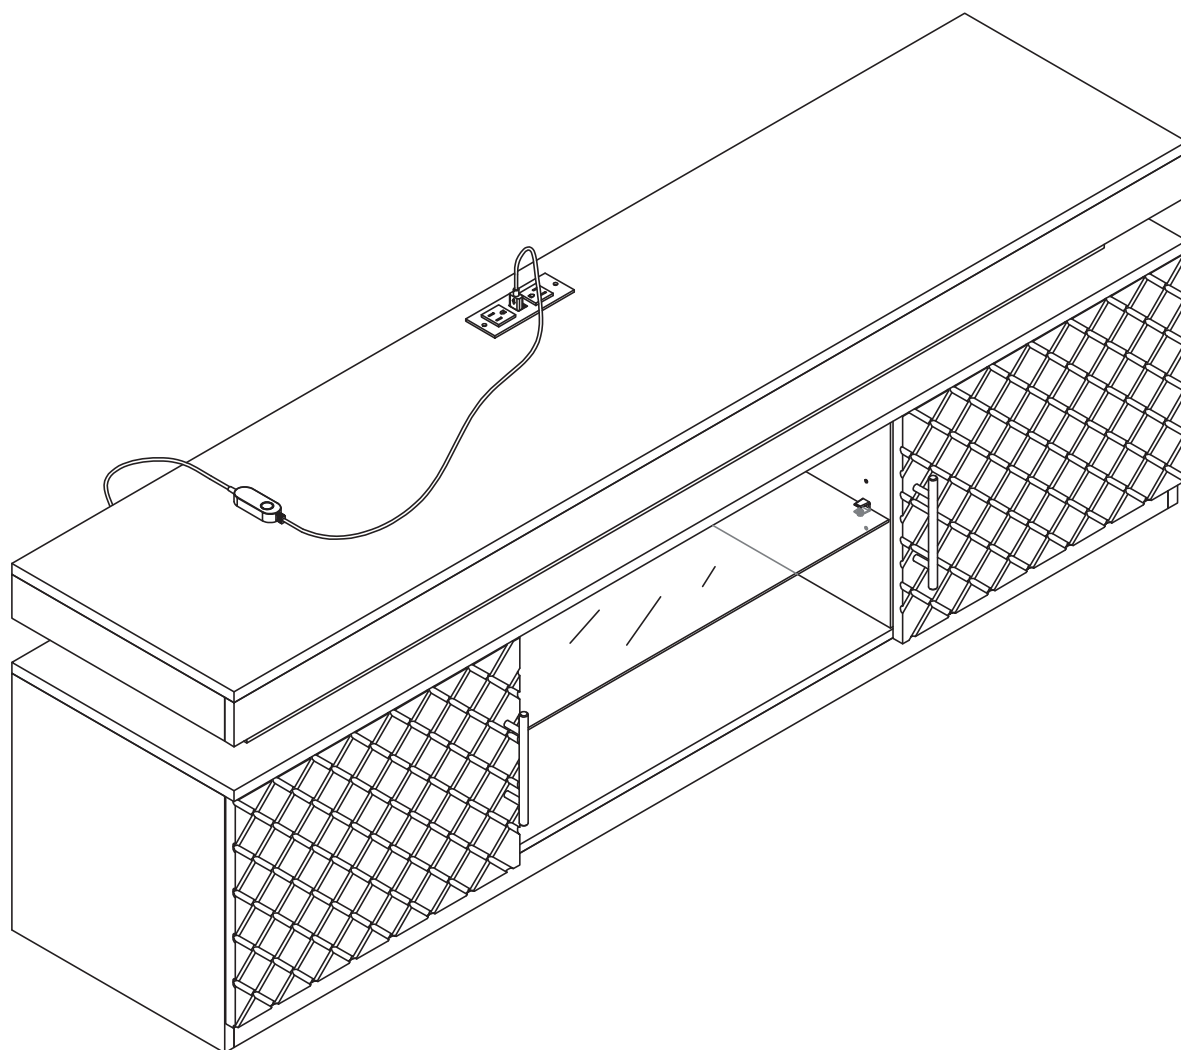


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

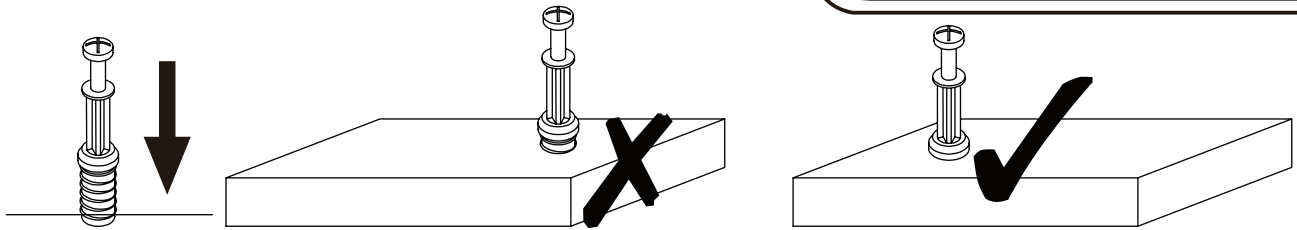


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

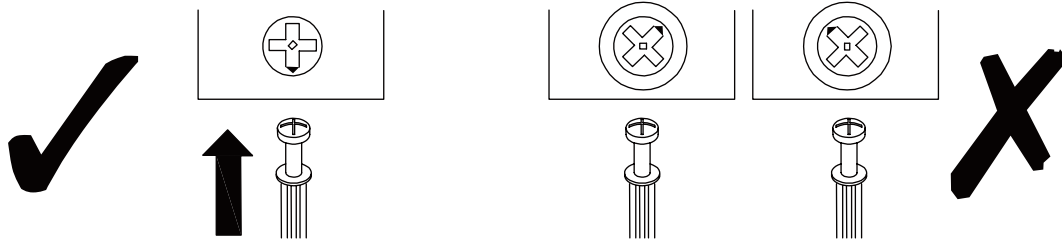












EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.







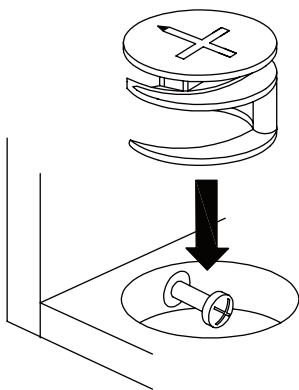



EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.


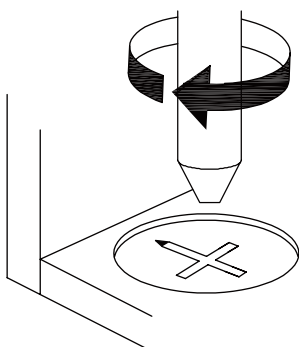



EN_Turn cam lock clockwise to tighten.

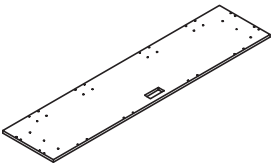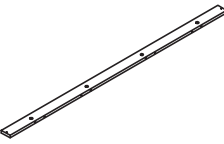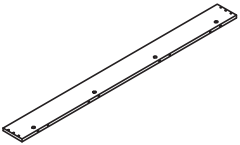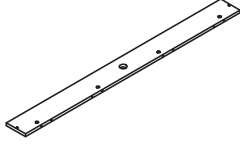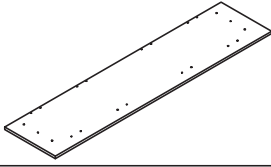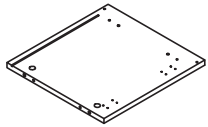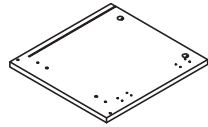NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x1	
⑩		x1	
⑪		x1	

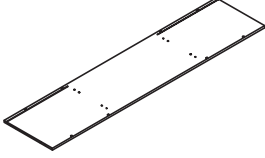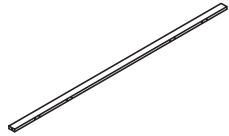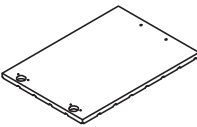NO.	PARTS	QTY	SPARE
⑫		x1	
⑬		x1	
⑭		x1	
⑮		x2	
⑯		x1	
⑰		x2	
⑱		x2	
	 Hardware Kit	x1	

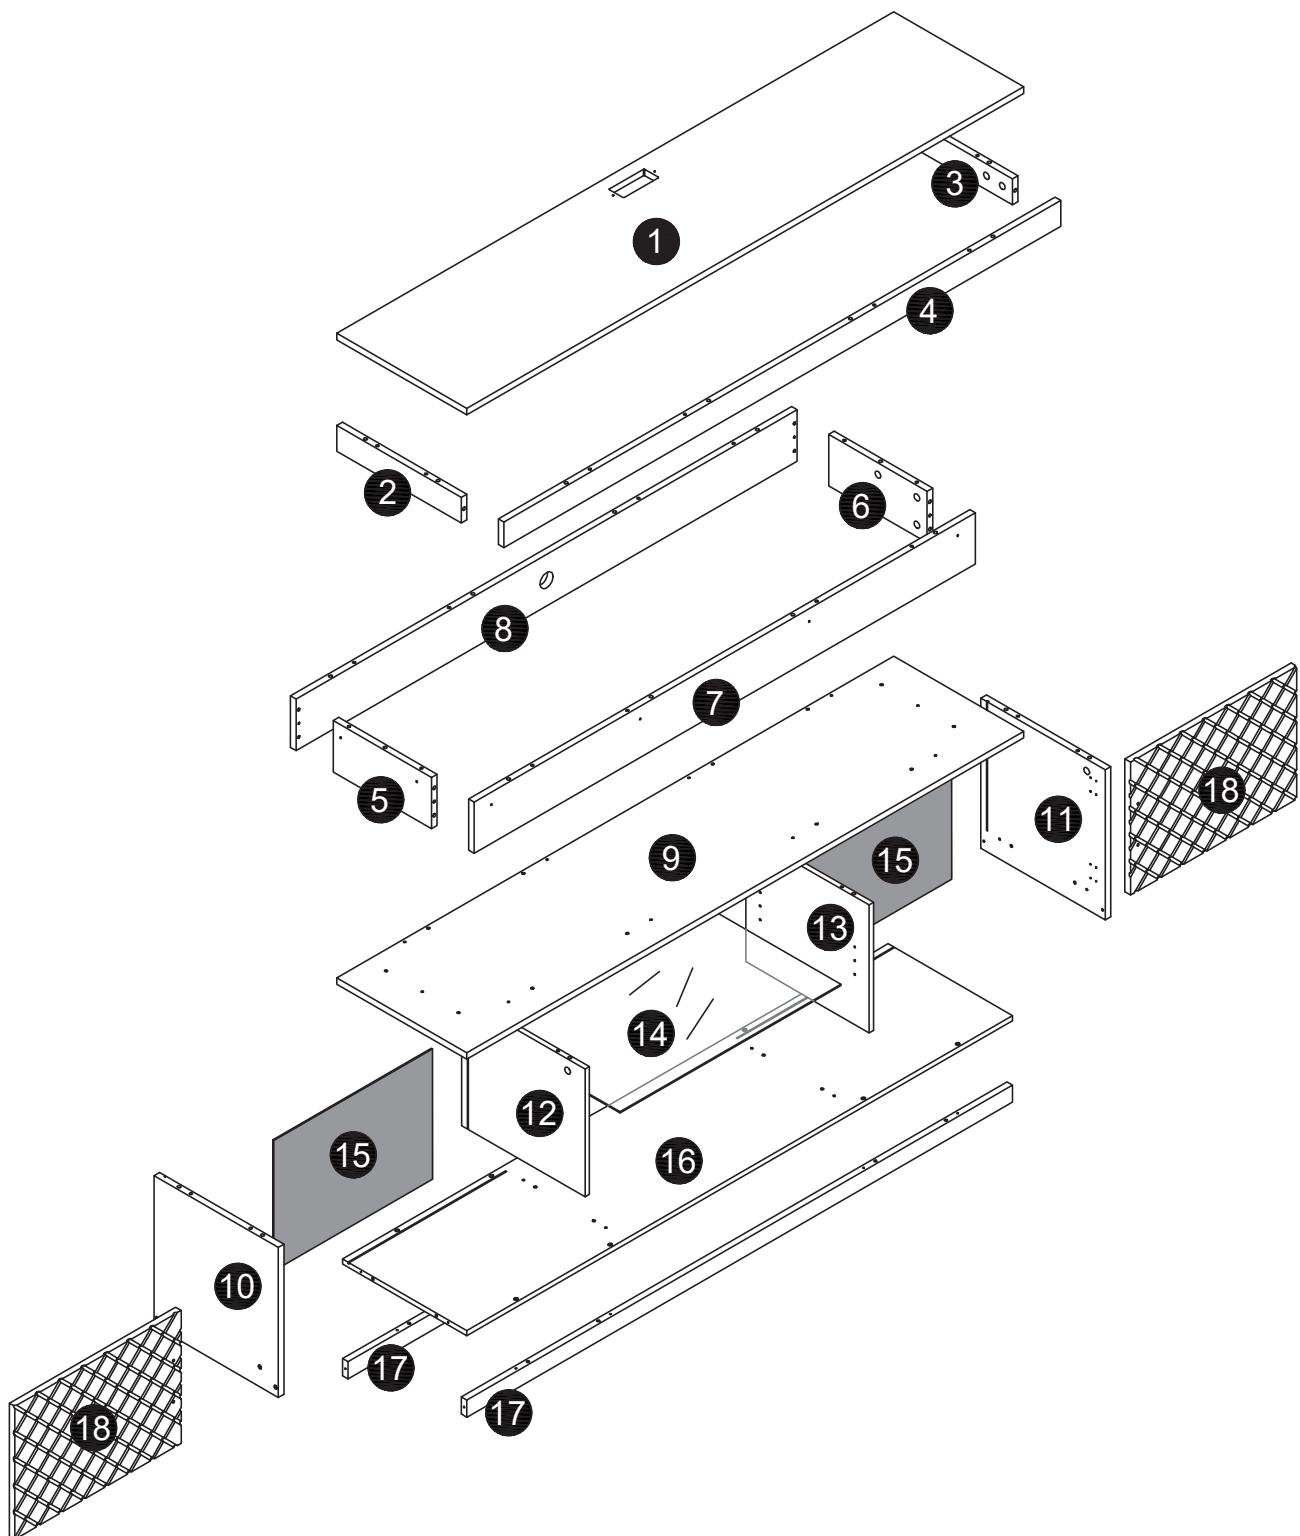


 A x32 Ø6x35mm +3(spare)	 B x32 Ø15x10mm +3(spare)	 C x62 Ø6x30mm +5(spare)	 D x32 Ø4x35mm +3(spare)	 E x24 Ø3.5x12mm +2(spare)	 F x1
 G x2 Ø3.5x12mm	 H x2 H-1 H-2	 I x20 Ø20mm +2(spare)	 J x1	 K x1 K-1 K-2	 L x7 Ø3x12mm L-1 L-2
 M x8 Ø3x16mm +1(spare) M-1 M-2	 N x4	 O x4			

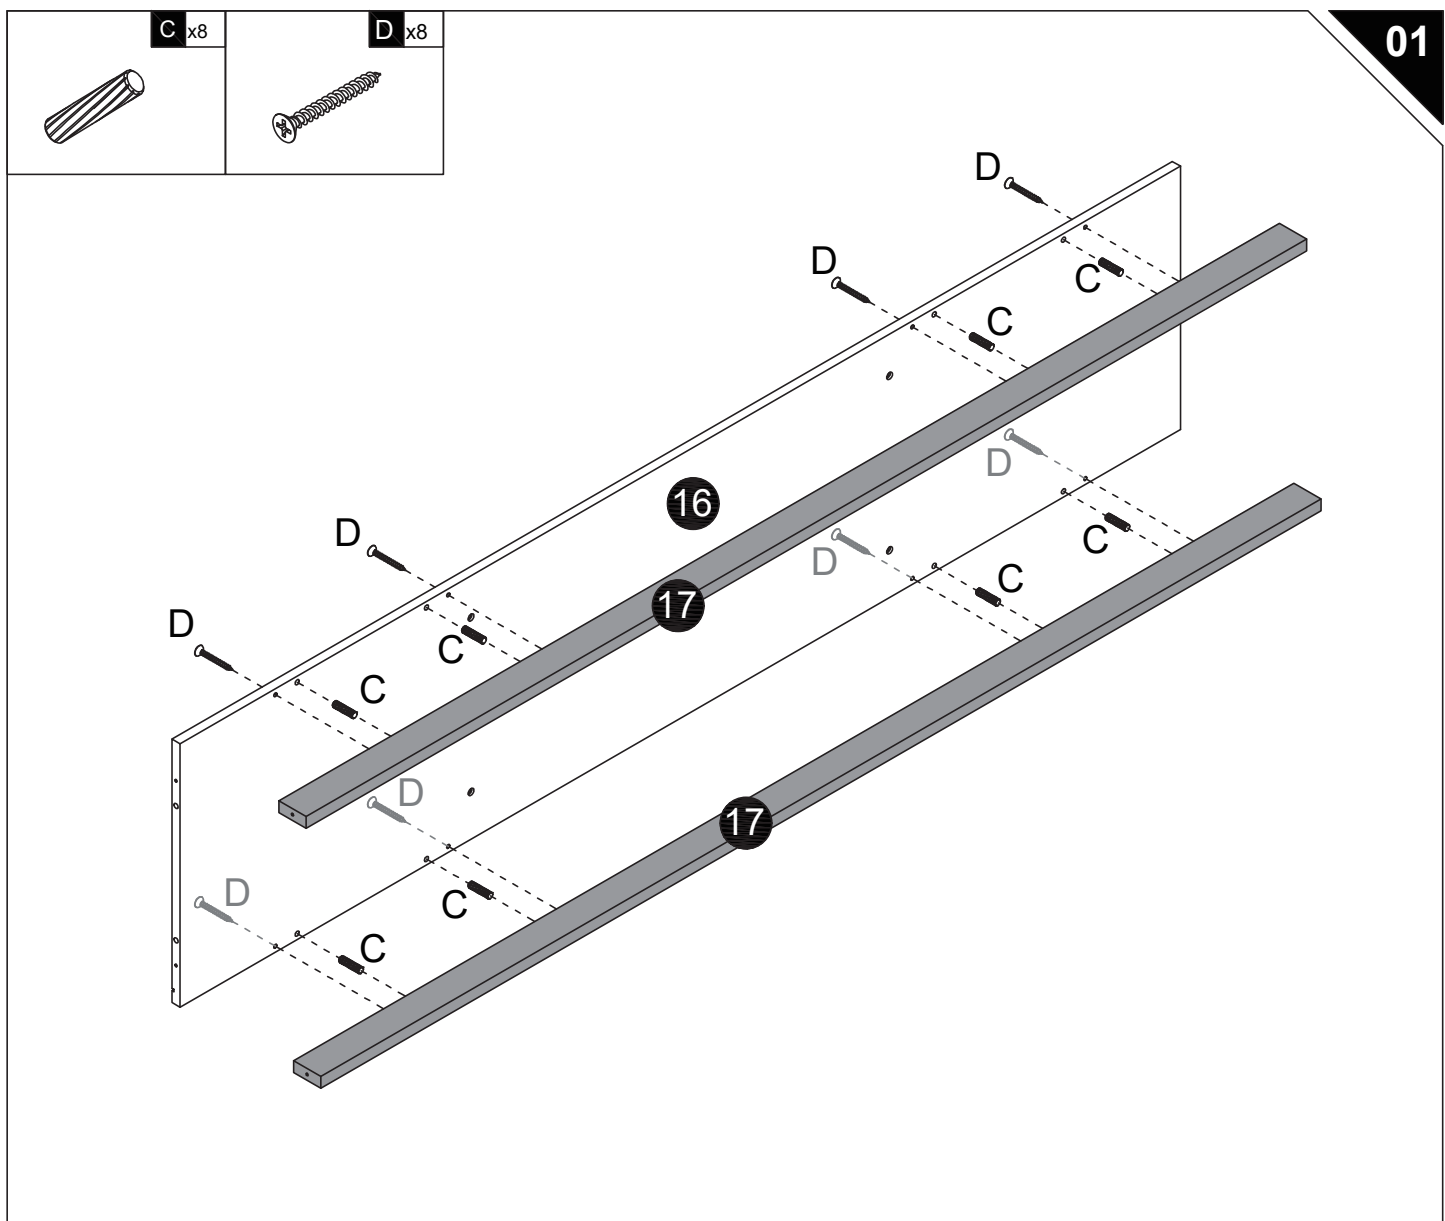


C x4

D x4

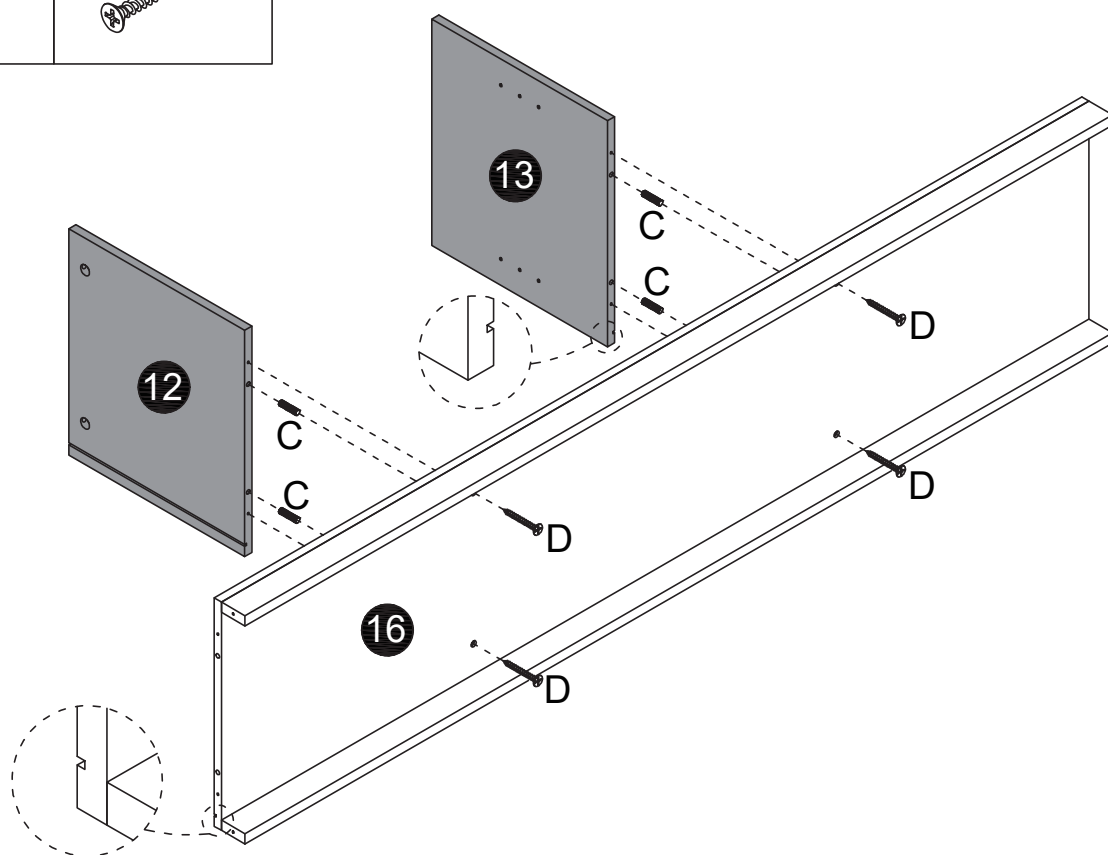

C x4


D x8

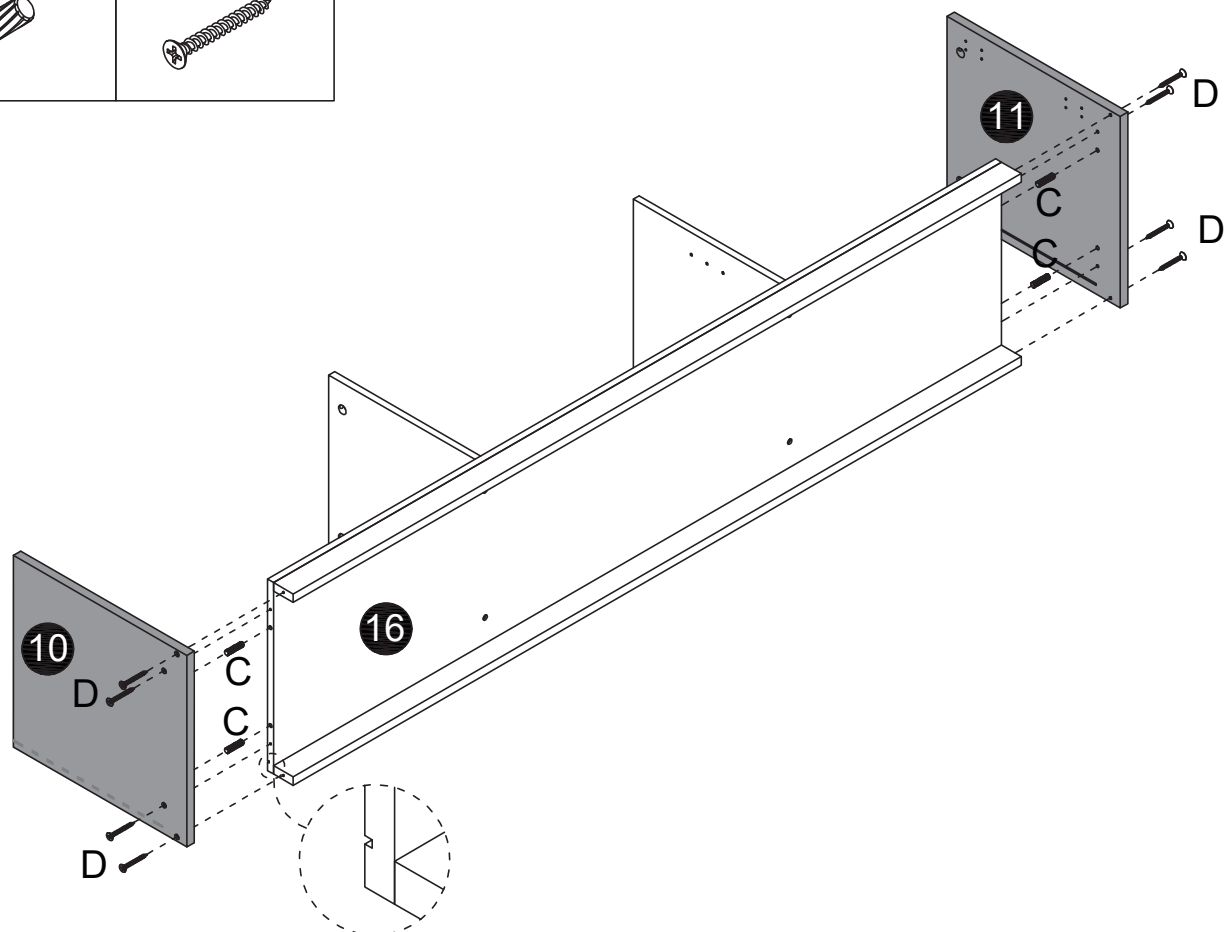


C x8




04

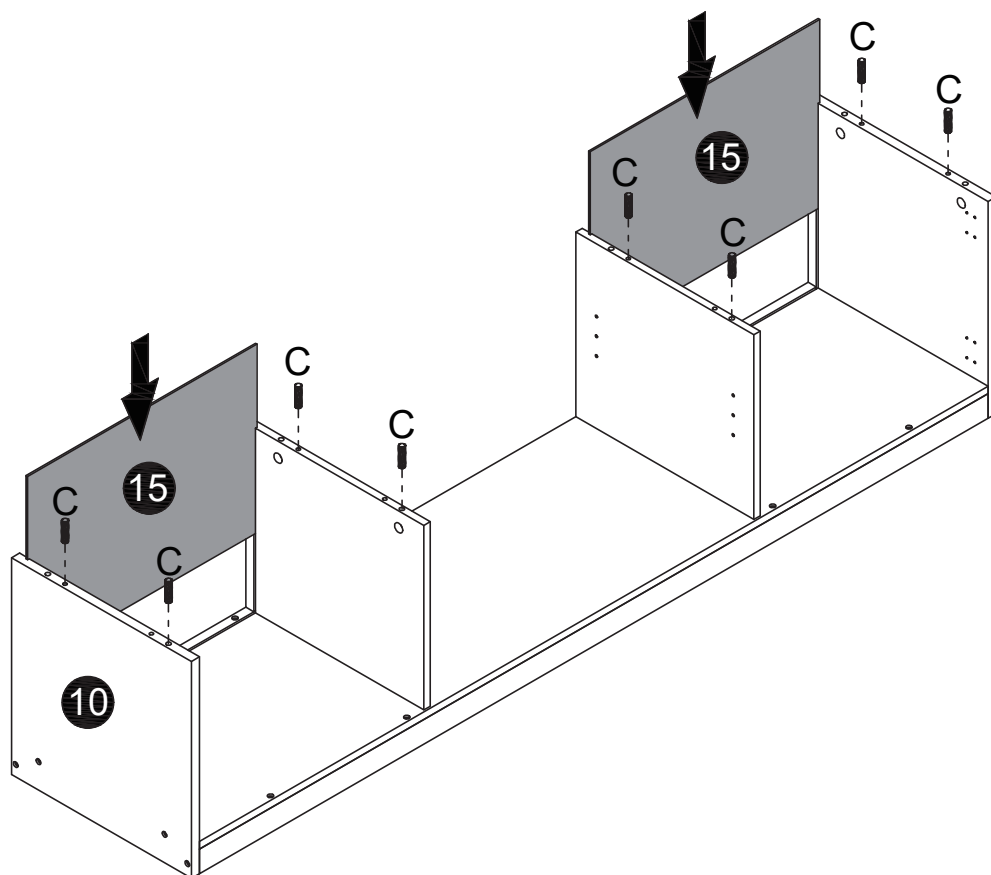

A x10




05


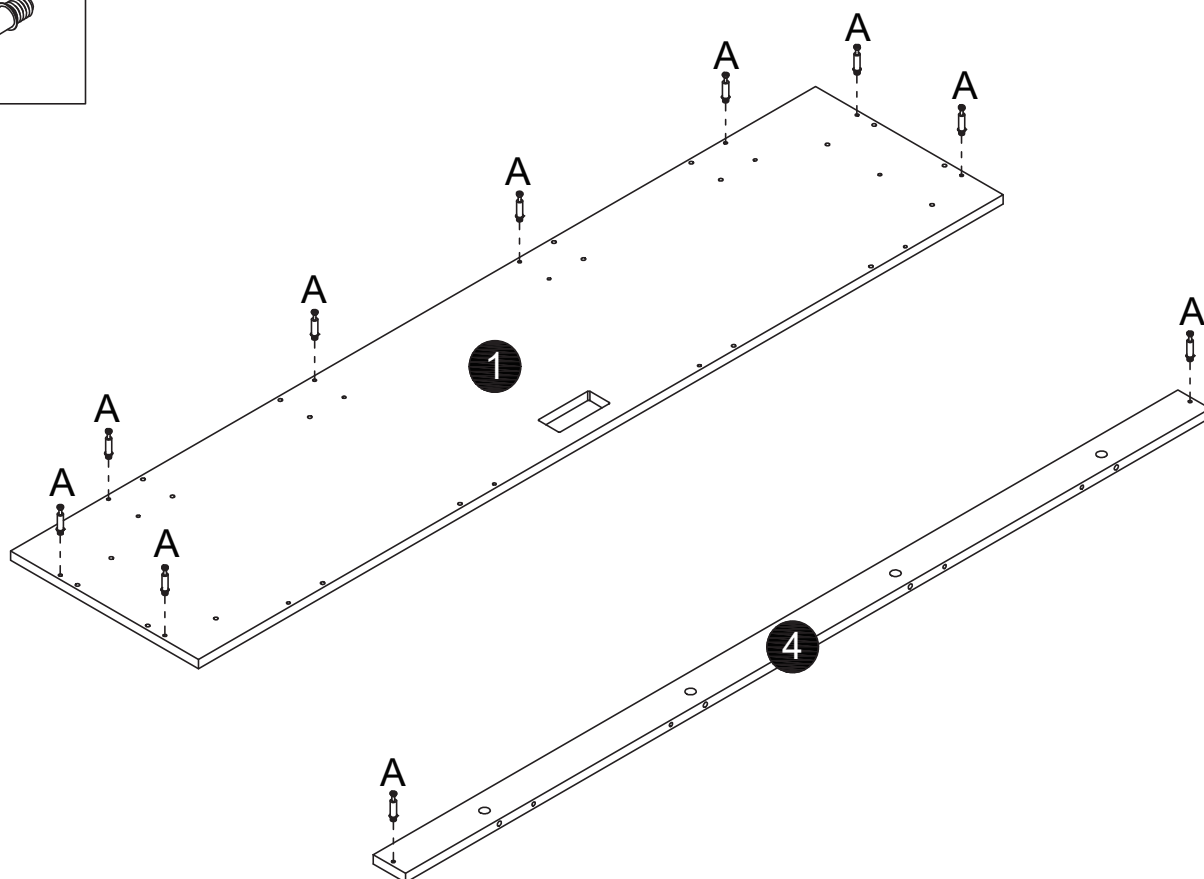


B x10


C x8

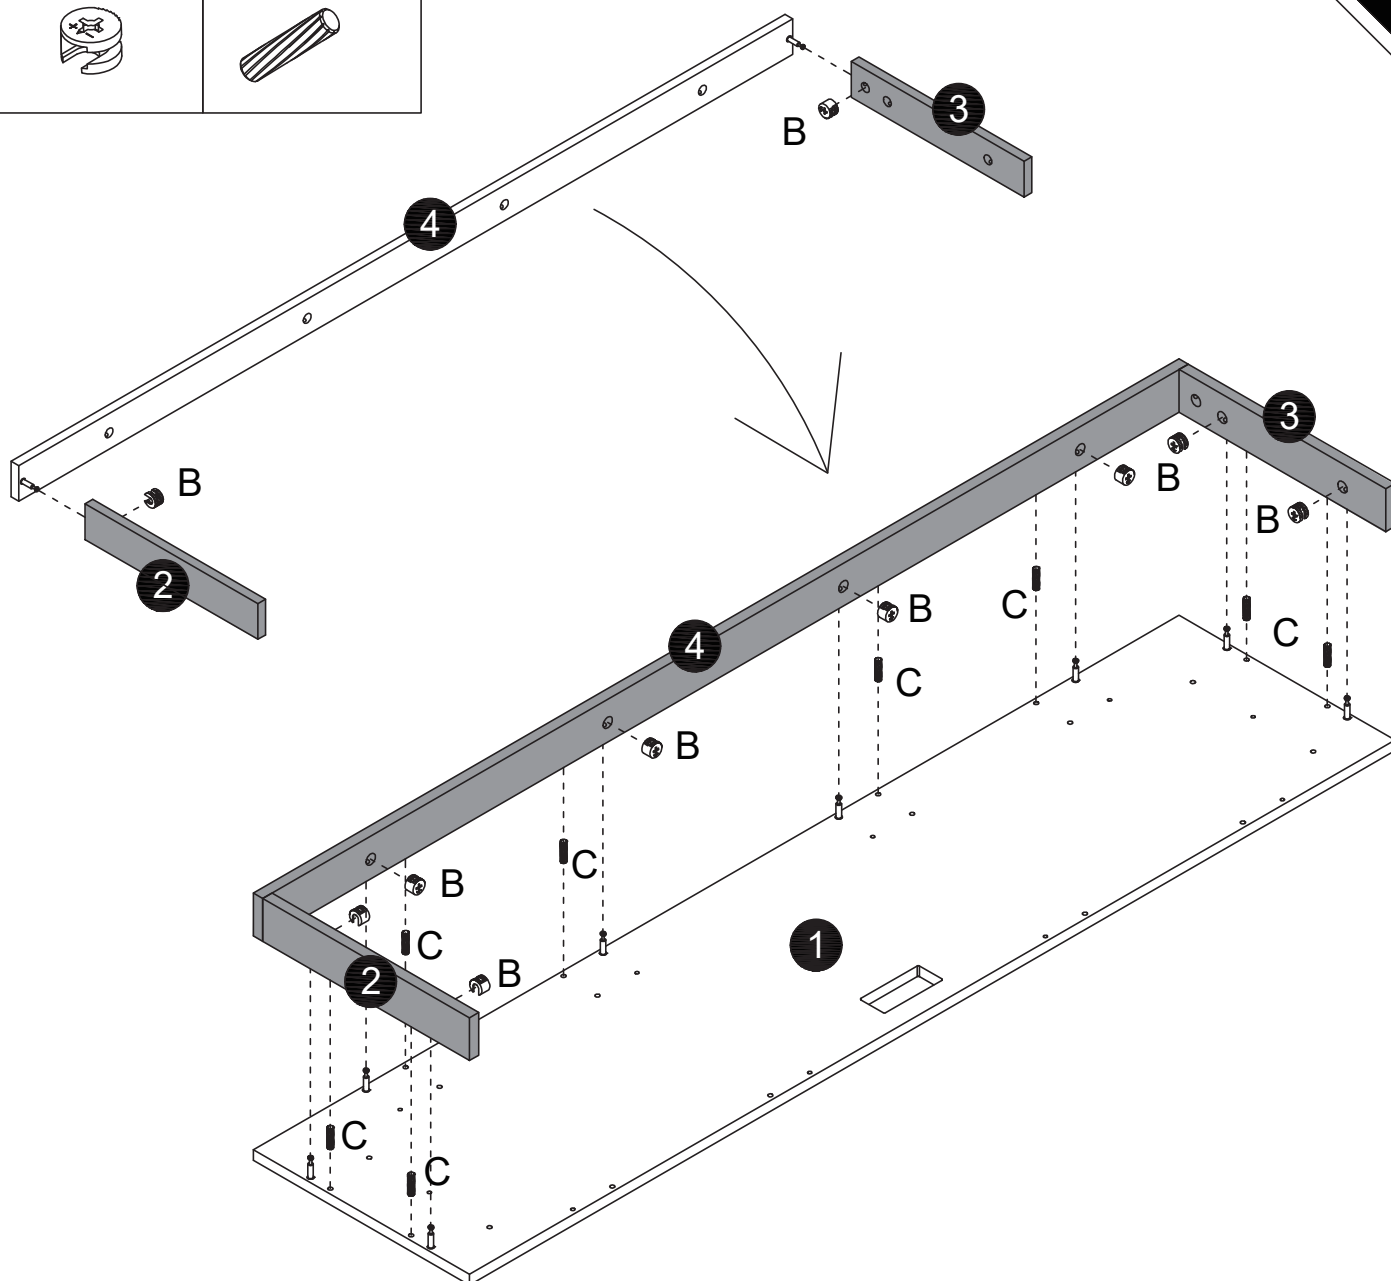

A x10

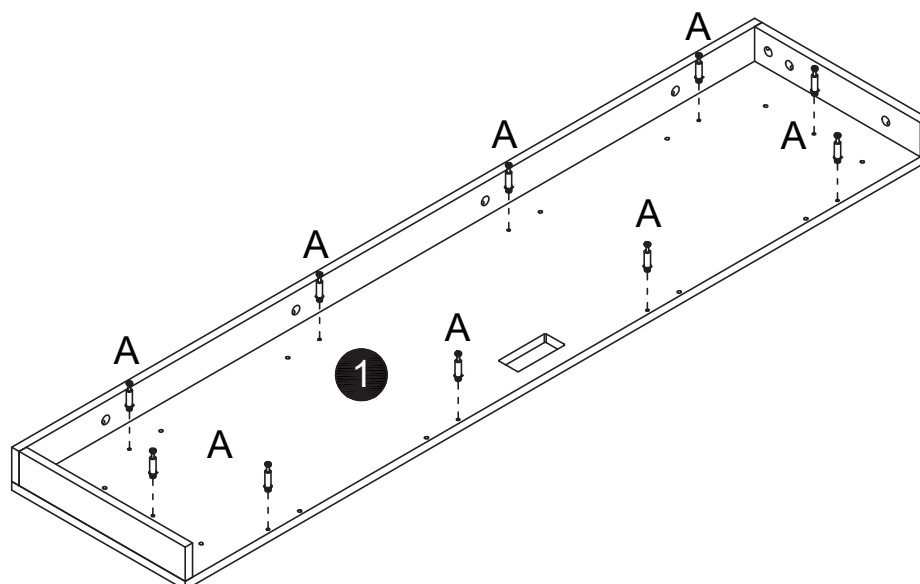


A x4



B x4




C x2






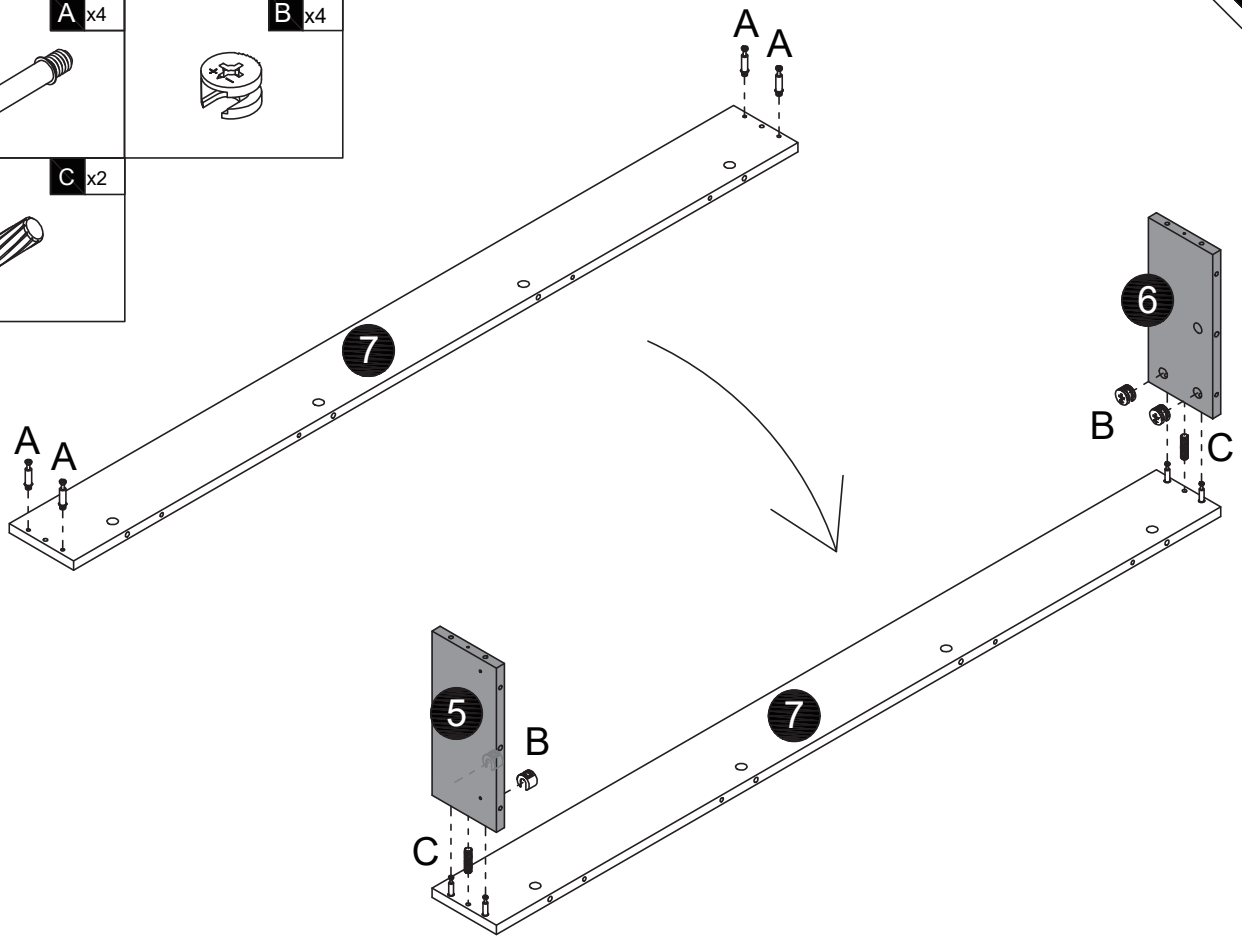


C x4



D x2

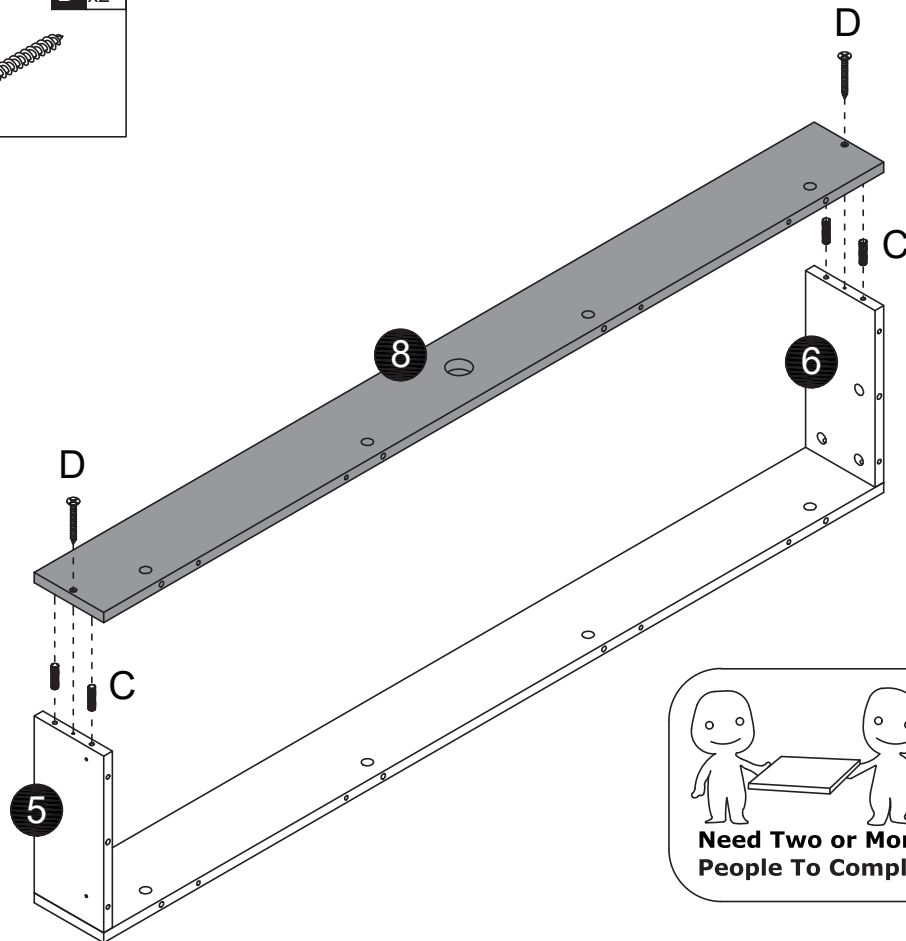


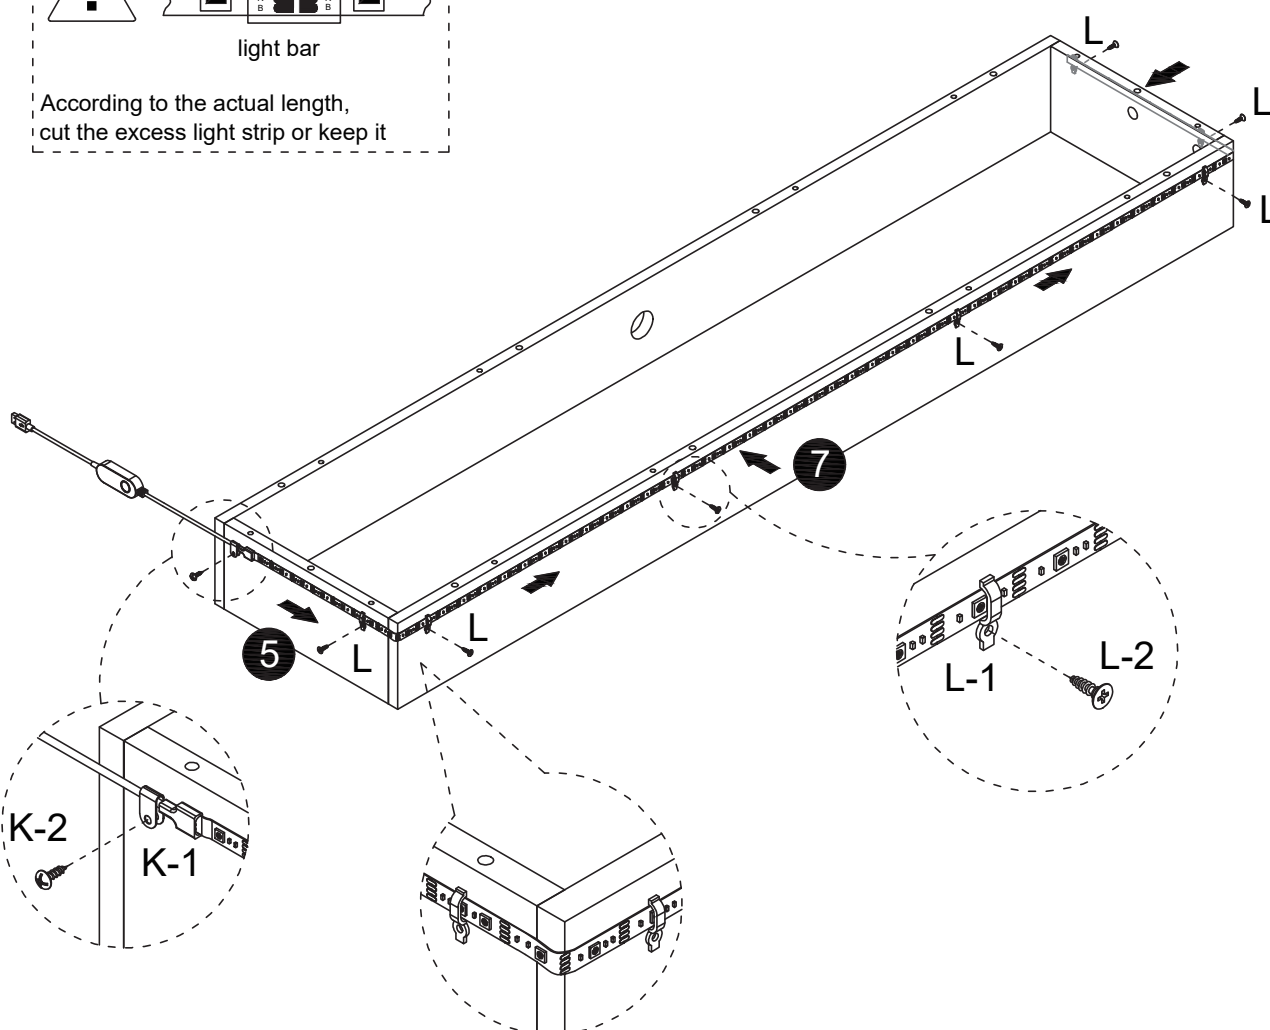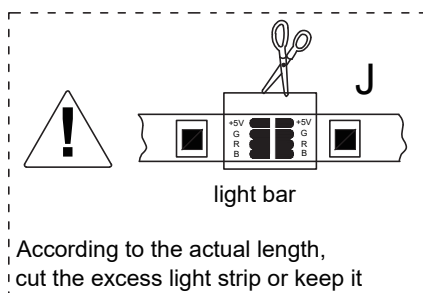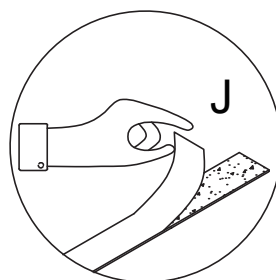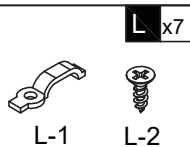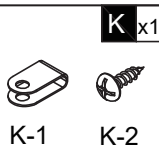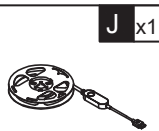

Caution : First, mark out the pasting position for the subsequent light strip J, remove the adhesive backing, and use accessory K to fix it on board No. 5, then use accessory L to secure it. The position of the light strip switch can be changed to either side according to actual needs.



C x12

B x10

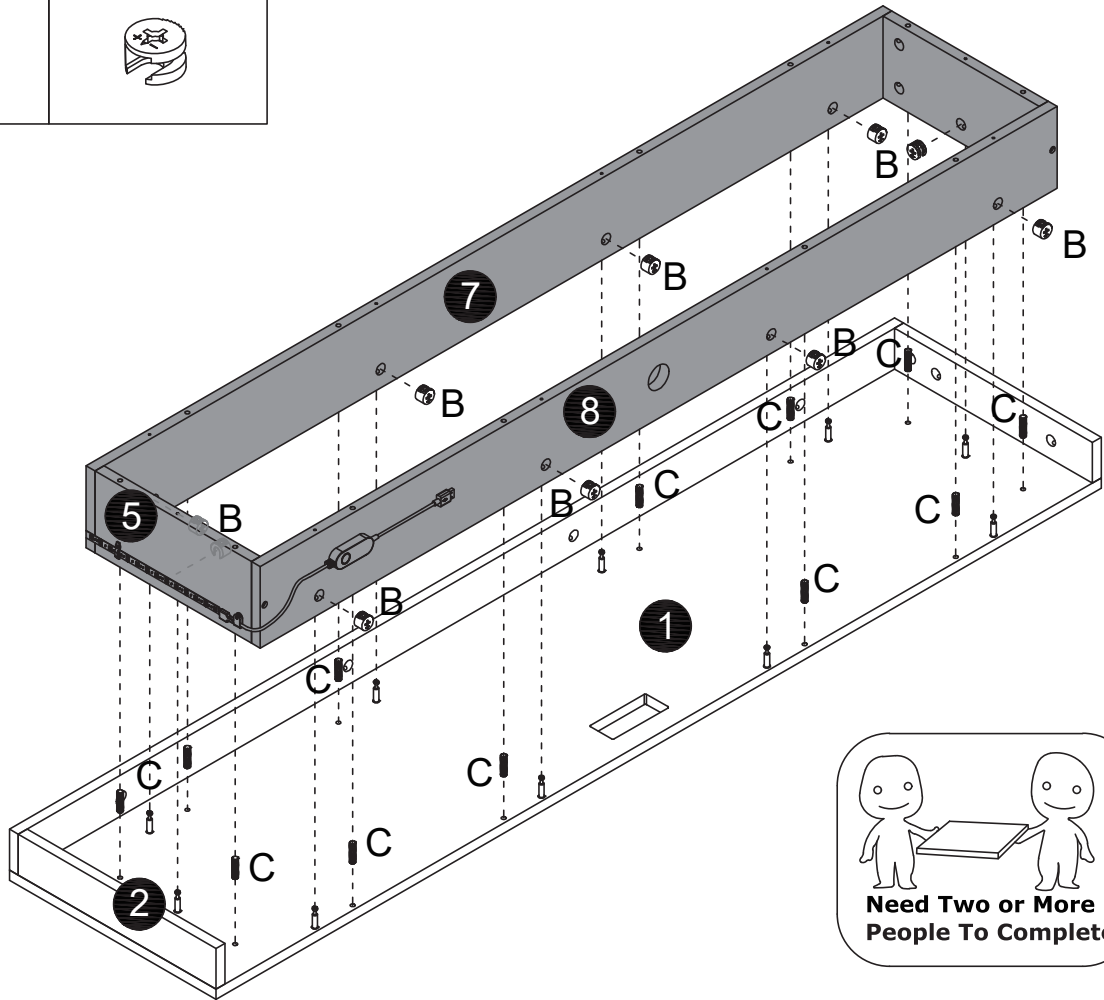

F x1

G x2

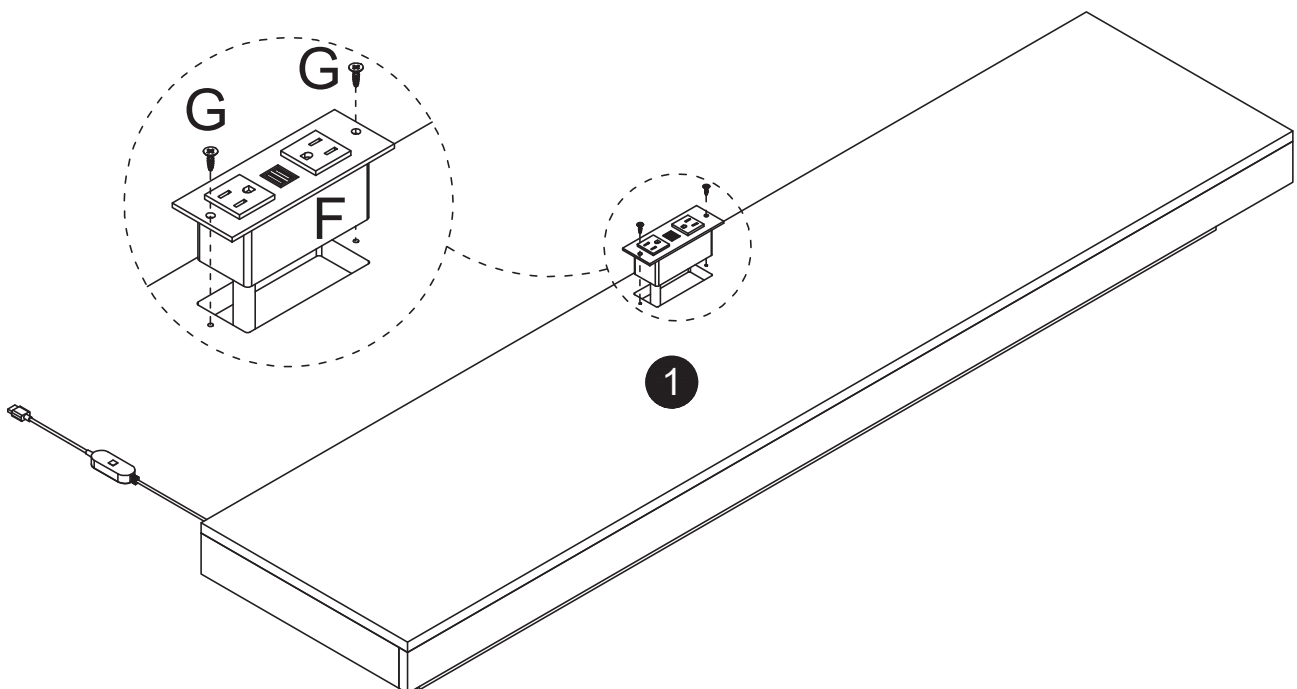


C x12



D x10





**Need Two or More
People To Complete**

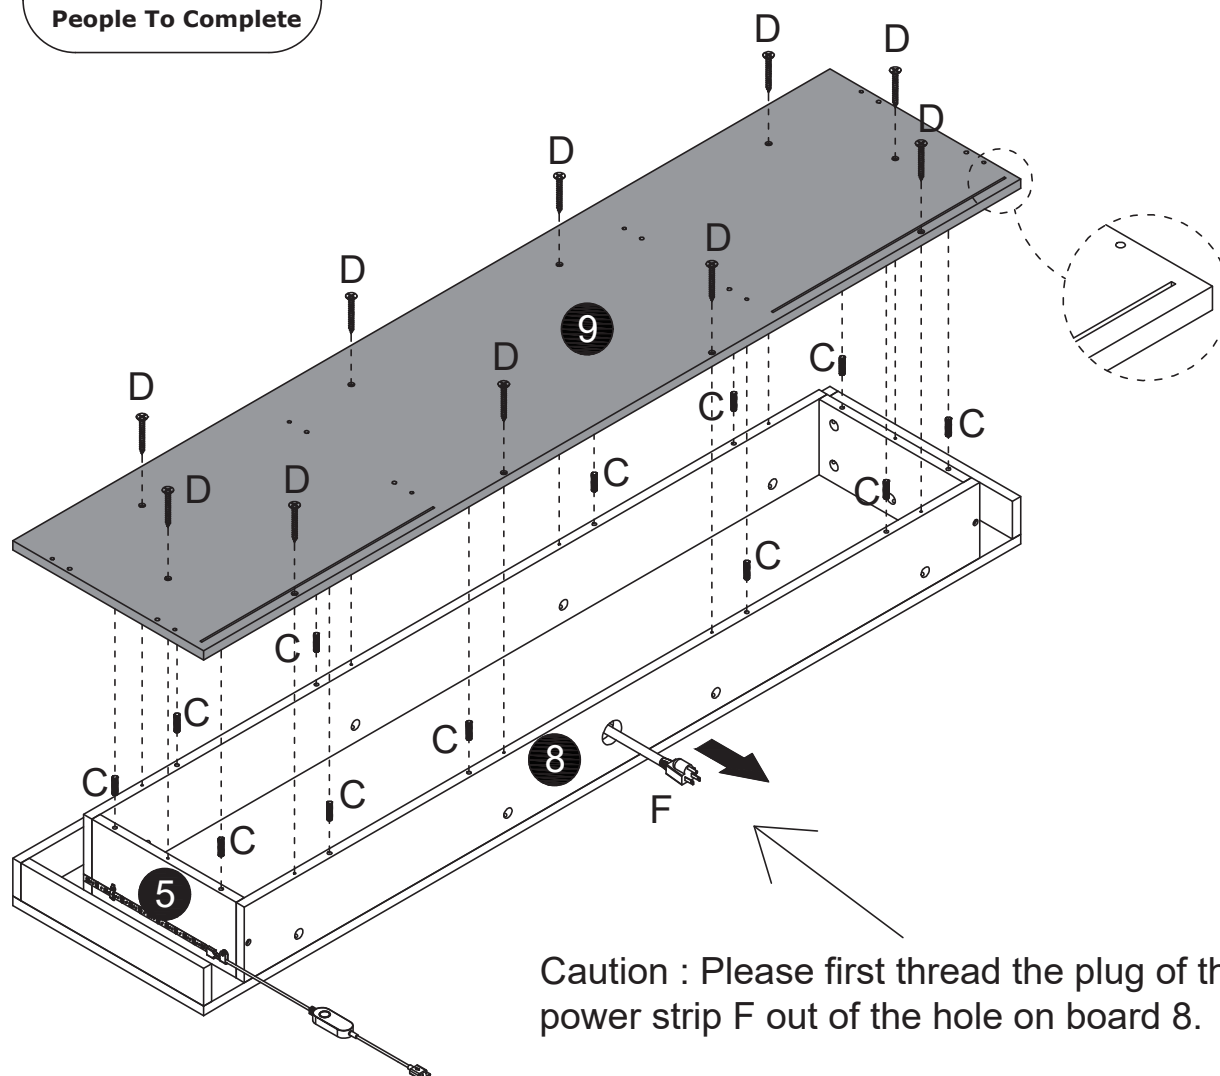



**Caution : Please first thread the plug of the
power strip F out of the hole on board 8.**

A x8

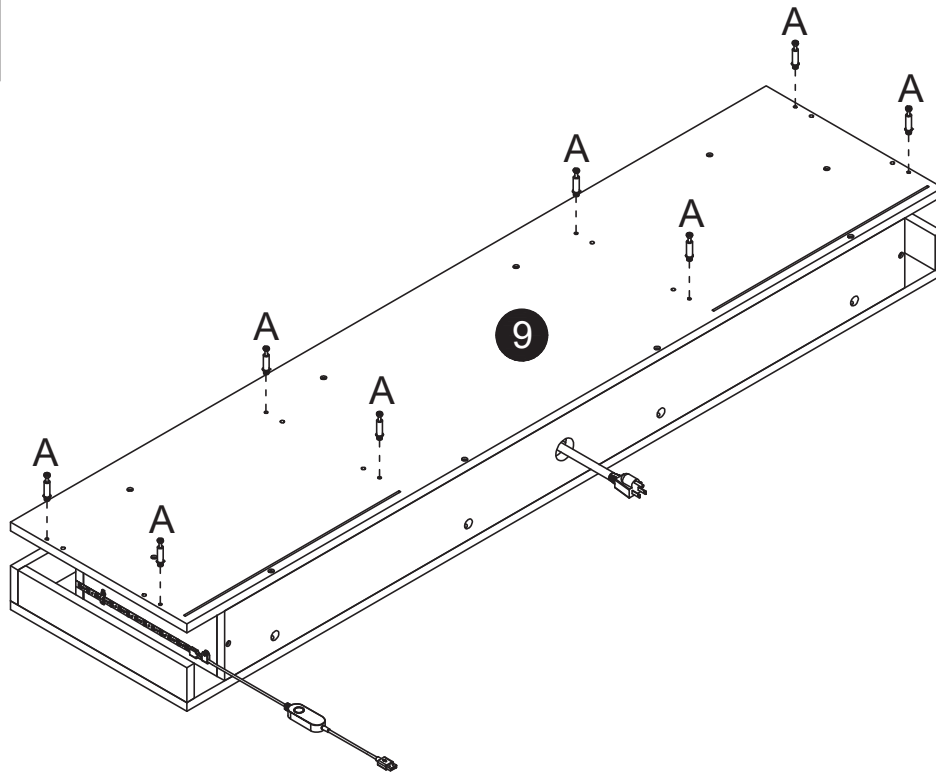

B x8

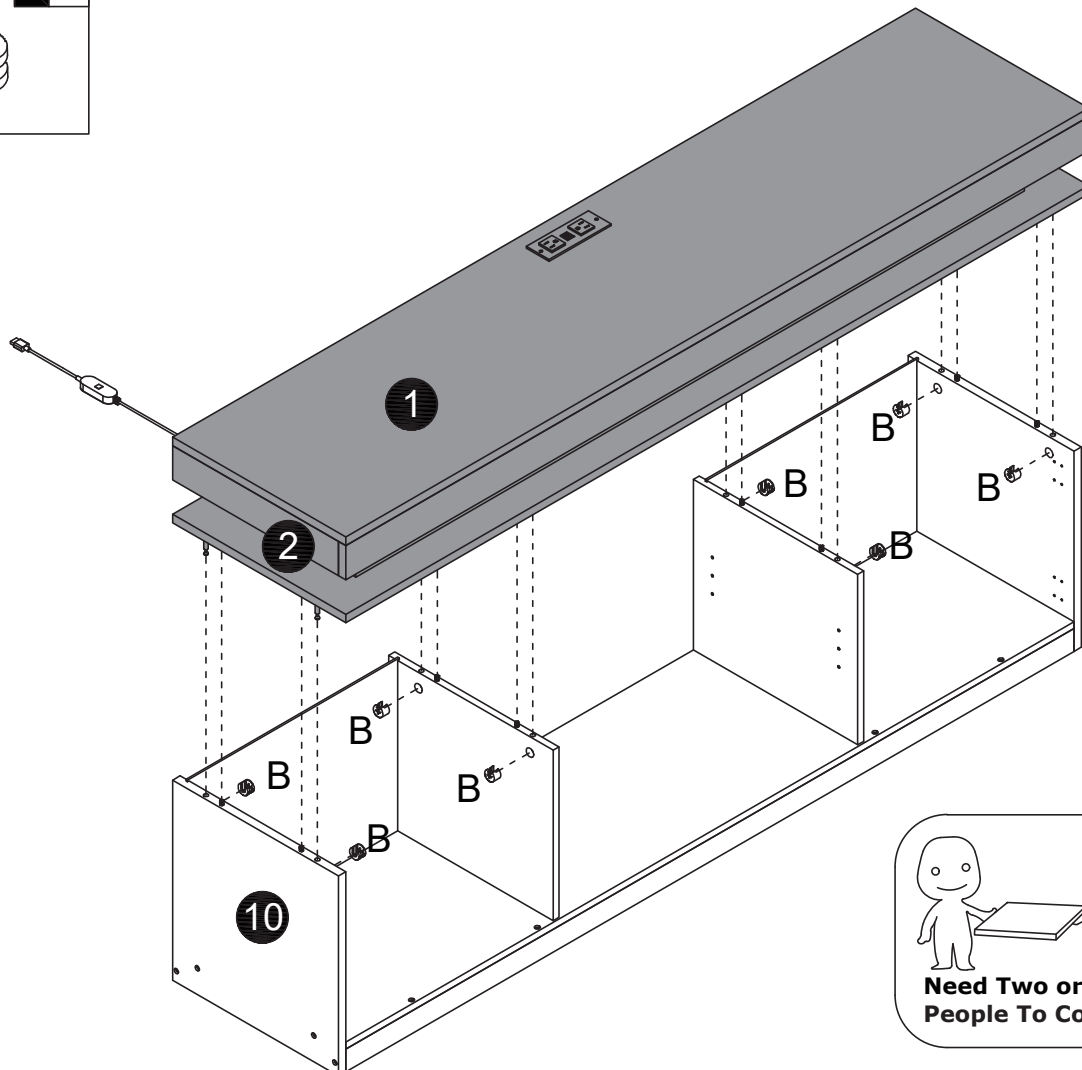



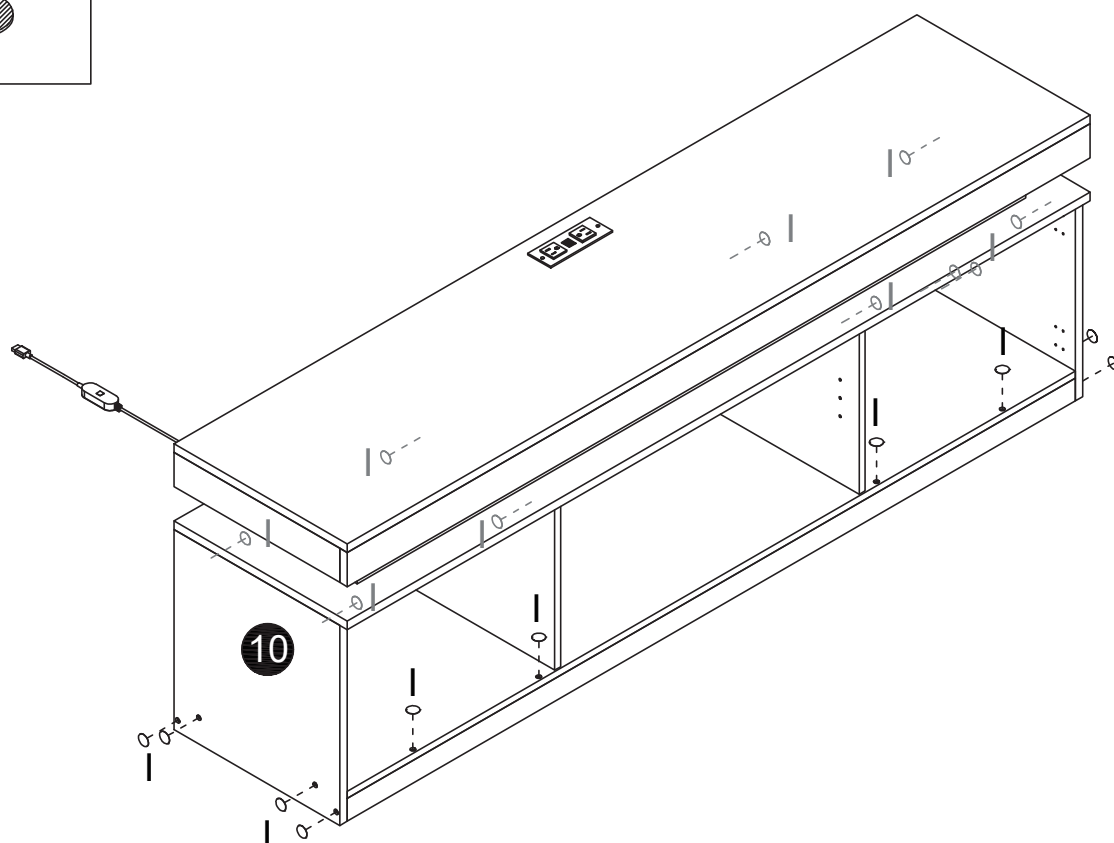





M-1



M-2

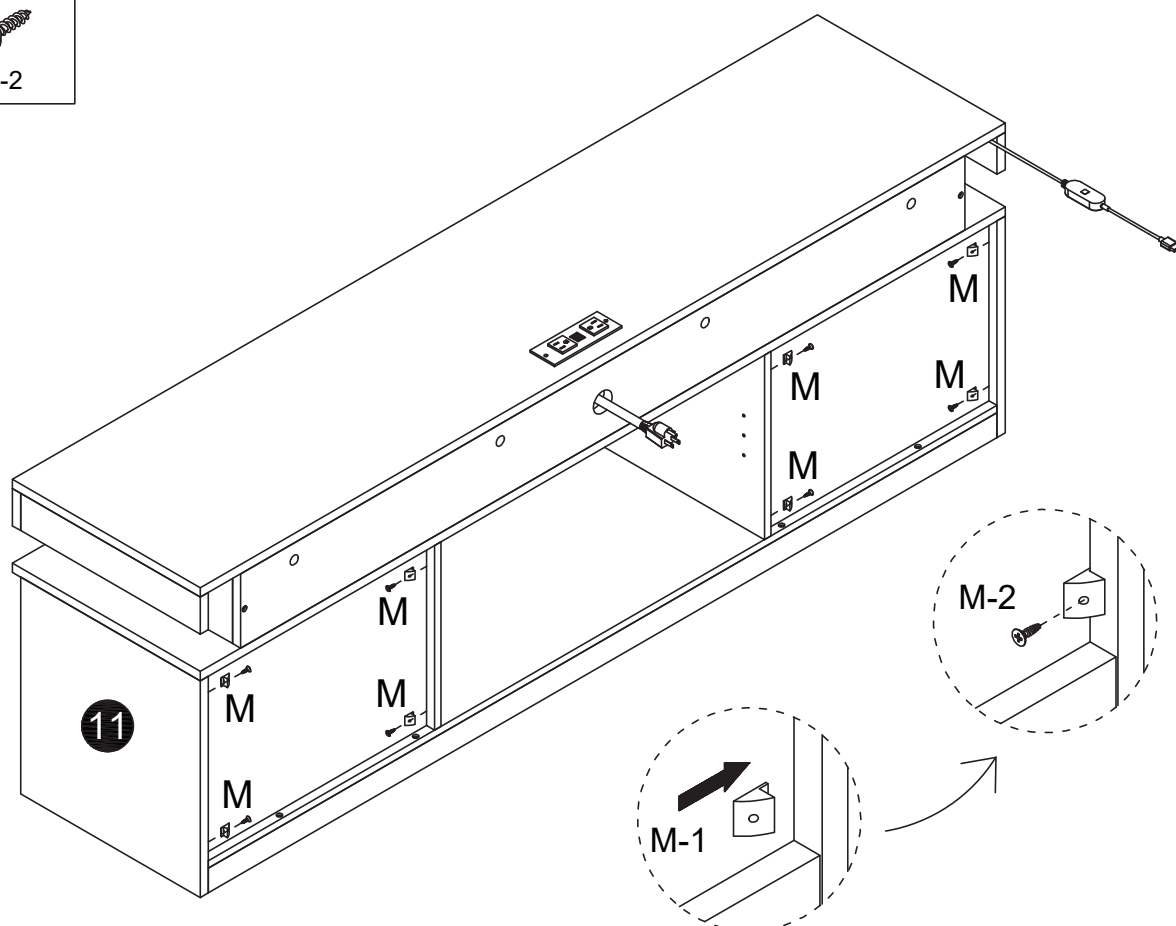


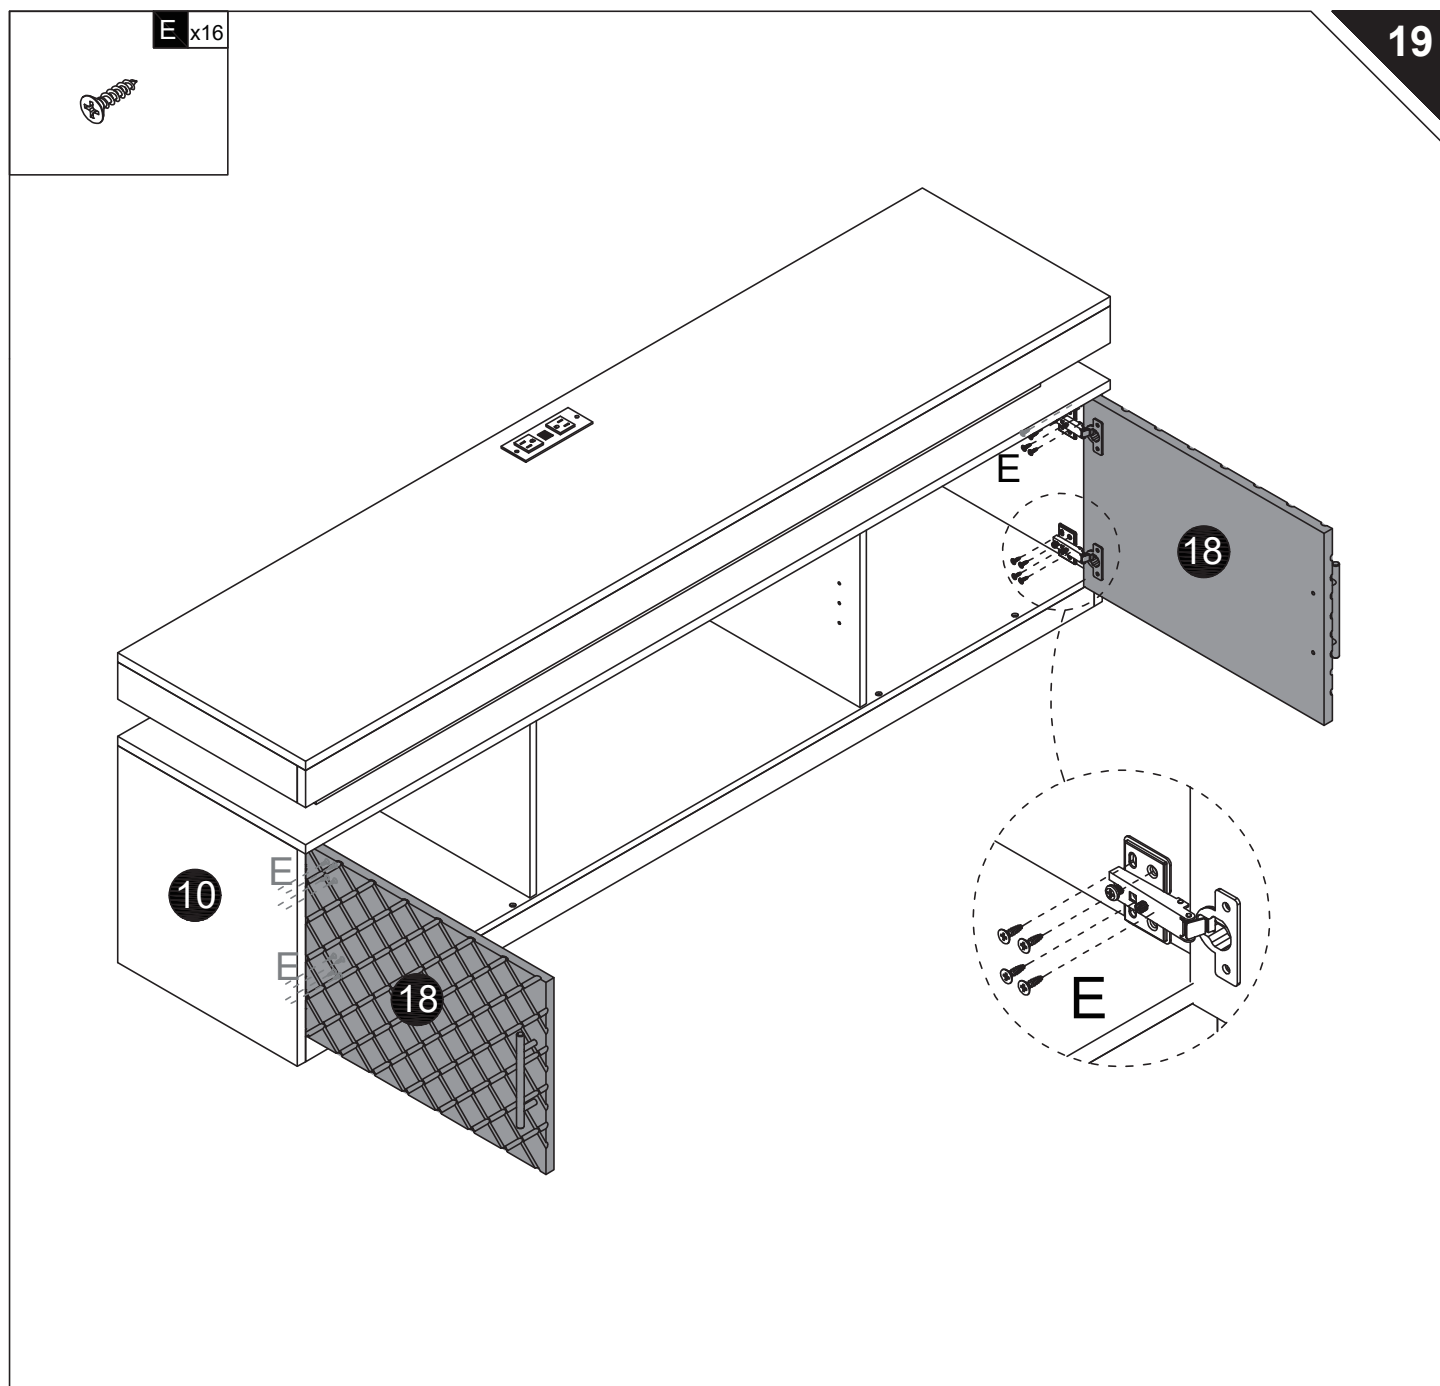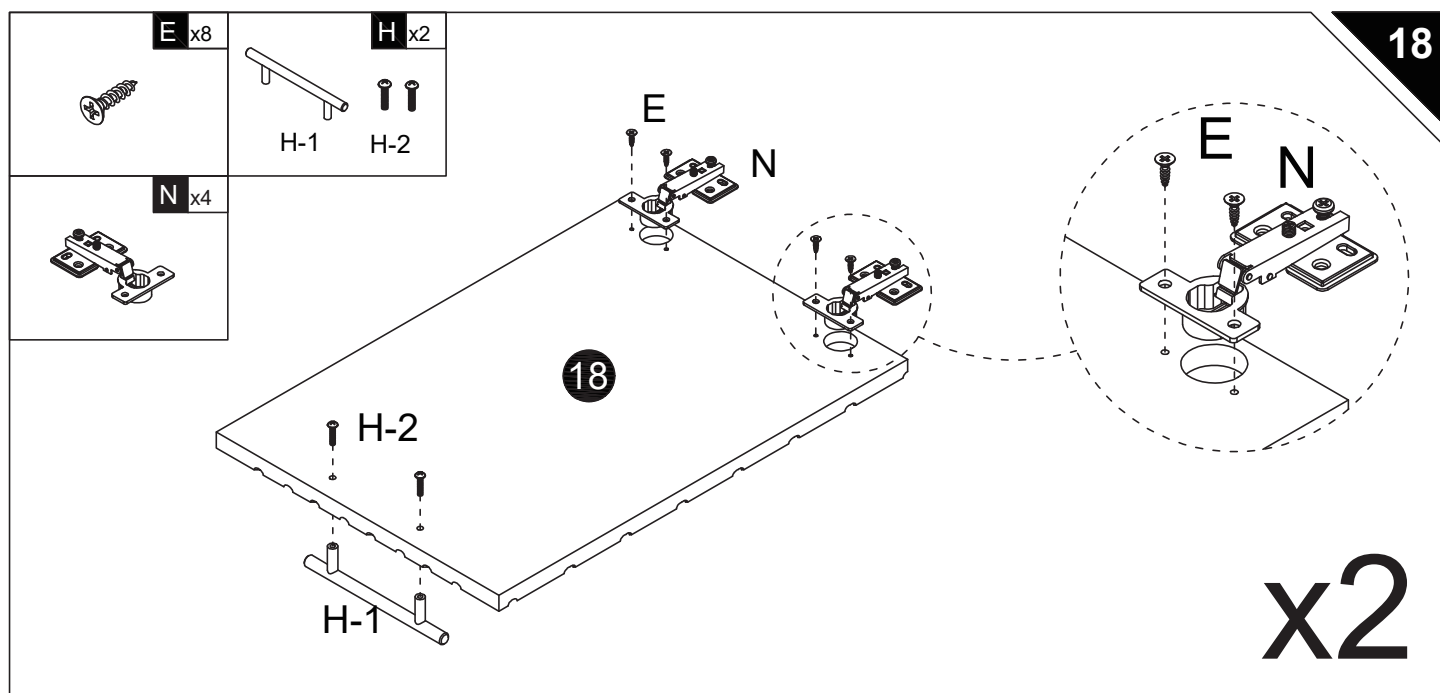

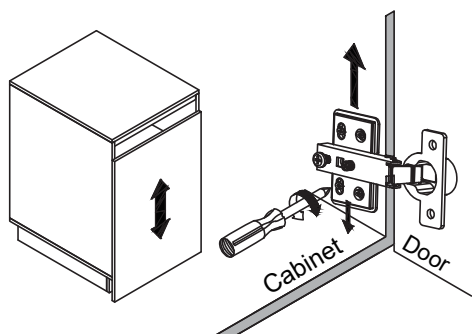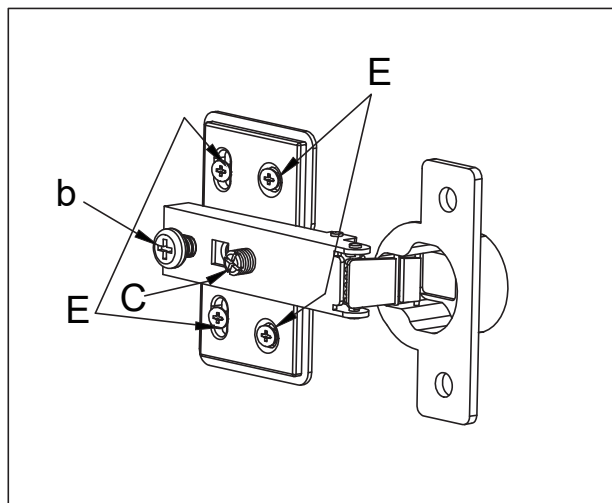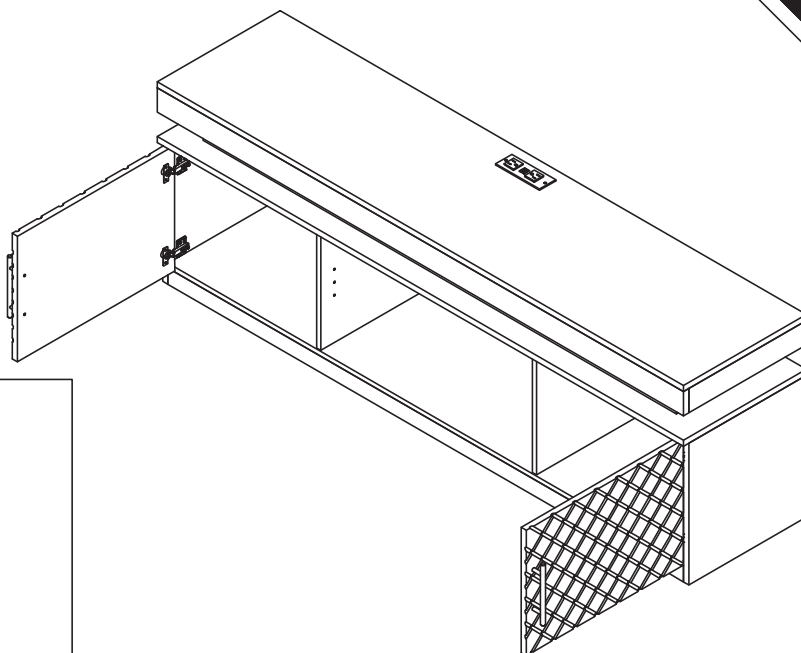


To adjust the vertical height.

Loosen the four screws "E" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

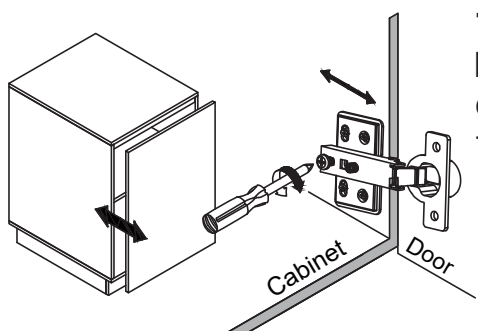

To adjust depth.

Loosen screw "b" and adjust door, if the door can not be adjusted, please loosen screw "c", then try again. Tighten screw "b" and "c".

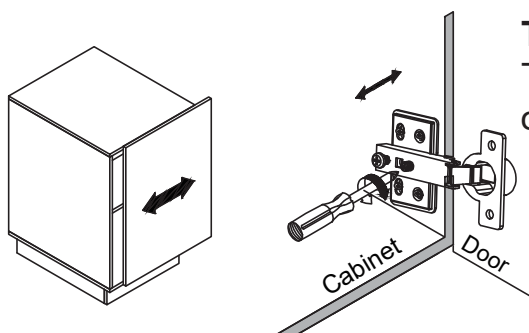

To adjust side ways.

Turning the screw "c" on BOTH hinges on each door.

O x4

