
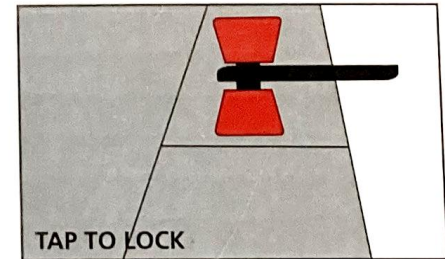
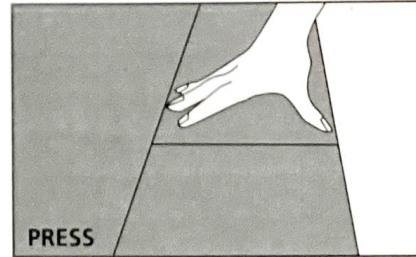


Installation instruction
VinylLocking L500


with UniFit Locking System

Unique tap & lock end joints make installation easy and fast!

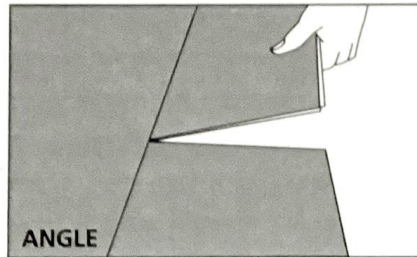


Important:


- . The floor should be laid on hard level surfaces.
 - . Don't use paper or foam under the flooring.
 - . Tolerance level of warpage is 5 mm at 2 m.
 - . Before laying the floors should be kept lying.
 - . Floors must not be exposed to heat more than up to 27° C.
- NOTE!** Strong sunlight use to be over 27° C. (ex. Storefront or glazed terrace)

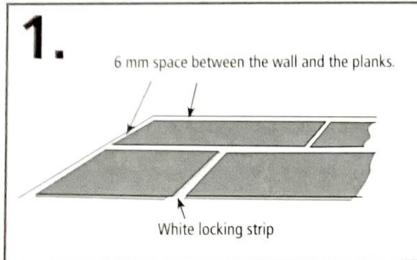


Lay a row of loose planks without securing them to each other, start in a corner. Installation from left to right are recommended. The white locking strip will be on the right side of the planks. You will install the first and second row at a time

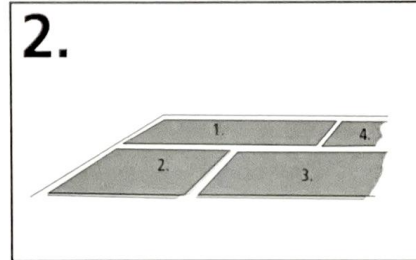


Start to lock planks #1 and #2 on the long side. Then connect the long side of plank #3 to #1 and slide the short side of plank #3 up flush to the short side of plank #2. Press from inside first, and tap into place on the seam with a mallet. Be sure to make contact on the seam hitting both planks. Tap from the insider corner where the three planks meet out to the opposite side. Run your finger over the seam to make sure the two ends of the planks are level with no high spots. Using your fingers, if you can lift up the plank you just installed, the locking mechanism is not fully engaged. Tap as needed until fully locked in place. Now install #4, 5 & 6 in the same method, and continue for the remainder of your 1st and 2nd rows. The remainder of the installation is one row at a time in the direction you are installing the floor.

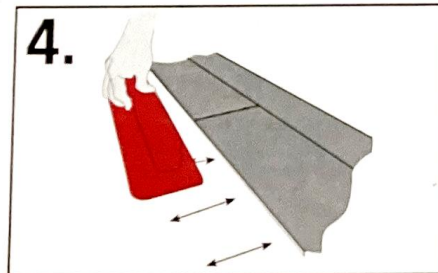

Using a tapping block on the long side of the planks helps to fully tighten the seams and make a square installation. Never use a tapping block on the white locking strip on the short side of the planks.

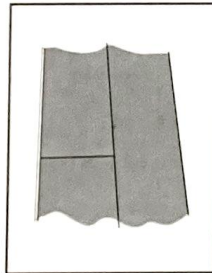

How should the seams be.

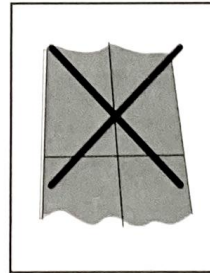

Make no seams so it forms a cross.

3.

Install going left to right with white locking strip on the left side of the planks.

this is recommended

1.	4.	6.	8.
2.	3.	5.	7.

Install going right to left with white locking strip on the right side of the planks.

8.	6.	4.	1.
7.	5.	3.	2.

