


Rattan End Side Table

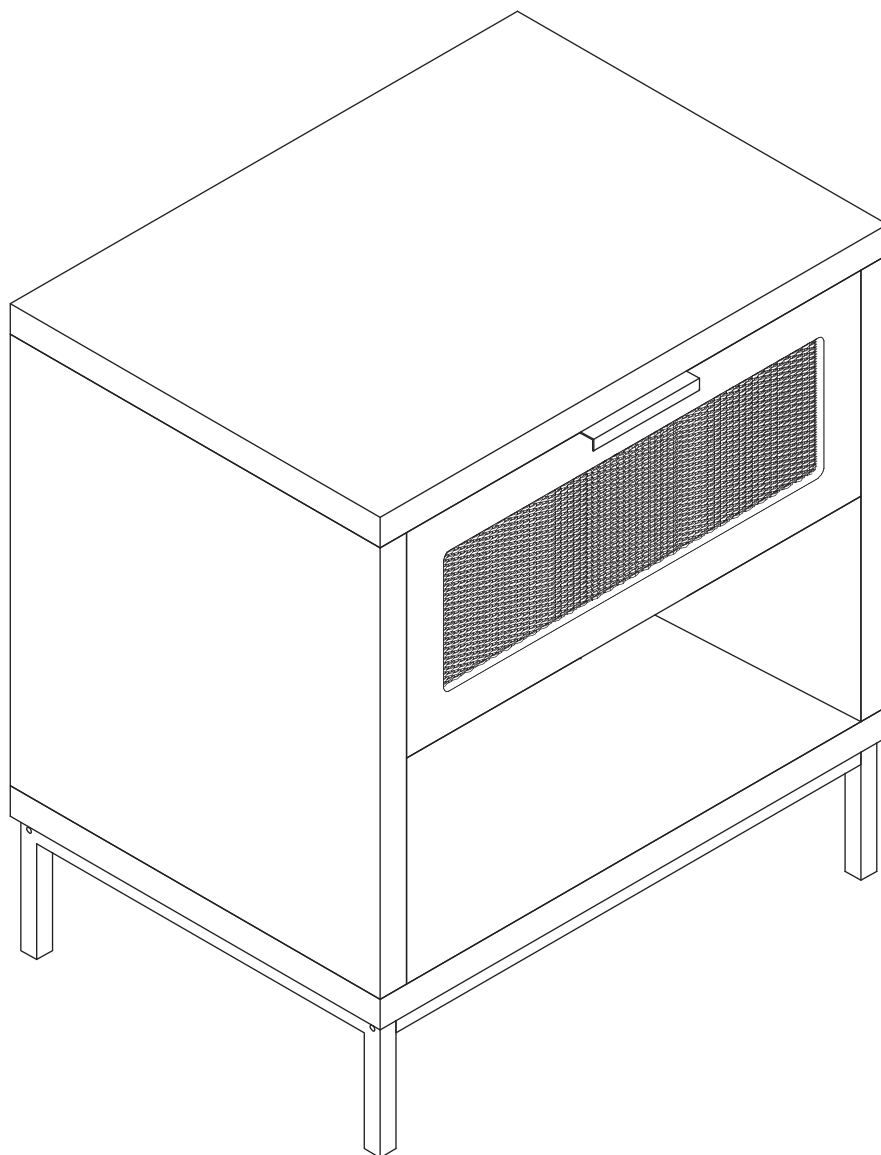

ASSEMBLY AND CARE GUIDE

1 HOUR
ASSEMBLY TIME

2 PEOPLE
REQUIRED FOR ASSEMBLY

2 x 1 m
FLOOR SPACE REQUIRED

SAFETY PRECAUTIONS

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING AND USING THE PRODUCT.

1. Please check that all parts are present, need **Phillips head screwdriver (not included)** before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly, Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes, Do not over tighten screws and bolts to avoid stripping, Do not use power tools
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non industrial product.

CARE AND CLEANING

- Please periodically check all fittings and re-tighten as necessary.
- To clean your item, please use a damp cloth and wipe clean.
- Never allow any kind of liquid to remain on your furniture. If liquid spills onto the product, please wipe clean as soon as possible.





















WARNING : ENSURE THE WALL STRAP IS ATTACHED TO
AVOID SERIOUS INJURY .

To avoid any serious or fatal injury, this product has been fitted with a wall strap to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.


Do not stand on the product. Do not climb on the product. Do not swing on the product.

READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE


HARDWARE LIST

a		b		c		d	
12 PCS		8 PCS		8 PCS		8 PCS	
e		f		g		h	
1 PC		1 PC		1 PC		4 PCS	
i		j		k		l	
1 PC		1 PC		8 PCS		4 PCS	
m		n		o		p	
1 PC		2 PCS		1 PC		1 PC	
q		r					
1 PC		1 PC					


PARTS LIST

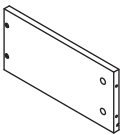


1 - 1 PC

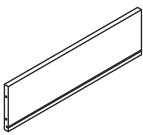


2 - 1 PC

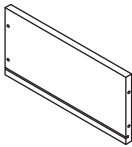


3 - 1 PC

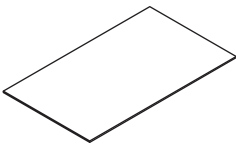


4 - 1 PC

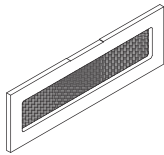


5 - 1 PC




6 - 1 PC




7 - 1 PC

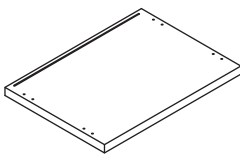


8 - 1 PC




9 - 1 PC



10 - 1 PC



11 - 2 PCS

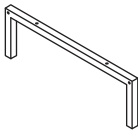




12 - 2 PCS

ASSEMBLY STEPS

STEP 1.

Fix outer drawer runners (i) to parts 6 using screws (d), as shown.



using screws (d), as shown.

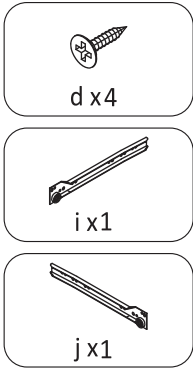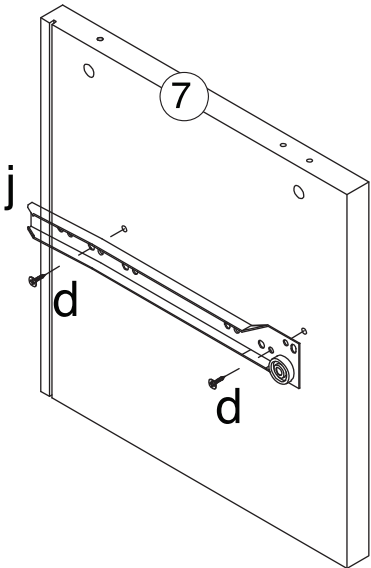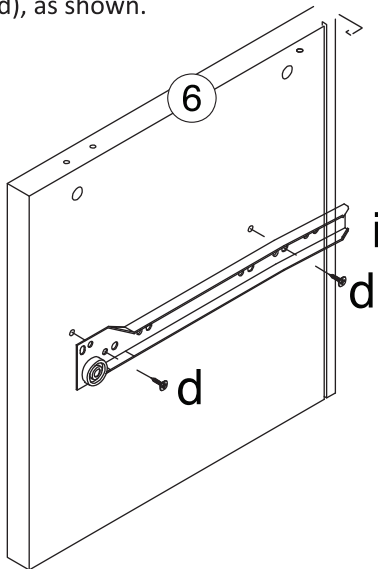

STEP 2.

Fit wooden dowels (k) to parts 6 and 7.


Fix parts 6 and 7 to part 8 using screws (h), as shown.

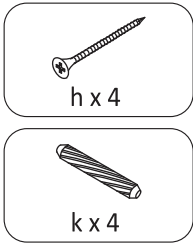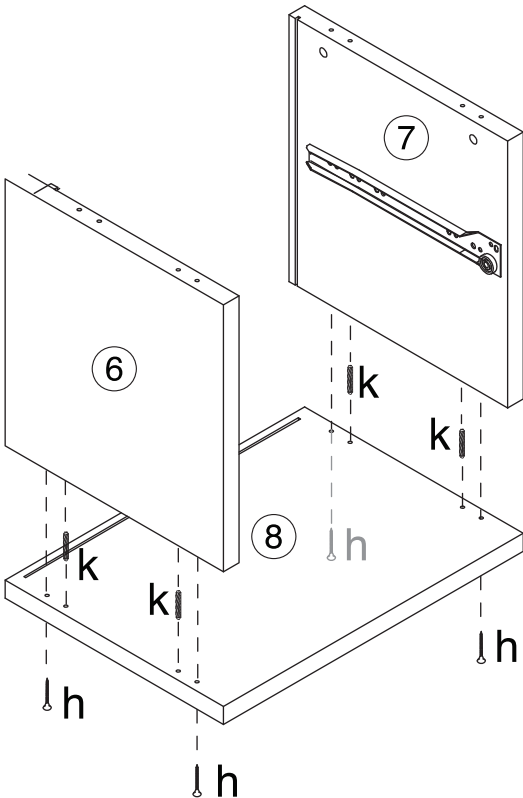

ASSEMBLY STEPS


STEP 3.

Fix Quickfit screw c to part 10.
The strap should be move to step 9.

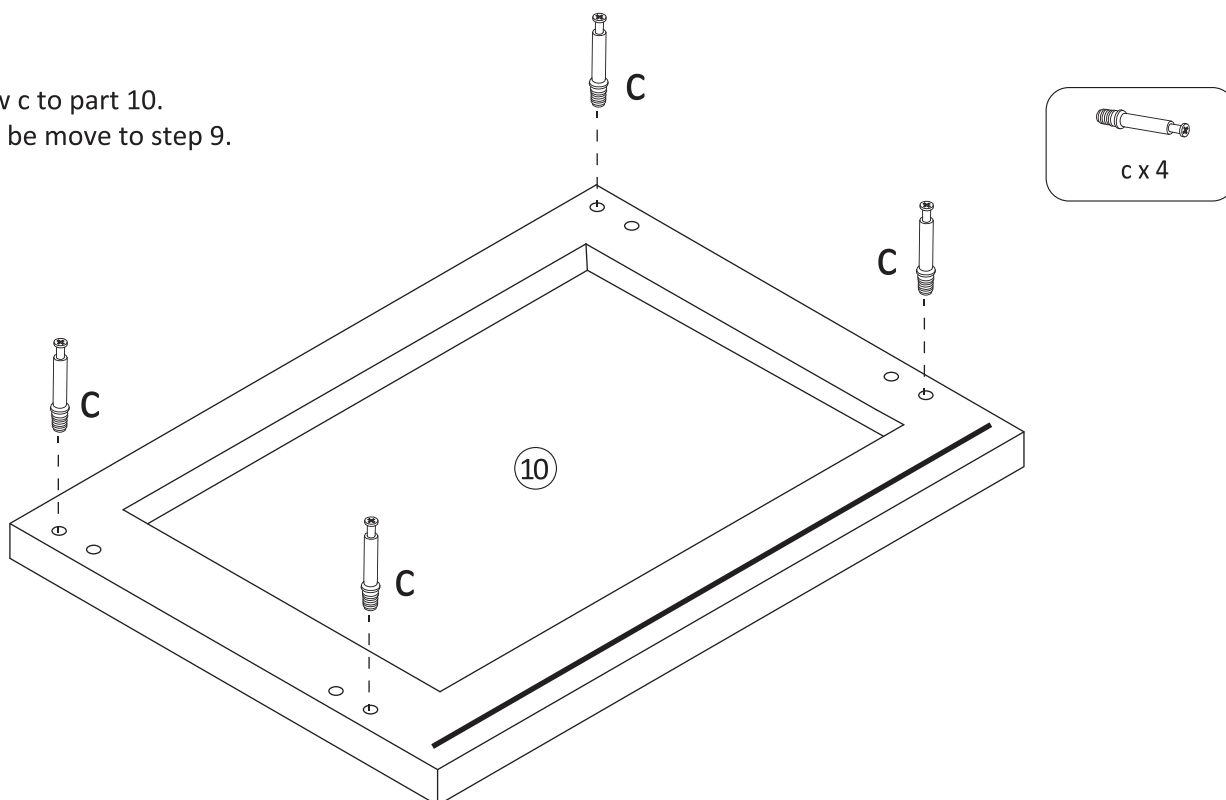

STEP 4.

Slide part 9 into grooves of parts 6 and 7,
as shown.

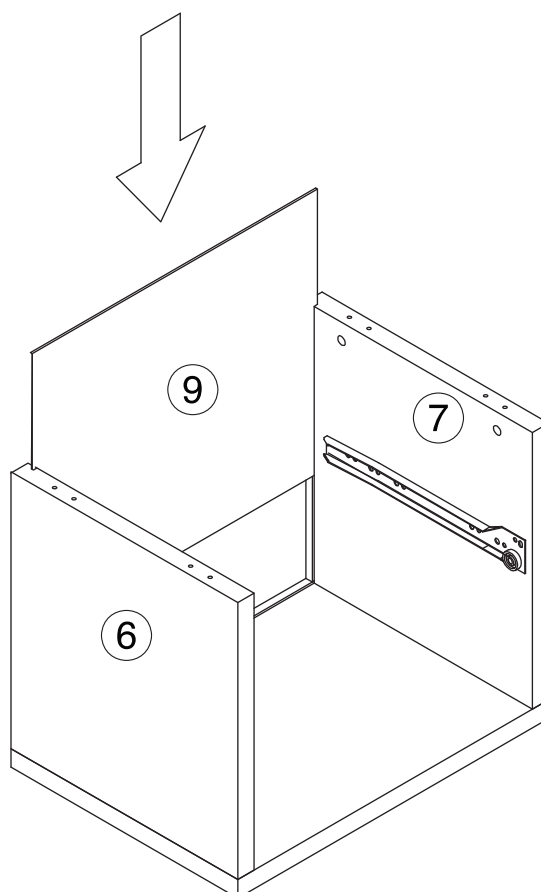


ASSEMBLY STEPS

STEP 5.

Insert quickfit screws (c) and wooden dowels k and cam locks b to part 6 and 7.

Fix parts 6 and 7 to part 10, as shown.

Turn cam locks clockwise to tighten.

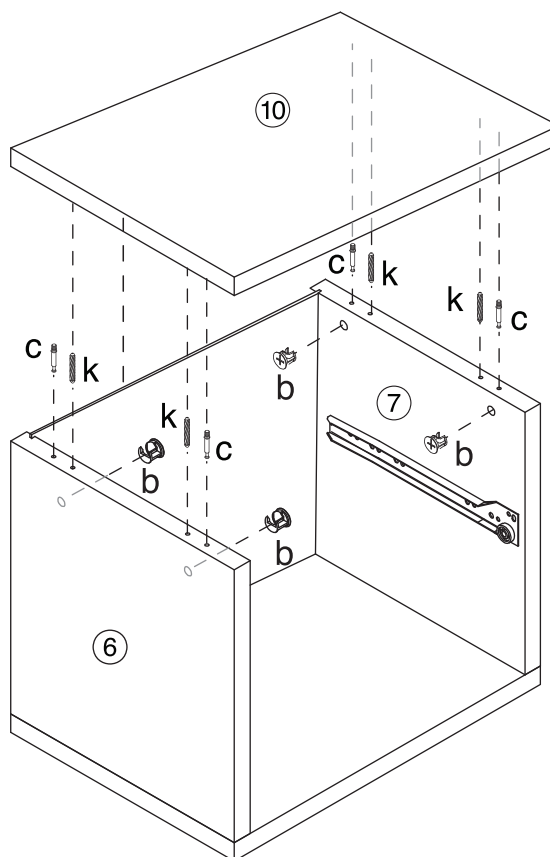


b x 4



k x 4

STEP 6.

Fix parts 12 to parts 11 using bolts (l) and allen key (m), as shown.

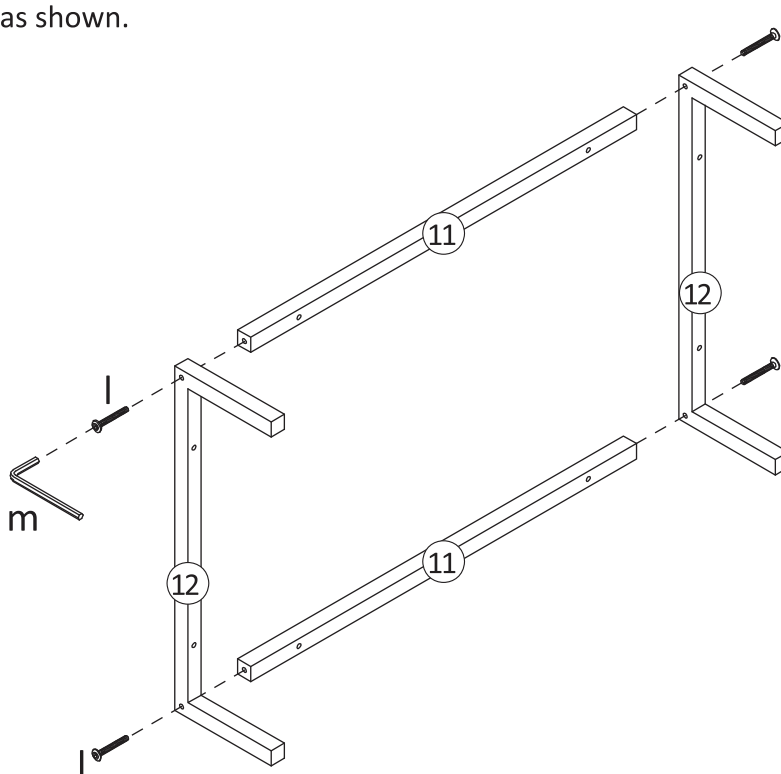

l x 4





m x 1

ASSEMBLY STEPS

STEP 7.


Secure parts 11 and parts 12 assembled unit using screws (a), as shown.

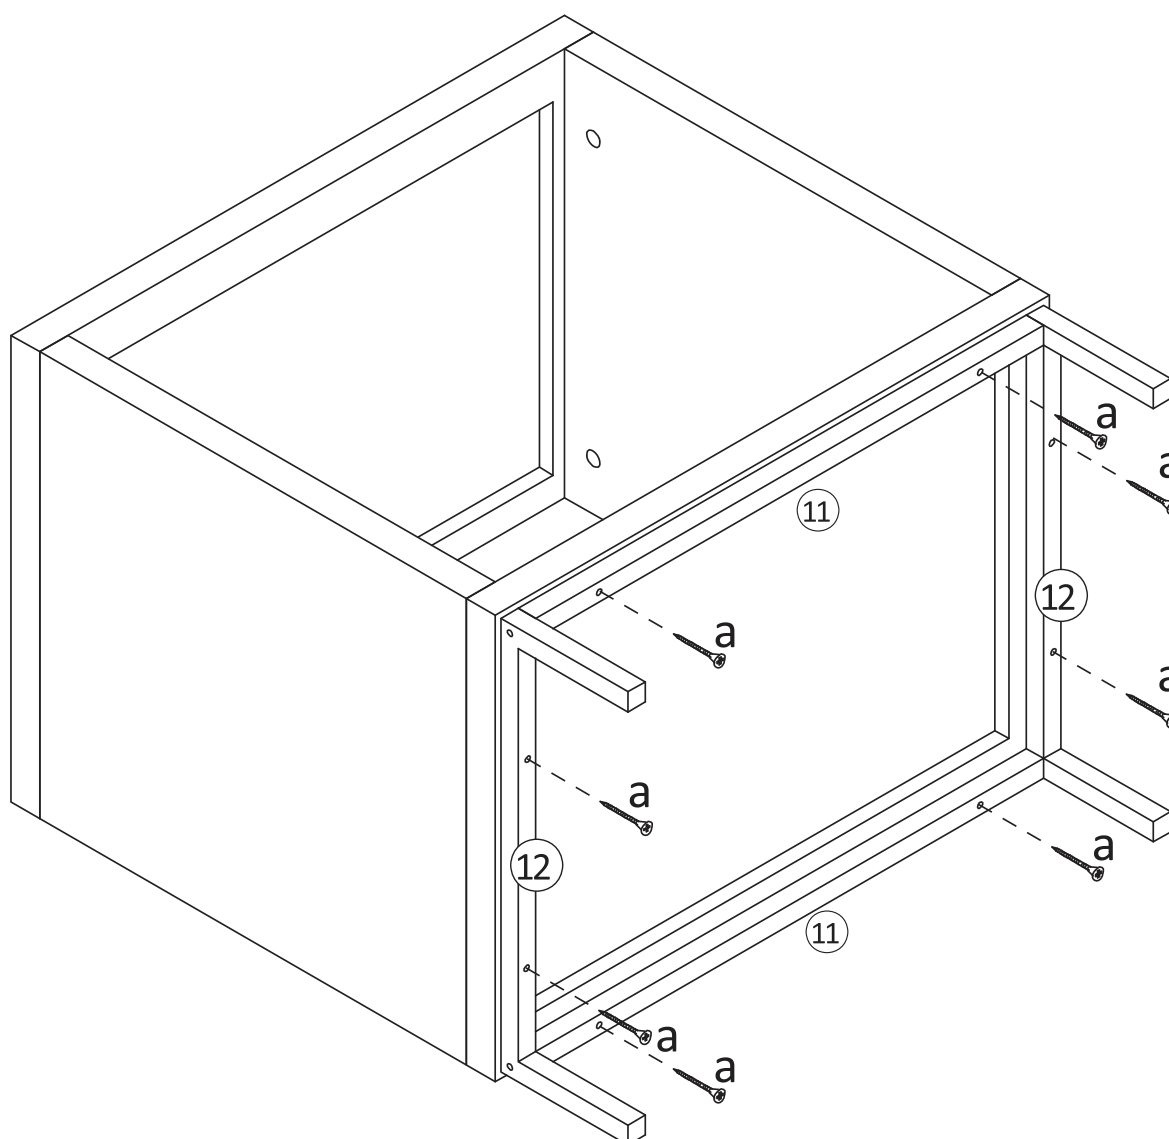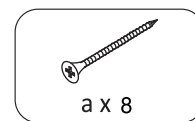

ASSEMBLY STEPS

STEP 8.

Fix stap q to part 10 with screws.

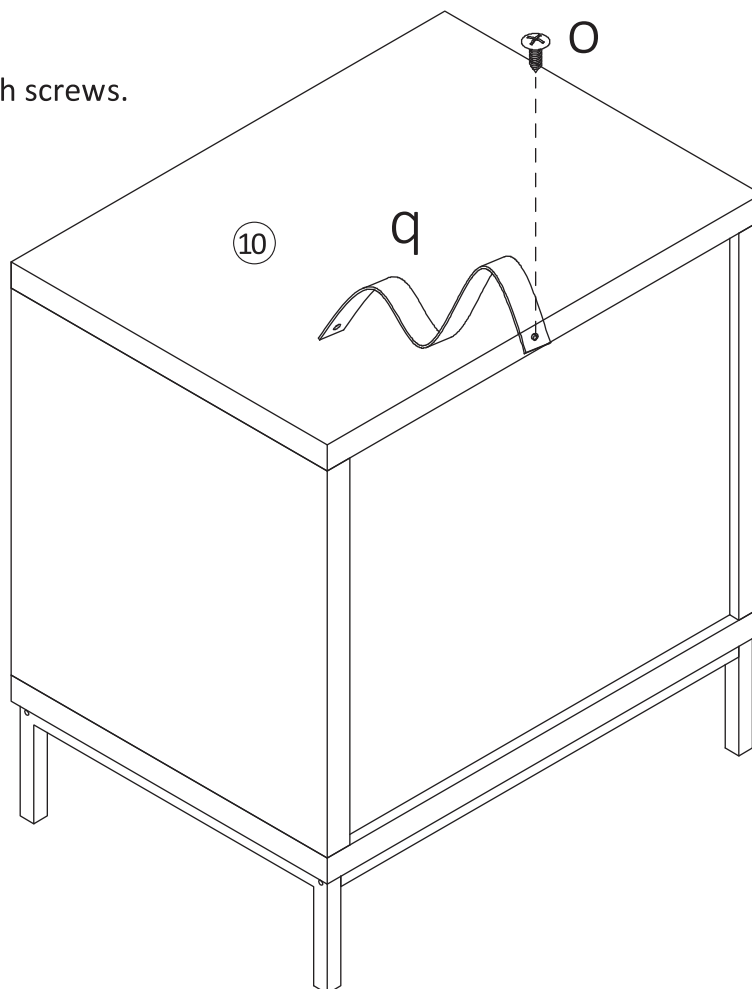

o x 1




q x 1



STEP 9 .

Fix parts 1 and 3 to part 2 using screws (a), as shown.

Slide part 4 into grooves of parts 1, 2 and 3, as shown.



a x 4

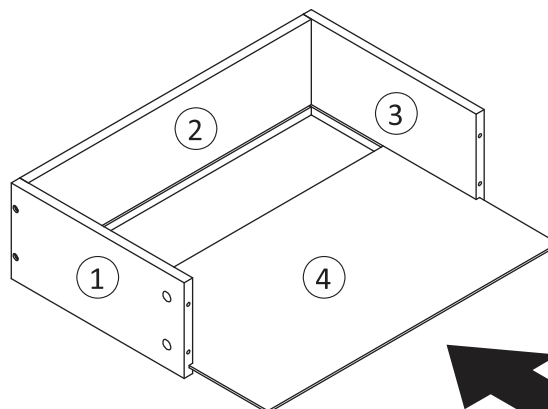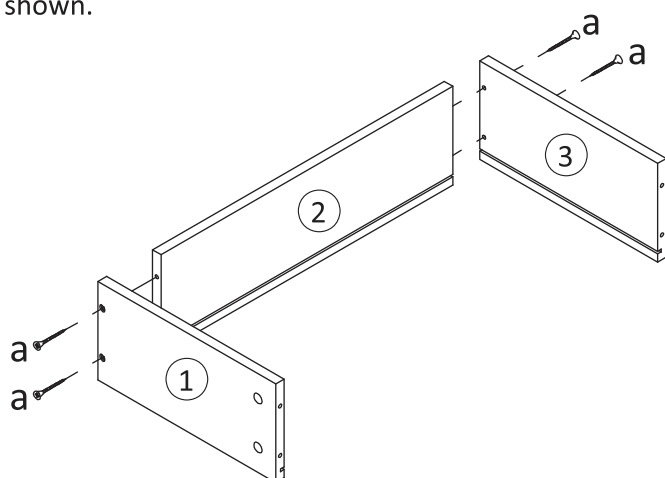

ASSEMBLY STEPS


STEP 10.

Insert quickfit screws (c) to part 5.

Insert cam locks (b) to parts 1 and 3.

Fit part 5 to parts 1 and 3.

Turn cam locks clockwise to tighten.

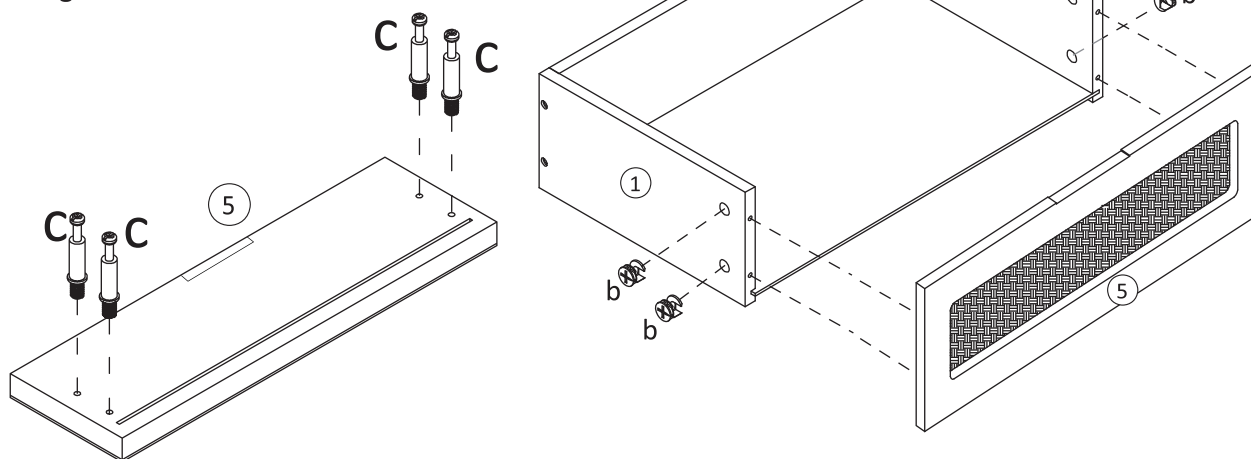


b x 4

c x 4

STEP 11.

Fix drawer handle (e) to part 5 using screws (d), as shown.

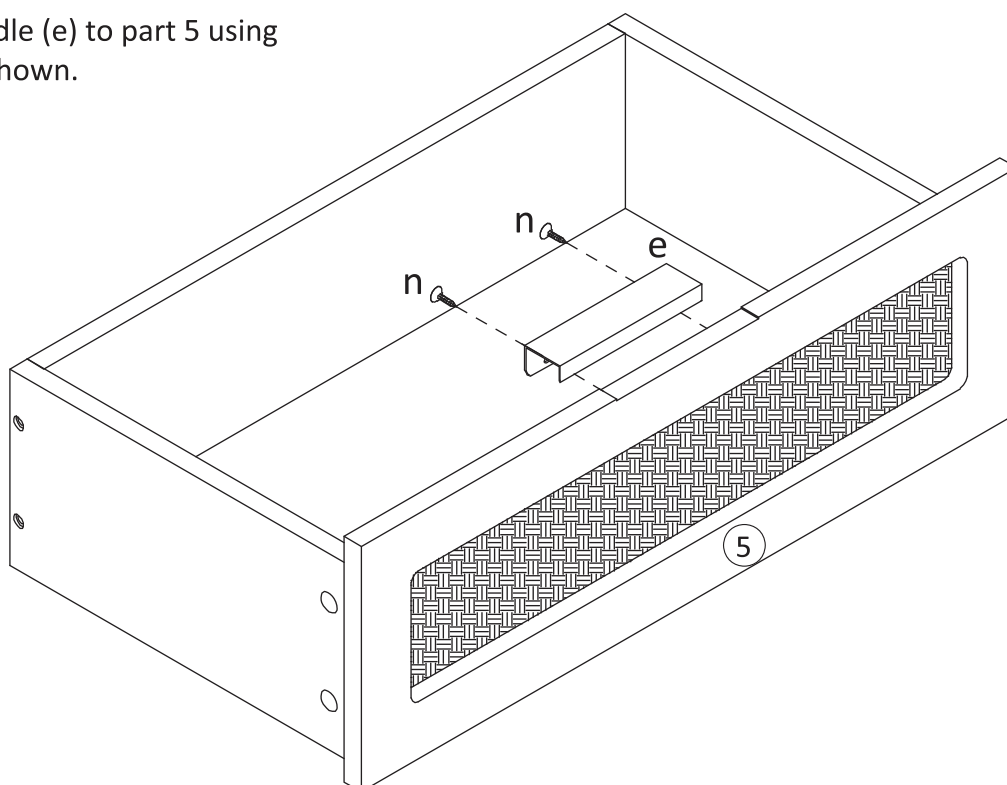


n x 2

e x 1

ASSEMBLY STEPS

STEP 12.

Fix outer drawer runners (f) and (g) to parts 1 and 3 using screws (d), as shown.

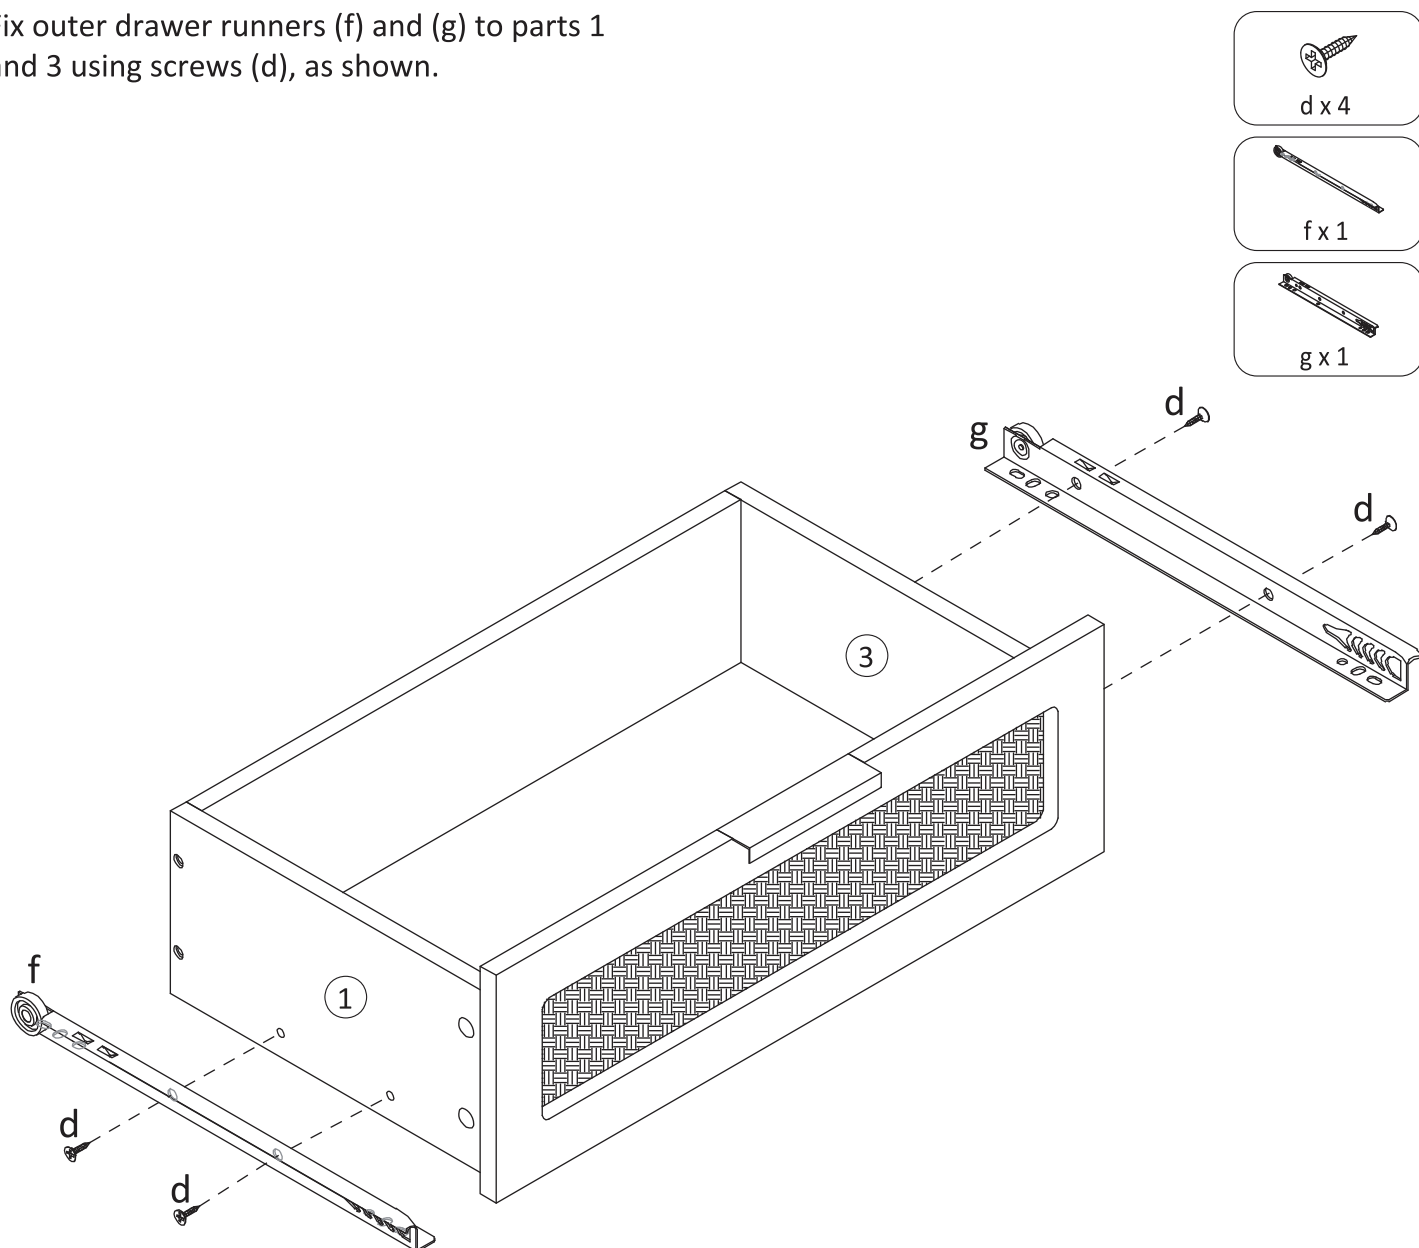

ASSEMBLY STEPS

STEP 13.

Slide drawers into assembled unit, as shown.

Attach your bedside table to the wall by wall plug (p), wall strap (q) and fixing screws (r), as shown.




p x 1



q x 1



r x 1

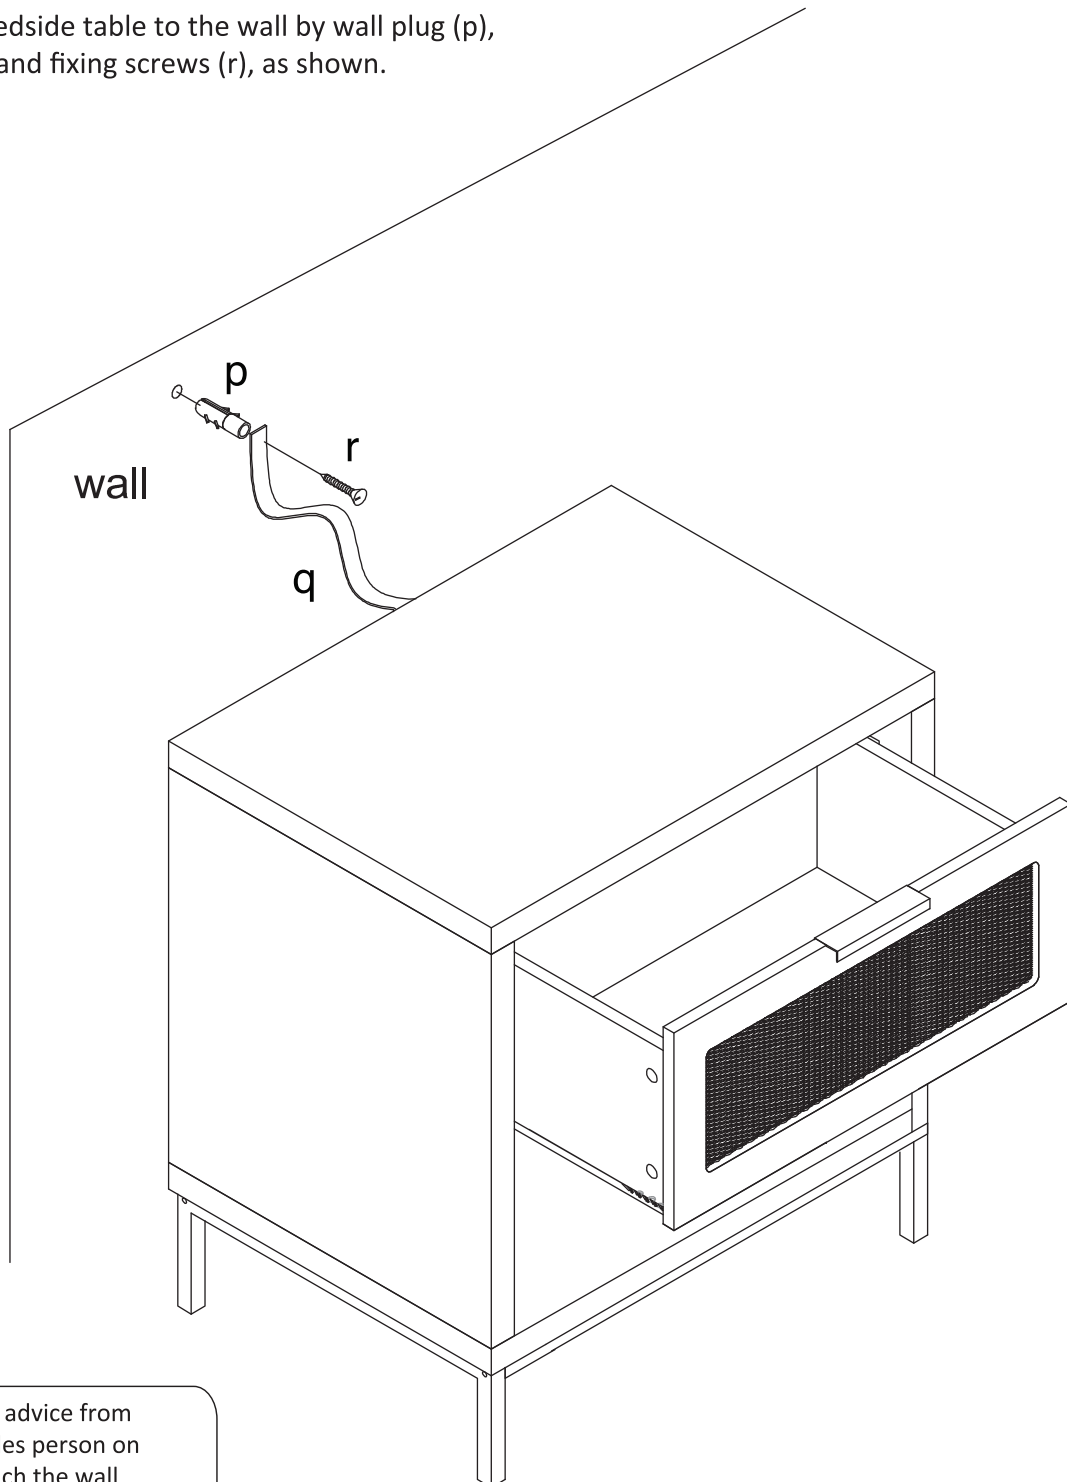

If unsure seek advice from a qualified trades person on how to attach the wall fixtures to your specific wall.

Your headboard is ready for use.

Please note: Maximum recommended weight is 10kg.

WALL FIXING GUIDE

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice. Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



Tips & Tricks


Make sure that the hardware used is suitable for supporting your unit.

Please consult a qualified trades person if unsure.

- ✓ If you are unsure, please select a larger screw and wall plug.
- ✓ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ✓ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ✓ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

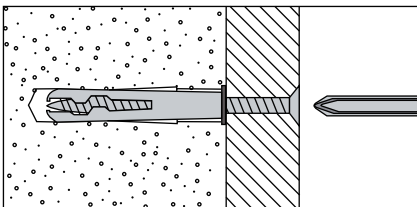


1. General Purpose Wall Plug

Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

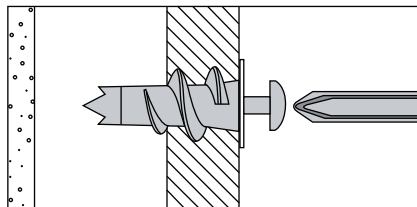


2. Plasterboard Wall Plug

For use when attaching light loads onto plasterboard partitions.

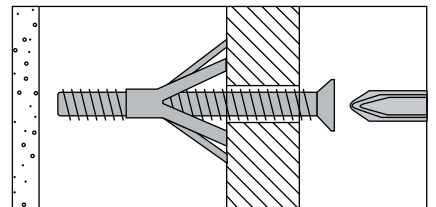


3. Cavity Fixing Wall Plug

For use with plasterboard partitions or hollow wooden doors.

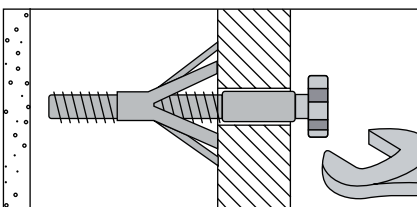


4. Cavity Fixing Heavy Duty Wall Plug

For use when fitting or supporting heavy loads such as shelving and wall cabinets.

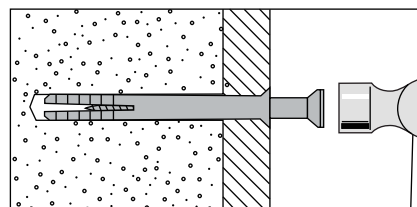

5. Hammer Fixing Wall Plug

For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

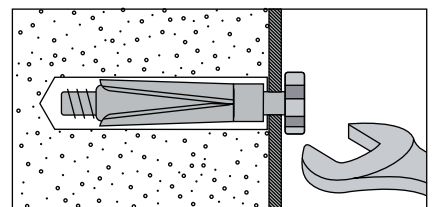

6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.