








ASSEMBLING INSTRUCTION

1-2.x1 	3-4.x1 	1-3.x1 	2-4.x1 	6.x2 		
A.x1 	B.x1 	C.x4  M6*45mm	D.x4  M6*30mm	E.x8  M6*30mm	F.x4 	G.x1 


Step1

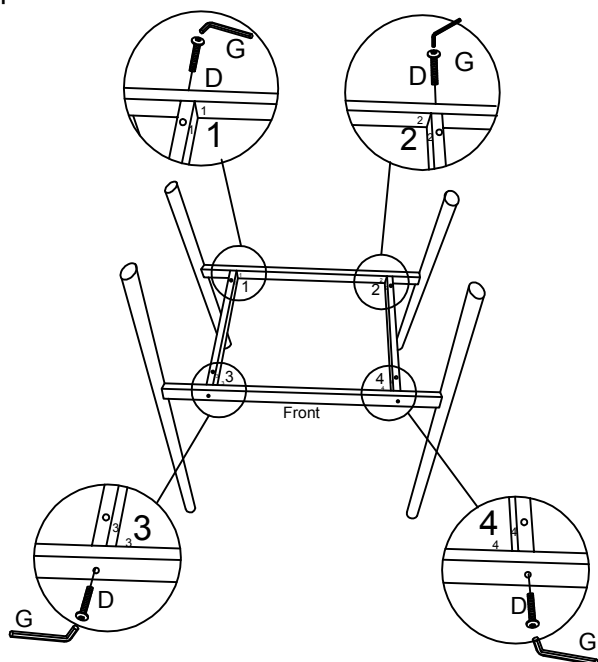


Step2

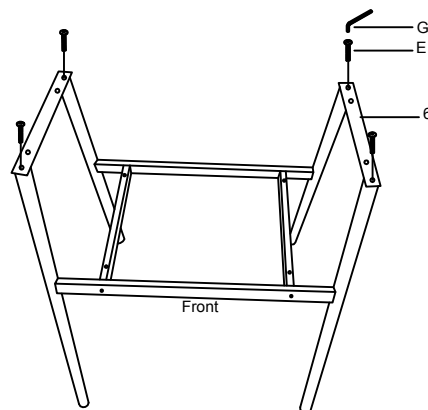


Step3

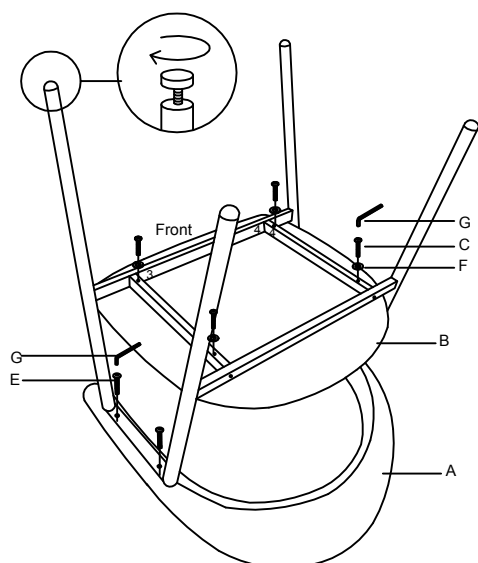


Step4








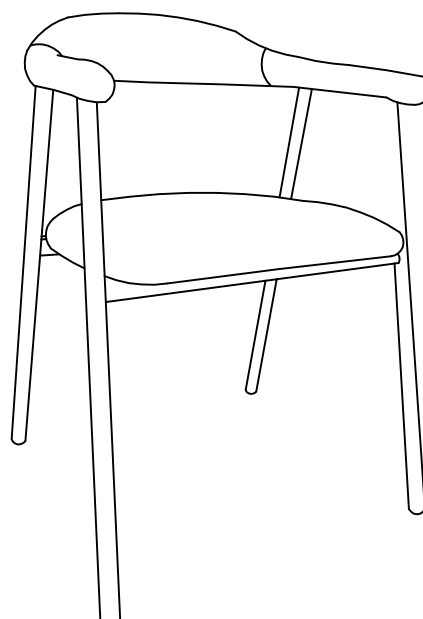


ASSEMBLY INSTRUCTION

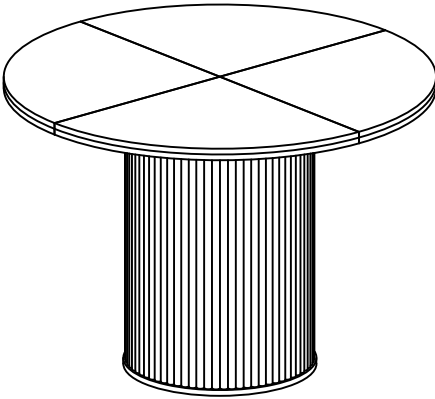


A  6*13 24pcs	B  8*30 4pcs	C  Ø25 6pcs	D  8*18 24pcs	E  M5 1pcs	F  4pcs	G  8*20 4pcs
--	---	--	--	--	--	---

H  6*20 16pcs
--

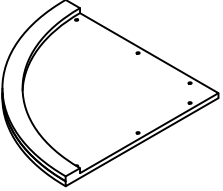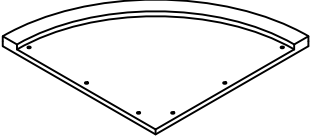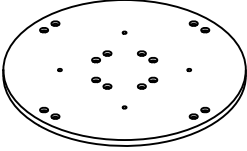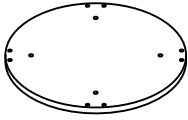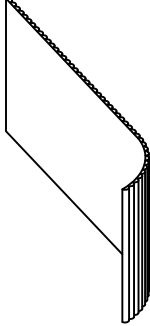
①  2pcs	②  2pcs	③  1pcs
④  1pcs	⑤  1pcs	⑥  1pcs
⑦  1pcs	⑧  4pcs	

ASSEMBLY INSTRUCTION


STEP1

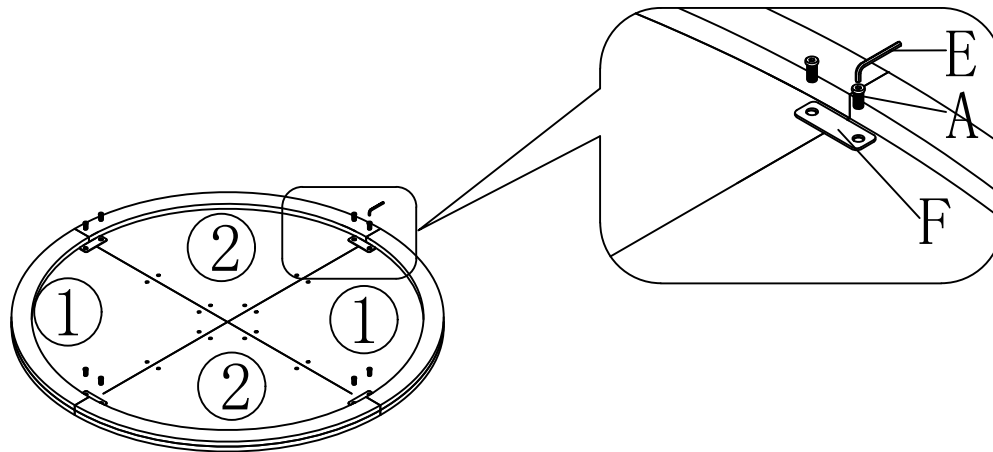

STEP2

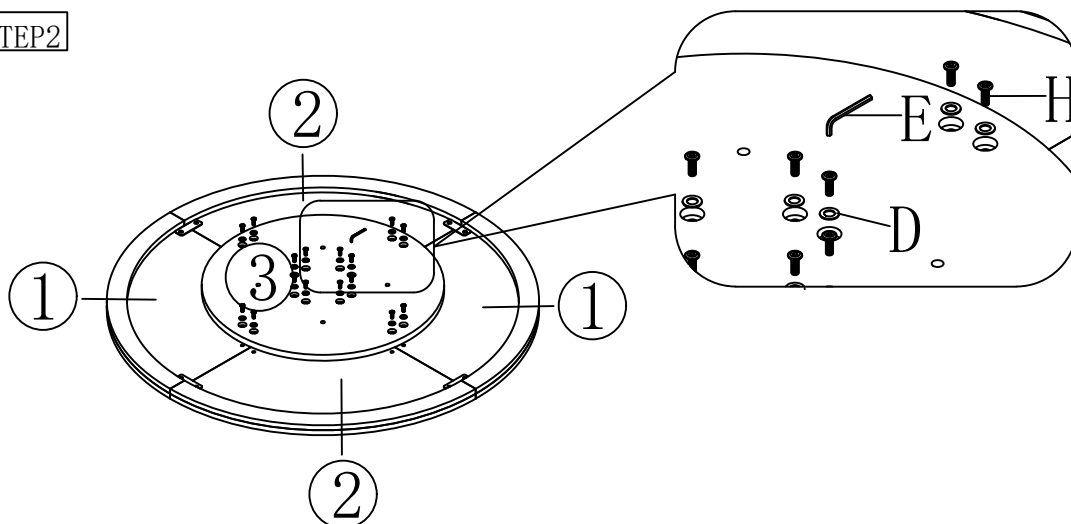


STEP3

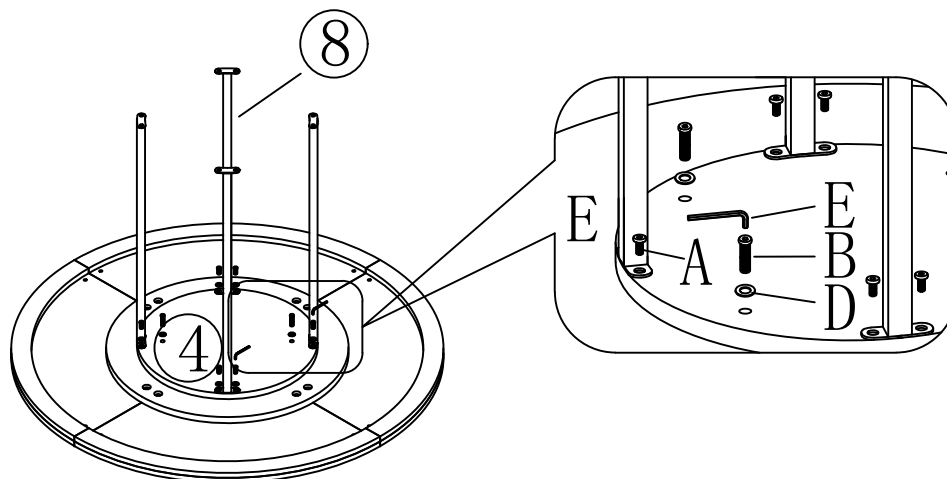


ASSEMBLY INSTRUCTION

STEP4

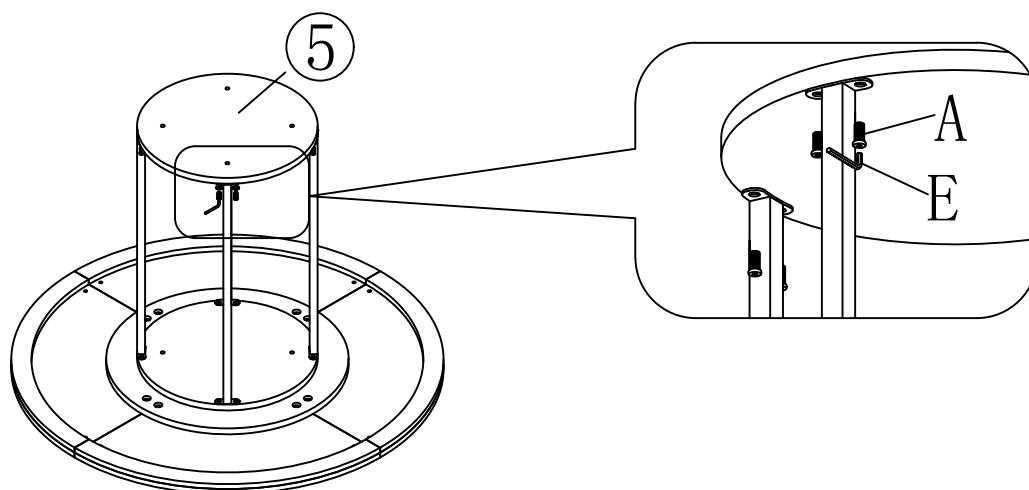


STEP5

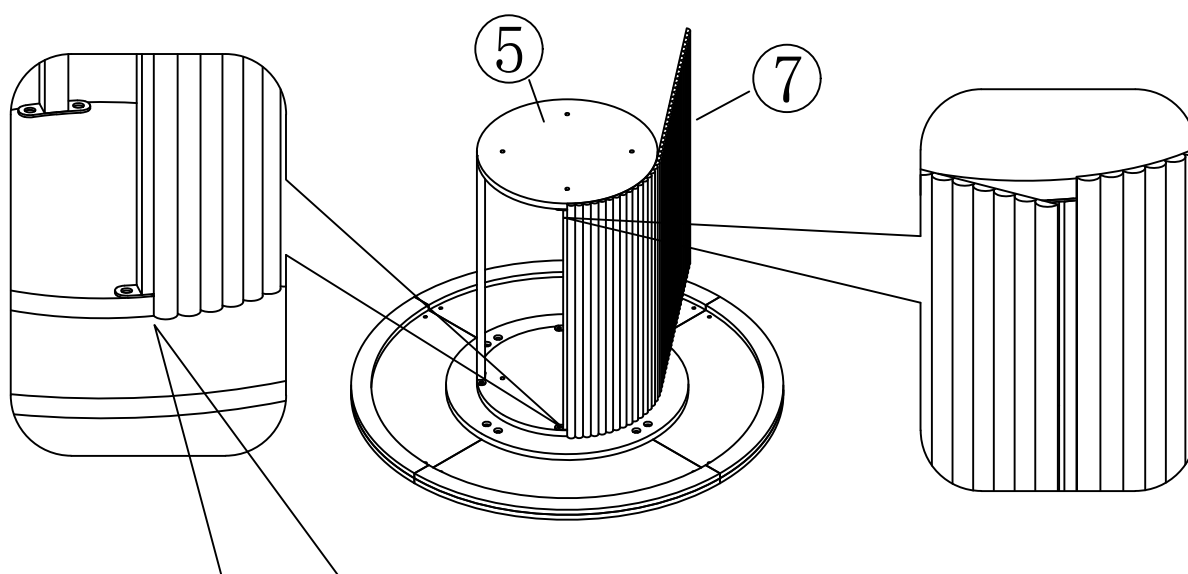

Align the middle part of the link bar when the coaming board is surrounded. If there is a gap after the whole encirclement, please open it and straighten it and re-wrap it.

STEP6

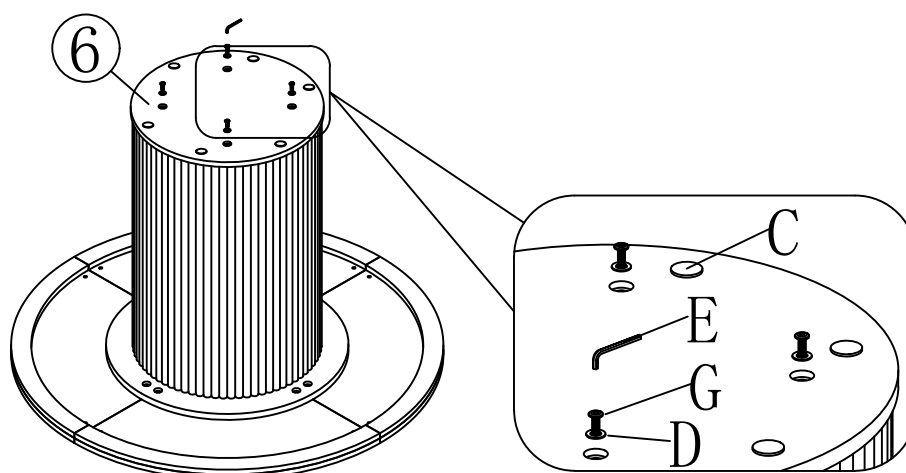

Location of hardware package



14