





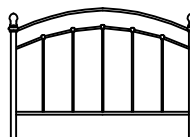
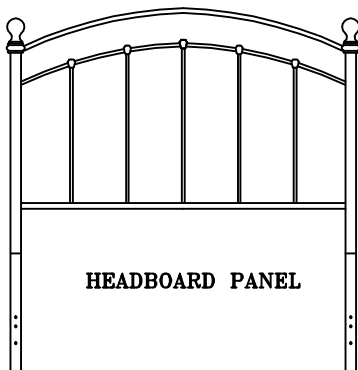


Part List

HEADBOARD CARTON	
(7) HEADBOARD PANEL	
HARDWARE BAG FOR HEADBOARD ATTACHMENT TO FRAME	
(1) 1/4-20 X 2" COUNTER SUNK ALLEN HEAD SCREW-4	
(3) 1/4-20 HEX NUT-4	
(4) 1/4" ID X 5/8" OD FLAT WASHER-4	
(5) ALLEN WRENCH	
(6) LEG EXTENSION-2	

1	2	3	4
			
5		6	
			
7			
			

PRODUCT FULLY ASSEMBLED



Instruction Sheet

SAVE ALL PACKAGING MATERIALS UNTIL PRODUCT IS FULLY ASSEMBLED. HARDWARE AND SMALL PIECES MAY NOT BE SEEN AND BE ACCIDENTALLY DISCARDED WITH PACKAGING MATERIALS.

FIGURE 1


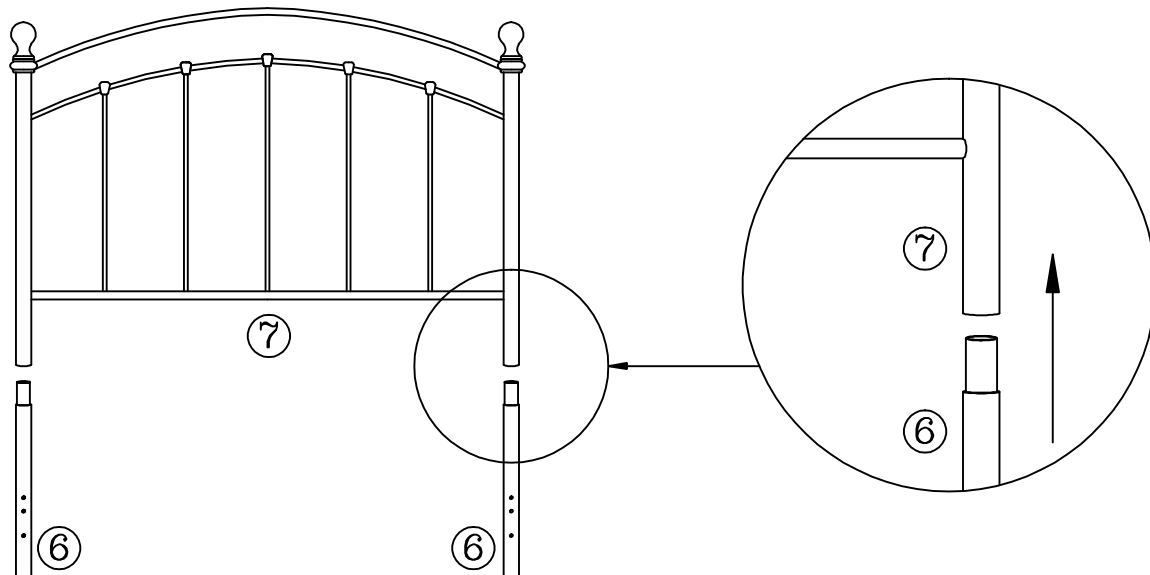


FIGURE 2

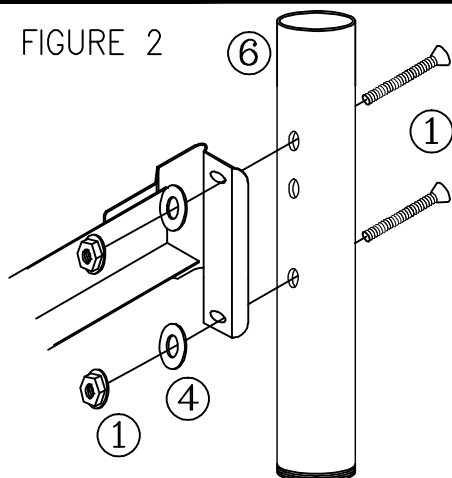

Step 1

- Align top reduction of extension legs (6) with bottom of headboard posts. (See Figure 1) Make sure the 3 holes on extension legs are perpendicular to headboard panel.
- Now carefully insert extension legs (6) into bottom of headboard (7) posts.

Step 2

- Place headboard and frame in desired location in room.
- Place 2 screws (1) through holes located in leg (6). (See Figure 2)
- Align bed frame bracket over screws.
- Place a flat washer (4) and a nut (3) on each screw.
- Hand-tighten, DO NOT TIGHTEN screws all the way.
- Repeat on other side of headboard.
- Tighten all screws securely using the Allen wrench (5).