
JY9983BR01




As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

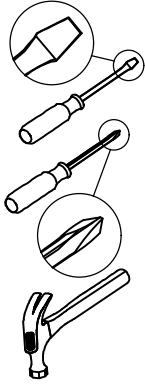

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification

Not actual size

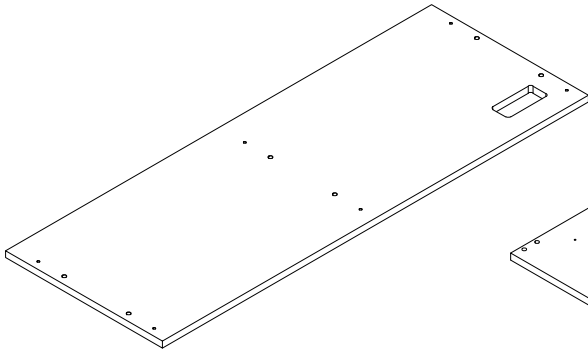


Ⓐ

TOP
Qty:1

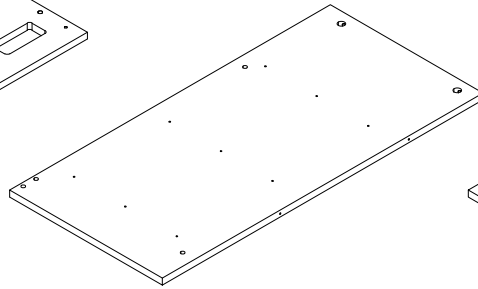


Ⓑ

LEFT SIDE PANEL
Qty:1

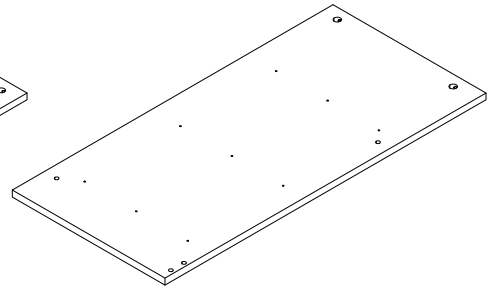


Ⓒ

RIGHT SIDE PANEL
Qty:1

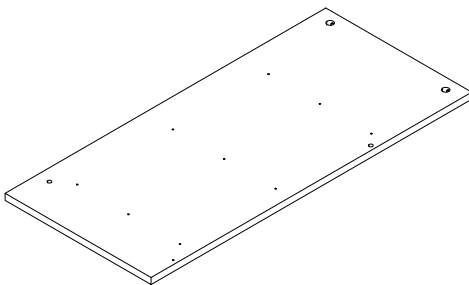


Ⓓ

PARTITION
Qty:1

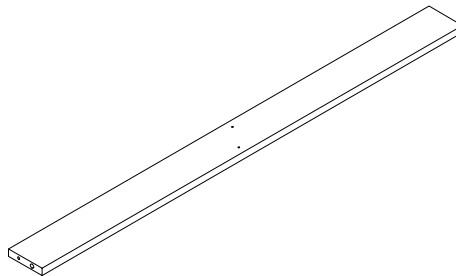


Ⓔ

FRONT RAIL
Qty:1

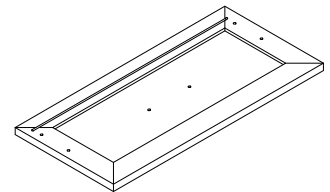


Ⓕ

LEFT DRAWER FRONT
Qty:3

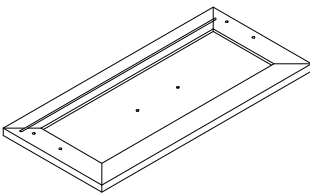


Ⓖ

RIGHT DRAWER FRONT
Qty:3

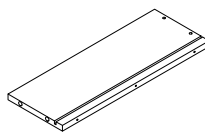

Ⓗ

DRAWER LEFT SIDE
Qty:6

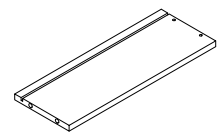


Ⓘ

DRAWER RIGHT SIDE
Qty:6


Board Identification

Not actual size

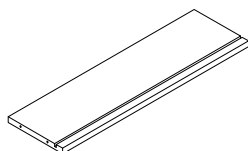


(J)

DRAWER BACK
Qty:6

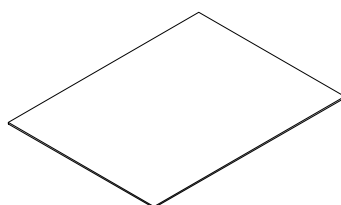


(K)

DRAWER BOTTOM
Qty:6

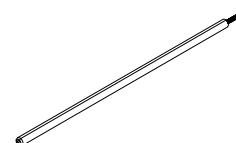


(L)

CIRCULAR TUBE
Qty:2

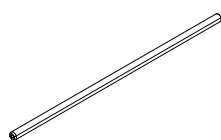

(M)


CIRCULAR TUBE
Qty:2

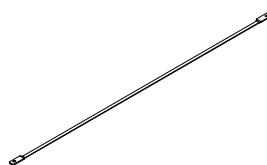


(N)

RAIL
Qty:4


Part List

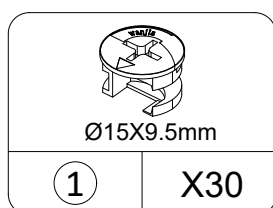


CAM LOCK
spare:3

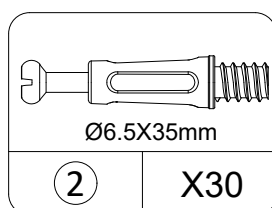


CAM BOLT
spare:3

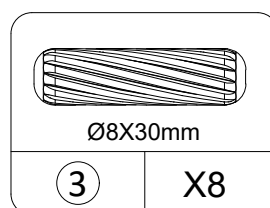


WOODEN DOWEL
spare:1

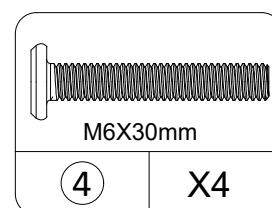


BOLT
spare:1

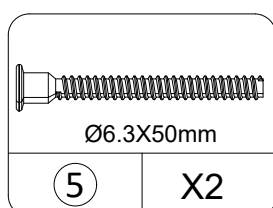


SCREW
spare:1

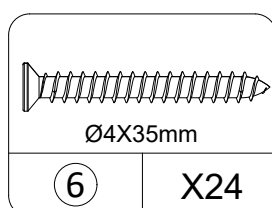

SCREW
spare:2

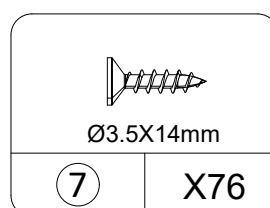


SCREW
spare:3

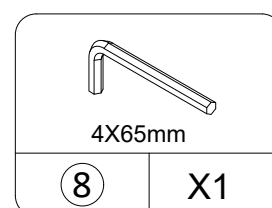


HEXAGON WRENCH


Part List

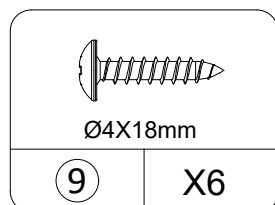


SCREW
spare:1

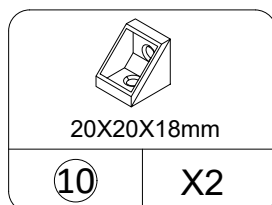


BRACKET

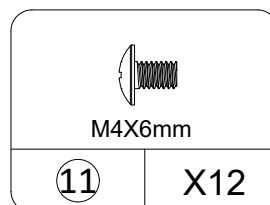


SCREW
spare:2

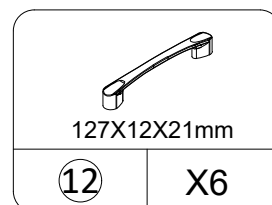


HANDLE

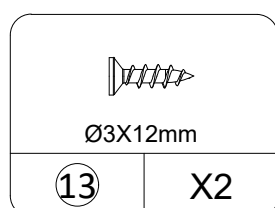


SCREW
spare:1

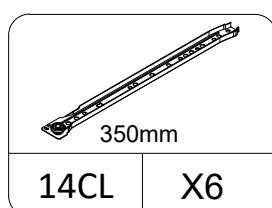


LEFT CABINET MEMBER

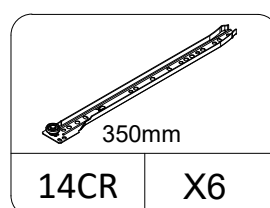


RIGHT CABINET MEMBER

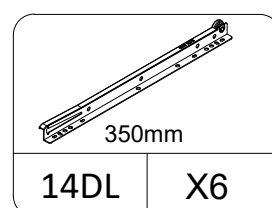


LEFT DRAWER RUNNER

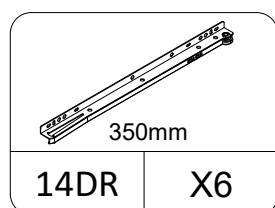

RIGHT DRAWER RUNNER

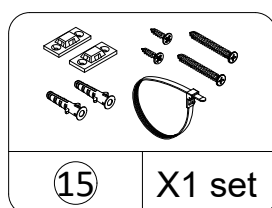





ANTI-TIPPING HARDWARE

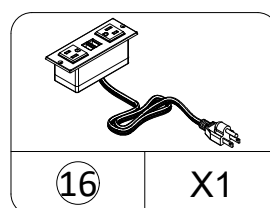

PLUG BOARD

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

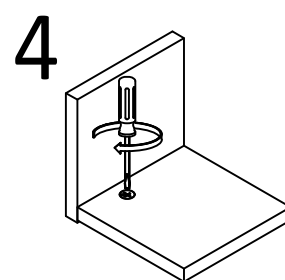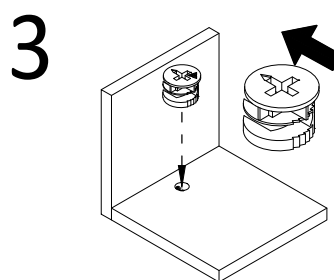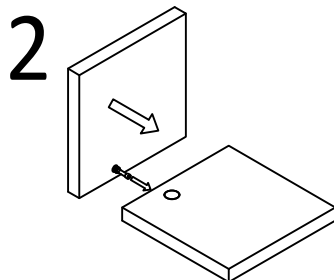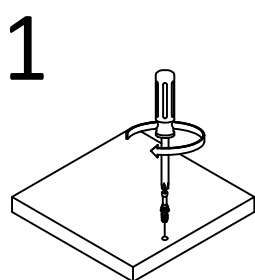





The opening must point toward the edge of the board

Board Identification

Not actual size






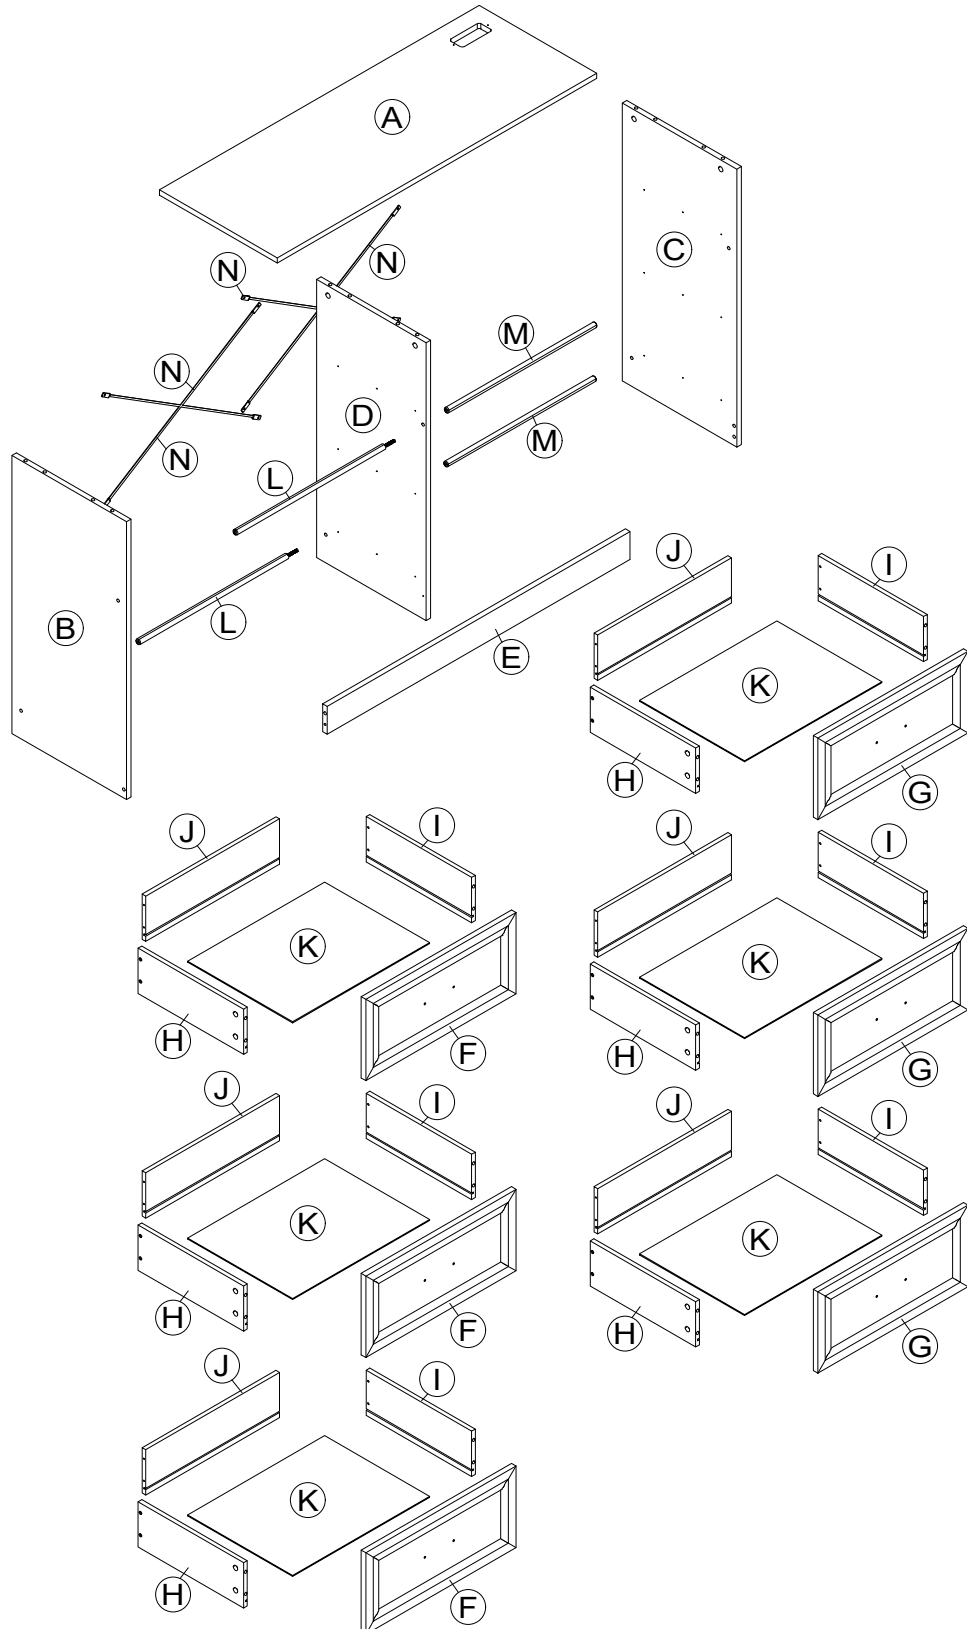


STEP1

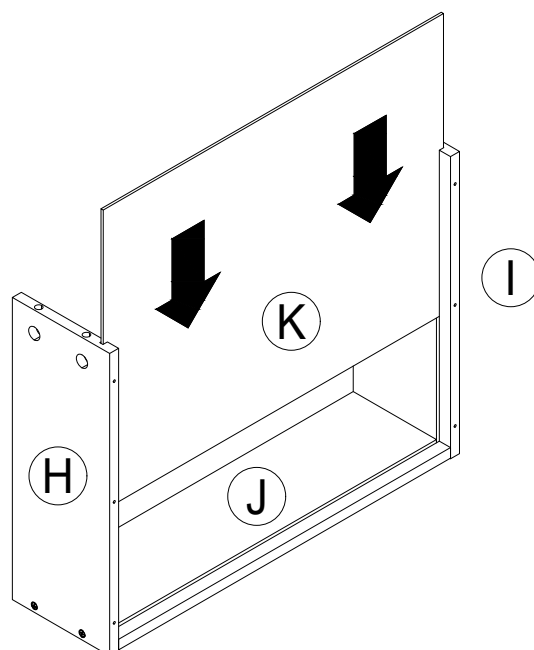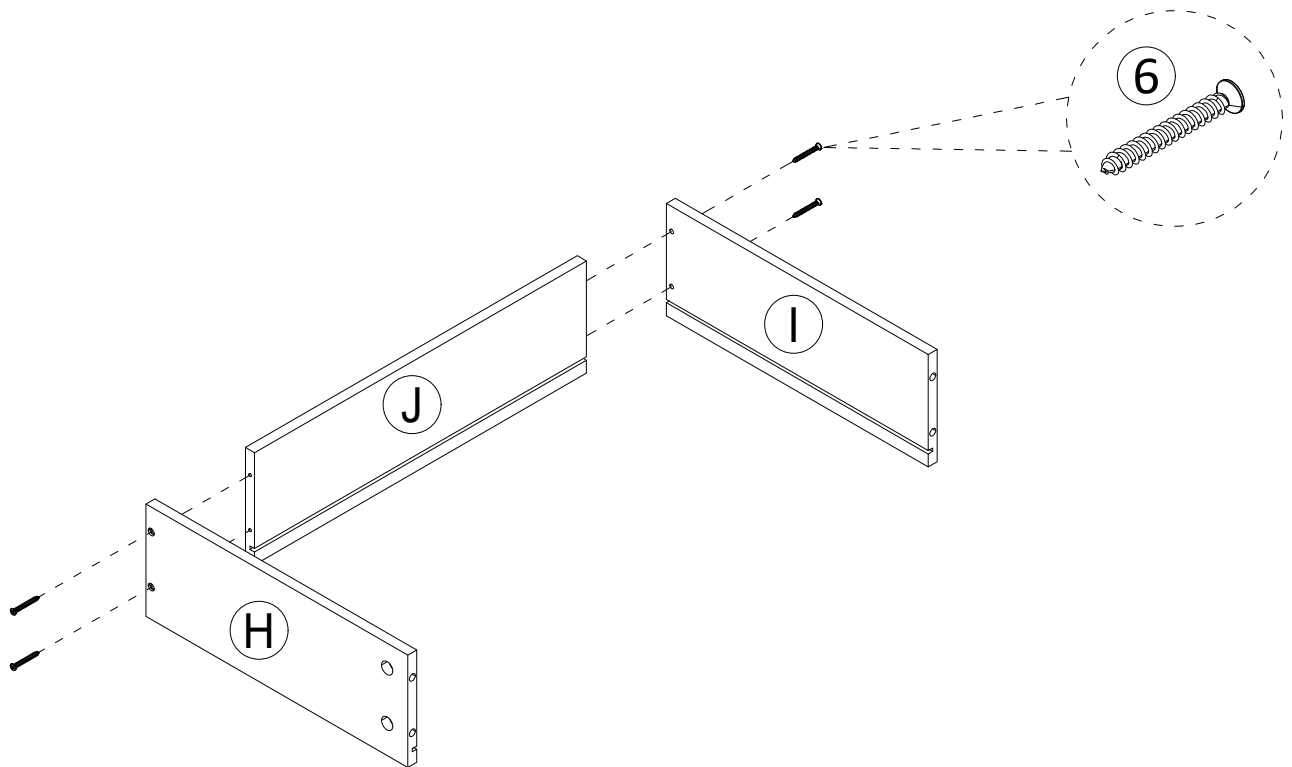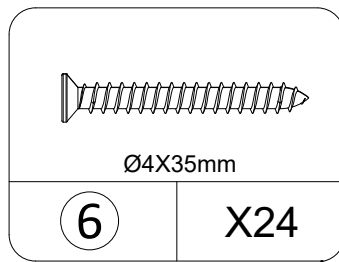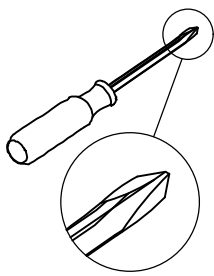



x 6

STEP2

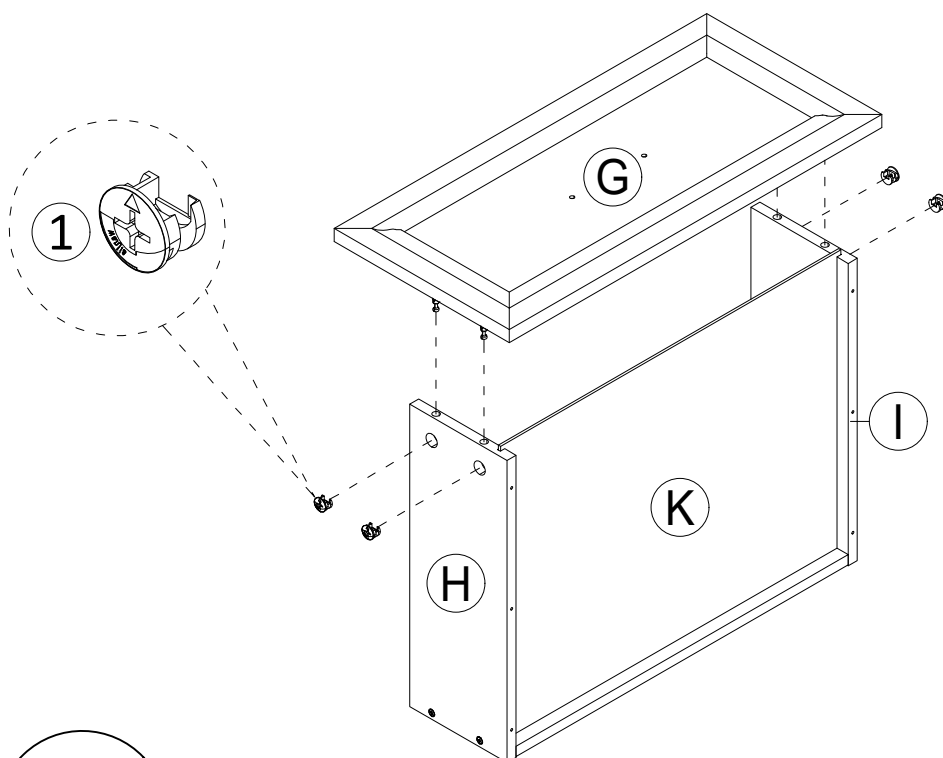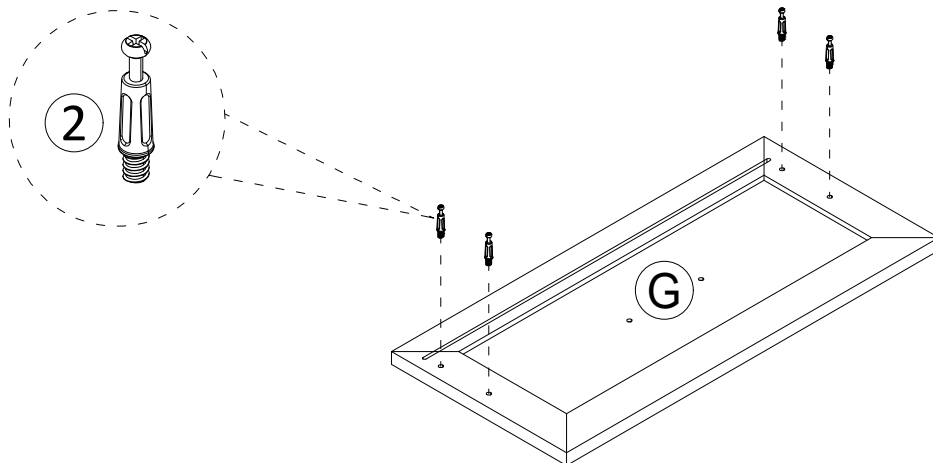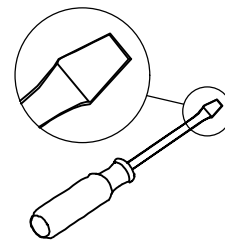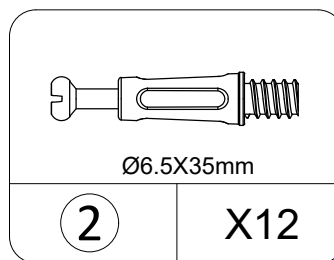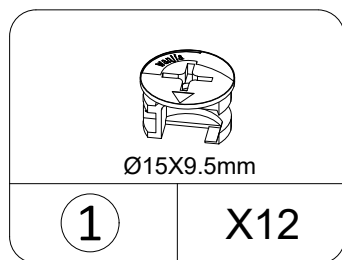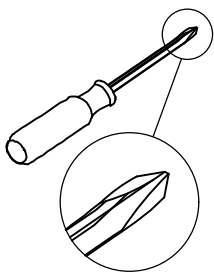







x 3

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

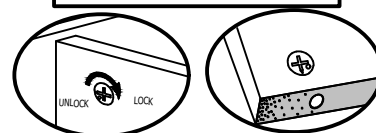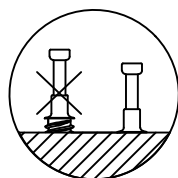



Proper orientation of CAM LOCK

STEP3

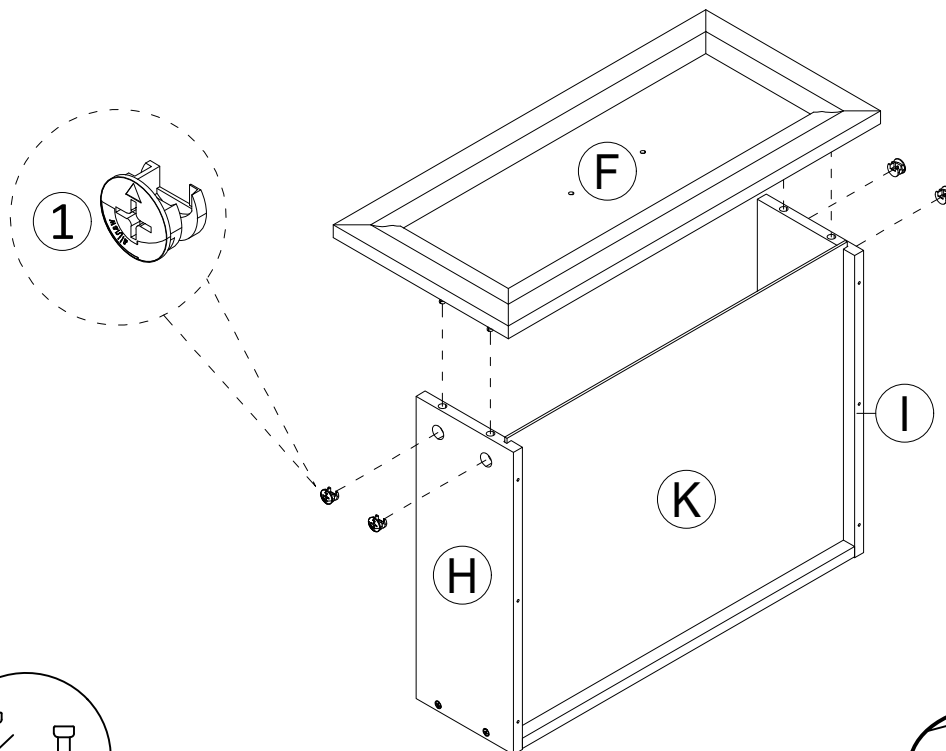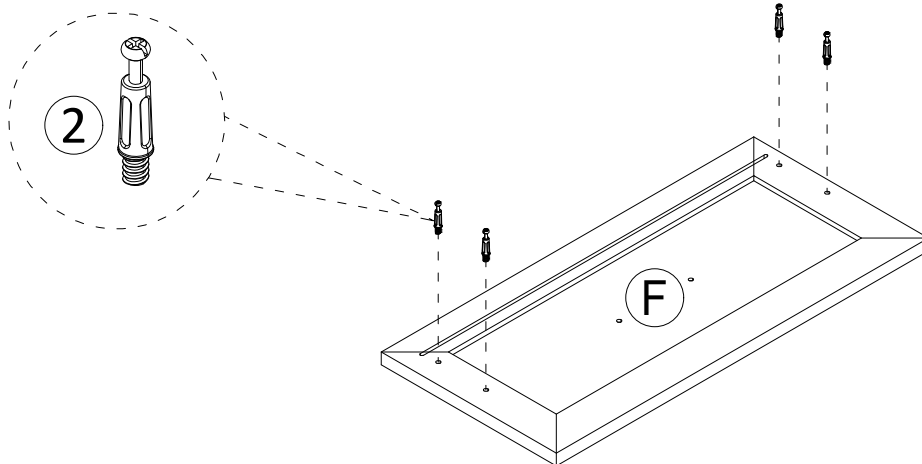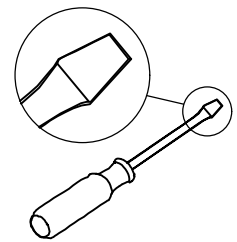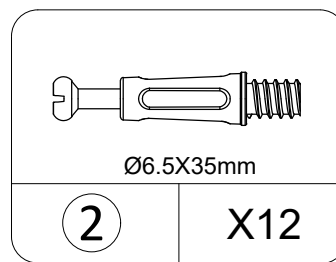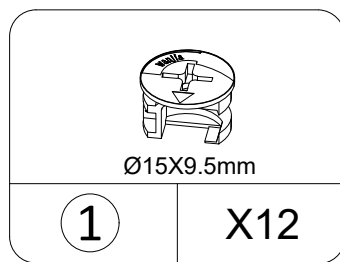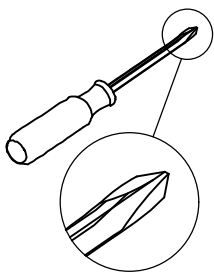






x 3

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

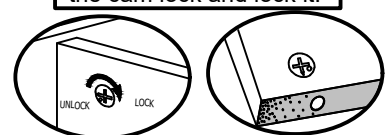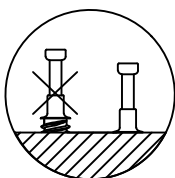

Proper orientation of CAM LOCK







STEP4

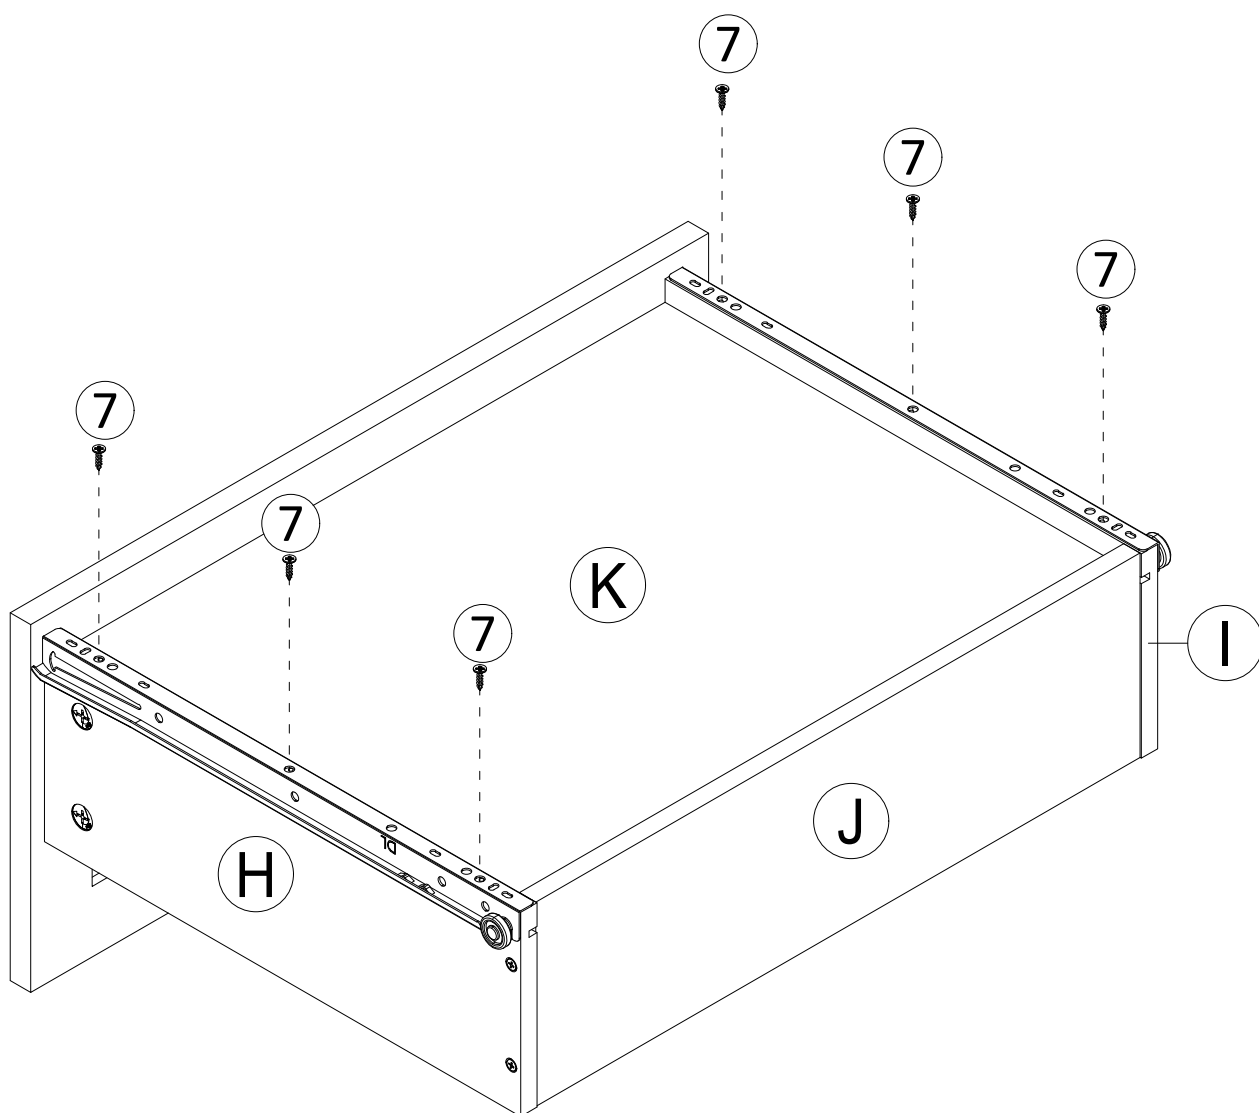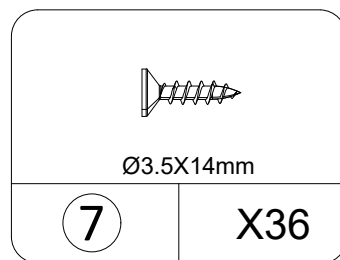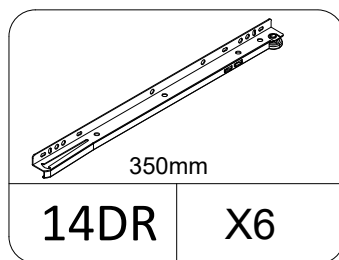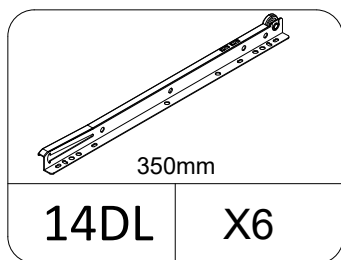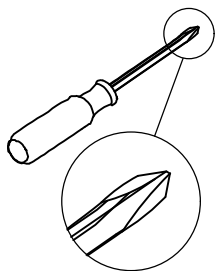


x 6

F & G






STEP5

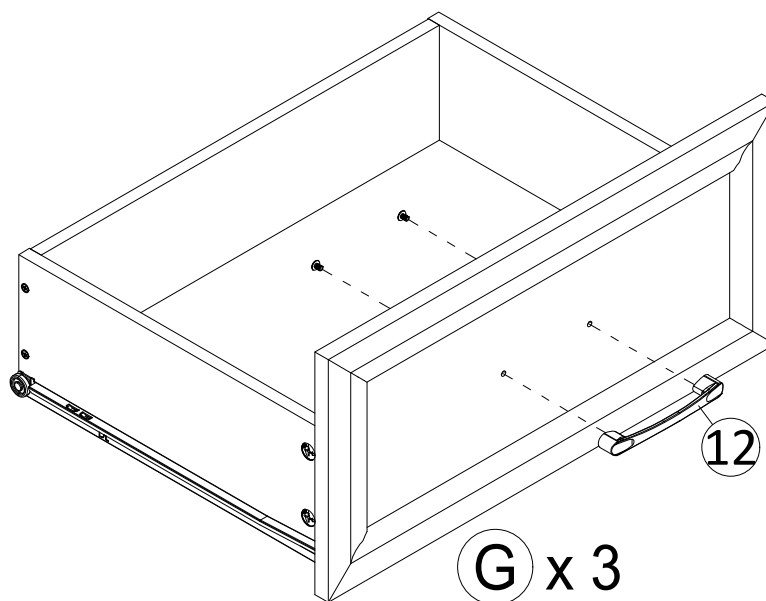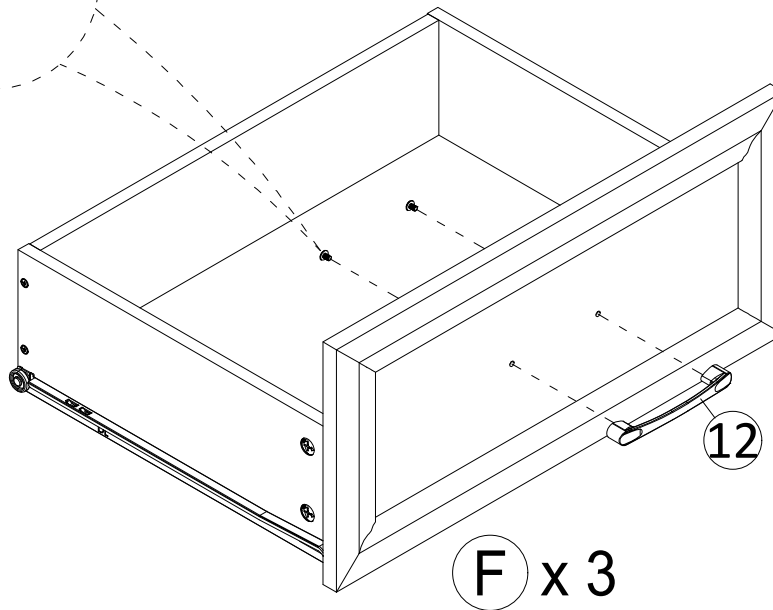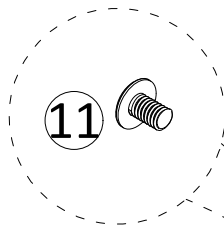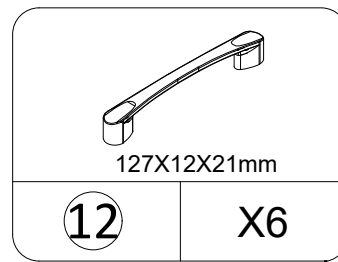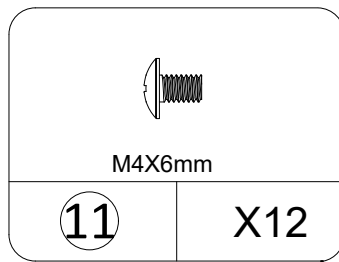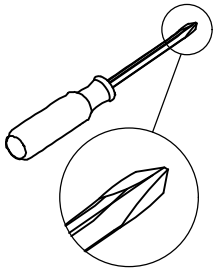


STEP6

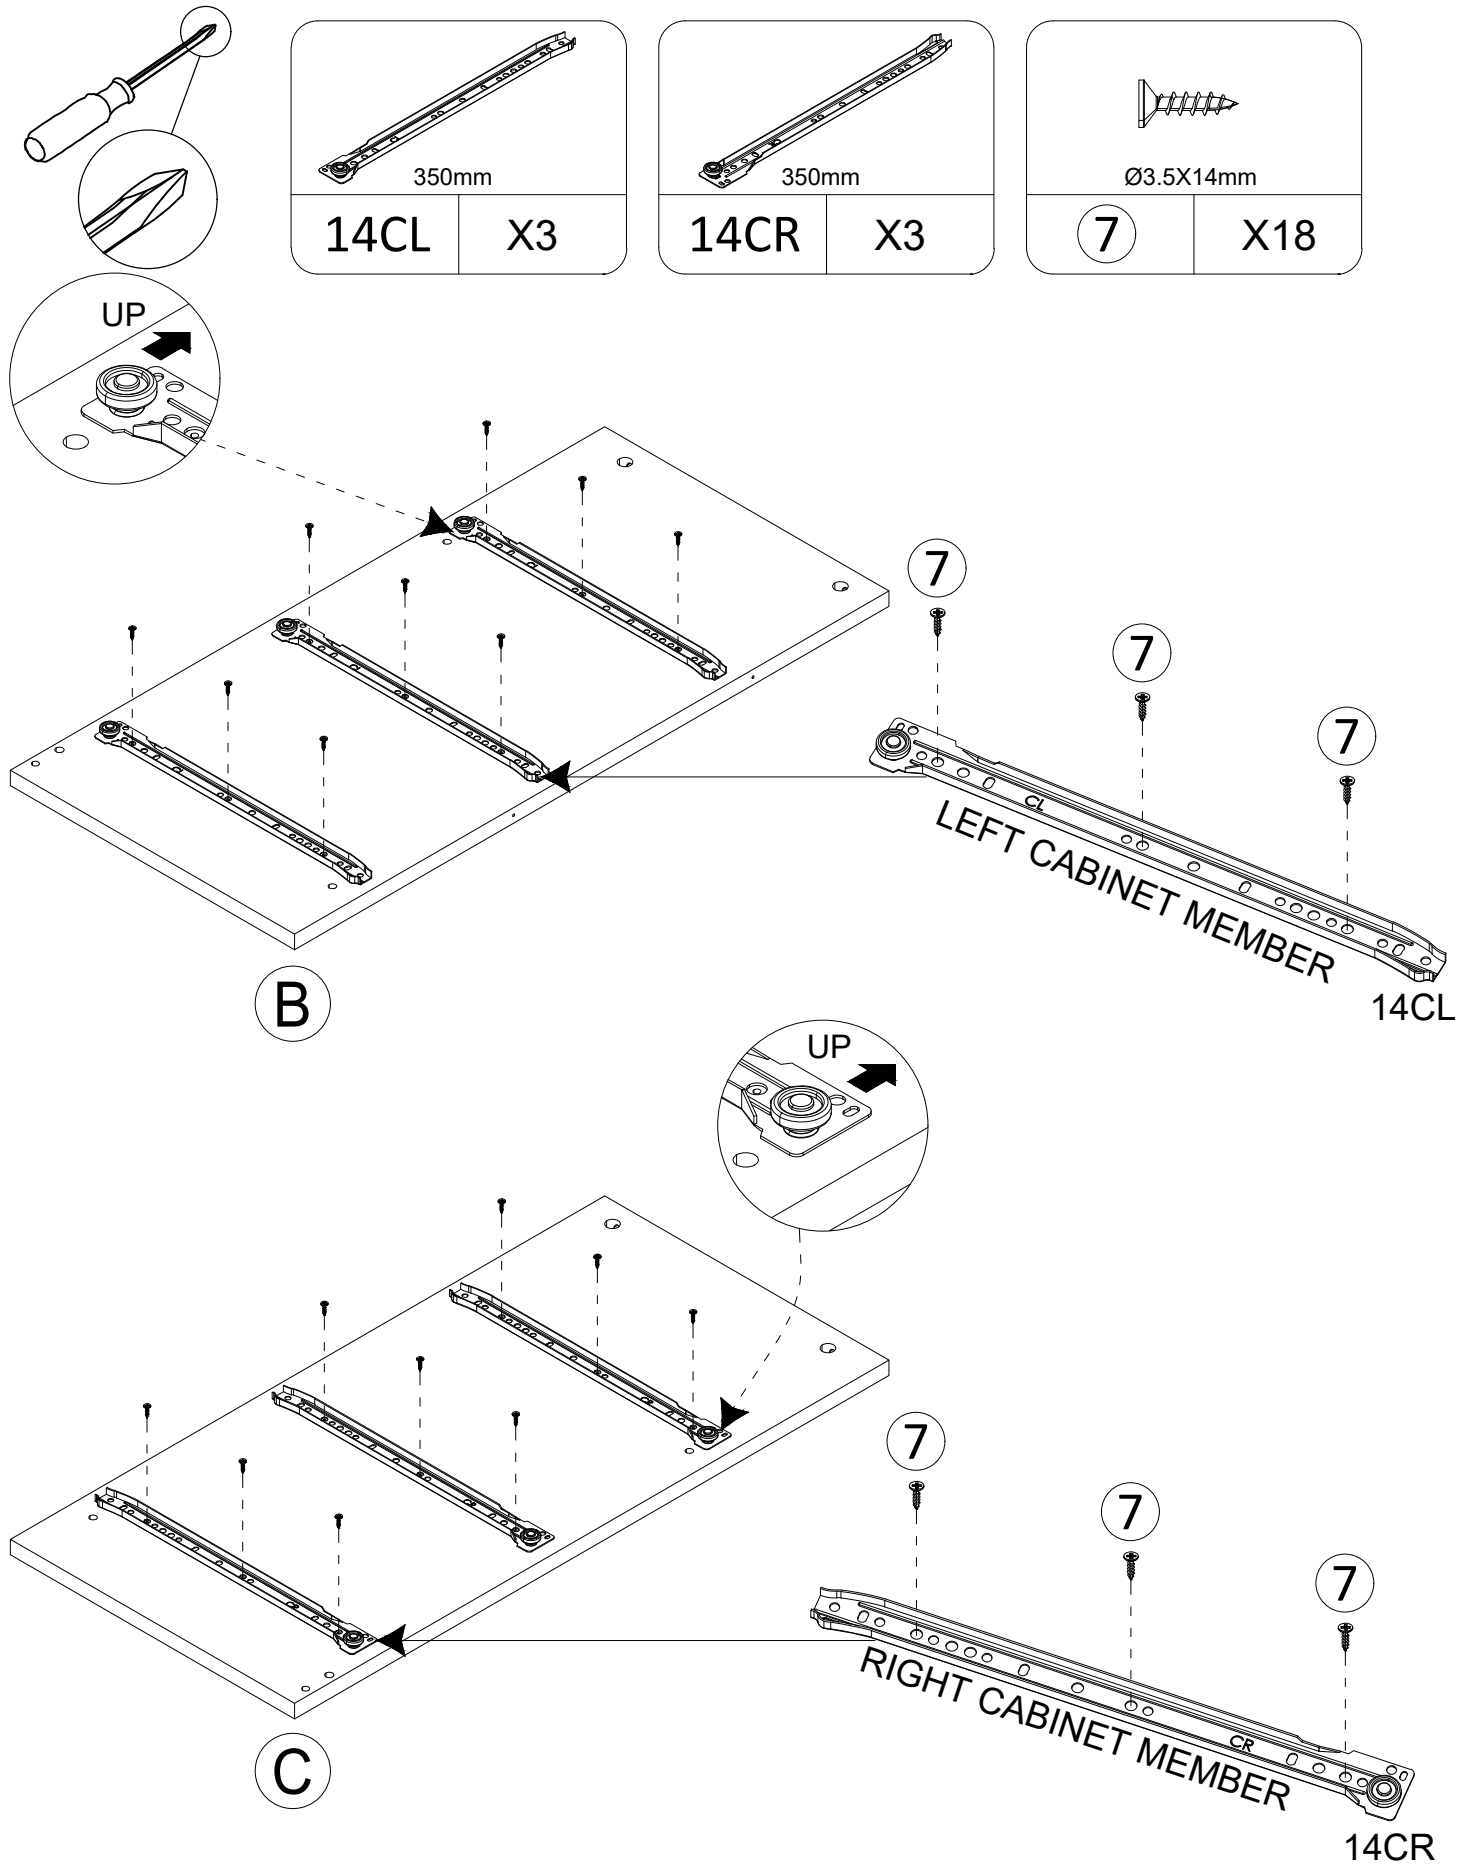






STEP7

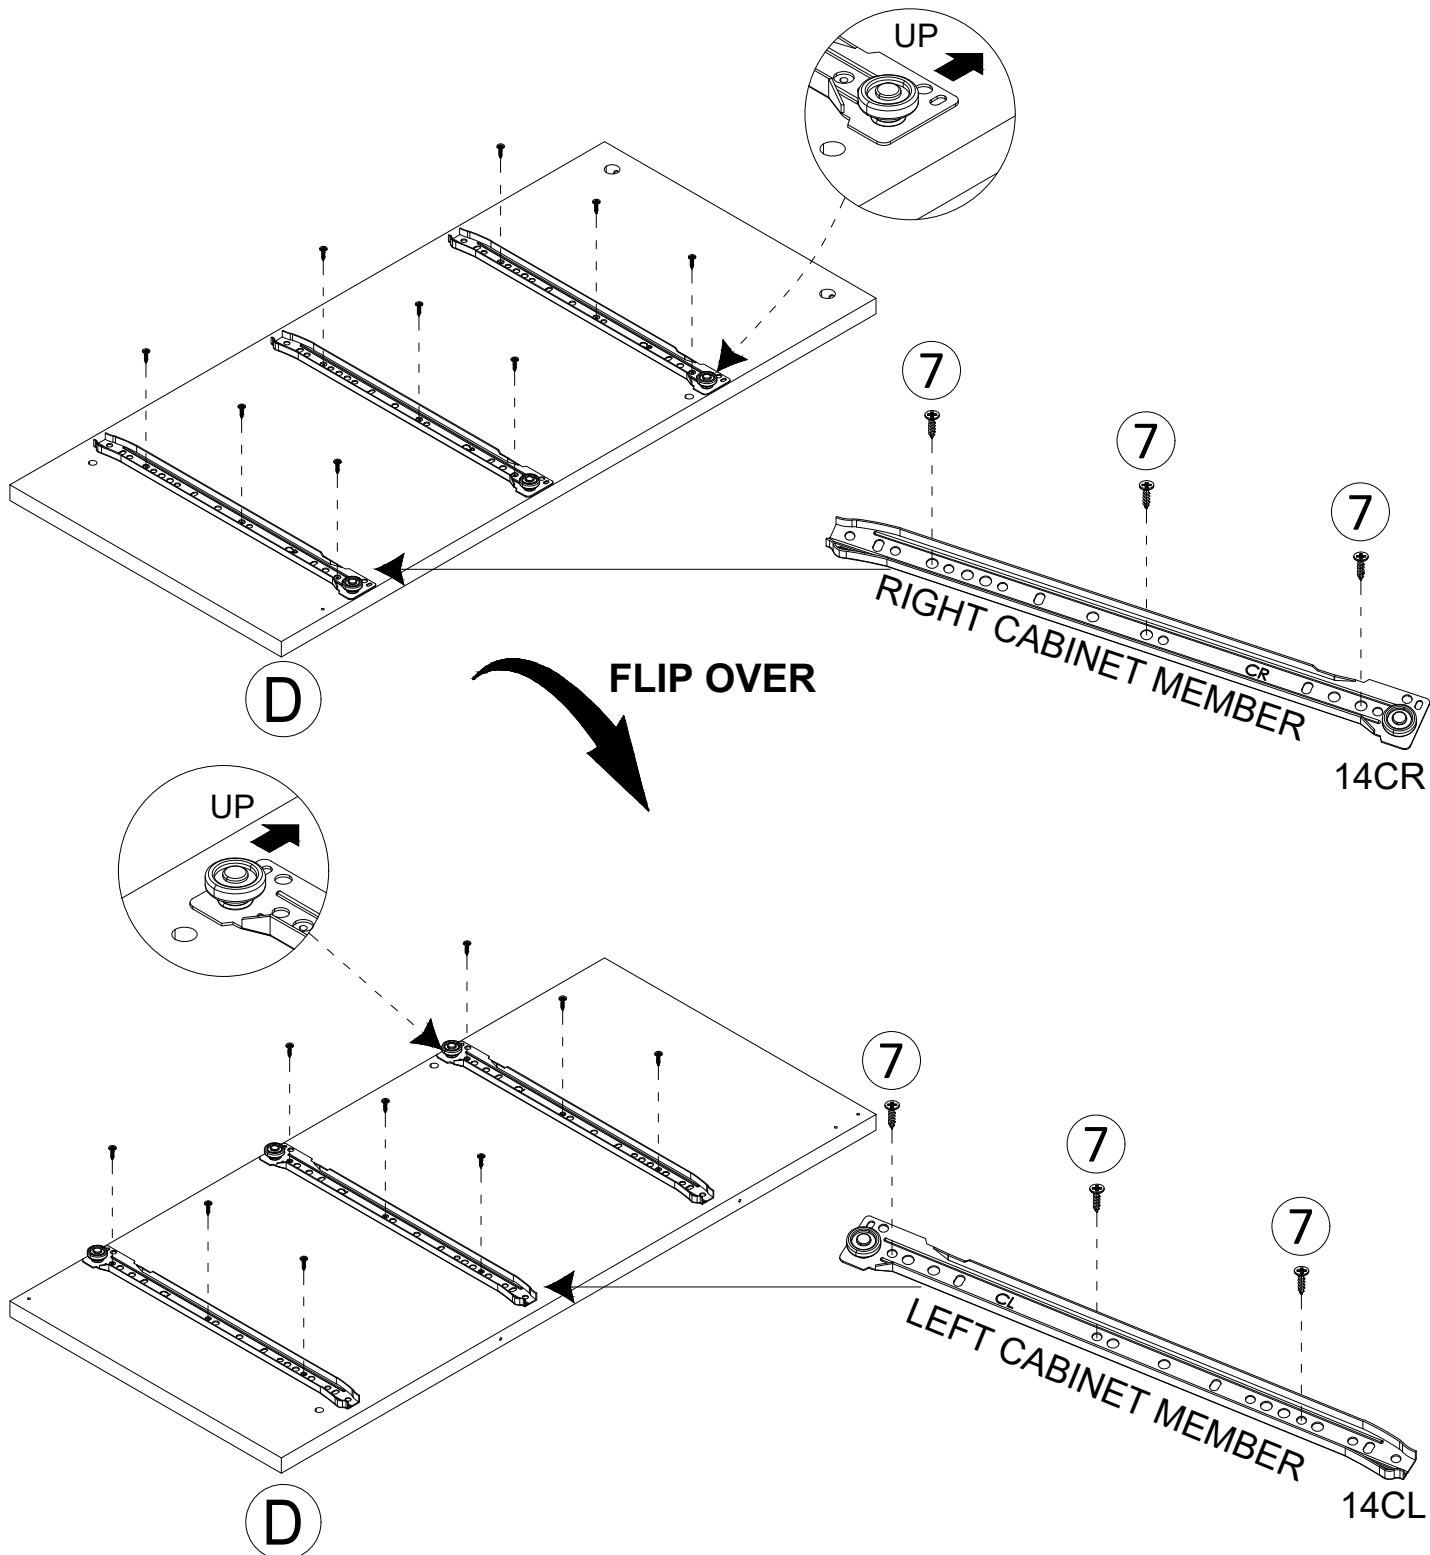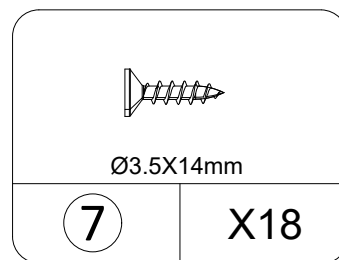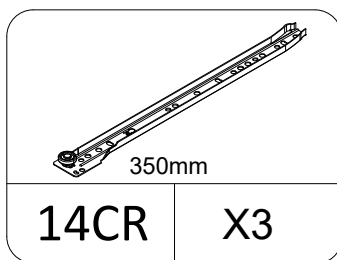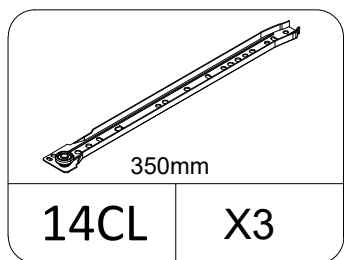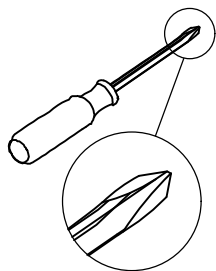




STEP8

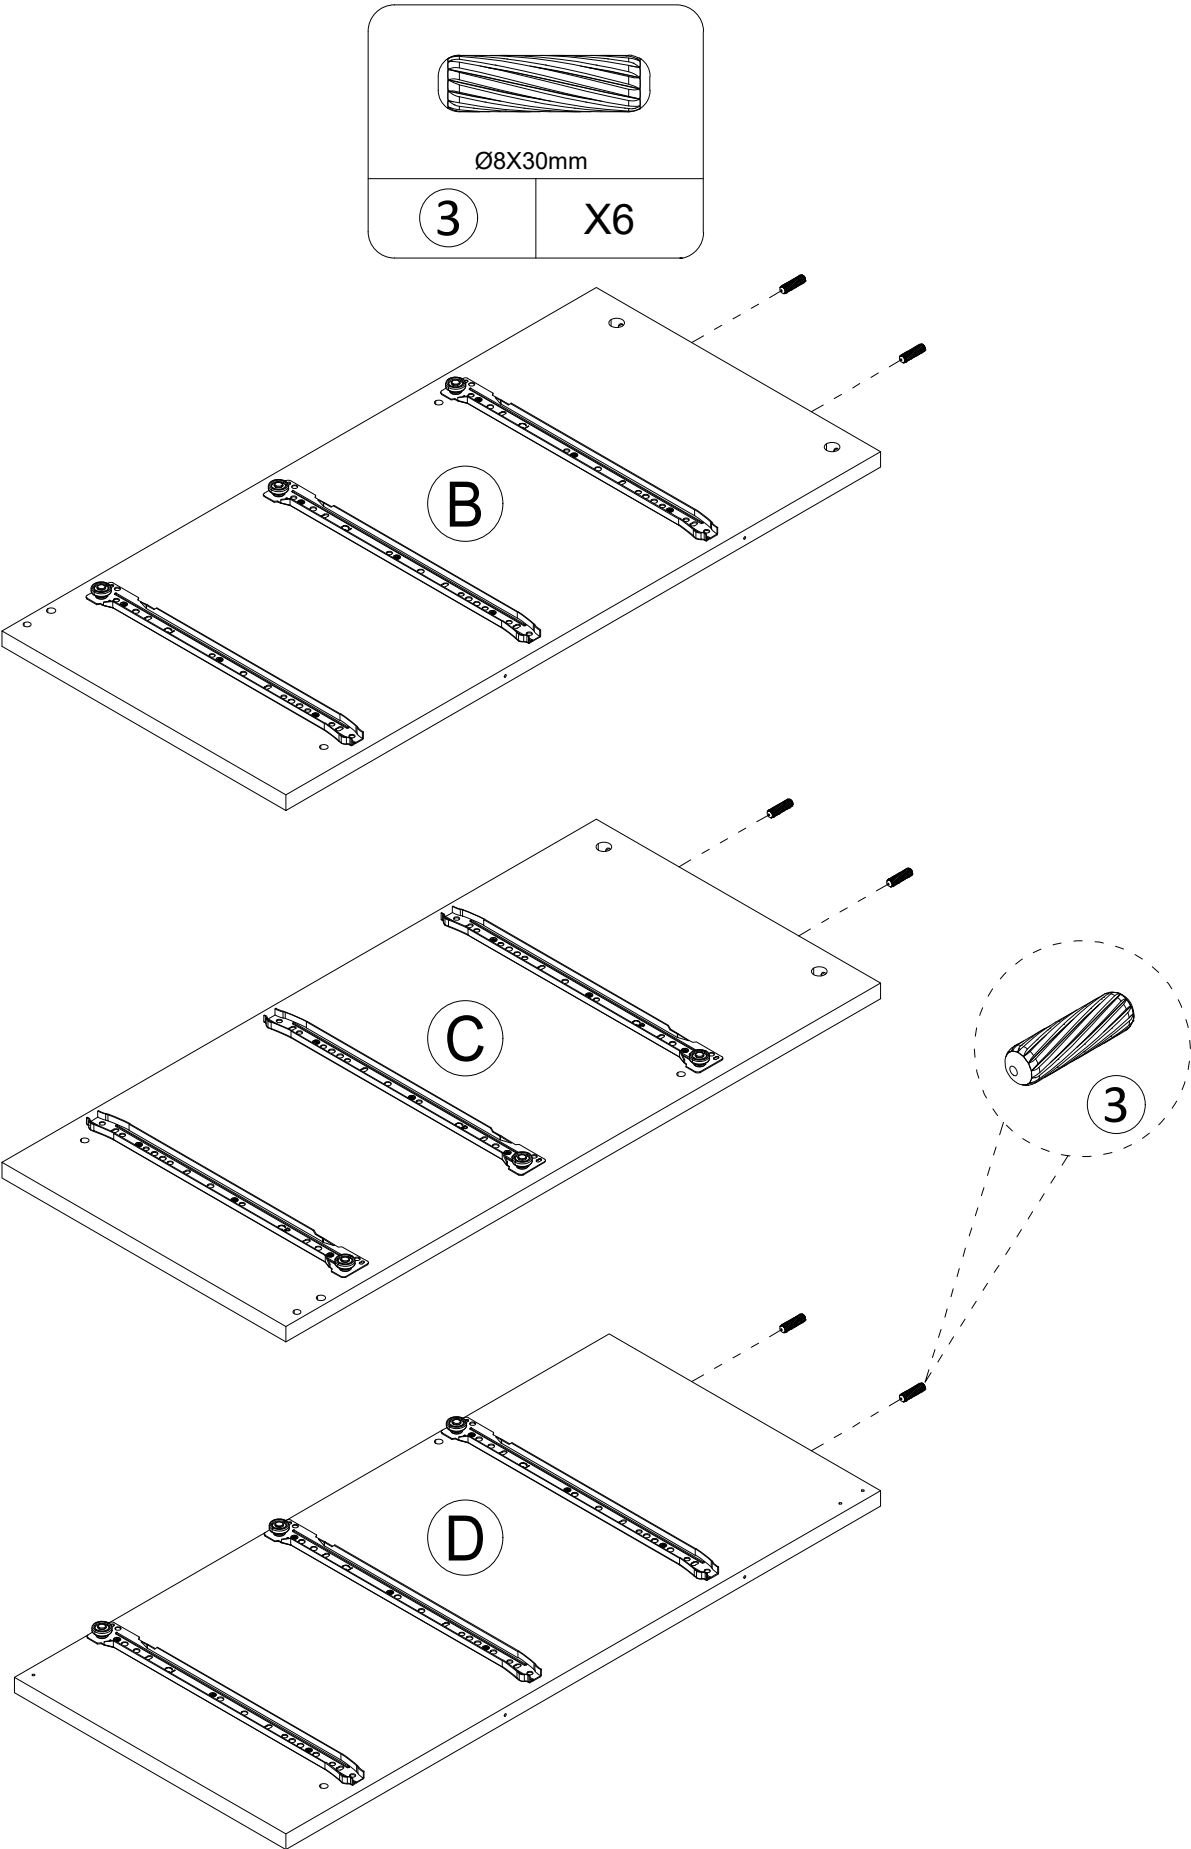


STEP9

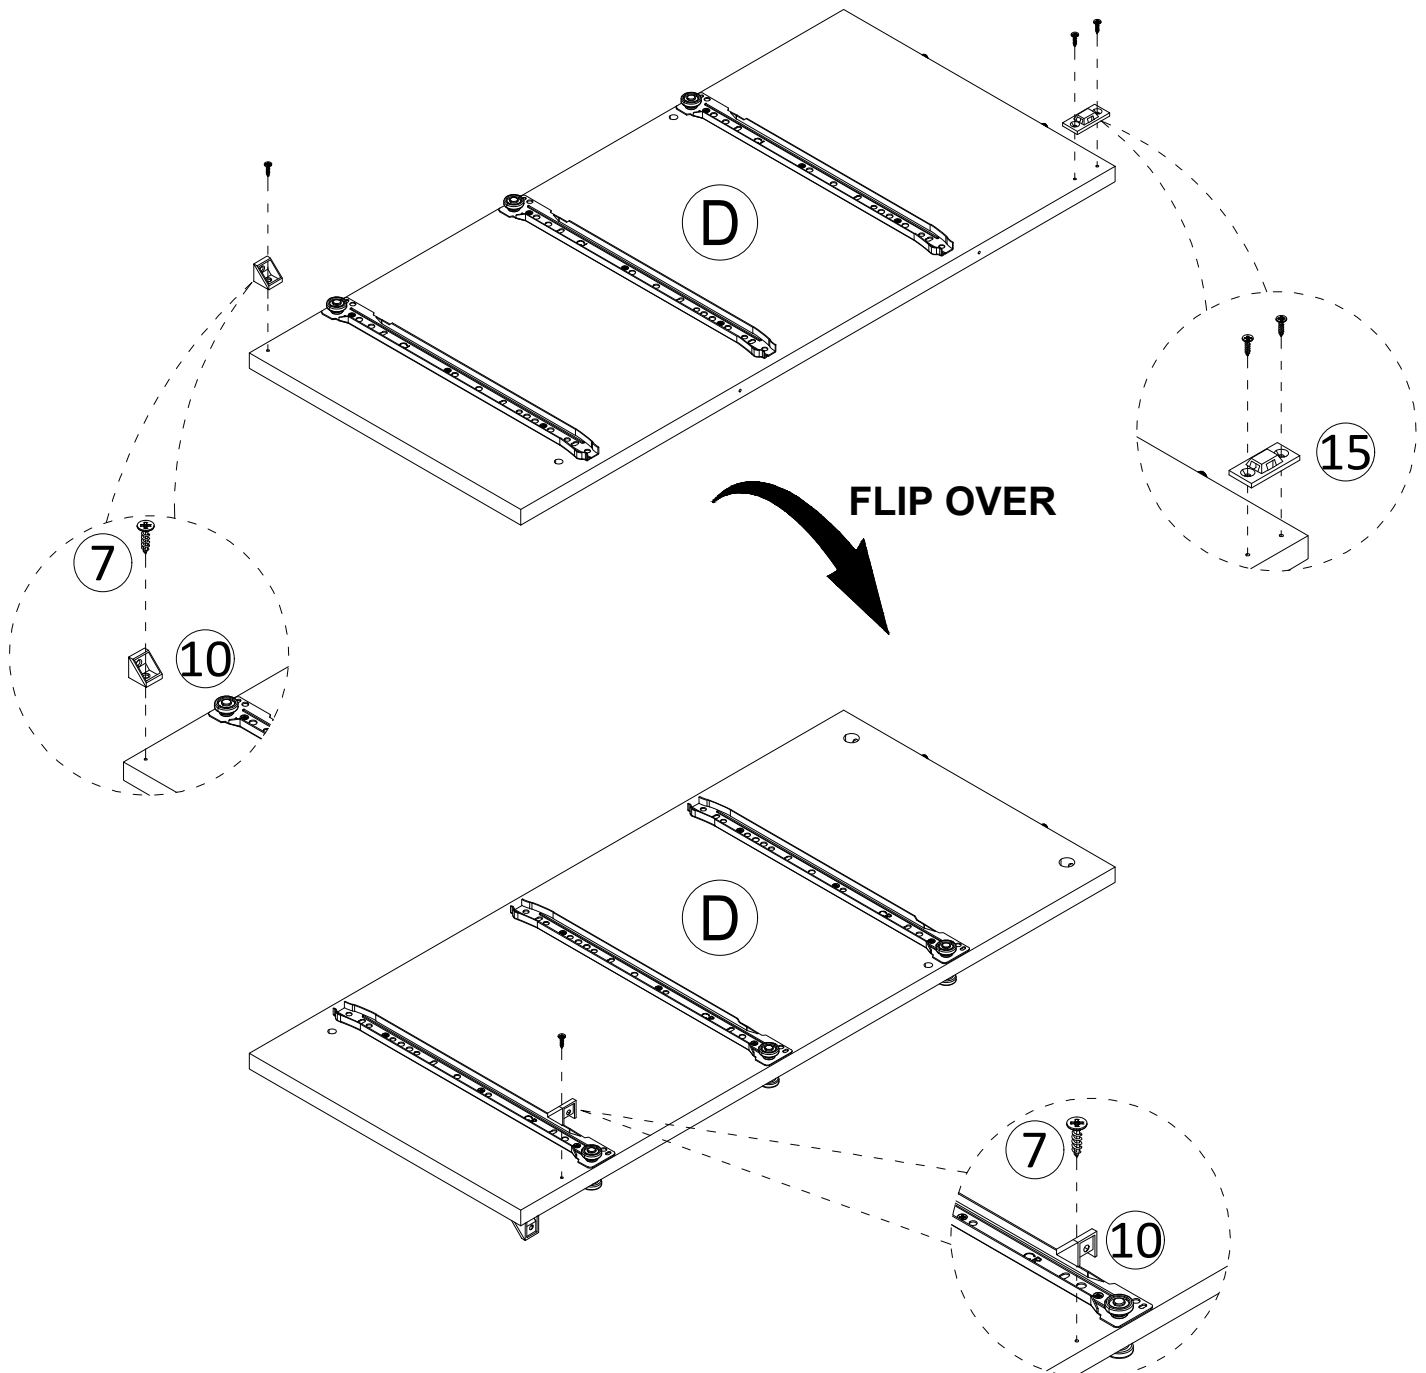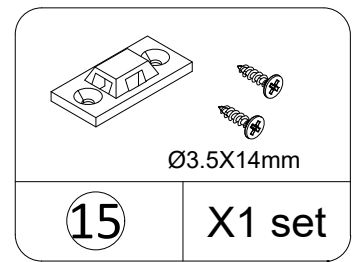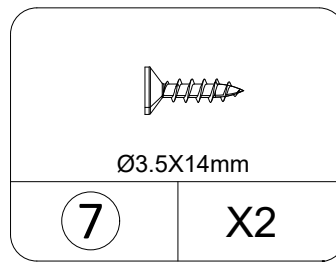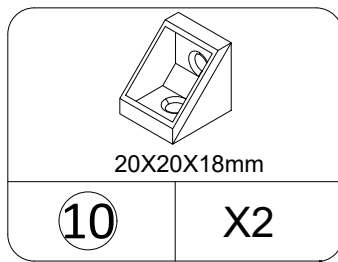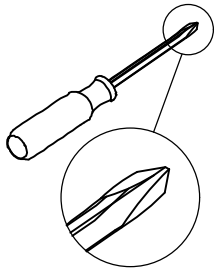


STEP10

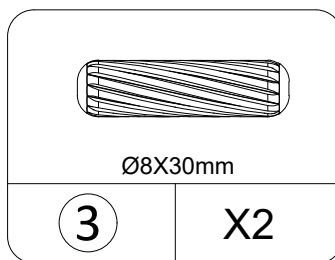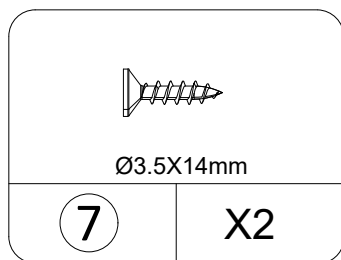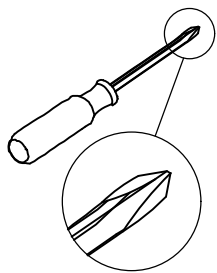






Before installation, please ensure that the wooden hole on the part (E) board is facing upwards.

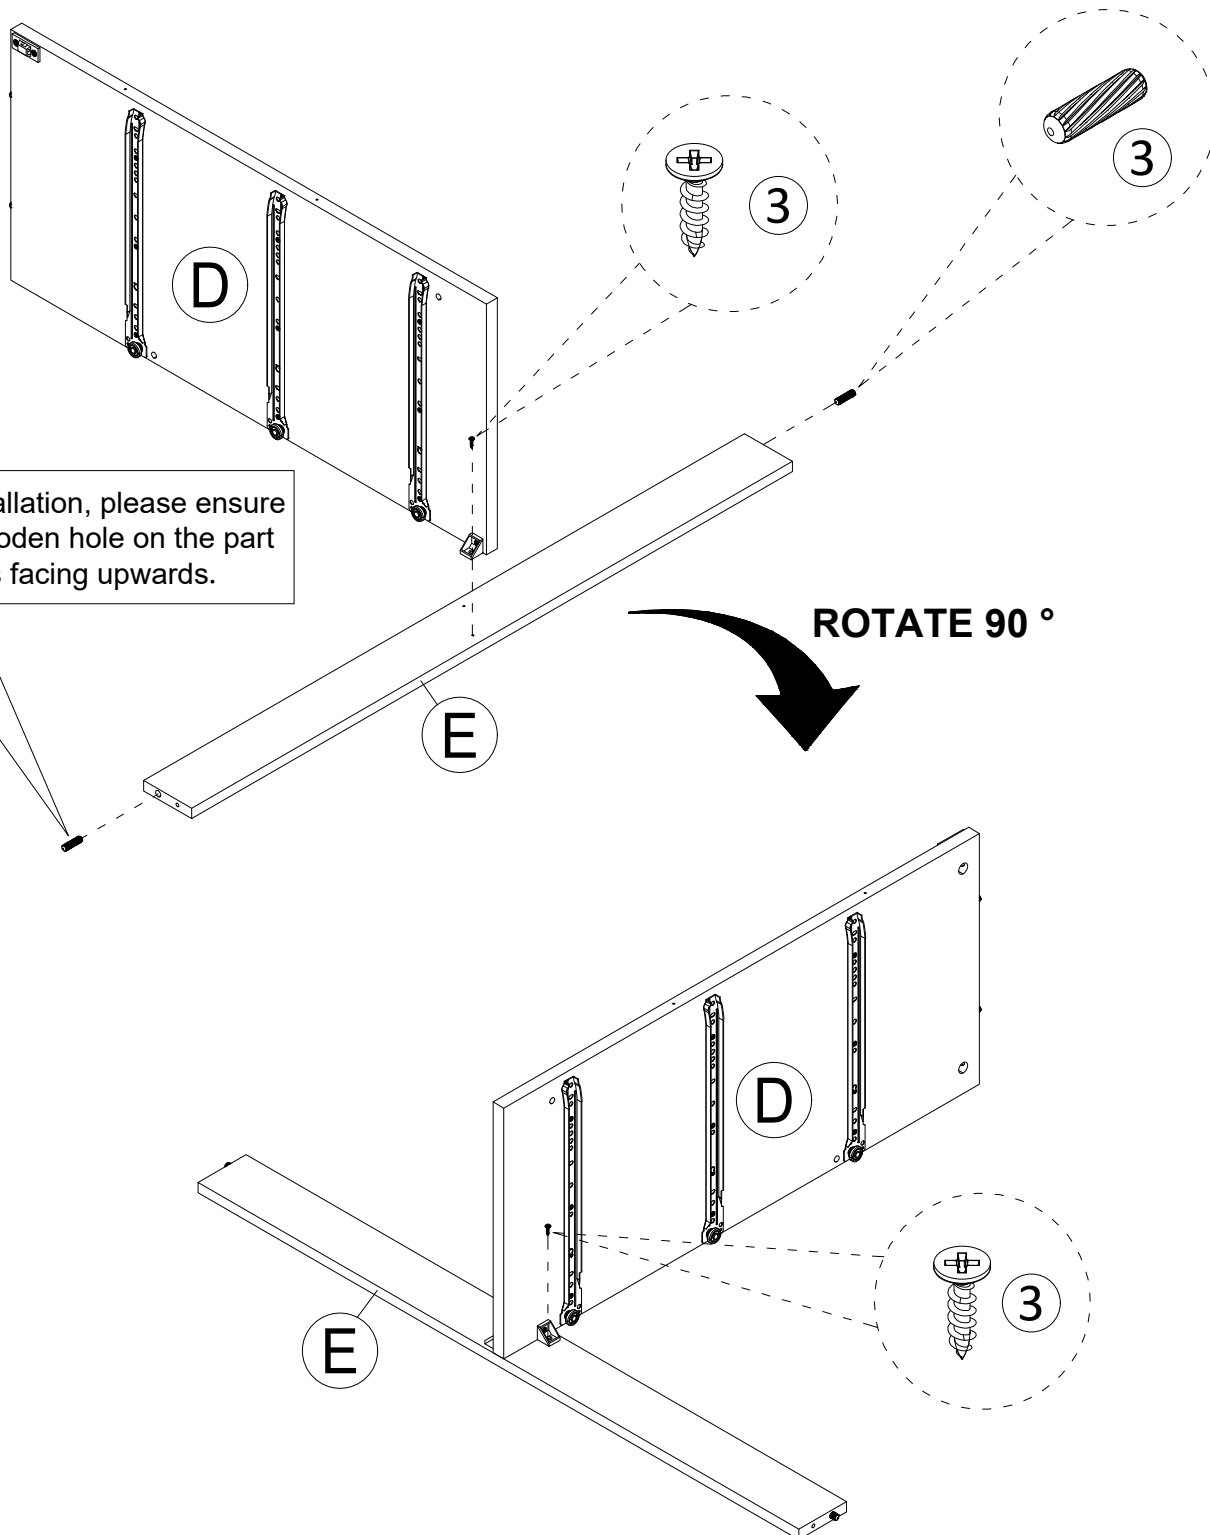






STEP11

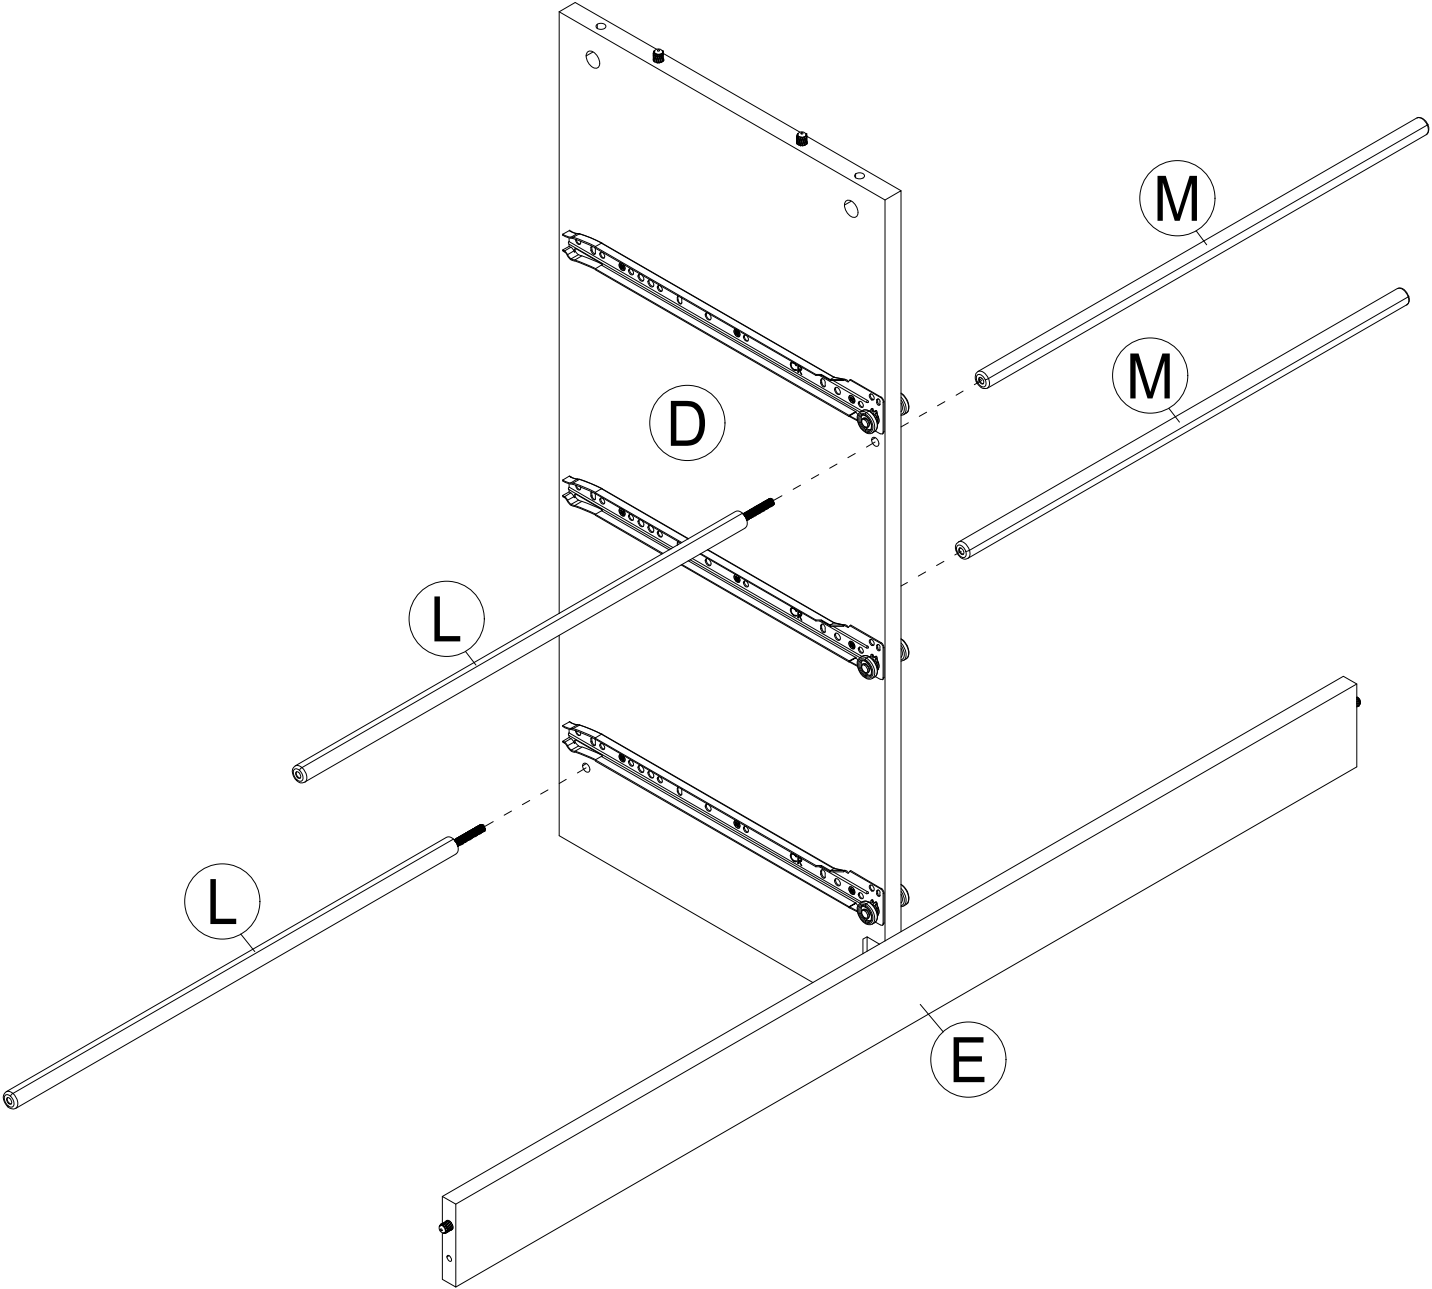





STEP12

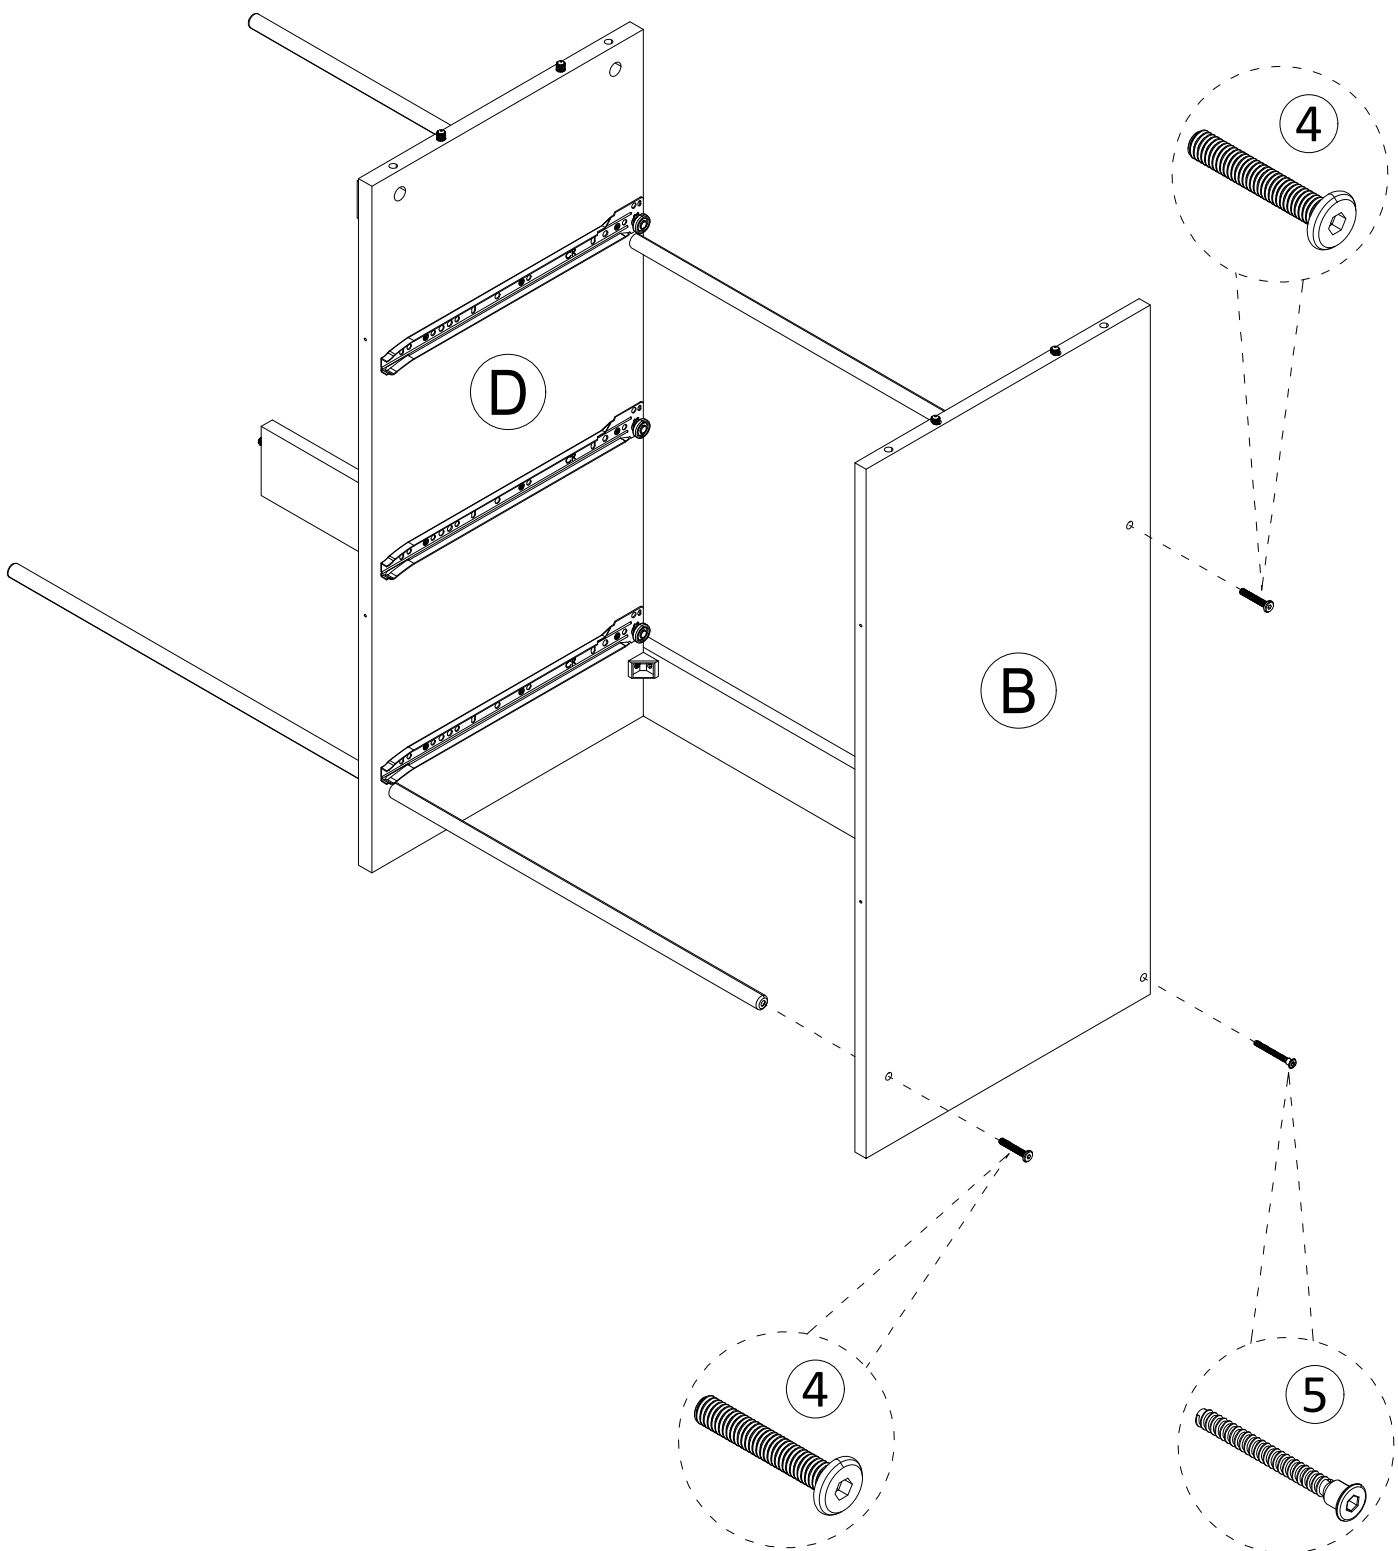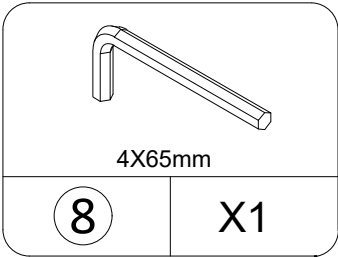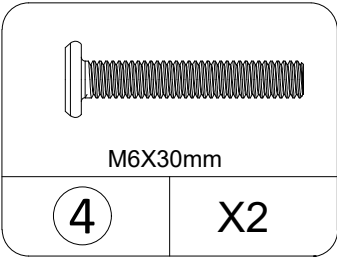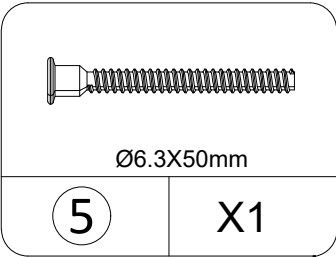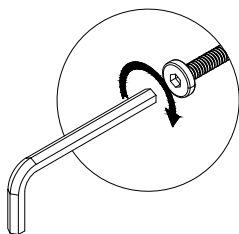




STEP13

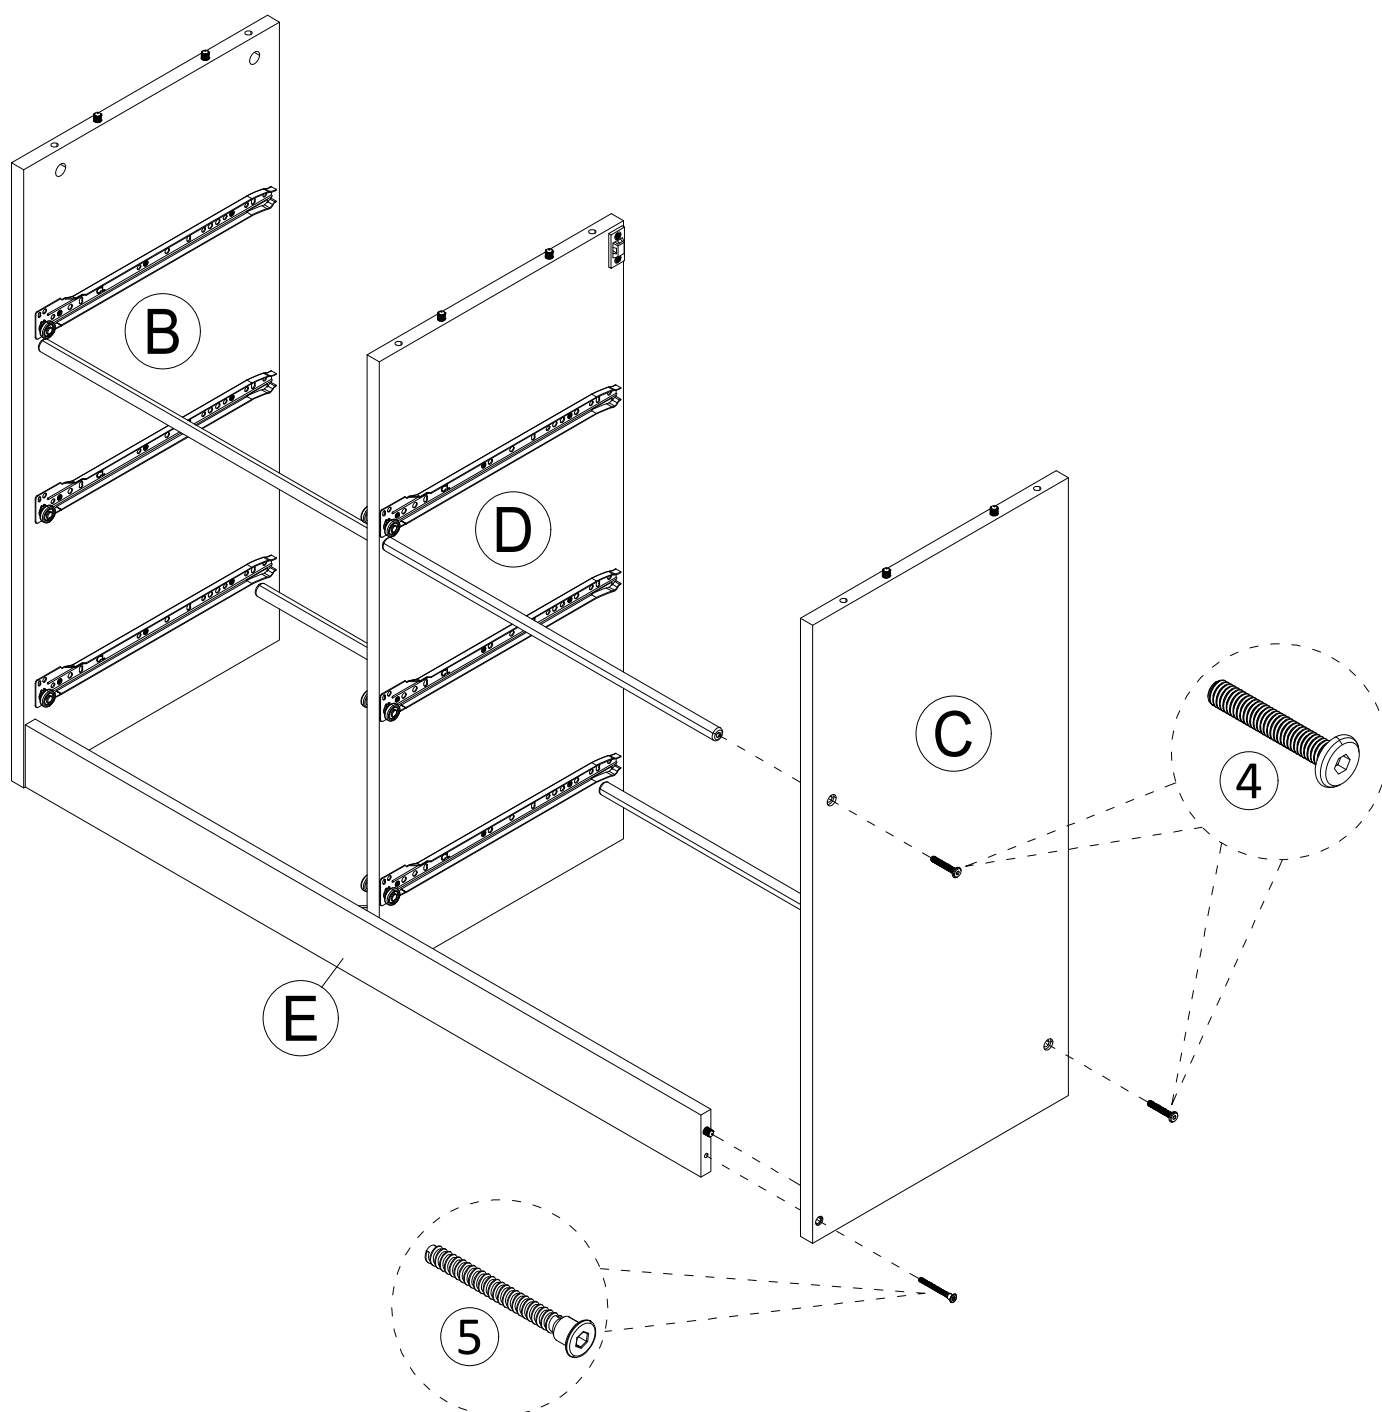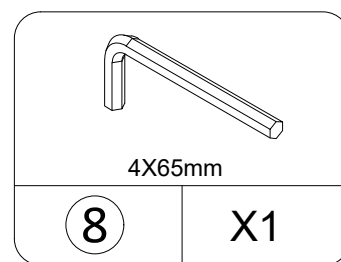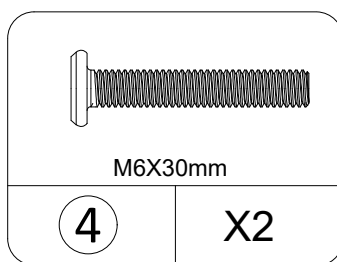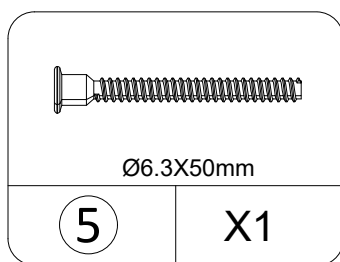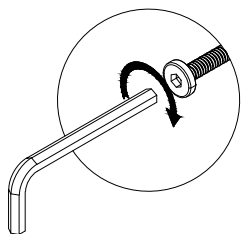


STEP14

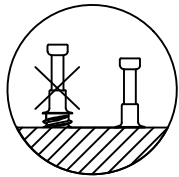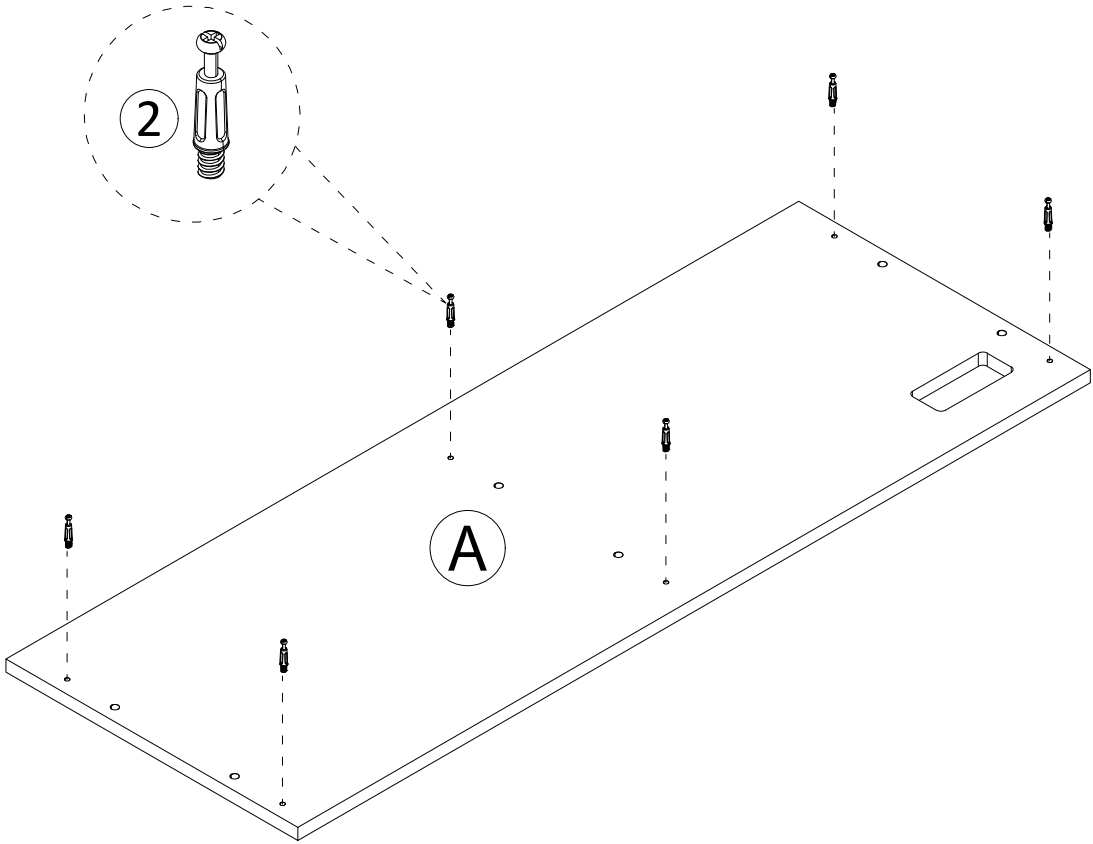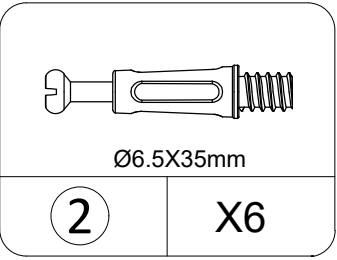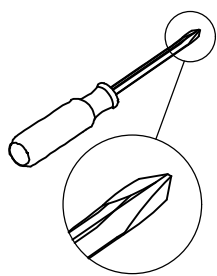

STEP15



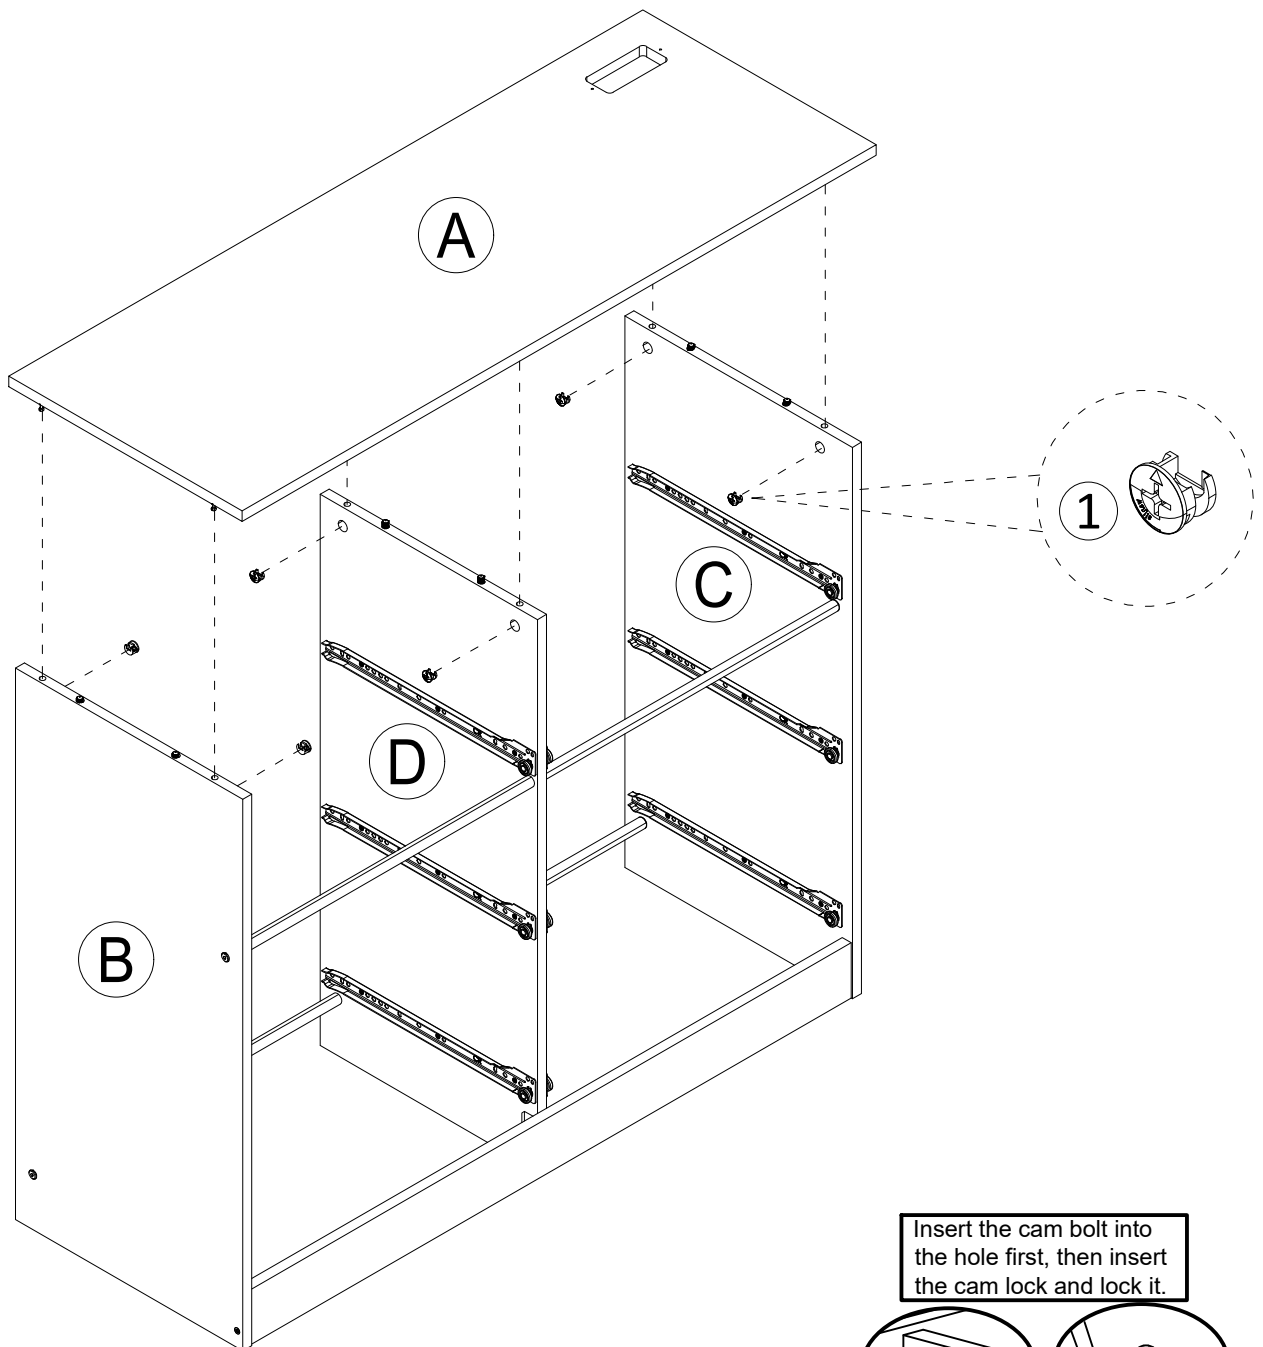
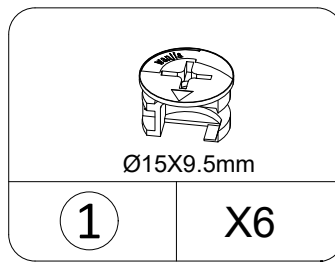
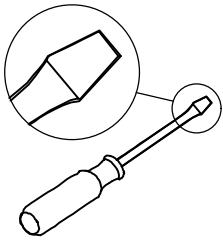


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

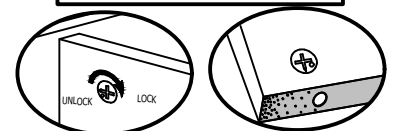


Proper orientation of CAM LOCK


STEP16

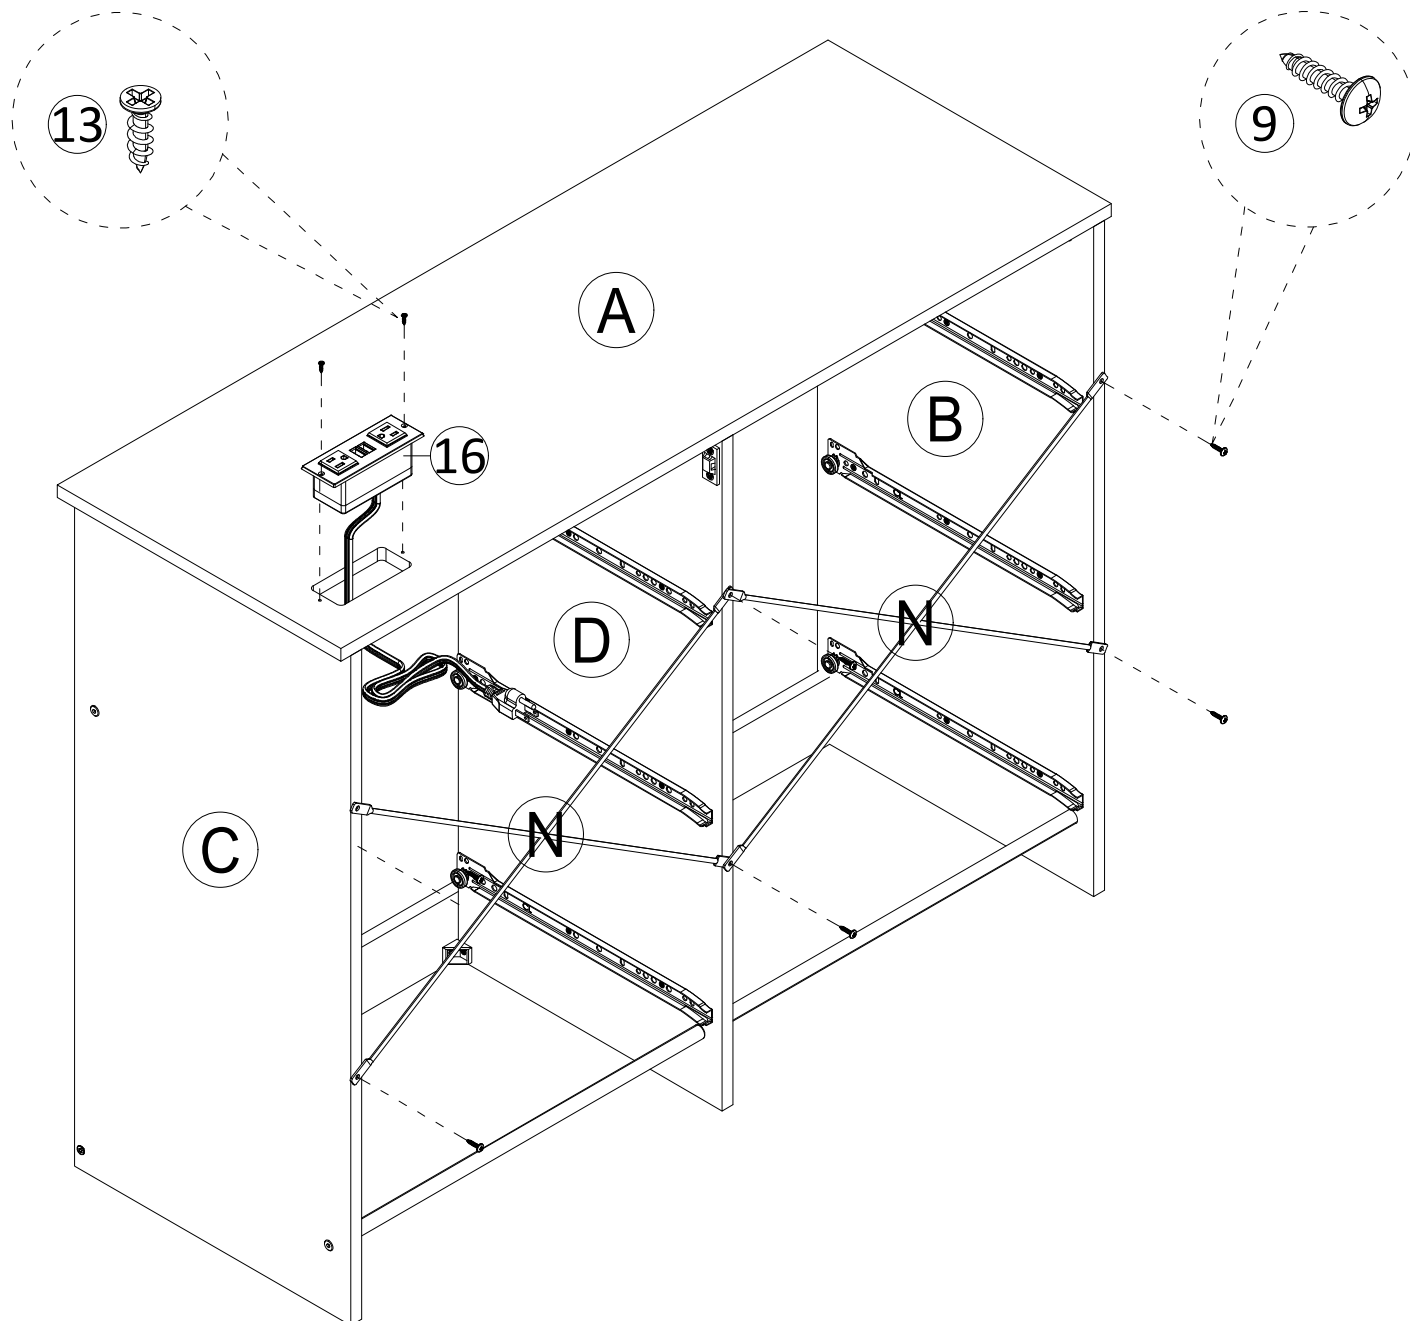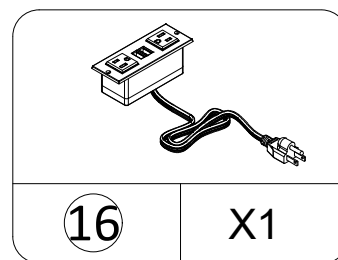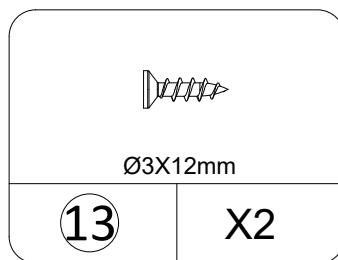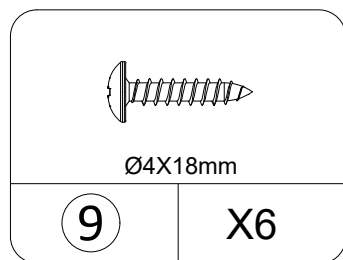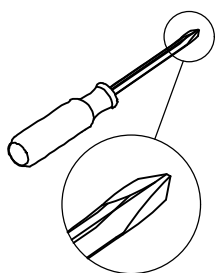

STEP17

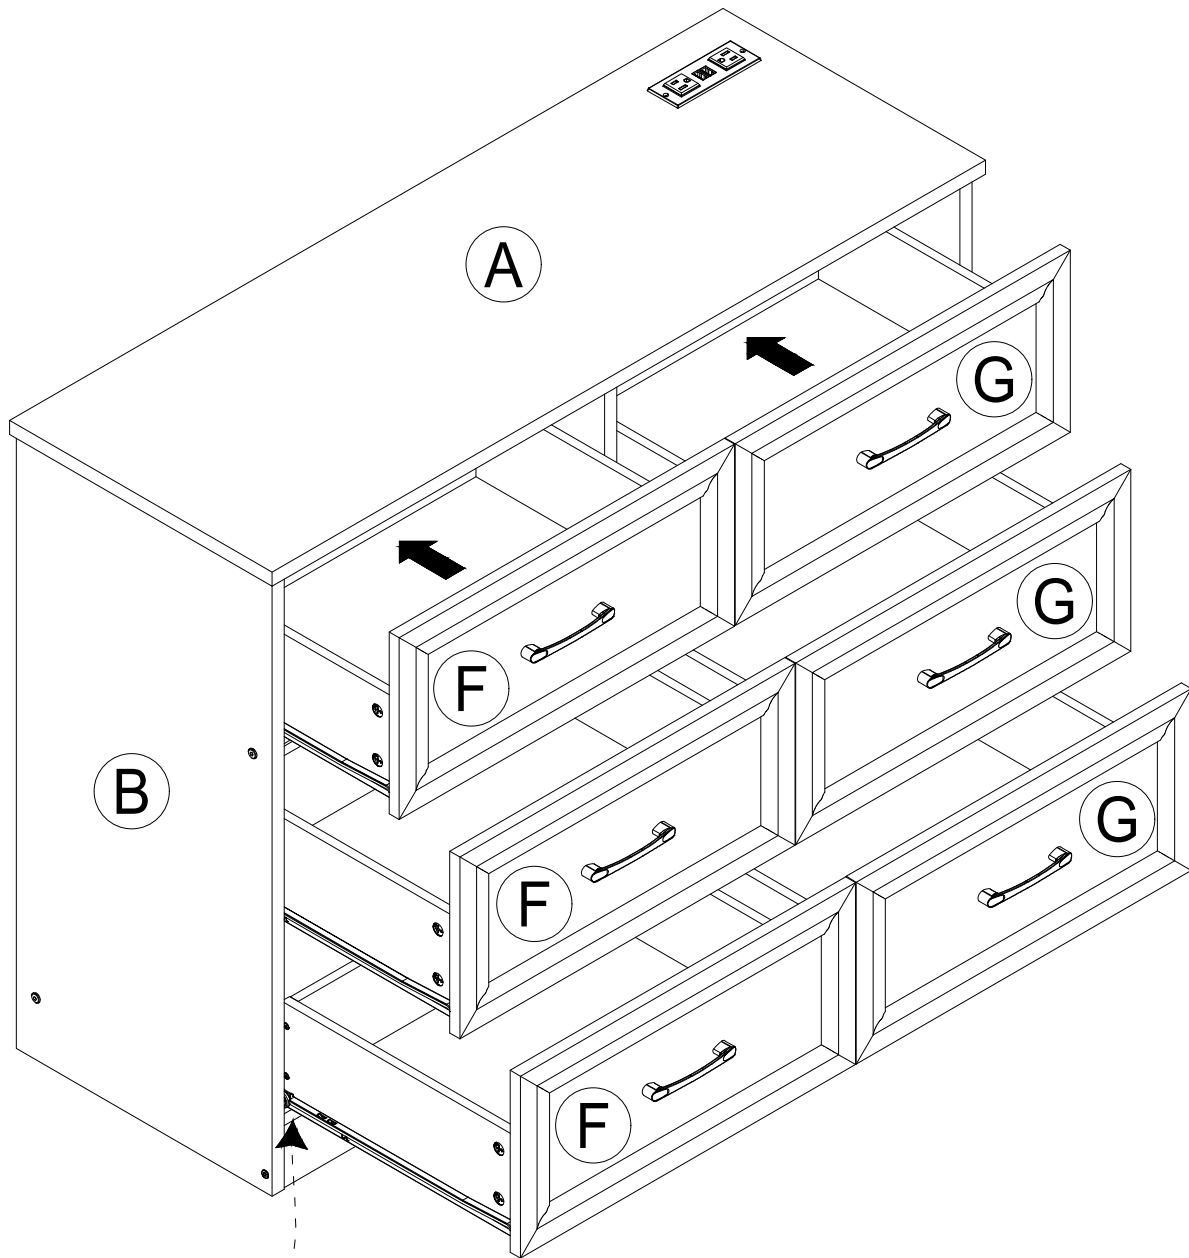


Cabinet Slide

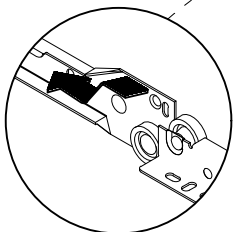

Drawer Slide

STEP18

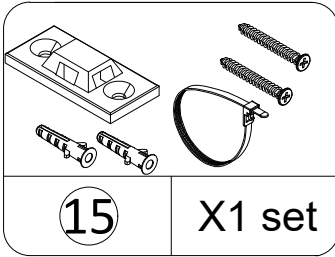


We have included a set of tipping restraint hardware for this unit. You must install this hardware to prevent accidents or injuries that can result from the unit falling. When properly installed, this restraint can provide protection against the unexpected tipping of the unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your unit.


NOTE: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware may be required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.




Install the tipping restraint hardware

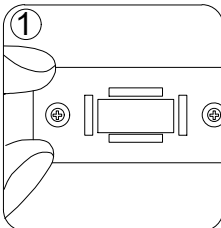


1. make mark on the wall

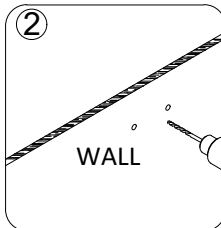


2. drill two Ø6 holes on the wall

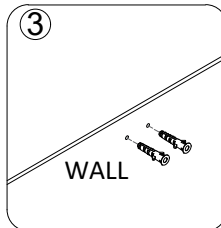

3. put two anchors in the holes

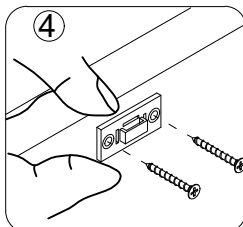

4. fix the device on the wall by the long screws

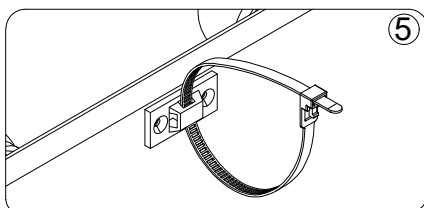

5. Push the cabinet close to the wall so that the two bases are close to each other, and then put on nylon tie to tighten it.

