

installation instructions:

Thermoformed PVC Ceiling Medallions

SAFETY INSTRUCTIONS

- Make sure to use the correct tools recommended.
- Wear proper protective gear.
- Follow fixture, power tools, paint manufacturers' instructions, and users manuals.
- Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- ☐ Power Grab Adhesive
- ☐ Sand Paper
- ☐ Cloth


SPECIAL INSTRUCTIONS AND NOTES

- Thoroughly read through the installation instructions to familiarize yourself with the process before you begin installation.
- Before installing, acclimate the product in the room where you will be installing them.
- It is recommended that you finish the medallion.

STEP BY STEP INSTRUCTIONS

1. It is recommended that you prepare the installation surface with sandpaper by removing excessive bumps and/or texture. Wipe clean and apply primer to ensure proper adhesion.
 2. Apply adhesive to the back of the ceiling medallion on the outside of the groove. (Follow adhesive manufacturer's instructions for proper application)
 3. Push the medallion in place firmly and you are done.
- Note: Once installed, you can leave the medallion with its white factory finish, or prime and paint any desired color.

EXAMPLE INSTALLATION DIAGRAMS

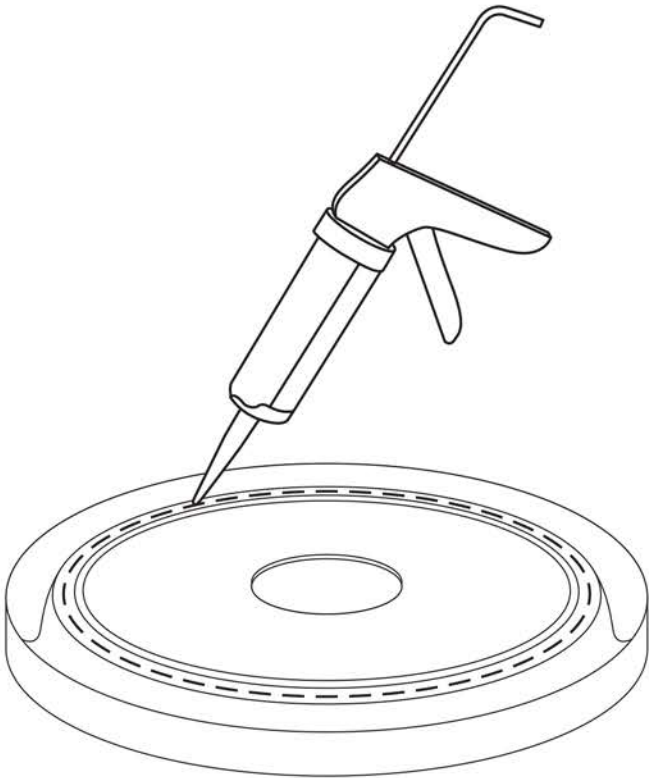

We Can Help. Call (866) 607-0453



Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

www.ekenamillwork.com