
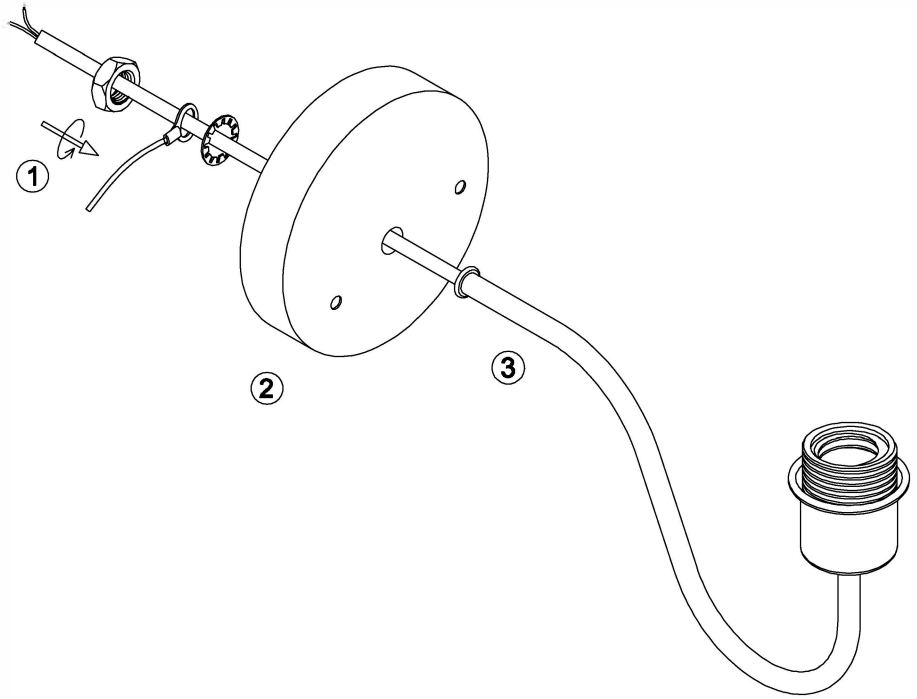


1.Install the arm ③ to the canopy ② with lock nut and teeth lock washer ①.
(ground line is between the teeth lock washer and lock nut)

Please read carefully before installation!!!
Note : Please make sure that the electricity is powered off during installation !
Only a professional electrician should install this kind of product !

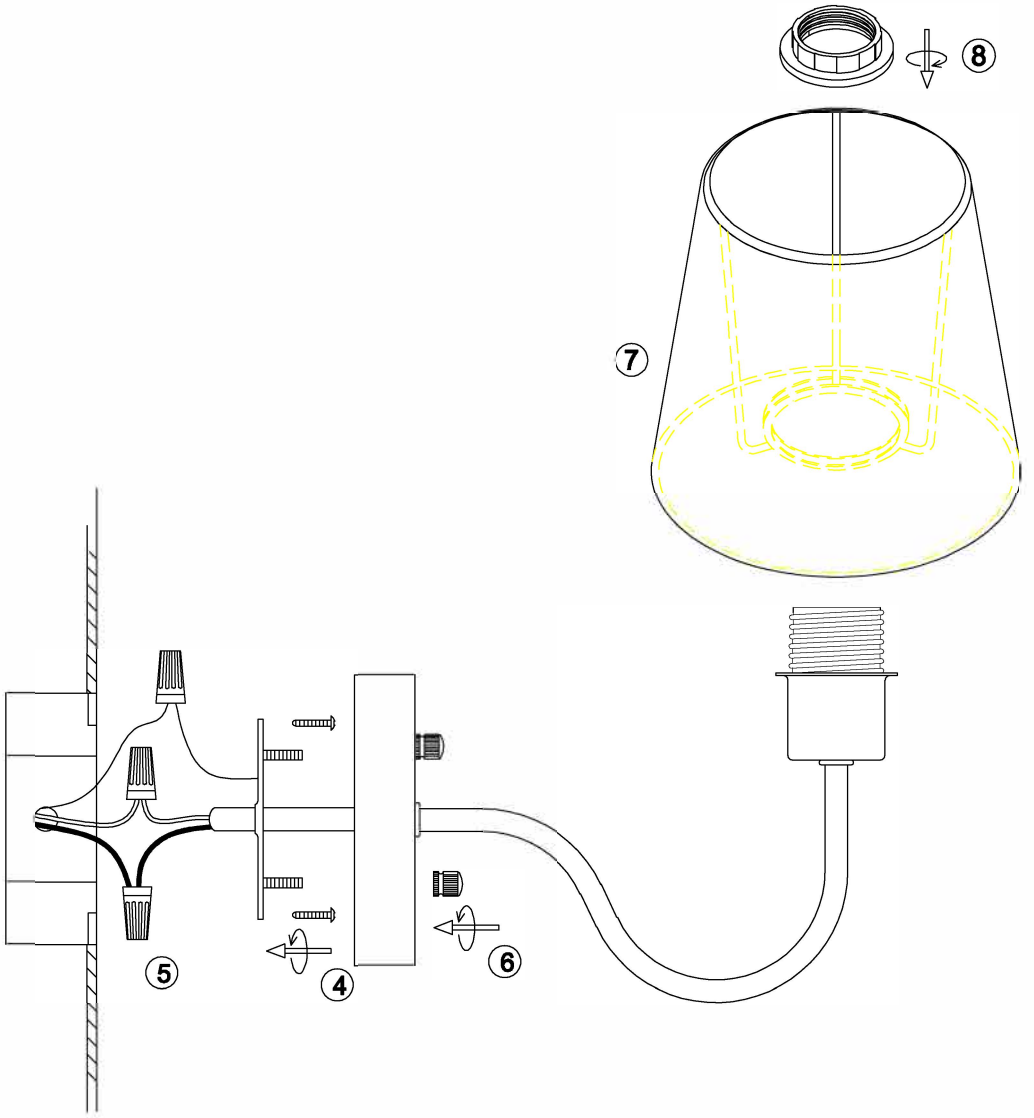

2.Install the bracket to the junction box with screw ④.
3.Connect the wire ⑤ to your home line.
4.Install the fixture on the bracket with cap nut ⑥.
5.Install the frabic lampshade ⑦ on the bulbholder with socket ring ⑧, and install the bulb, installation finish.