


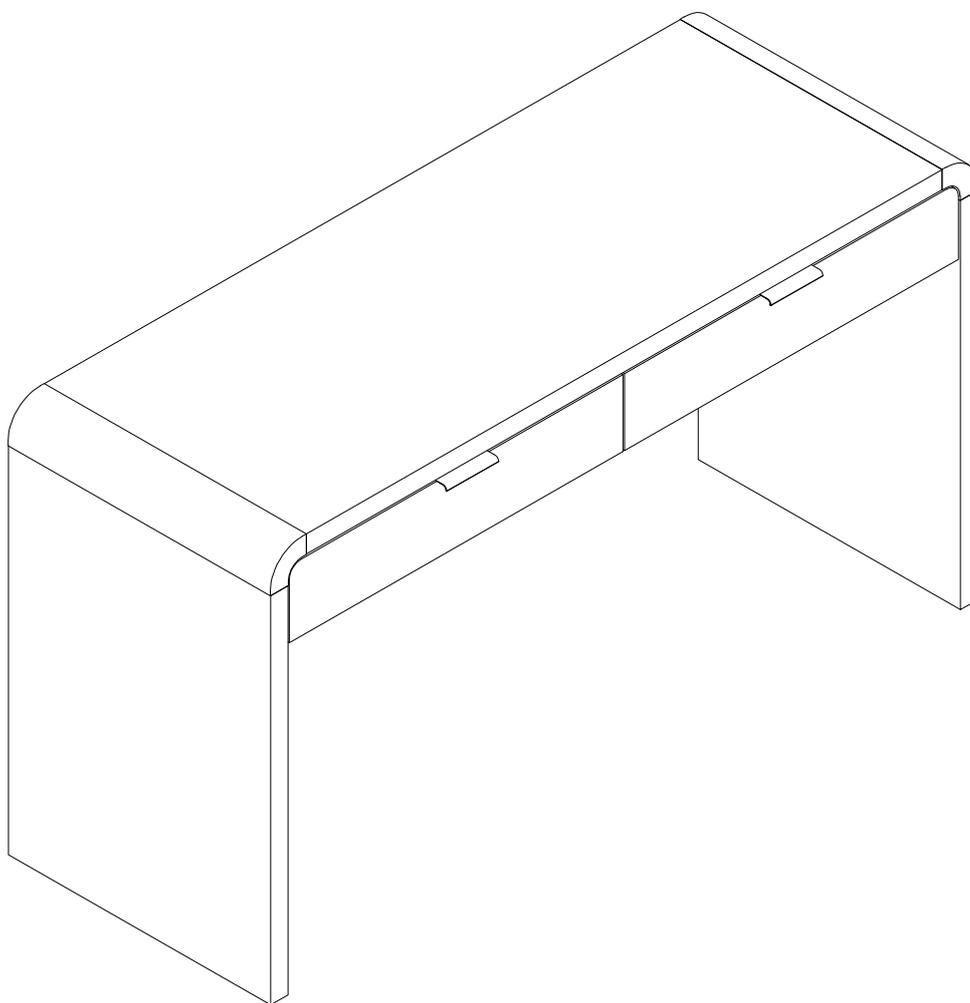

**MANHATTAN
COMFORT**

DK001







STOP!

Before beginning the assembly process, ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

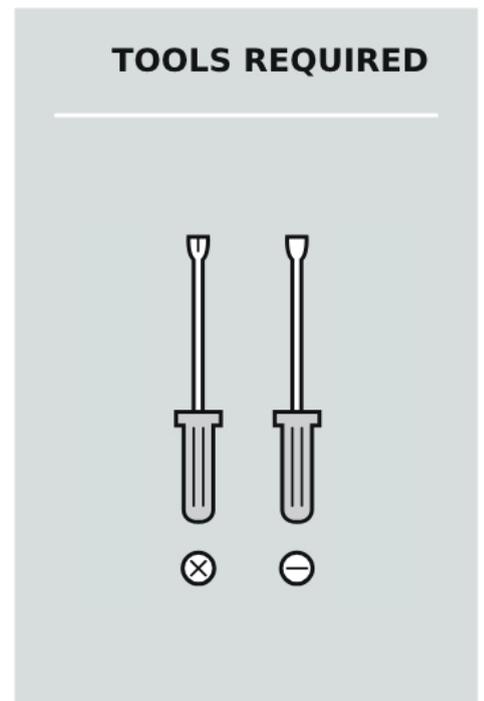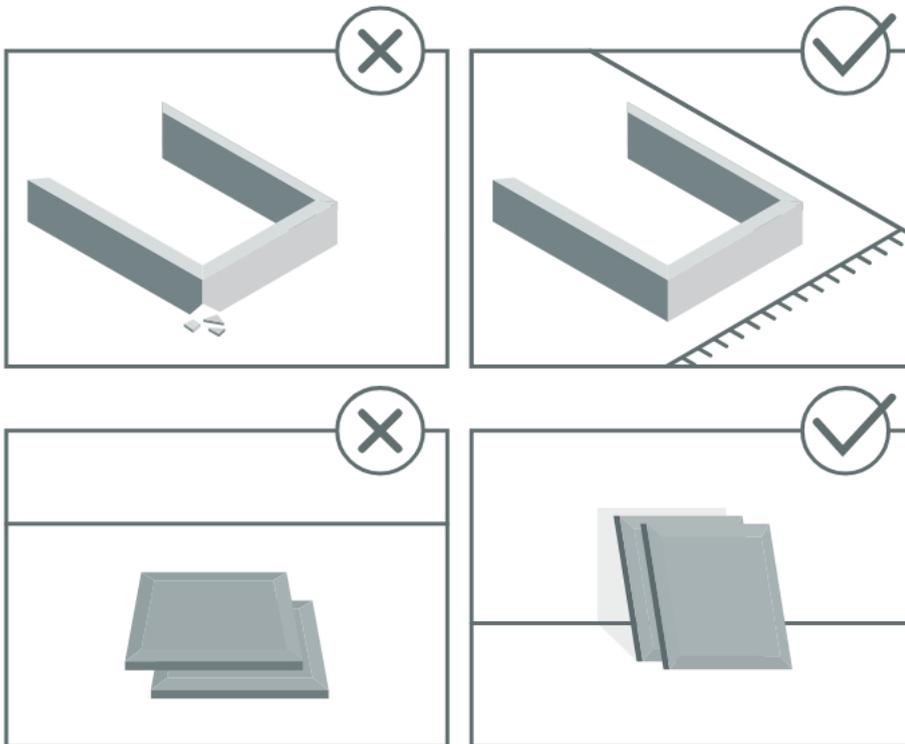

View our assembly video online:
WWW.MANHATTANCOMFORT.COM




Stuck? Question? We are here to help.
tel: **908-888-0818**
e-mail:

Support Site



Included in this package:

- A. TOP PANEL(1)
- B. BETWEEN PANEL(1)
- C. LEFT PANEL (1)
- D. RIGHT PANEL (1)
- E. BACK PANEL (1)
- F. CURVED PANEL (2)
- G. FRONT HORIZONTAL PANEL (1)
- H. BEHIND HORIZONTAL PANEL (1)
- I. DRAWER LEFT FRONT PANEL (1)
- J. DRAWER LEFT PANEL (2)
- K. DRAWER RIGHT PANEL (2)
- L. DRAWER BACK PANEL (2)
- M. DRAWER BOTTOM PANEL (2)
- N. DRAWER SUPPORT PANEL (2)
- O. DRAWER RIGHT FRONT PANEL (1)

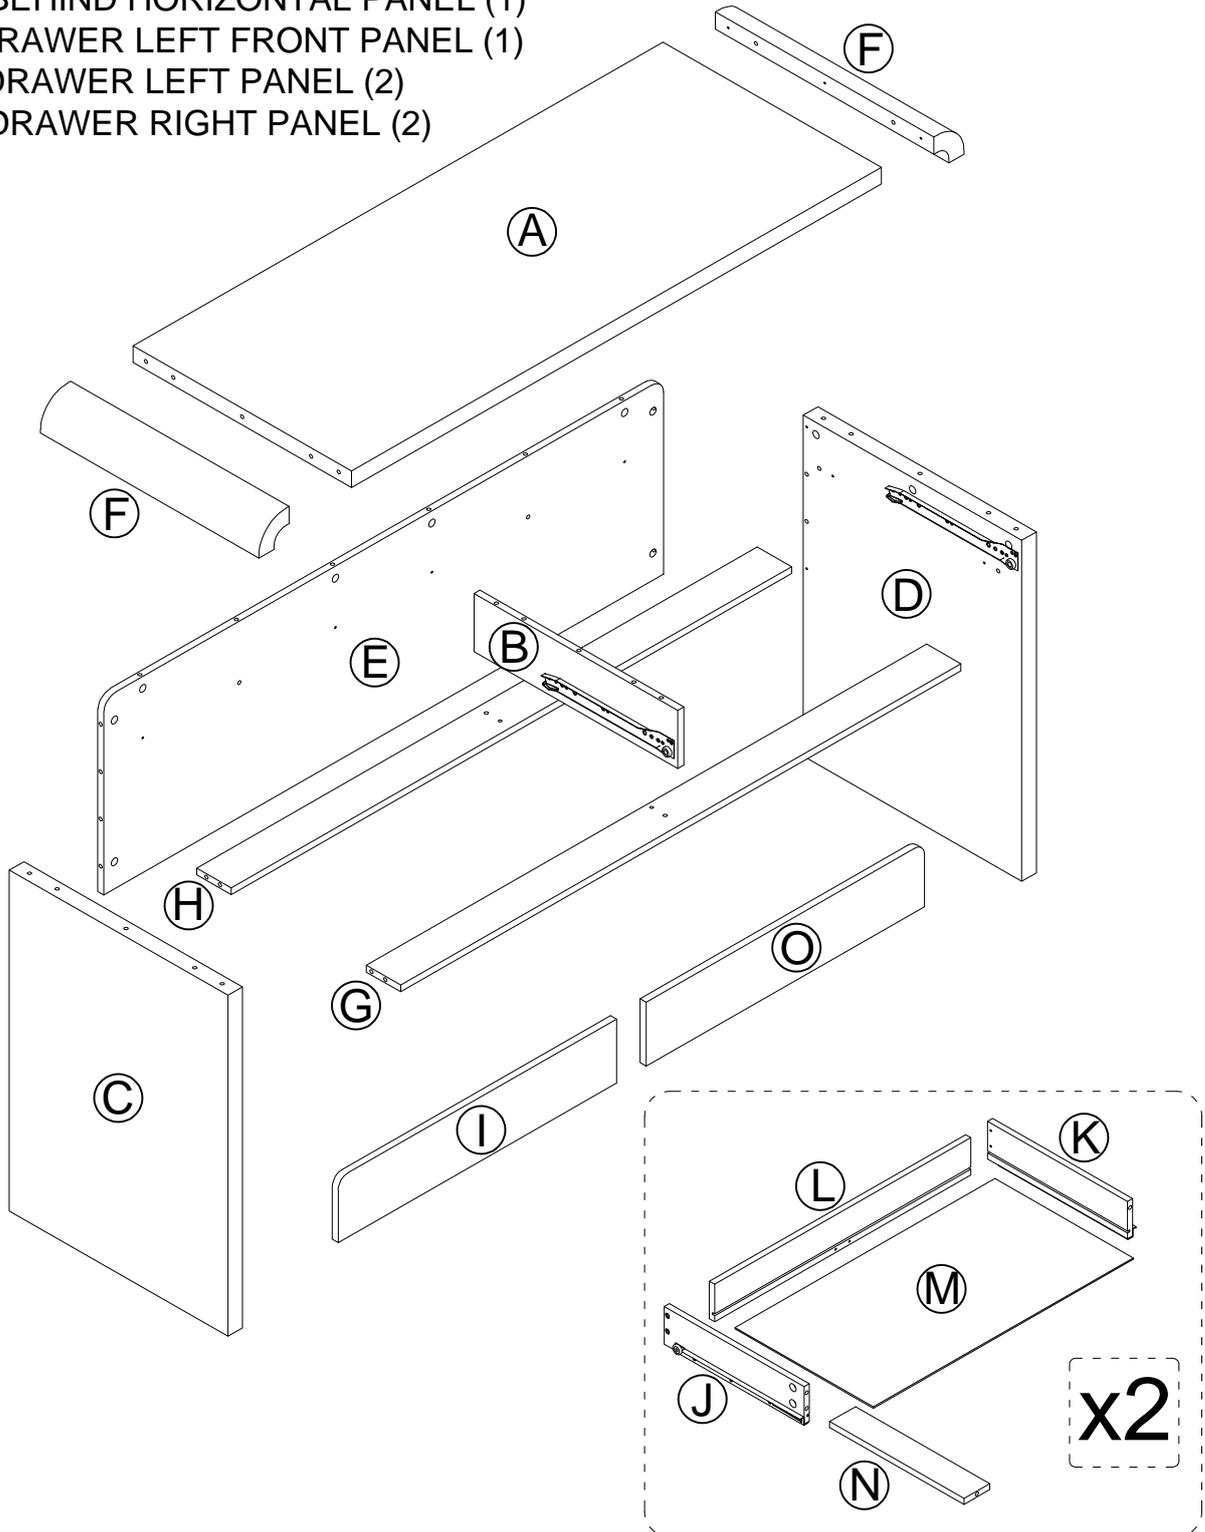


Hardware Identification


① KD BOLT - 41pcs
L=35mm




② KD LARGE CAM - 31pcs
Ø15*11mm



③ COVER CAP - 41pcs



④ WOOD DOWEL - 24pcs
Ø8*30mm




⑤ KD SMALL CAM - 10pcs
Ø15*9mm




⑥ SCREW - 2pcs
Ø6*50mm



⑦ BLACK HANDLE-2pcs




⑧ SCREW - 4pcs
Ø3.5*12mm




⑨ SCREW - 12pcs
Ø4*38mm




⑩ LOCK - 1pc





⑪ GOLD HANDLE-2pcs



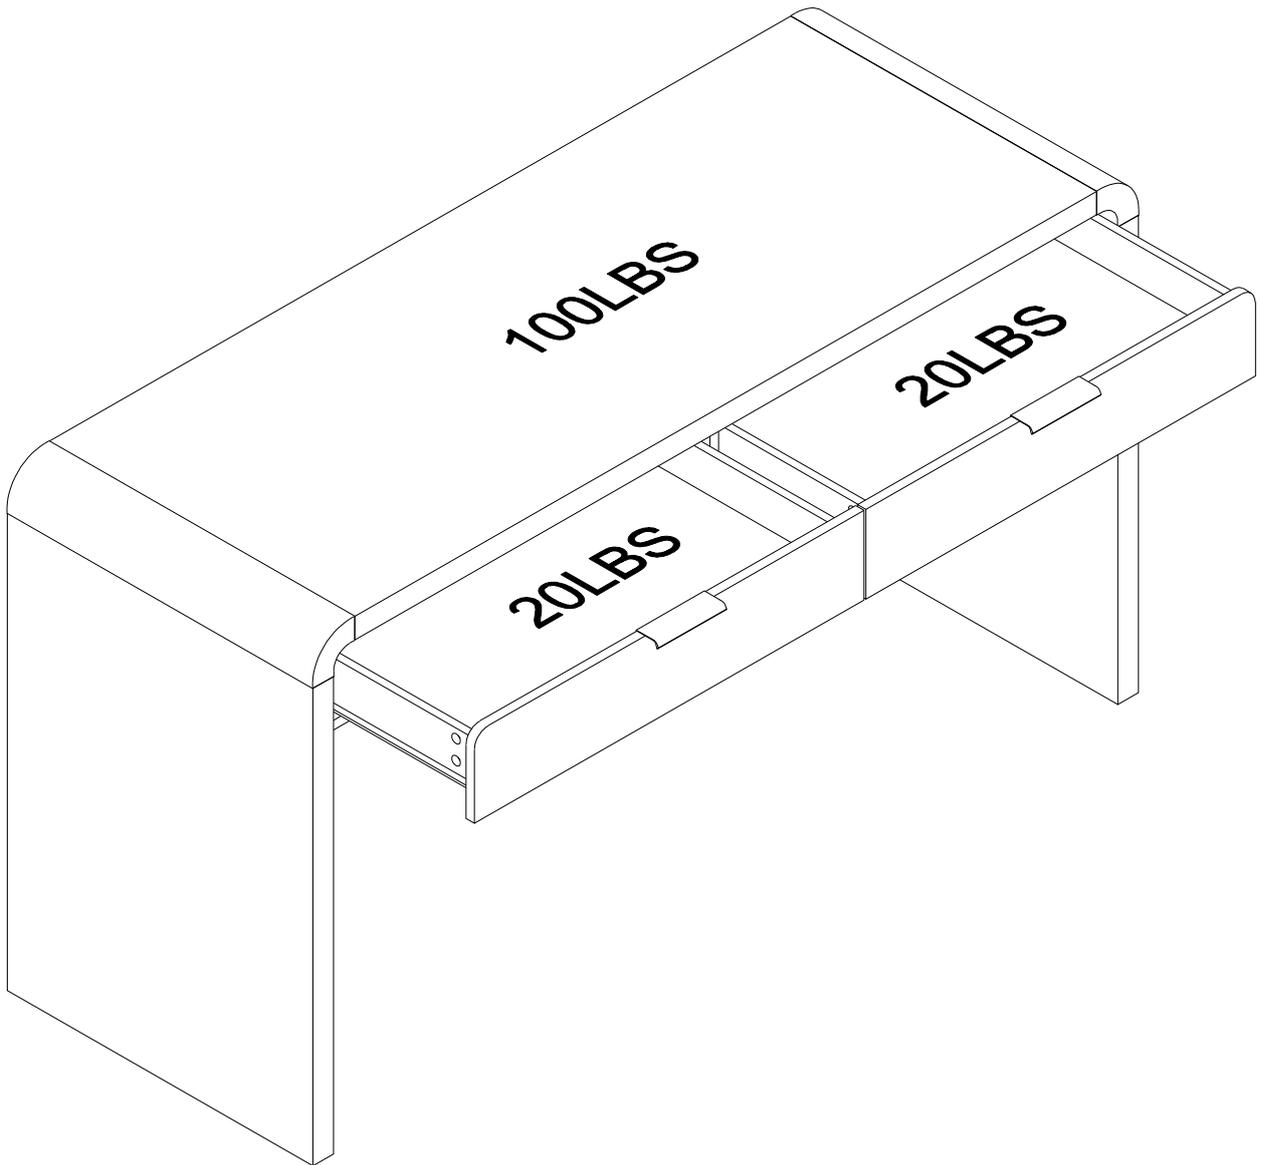


Step 1:

* Insert Nineteen KD BOLT (1) to the TOP PANEL (A) and Two CURVED PANEL(F)

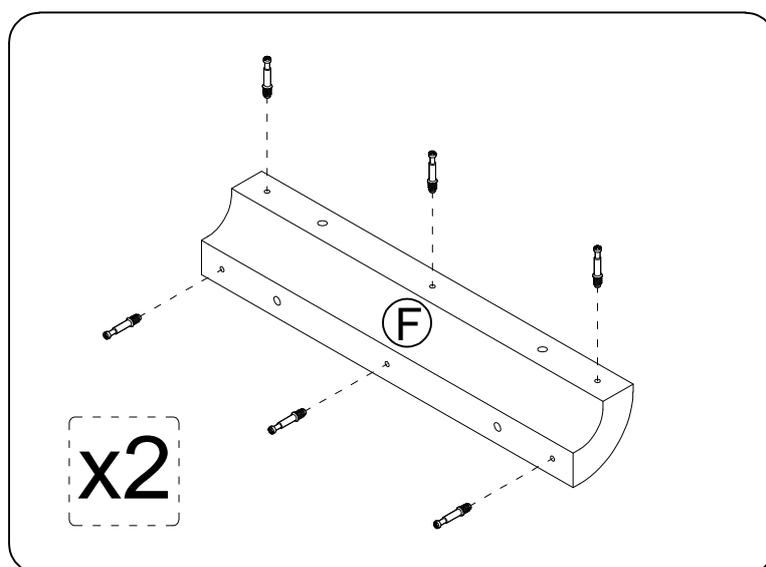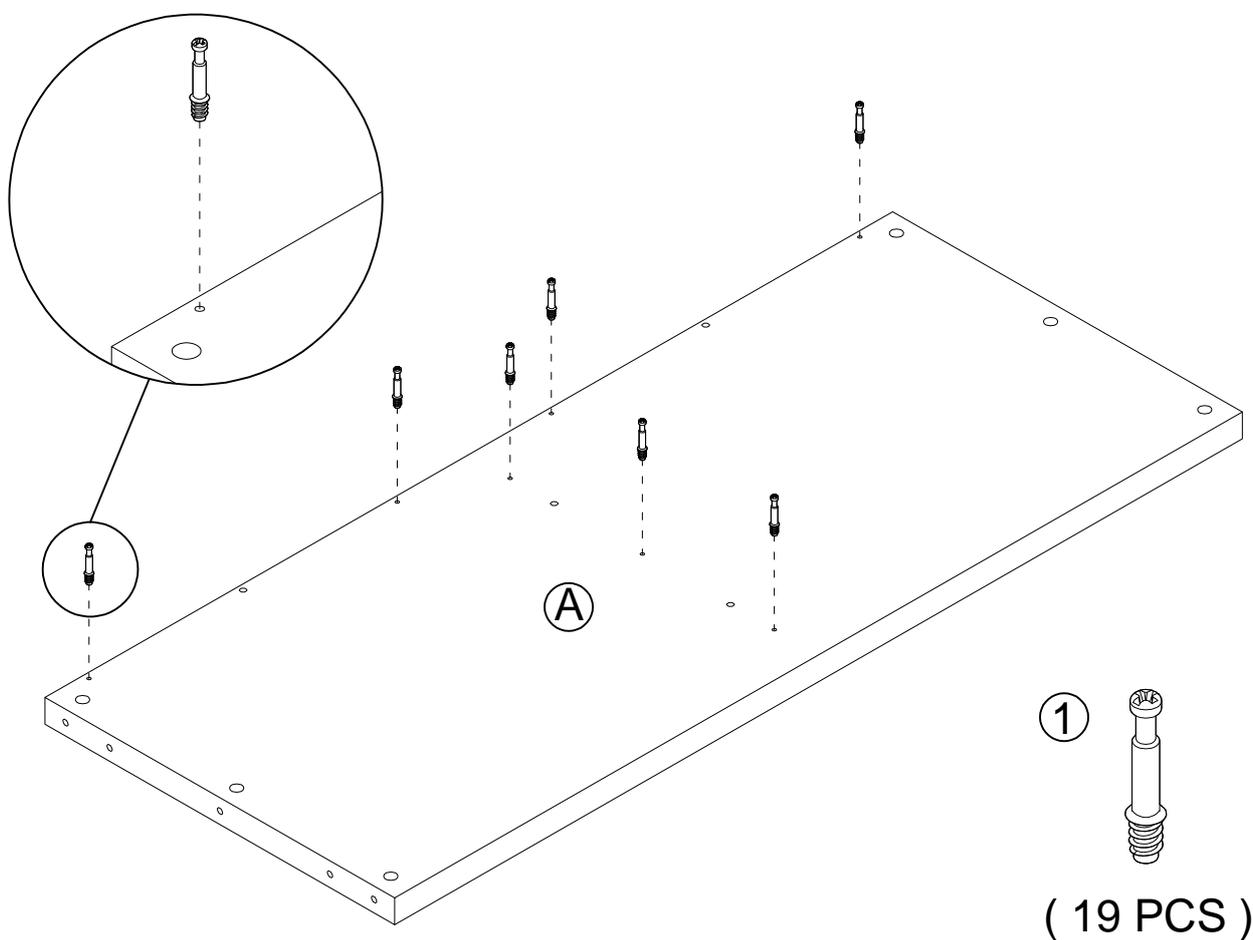


Step 2:

* Insert Eight KD BOLT (1) to the LEFT PANEL (C) and RIGHT PANEL(D).

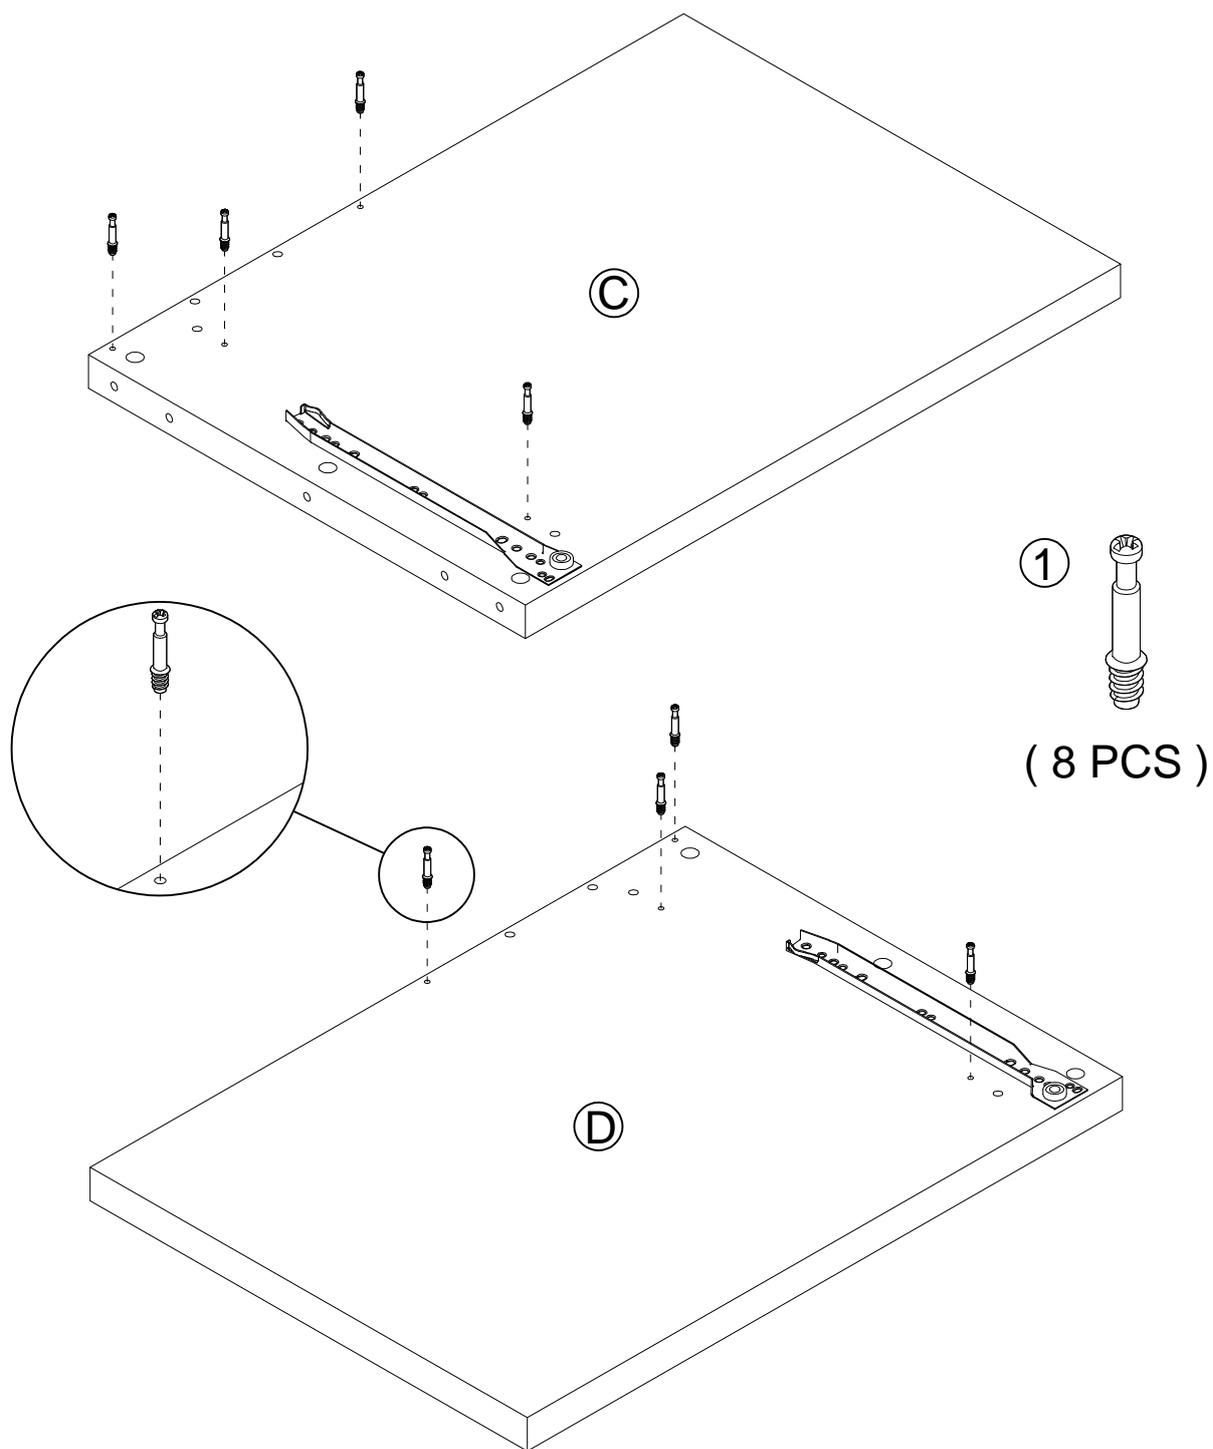


Step 3:

* Insert Four KD BOLT (1) to the BACK PANEL (E).

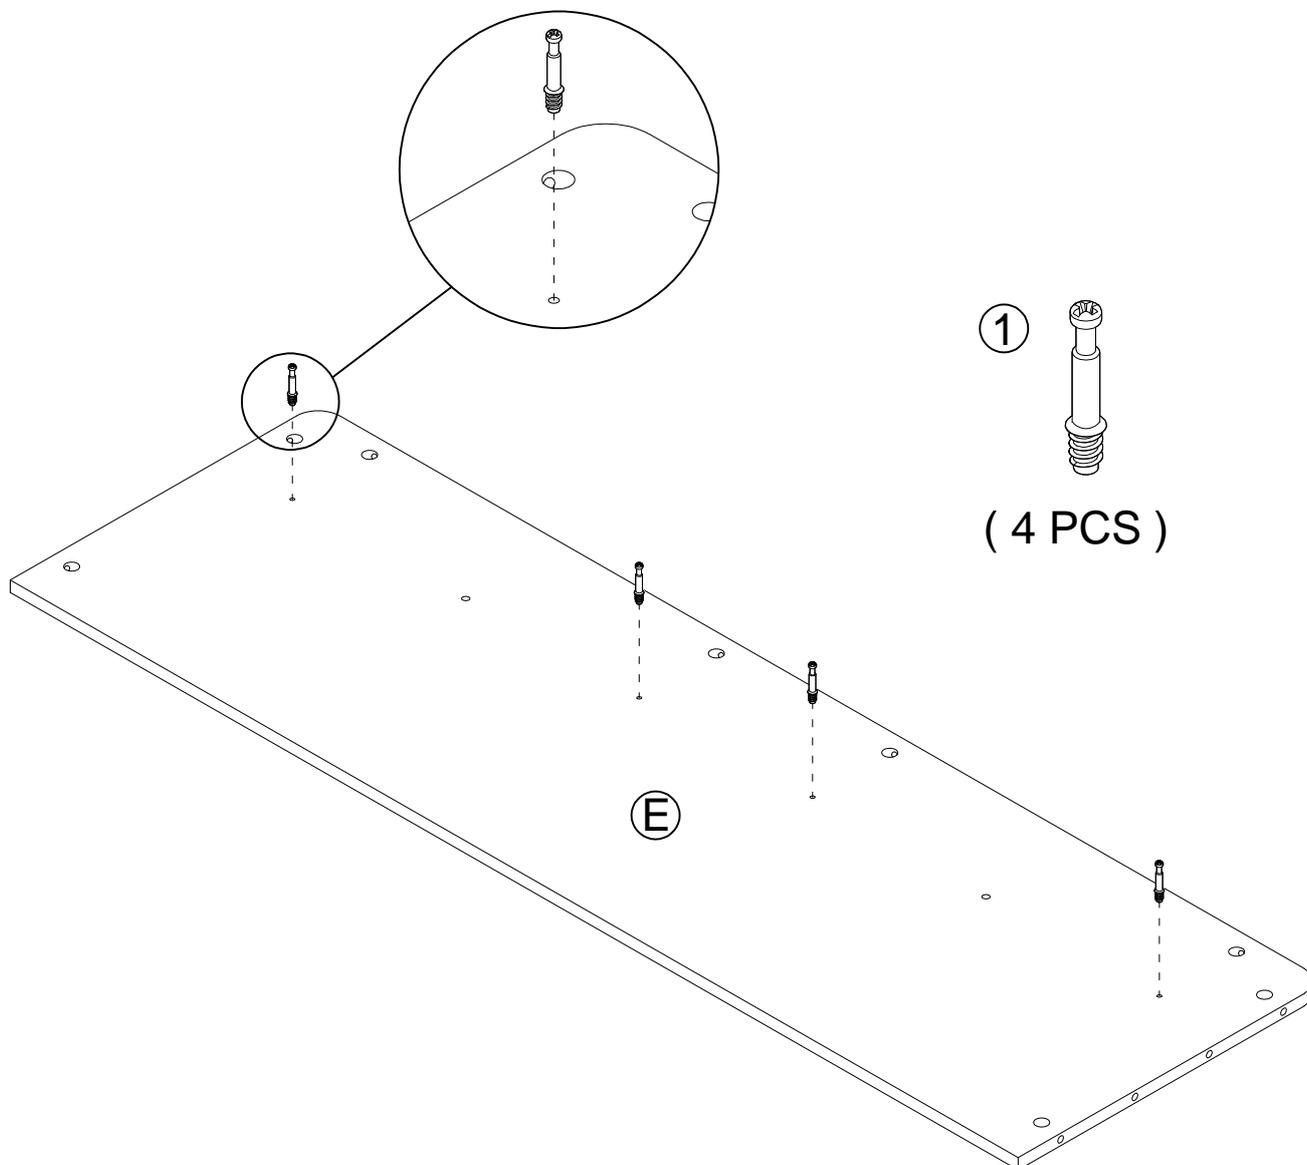


Step 4:

* Attach the FRONT HORIZONTAL PANEL(G) and BEHIND HORIZONTAL PANEL(H) to the BETWEEN PANEL(B) by the Two SCREW(6), LOCK(10) and Two WOOD DOWEL (4).

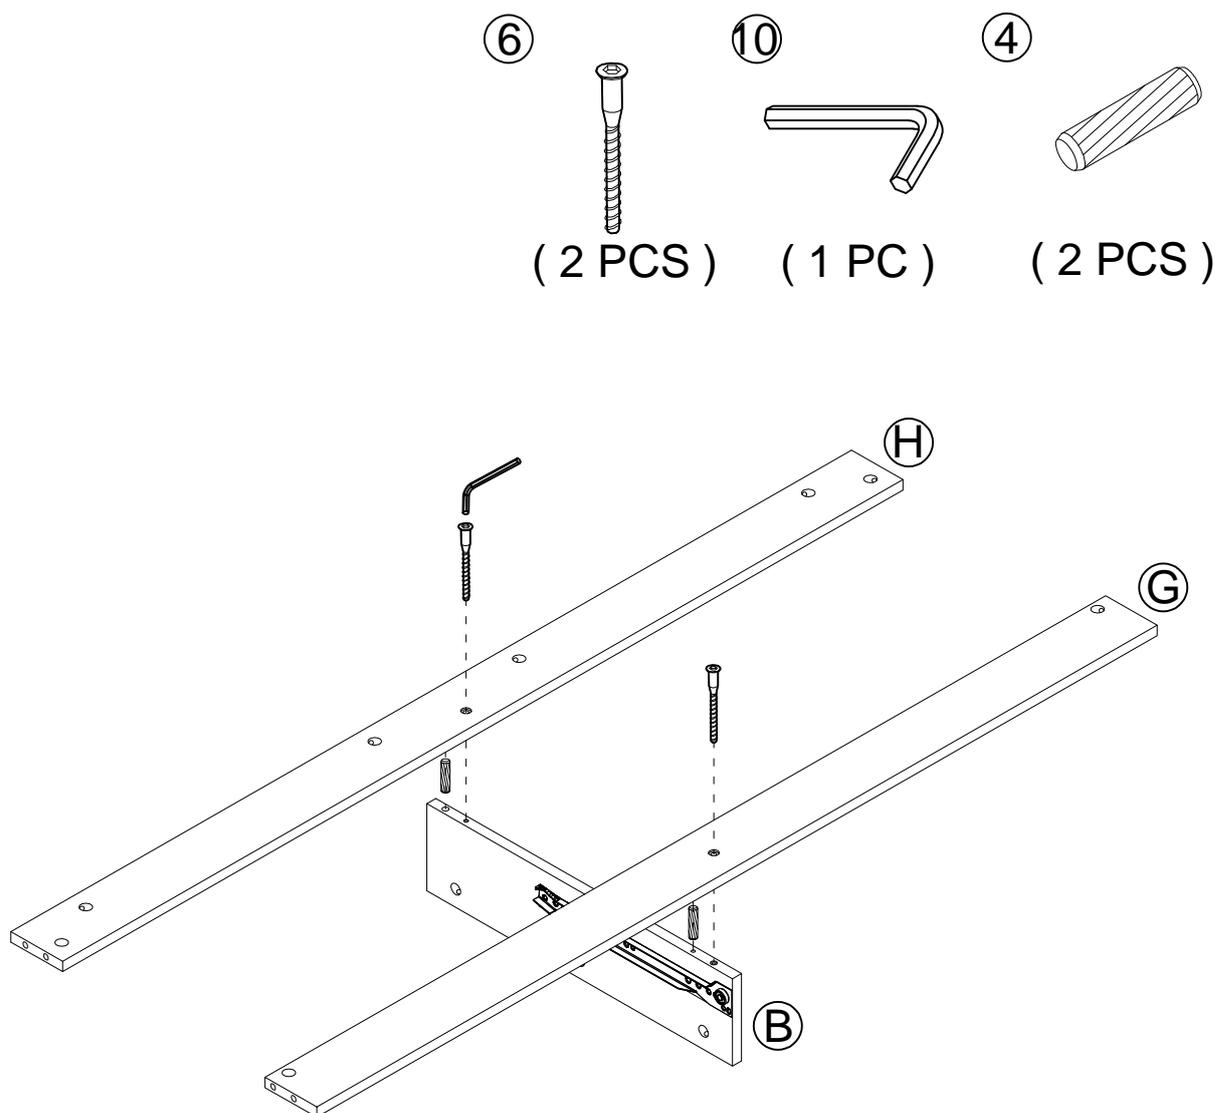


Step 5:

* Attach the BEHIND HORIZONTAL PANEL(H) to the BACK PANEL(E) by the Four KD LARGE CAM (2) , Four COVER CAP (3) and Two WOOD DOWEL (4) .

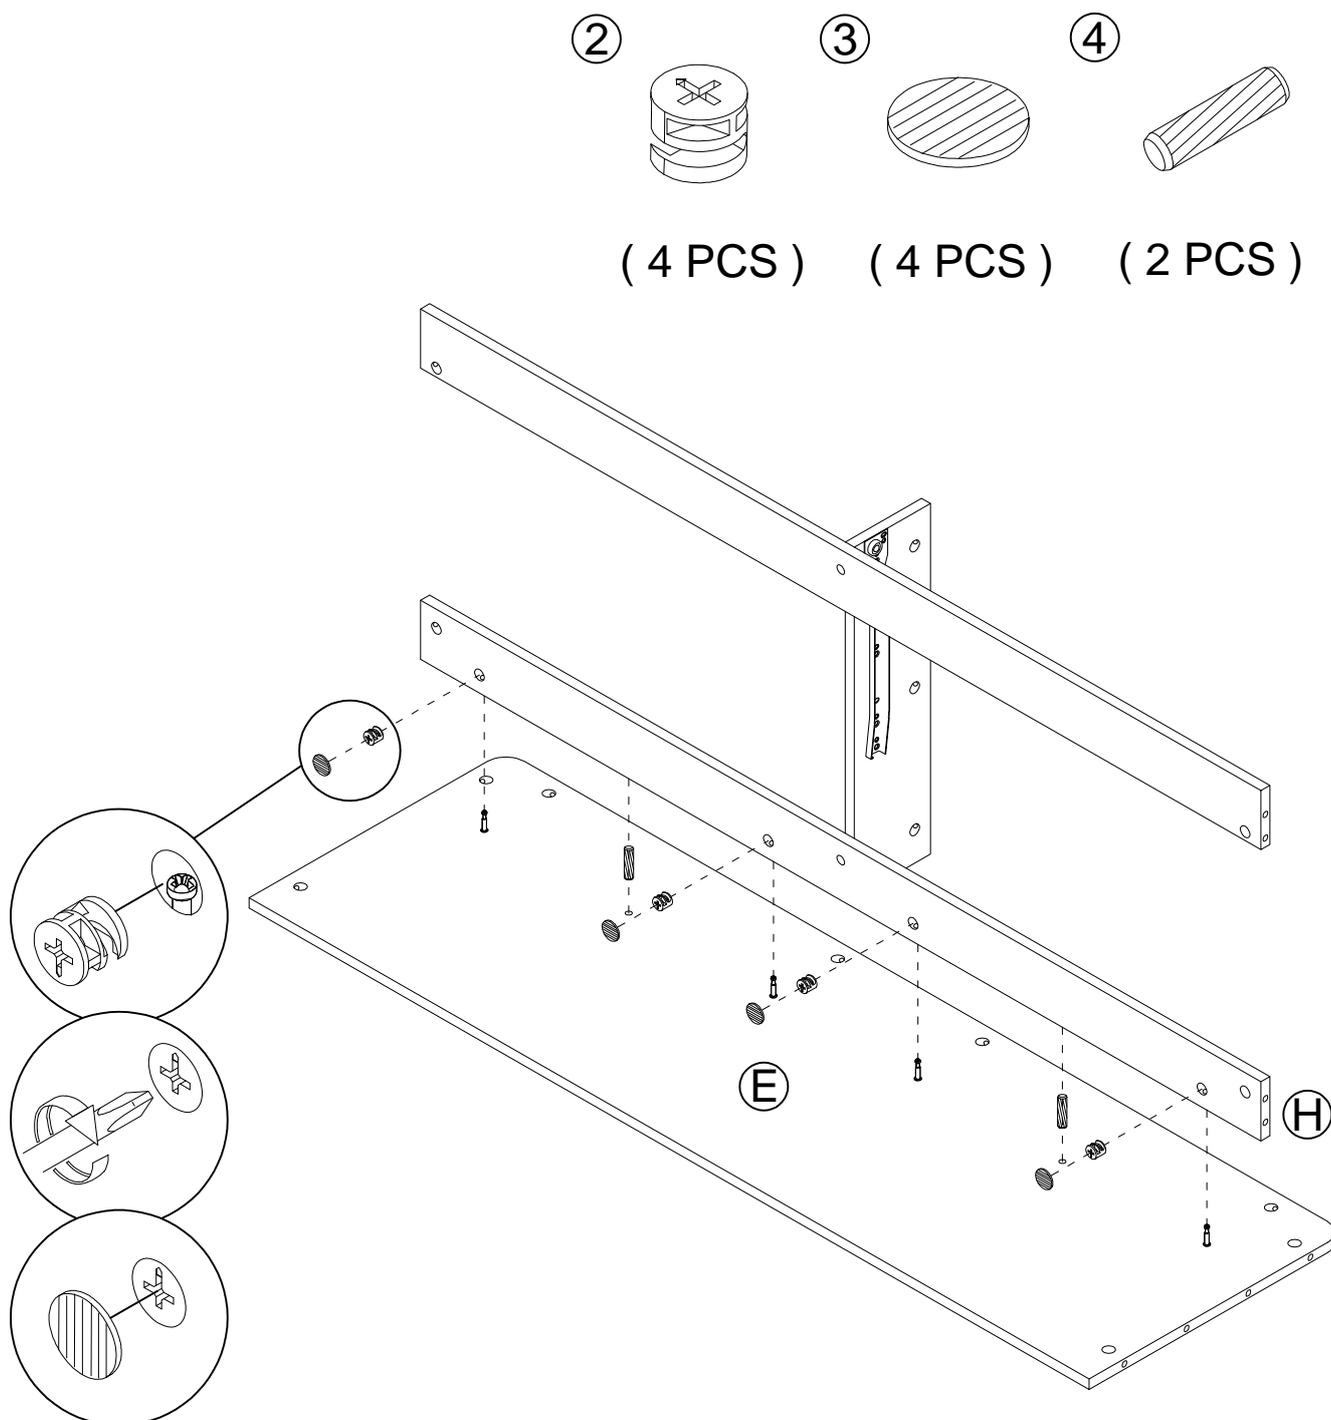



Step 6:

* Attach the LEFT PANEL(C) to the BEHIND HORIZONTAL PANEL(H), FRONT HORIZONTAL PANEL(G) and BACK PANEL(E) by the Four KD LARGE CAM (2) , Four COVER CAP (3) and Four WOOD DOWEL (4).

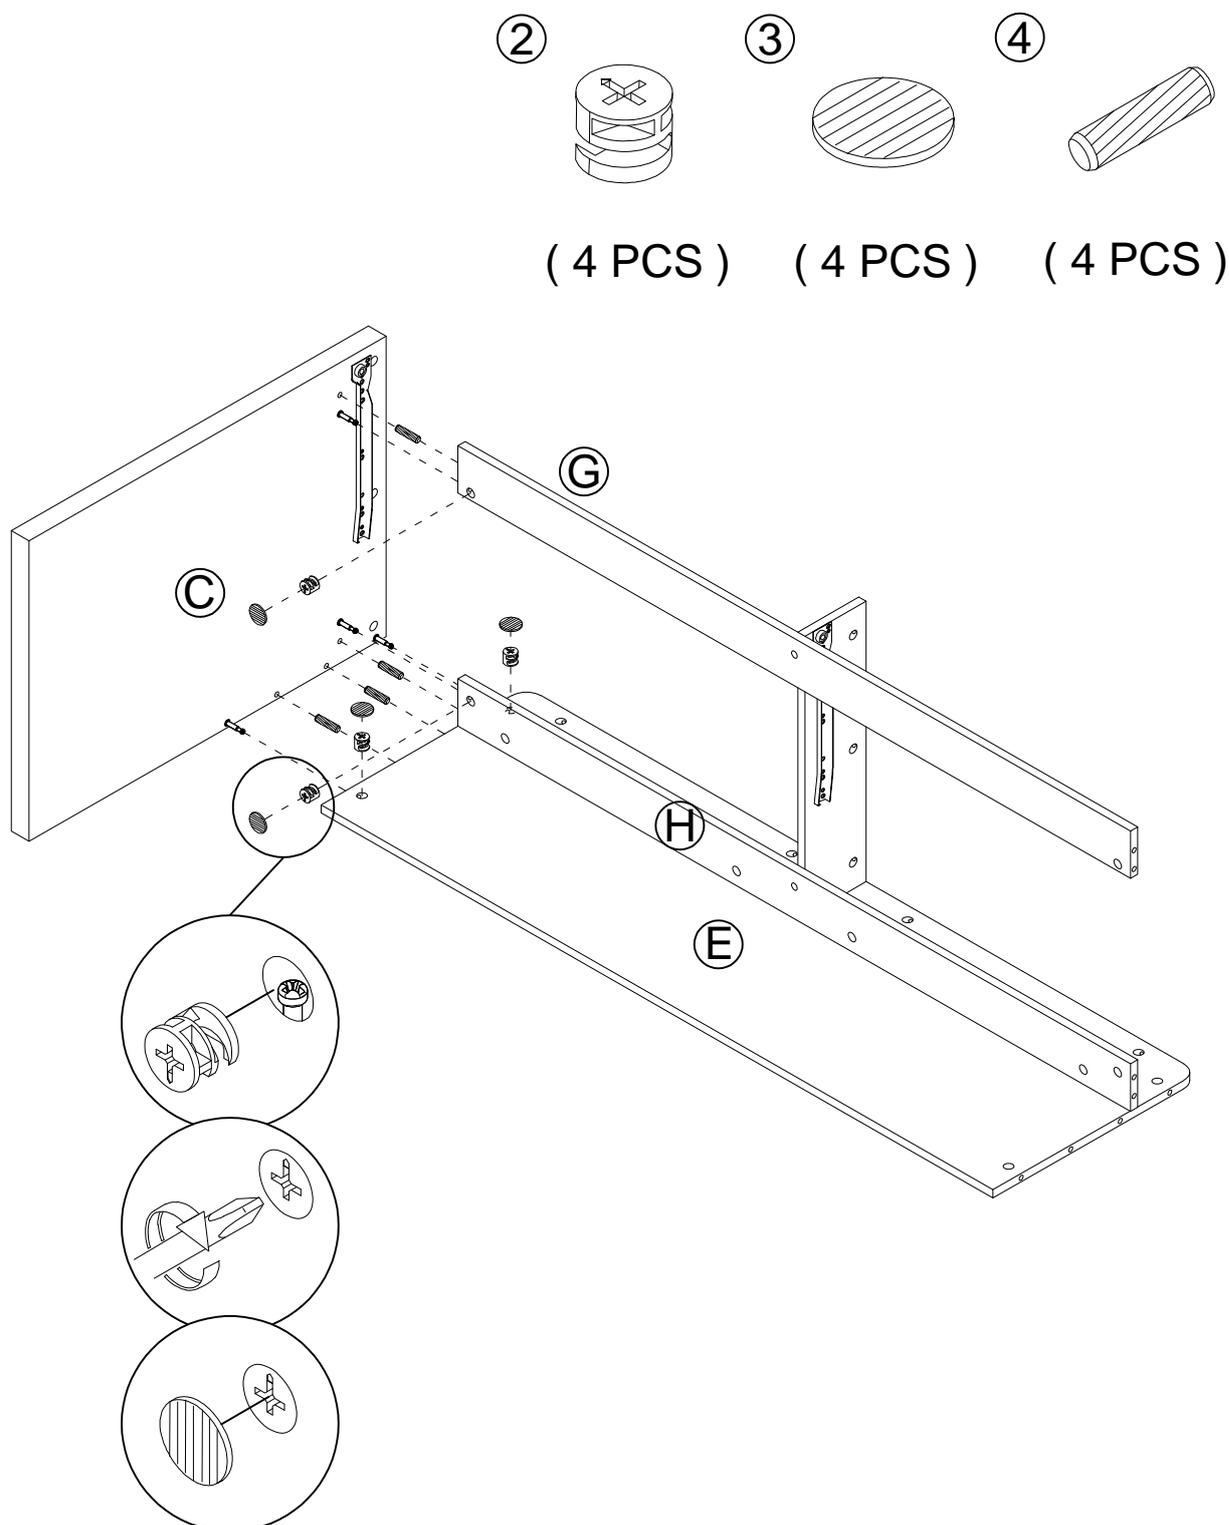

Step 7:


* Attach the RIGHT PANEL(D) to the BEHIND HORIZONTAL PANEL(H), FRONT HORIZONTAL PANEL(G) and BACK PANEL(E) by the Four KD LARGE CAM (2) , Four COVER CAP (3) and Four WOOD DOWEL (4).

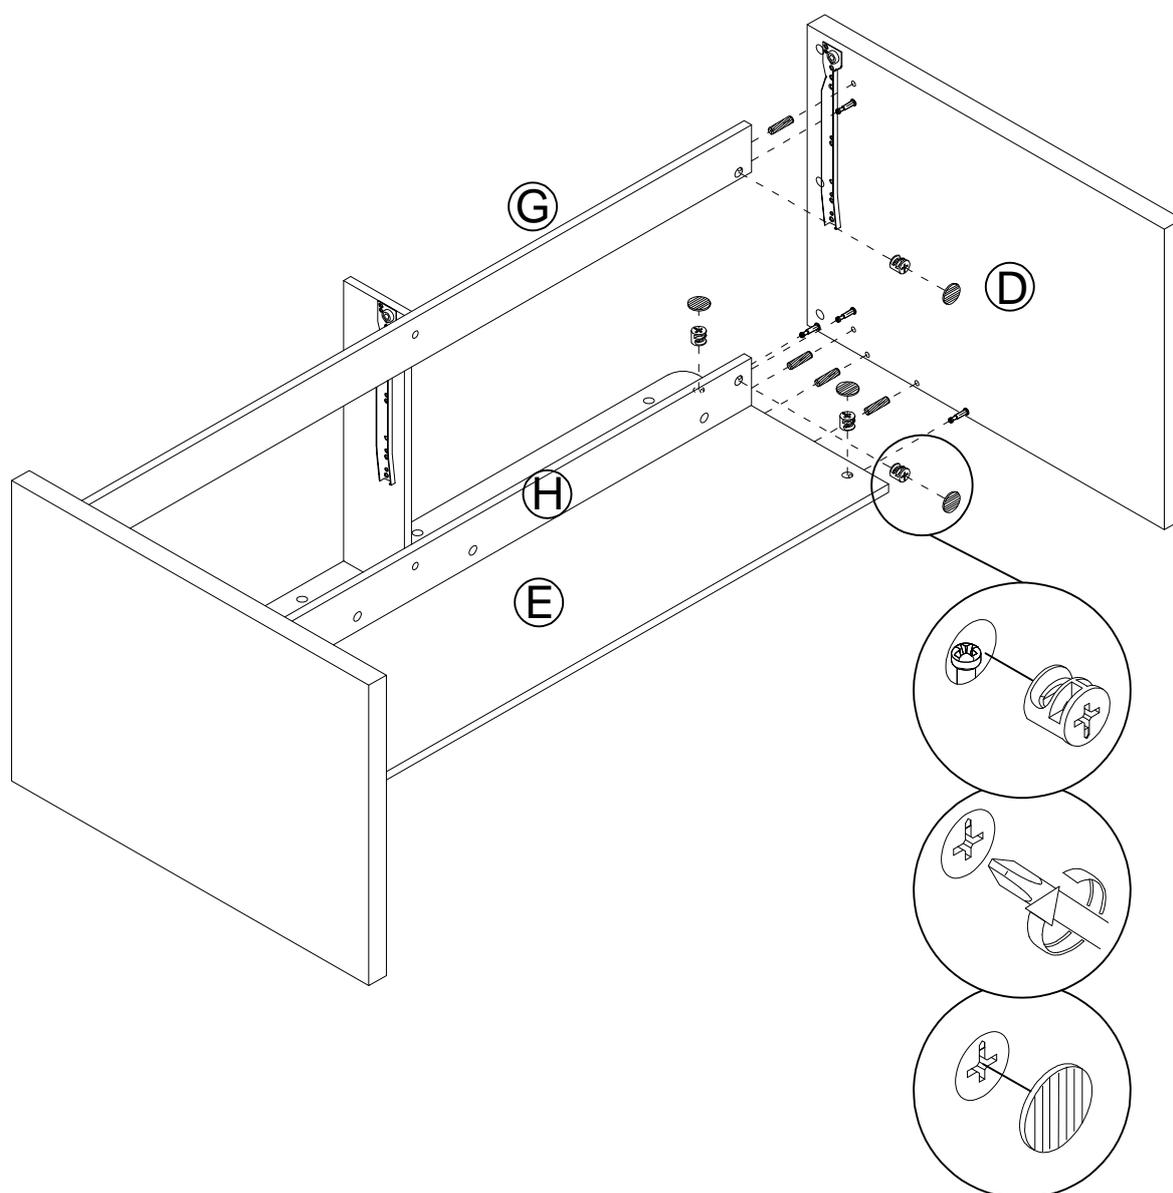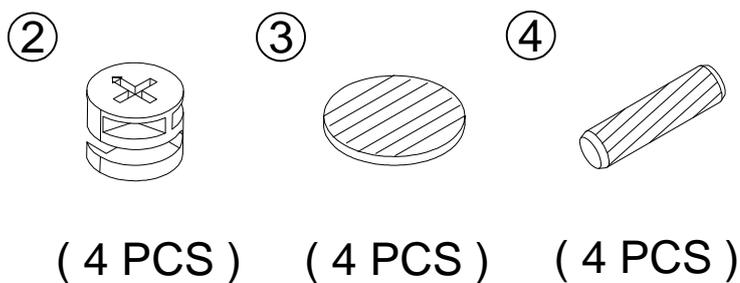

Step 8:


* Attach the Two CURVED PANEL(F) to the TOP PANEL(A) by the Six KD LARGE CAM (2) , Six COVER CAP (3) and Four WOOD DOWEL (4) .

②




(6 PCS)

③




(6 PCS)

④




(4 PCS)

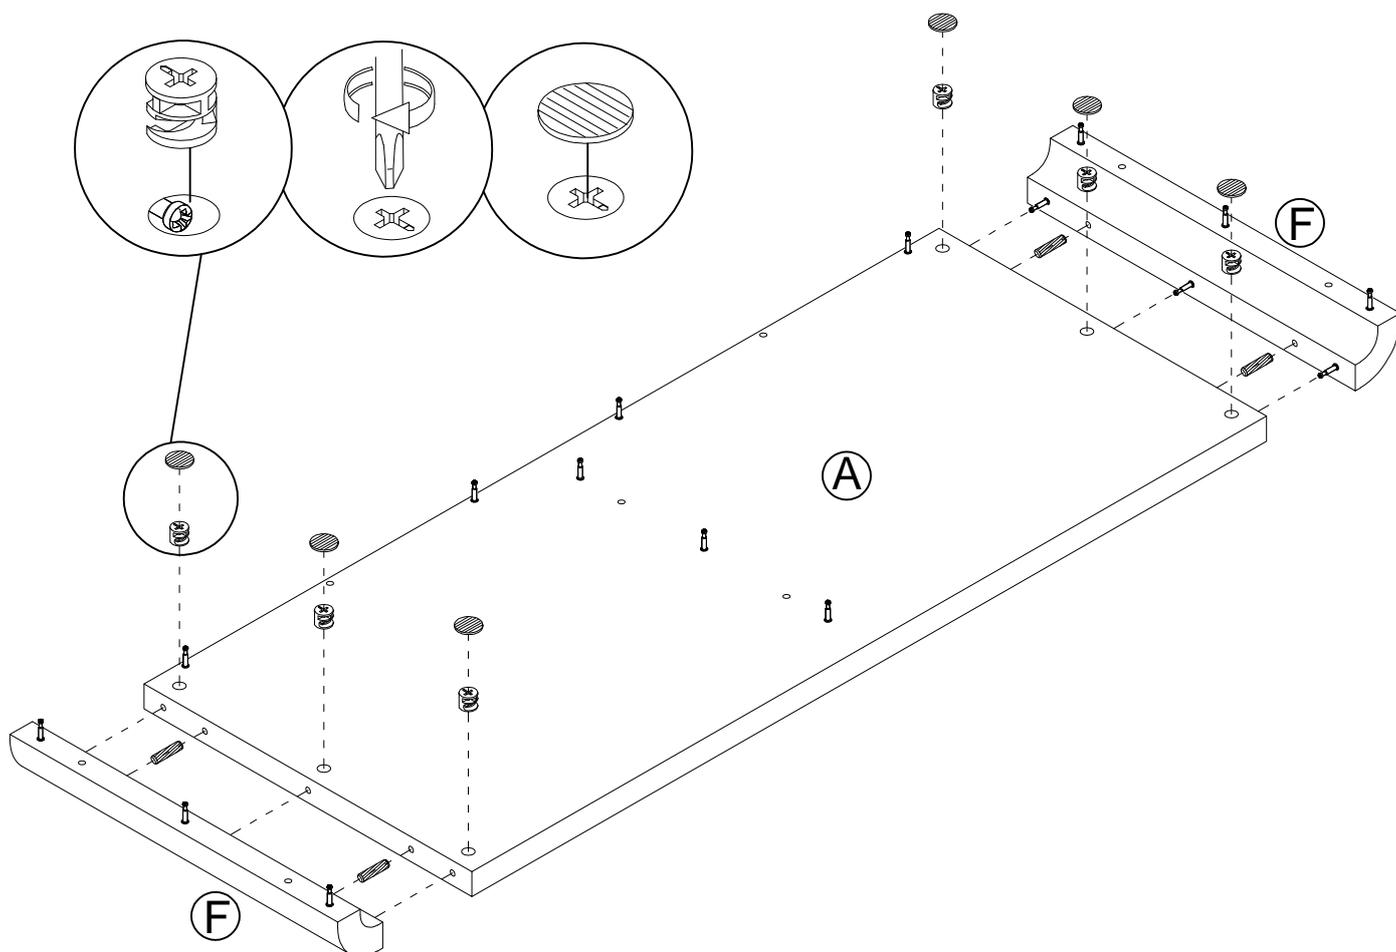


Step 9:

* Attach the Two CURVED PANEL(F) to the LEFT PANEL(C),BACK PANEL(E), BETWEEN PANEL(B) and RIGHT PANEL(D) by the Thirteen KD LARGE CAM (2) , Thirteen COVER CAP (3) and Eight WOOD DOWEL (4) .


②




③



④




(13 PCS) (13 PCS) (8 PCS)

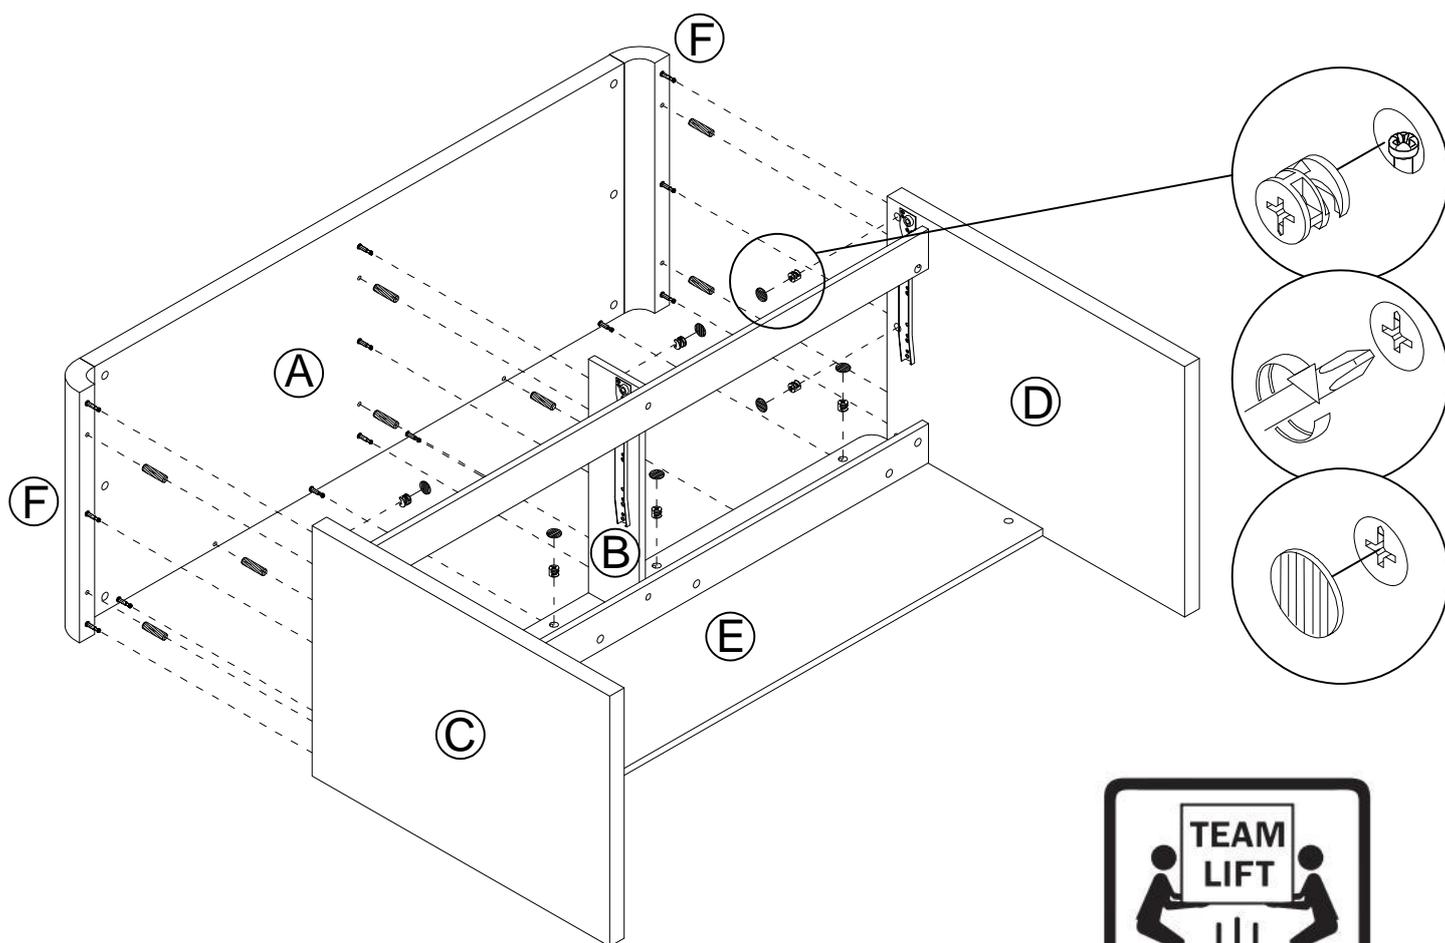


Step 10:

* Assemble the DRAWER BACK PANEL(L) to the DRAWER LEFT PANEL (J) and DRAWER RIGHT PANEL (K) by the SCREW (9) .

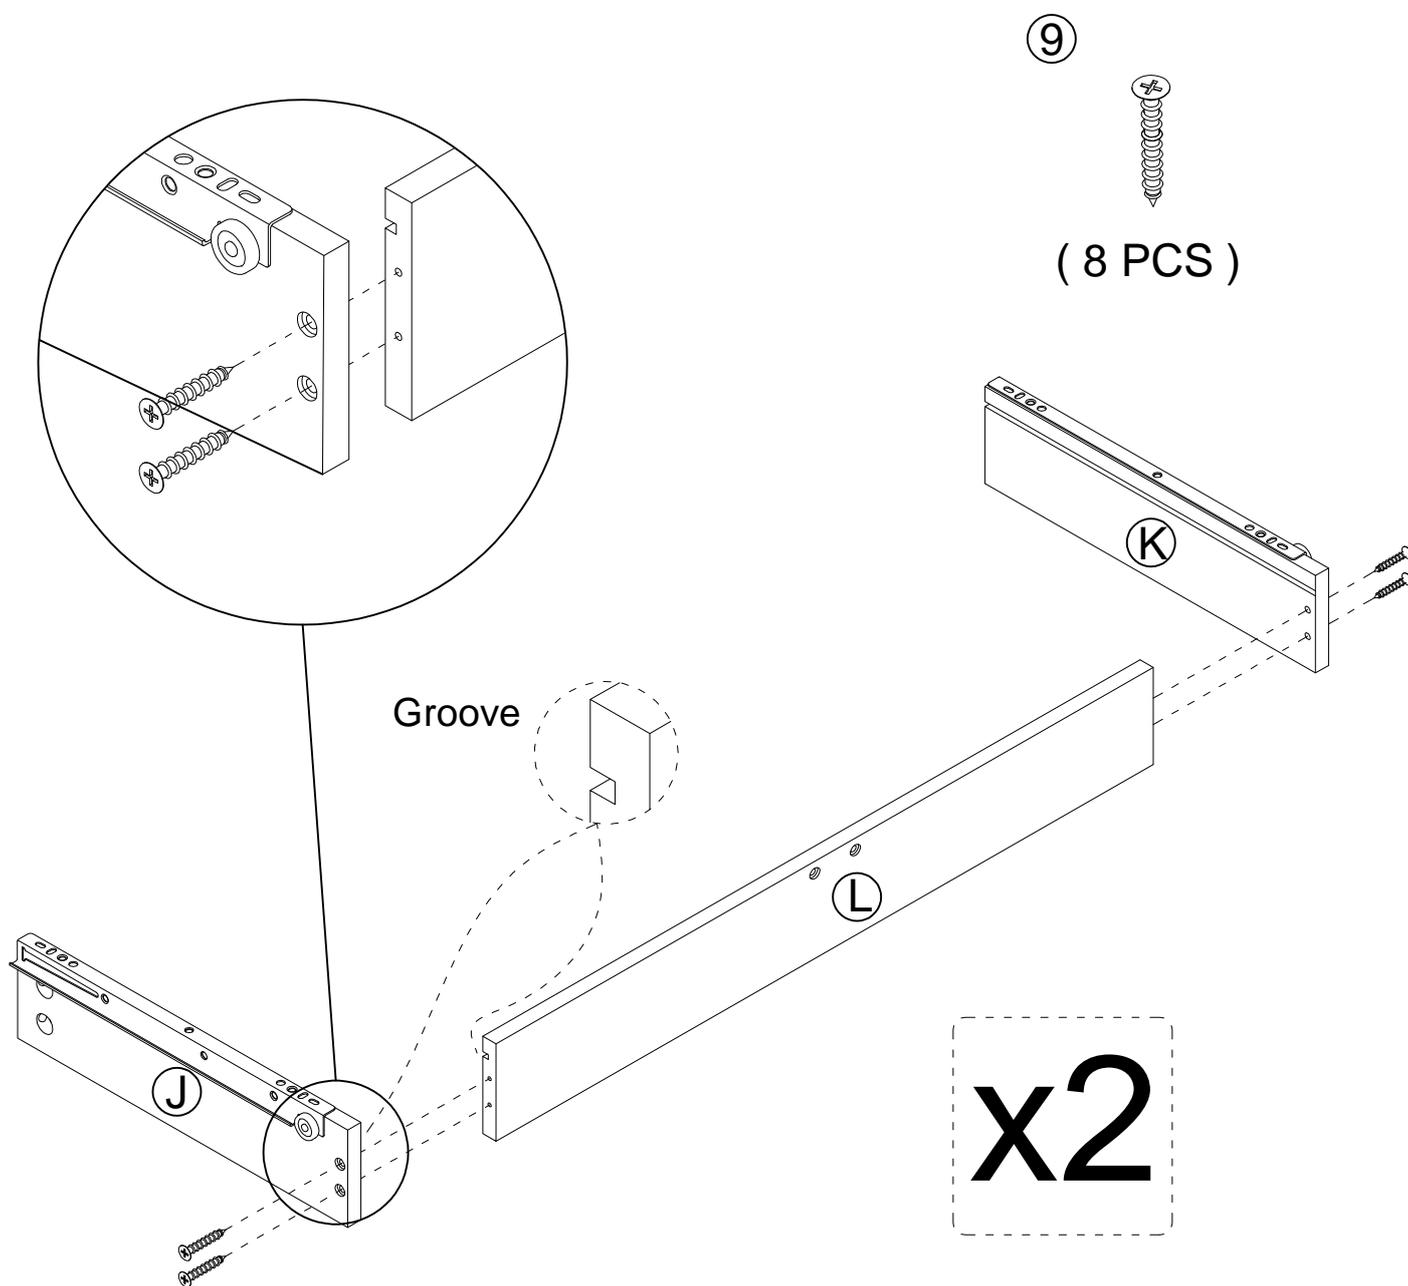

Step 11:

* Slide in the DRAWER BOTTOM PANEL (M).

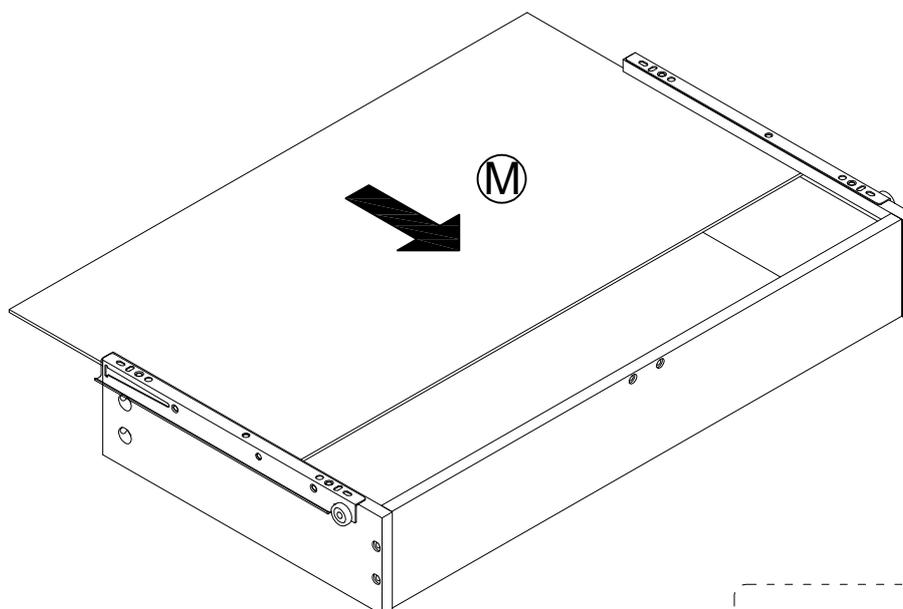

x2


Step 12:

* Assemble the DRAWER SUPPORT PANEL (N) to the DRAWER TRAY by the SCREW (9) .

⑨



(4 PCS)

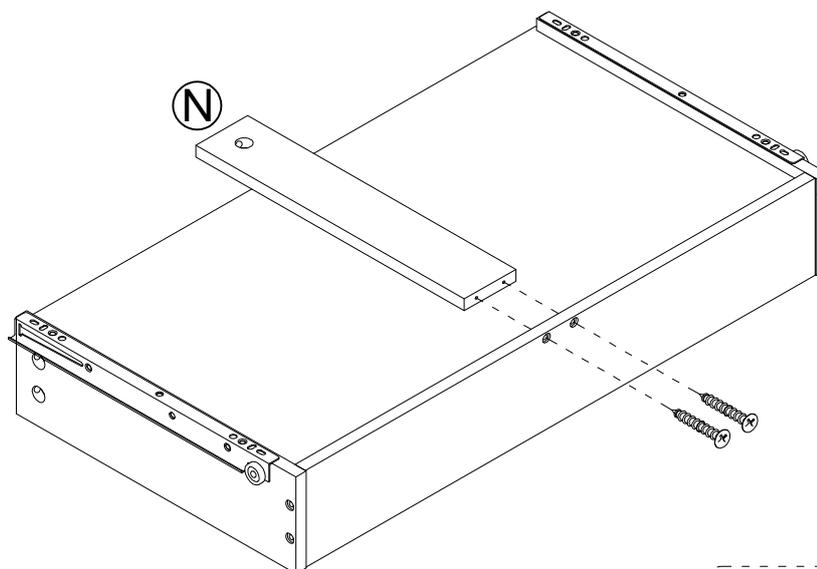


x2

Step 13:


* Insert Ten KD BOLT (1) to the DRAWER LEFT FRONT PANEL (I) and DRAWER RIGHT FRONT PANEL (O).

* Attach the Two BLACK HANDLE(7) or Two GOLD HANDLE(11) to the DRAWER LEFT FRONT PANEL (I) and DRAWER RIGHT FRONT PANEL (O) by the SCREW (8).

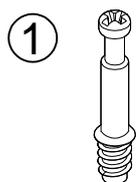

(10 PCS)

(7)



(2 PCS)

(11)




(2 PCS)

(8)




(4 PCS)

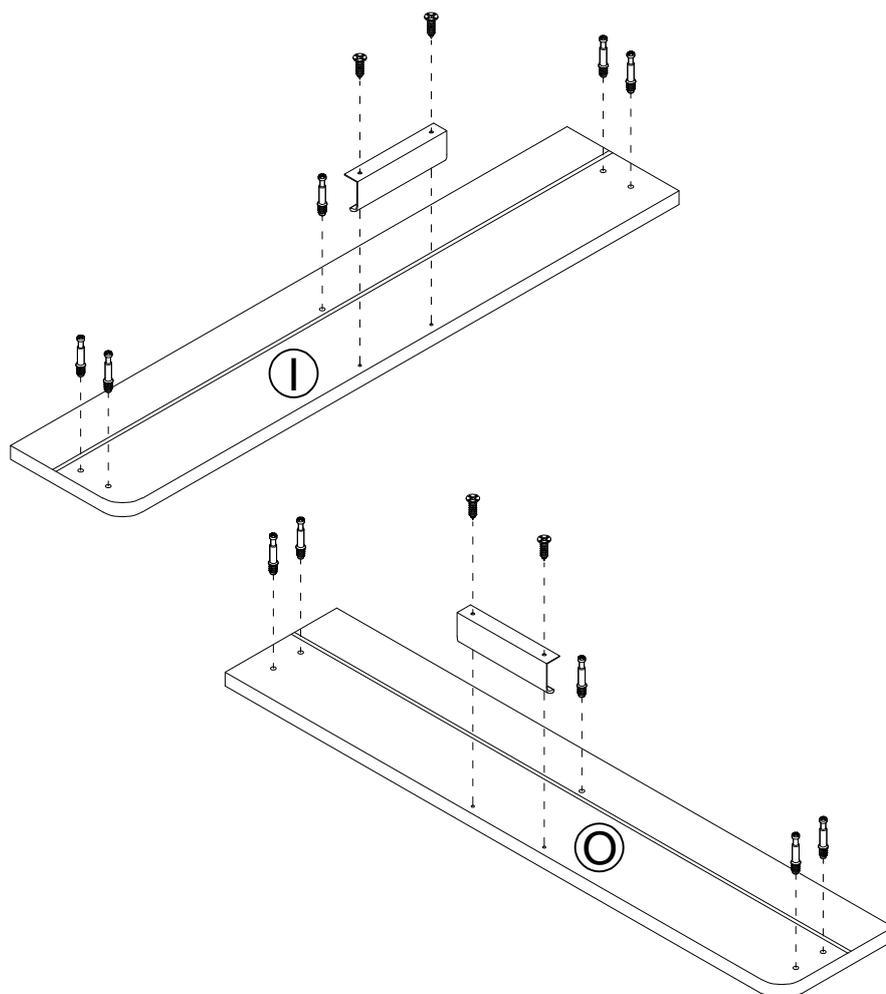



Step 14:

* Assemble the DRAWER LEFT FRONT PANEL (I) and DRAWER RIGHT FRONT PANEL (O) to the DRAWER TRAY by the Ten KD SMALL CAM (5) and Ten COVER CAP (3).

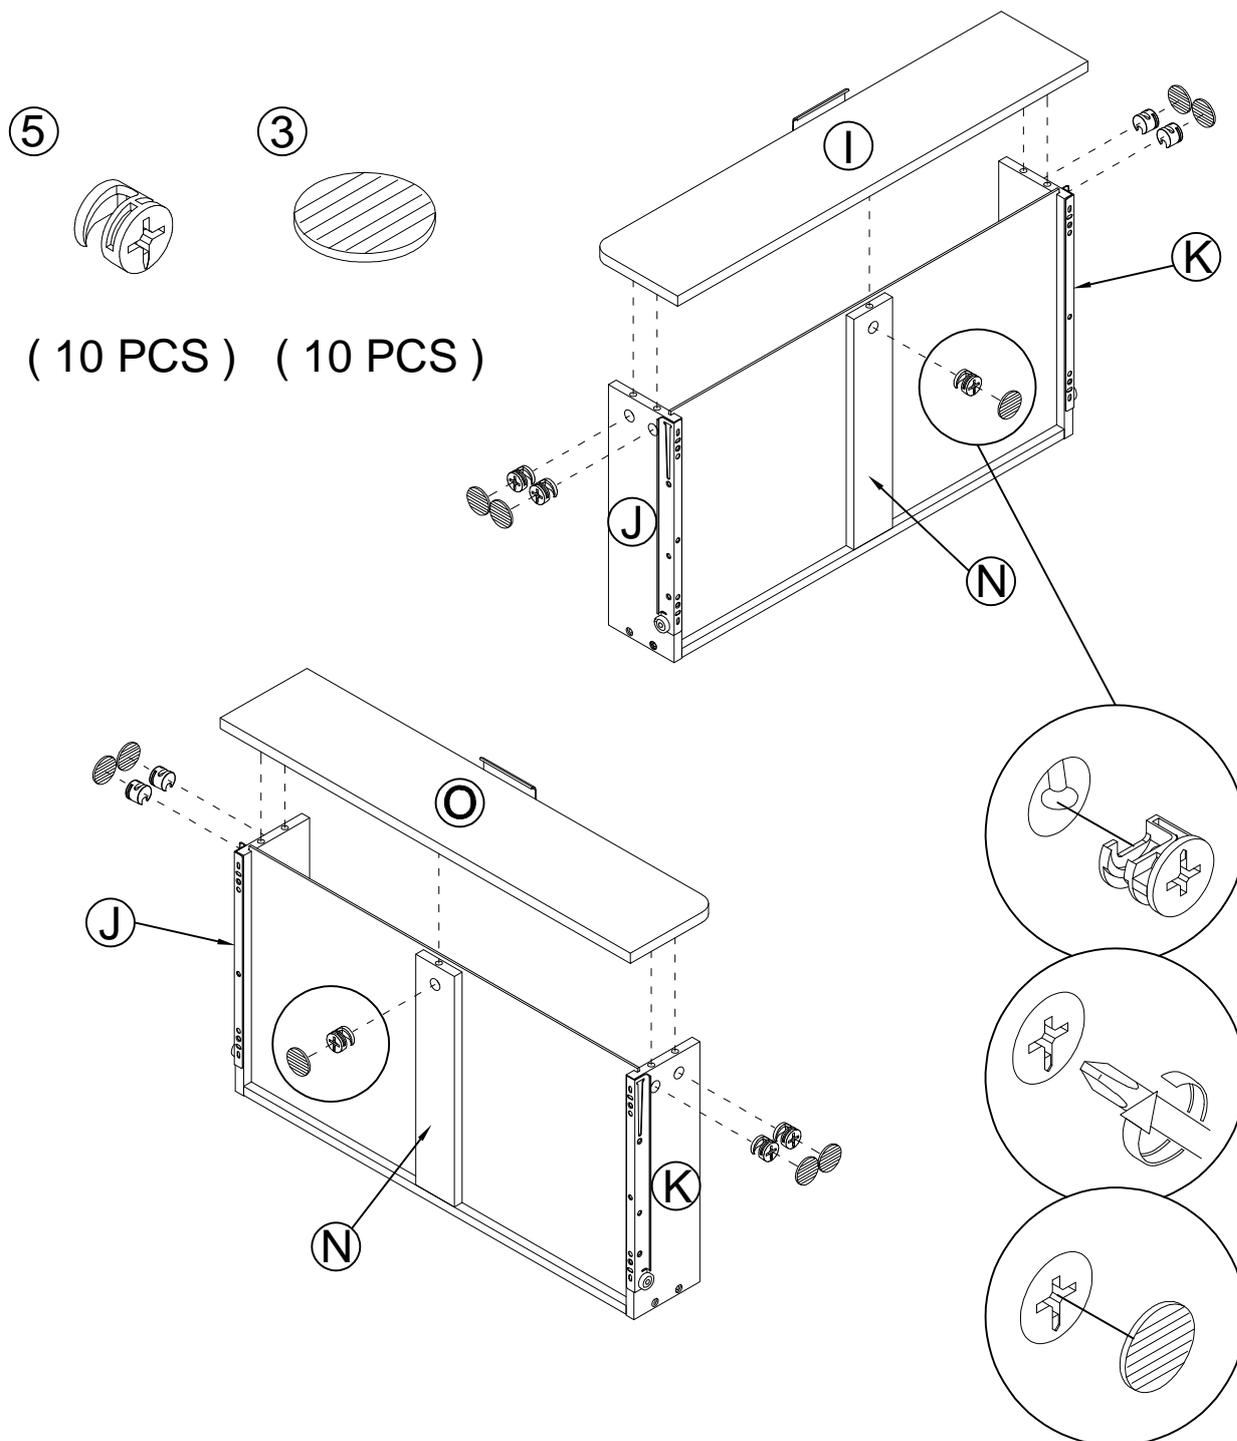

Step 15:

*Input Two Drawer tray to the Console.

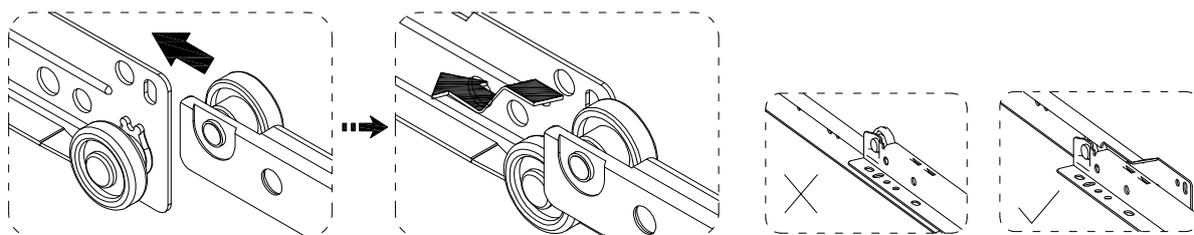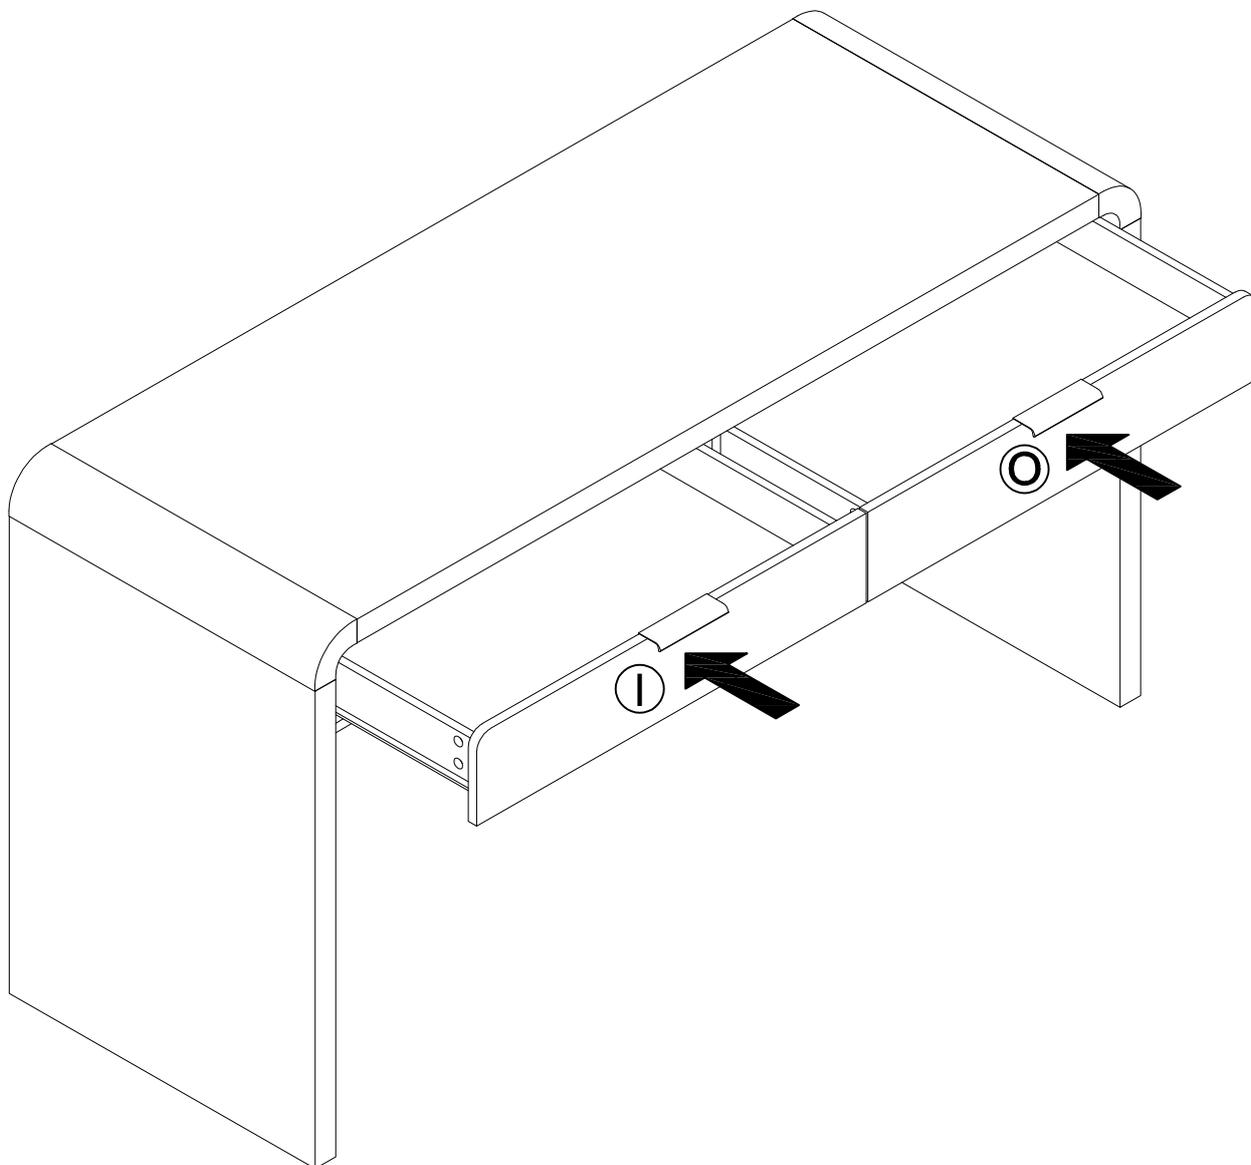



WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.



319 Ridge Rd. Dayton, NJ 08810
908-888-0818