


# ASSEMBLY INSTRUCTIONS

---

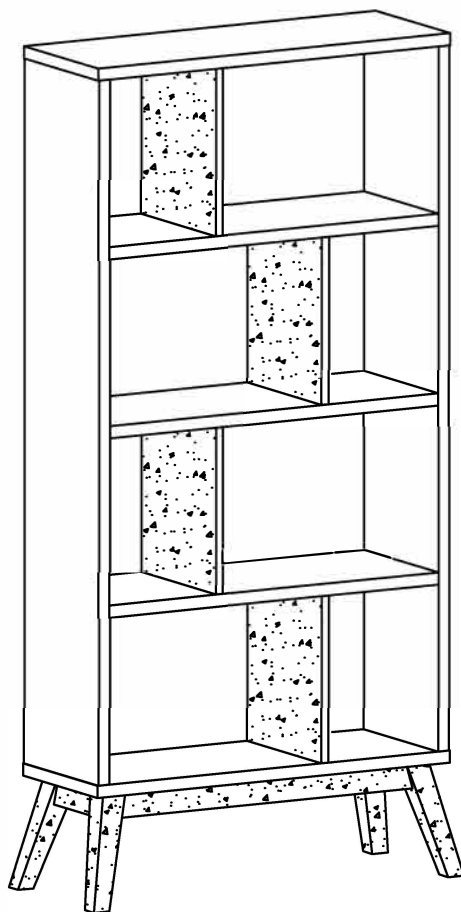


# ASSEMBLY INSTRUCTIONS

## PLEASE READ BEFORE ASSEMBLING!


Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.

Tip #3: Read manual before assembling, it helps!

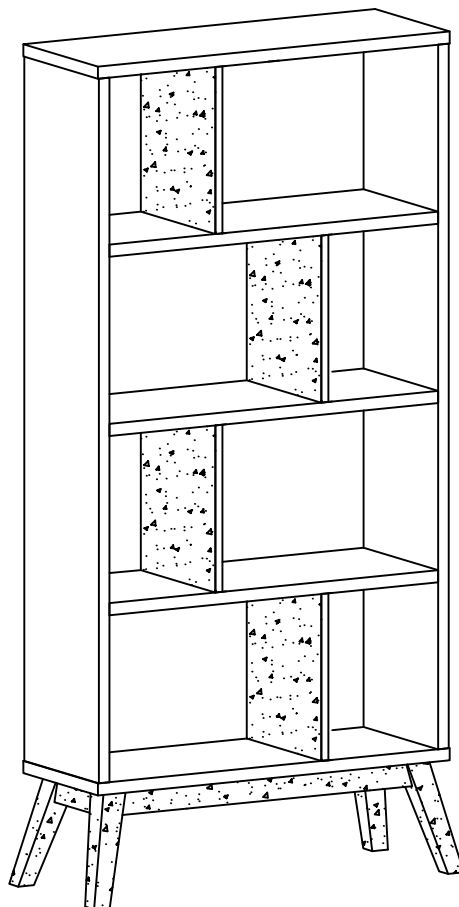



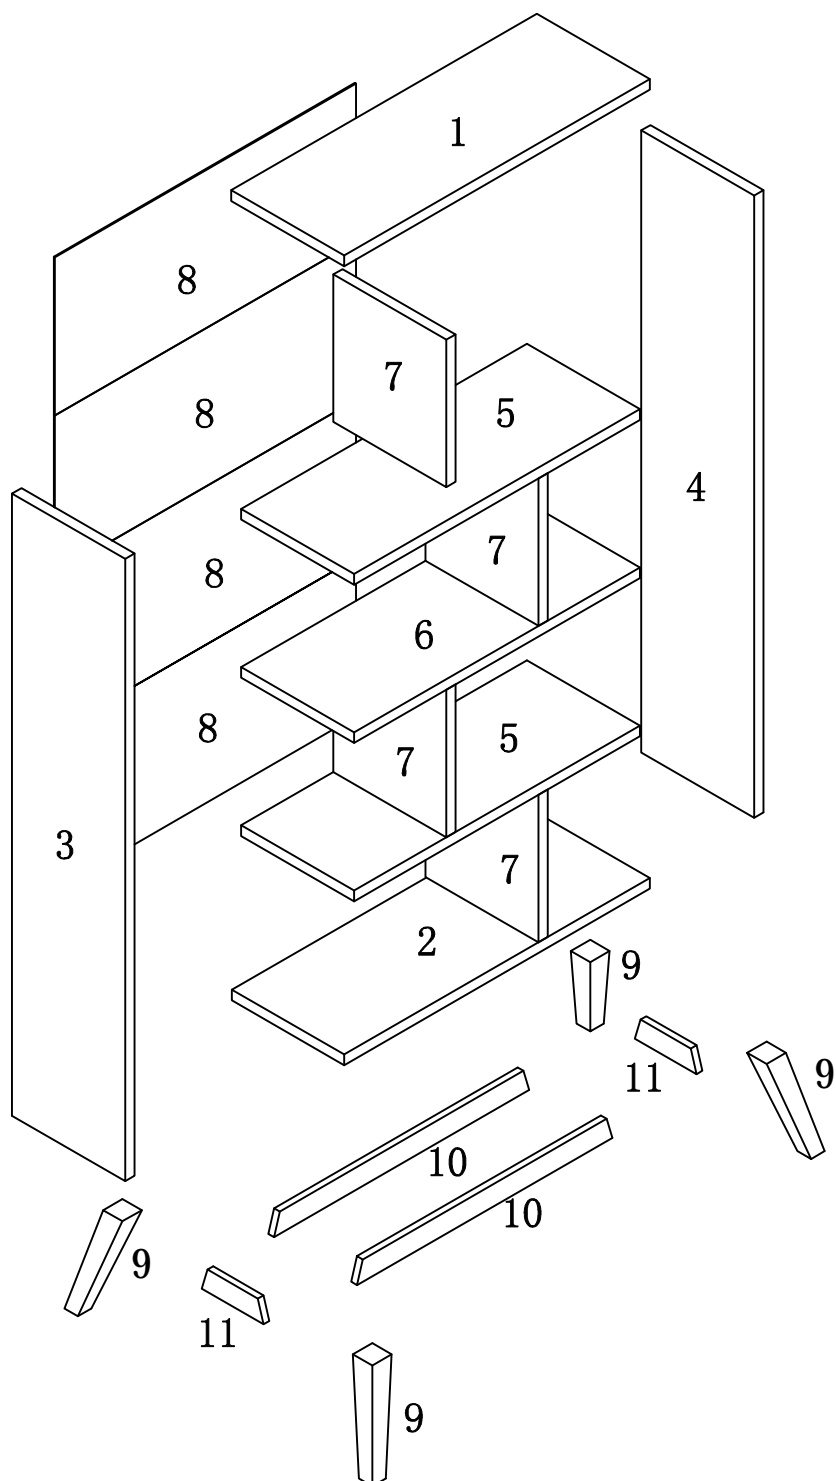















# PARTS IDENTIFICATION




(1)	1pc	(6)	2pcs	(11)	2pcs
(2)	1pc	(7)	4pcs		
(3)	1pc	(8)	4pcs		
(4)	1pc	(9)	4pcs		
(5)	2pcs	(10)	2pcs		

# HARDWARE IDENTIFICATION

A		L29	36pcs
B		Φ 15	36pcs
C		Φ 8 x 25	22pcs
D		Φ 20	8pcs
E		□ 4 x 40	8pcs
F		Φ 22	14pcs
G		M7 x 48	4pcs
H		Φ 8 x Φ 16x2	8pcs
I		M8 x 35	4pcs
J		M5	1pc
K			60pcs
L		Φ 16	4pcs
M		Φ 8x40	1pc
N		Φ 12x12x1	2pcs
O		Φ 5x40	1pc
P		Φ 4x25	1pc
Q		197×5×1	1pc
R		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

# ASSEMBLY INSTRUCTIONS

## HOW TO

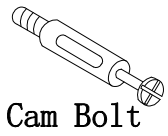


Cam Bolt




Cam Lock

1	2	3	4
1. Screw Cam Bolt into panel.	2. Insert Cam Bolt into bolt hole of joining panel.	3. Insert Cam Lock. arrow facing bolt.	4. Gently turn Cam Lock clockwise to lock position.

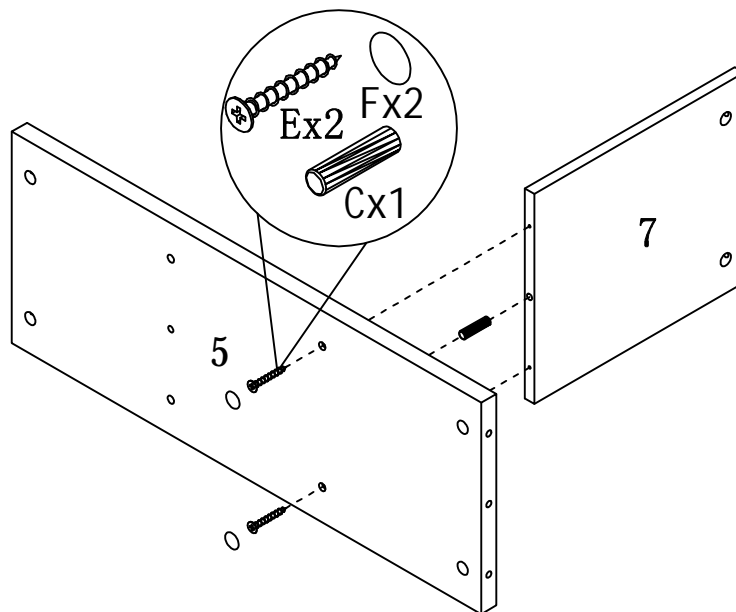


## STEP1

## STEP2

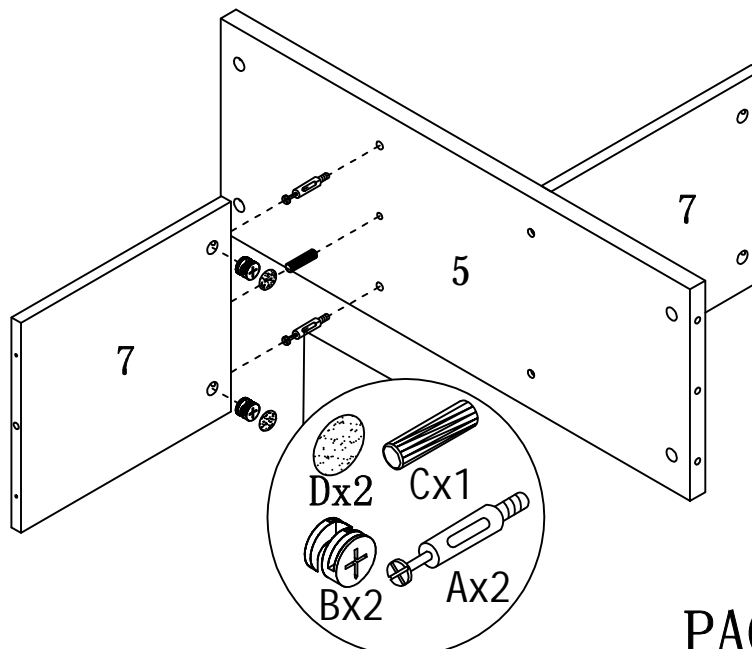


# ASSEMBLY INSTRUCTIONS

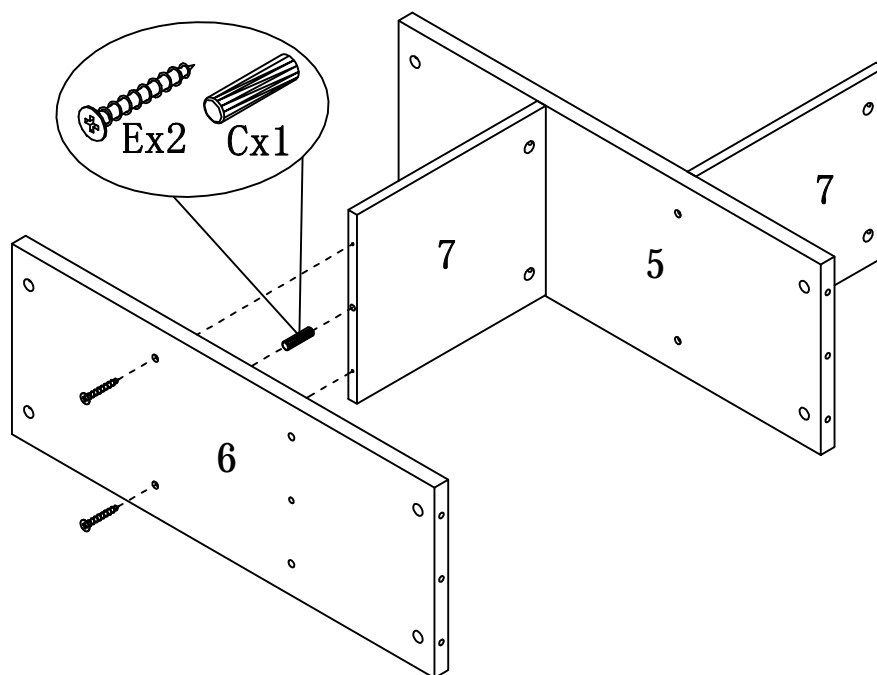


STEP3

STEP4

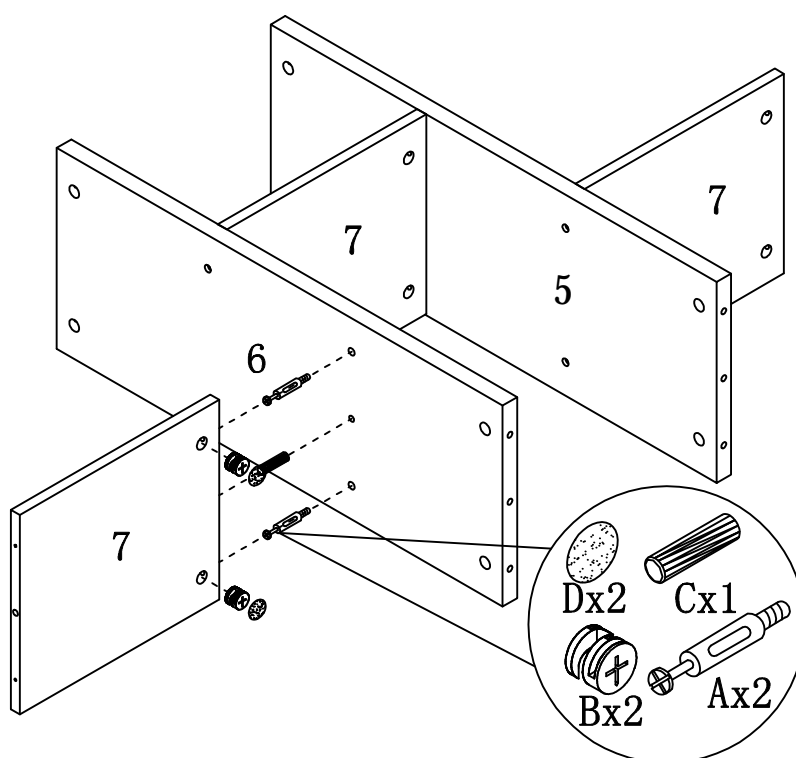


# ASSEMBLY INSTRUCTIONS

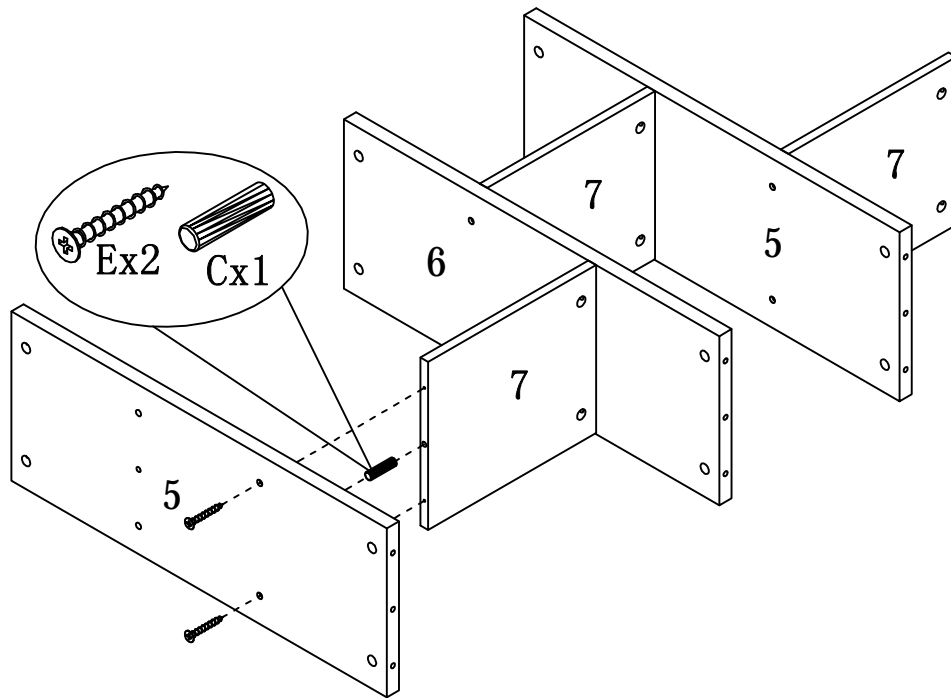


STEP5

STEP6

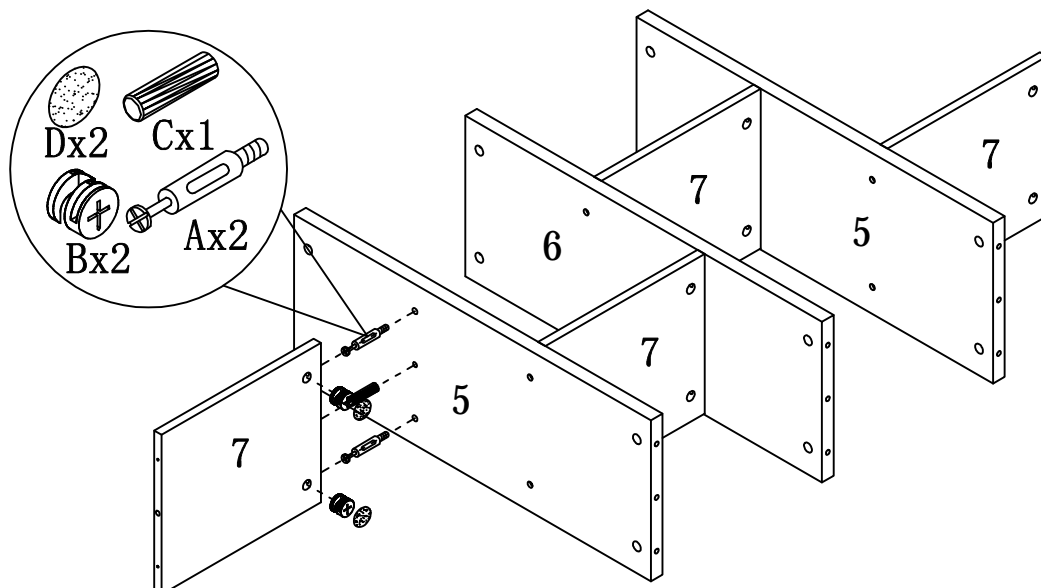


# ASSEMBLY INSTRUCTIONS

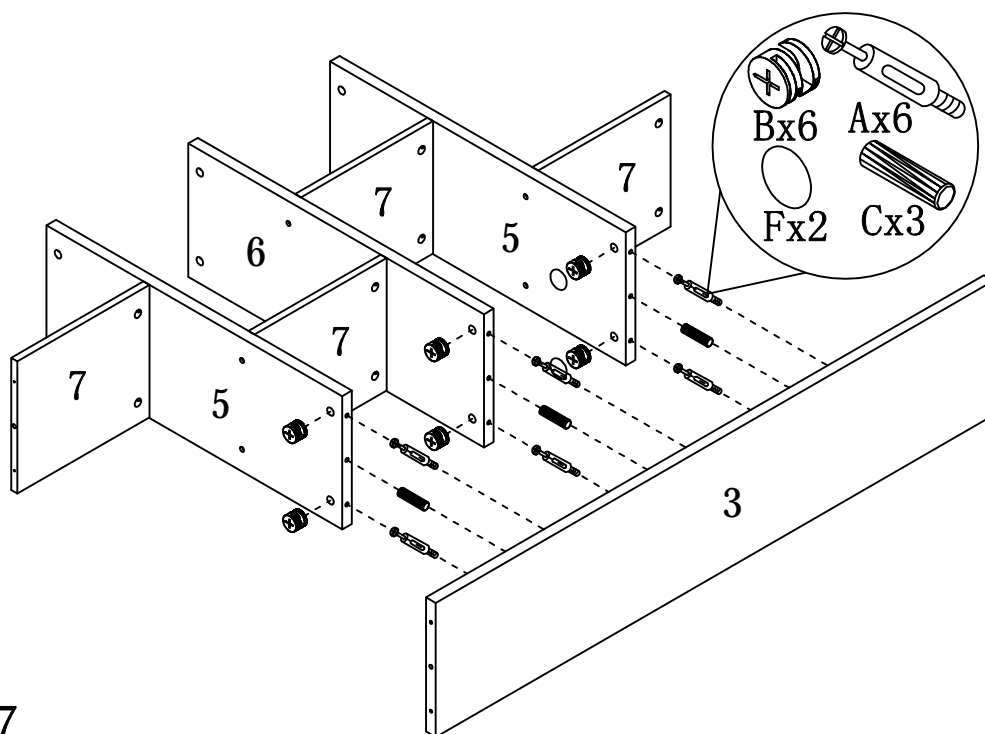


STEP7

STEP8

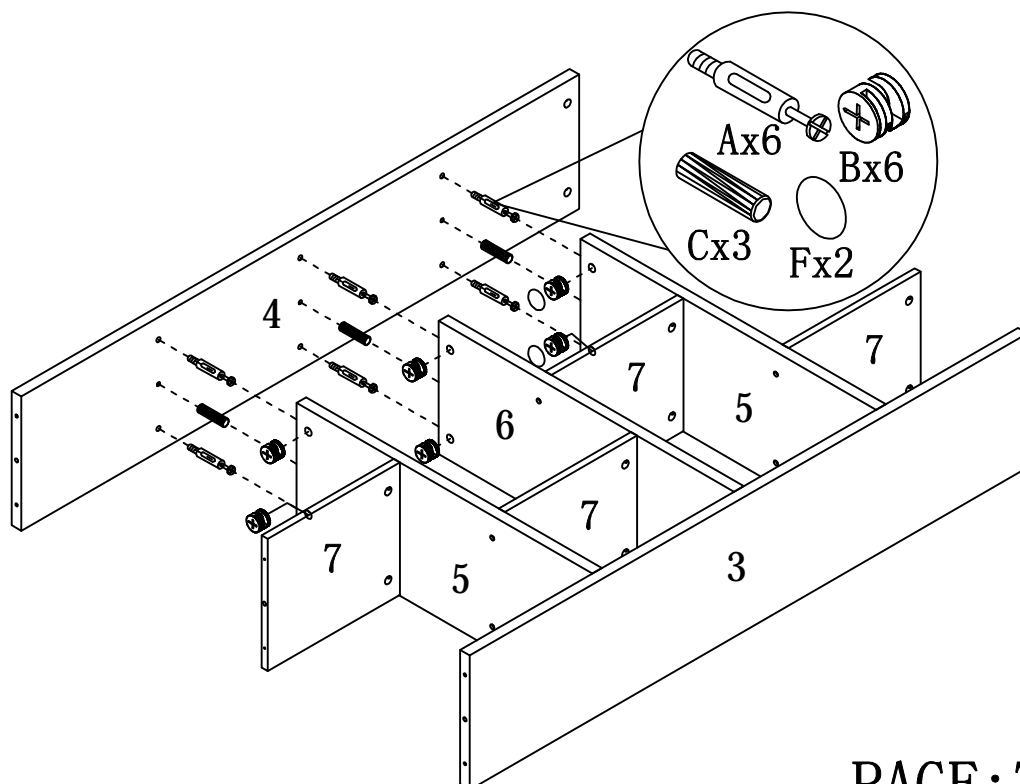




# ASSEMBLY INSTRUCTIONS

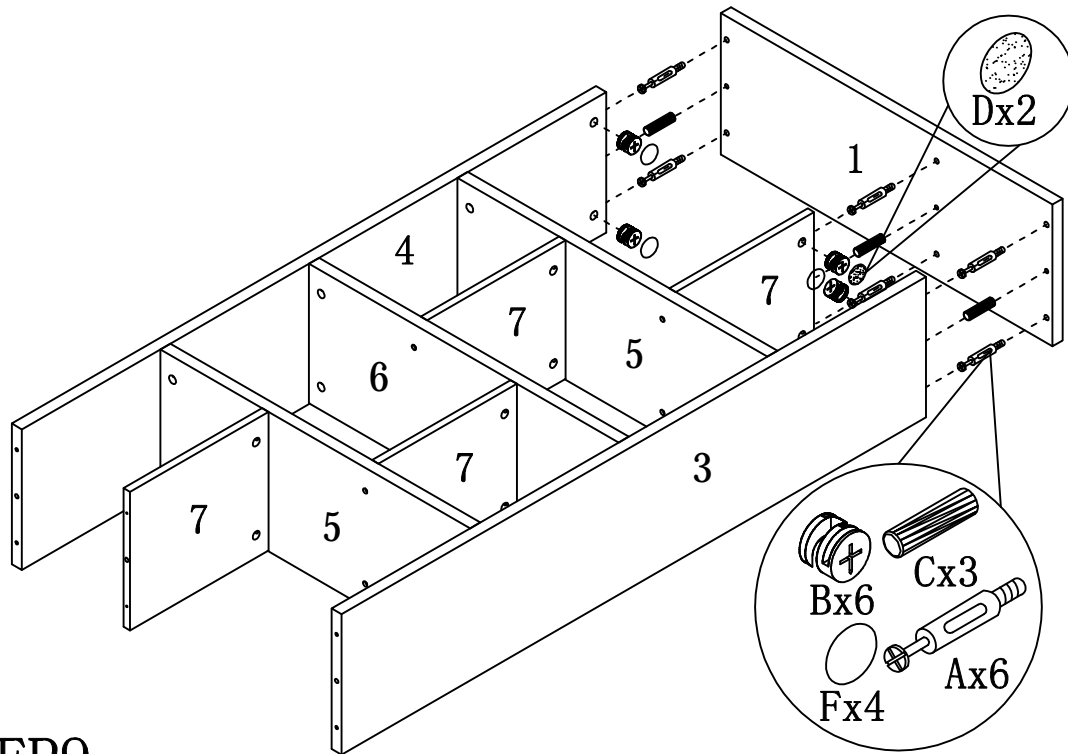


STEP9

STEP10

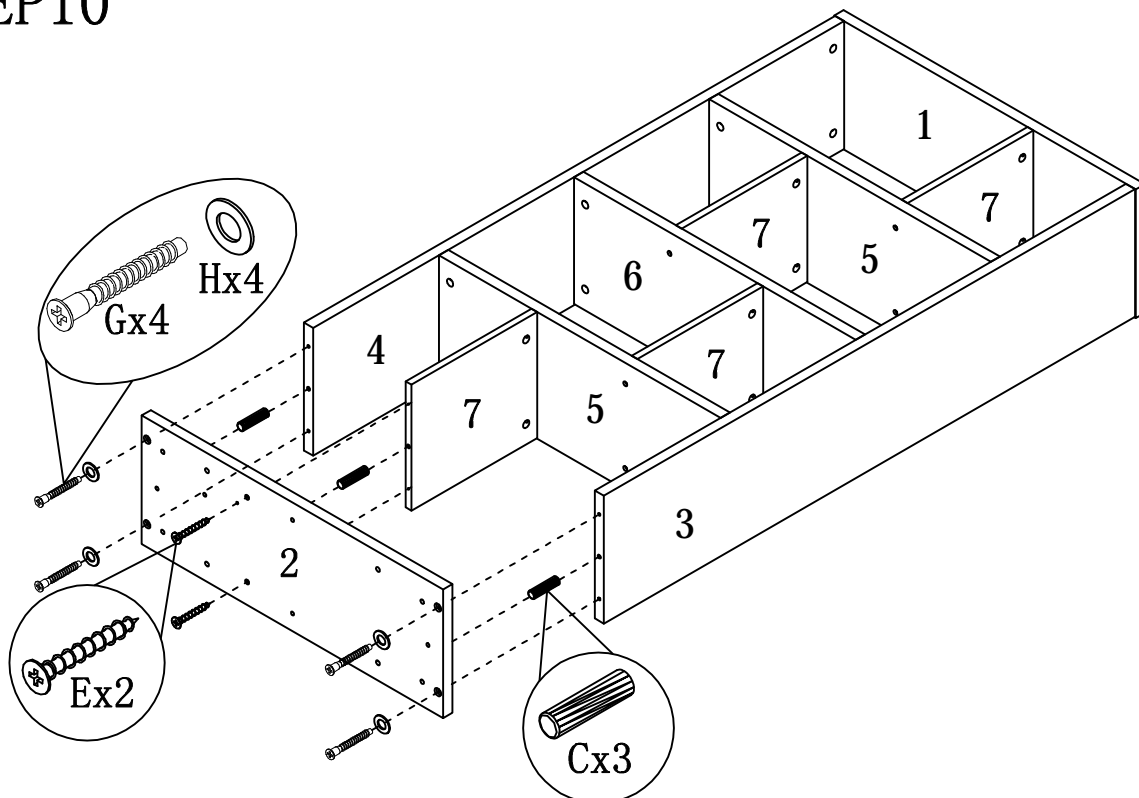


# ASSEMBLY INSTRUCTIONS

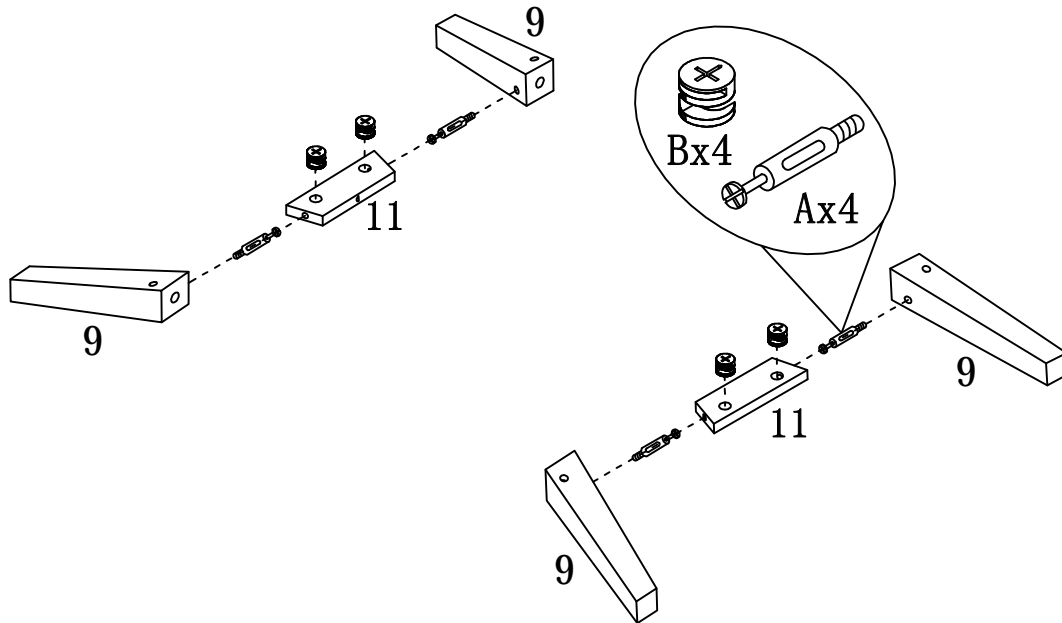


STEP11

STEP12

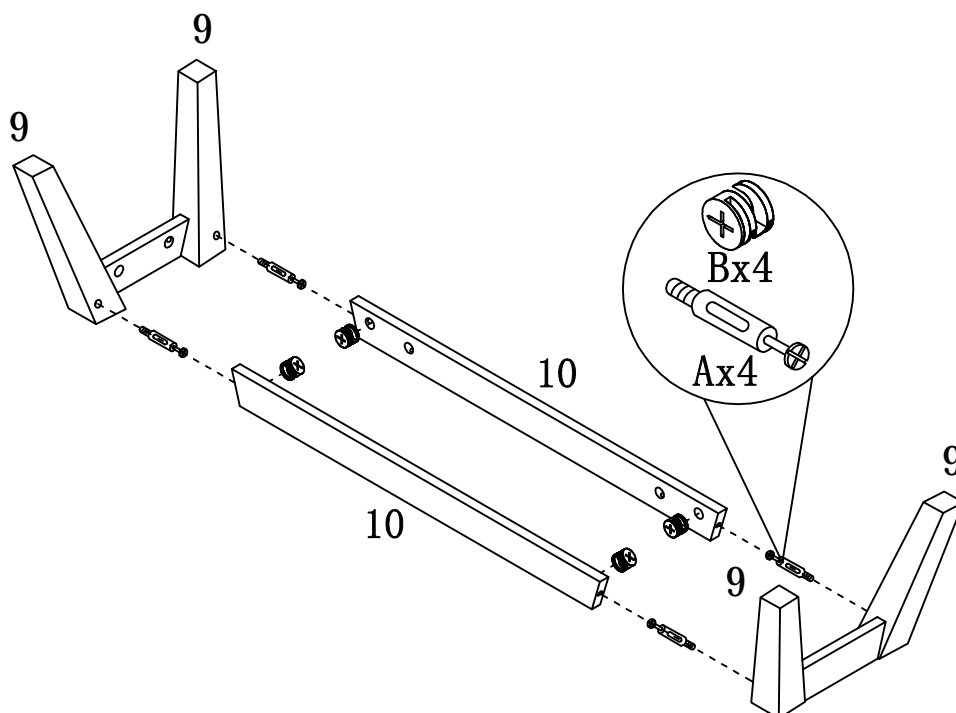


# ASSEMBLY INSTRUCTIONS

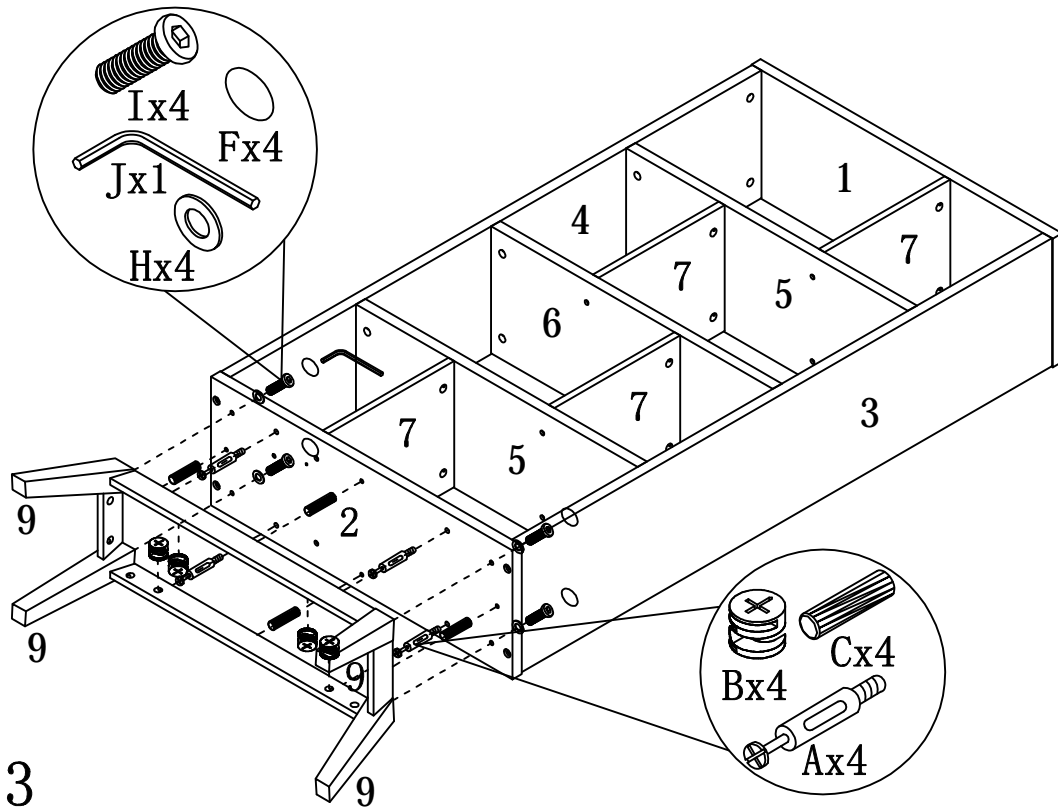

STEP 13

STEP 14

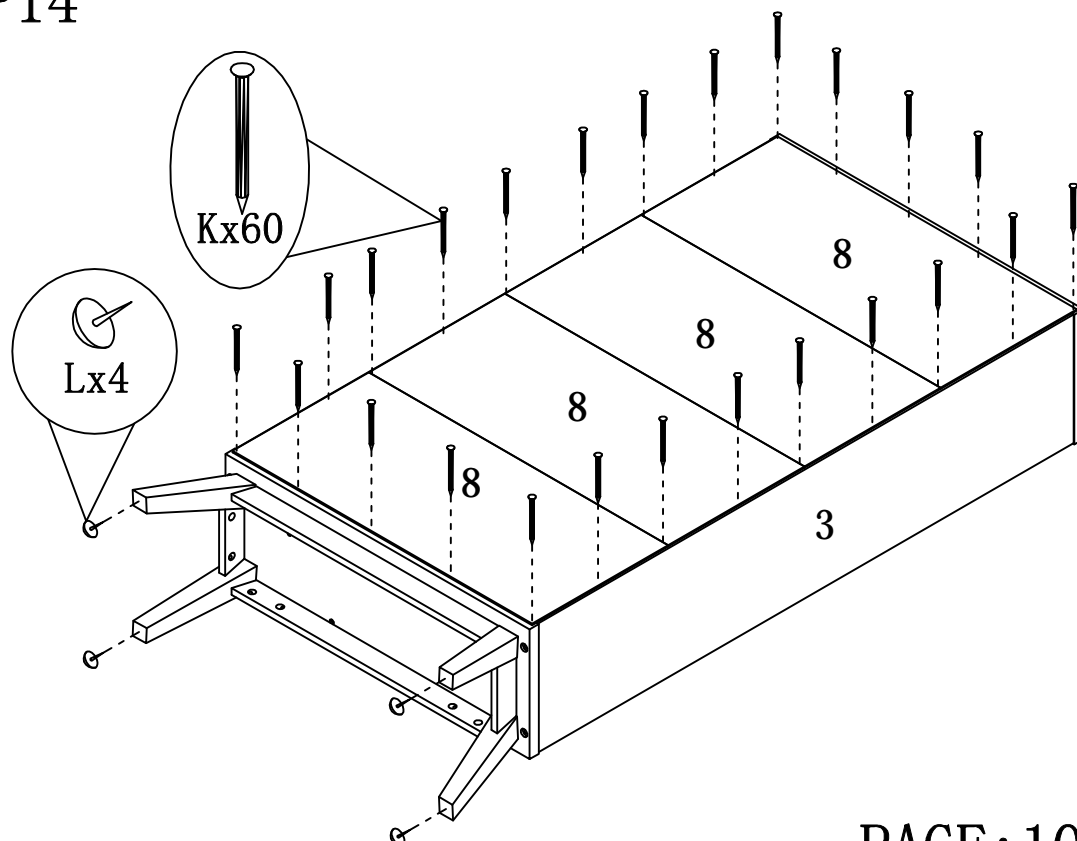


# ANTI-TIPPING STRAP INSTRUCTION

## HARDWARE (INCLUDED) :



DRYWALL ANCHOR  $\phi 8 \times 40$  X 1PC



METAL BRACKETS  $12 \times 12 \times 1$  X 2PCS



DRYWALL SCREW  $\phi 5 \times 40$  X 1PC




STRAP  $197 \times 5 \times 1$  X 1PC



FLATHEAD SCREW  $\phi 4 \times 25$  X 1PC

## TOOLS NEEDED ( NOT INCLUDED) :

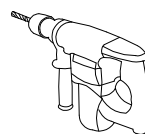


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

### STEP 1

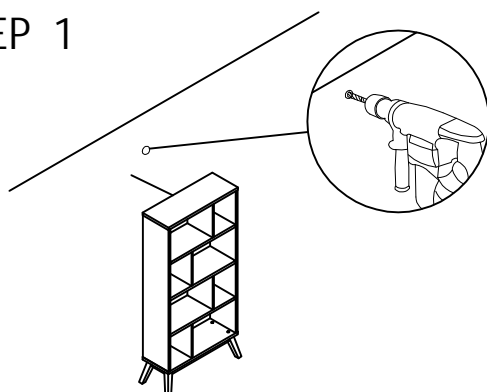


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

### STEP 2

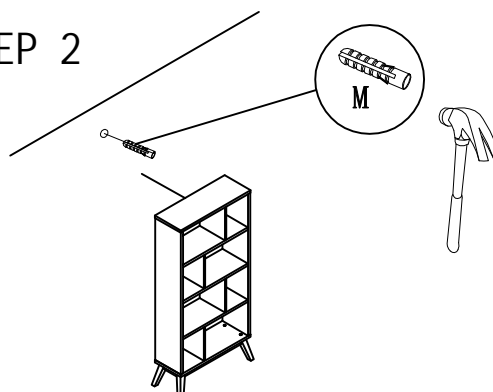


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

### STEP 3

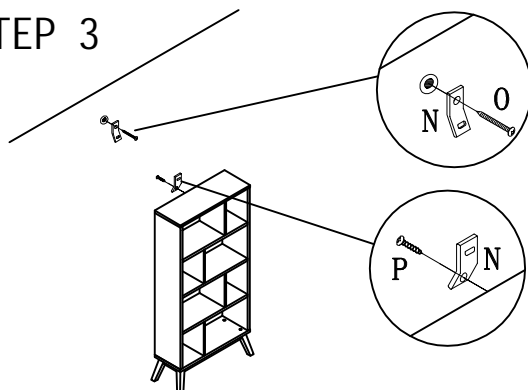

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

### STEP 4

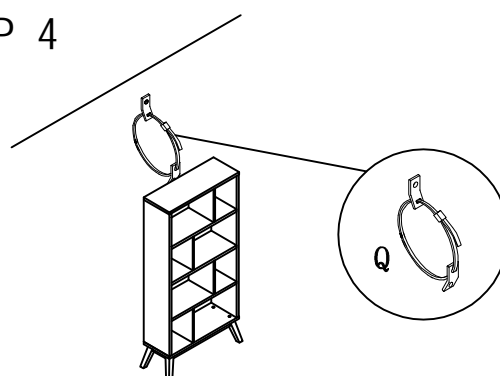

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
  2. pull lightly til strap stops.
- Assembly is complete.