


Dryden™

DOUBLE ROBE HOOK

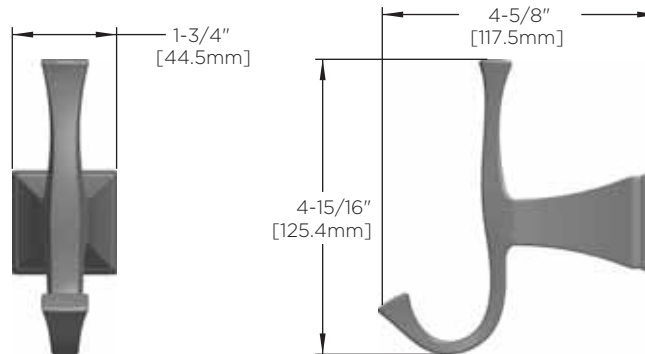

MATERIALS:

Post - Zinc Die Cast
Hook - Zinc Die Cast
Wall Plate - Zinc Die Cast

INSTALLATION:

Mount wall plate bracket(s) per installation instructions with supplied fasteners. Slip product over wall plate(s) and tighten set screws until secure.

OPTIONAL FASTENER INFORMATION:

Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following fasteners are suggested:
Tile/Masonry - Plastic or Lead Anchors, Plaster/Drywall - Toggle Bolts.

SPECIFICATION:

Surface mounted double robe hook shall be model _____
(fill in model number) by Liberty Hardware Manufacturing Corporation.



see what Delta can do™