


ASSEMBLY INSTRUCTION

DJ1134-F-Q

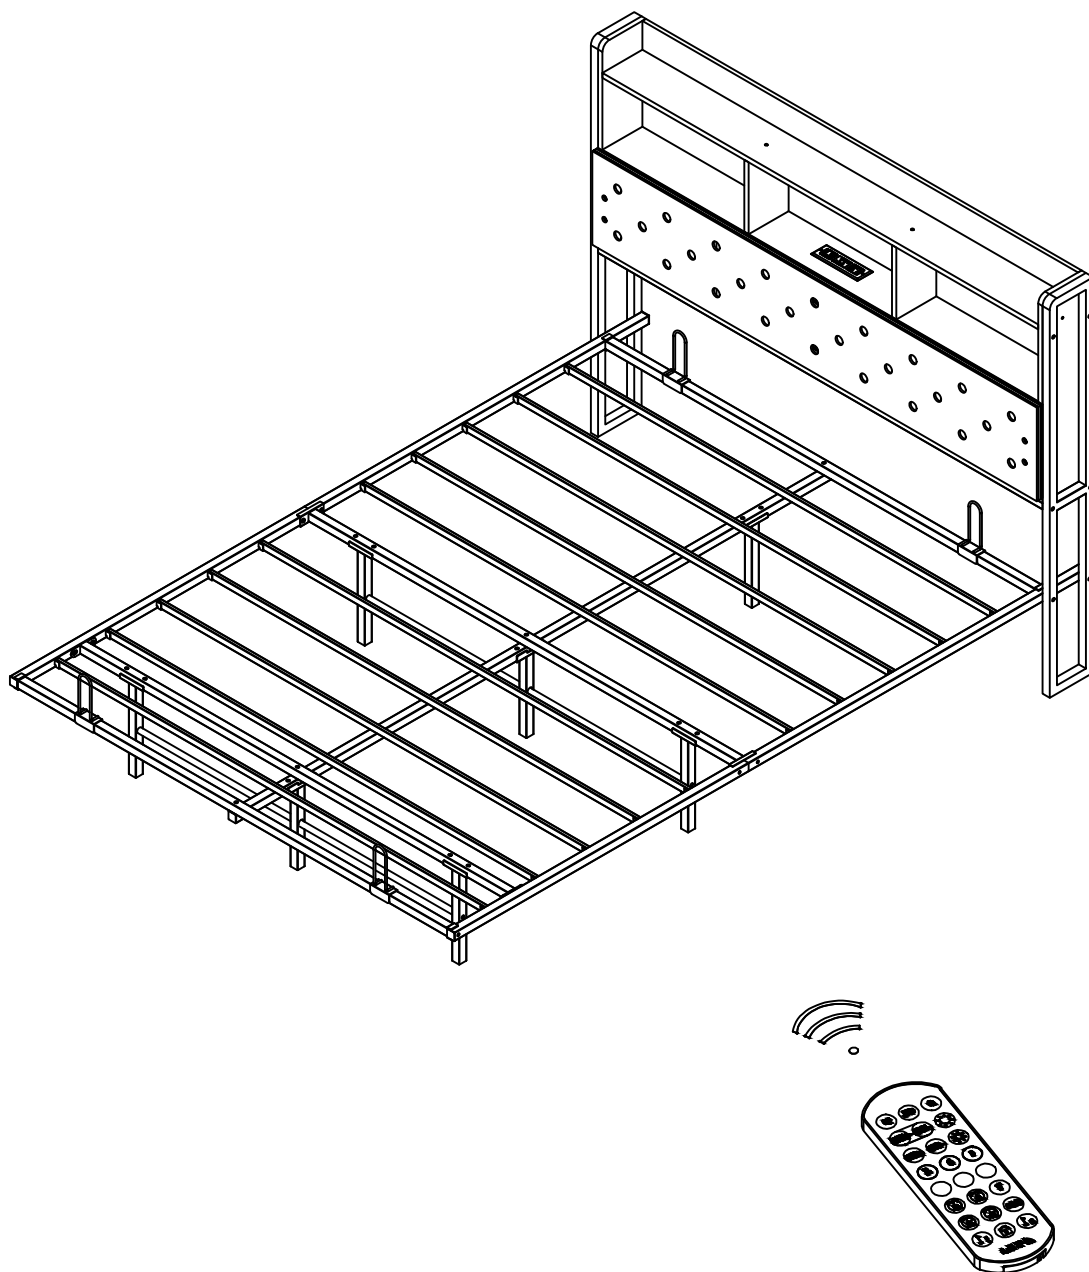


'SAFETY TIPS:






















Static charge may cause dust on foam- clean with a dry or damp cloth. Foam strands may be present - handle gently and dispose of properly.

Do not burn or incinerate.

Check local recycling guidelines.

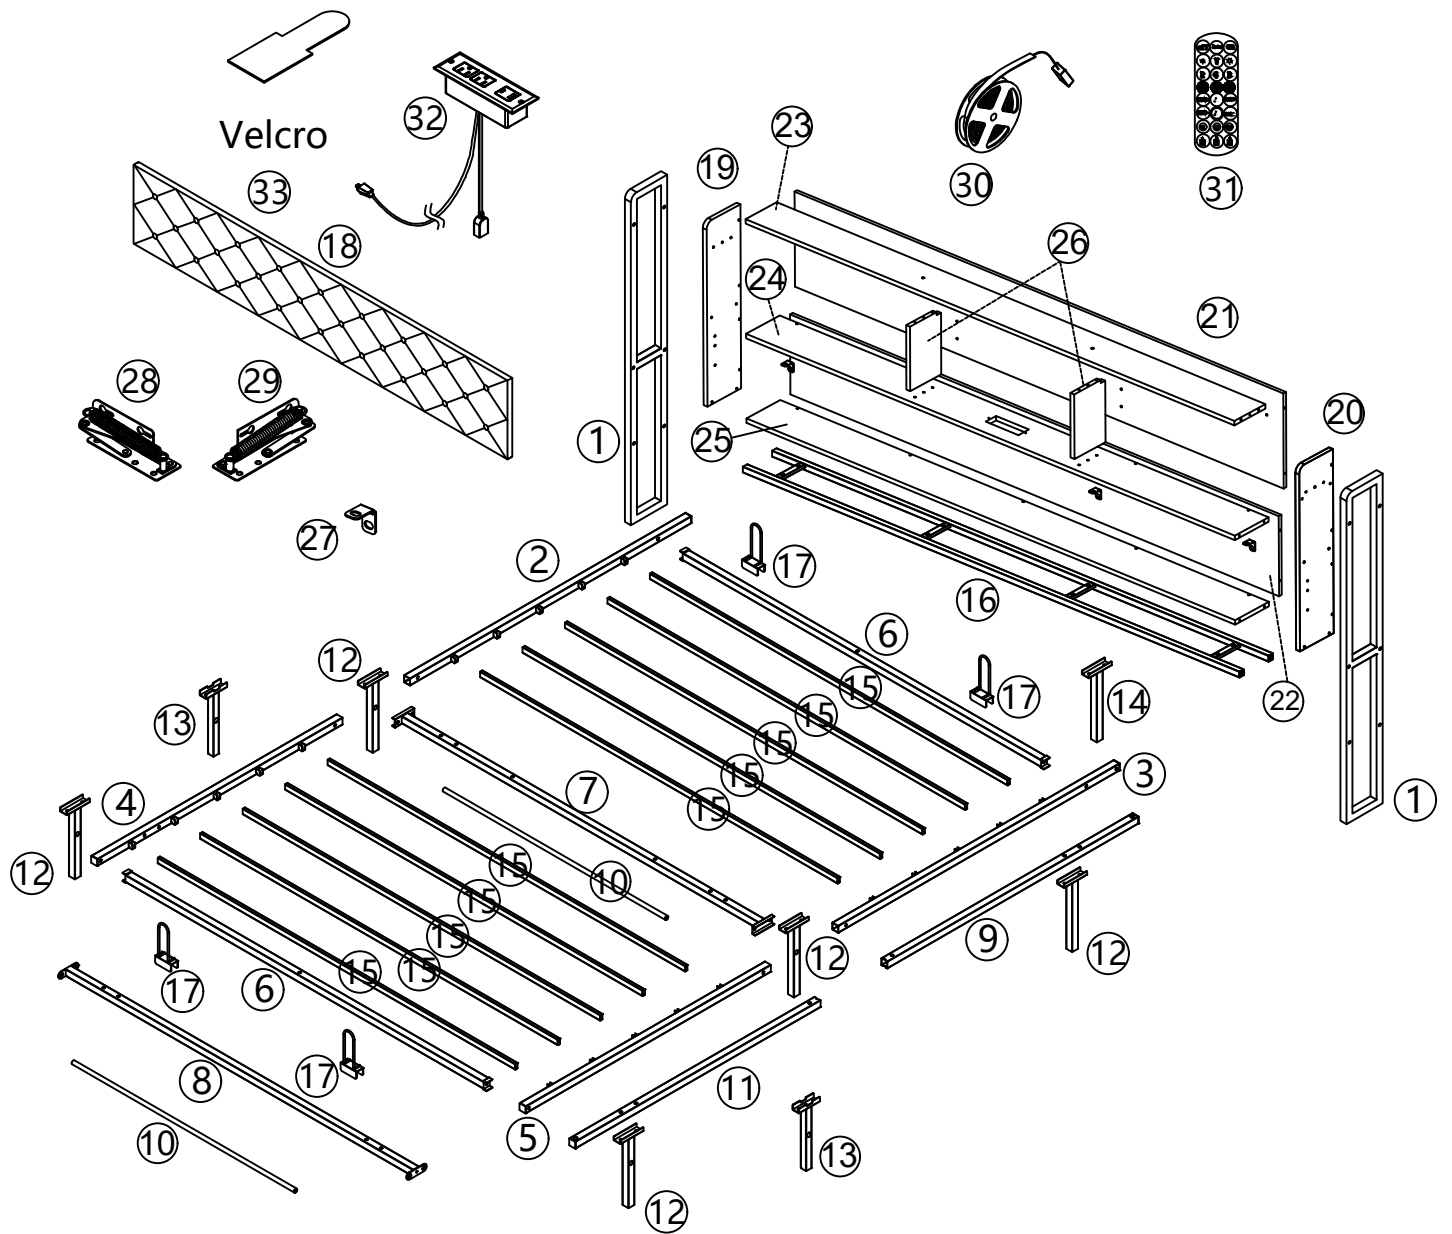

Part list

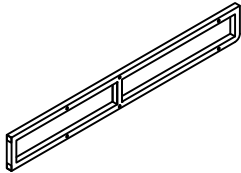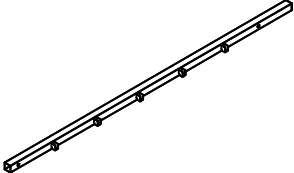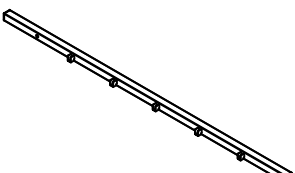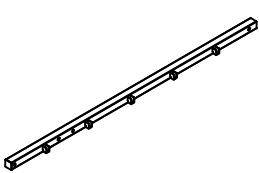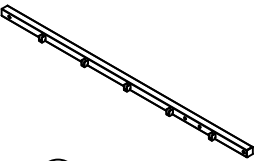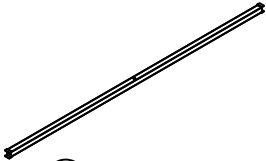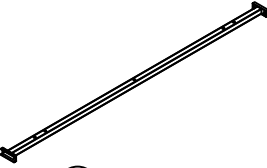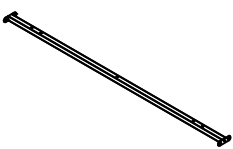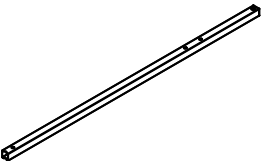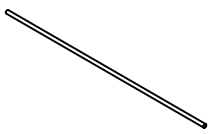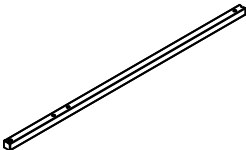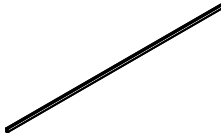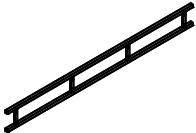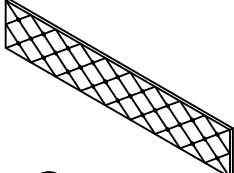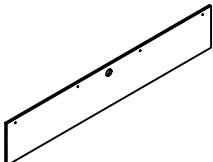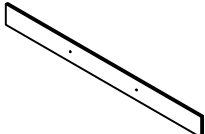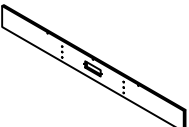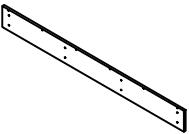 ① 2 PCS	 ② 1 PC	 ③ 1 PC	 ④ 1 PC
 ⑤ 1 PC	 ⑥ 2 PC	 ⑦ 1 PC	 ⑧ 1 PC
 ⑨ 1 PC	 ⑩ 2 PCS	 ⑪ 1 PC	 ⑫ 4 PCS
 ⑬ 2 PC	 ⑭ 1 PC	 ⑮ 10 PCS	 ⑯ 1 PC
 ⑰ 4 PCS	 ⑱ 1 PC	 ⑲ 1 PC	 ⑳ 1 PC
 ㉑ 1 PC	 ㉒ 1 PC	 ㉓ 1 PC	 ㉔ 1 PC
 ㉕ 1 PC	 ㉖ 2 PCS	 ㉗ 4 PCS	 ㉘ 1 PC












'SAFETY TIPS:

Static charge may cause dust on foam- clean with a dry or damp cloth.Smafoam strands may oepresent - handle gently and dispose of properly.


Do not burn or incinerate.

Check local recycling quidelines.


Part list

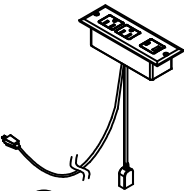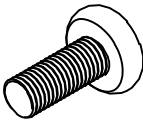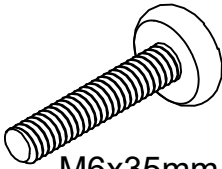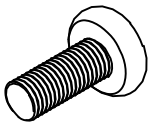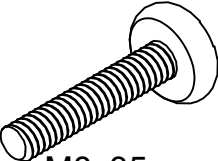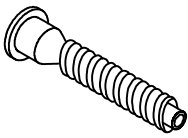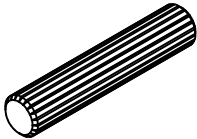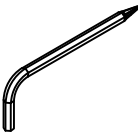 ②⑨ 1 PC	 ③⑩ 1 PC	 ③① 1 PC	 ③② 1 PC
 Velcro ③③ 2 PCS			
 M6x12mm ①④ 14 PCS+1PC	 M6x20mm ①② 12 PCS+1PC	 M6x35mm ②⑥ 26 PCS+2PCS	 M8x15mm ①④ 4 PCS
 M8x35mm ①⑤ 10 PCS	 M8x65mm ①④ 4 PCS	 Ø3x12mm ①② 2 PCS	 Ø5x38mm ③④ 34 PCS+3PCS
 Ø6*30mm ①④ 41 PCS+4PCS	 AllenKey 3# ① 1 PC	 AllenKey 4# ① 1 PC	


STEP 1

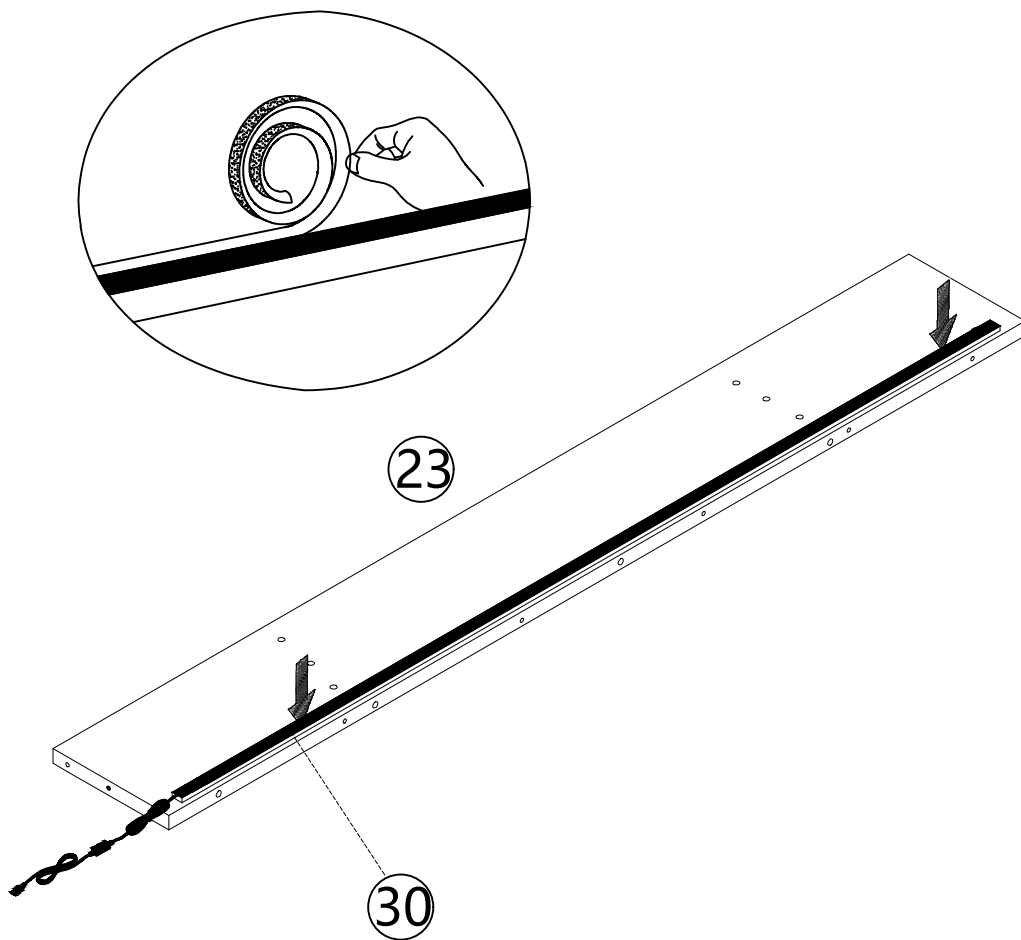

STEP 2		
Ⓜ	 Ø5x38mm	2pcs
Ⓝ	 Ø6x30mm	4pcs
Ⓚ	 AllenKey 3#	1pc

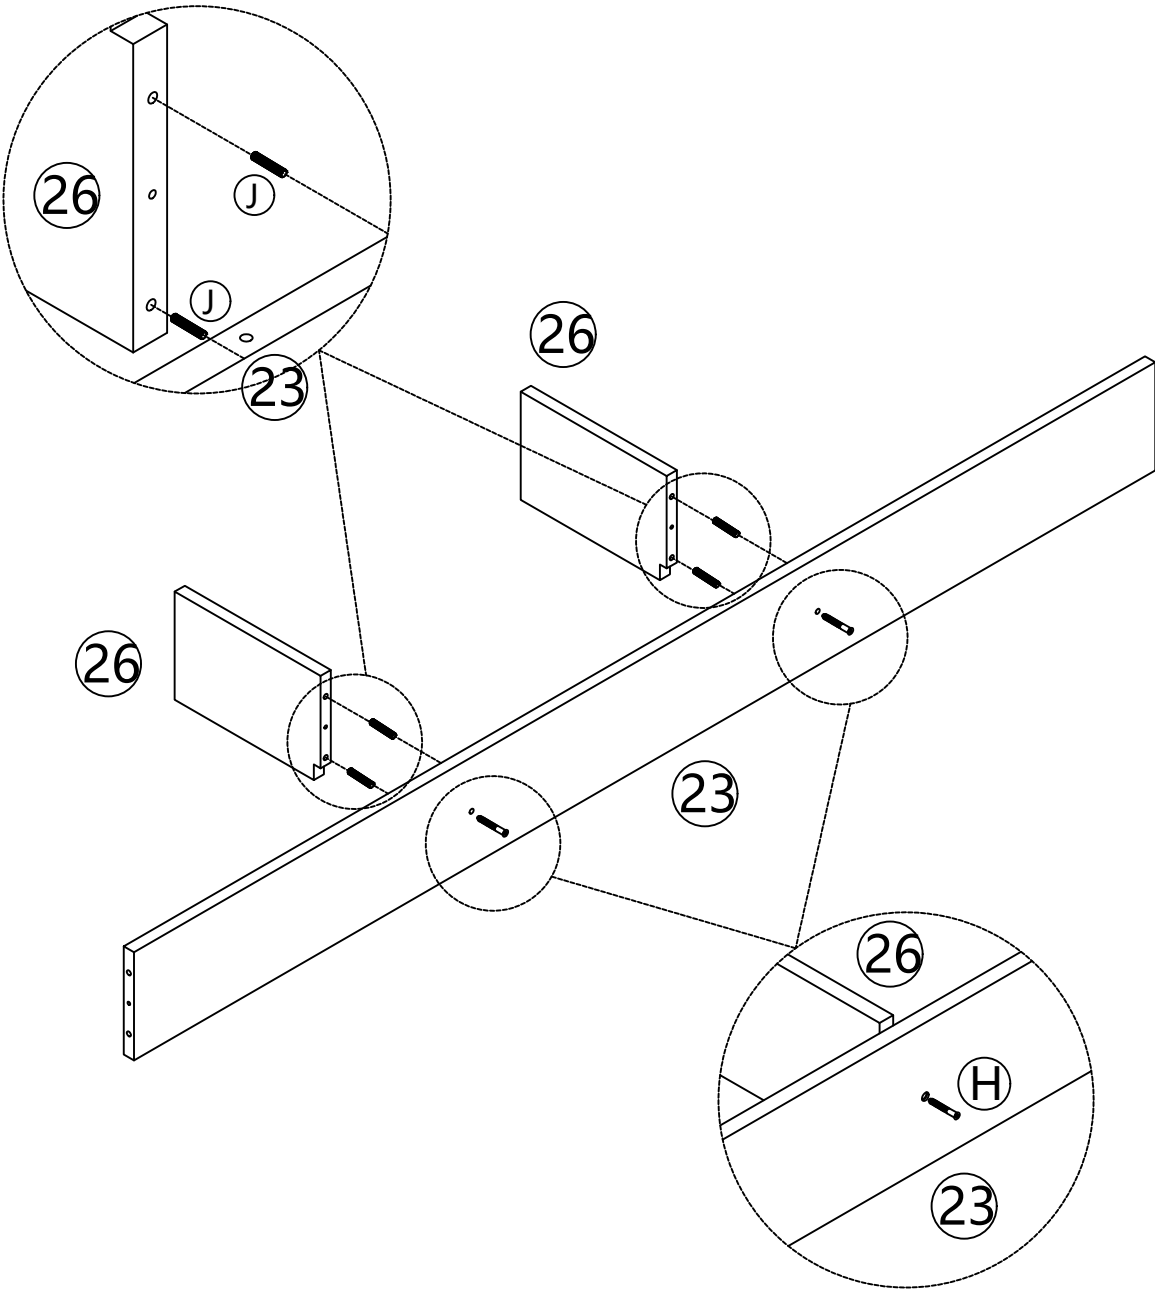

STEP 3		
(H)	 Ø5x38mm	2pcs
(J)	 Ø6x30mm	4pcs
(K)	 AllenKey 3#	1pc

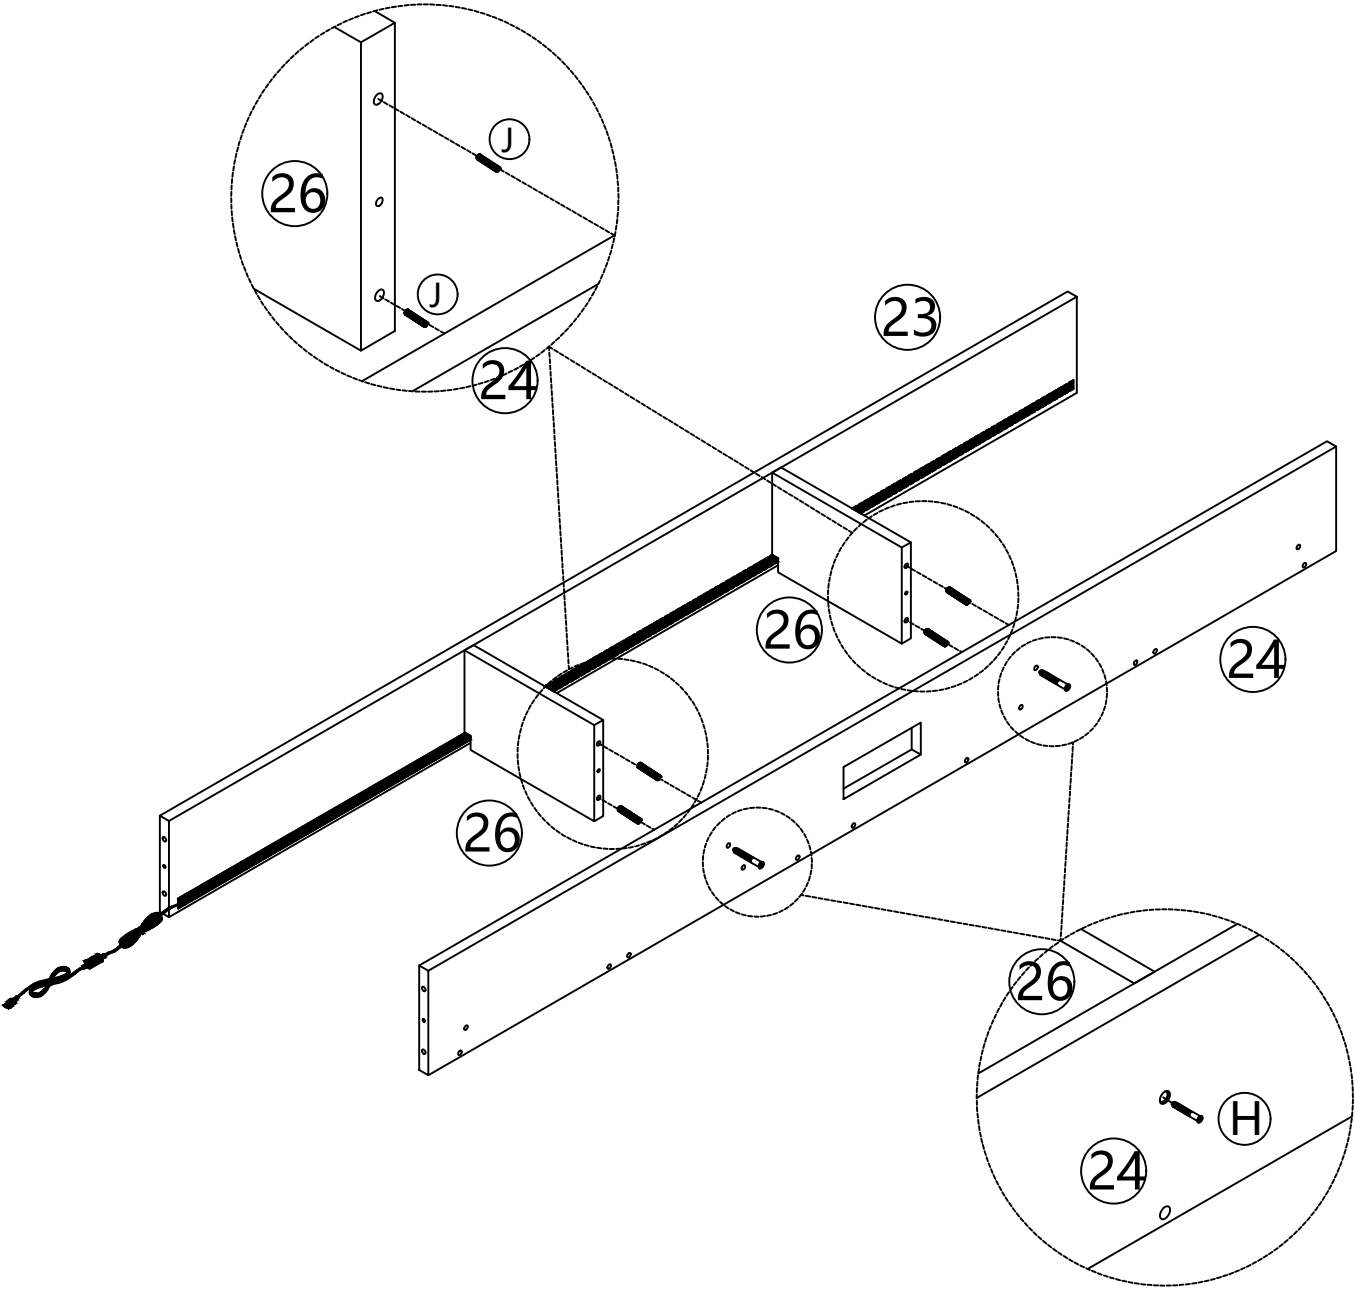

STEP 4

ⓐ





Ø6x30mm

7pcs

Step 1

Insert the dowel into the holes of the parts as shown.

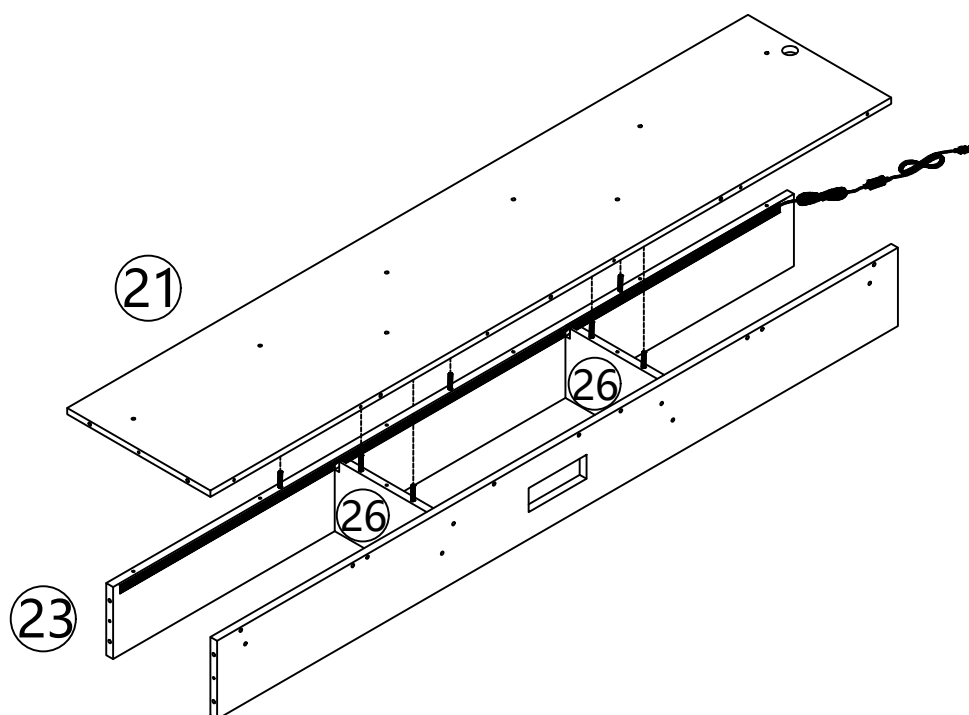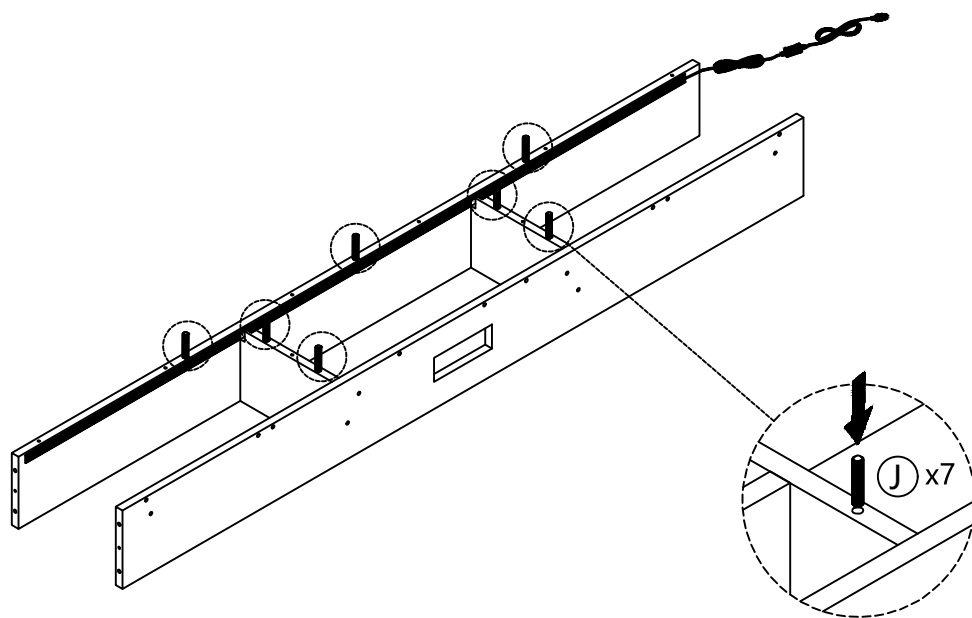

STEP 5

(H)



Ø5x38mm


14pcs

(K)



AllenKey 3#

1pc

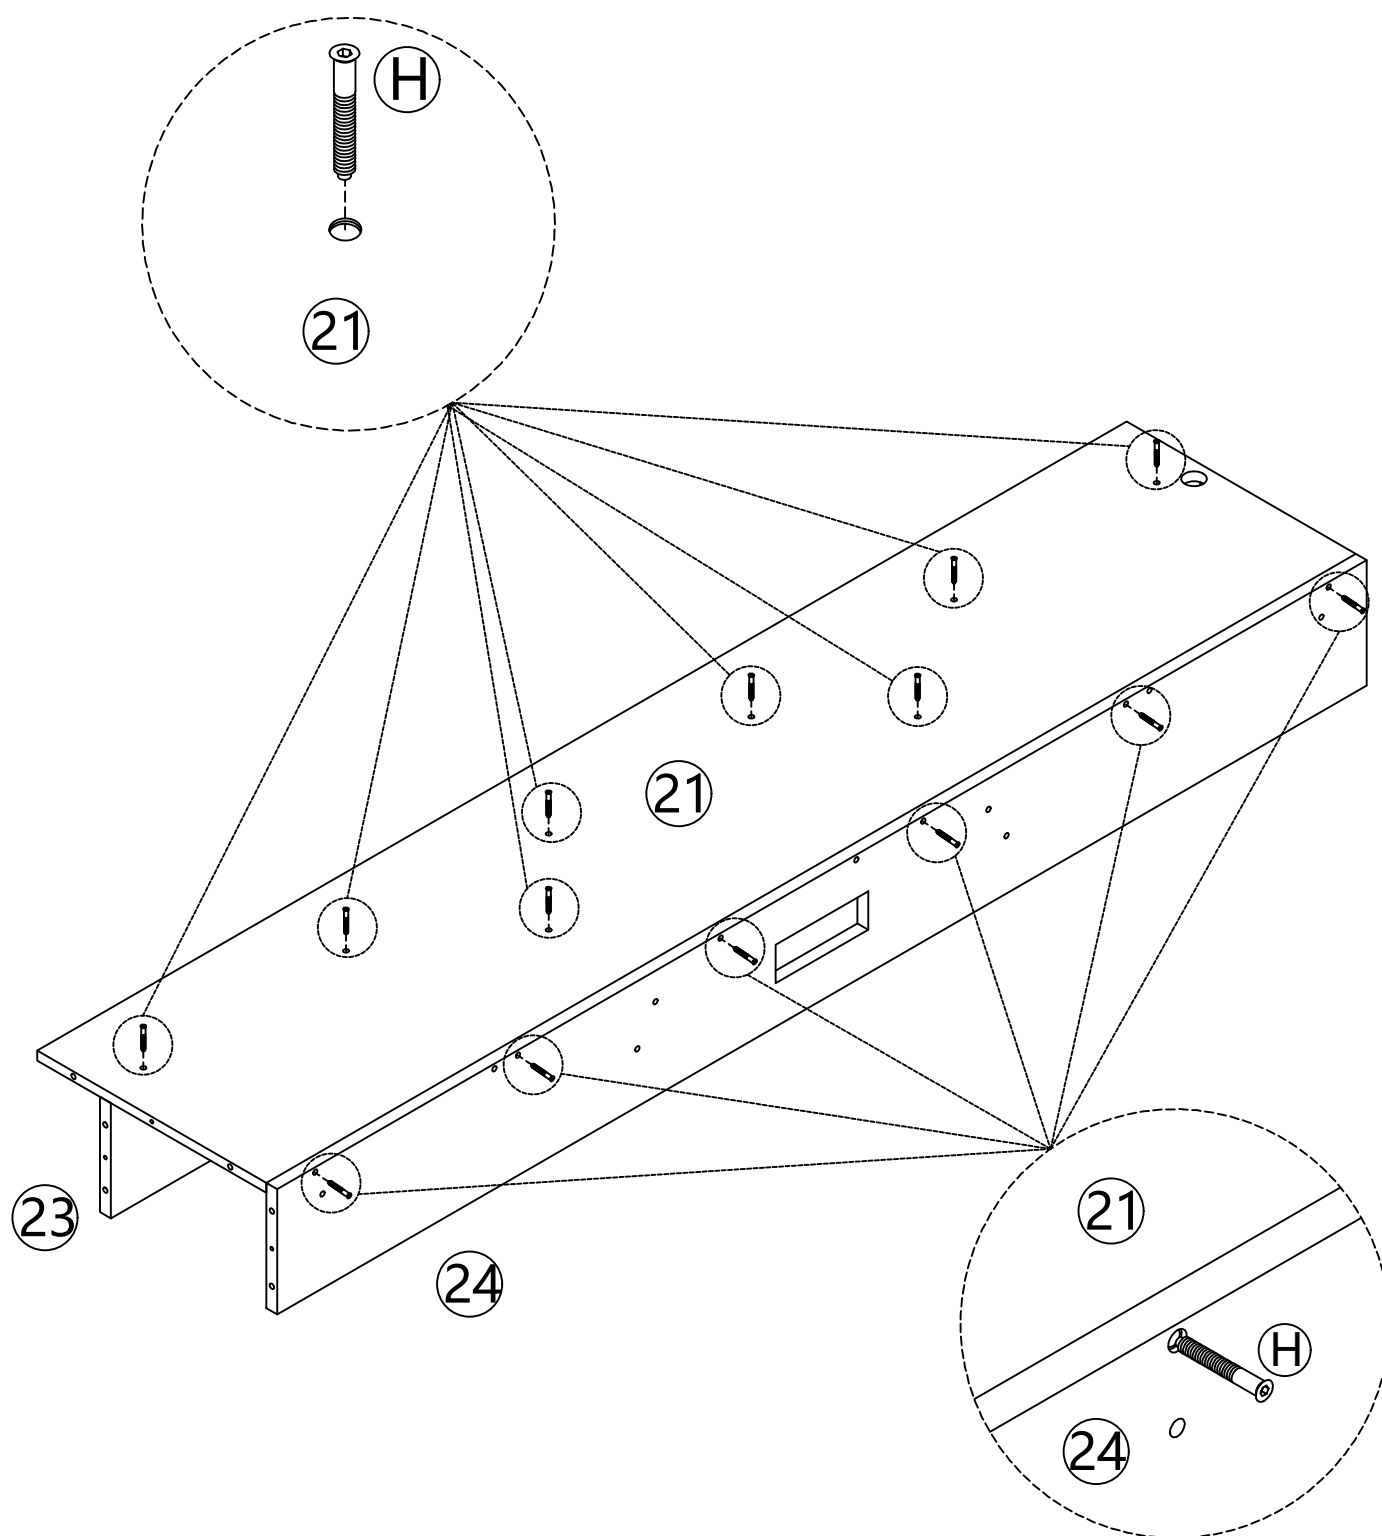

STEP 6

(J)



Ø6x30mm

3pcs

(A)



M6x12mm

8pcs

(M)






AllenKey 4#

1pc

Step 1

Insert the dowel into the holes of the parts as shown.

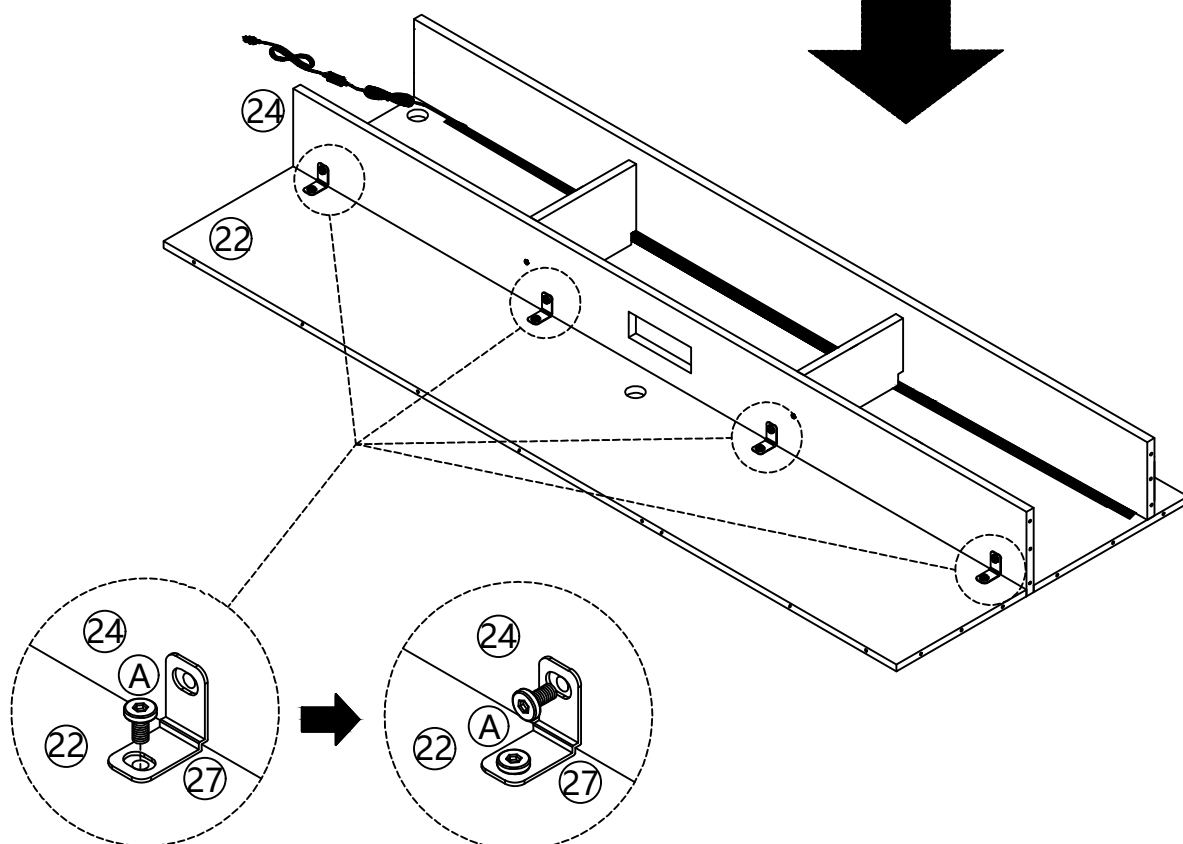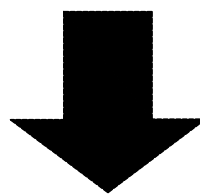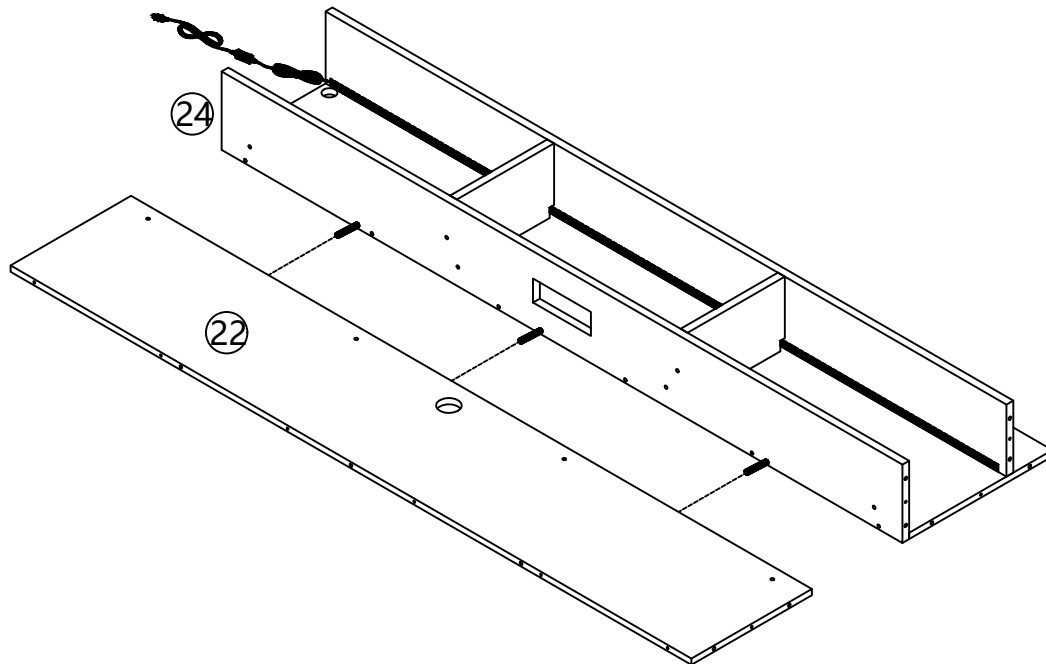

STEP 7

(H)



Ø5x38mm

6pcs

(J)



Ø6x30mm

3pcs

(K)





AllenKey 3#

1pc

Step 1

Insert the dowel into the holes of the parts as shown.

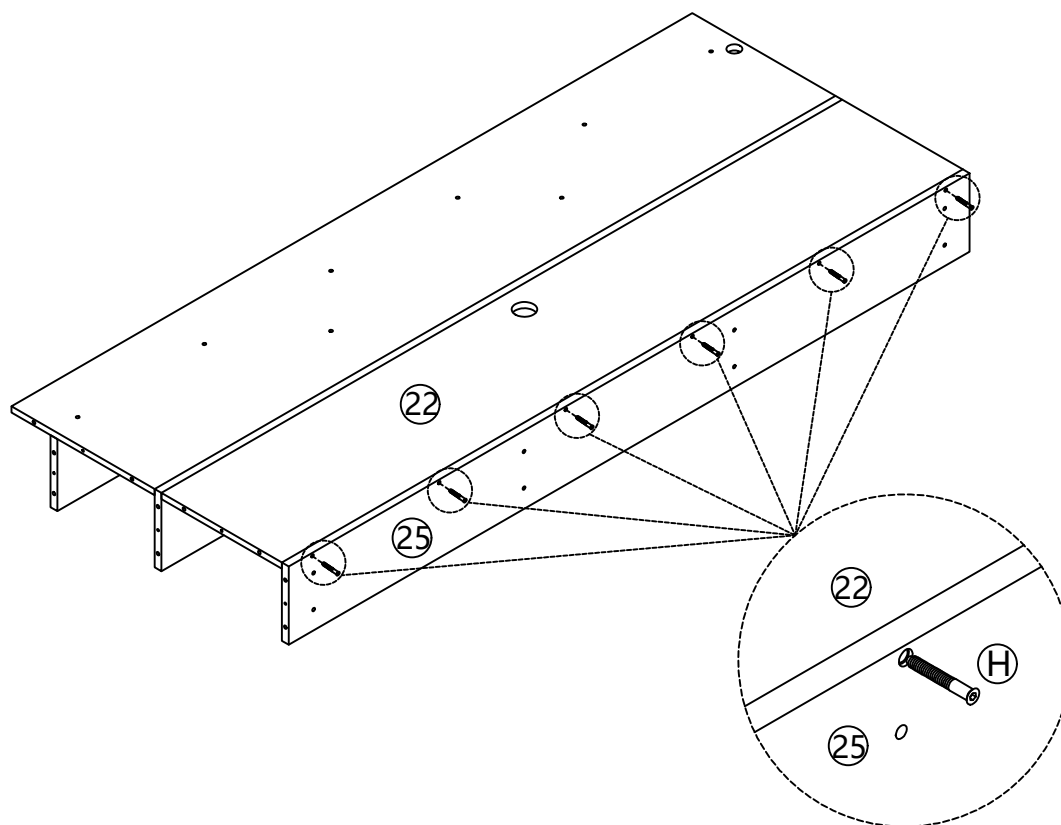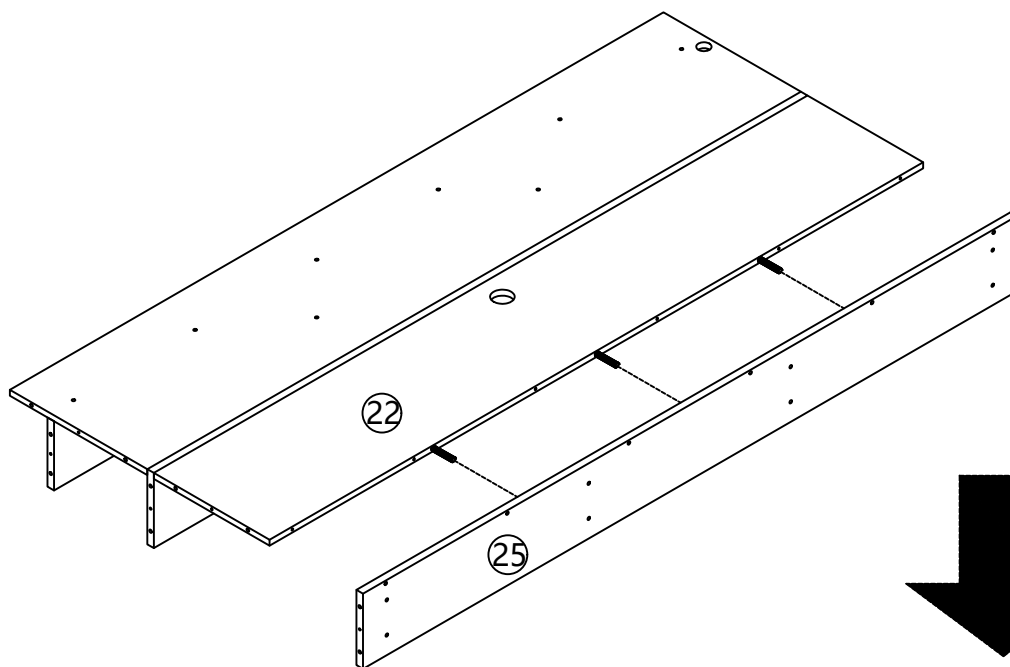

STEP 8

(H)



Ø5x38mm

10pcs

(J)



Ø6x30mm

20pcs

(K)





AllenKey 3#


1pc

Step 1

Insert the dowel into the holes of the parts as shown.

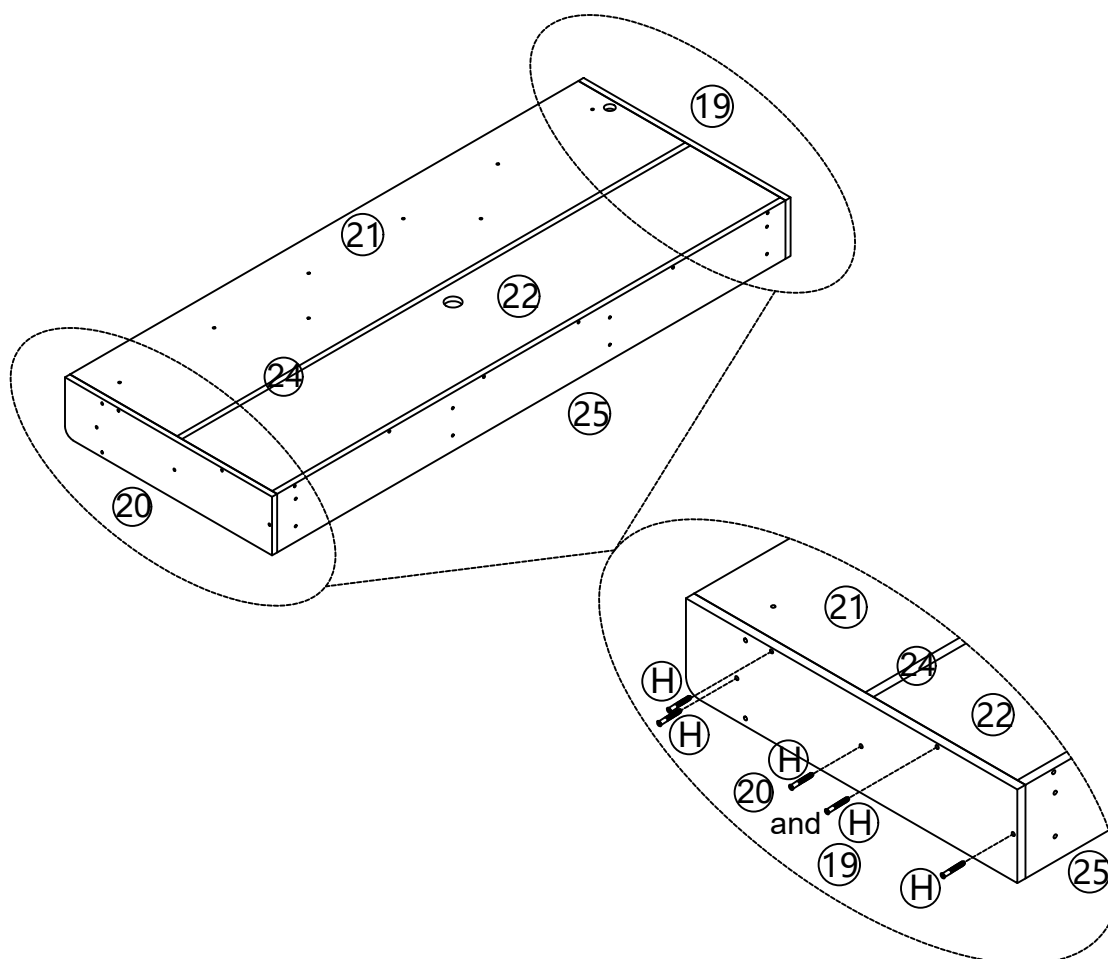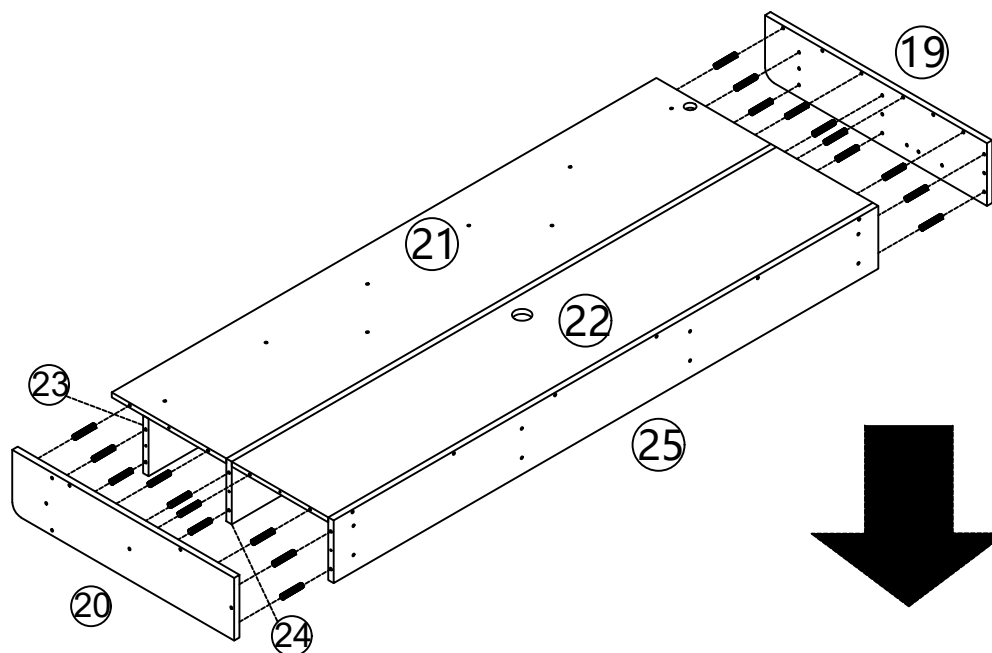

STEP 9		
Ⓔ	 Ø3x12mm	2pcs
Ⓚ	 AllenKey 4#	1pc

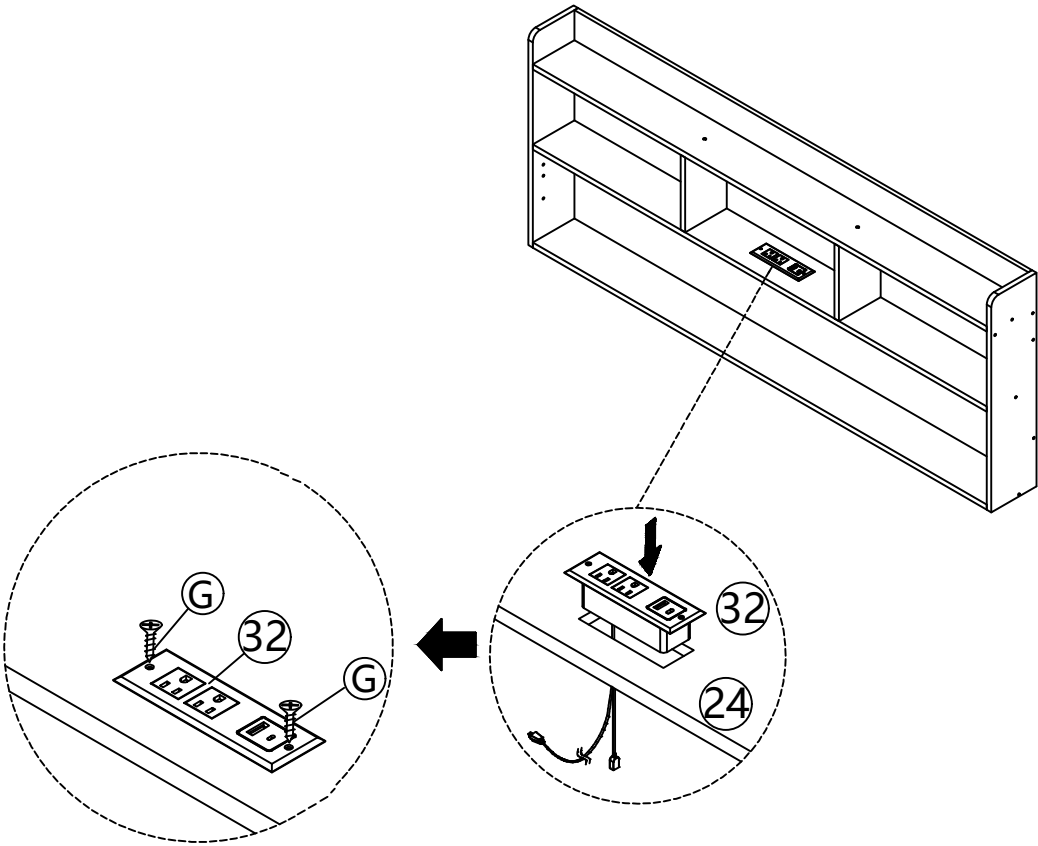

STEP 10

(B)



M6x20mm

4pcs



(M)




AllenKey 4#

1pc

Be careful of the lotus leaf pinching your hands

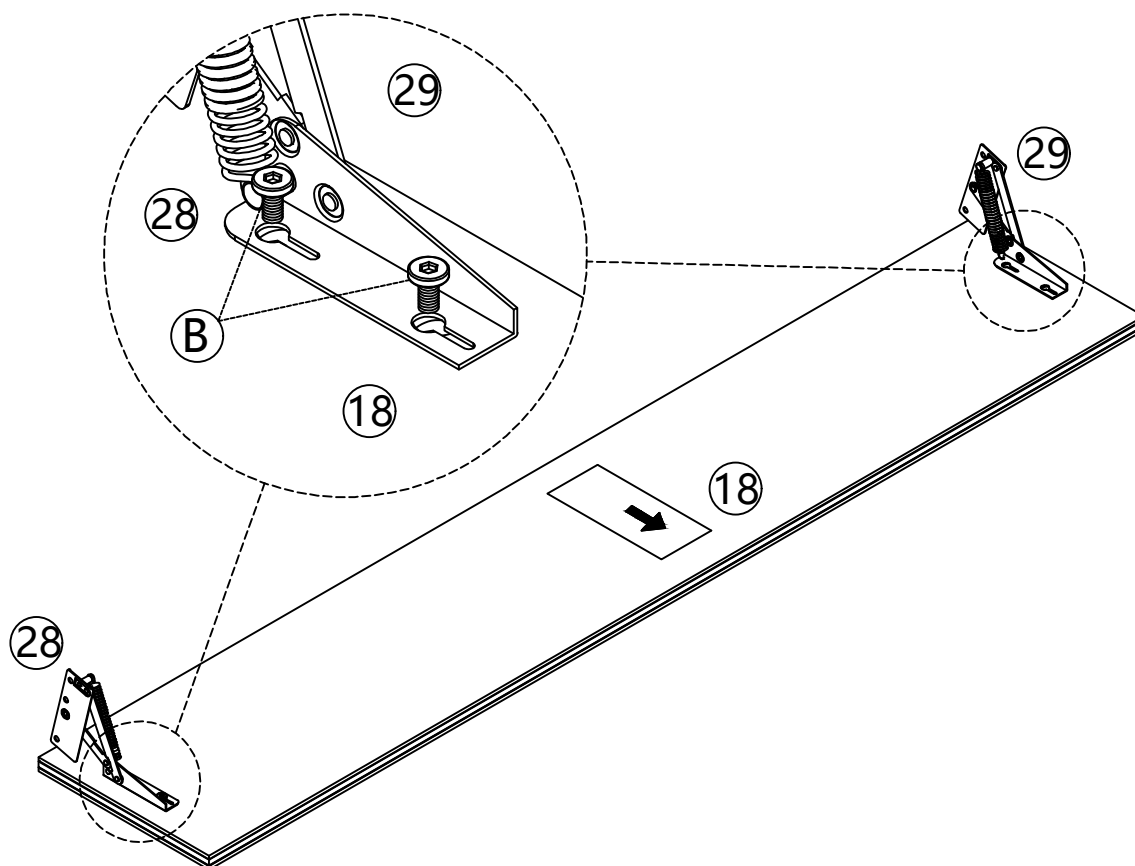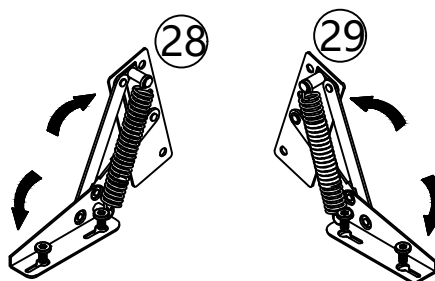

STEP 11		
(A)	 M6x12mm	3pcs
(M)	 AllenKey 4#	1pc

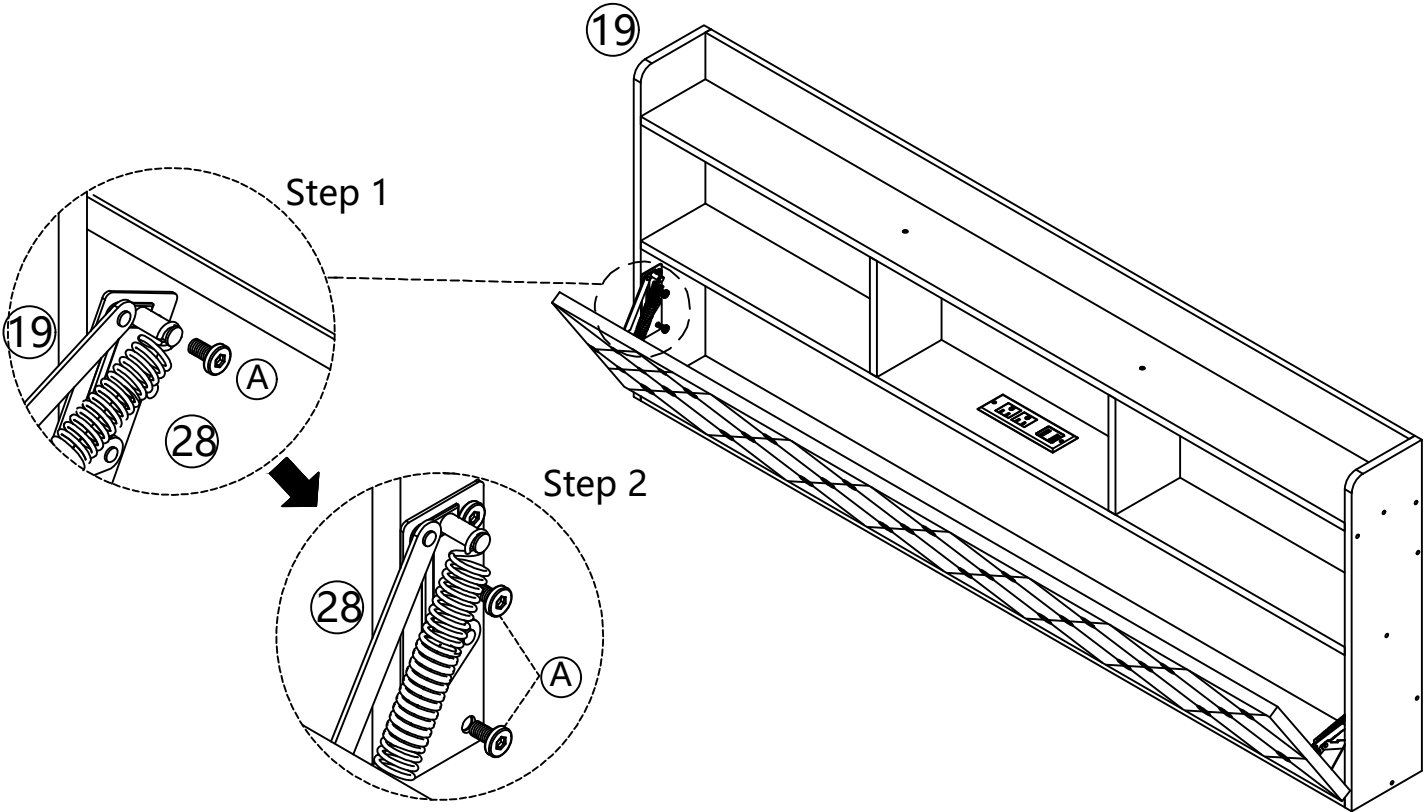

STEP 12

(A)



M6x12mm


3pcs

(M)



AllenKey 4#

1pc

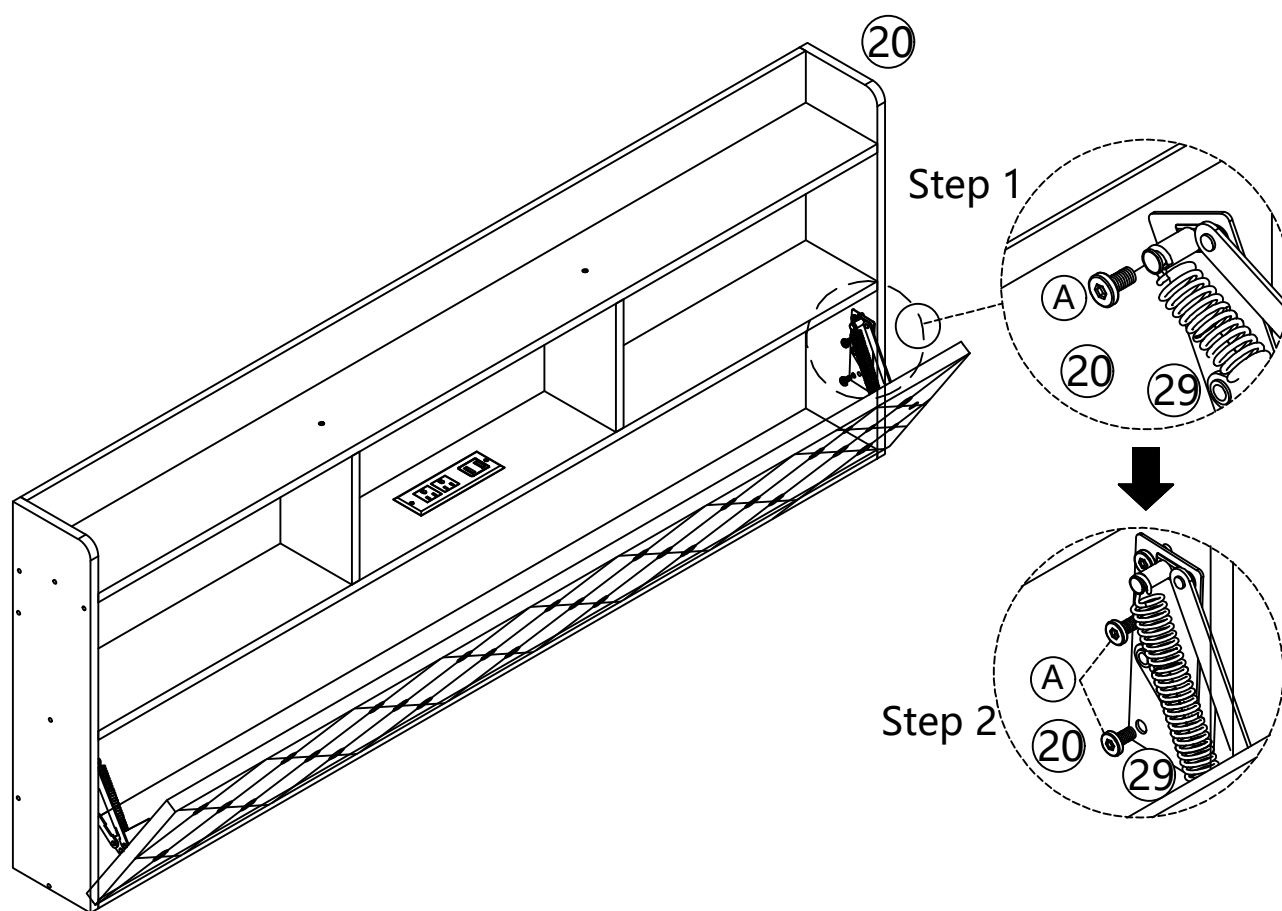

STEP 13

Ⓒ



M6x35mm


6pcs

Ⓜ



AllenKey 4#

1pc

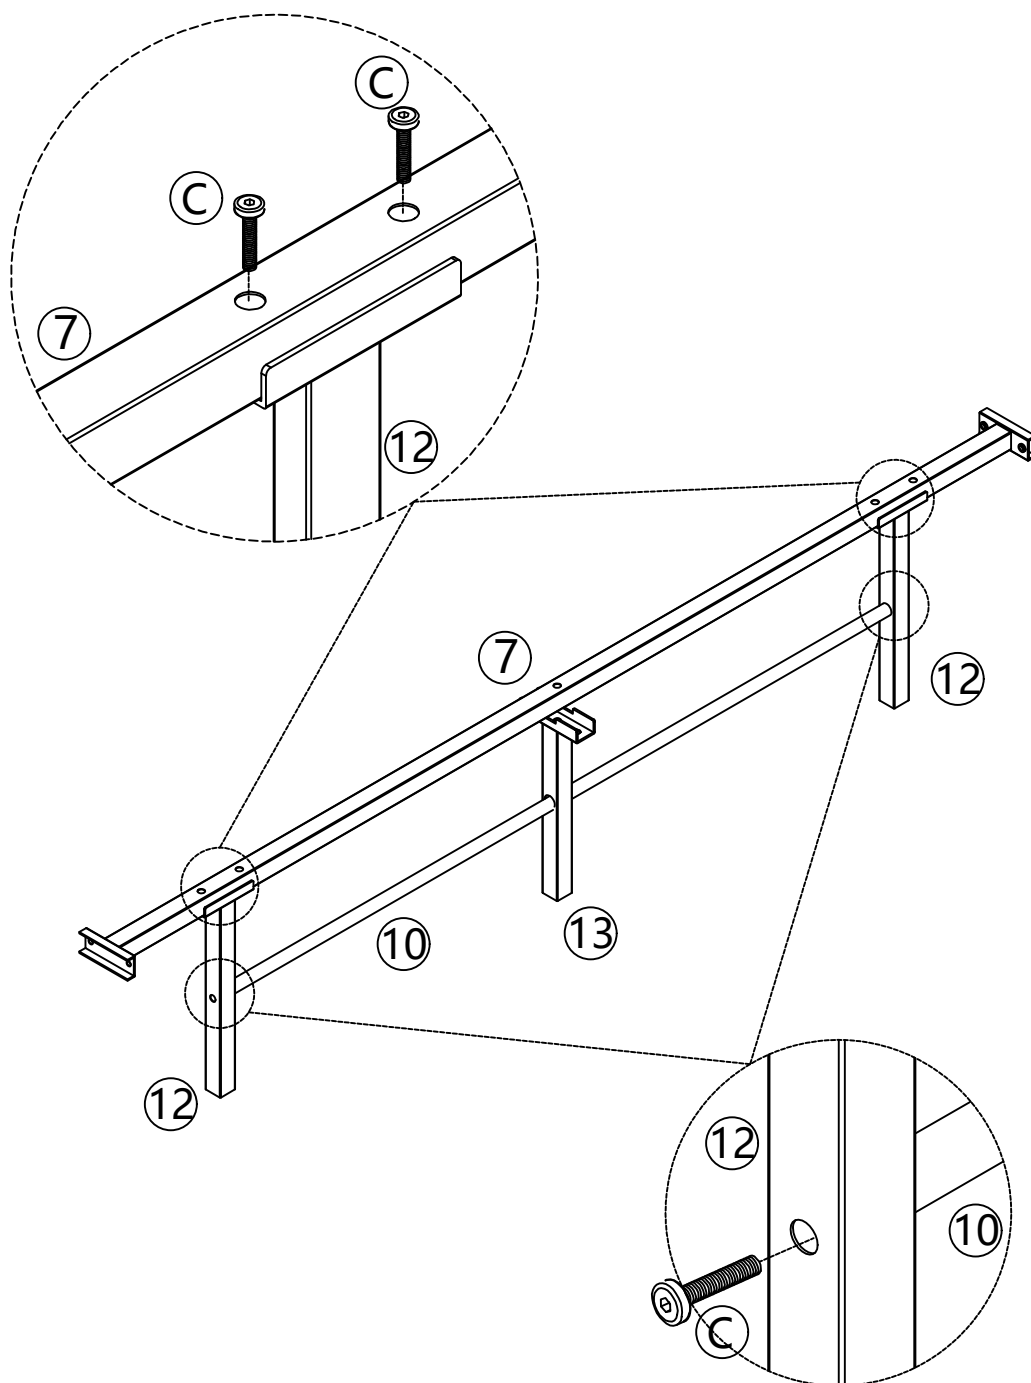

STEP 14

(C)

M6x35mm


6pcs

(M)




AllenKey 4#


1pc

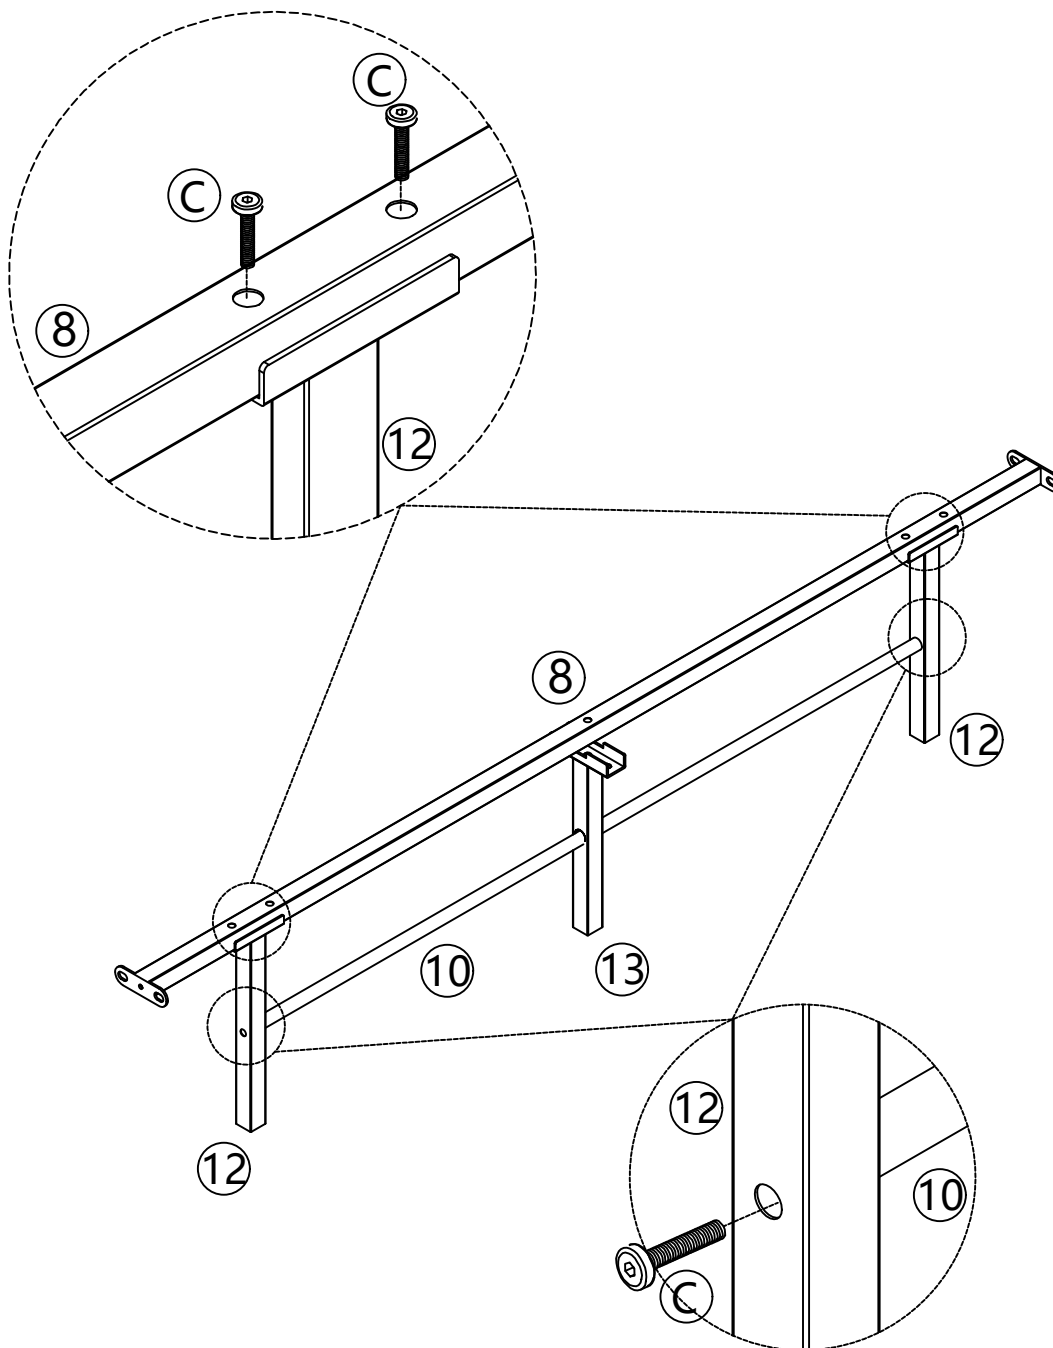

STEP 15		
Ⓒ	 M6x35mm	4pcs
Ⓓ	 M8x15mm	4pcs
Ⓜ	 AllenKey 4#	1pc

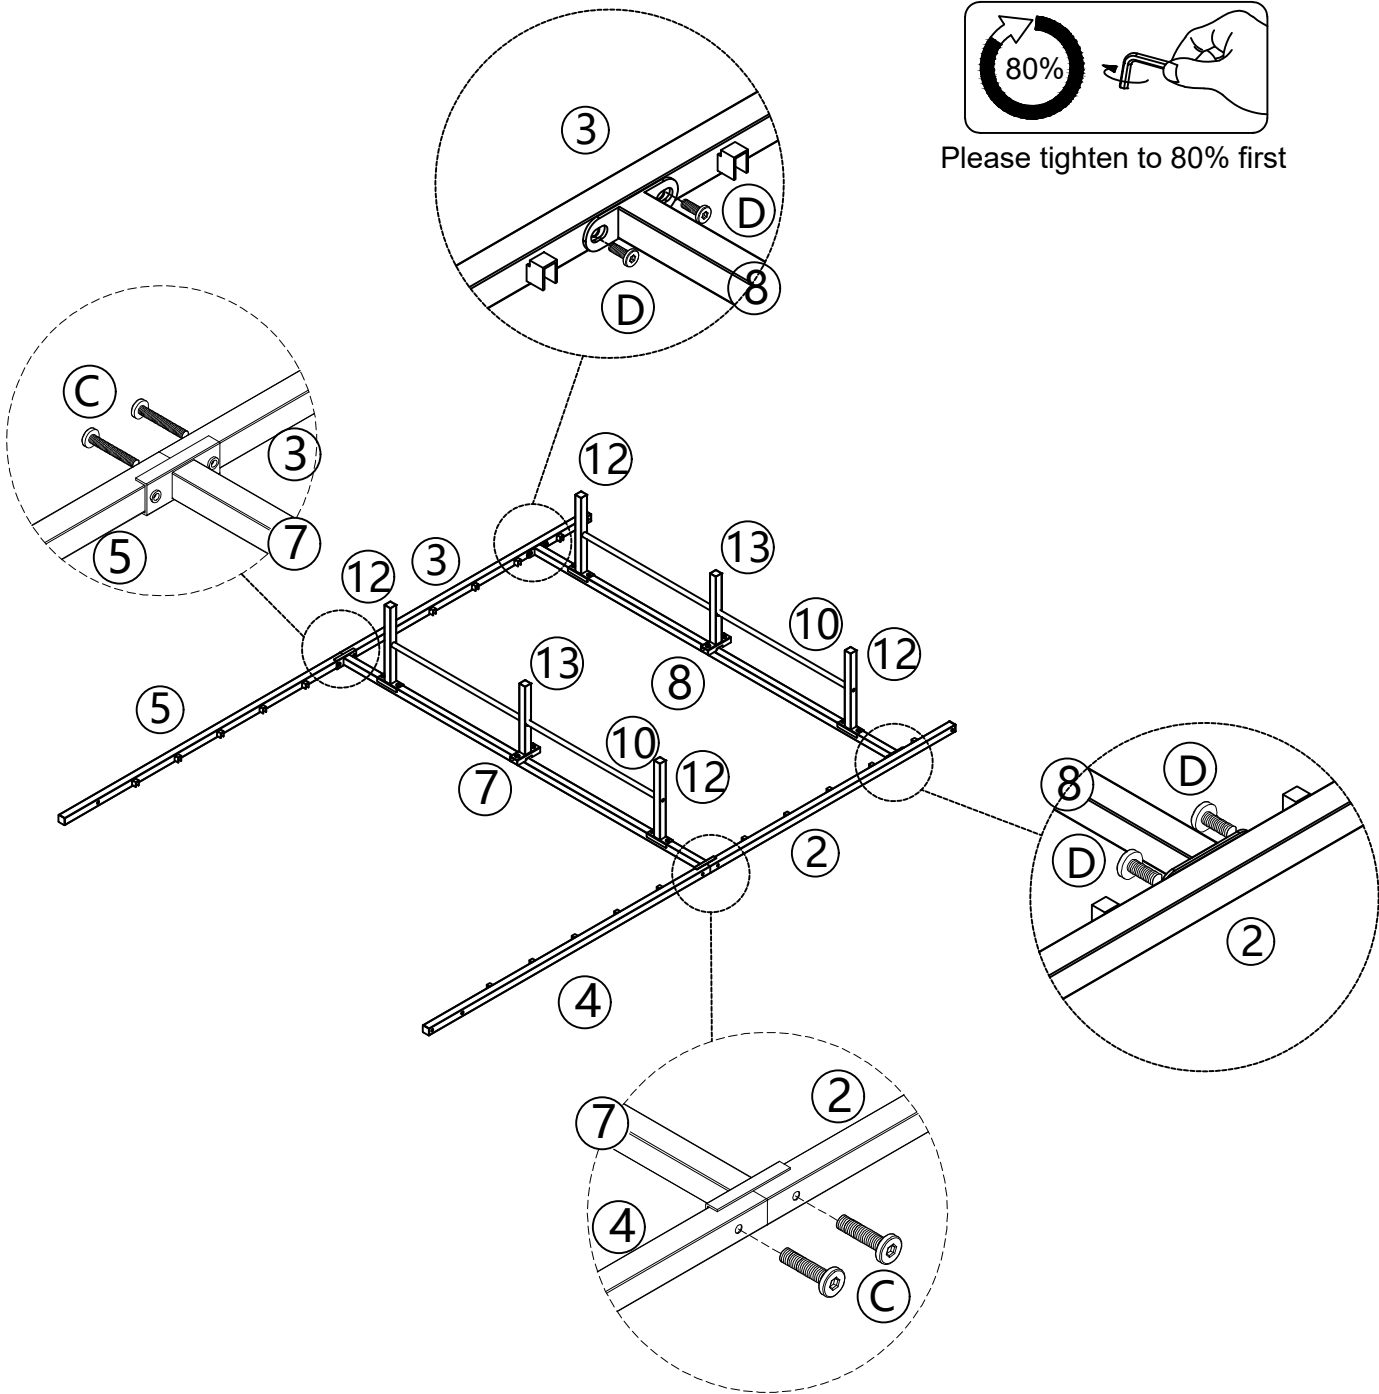


STEP 16		
Ⓒ	 M6x35mm	2pcs
Ⓜ	 AllenKey 4#	1pc

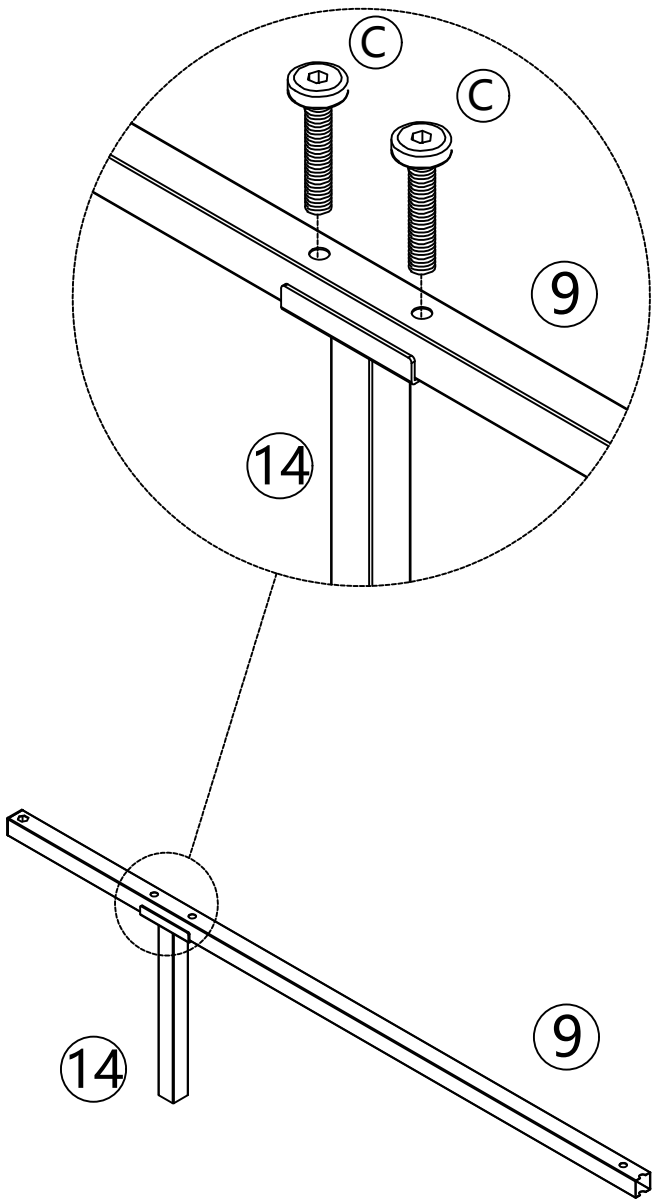

STEP 17

(E)	 M8x35mm	4pcs
(F)	 M8x65mm	2pcs
(M)	 AllenKey 4#	1pc

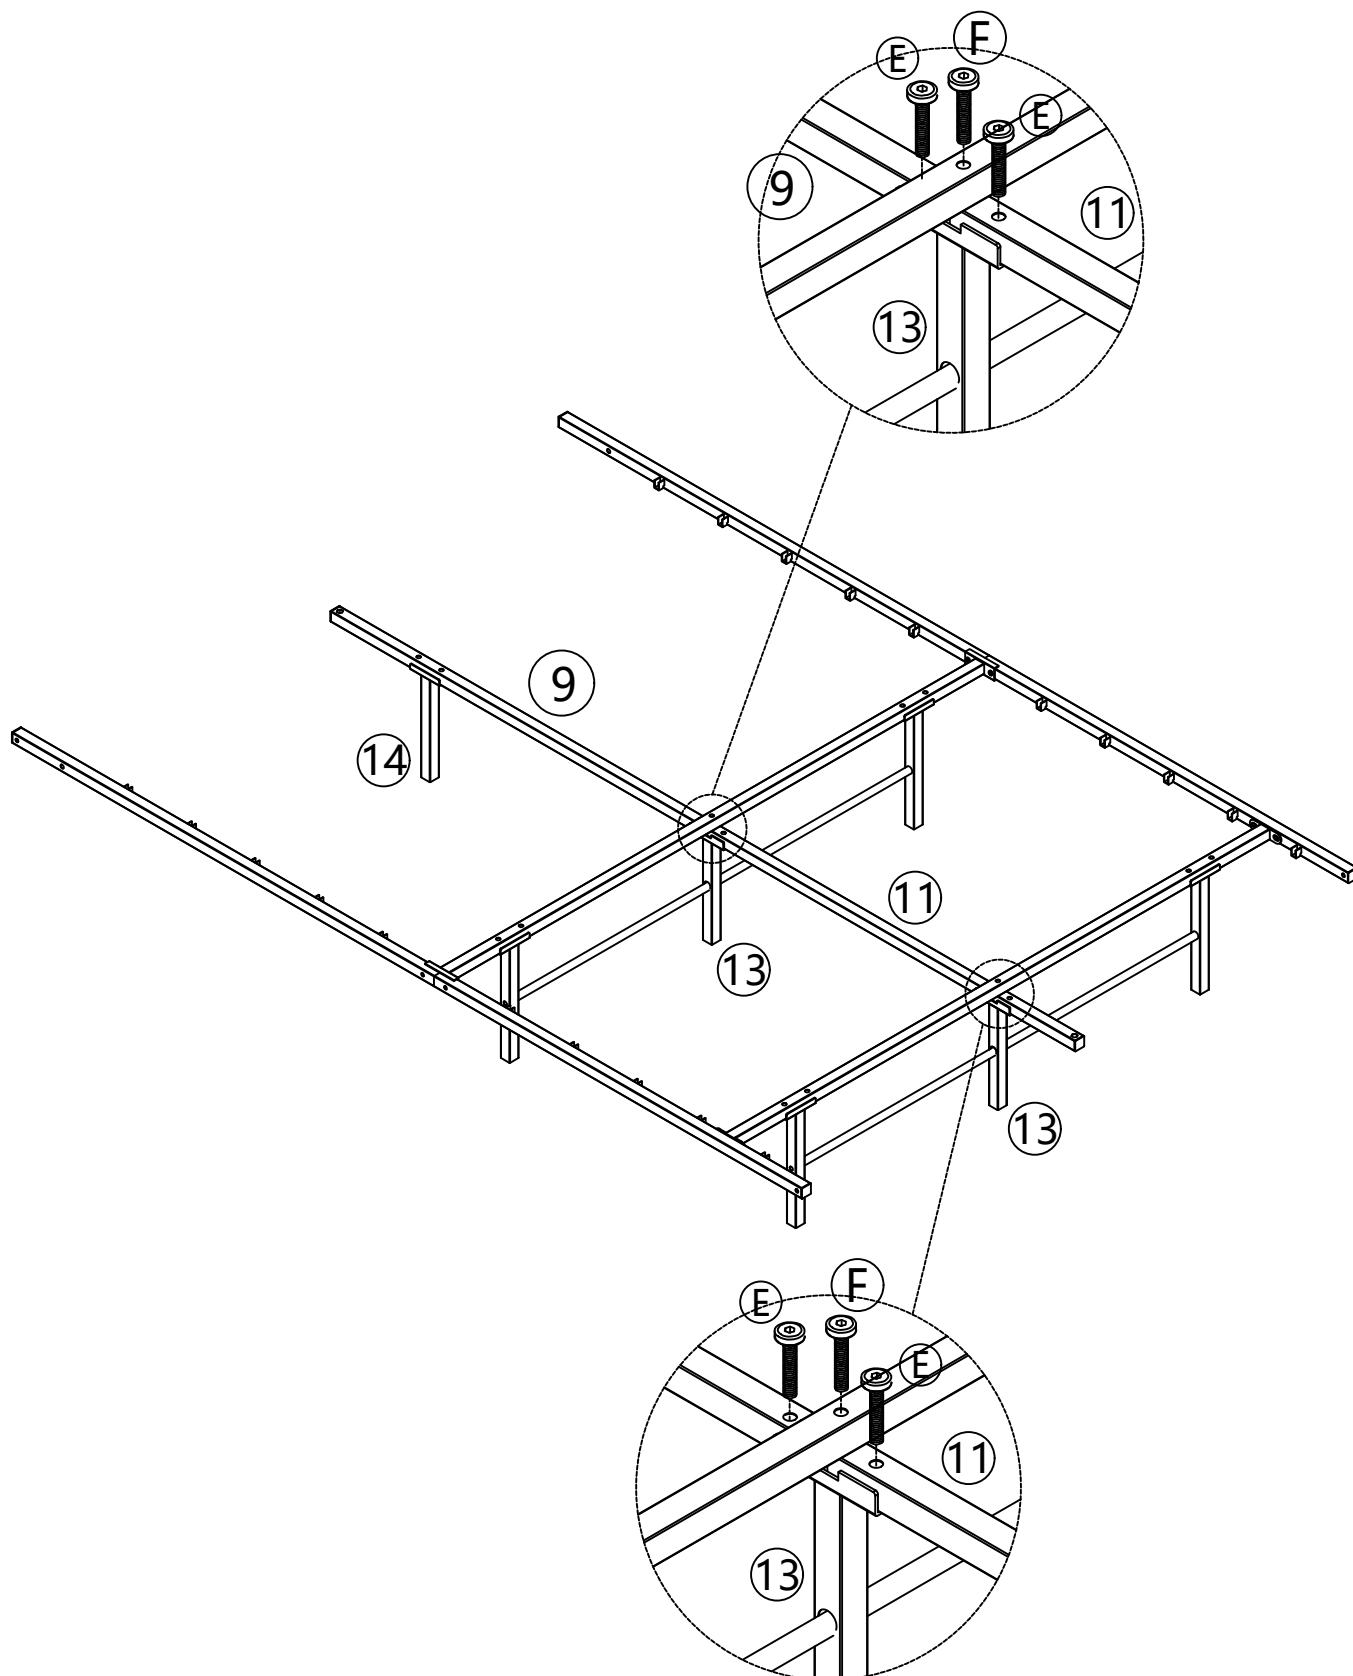

STEP 18

(E)



M8x35mm


3pcs

(M)



AllenKey 4#

1pc

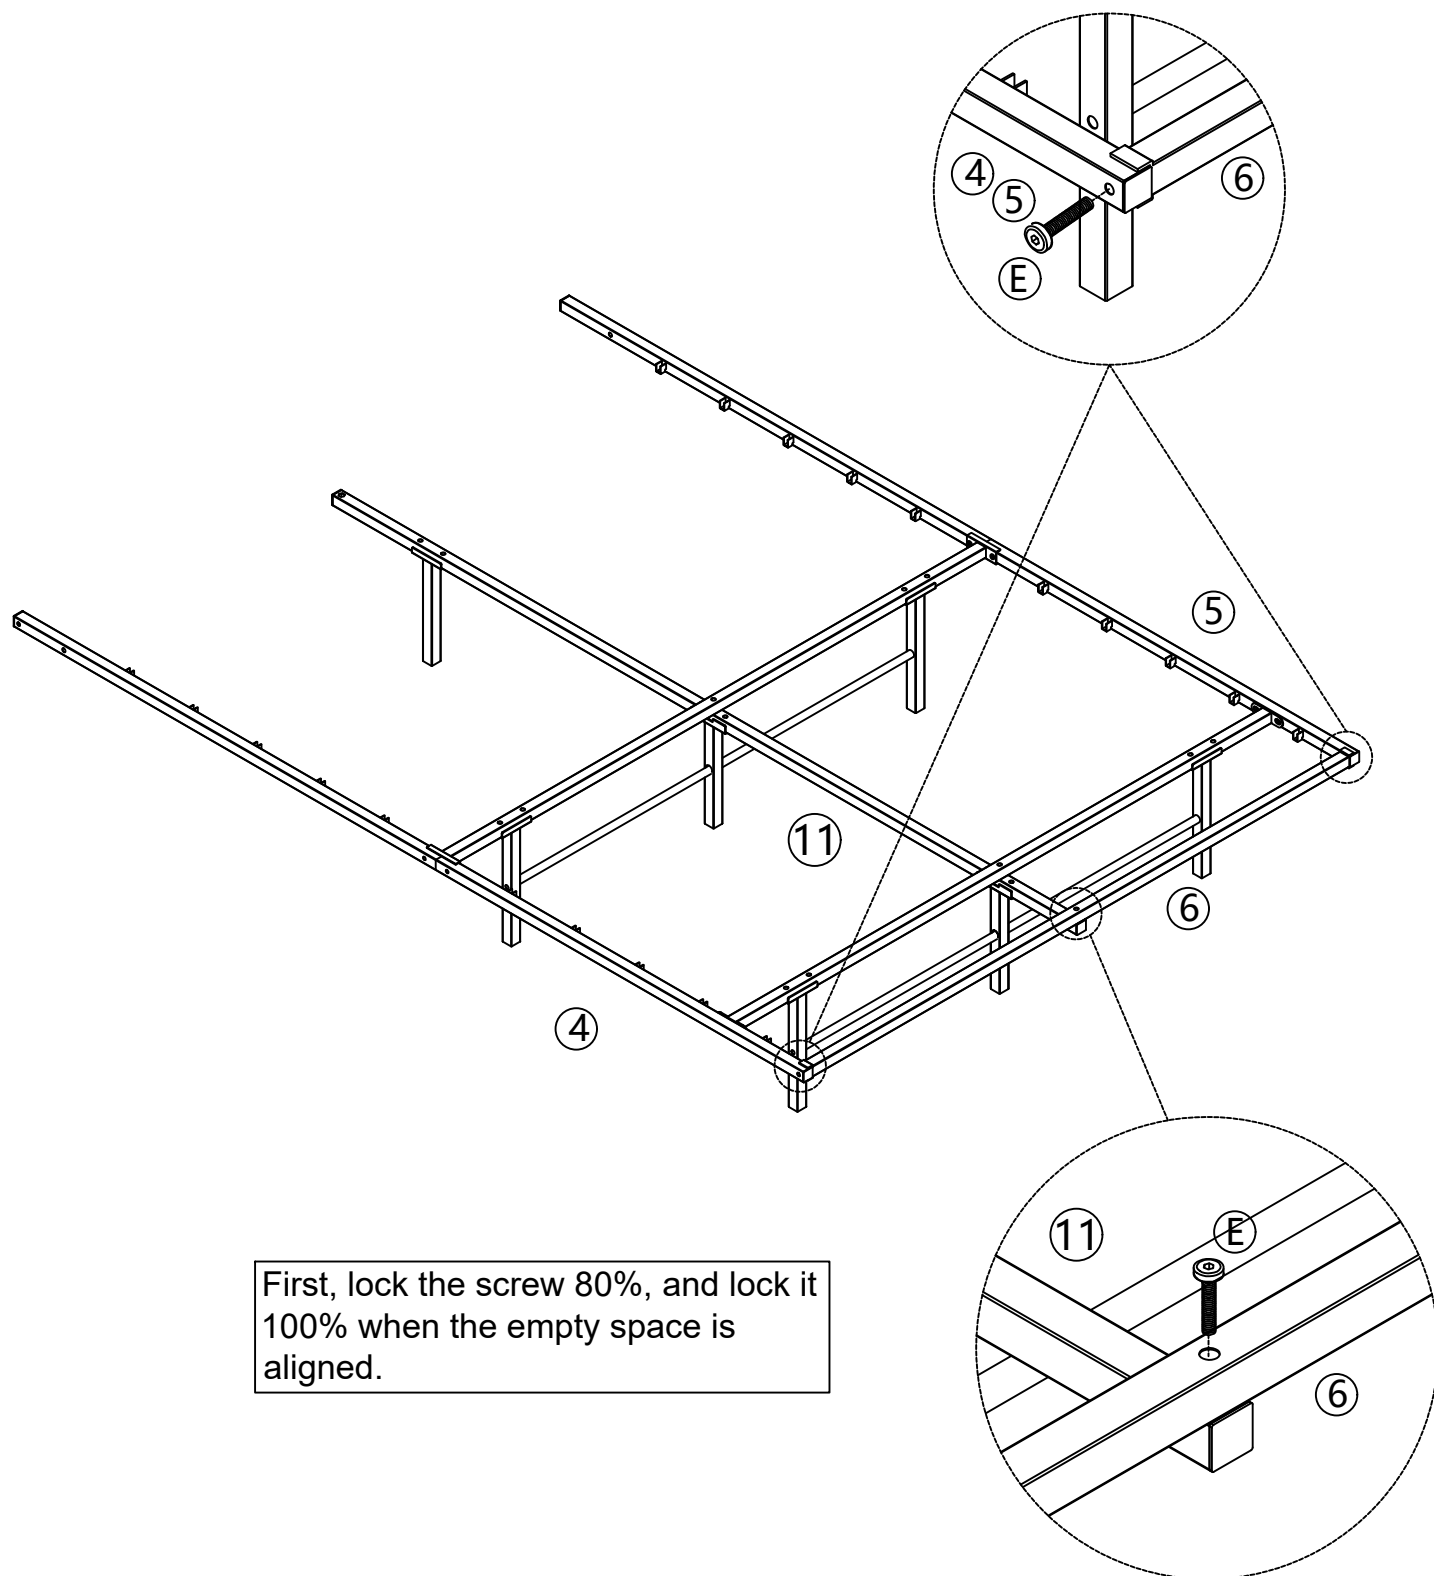

STEP 19

(E)



M8x35mm



1pcs

(M)




AllenKey 4#


1pc

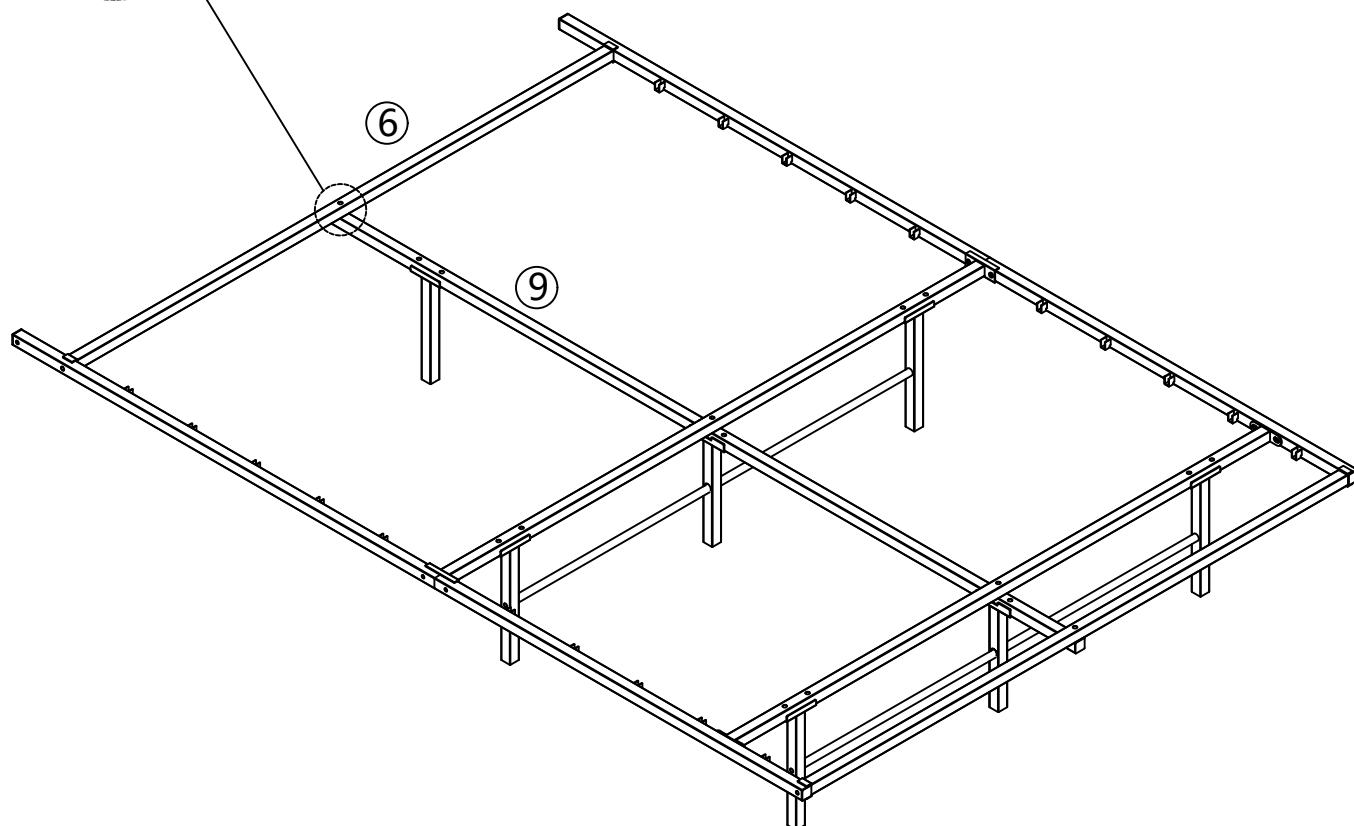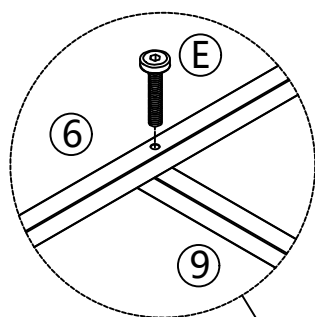

STEP 20		
(E)	 M8x35mm	2pcs
(F)	 M8x65mm	2pcs
(M)	 AllenKey 4#	1pc

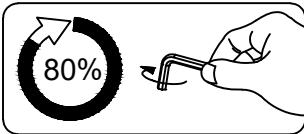

Please tighten to 80% first

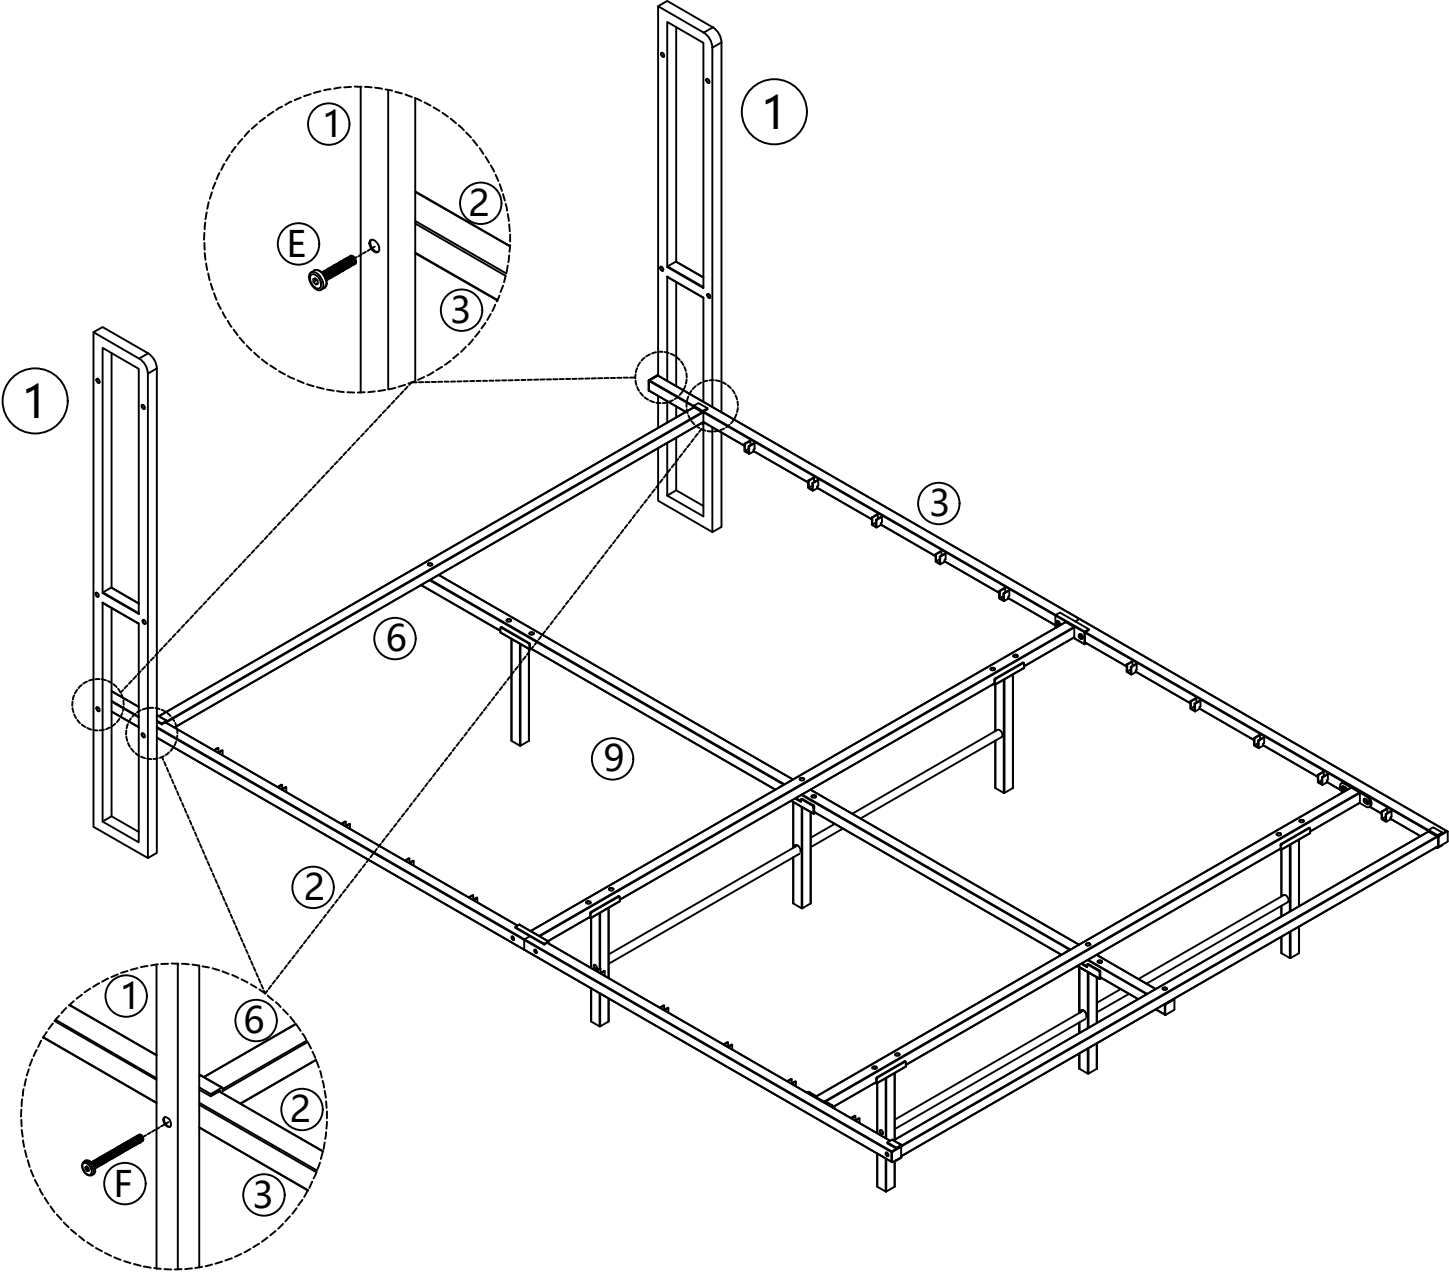

STEP 21

(C)


M6x35mm

4pcs


(M)

AllenKey 4#


1pc

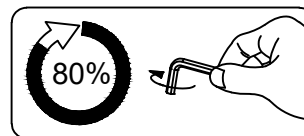

Please tighten to 80% first

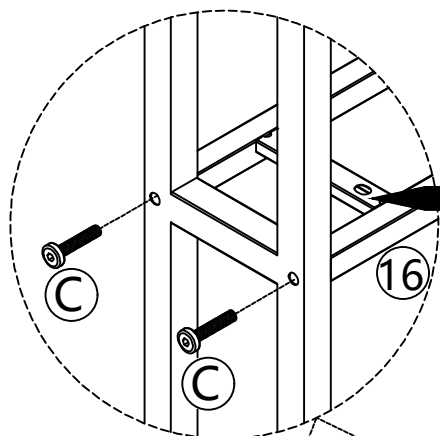

The frame plane is facing up

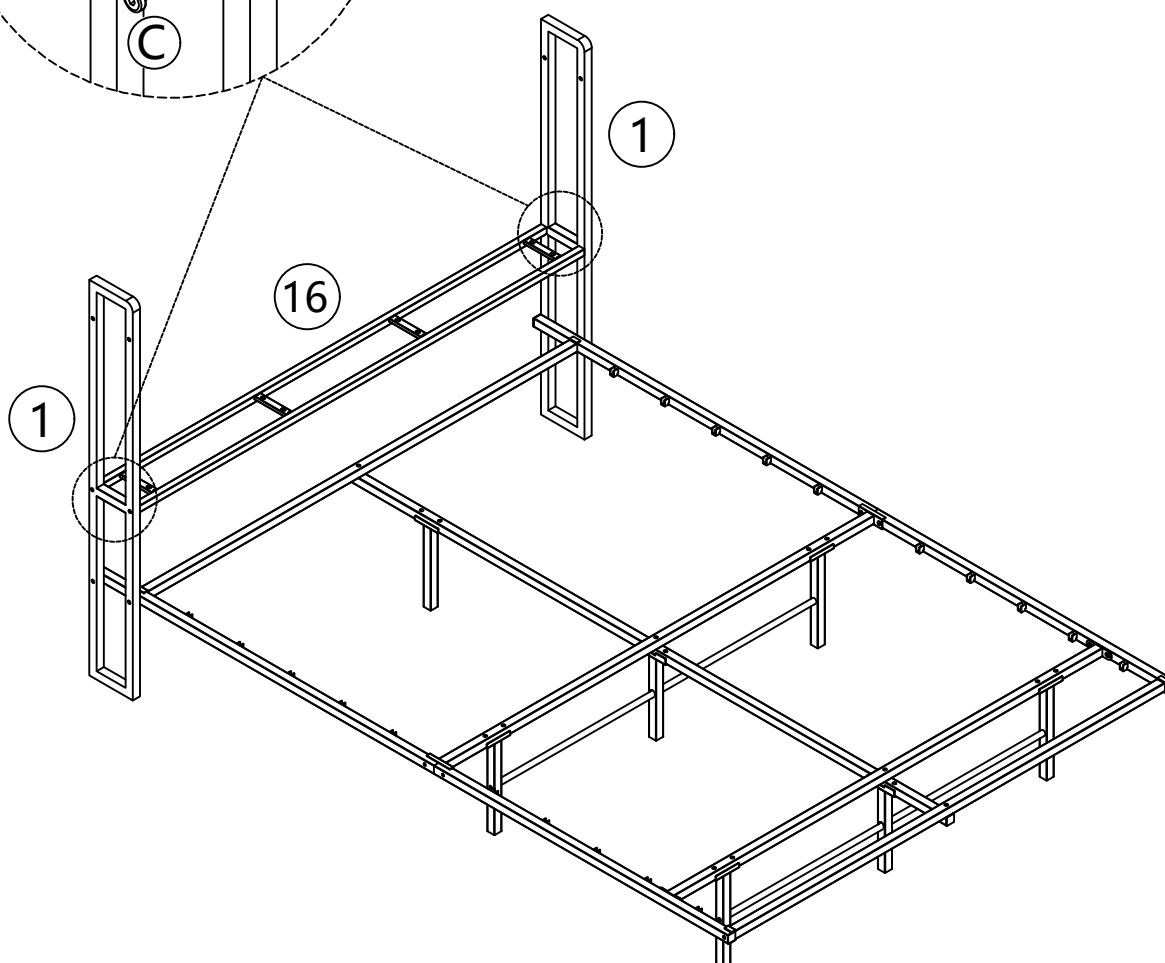


STEP 22

Ⓒ M6x35mm 4pcs

Ⓜ AllenKey 4# 1pc

First, lock the screw 80%, and lock it 100% when the empty space is aligned.

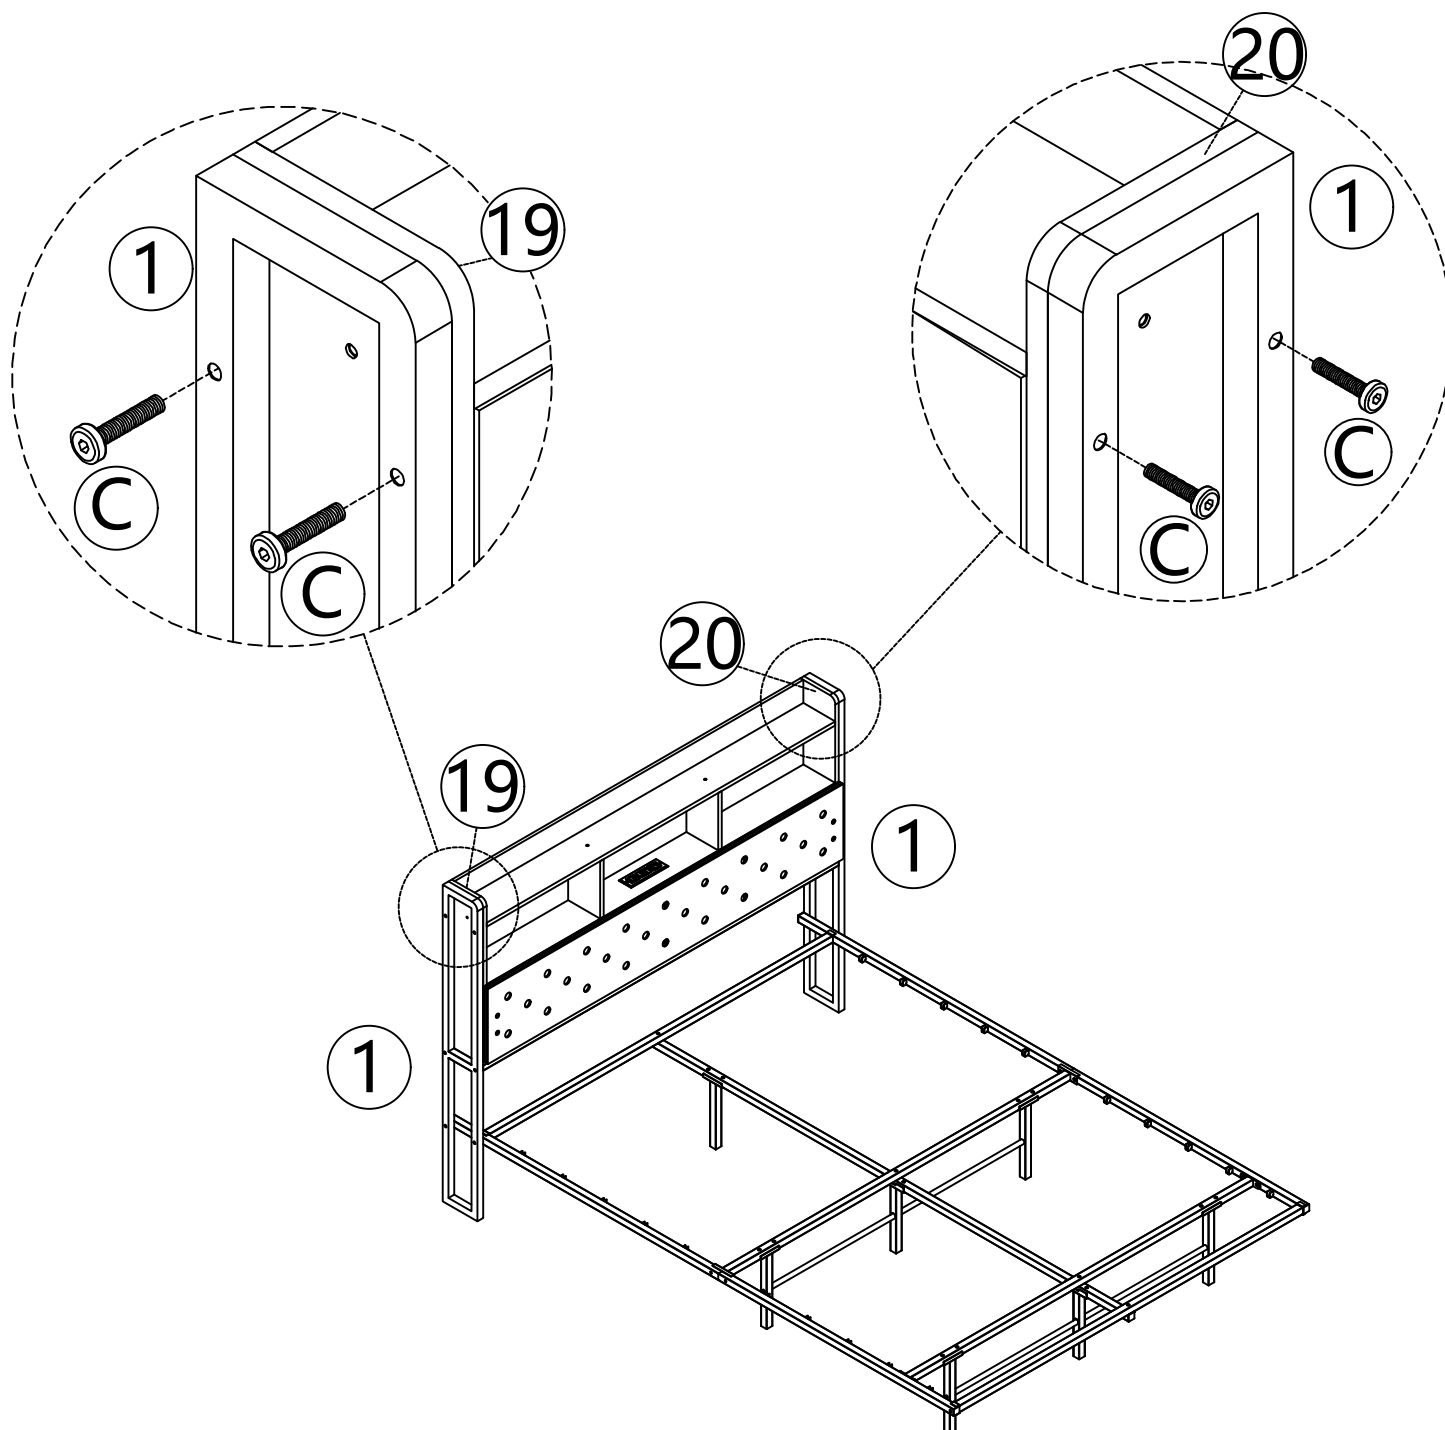

STEP 23

(B)



M6x20mm

8pcs


(M)




AllenKey 4#

1pc

First, lock the screw 80%, and lock it 100% when the empty space is aligned.

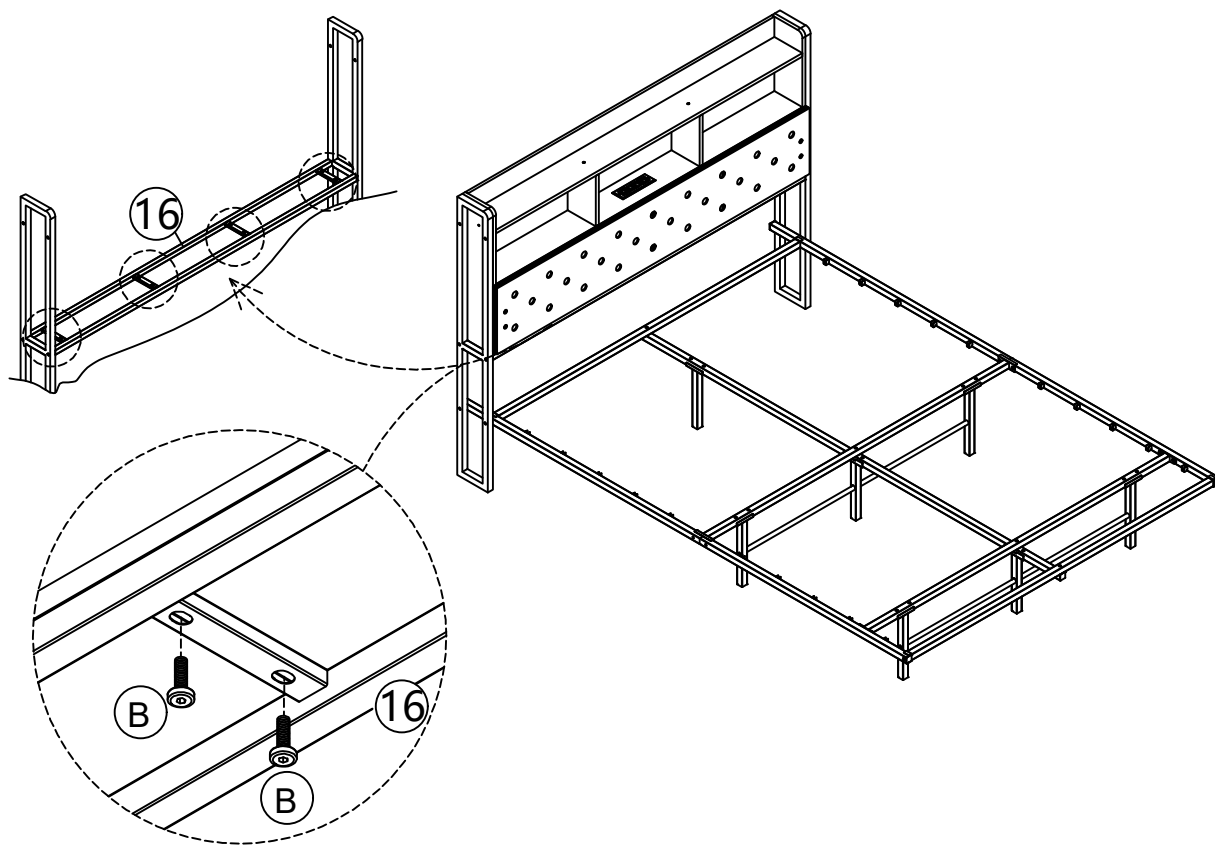



STEP 24

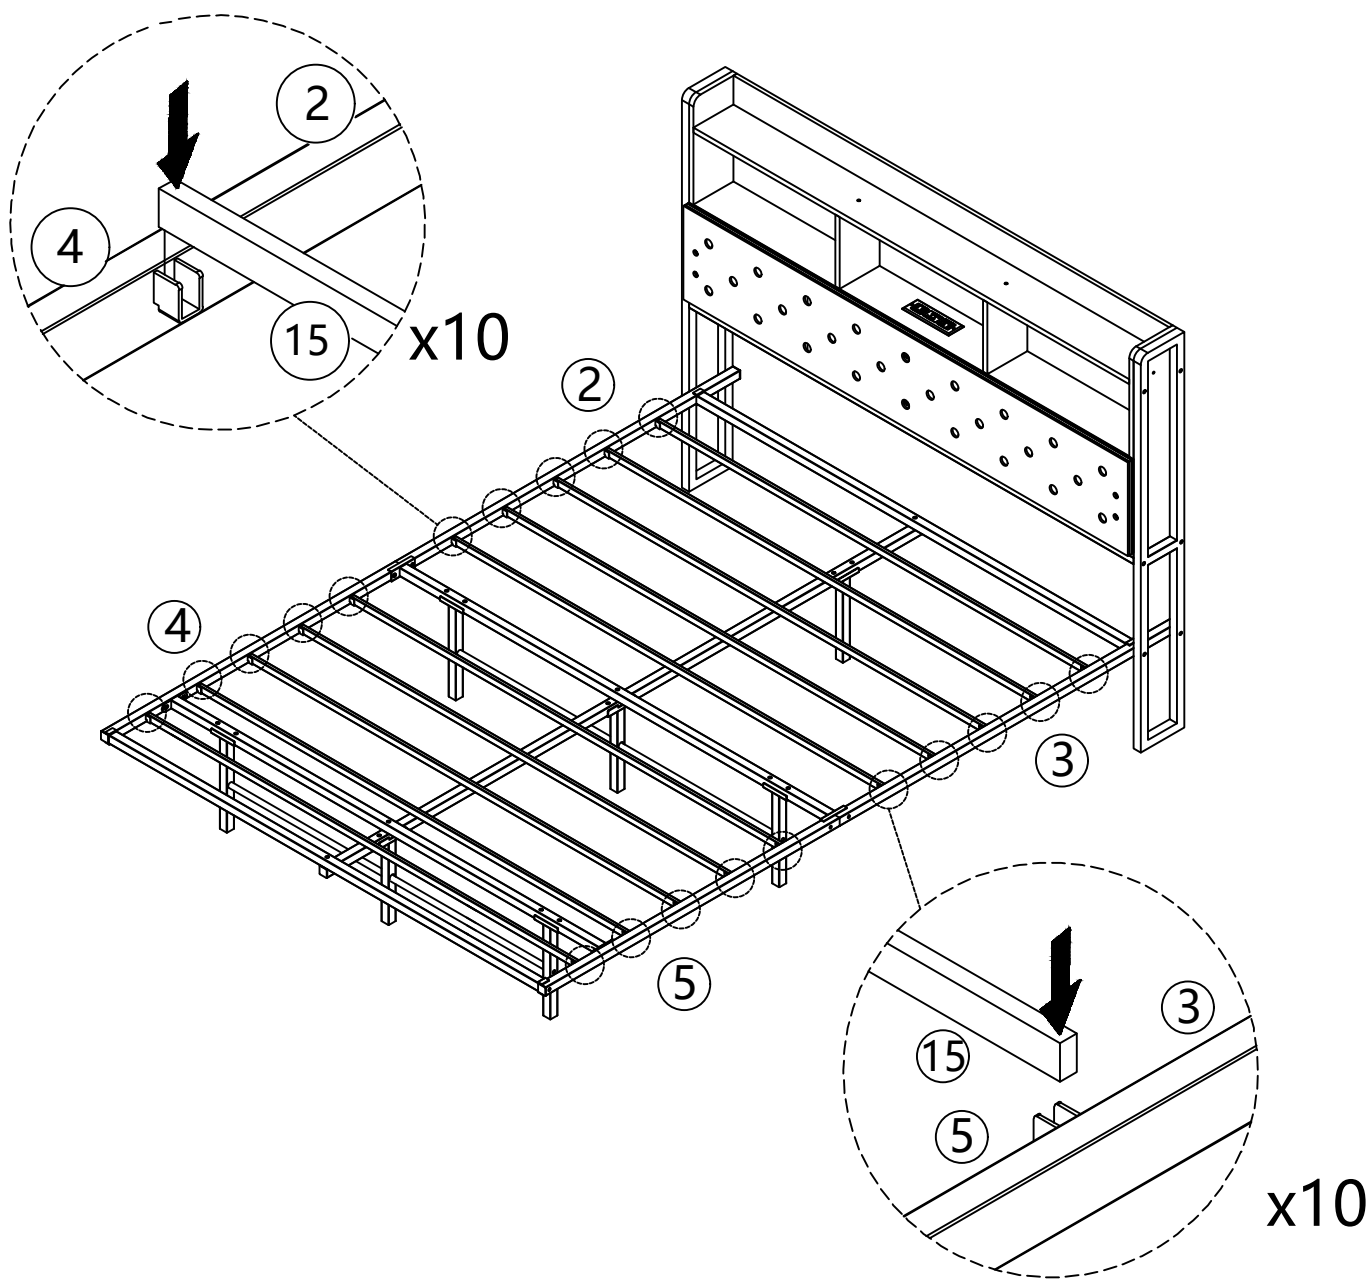

STEP 25


You can use Velcro to glue the light strip line to the wooden board.

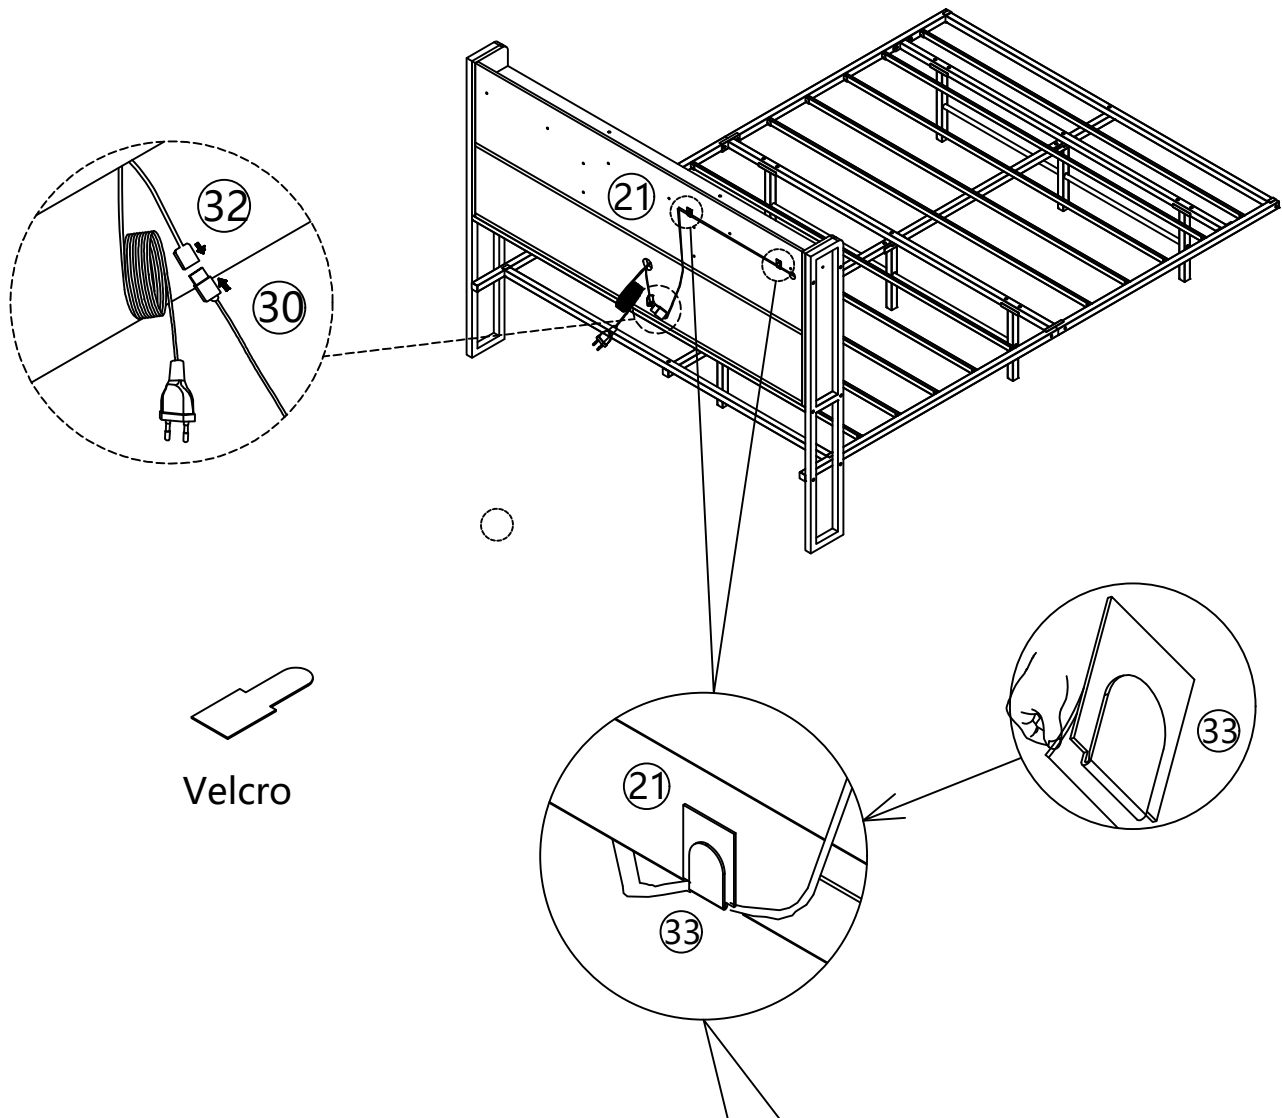


Velcro

Remove the paper from the back of the Velcro first, and then secure the thread of the part (21) (30) with Velcro.

STEP 26

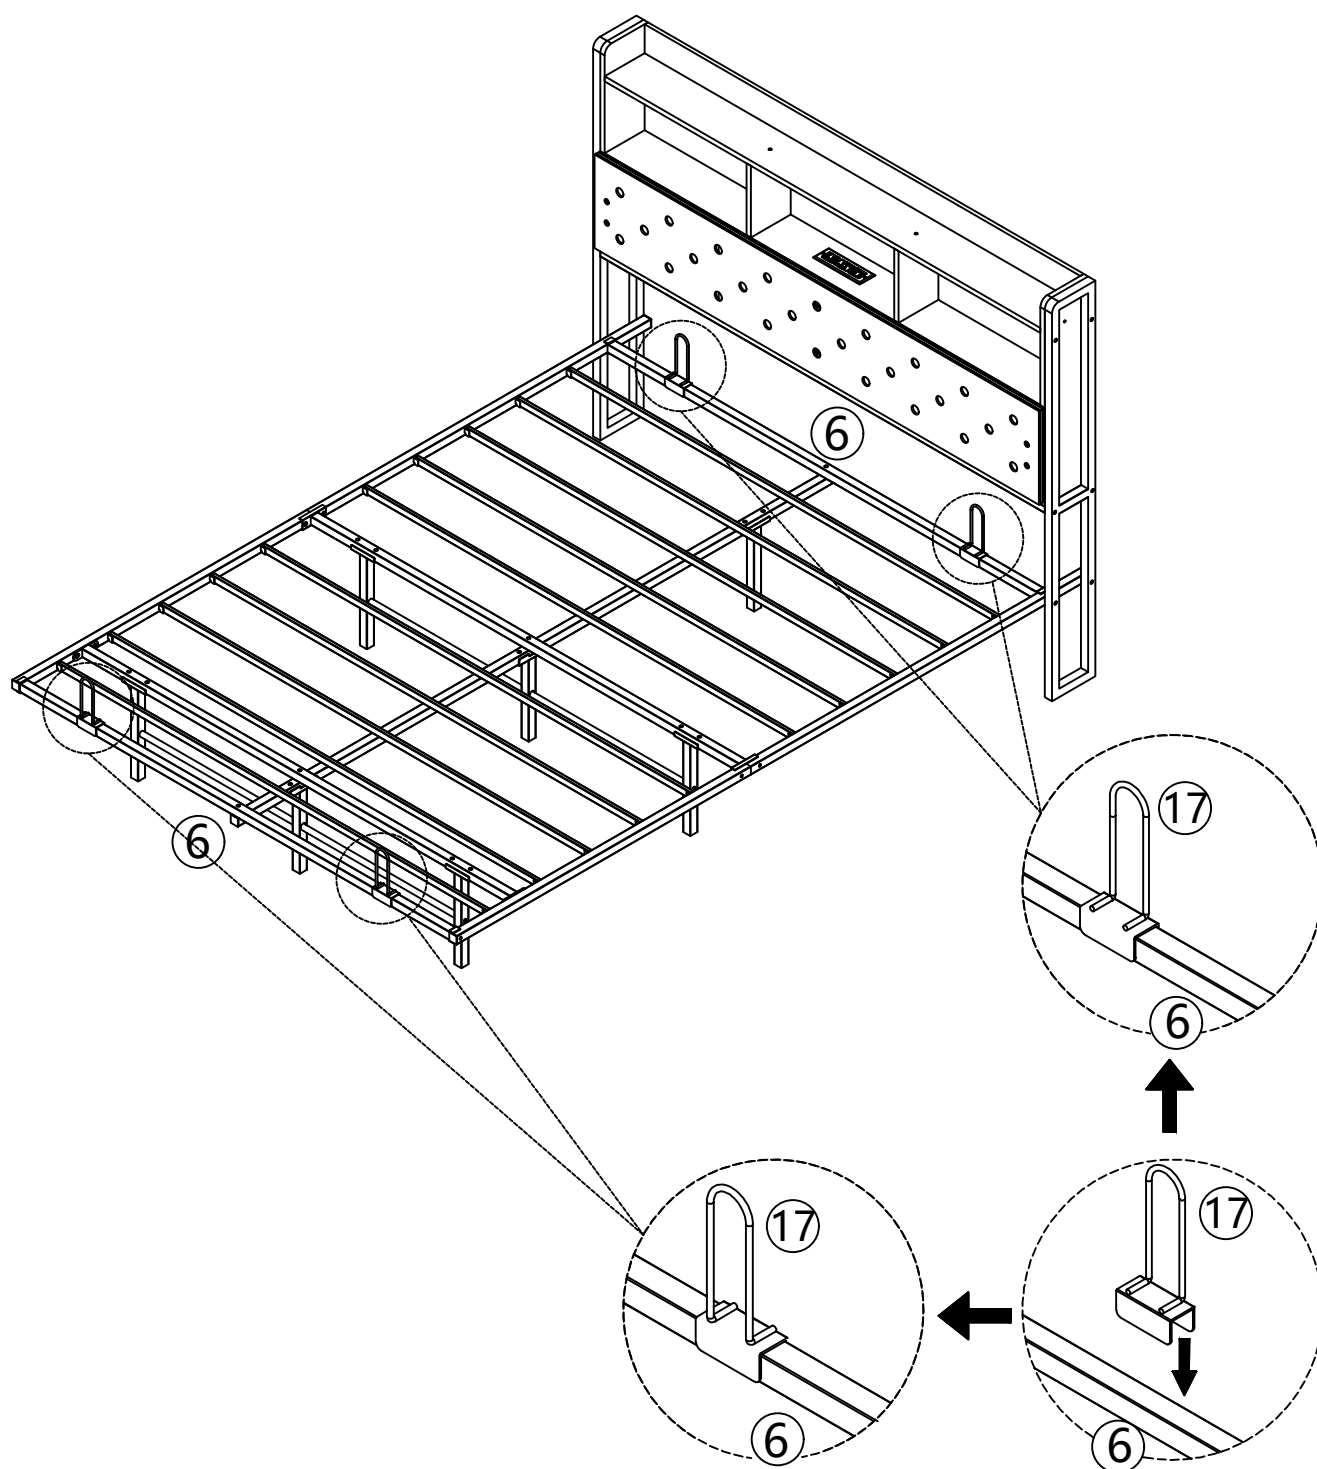

STEP 27

