
SKU:C-MTSJY24-G009-1 C-MTSJY24-G009-2 C-MTSJY24-G009-3 C-MTSJY24-G009-4 C-MTSJY24-G009-5

# INSTRUCTIONS

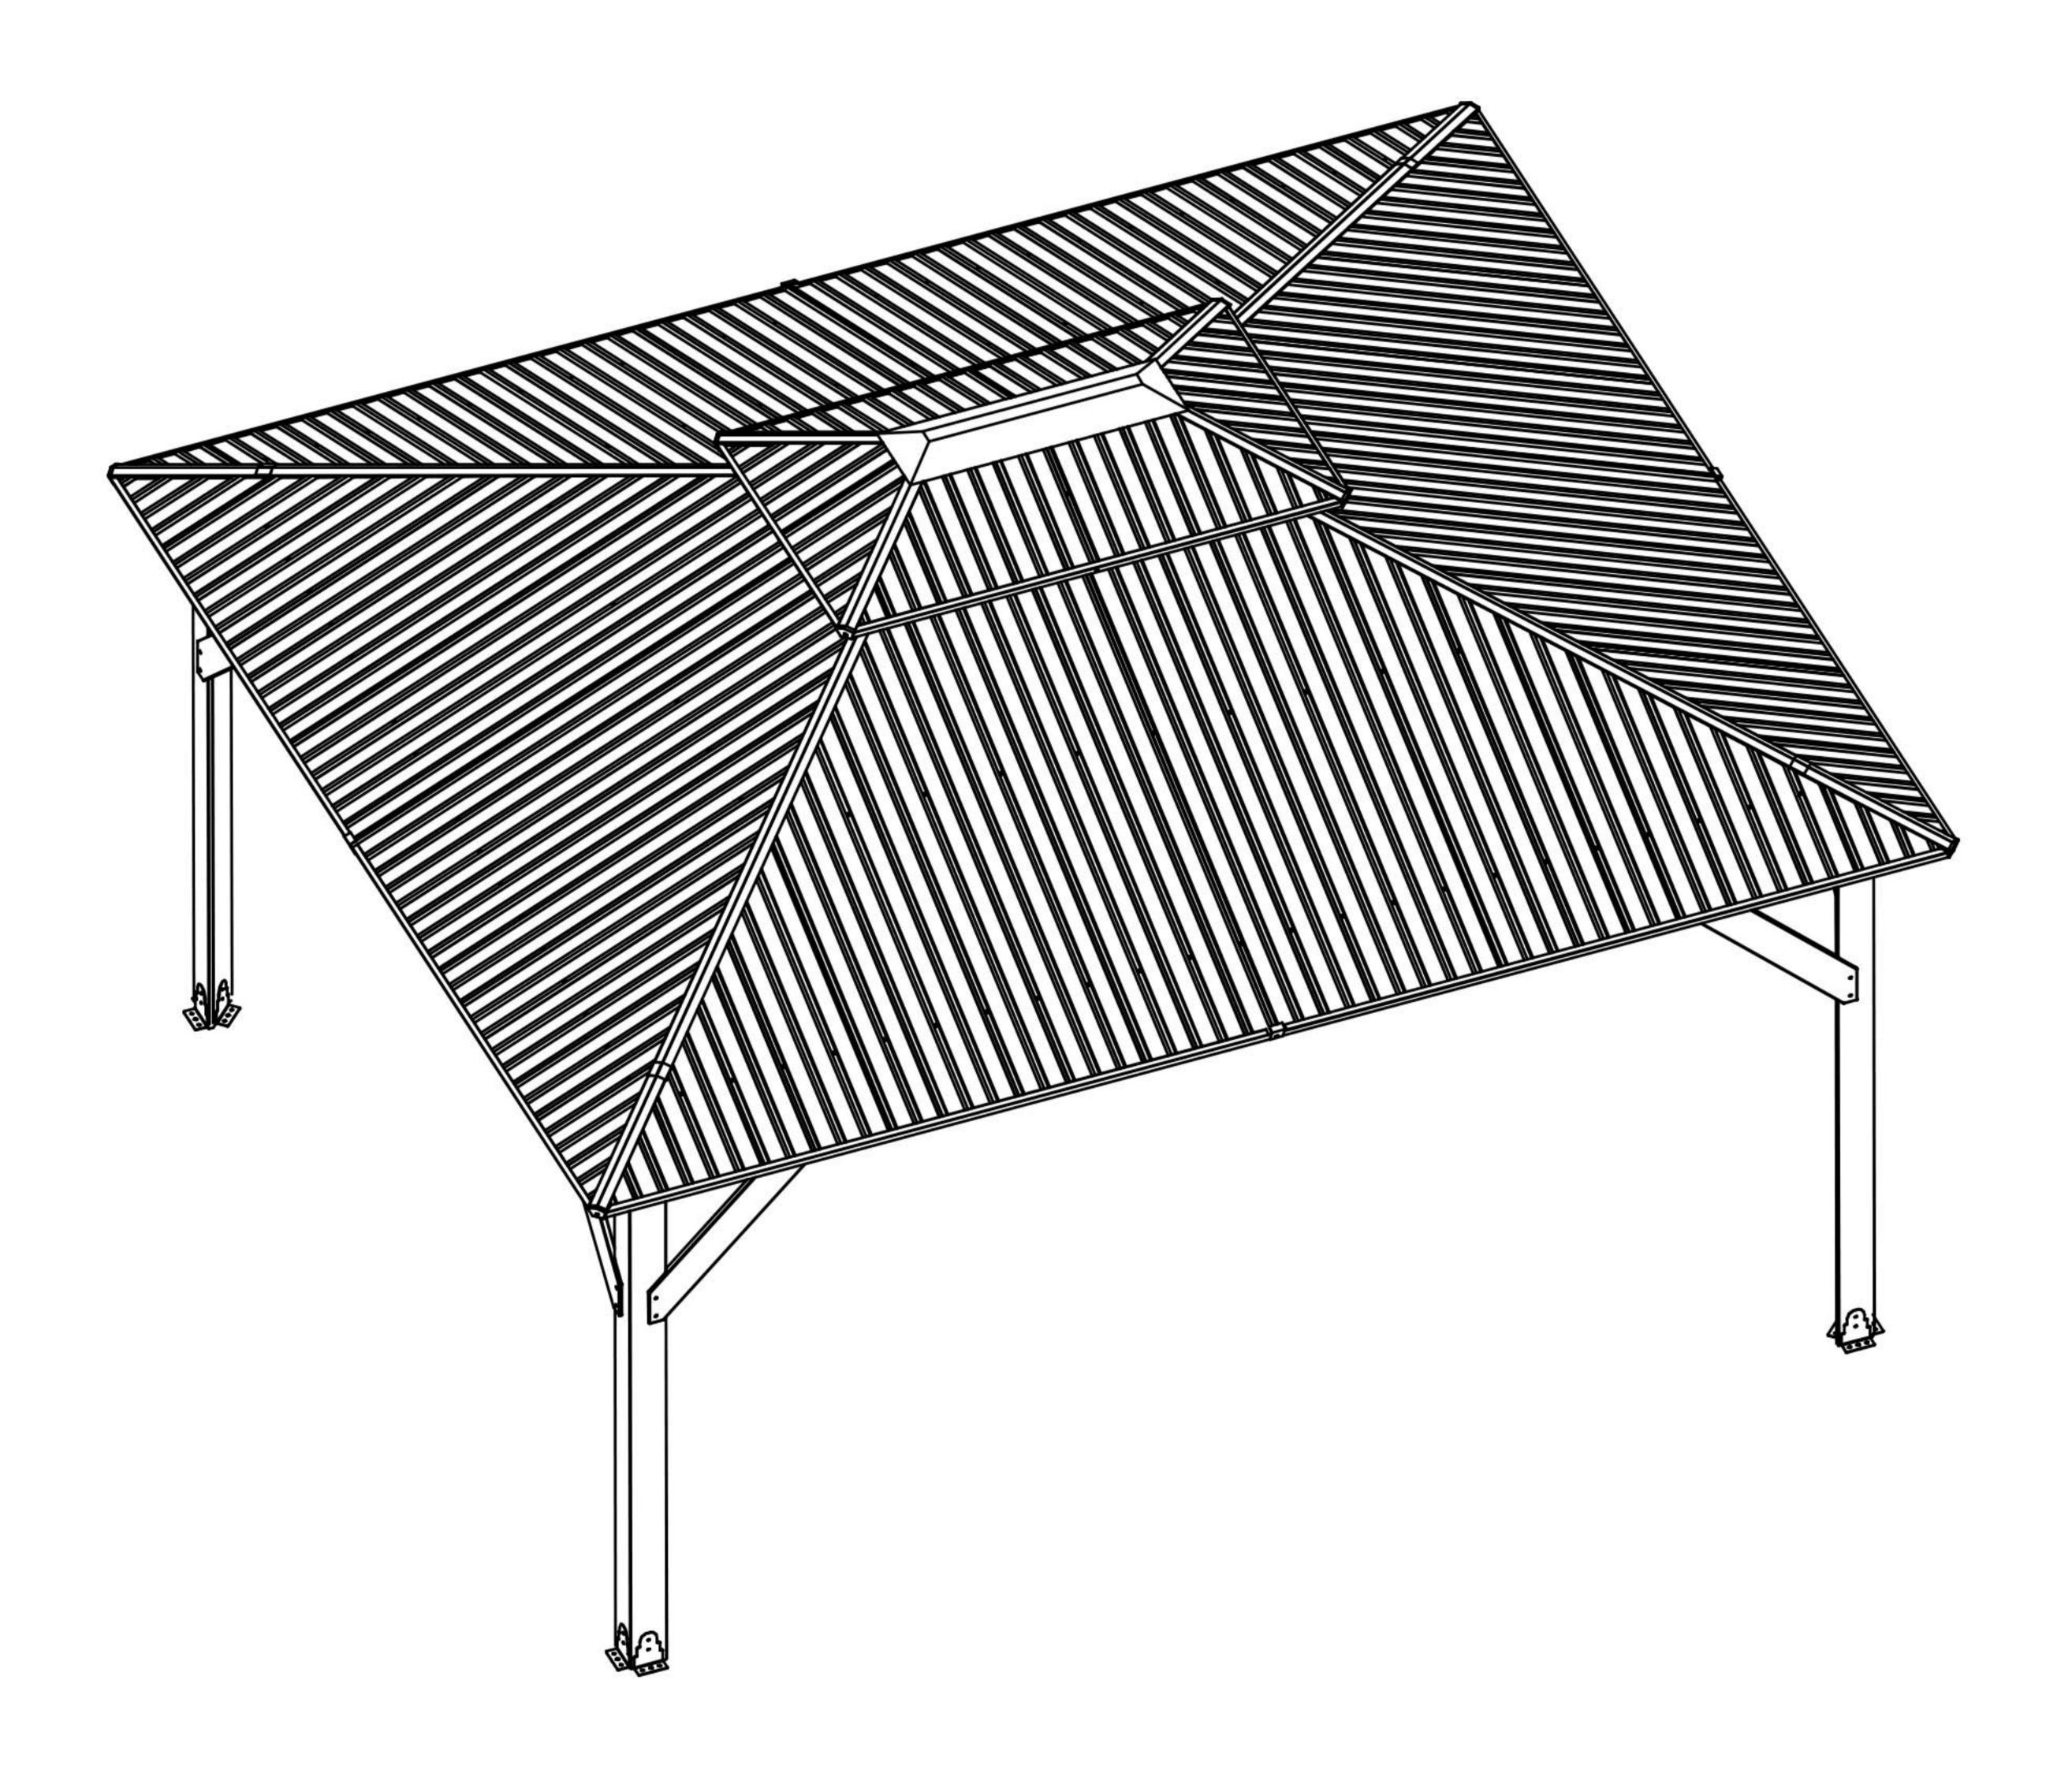



Please check the number of parts in the following accessory catalogue when unpacking. We have sent you more small parts for spare. If there is any missing or any questions about the installation. Please feel free to contact us. We will reply within 24 hours.



#### TOOLS RECOMMENDED

\*NOTE: The recommanded tools are not included in boxes and need to be prepared by yourself.



DRILL



RUBBER MALLET



STEPLADDER (6.5Ft Or More)



SAFETY HAT



GLOVES



SAFETY GOGGLES

### ATTENTIONS



Two or more people are required for assembly



To better align the screws for practical situations, do not fully tighten screws initially



Please reinforced the Gazebo and do not use in heavy winds or inclement weather



Make sure all screws are tightented before use and check all screws, buckles and straps every 90 days



Since it is easy to lose many small accessories during the installation, please collect all the the screw accessories before the assembly is completed



Please clear the snow off the roof in time for the heavy snowfall and do not use it

# BOX 1 SKU:C-MTSJY24-G009-1

ltem no.	Reference Image	Qty.
A		4

# BOX 2 SKU:C-MTSJY24-G009-2

ltem no.	Reference Image	Qty.
B		2
BI	· ::	2
		2
		2
		8
	(a) (b) (b) (c) (d) (d) (d) (d) (d) (d) (d) (d) (d) (d	20

ltem no.	Reference Image	Qty.
<b>X2</b>	<b>M8*45mm</b>	32

## BOX 3 SKU:C-MTSJY24-G009-3

ltem no.	Reference Image	Qty.
		4
		4
G1		2
G2	<u></u>	2
G3		2
G4	<u>5</u>	2

## BOX 4 SKU:C-MTSJY24-G009-4

ltem no.	Reference Image	Qty.	ltem no.	Reference Image	Qty.
		4	(H3)	° ° °	4
G5		2			4
G6		2			4
		2			
G10		2			
		4			12
	° ° °	4			4
		4	(M2)		8


ltem no.	Reference Image	Qty.
M3		8
M4	0/0/0	8
M5		96
M6		4
		2
R		8
		4
X4	M6*38mm	4


-		
ltem no.	Reference Image	Qty.
X5	M4*25mm	24
X6	M6*15mm	109
<b>X</b> 7	M6*42mm	96
X8	M6*30mm	4
X9	M5*15mm	72
2		12


# BOX 5 SKU:C-MTSJY24-G009-5

ltem no.	Reference Image	Qty.	ltem no.	Reference Image	Qty.
		2			2
		2			2
		2	Y3		2
		2	<b>Y</b> 2		2
		2			2
		2	4		2
		2			2
		2	Y6		2
03		2			2

ltem no.	Reference Image	Qty.	ltem no.	Reference Image	Qty.
		2	(3)		2
4		2	V5		2

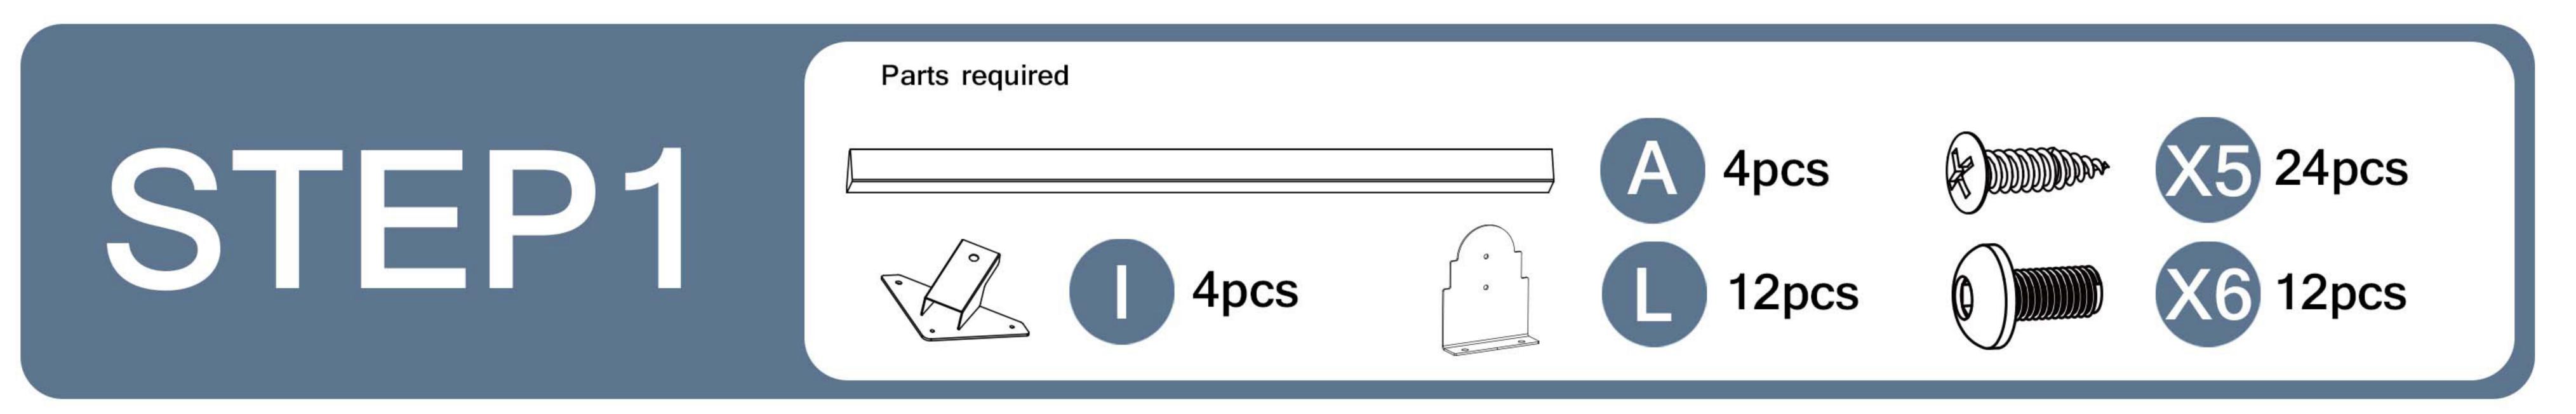


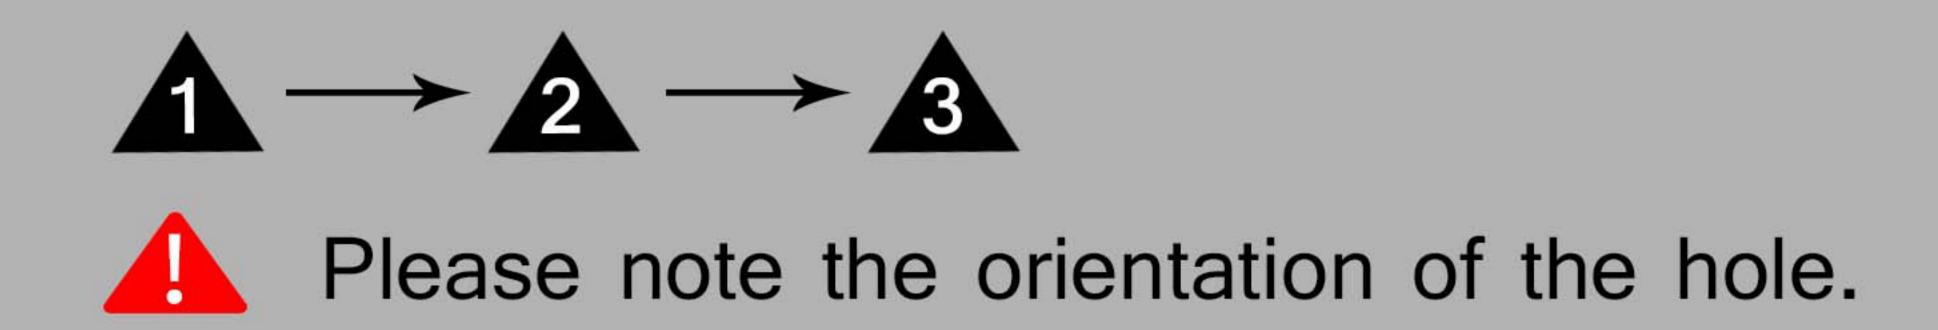

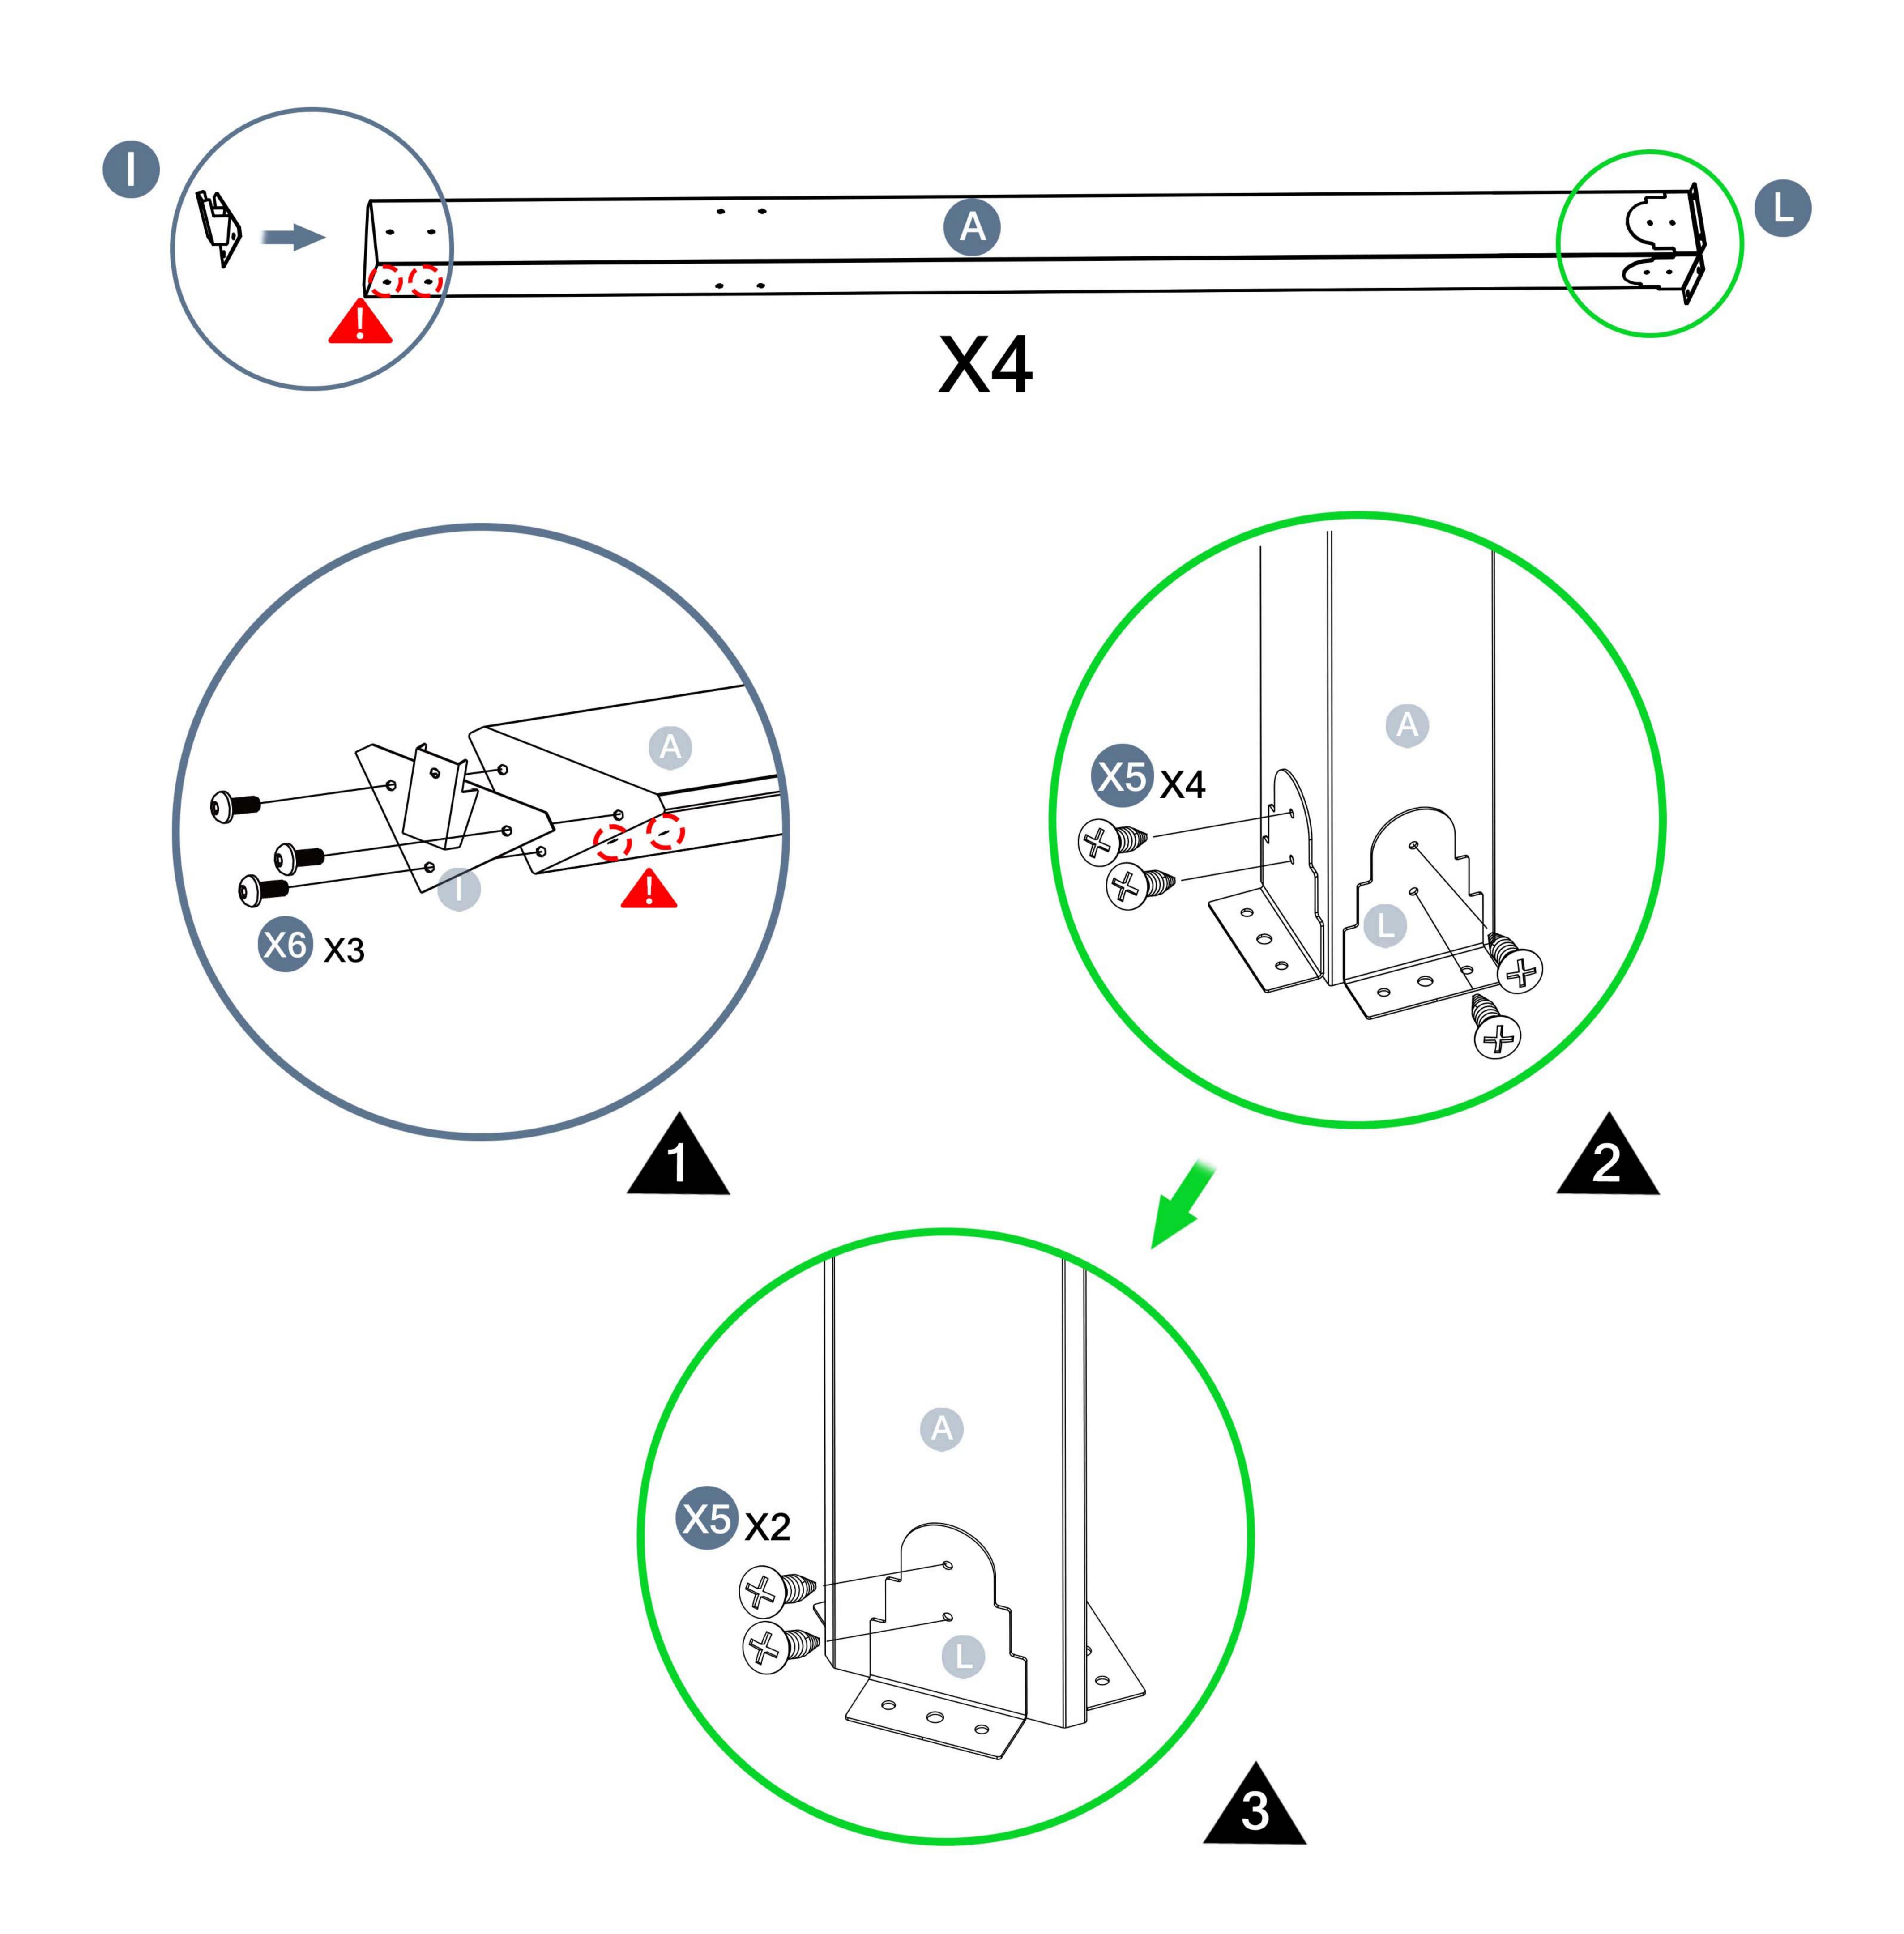

# STEP2 | Parts required | T 4pcs | X1 20pcs | 2pcs | C 2pcs | 2pcs | C 2pcs


Pay attention to the orientation of the red circle, please install the on the back. (shown in the figure), And turn the outward when the combination is installed.

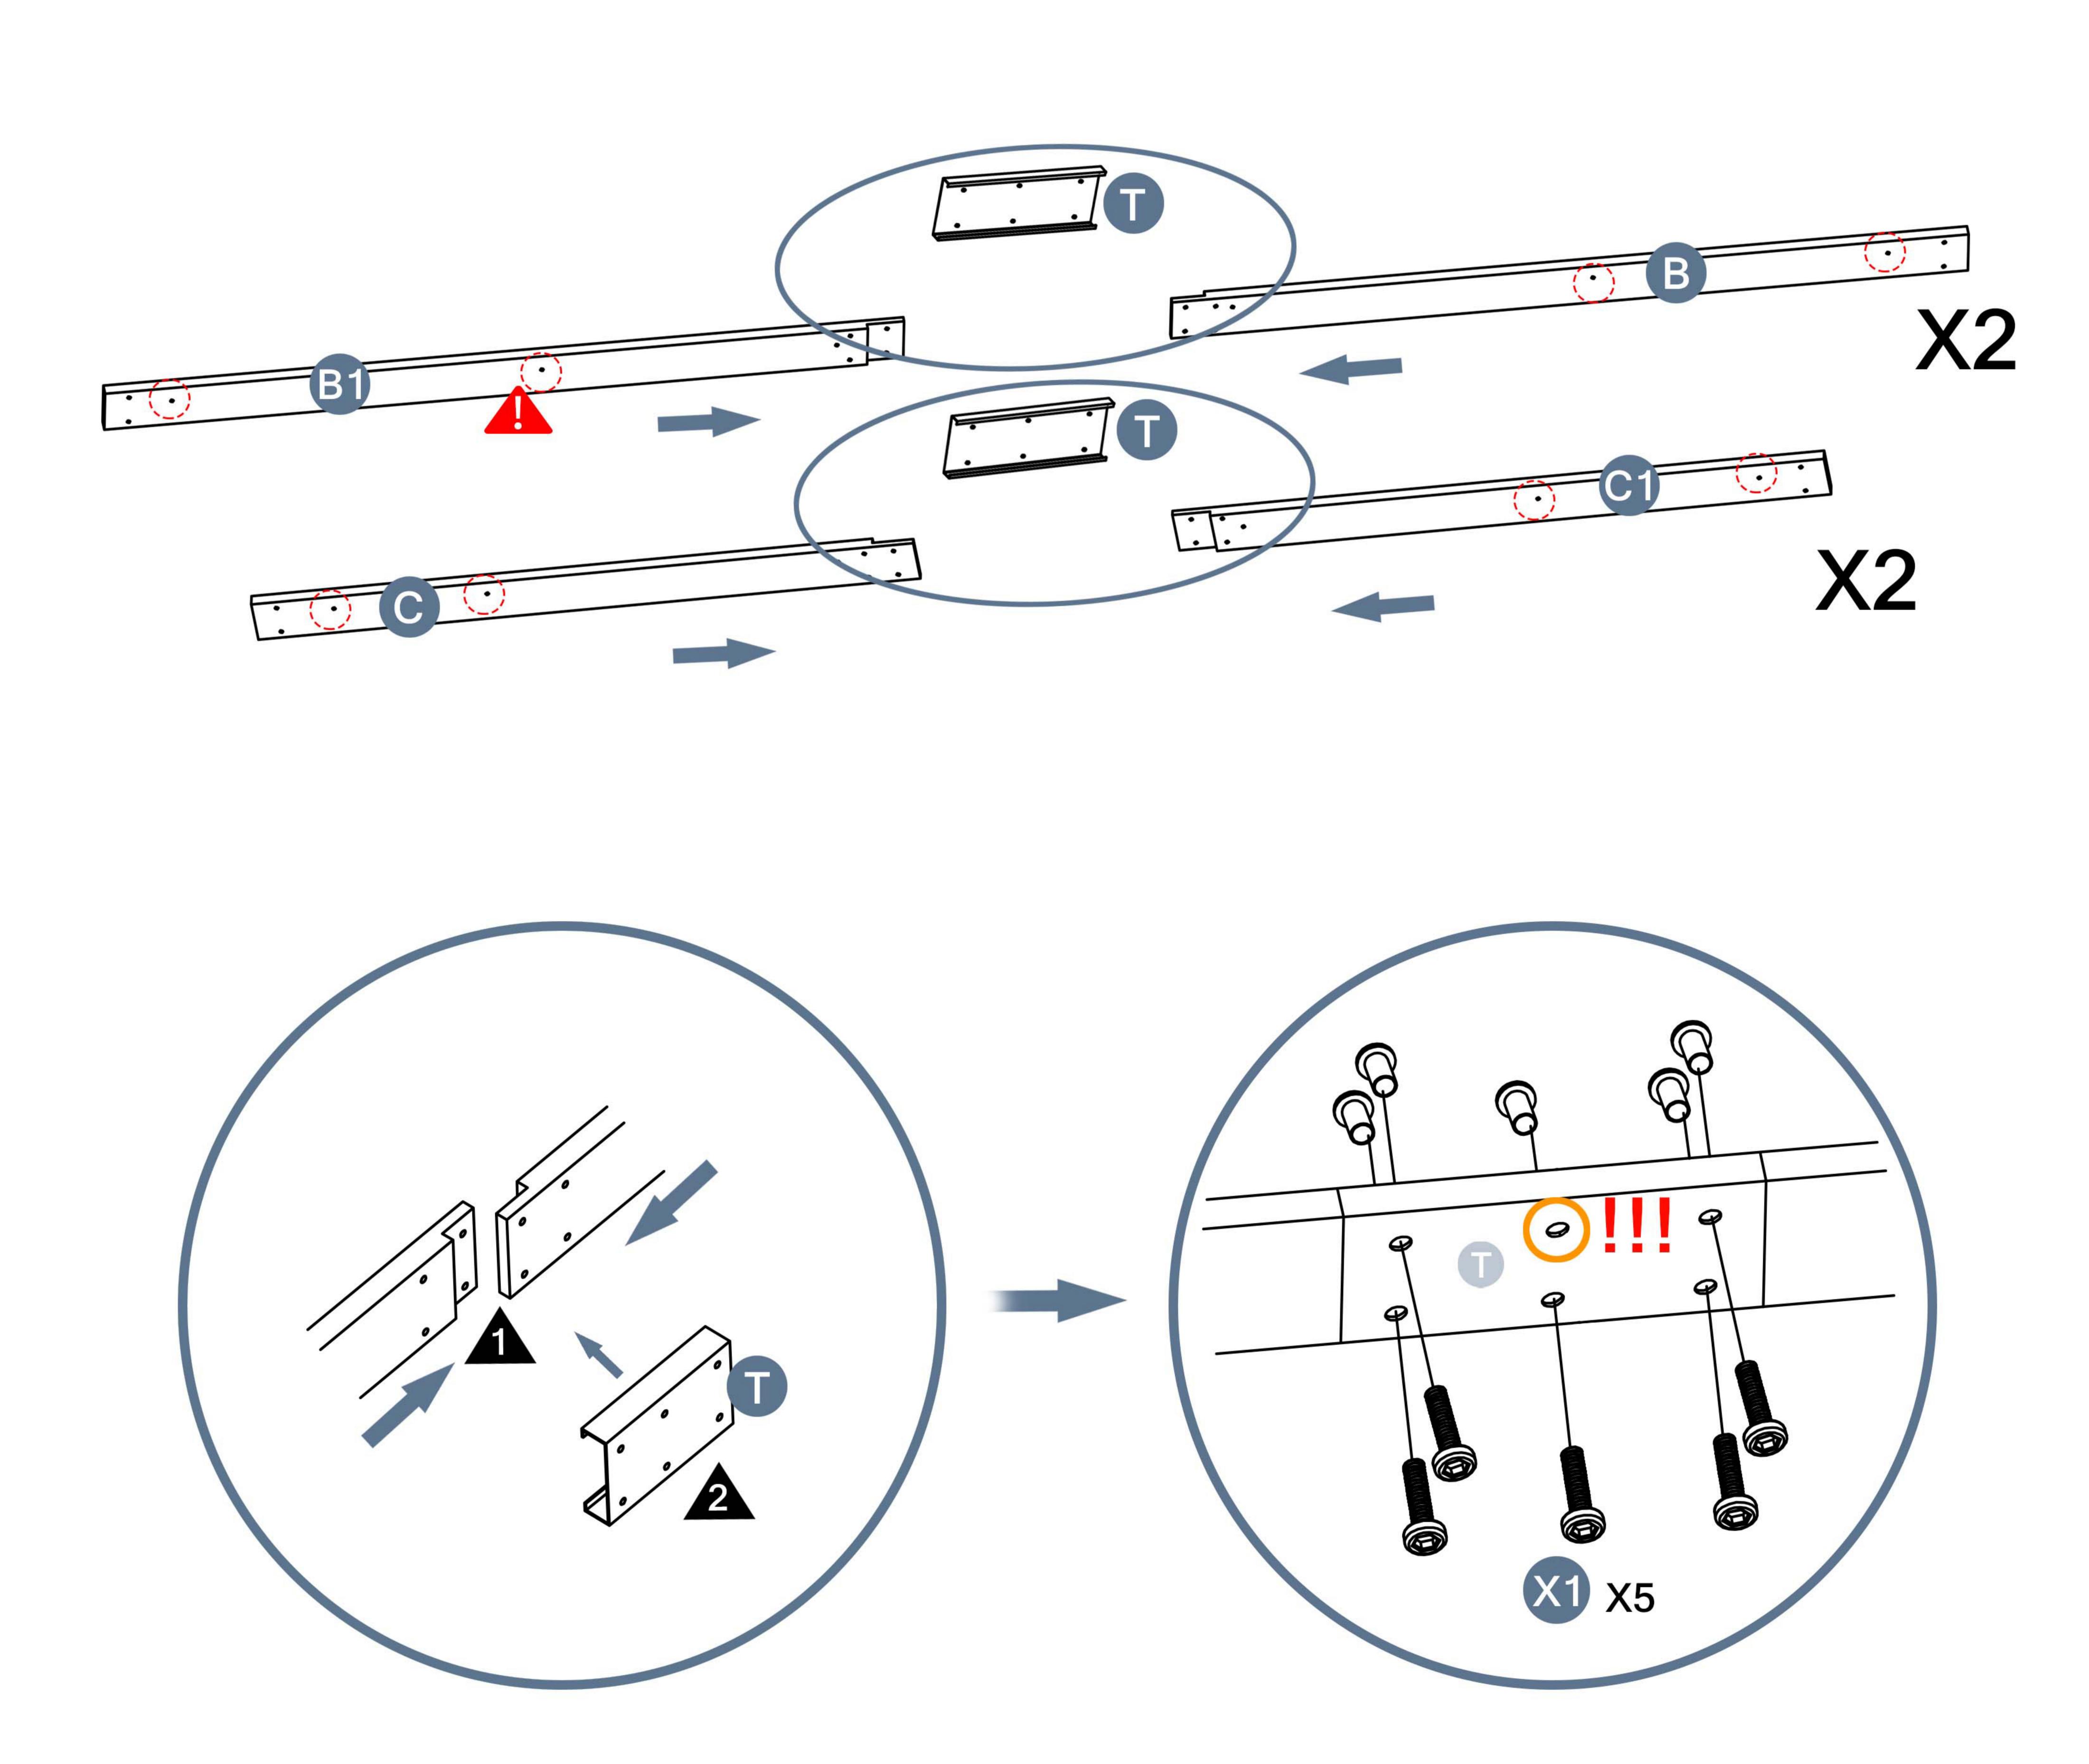


Be careful not to screw the screws at the yellow circle. Step 6 is screwing.

Parts required


# STEP3

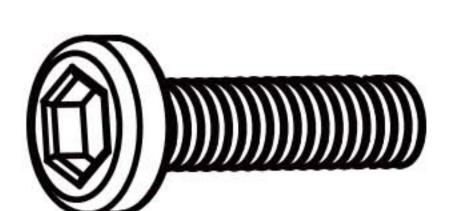



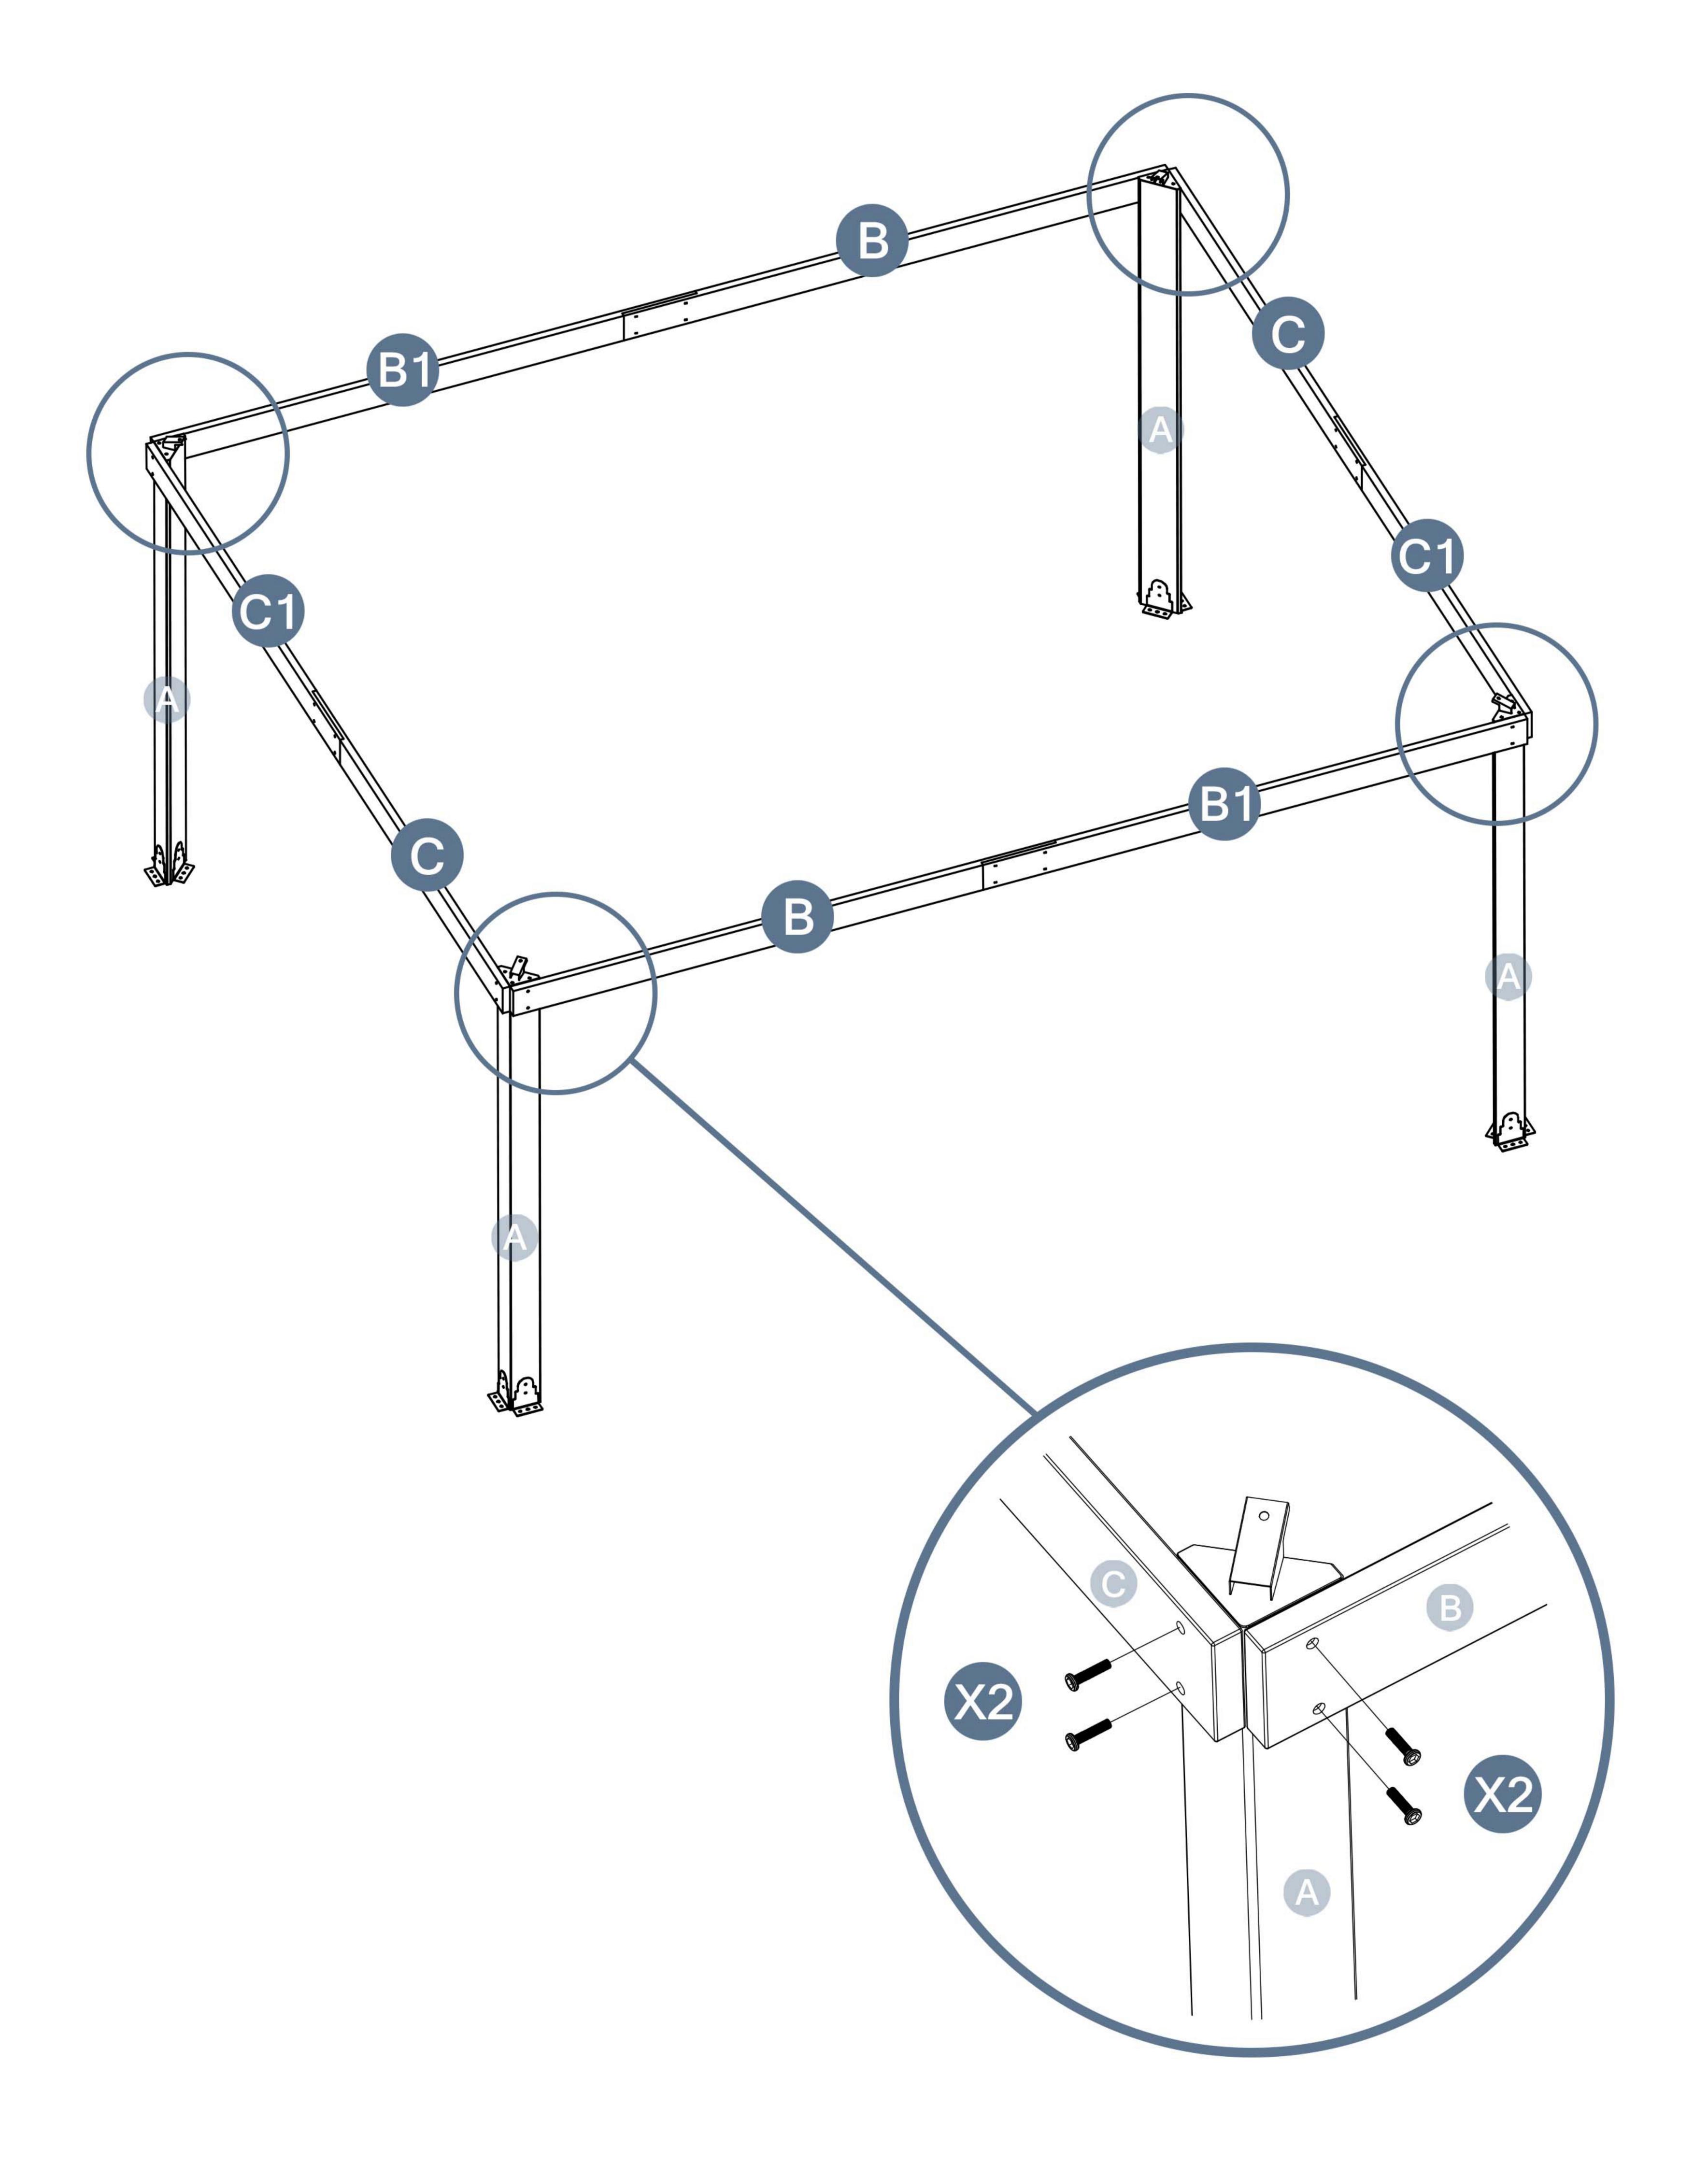

Parts required 8pcs

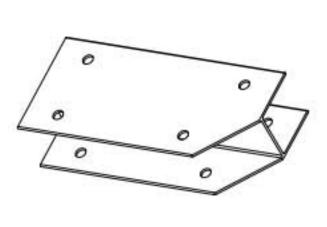













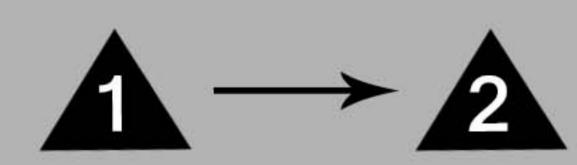





Please note that different screws are being used.

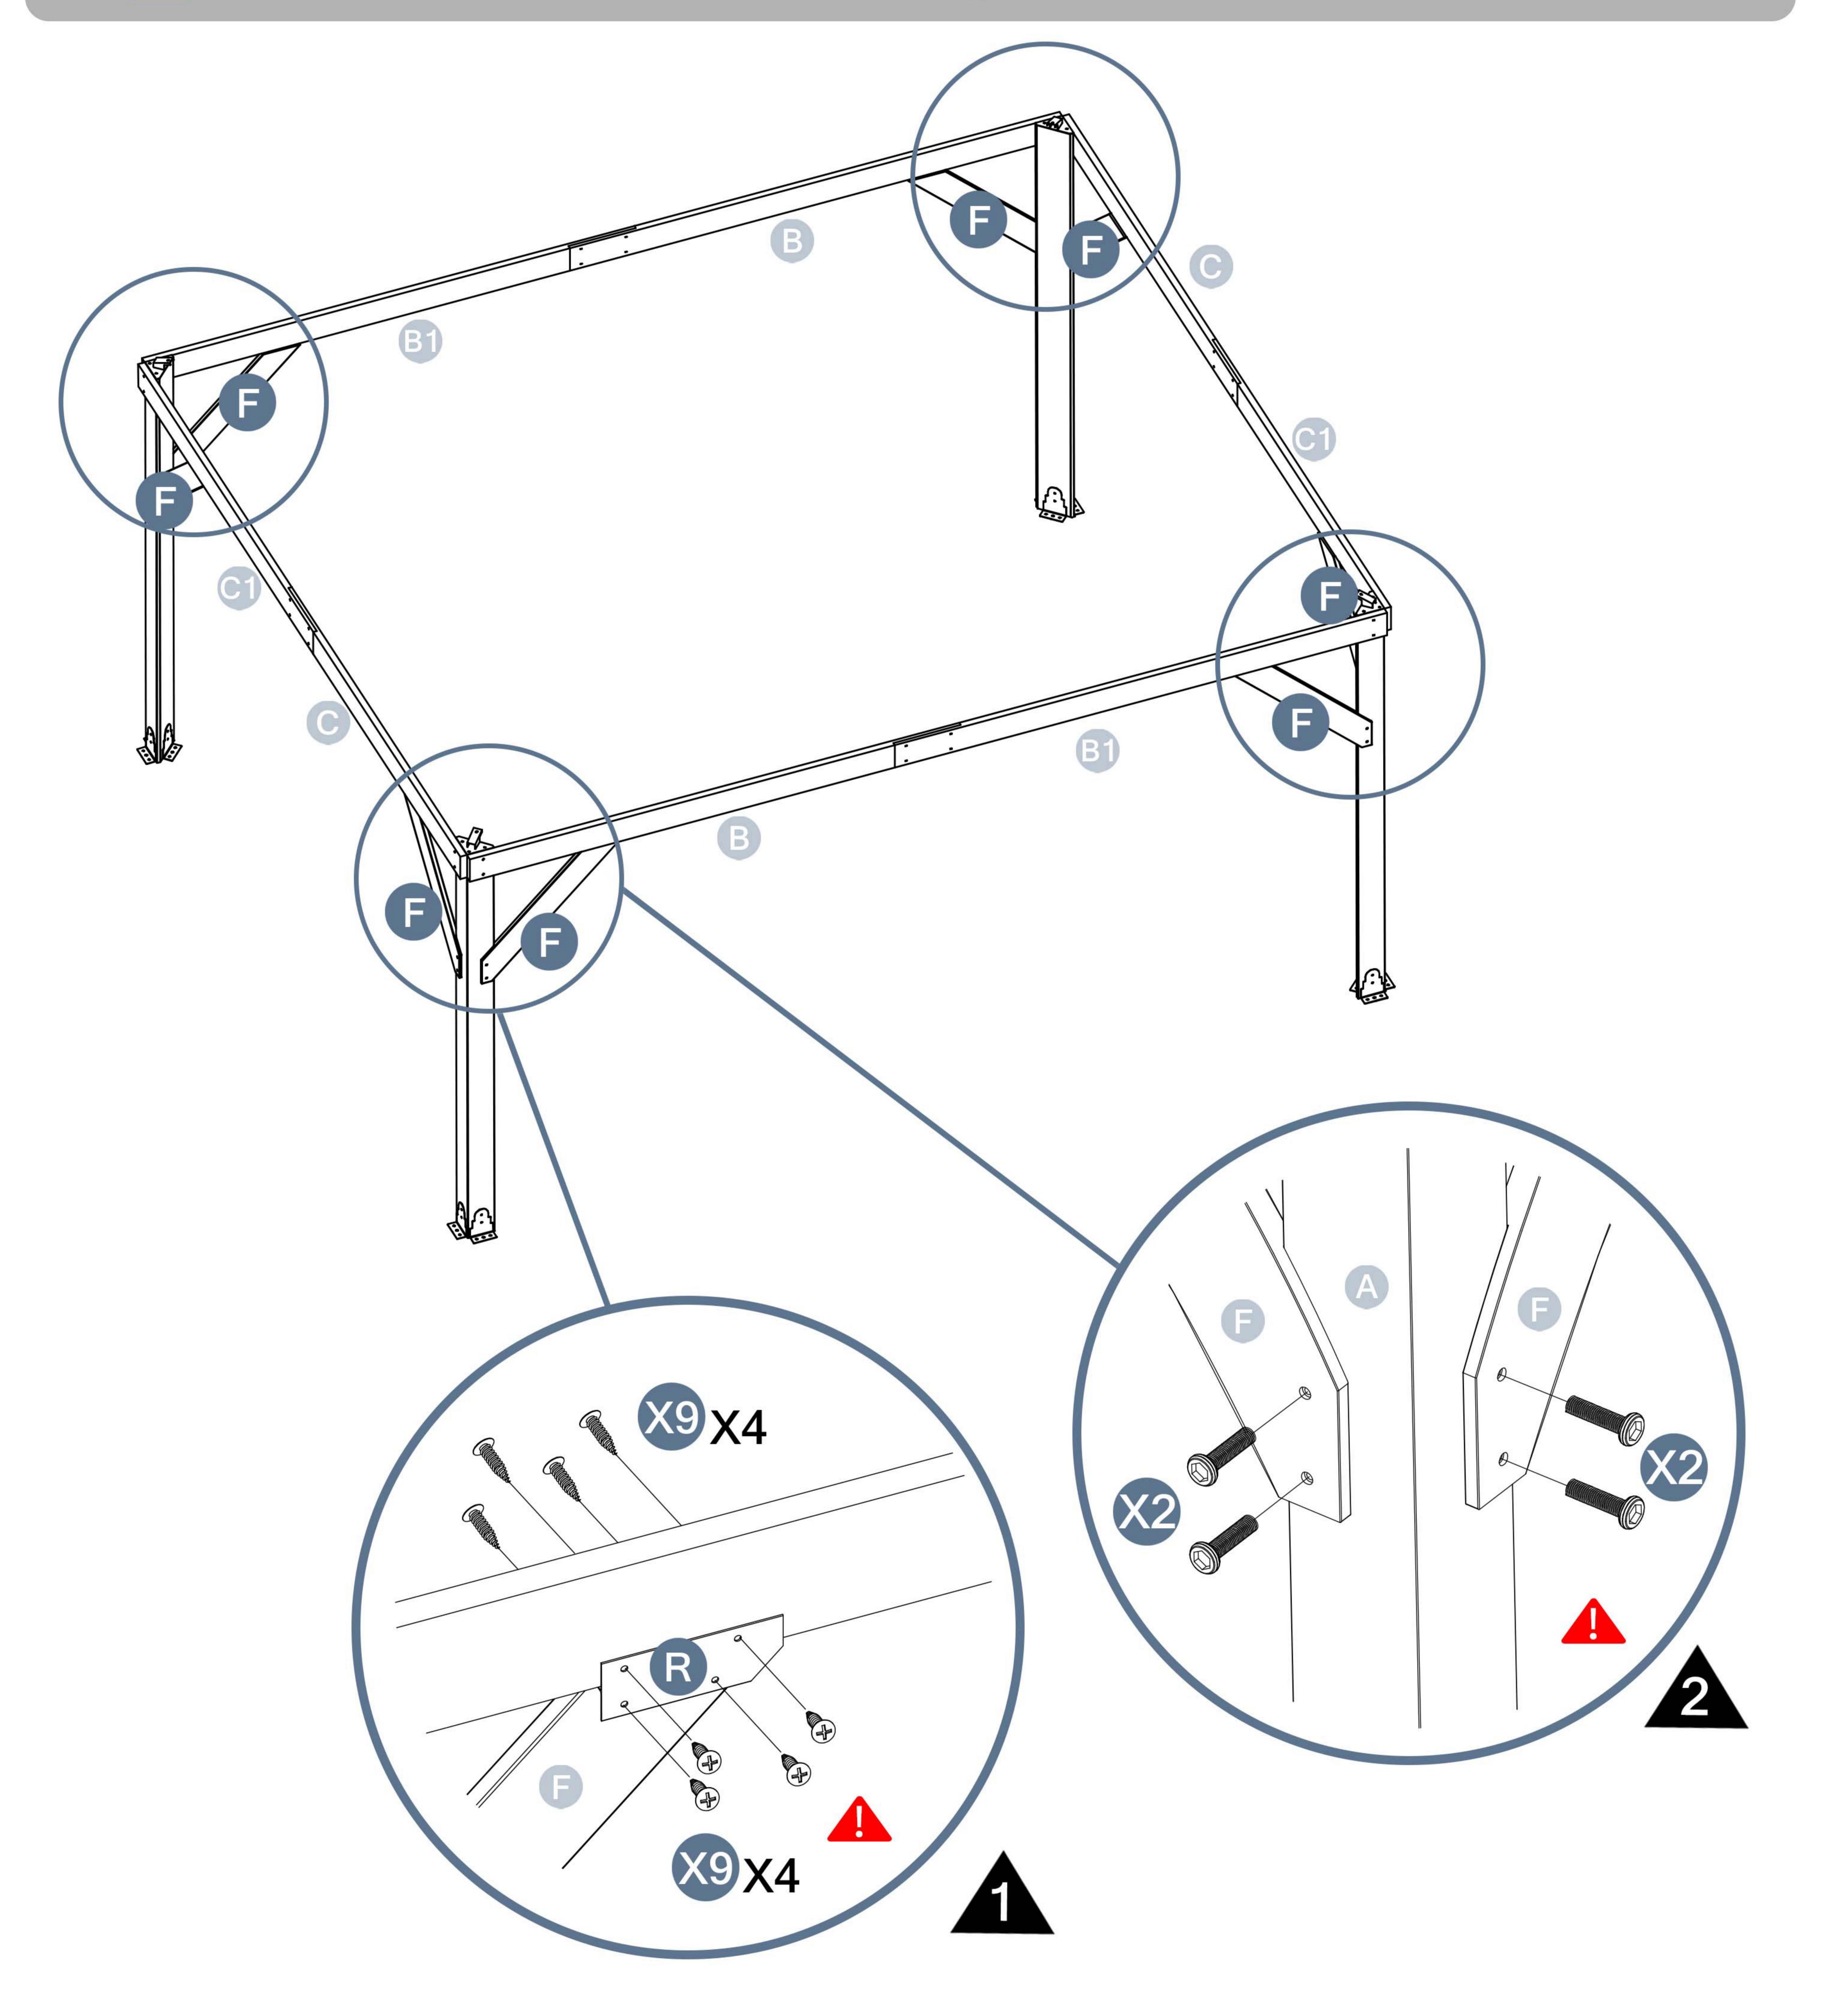

Parts required

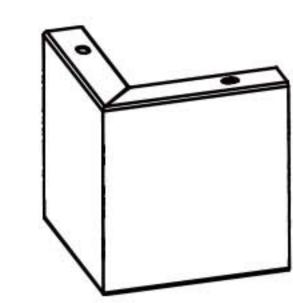



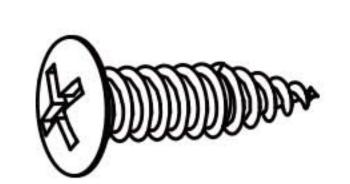





8pcs





Please Note that the X9 circled in red is a self-tapping nail without hole, it can be directly tightened.

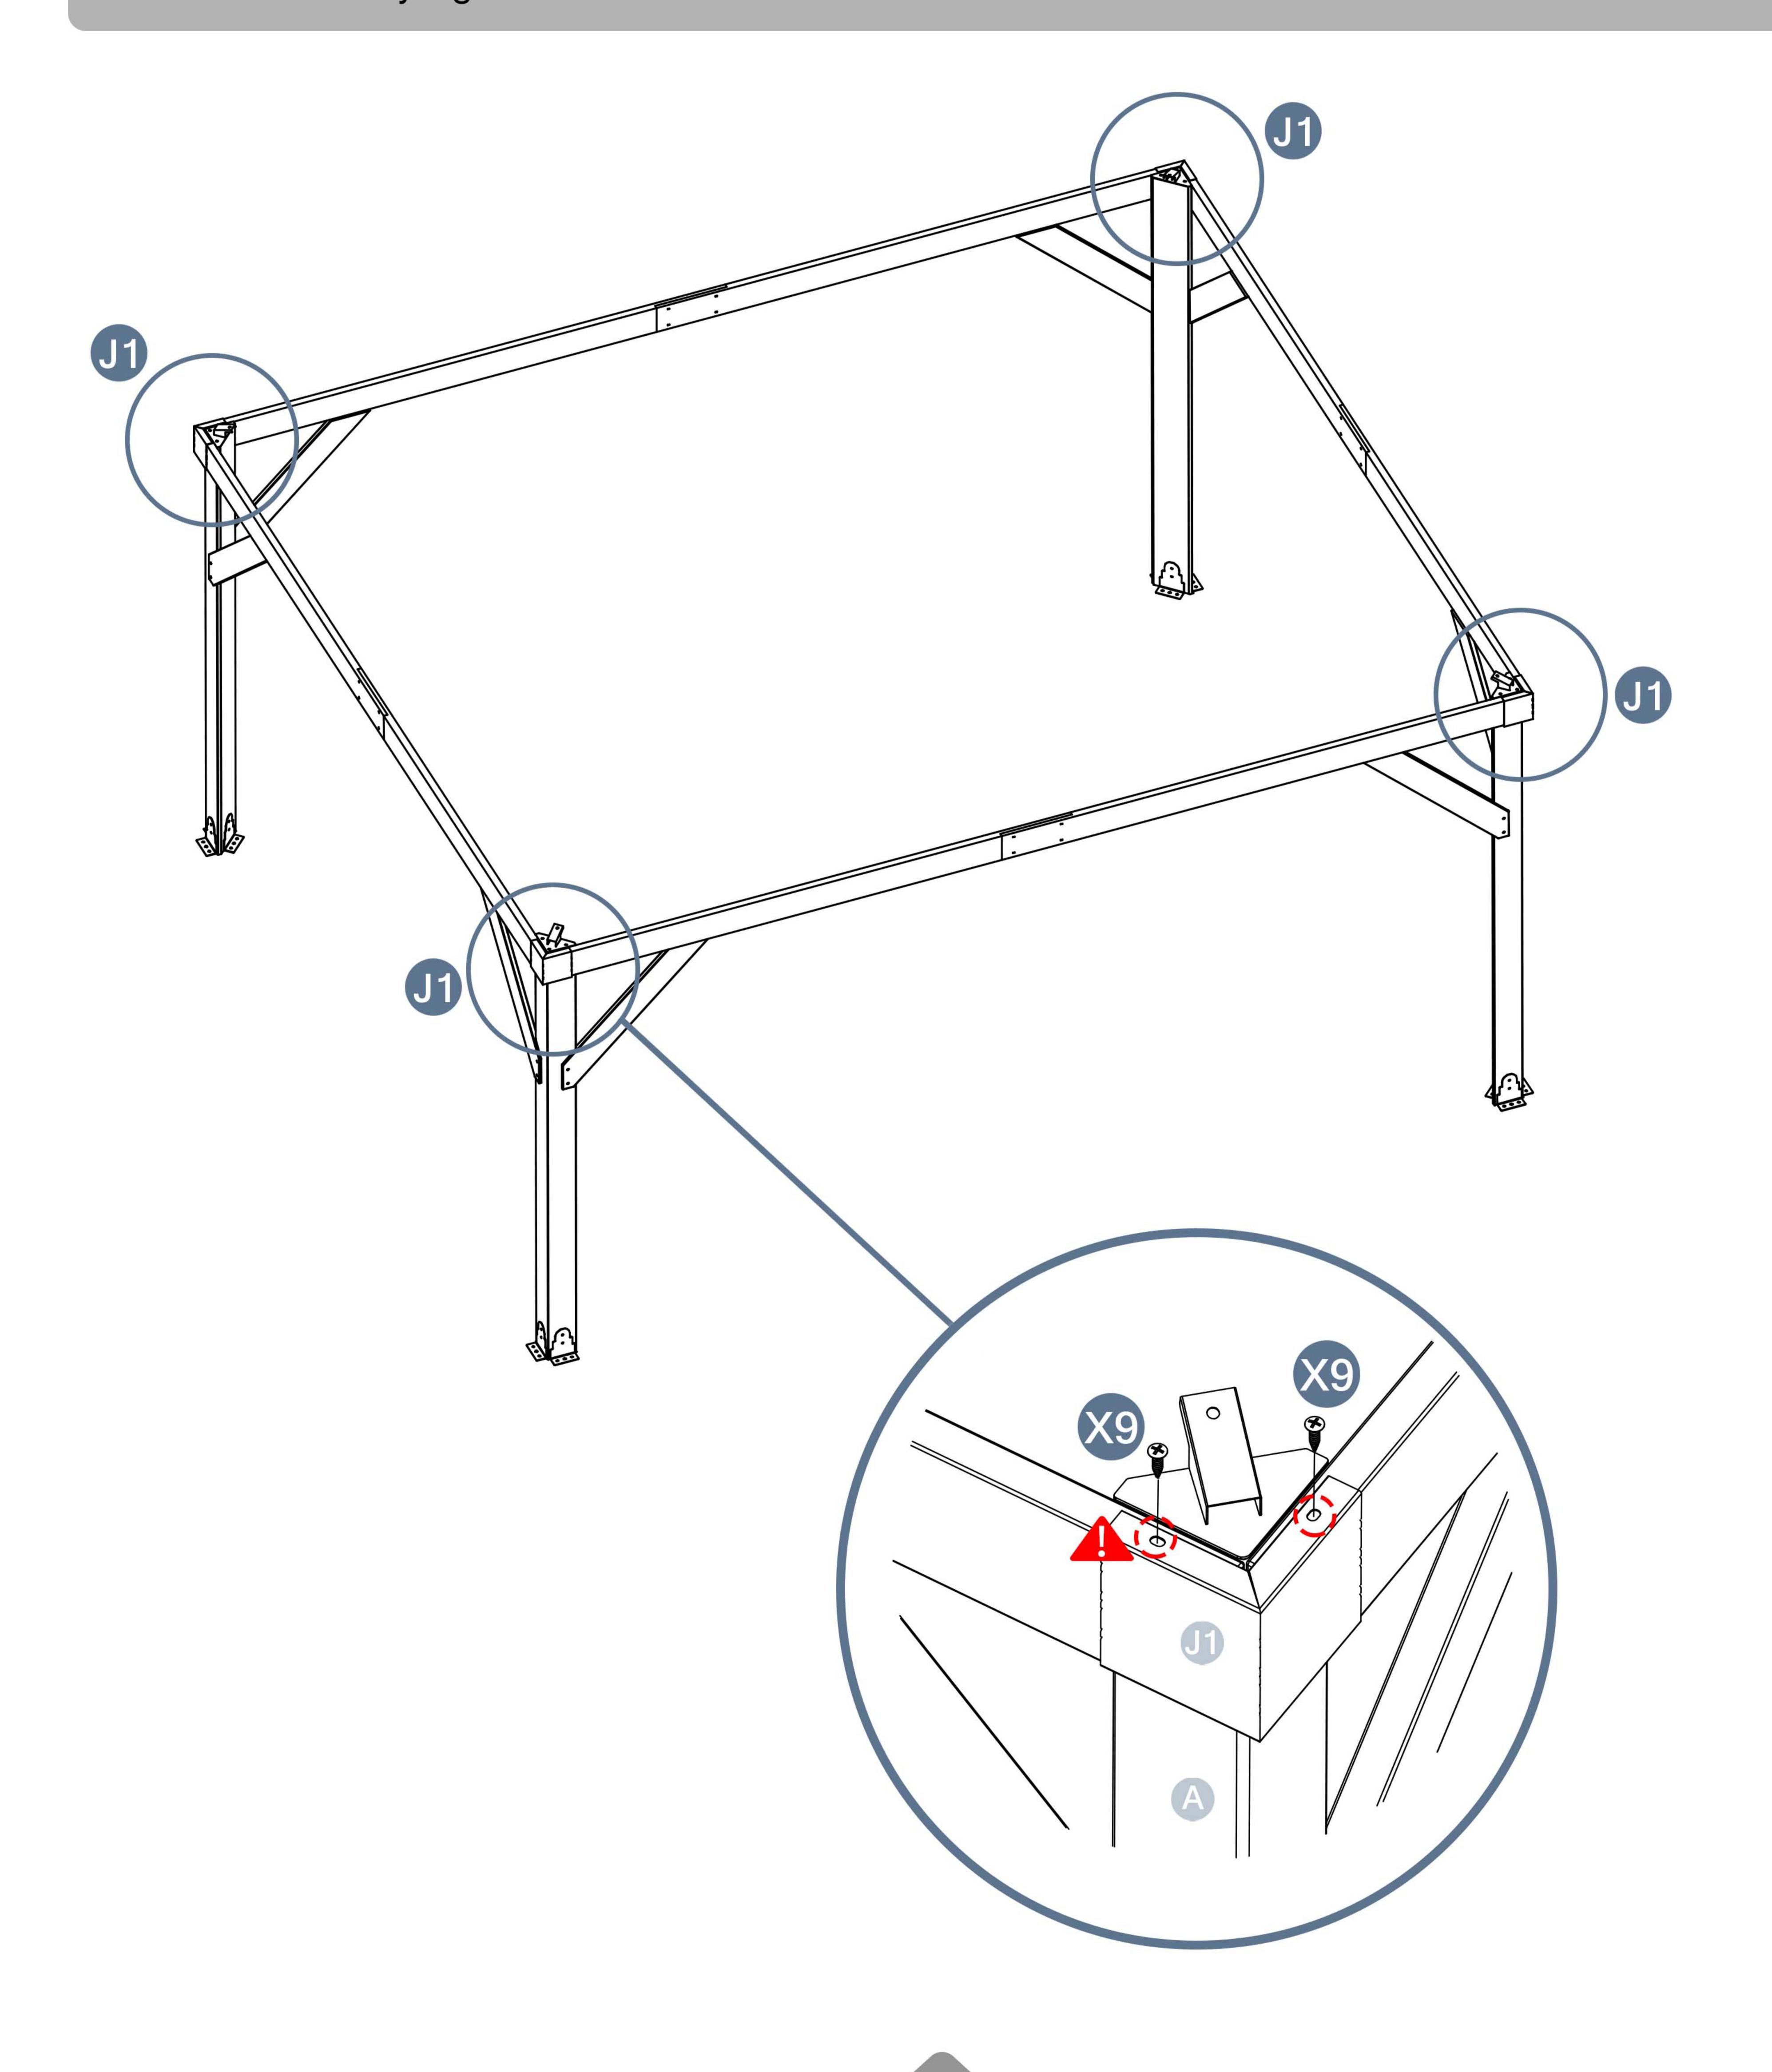

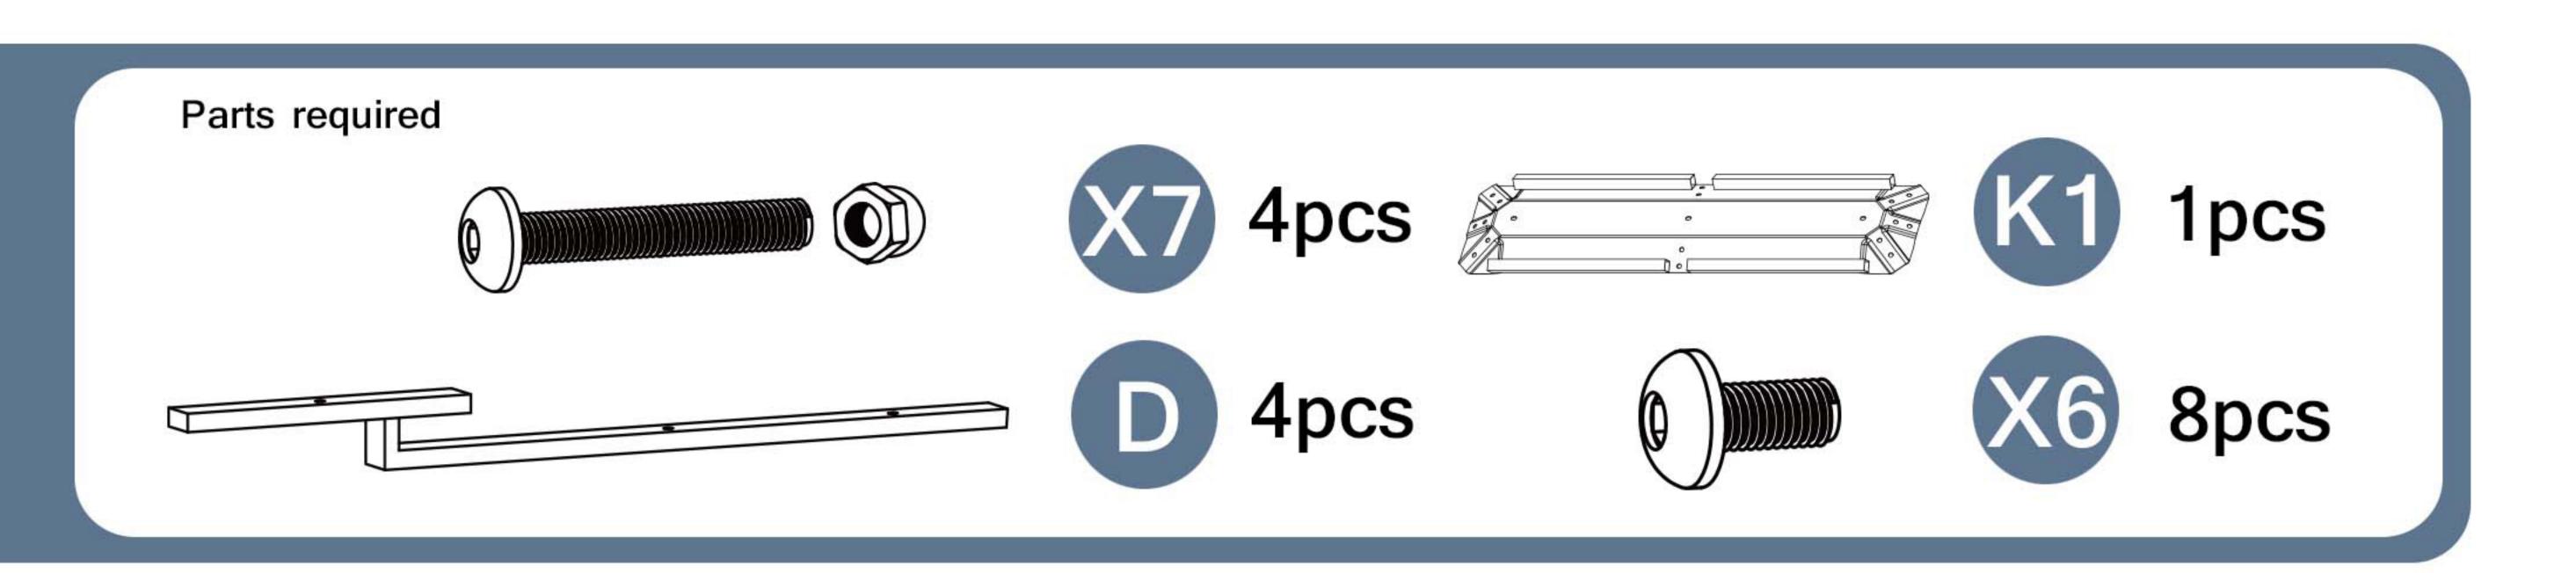


#### **1** -> **2**

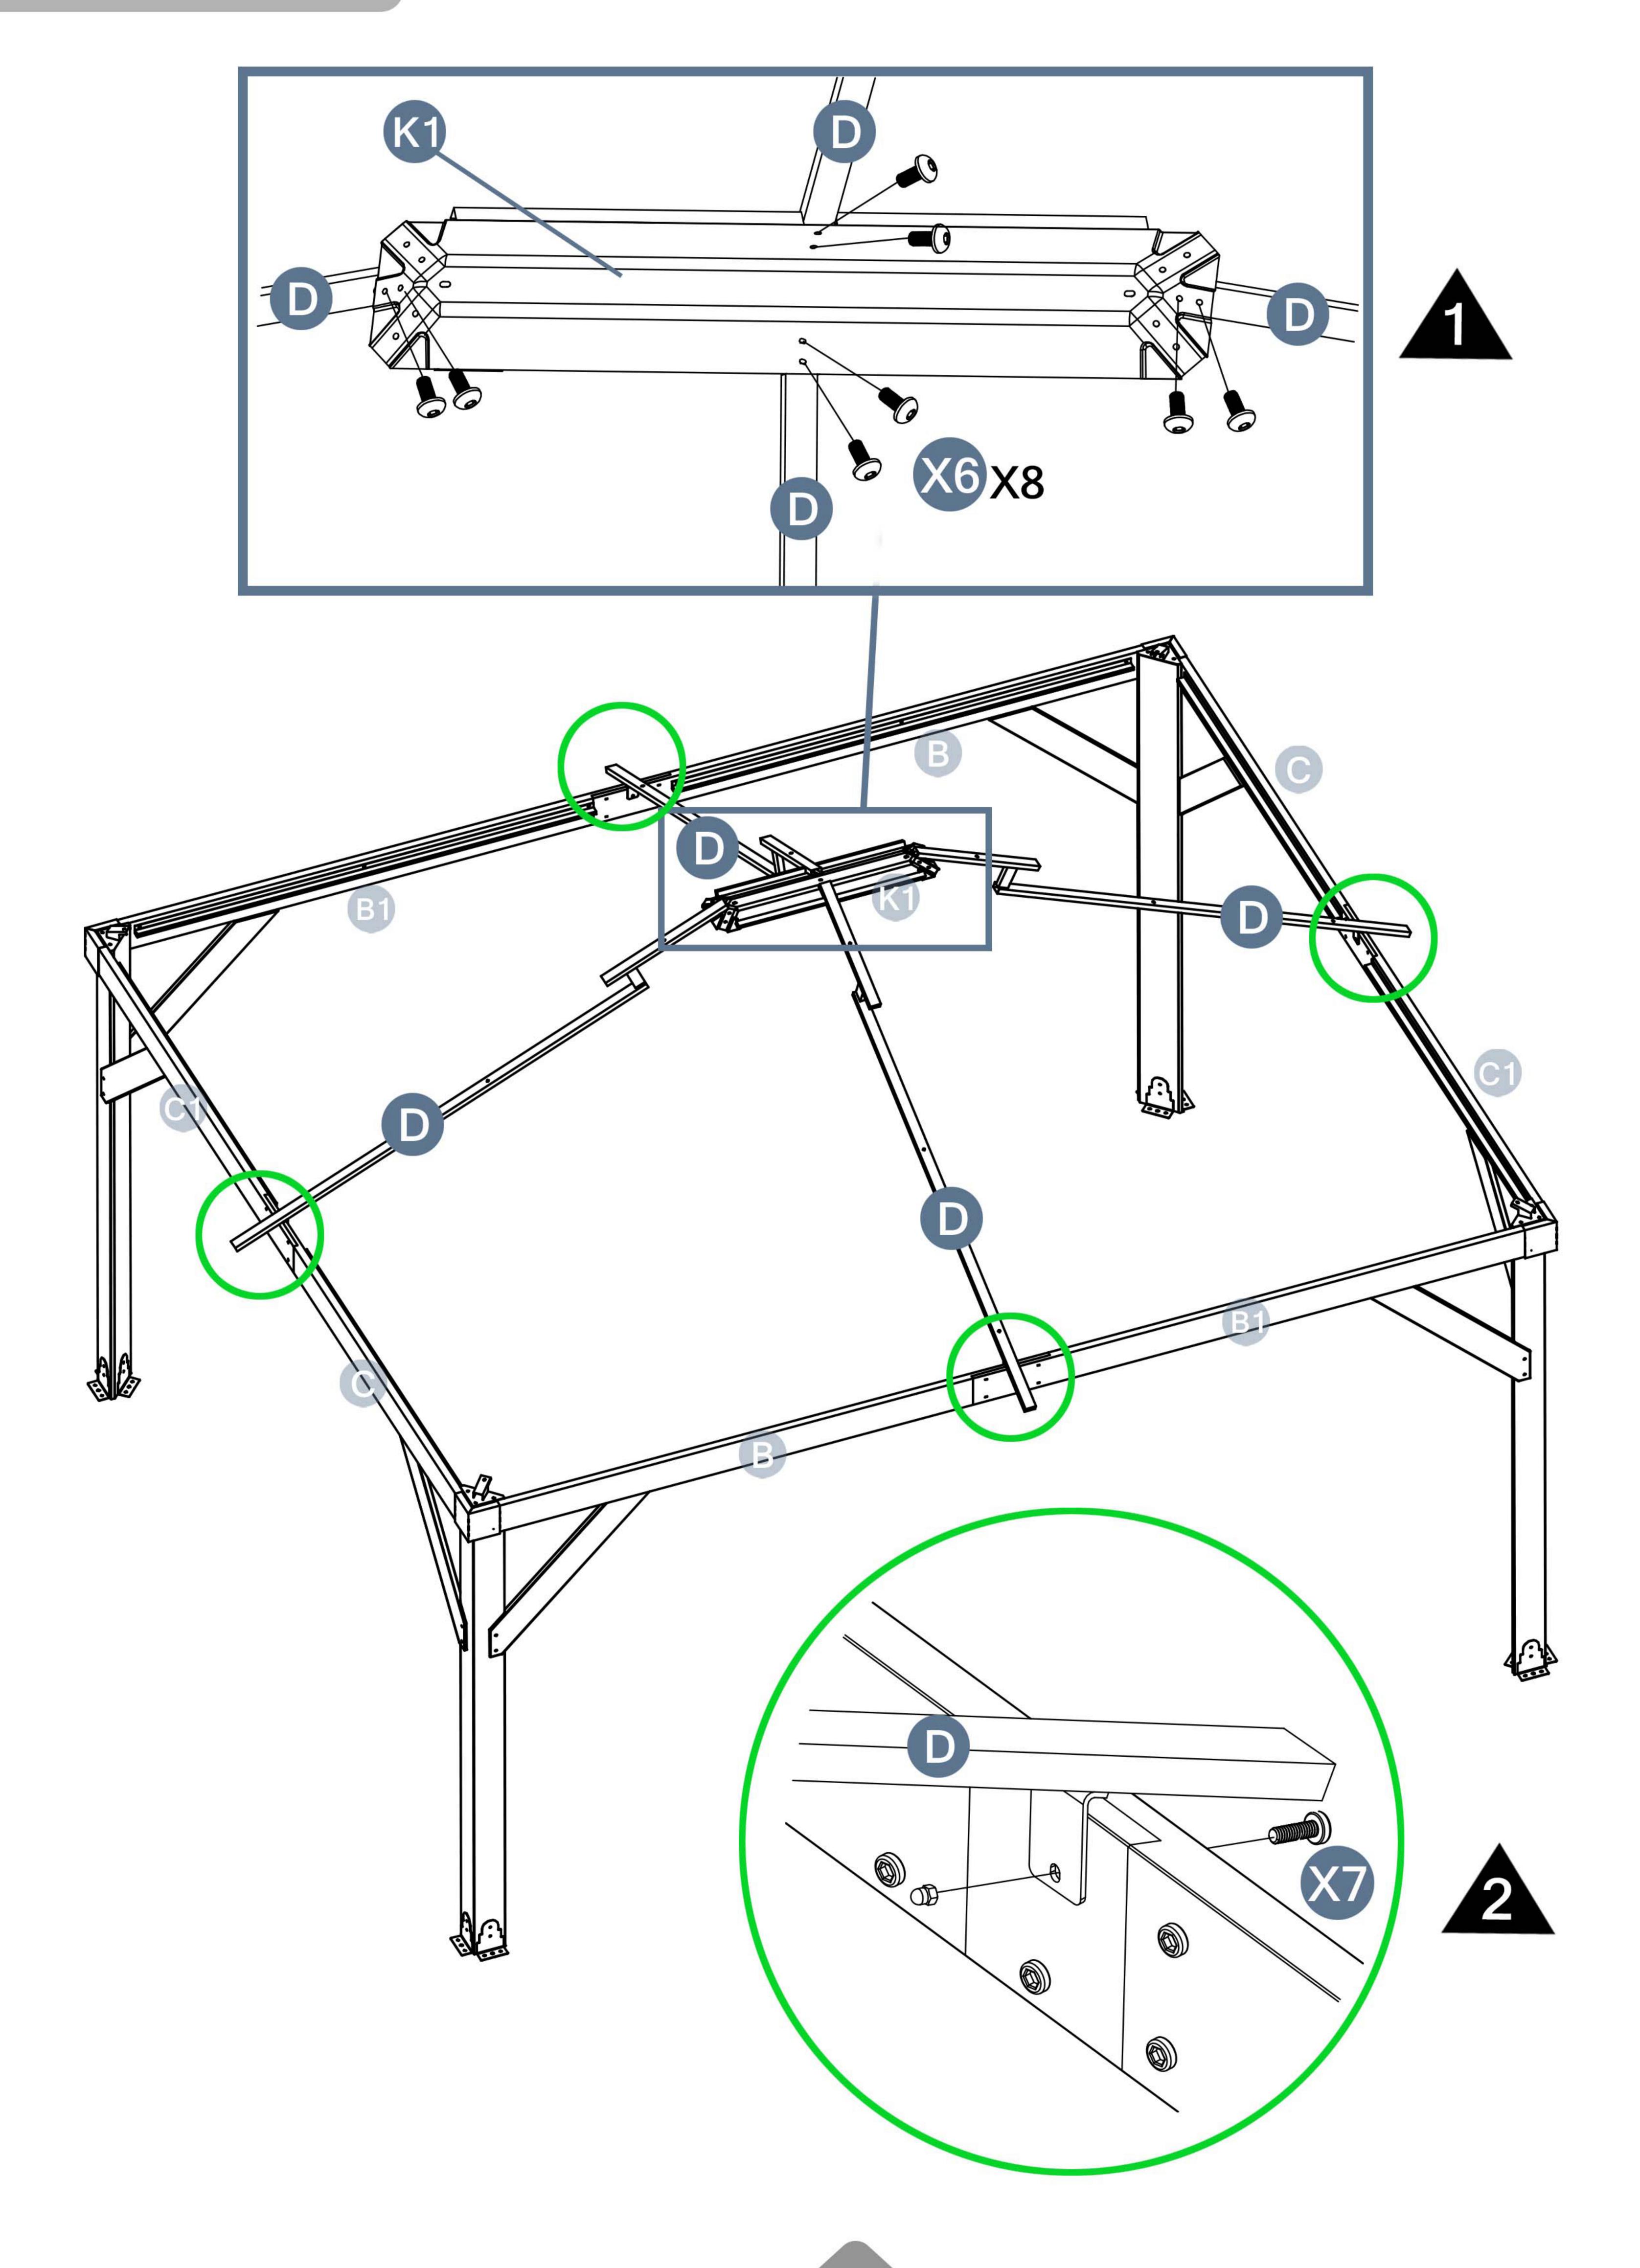

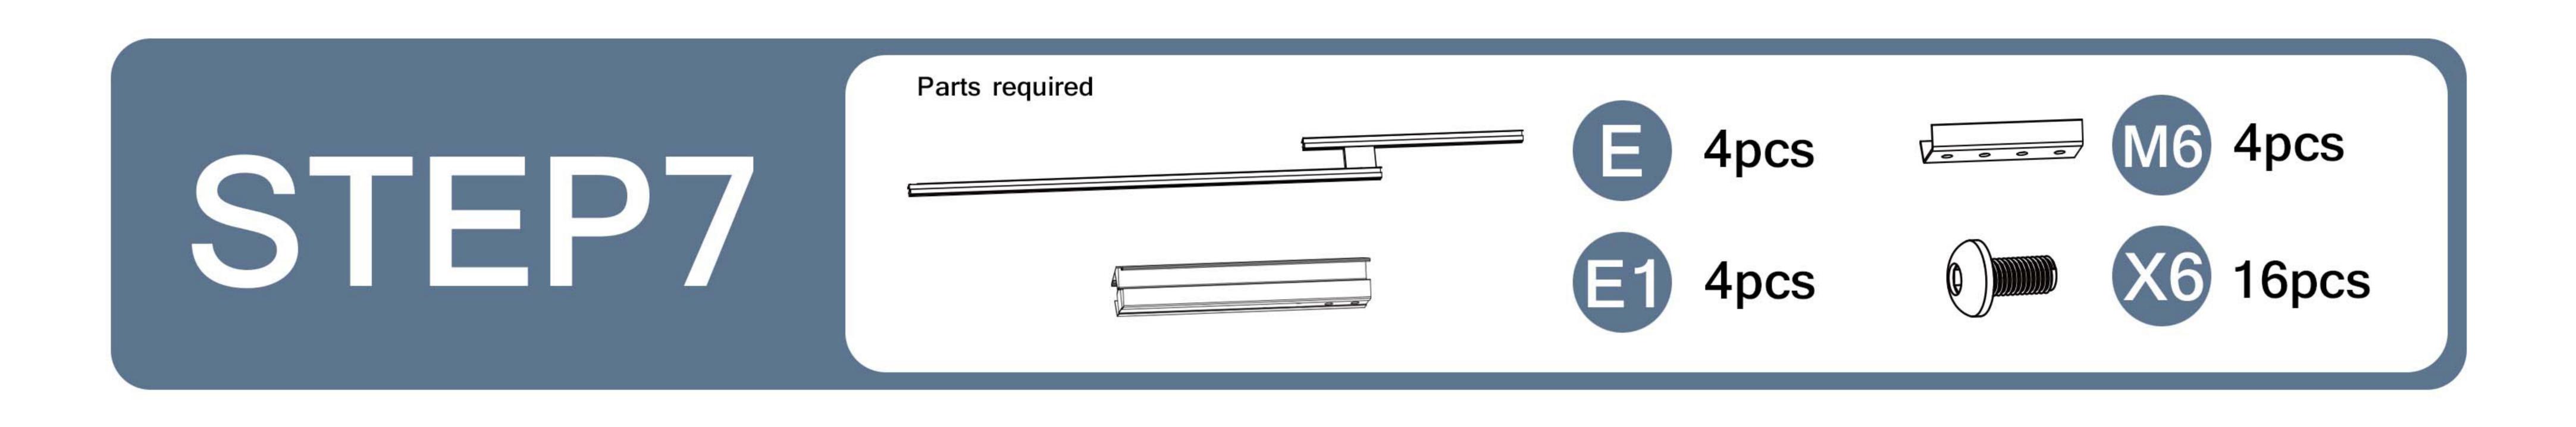

Do not screw and tighten the E pipe in the red dotted box.

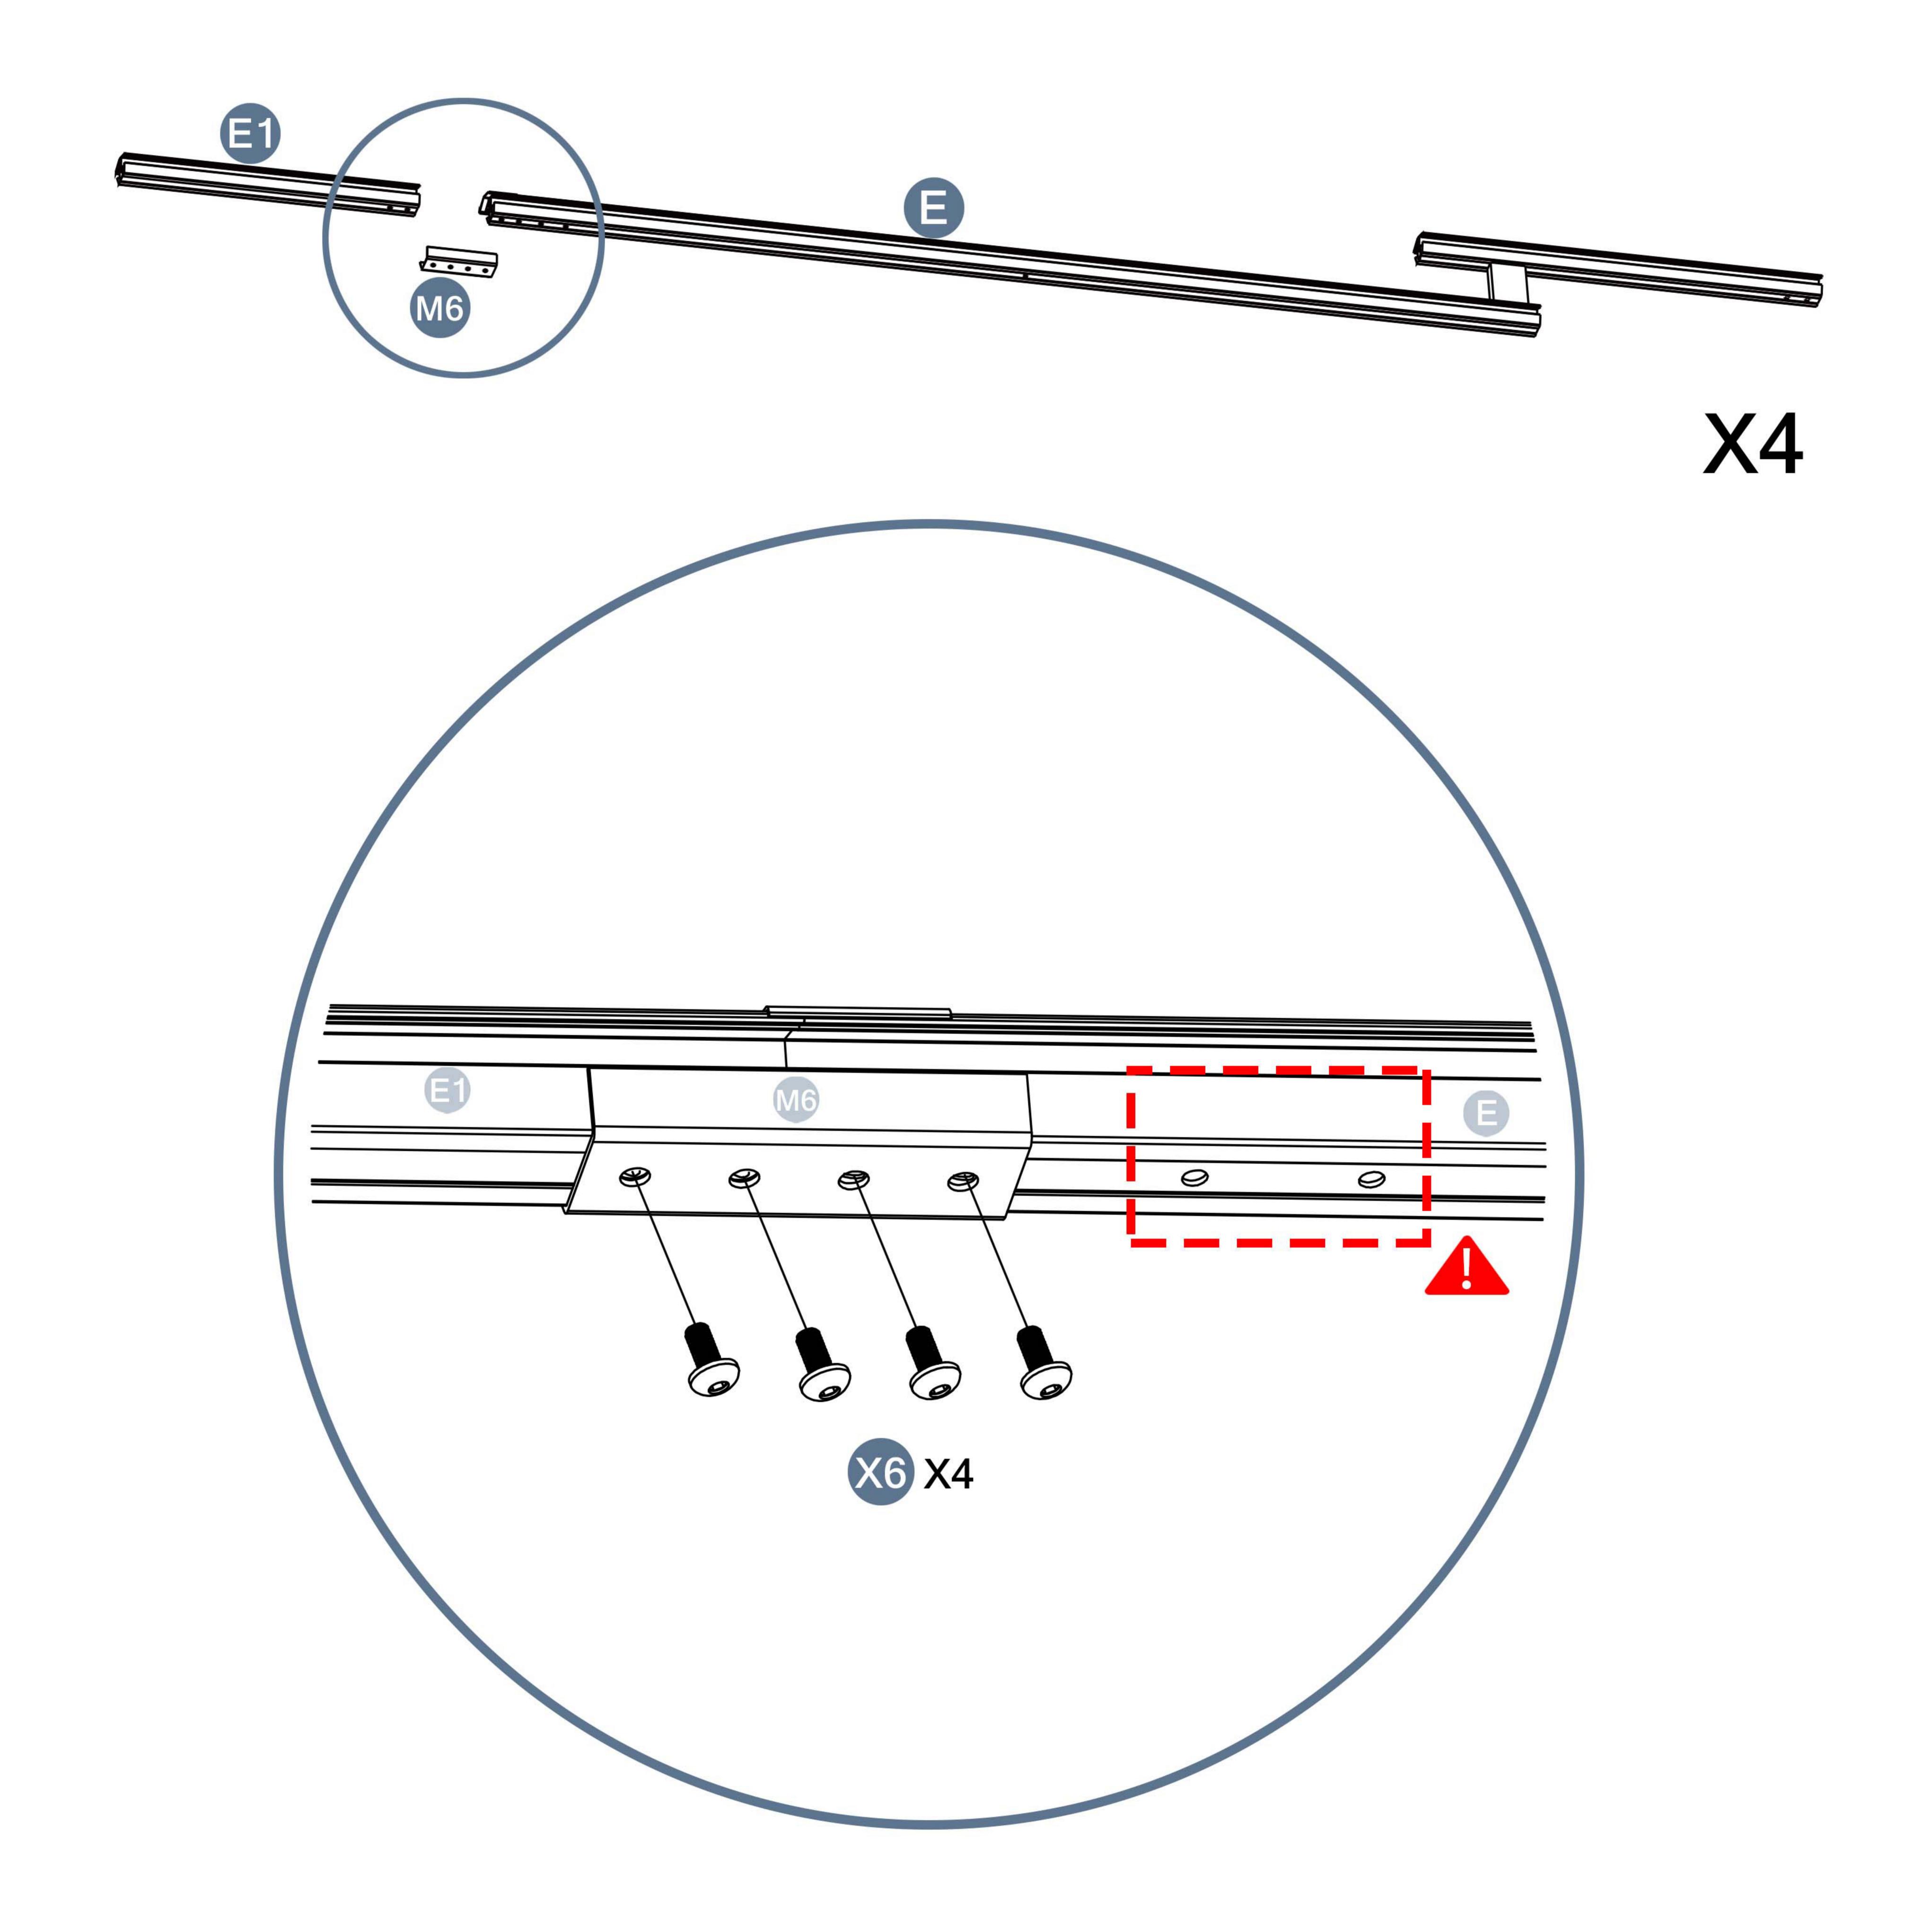

Parts required


# STEP8







12pcs



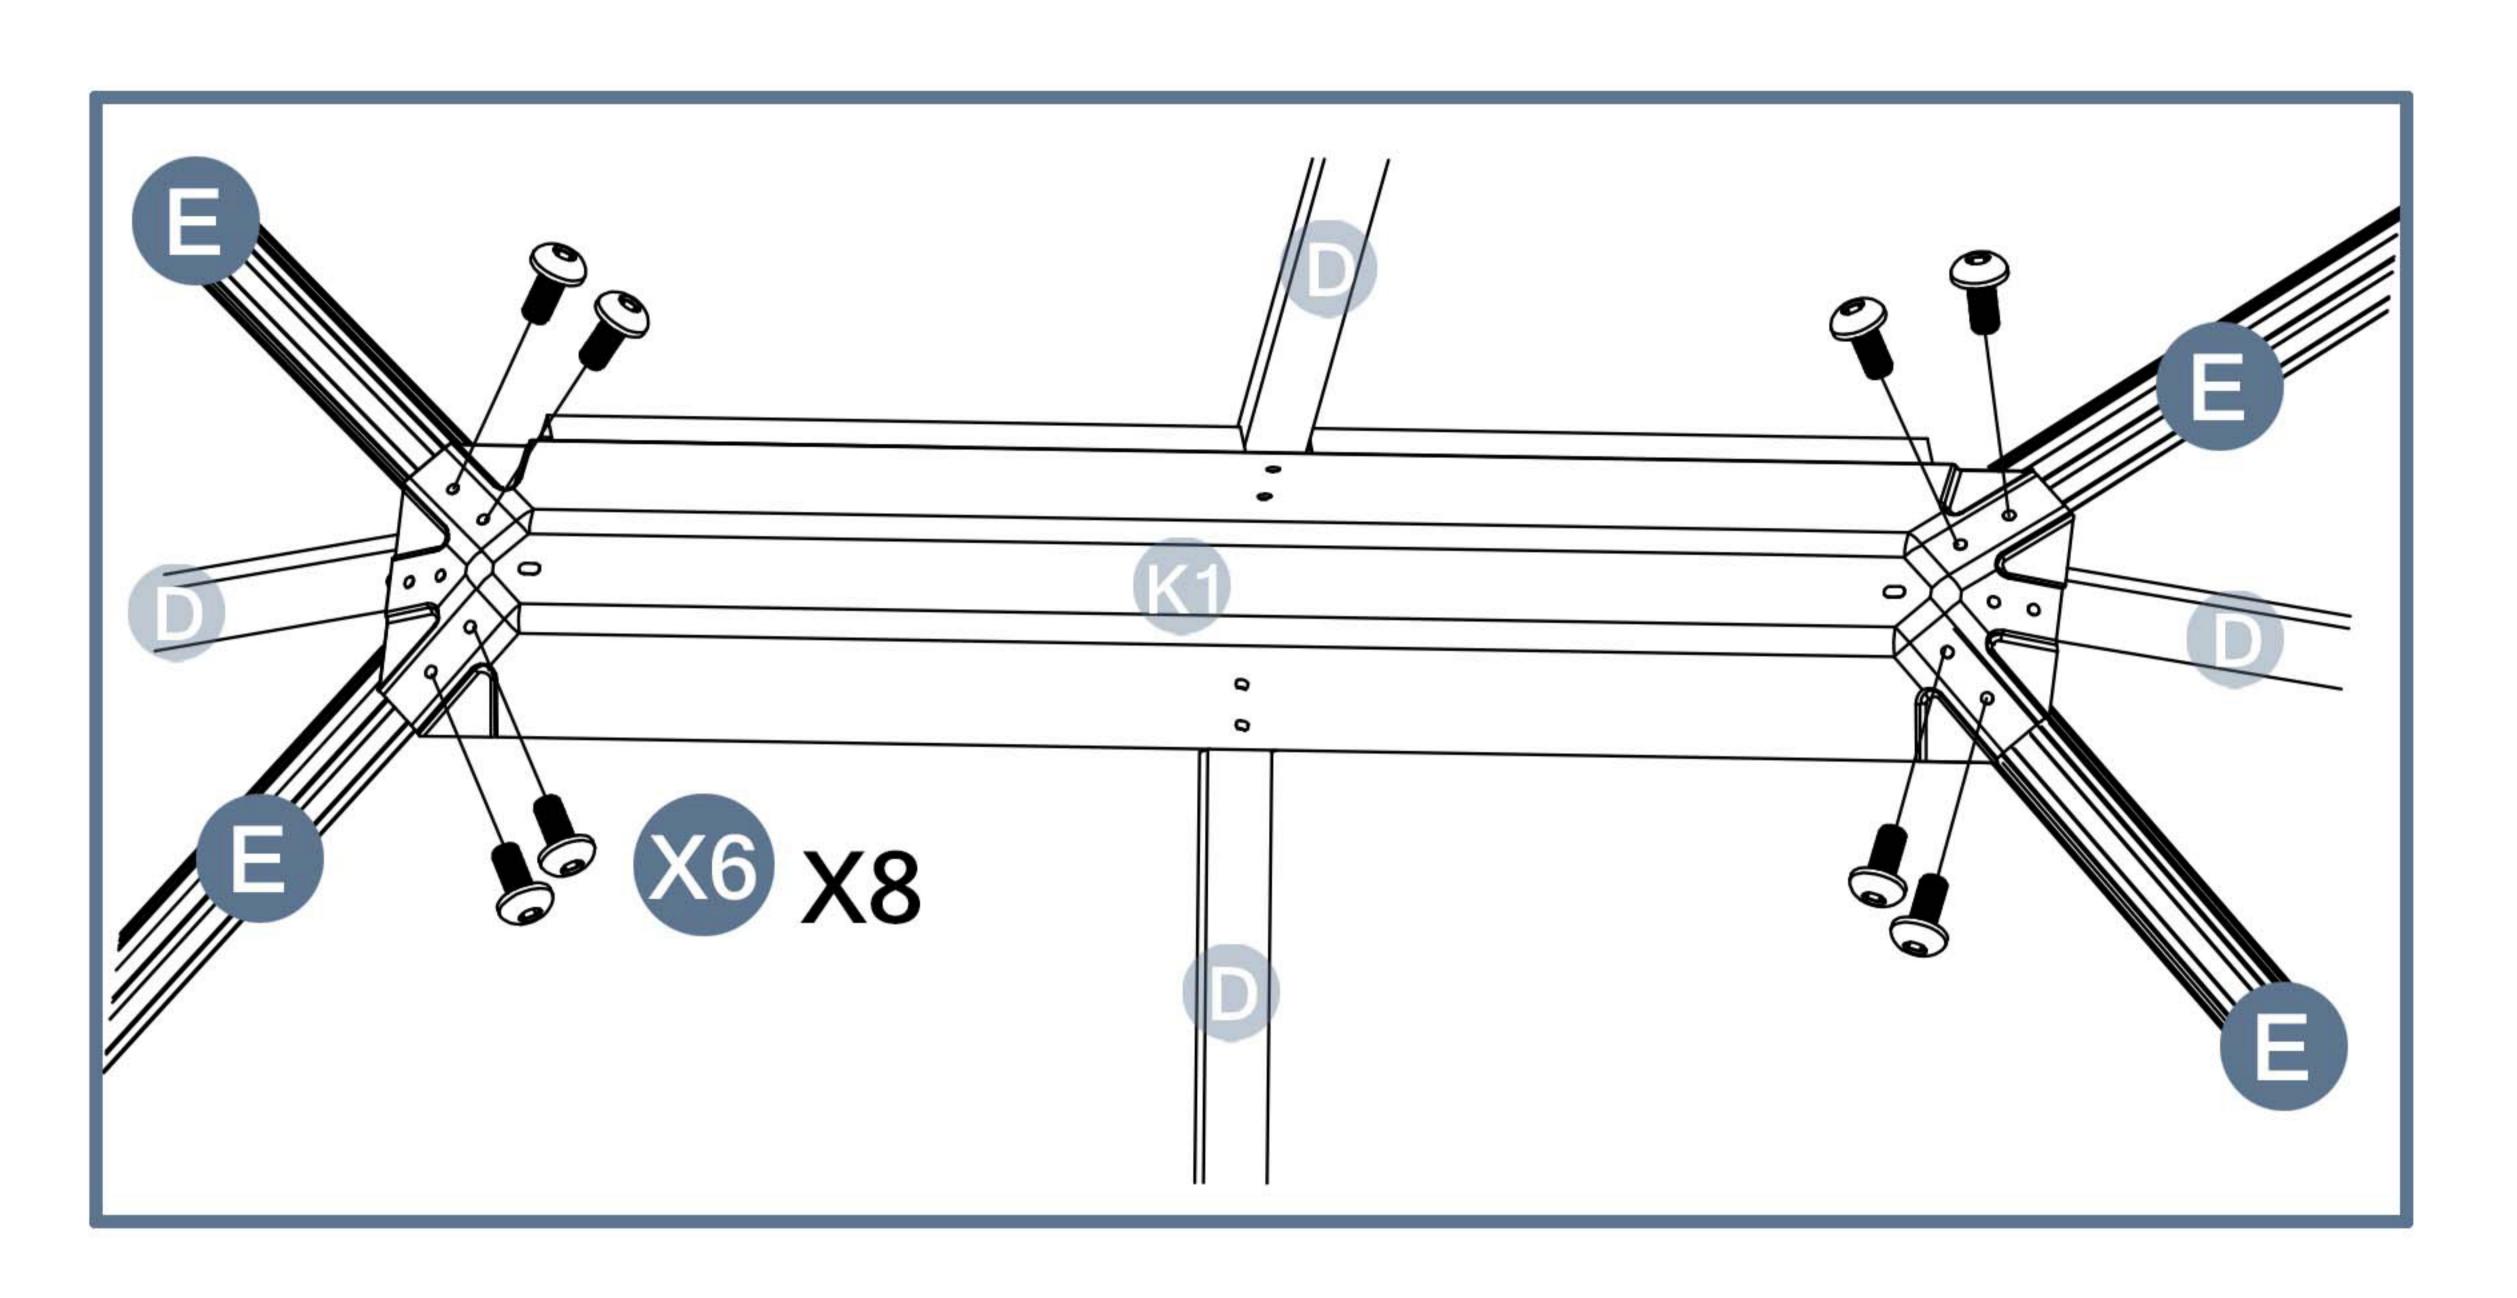


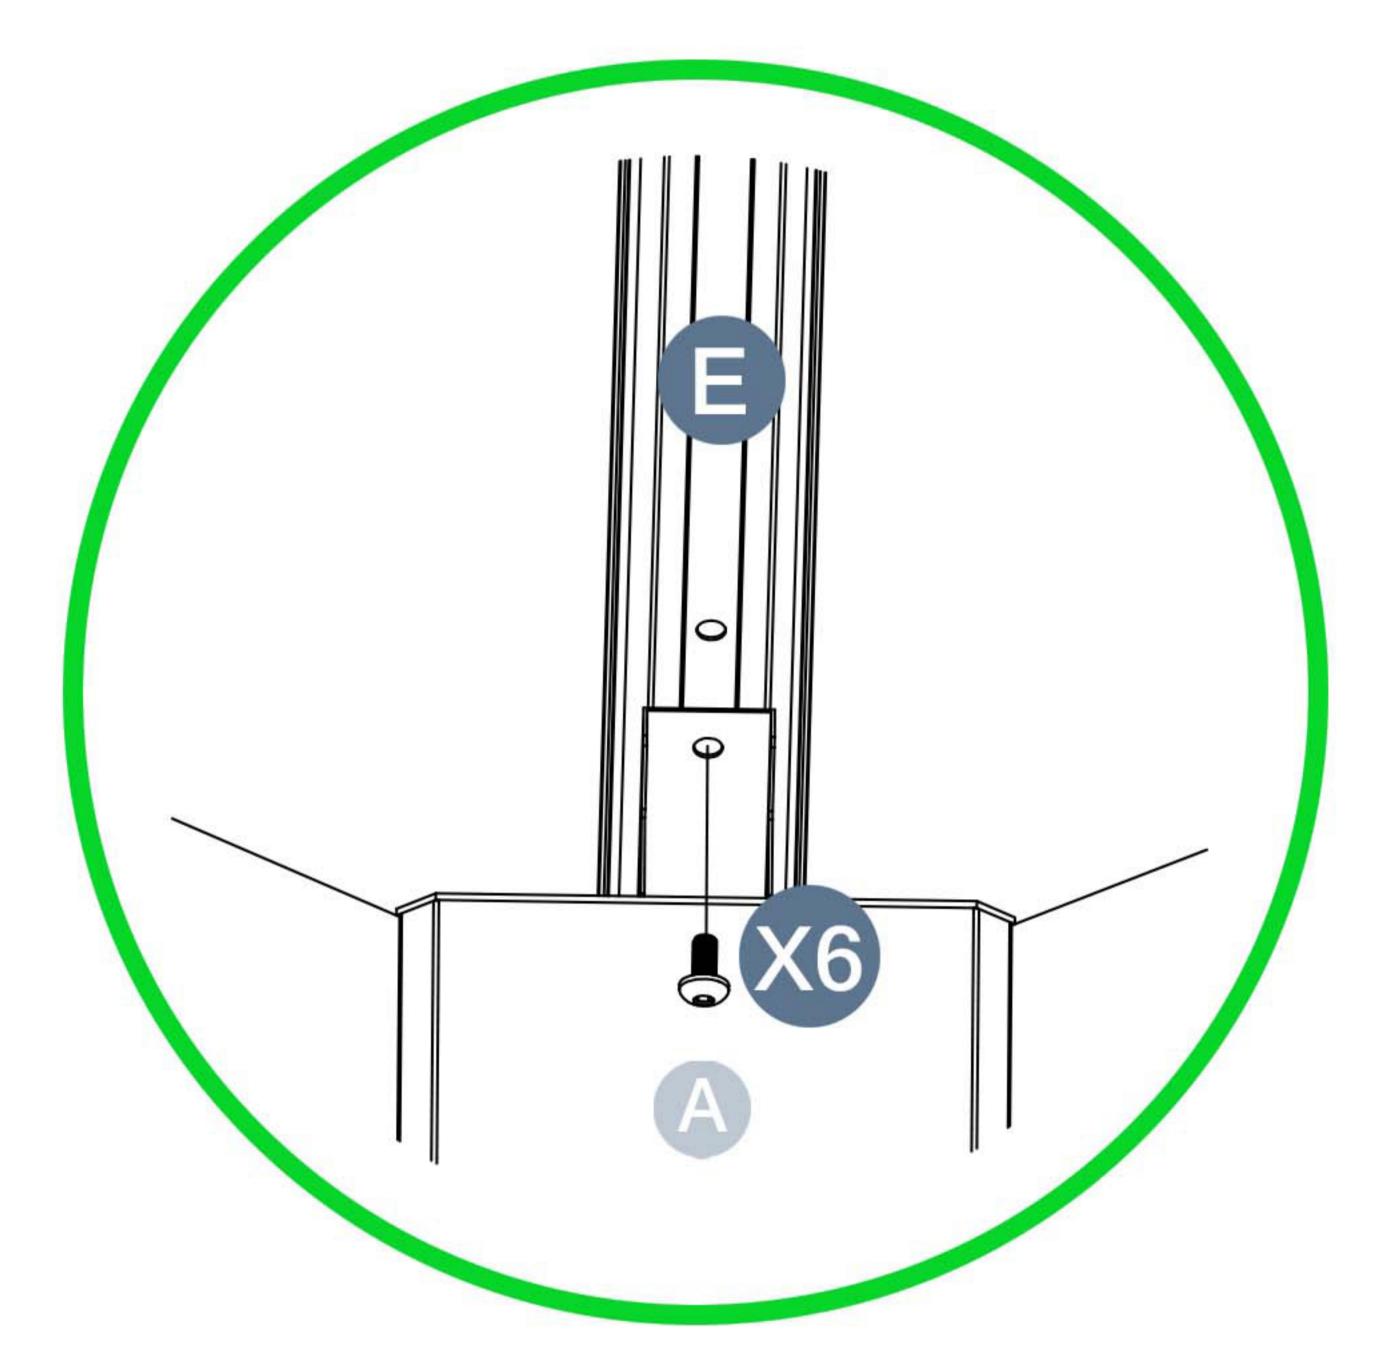

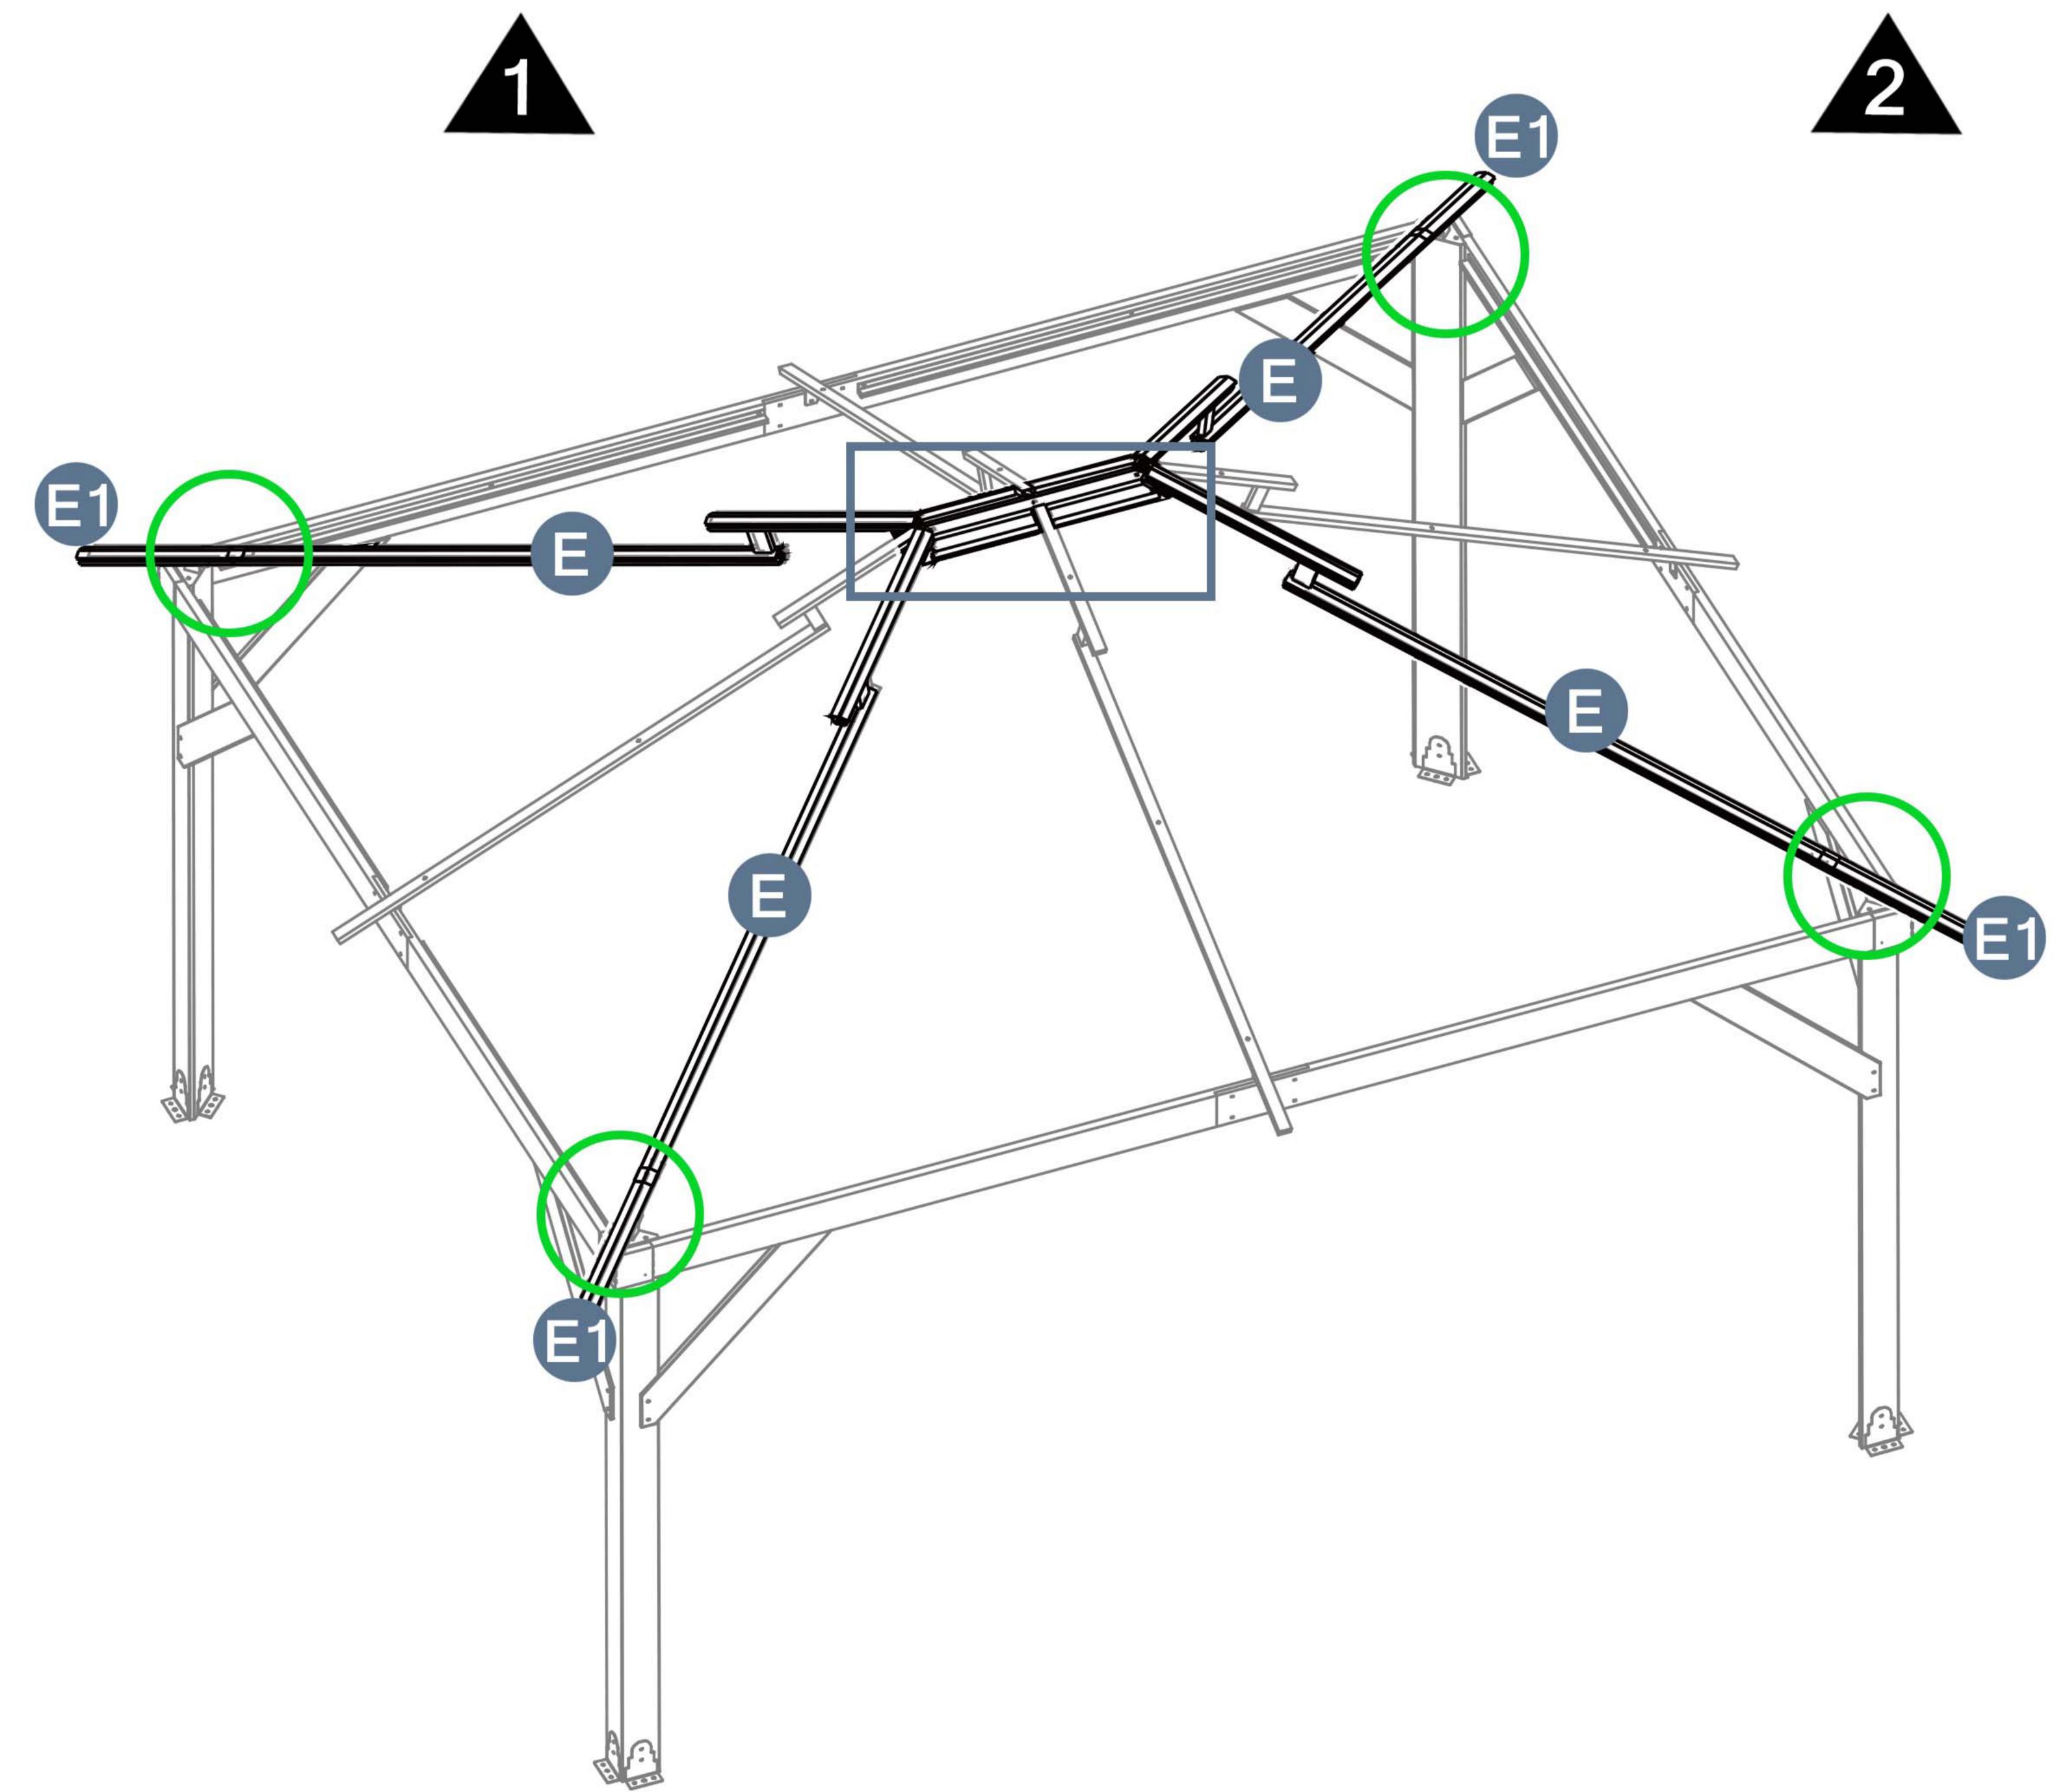



# STEP9 Parts required 16 16pcs 16 16pcs 17 4pcs 18 4pcs 19 4pcs 19 4pcs 19 4pcs 19 4pcs 19 4pcs 19 4pcs

Part I should be placed as shown in the picture.

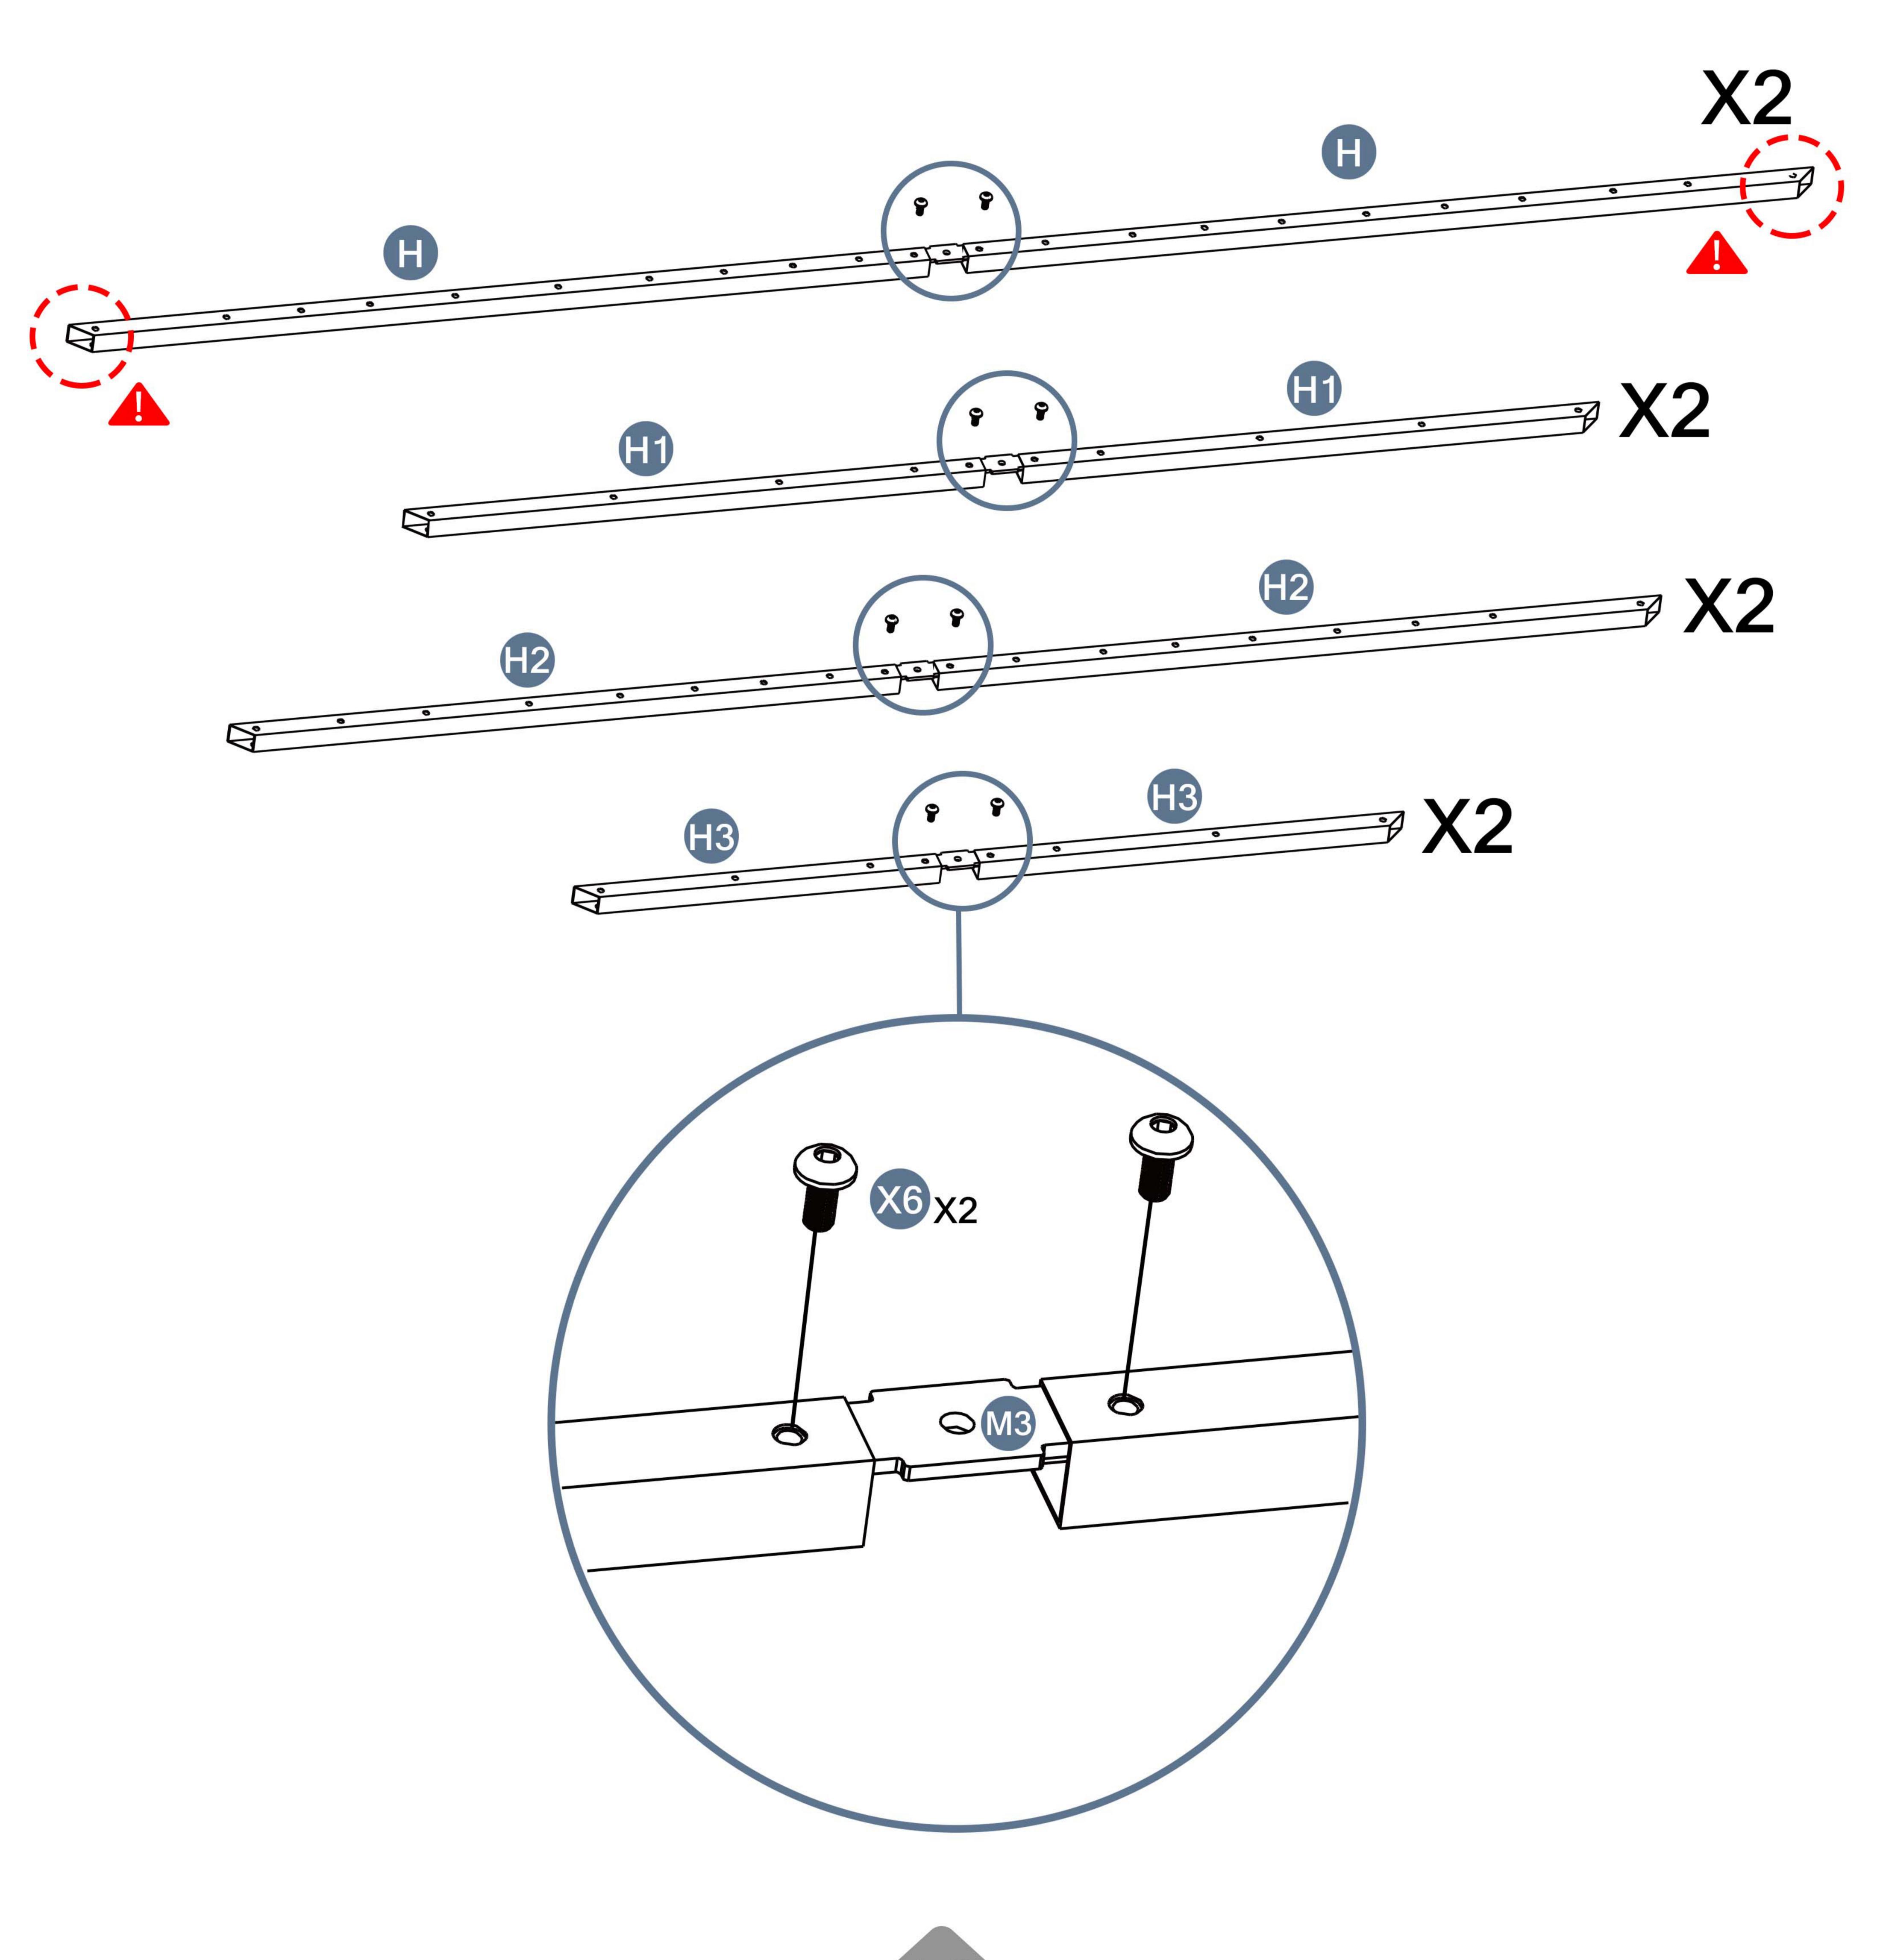

Parts required

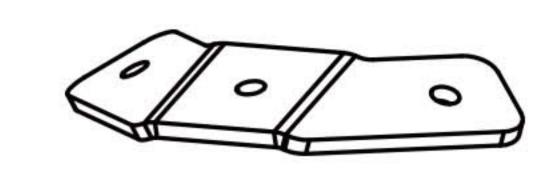

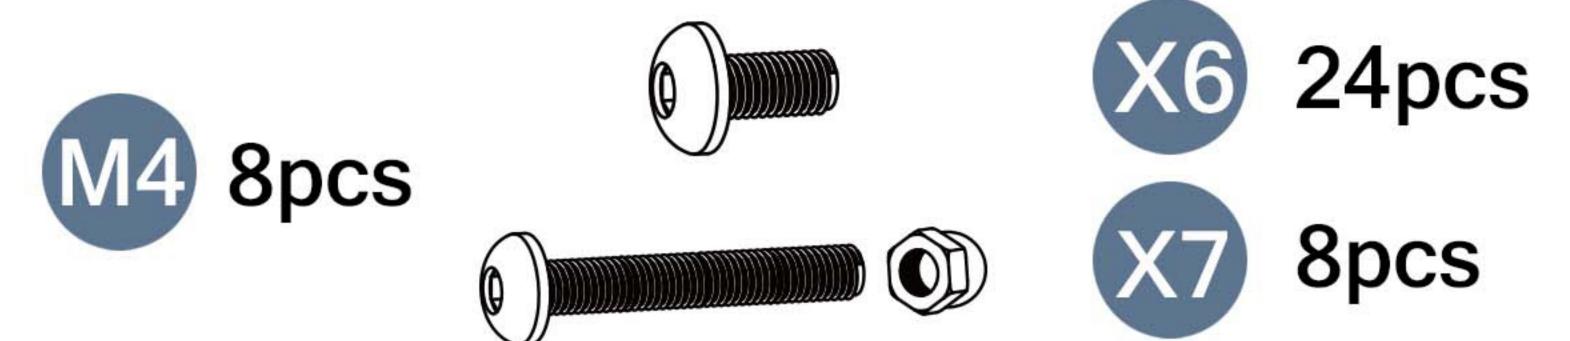














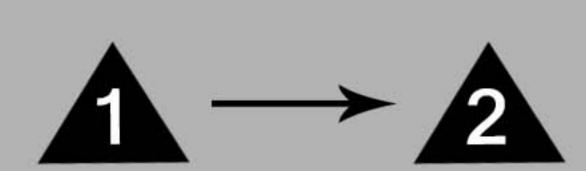


Only X7 screws are used in this step. Please store the X7 nuts. Steps 14 and 15 will be used. To better align the screws for practical situations, do not fully tighten screws initially.

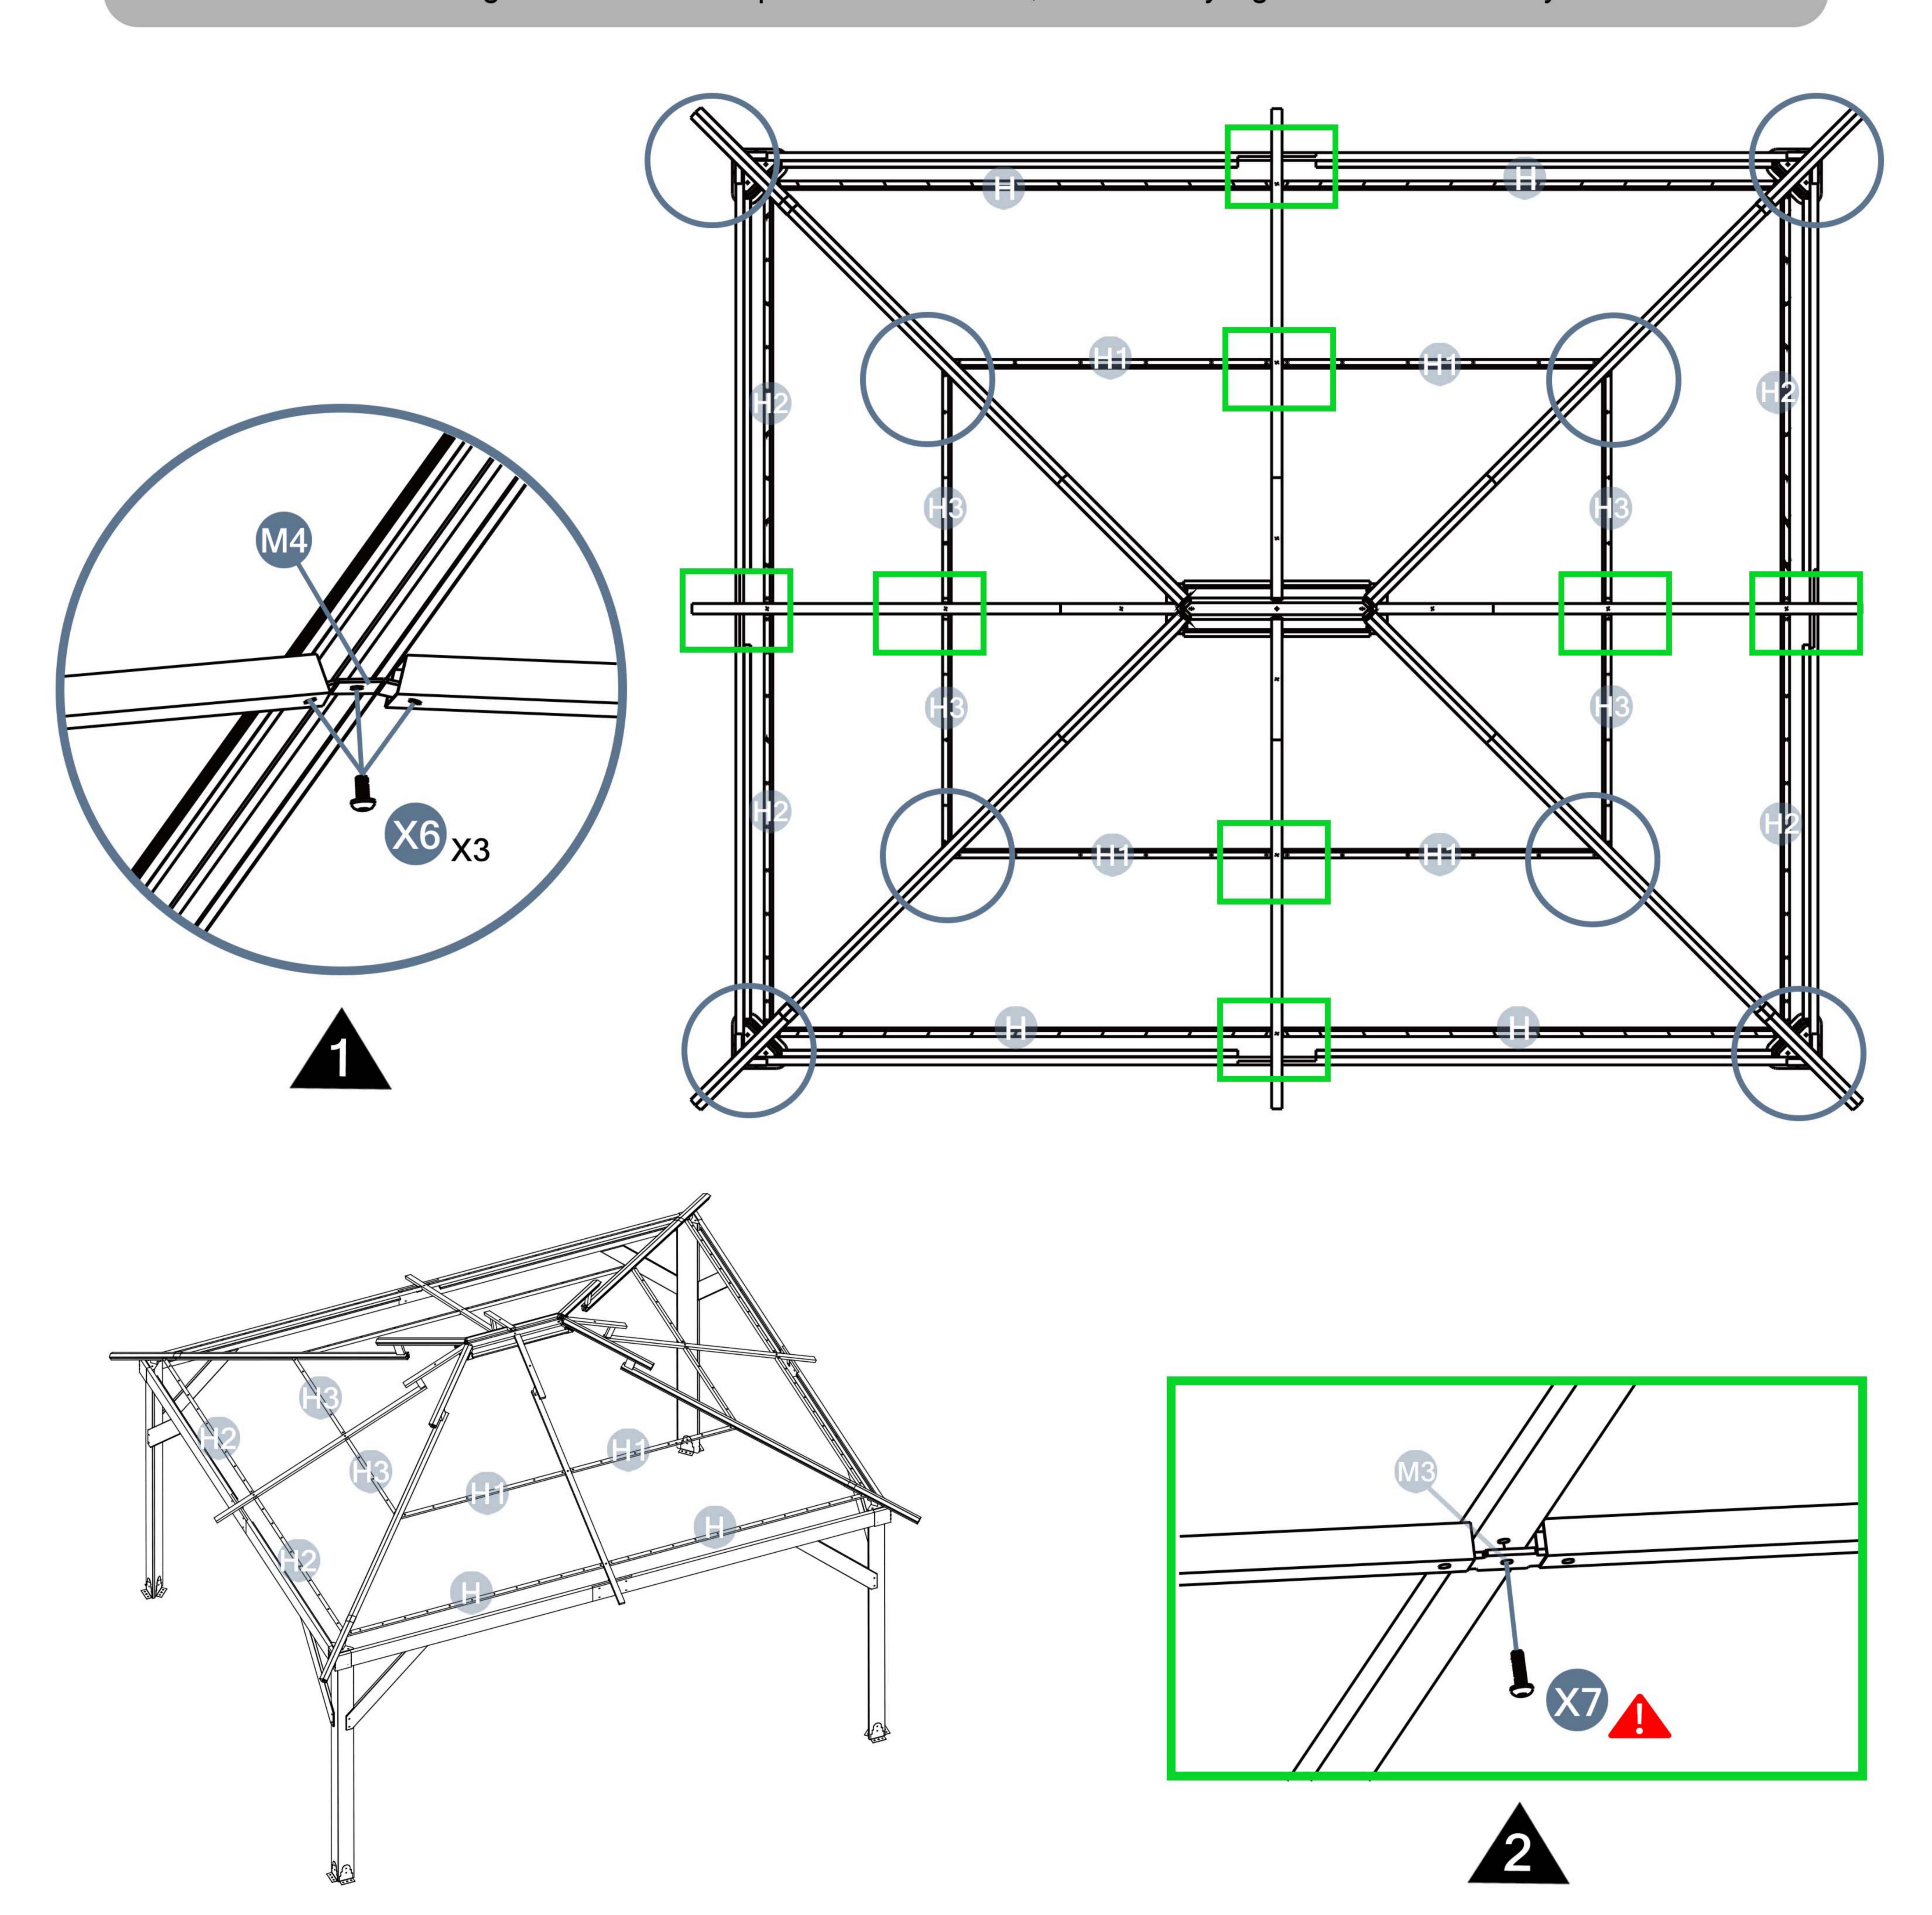

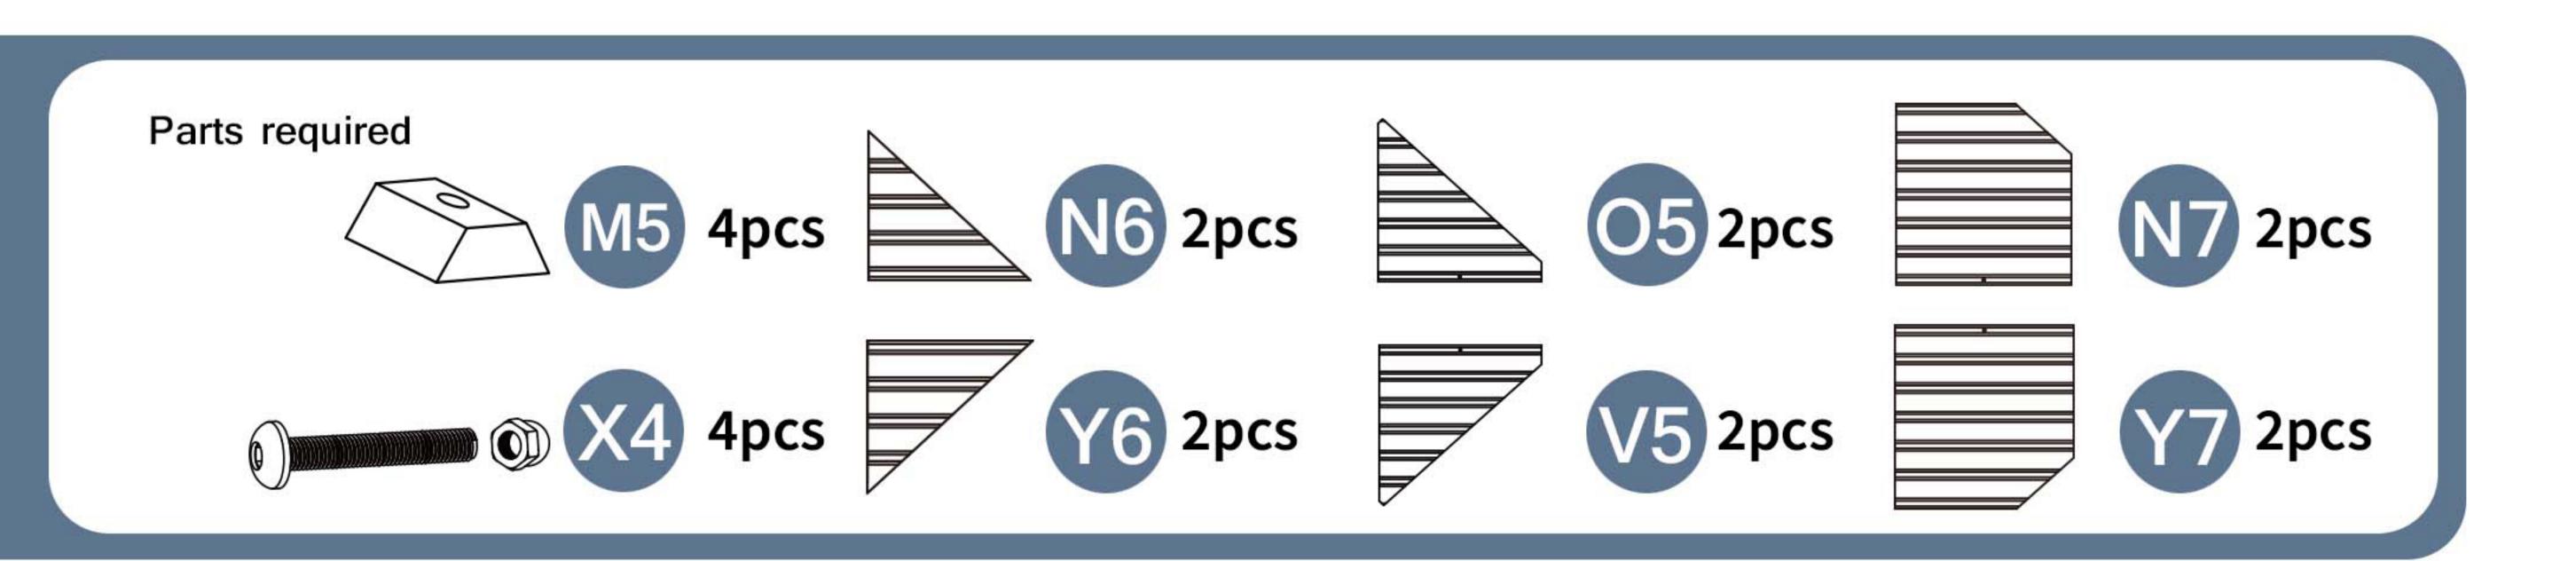




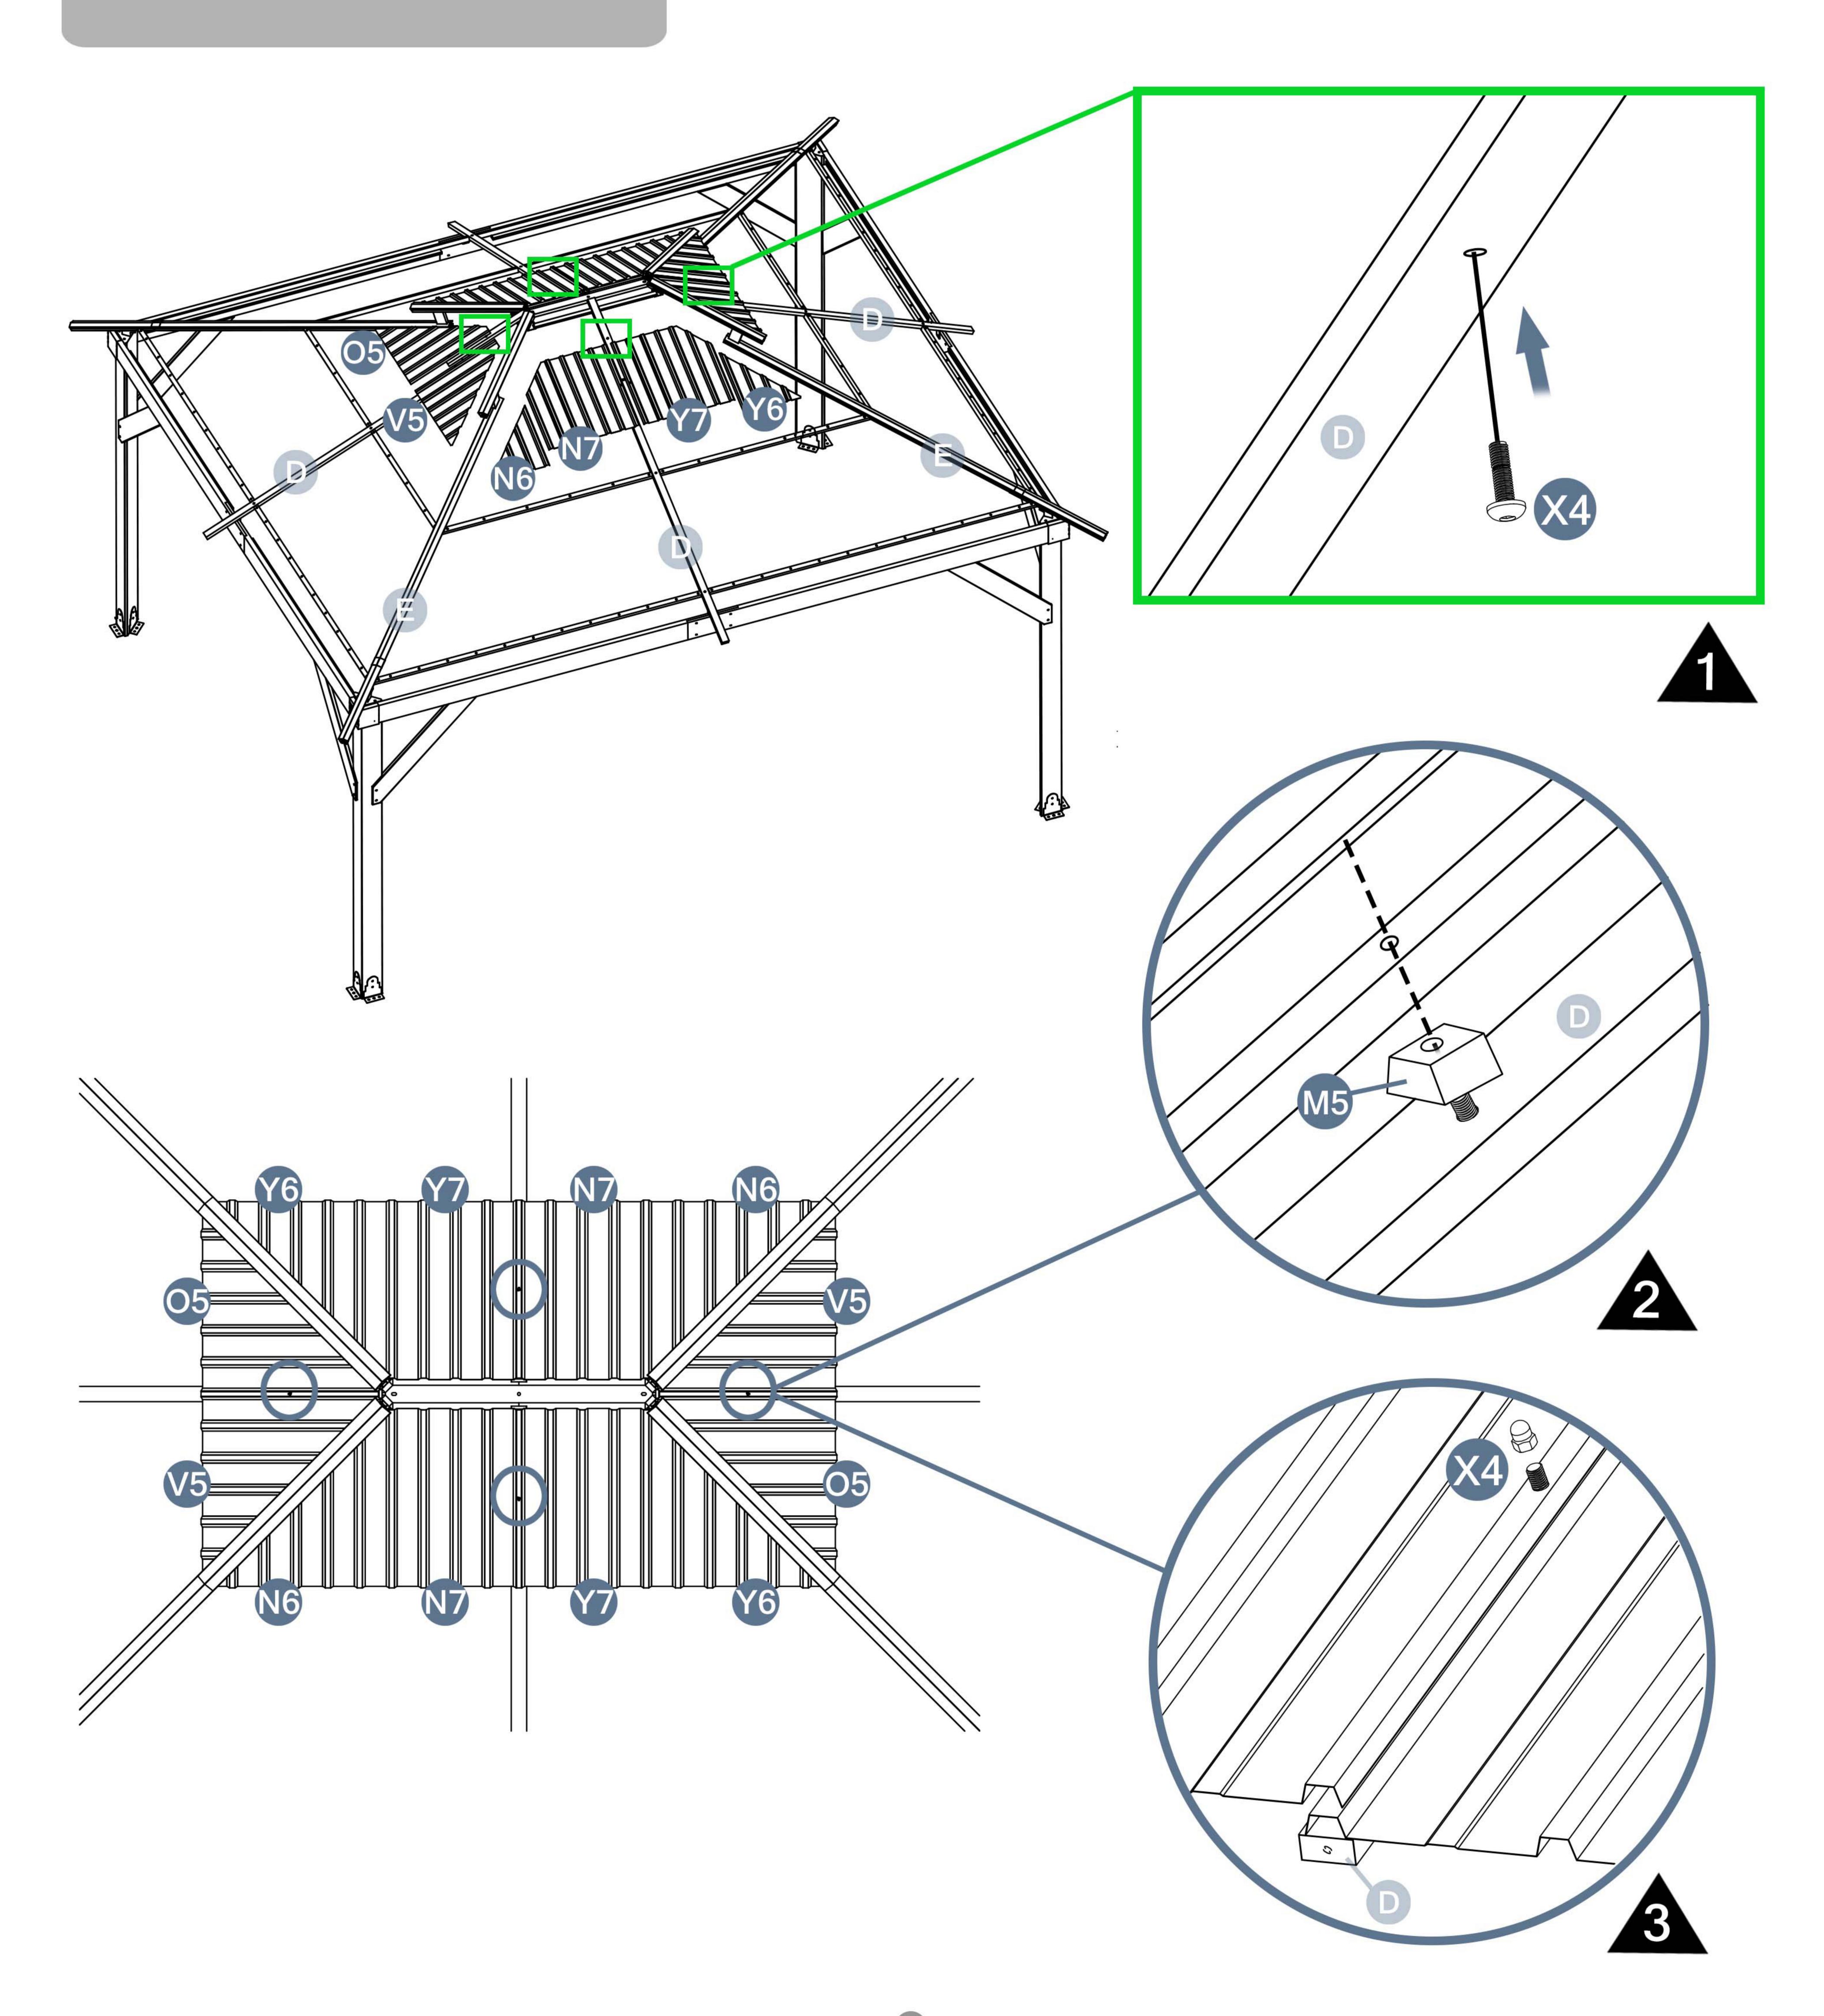

Parts required

G5 2pcs


M2 4pcs

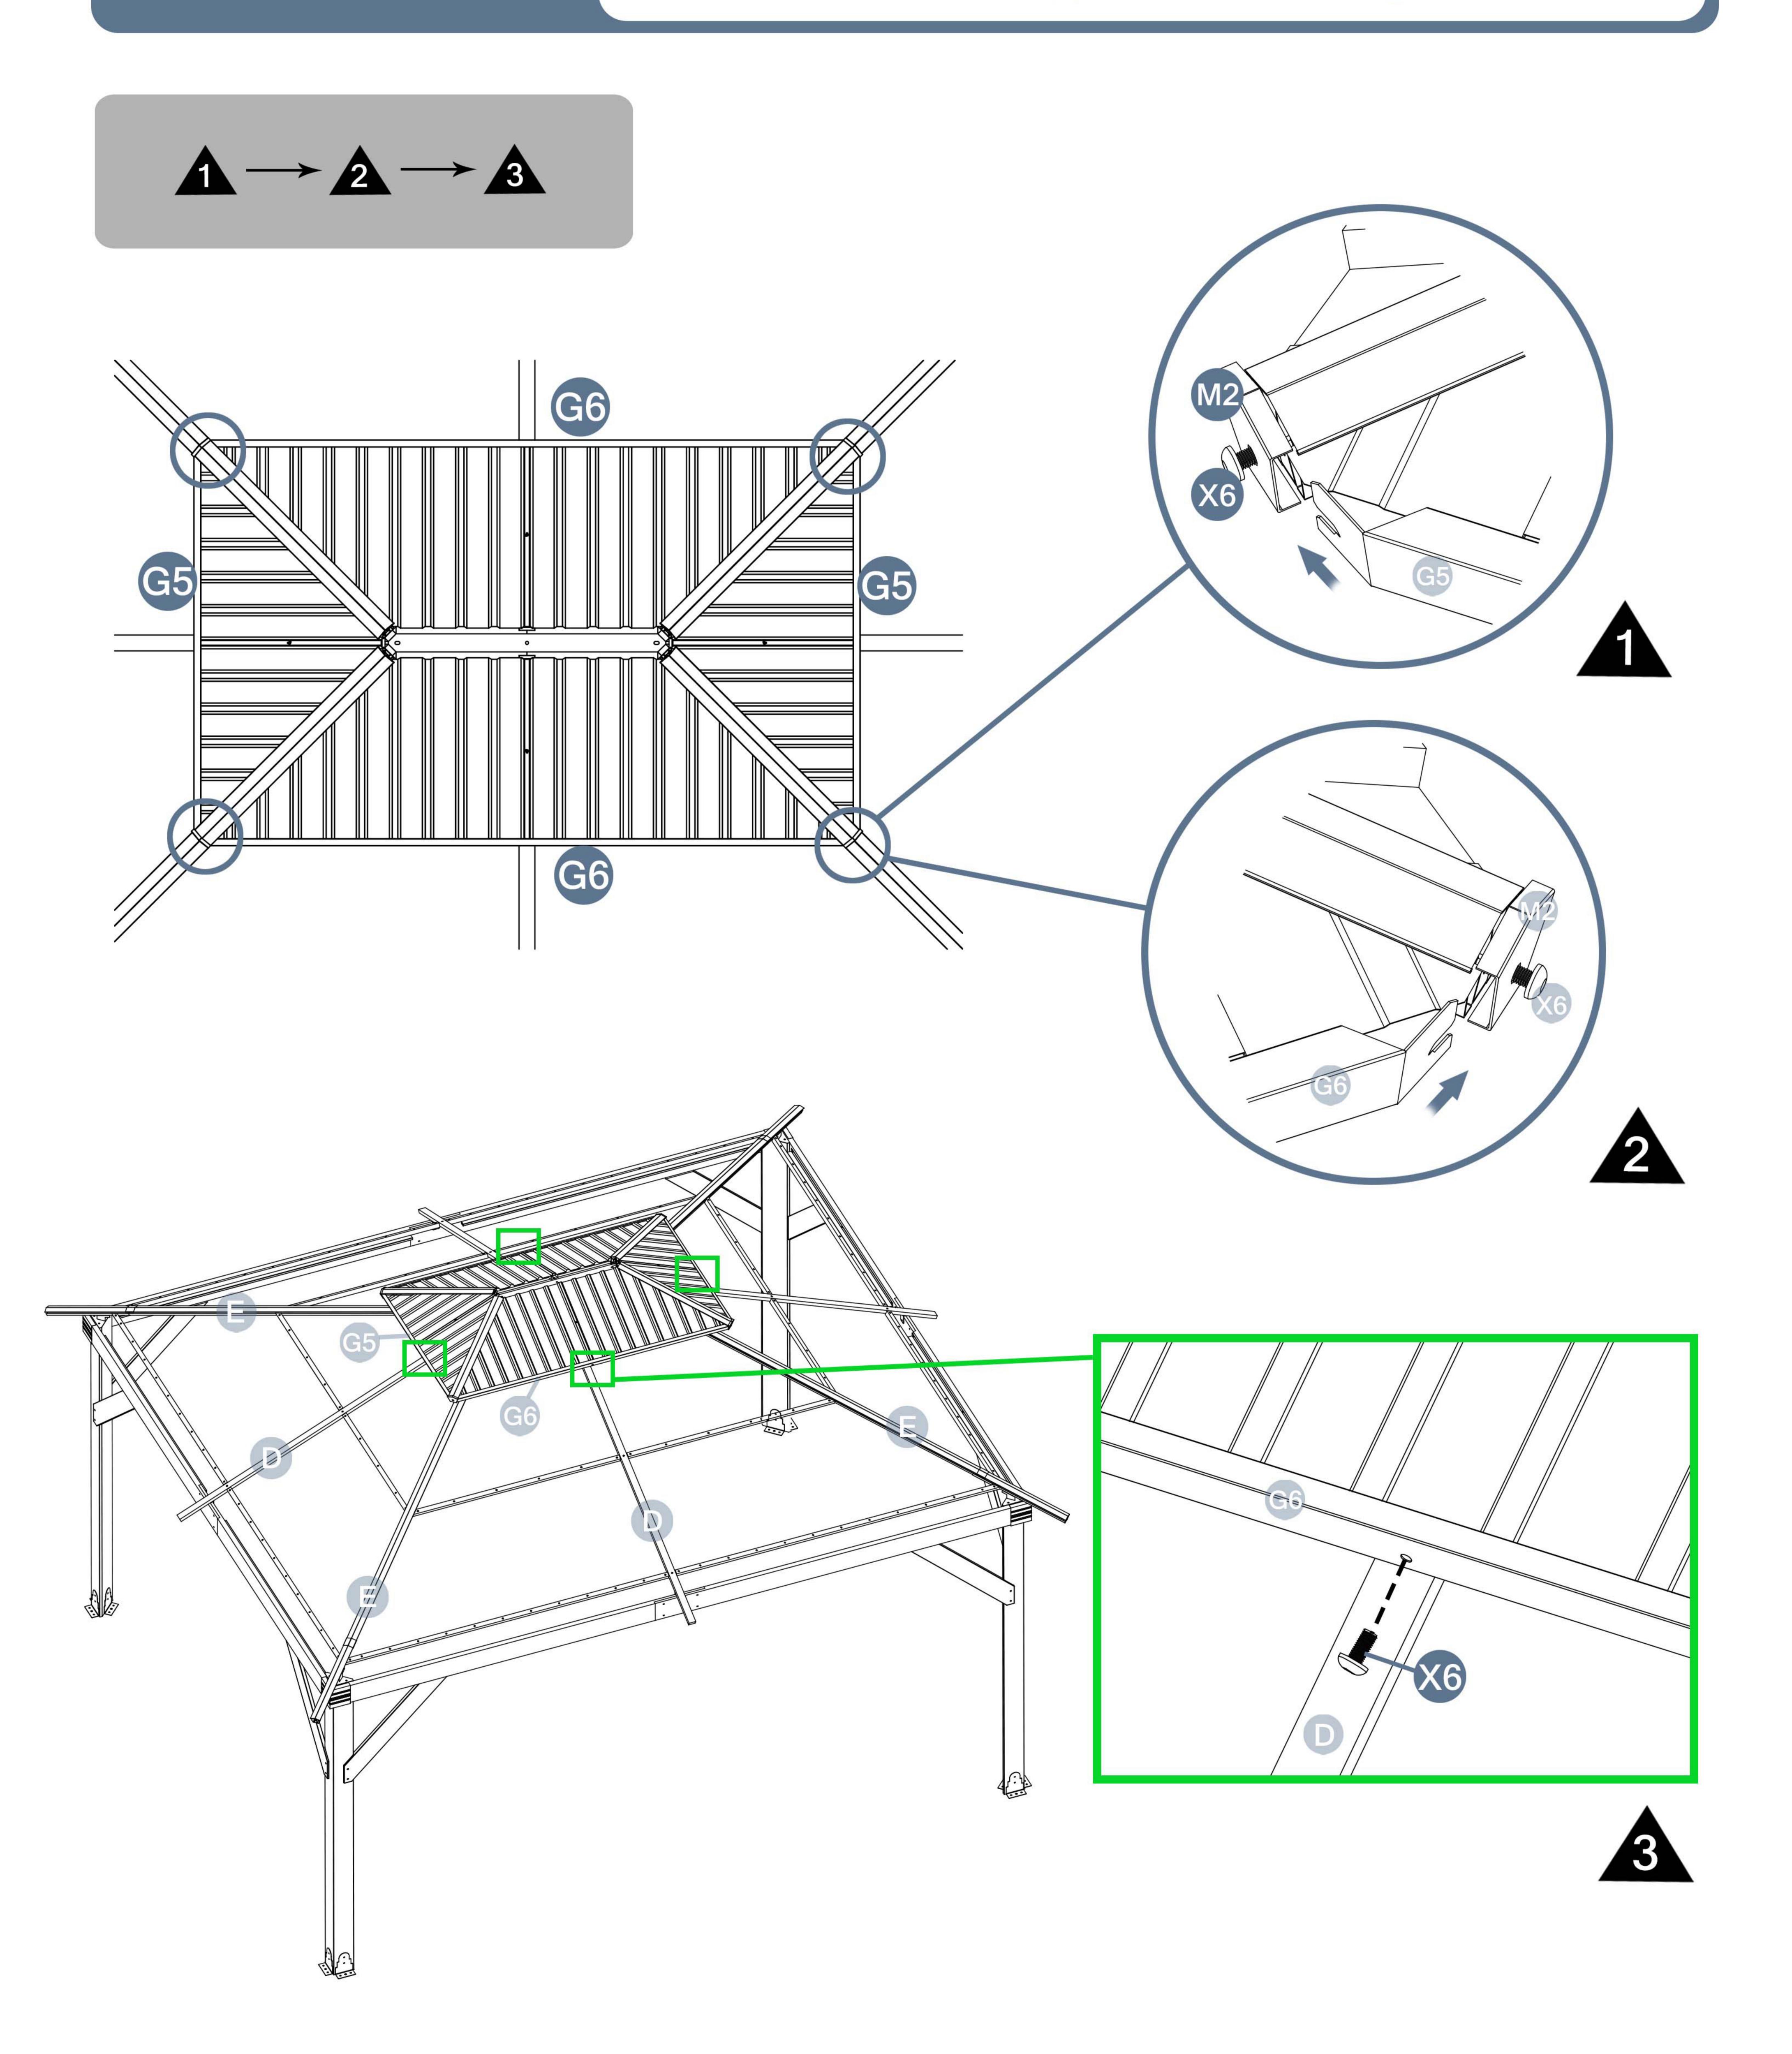


Parts required


K 1pcs


M7 2pcs

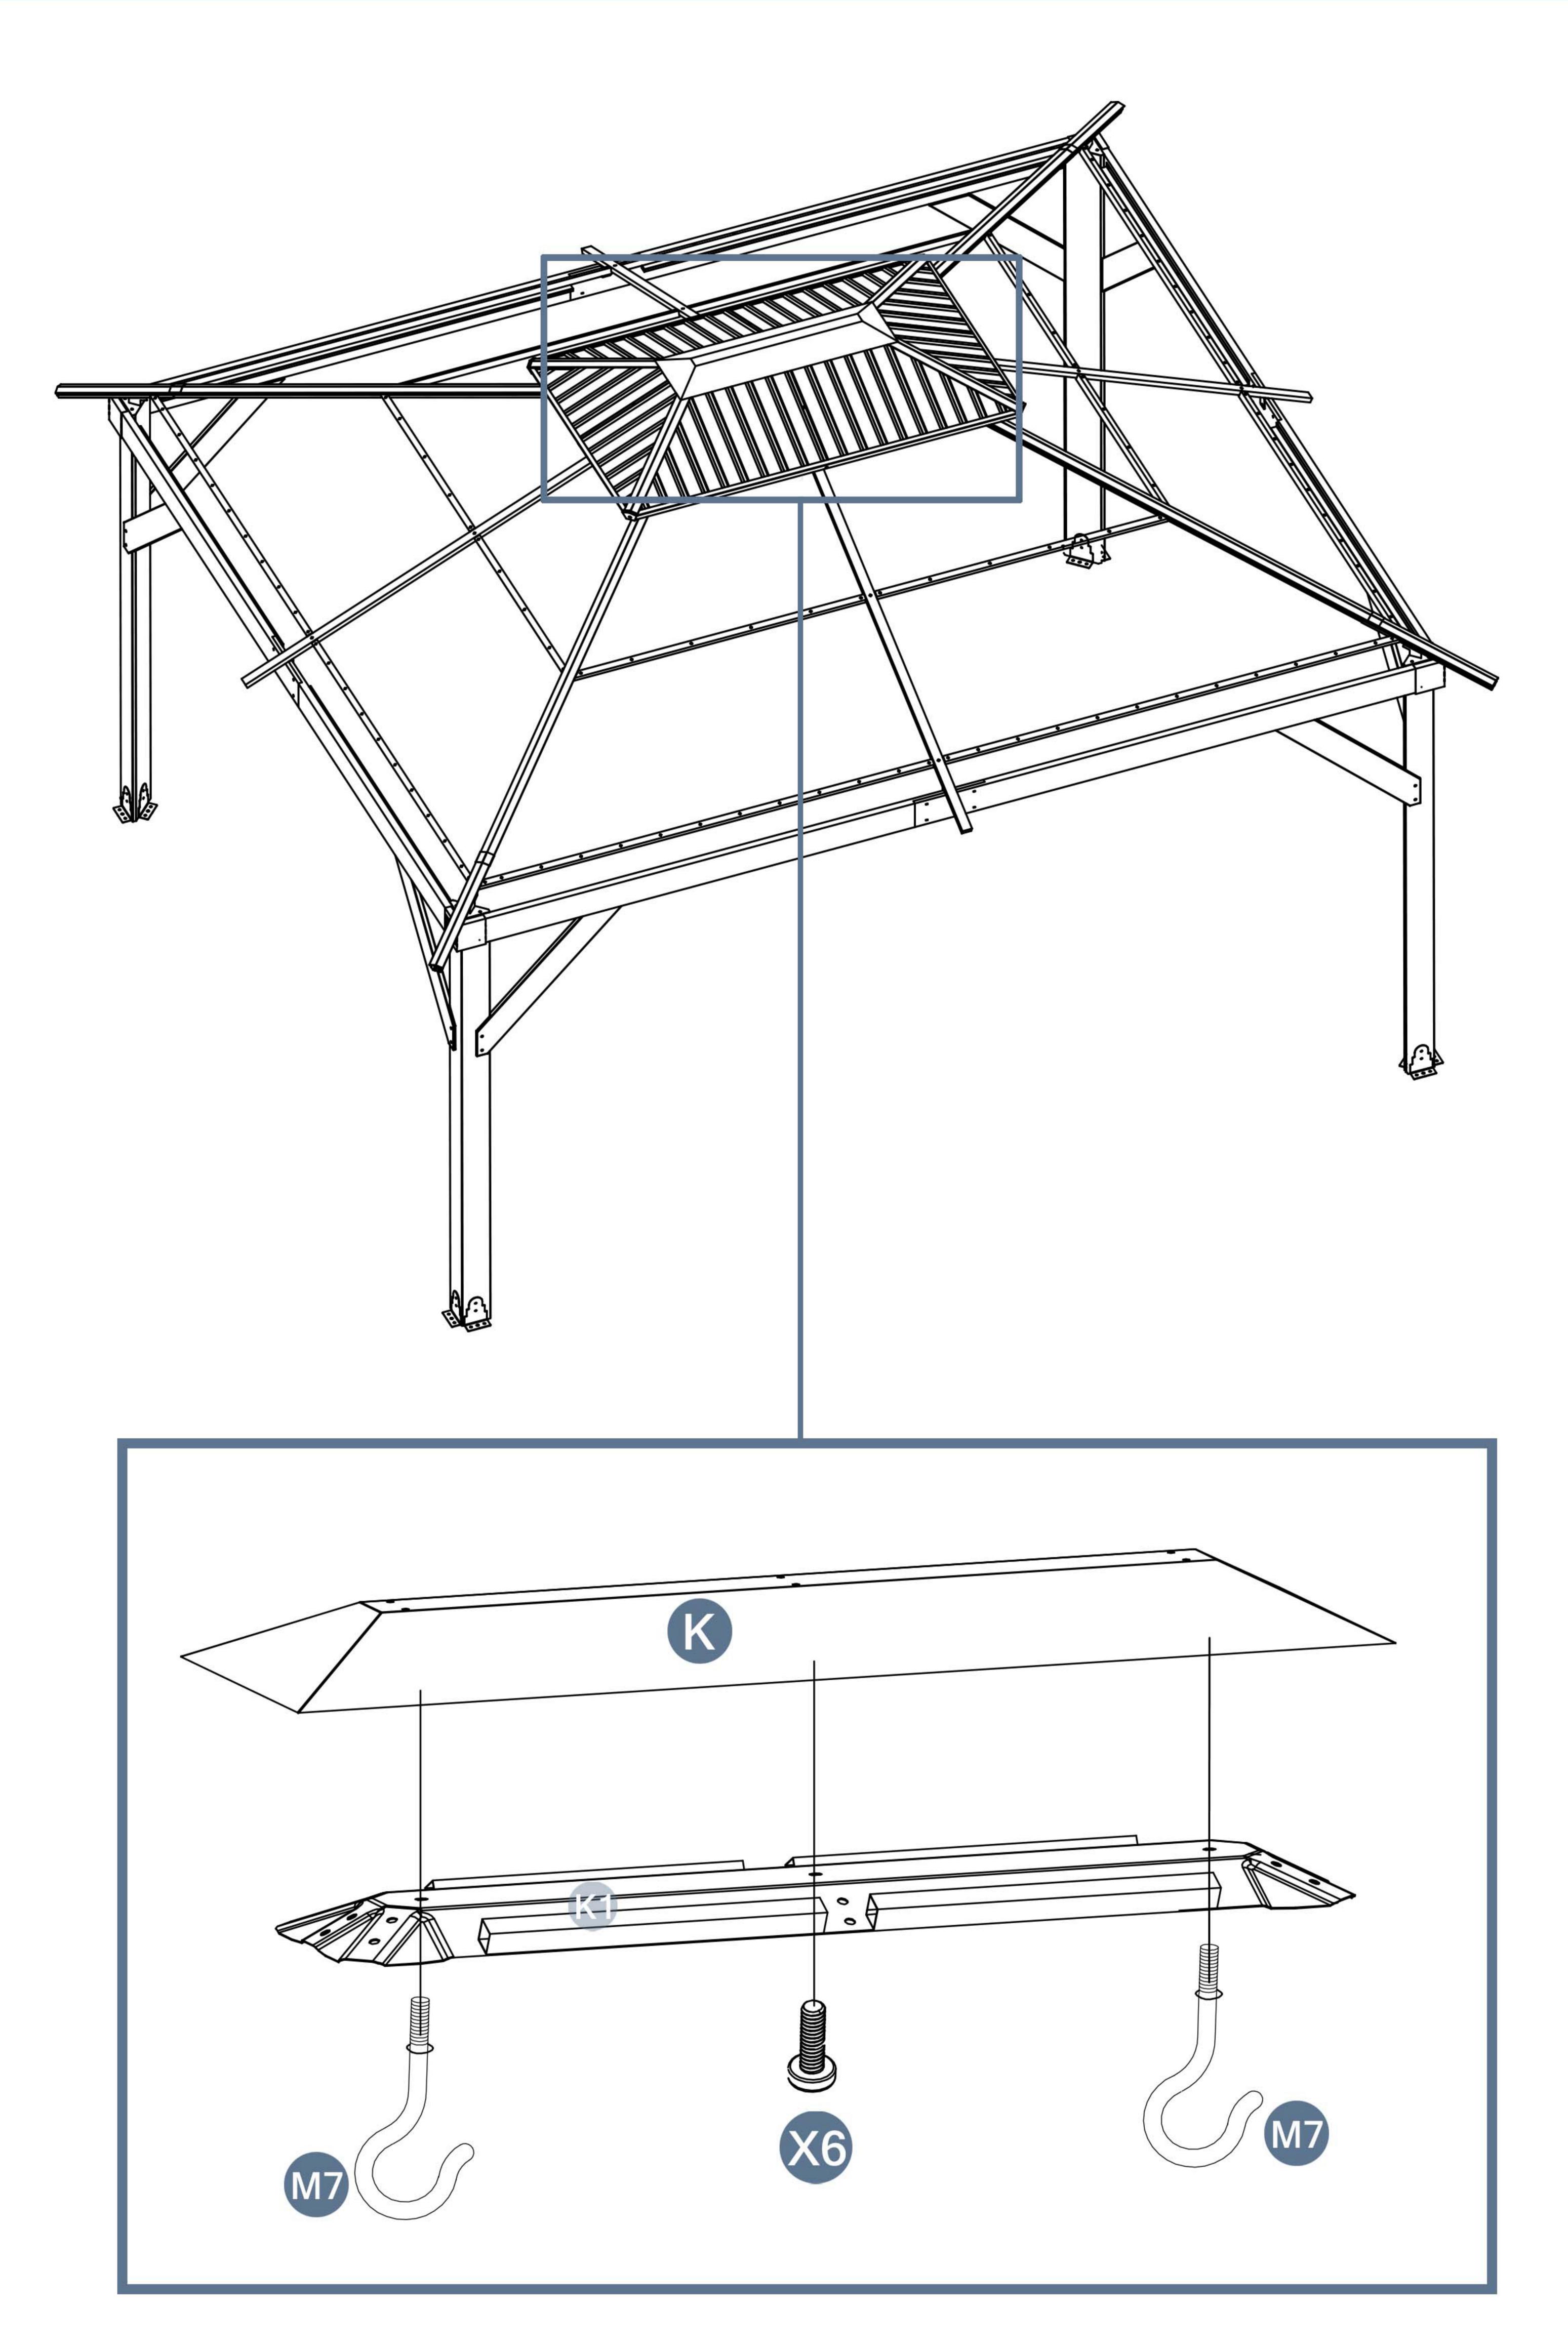


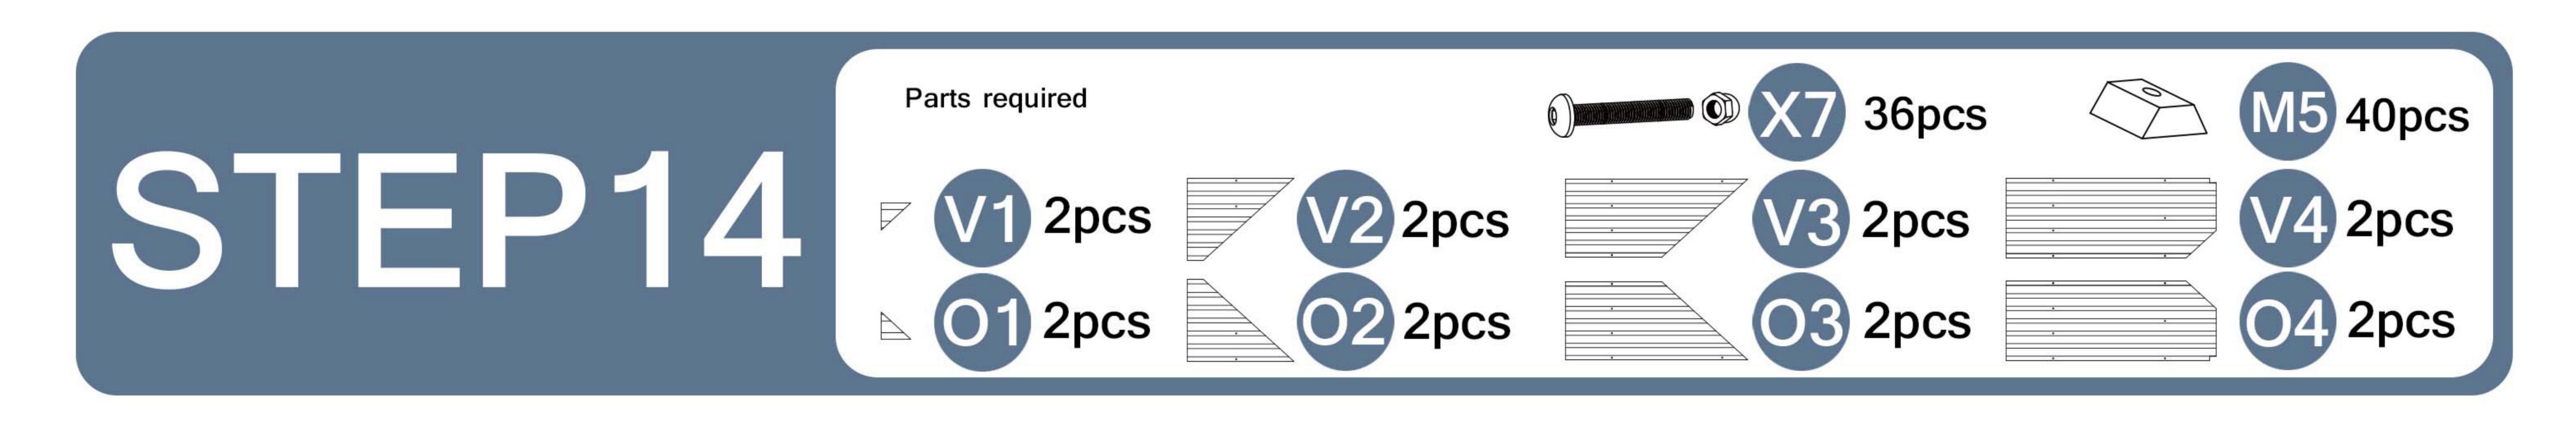




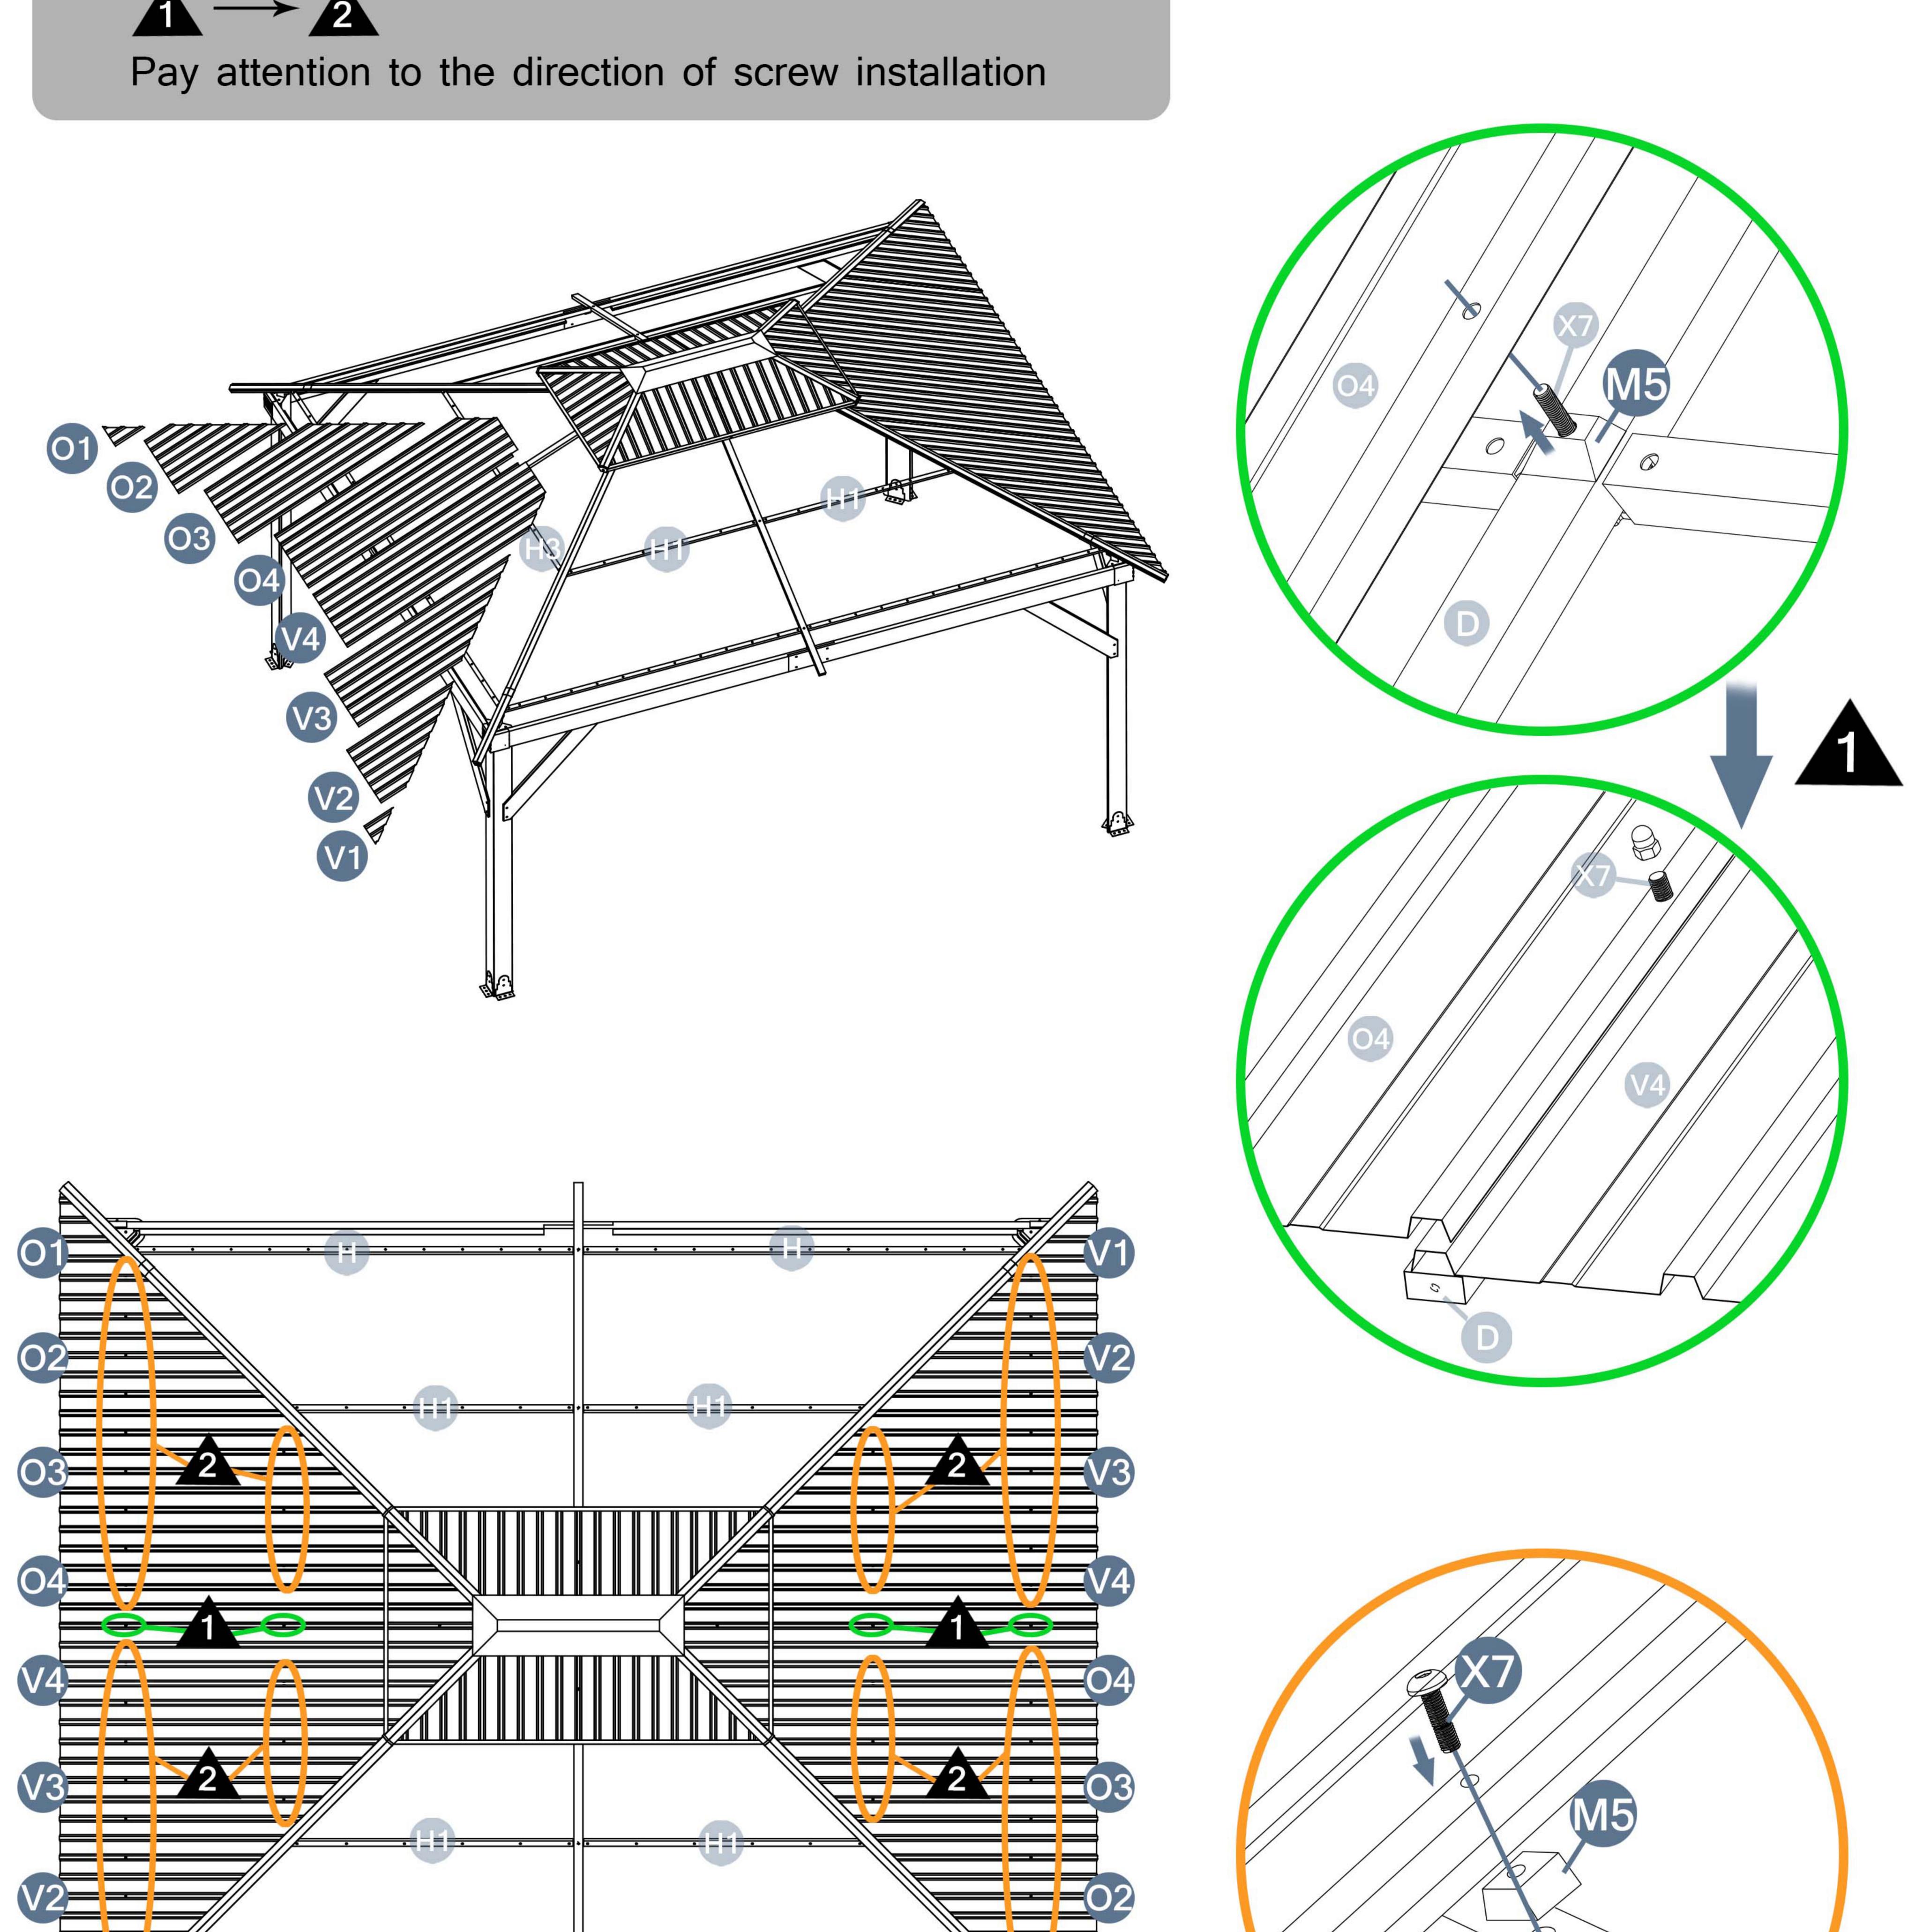


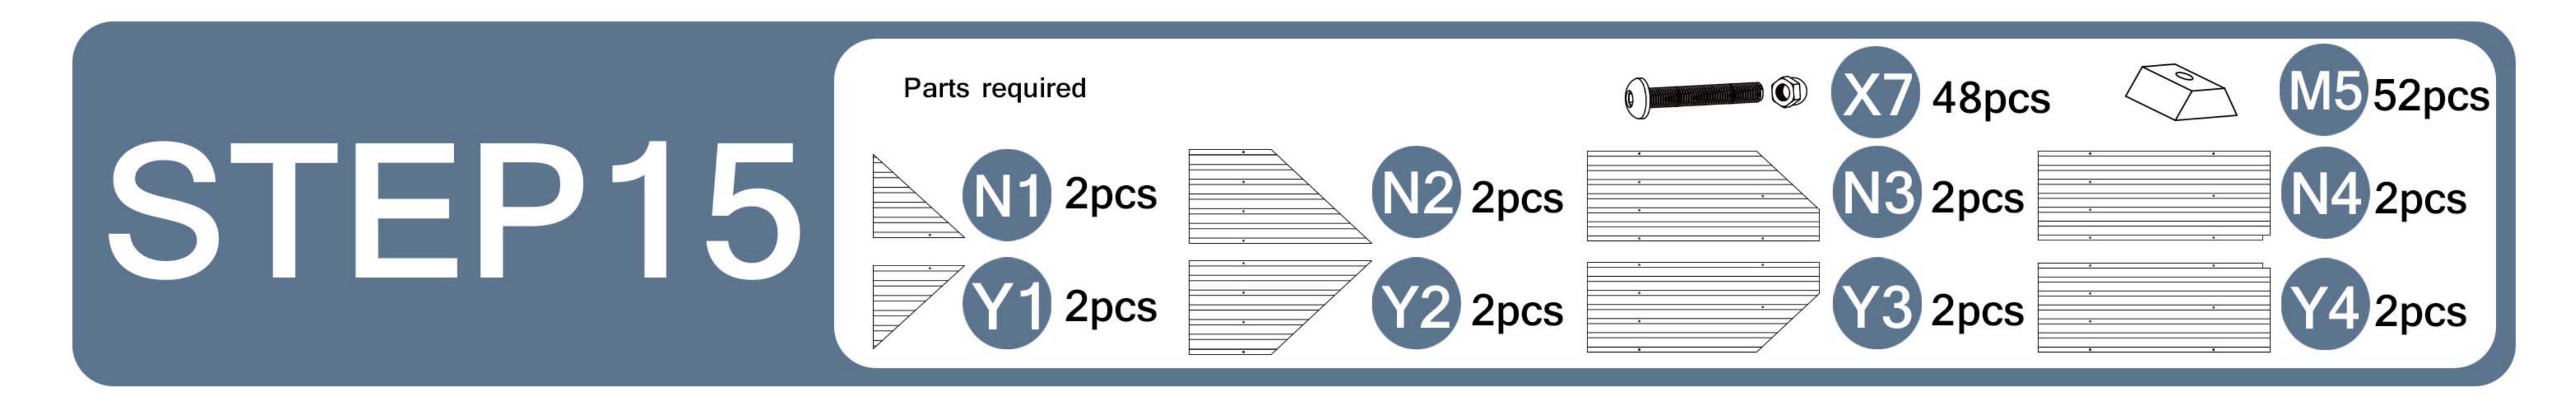


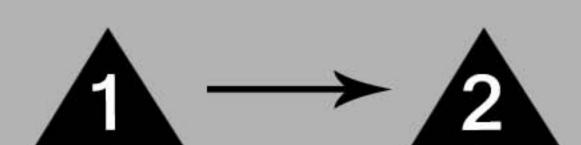


Pay attention to the direction of screw installation

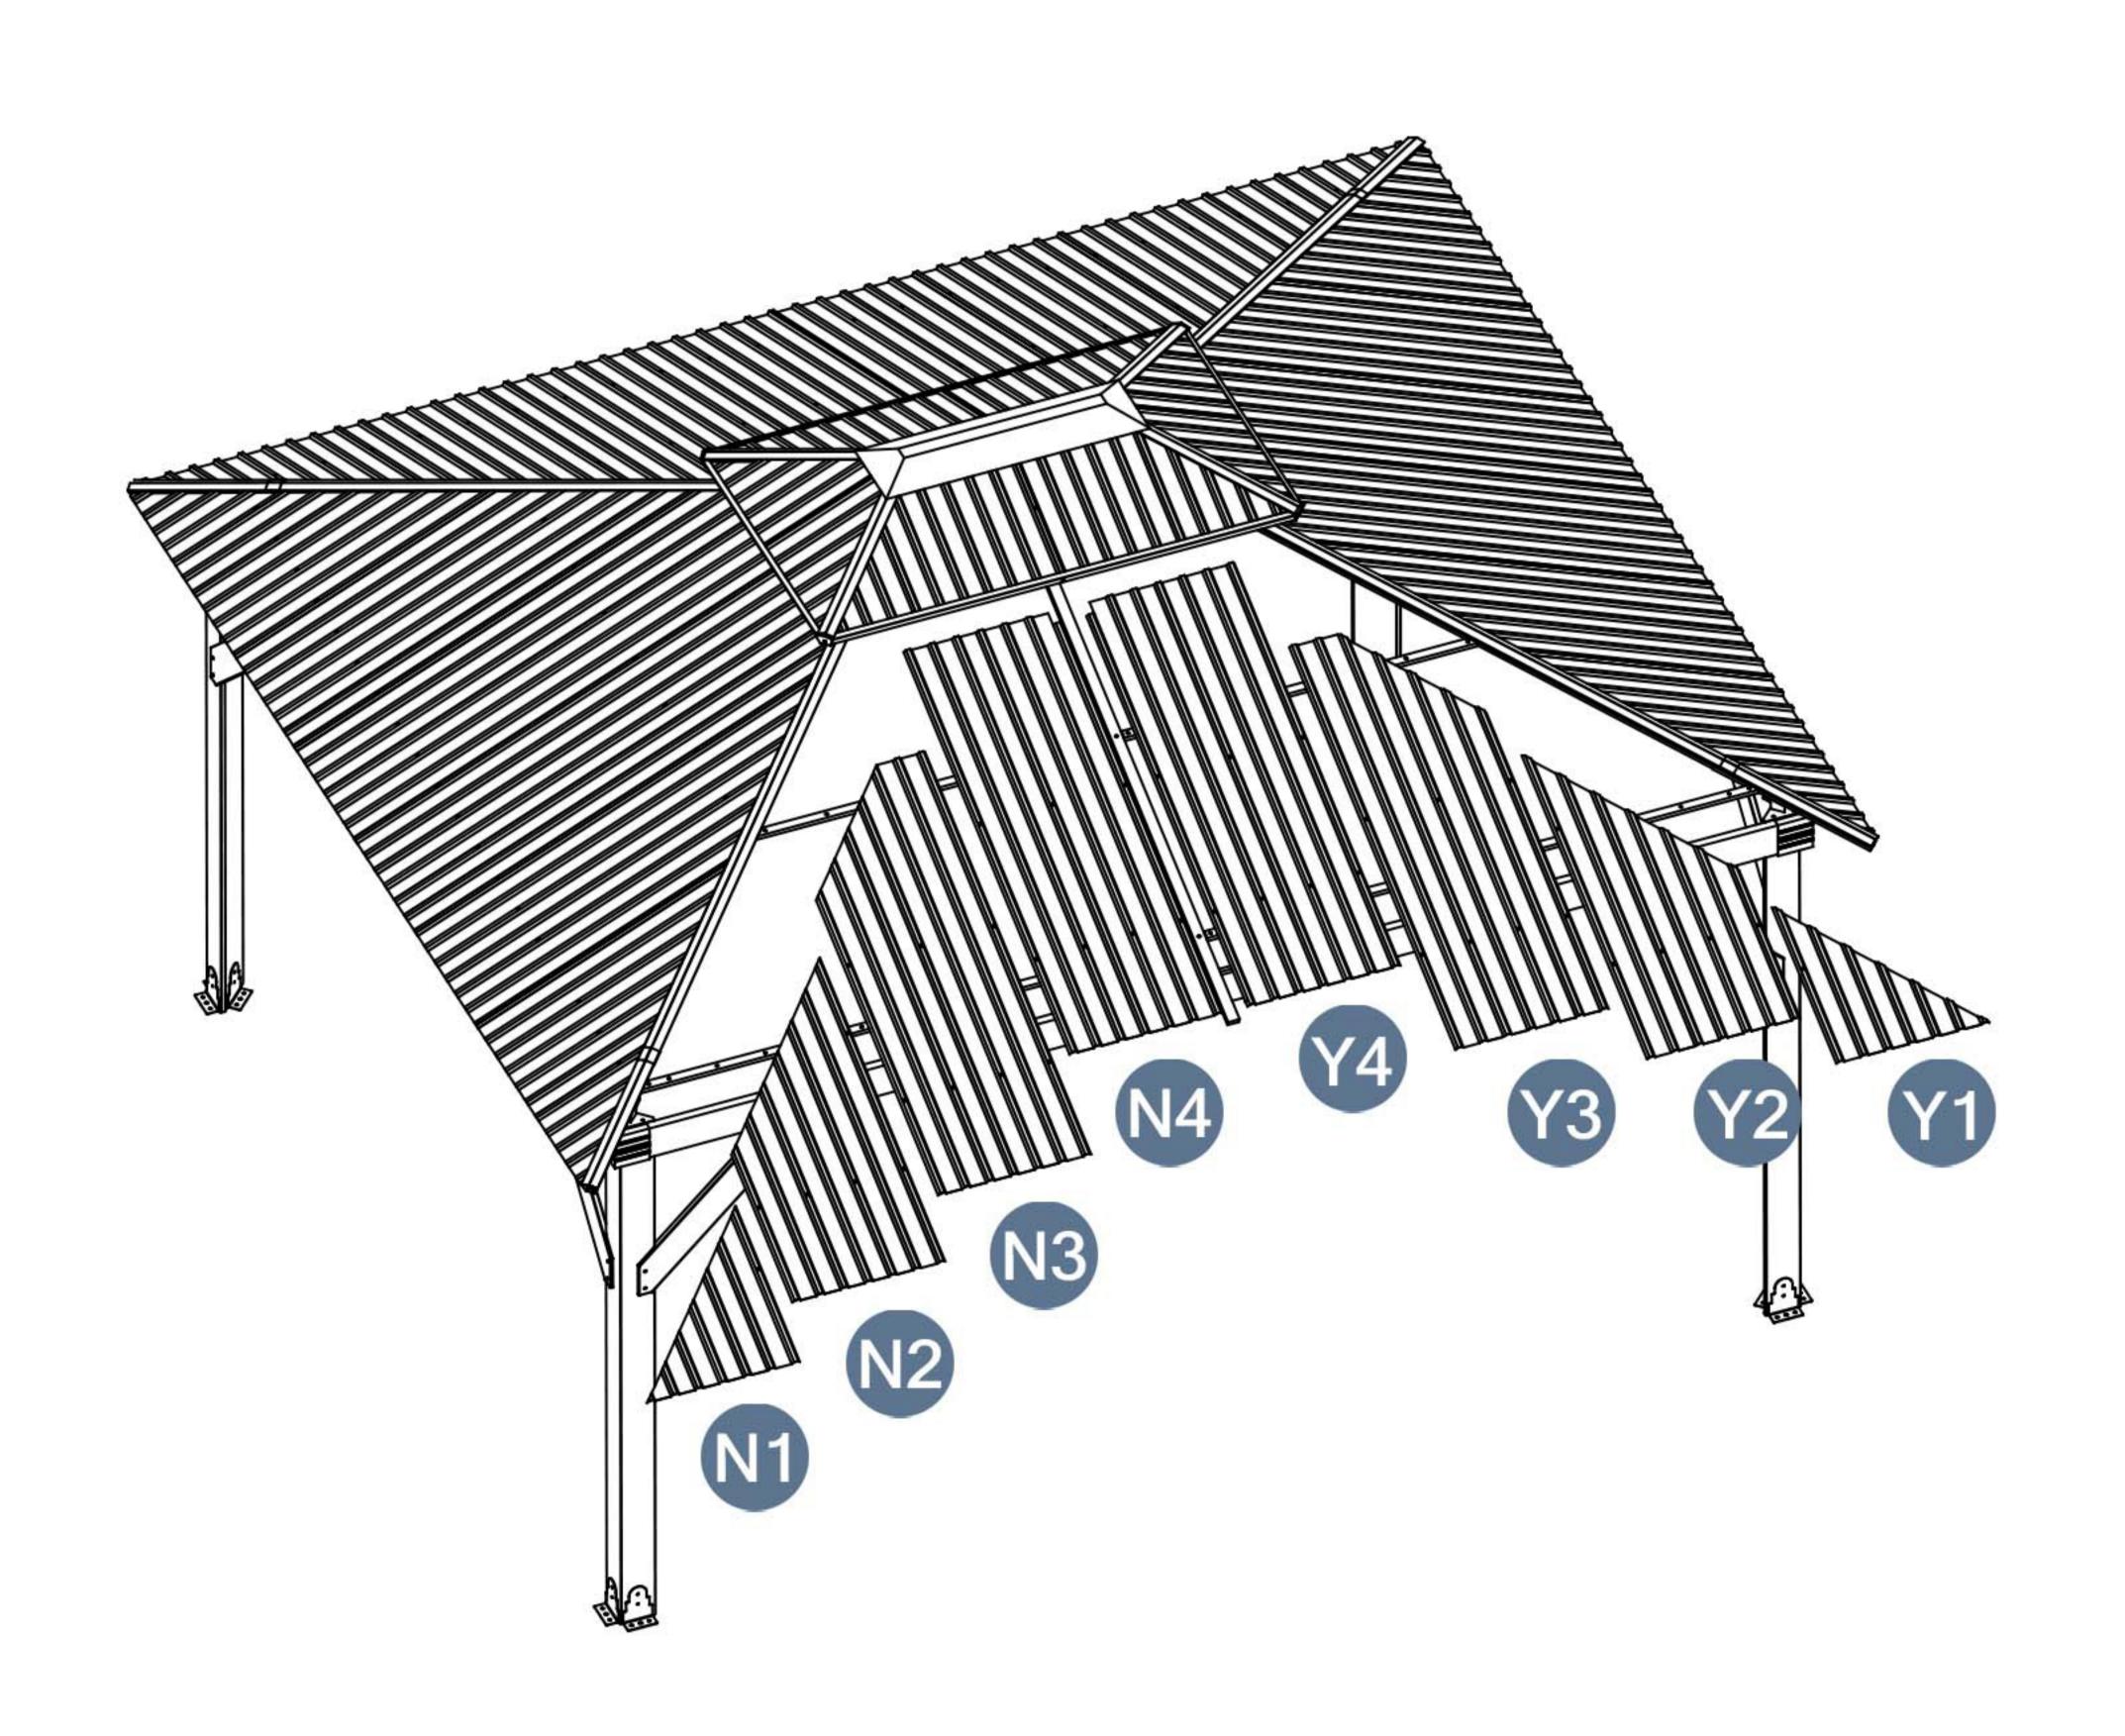

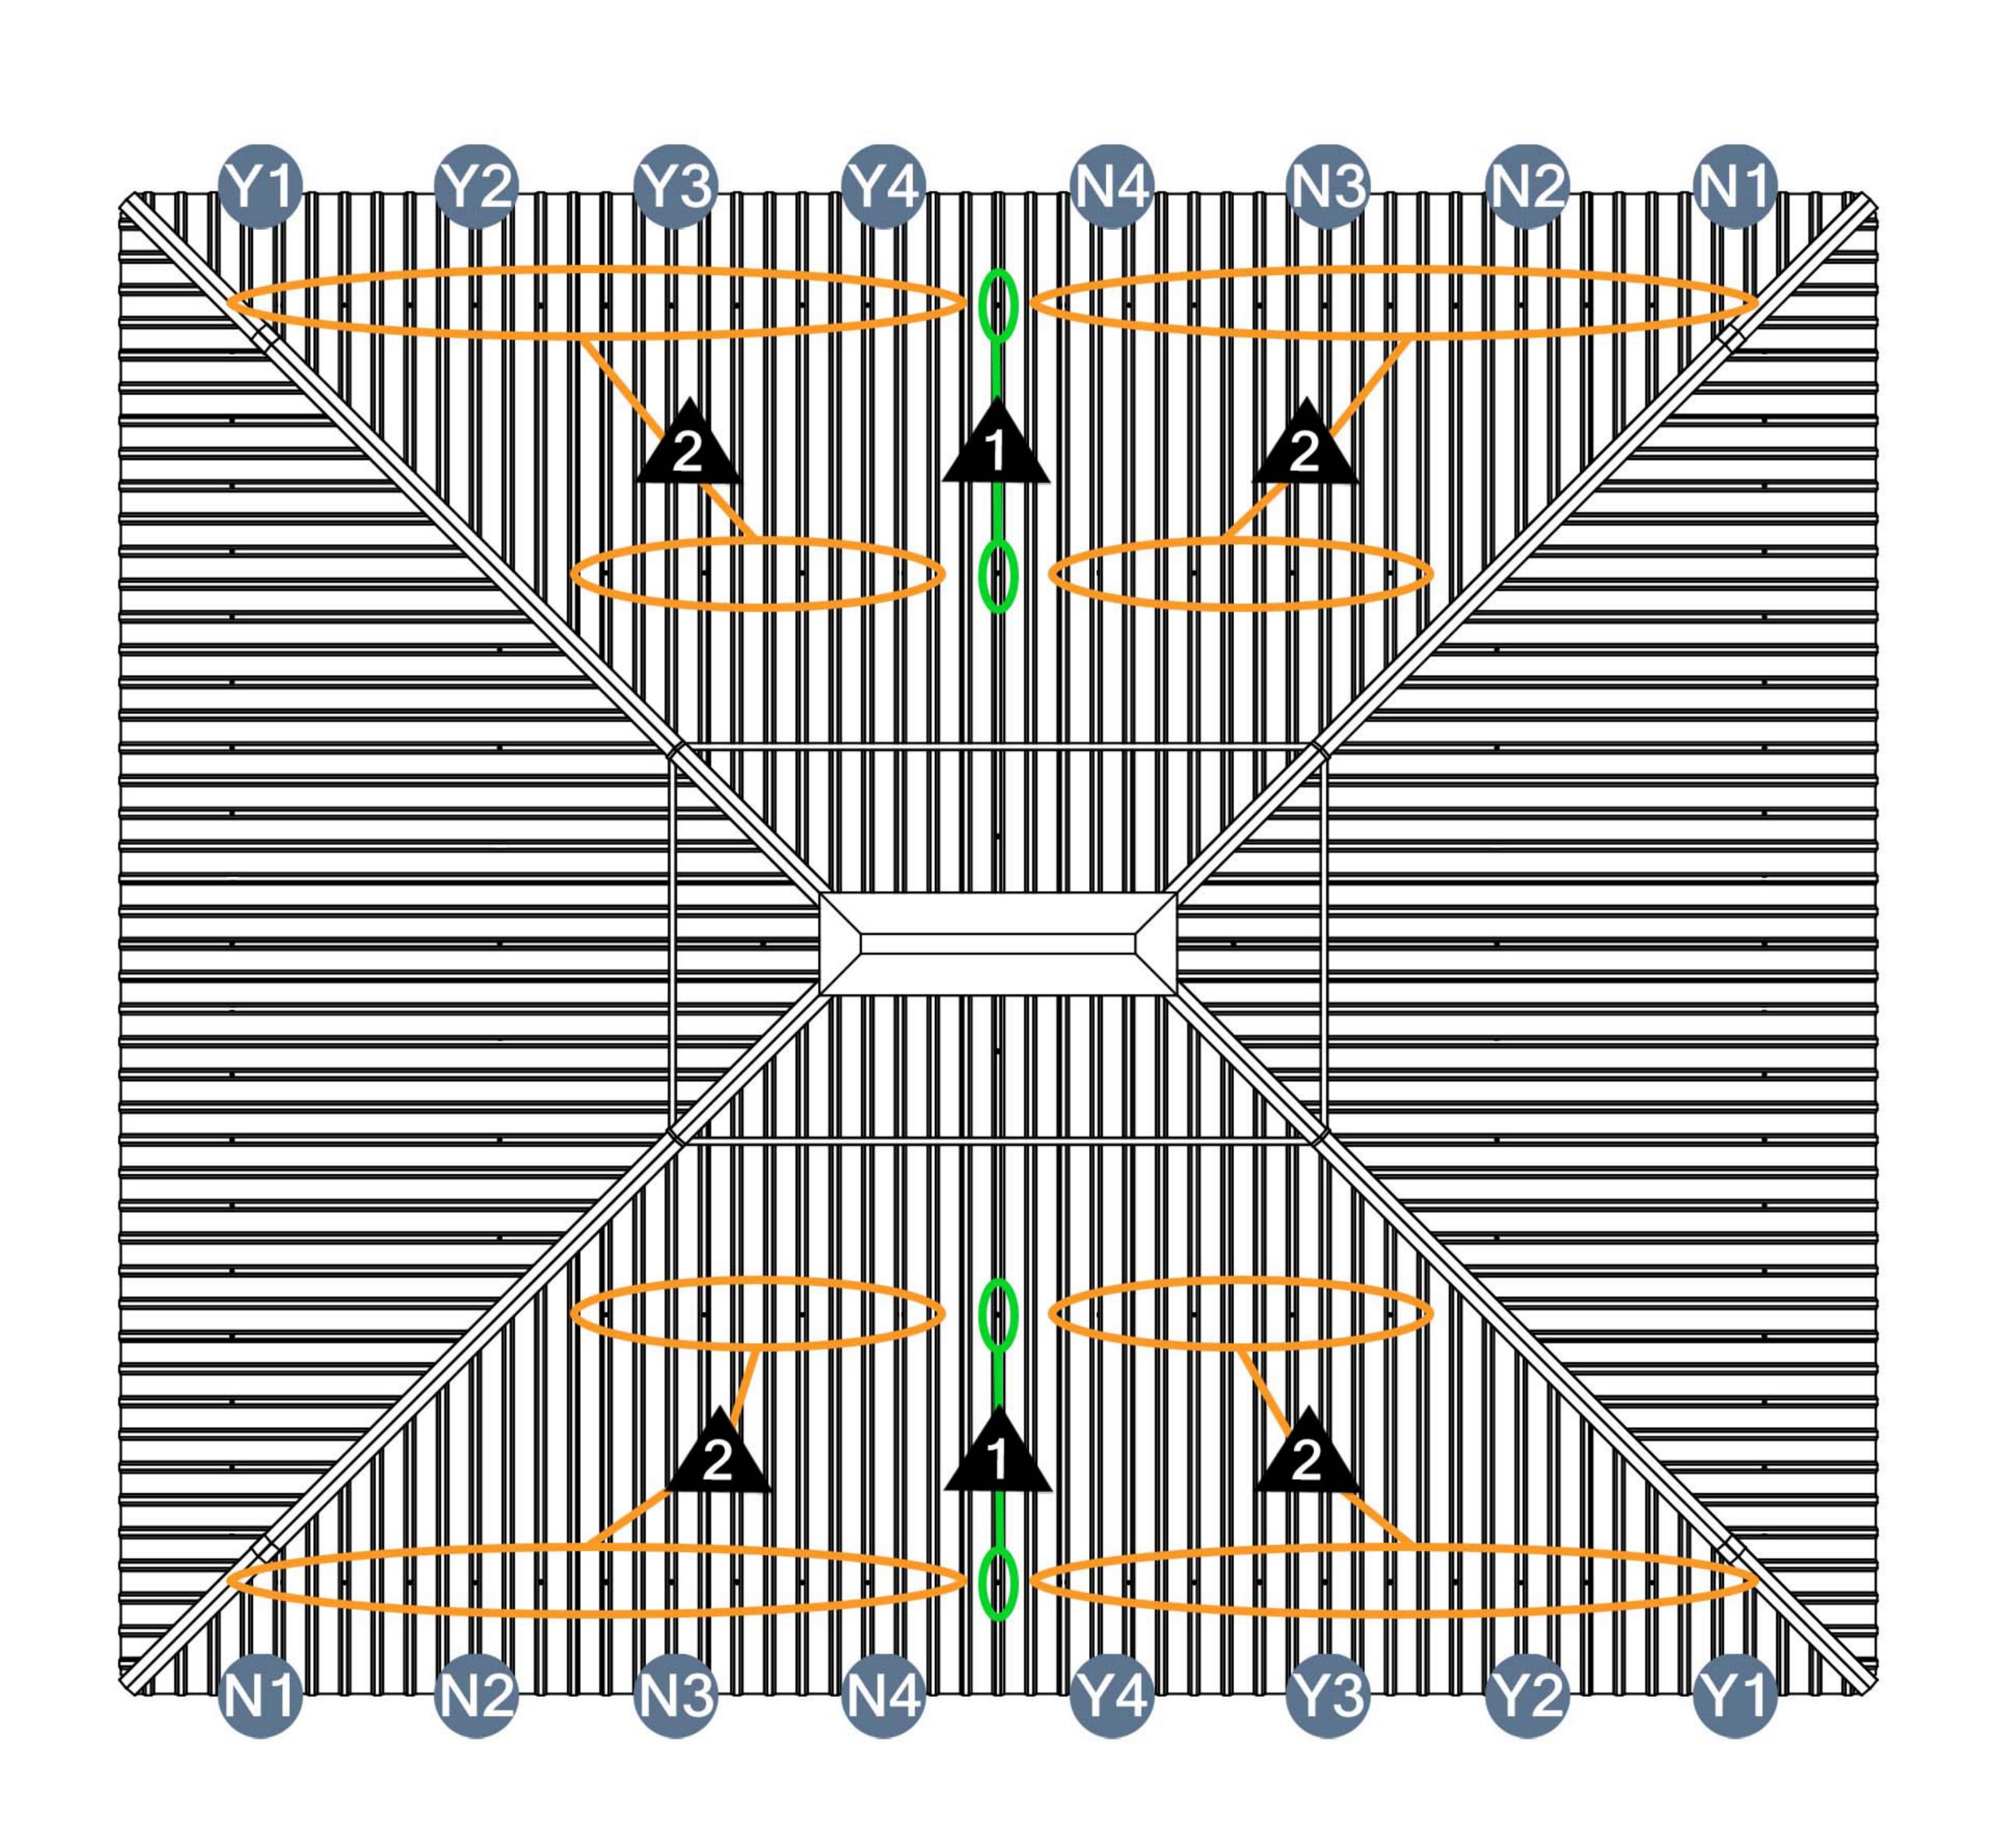

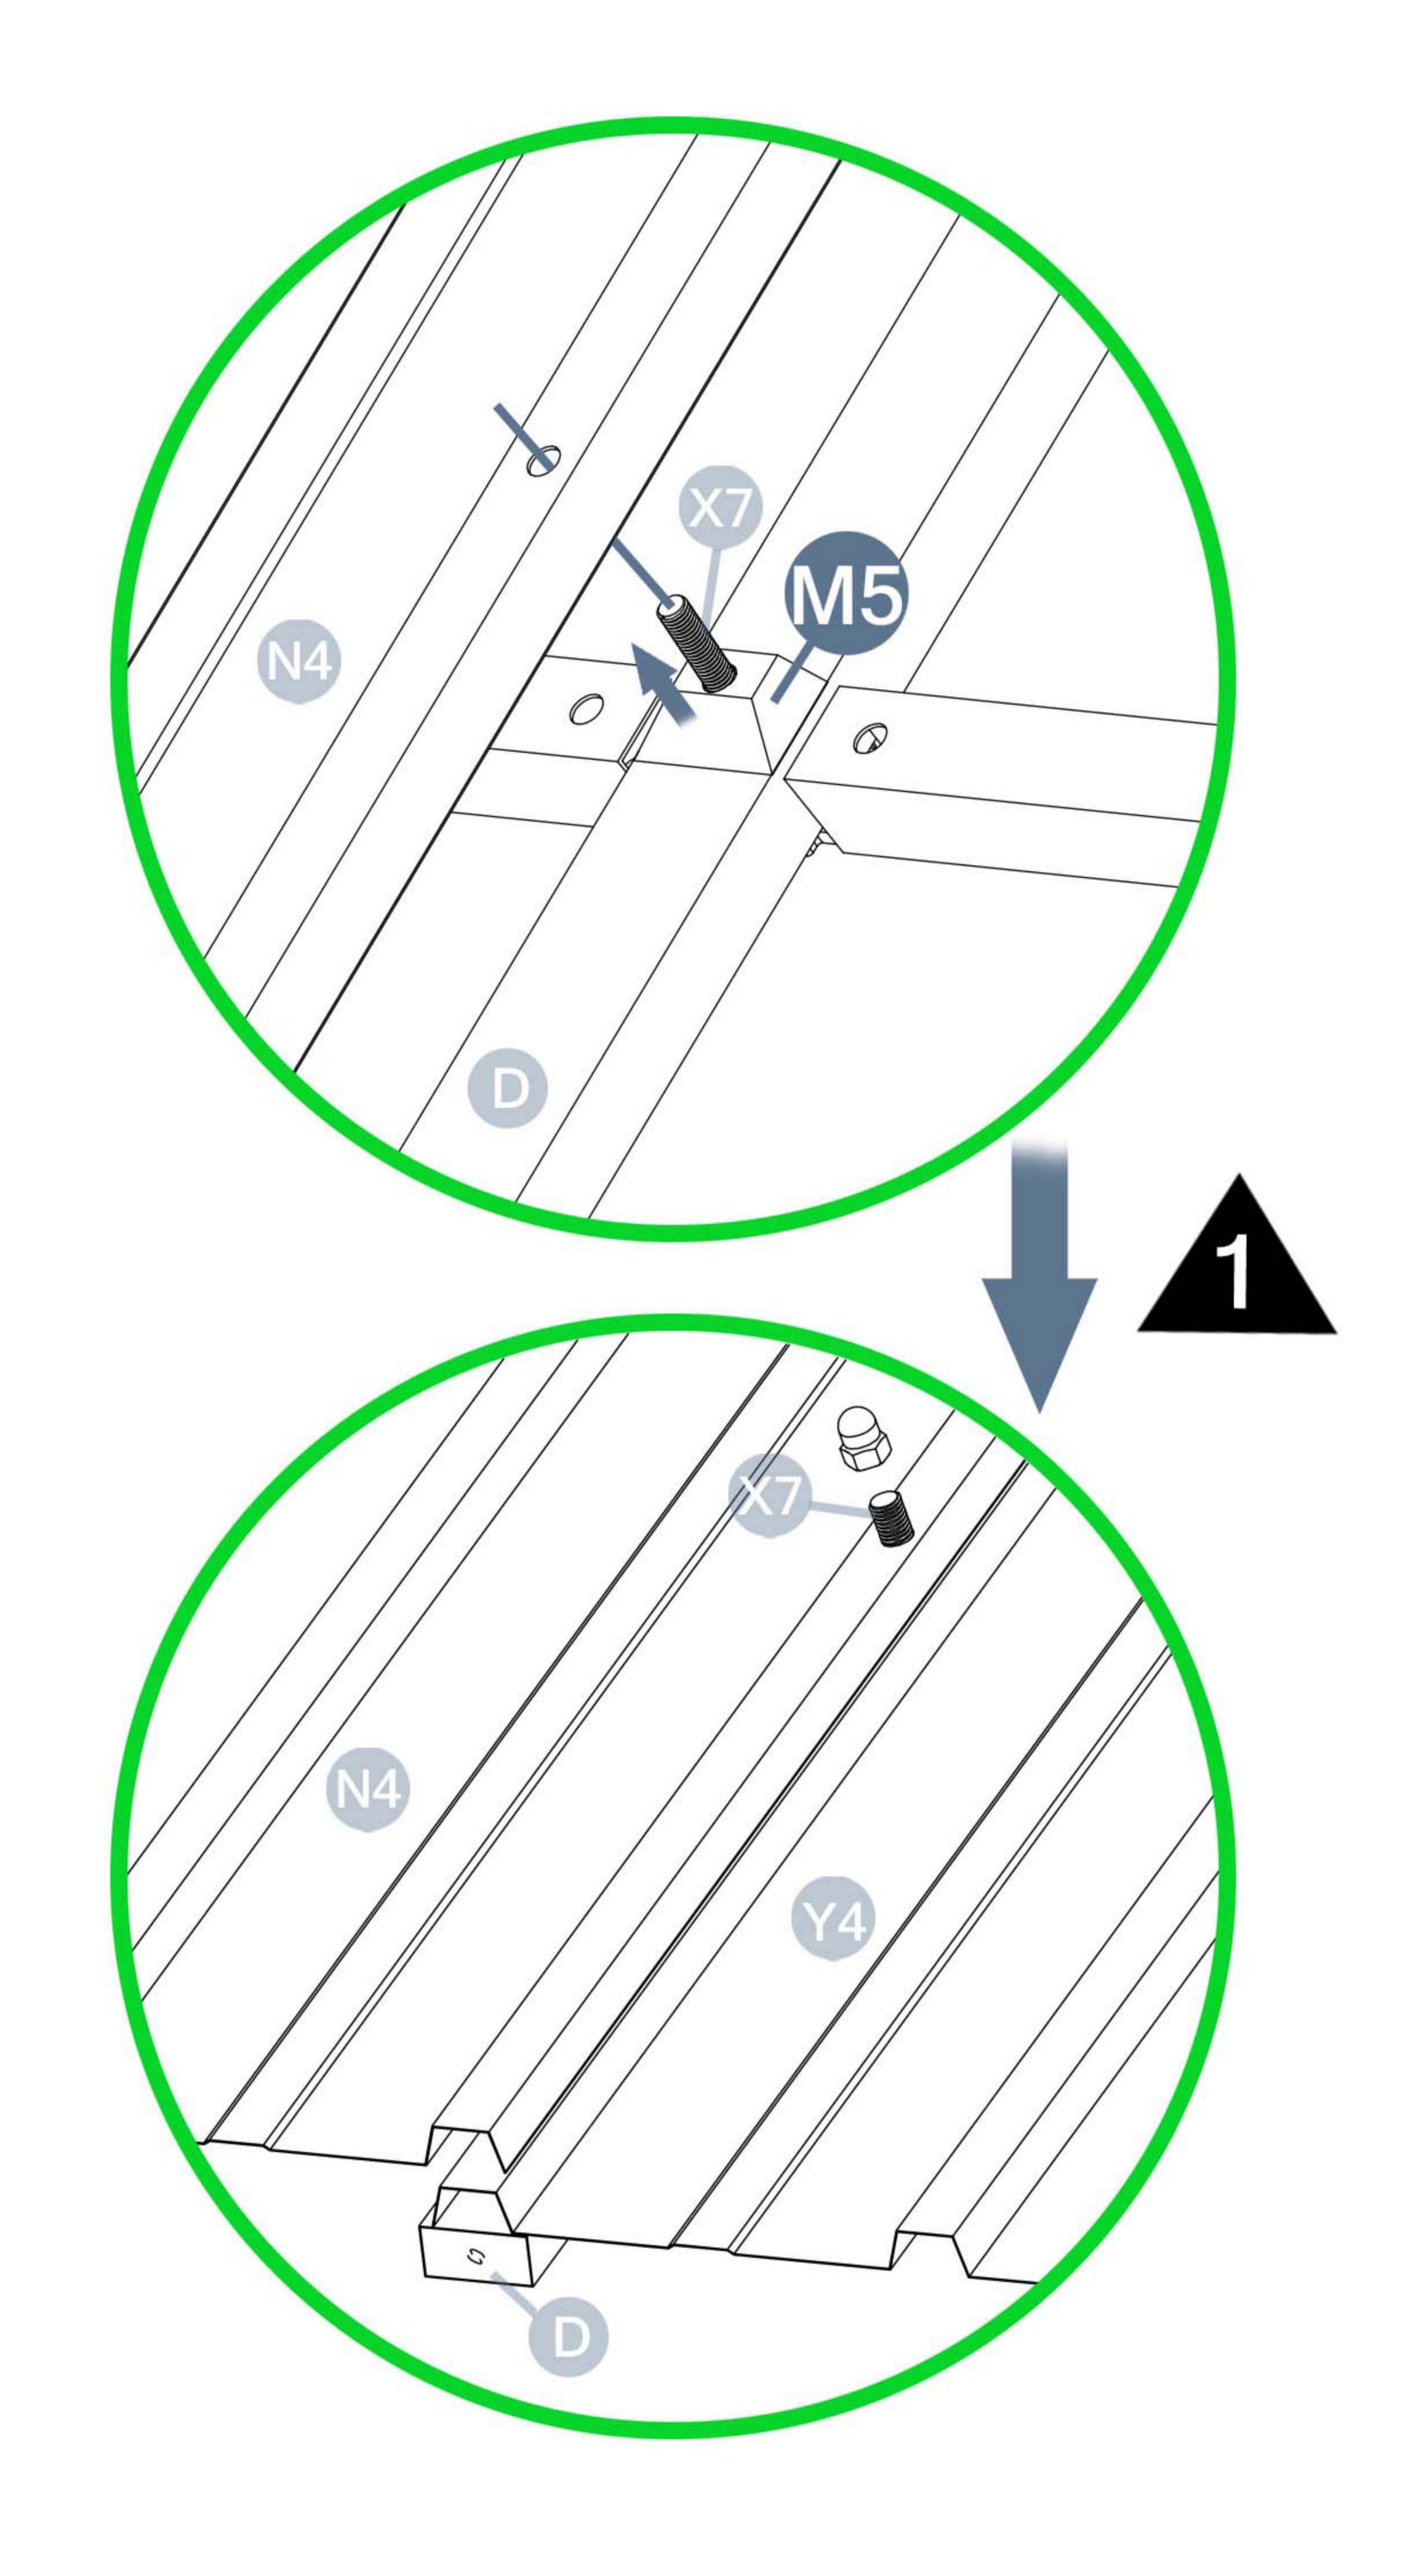


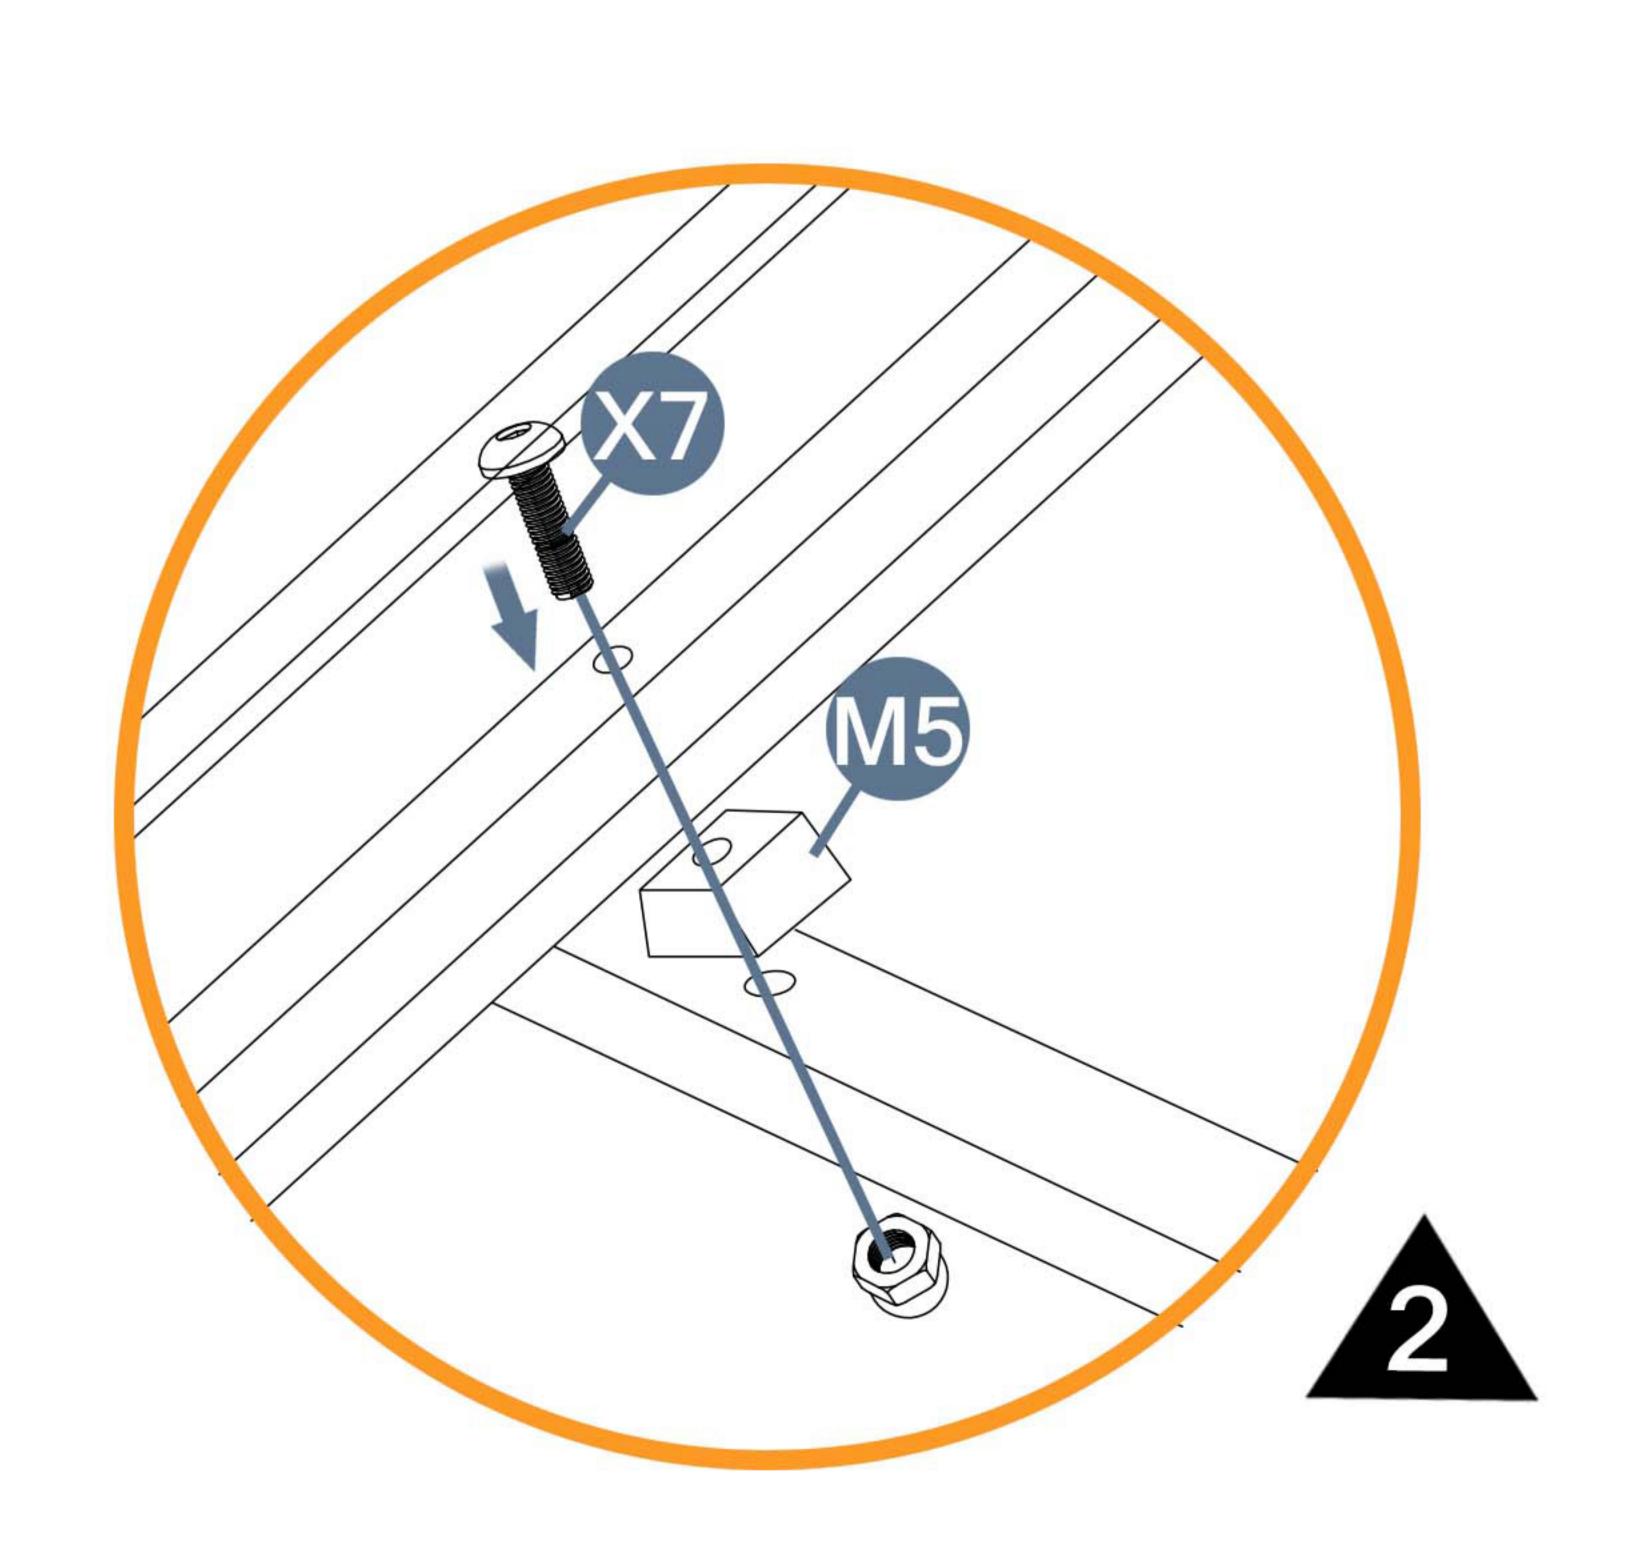



# STEP16 Parts required \$\int(\frac{1}{2}\) \times \frac{1}{2}\) \times \frac{1}{2}\) \times \frac{1}{2}\) \times \times \times \frac{1}{2}\) \times \times

#### $A \rightarrow A$


To better align the screws for practical situations, do not fully tighten screws initially.

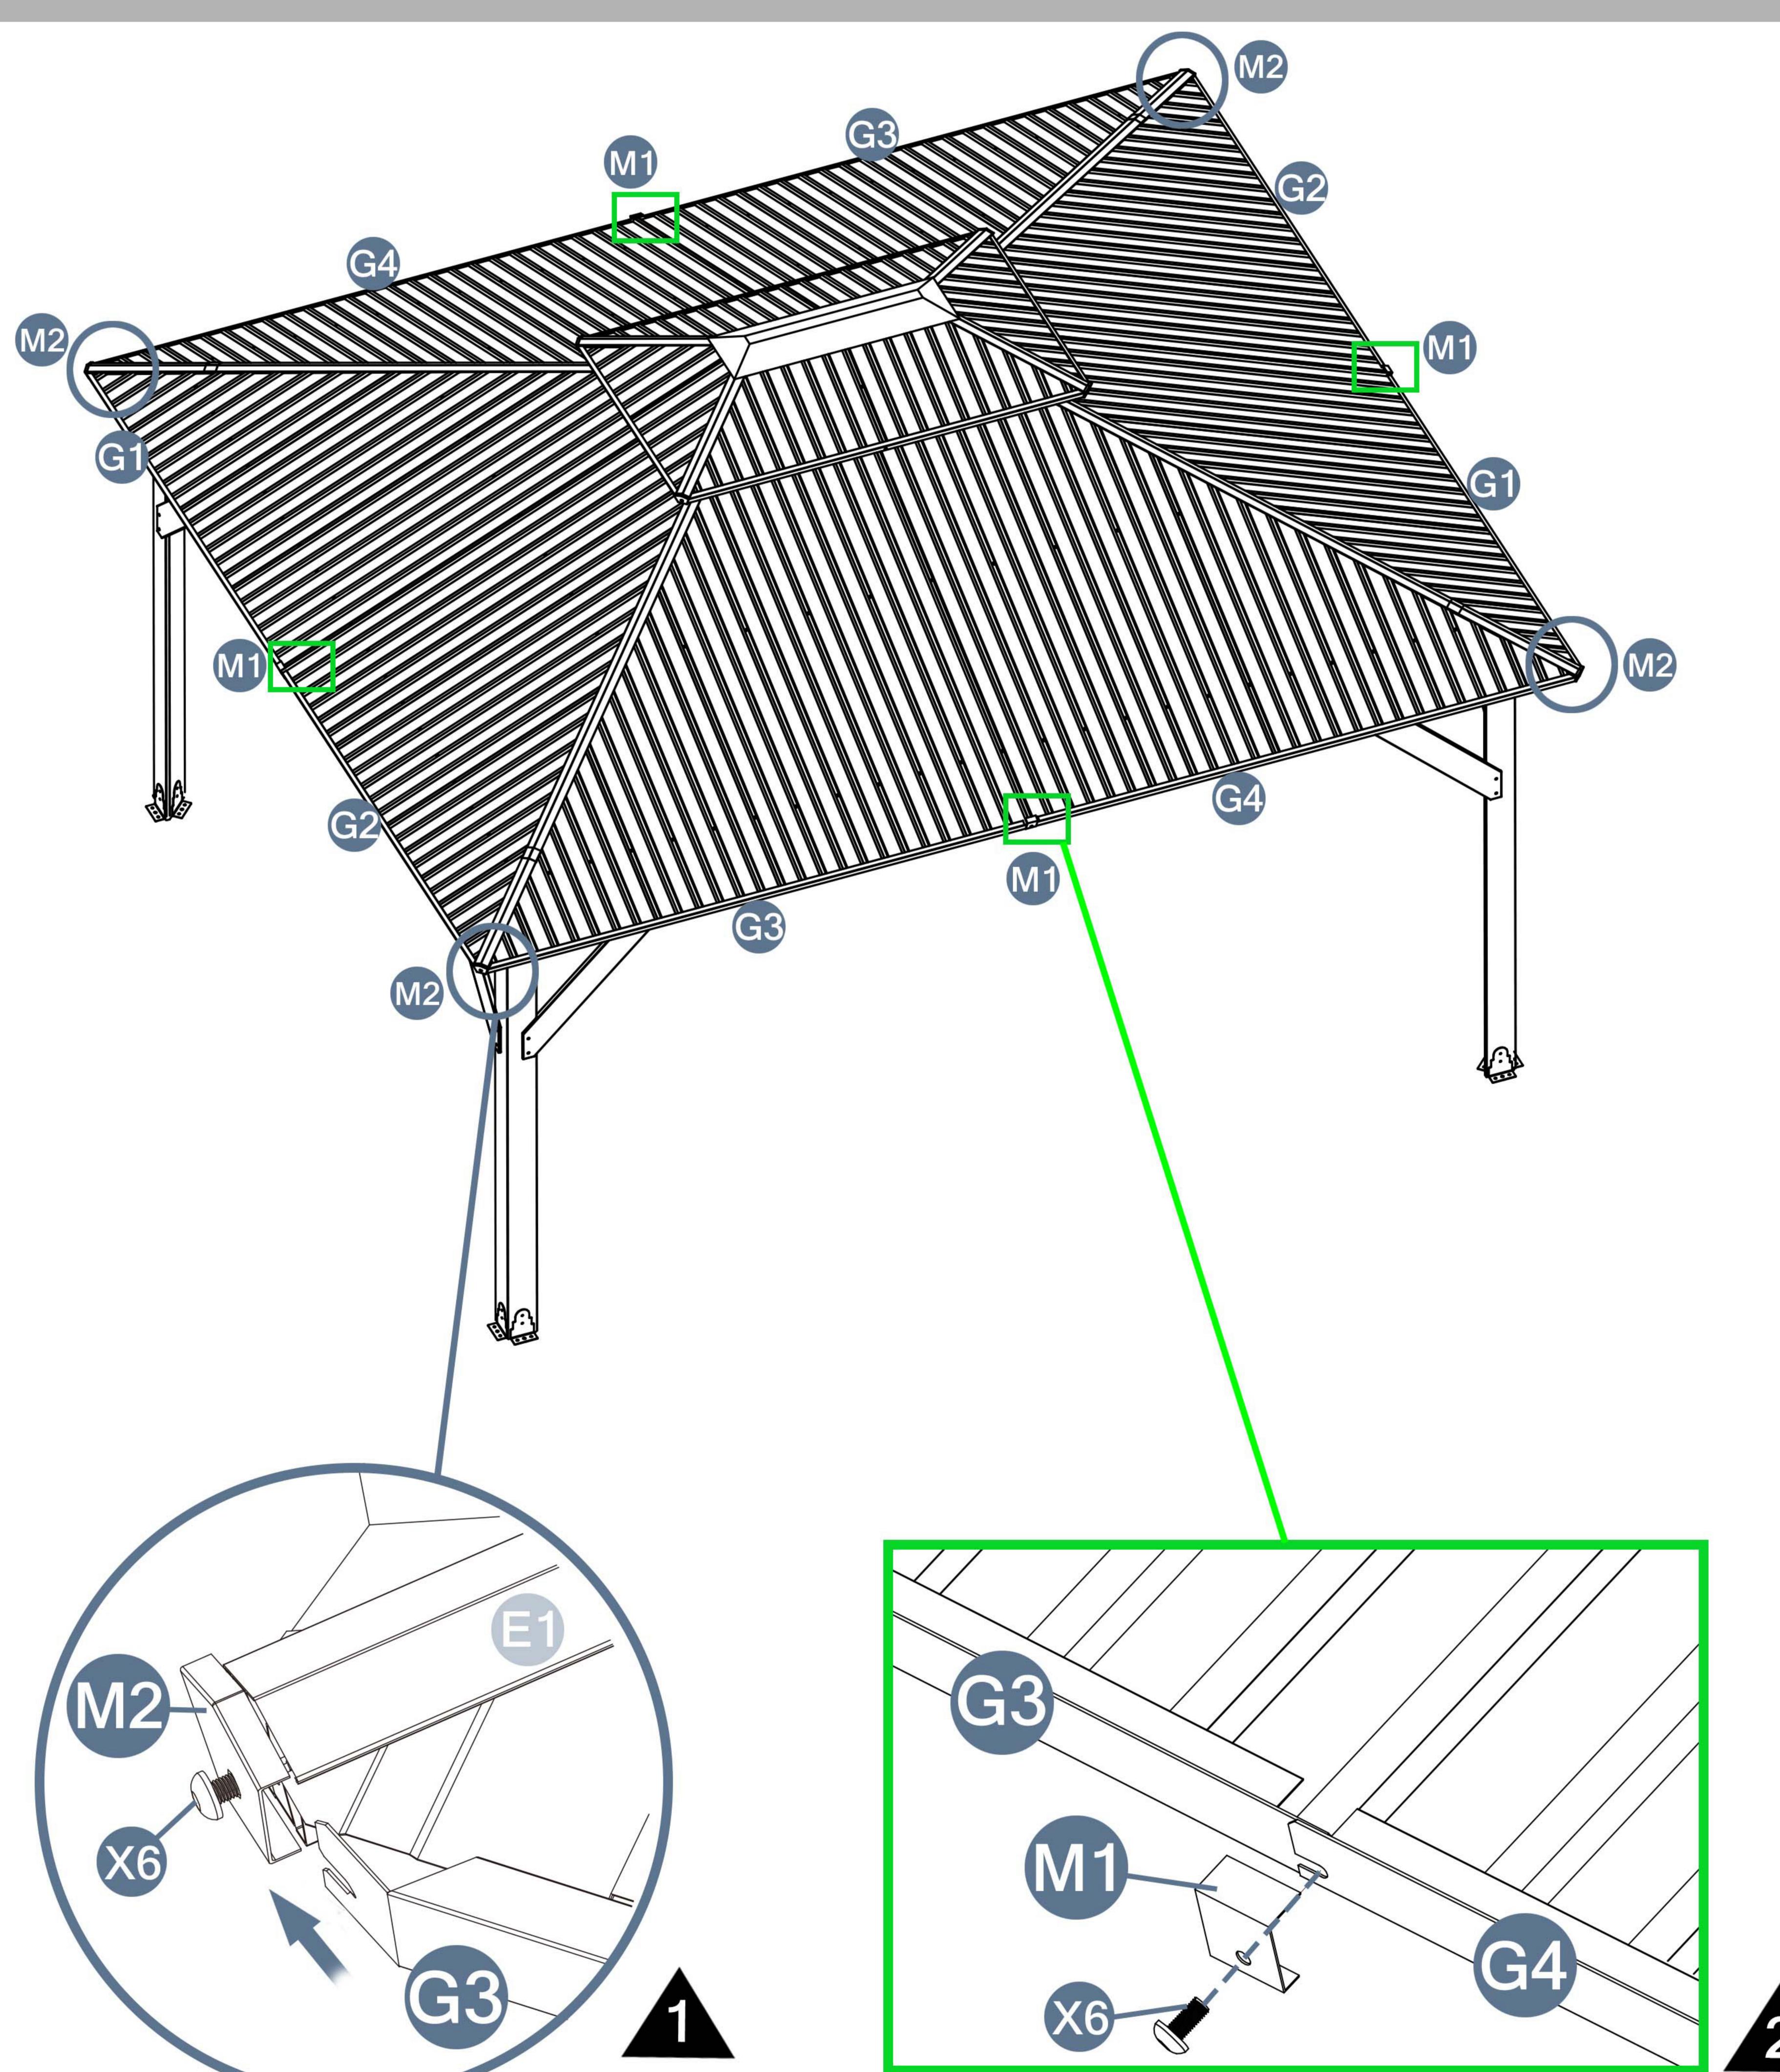


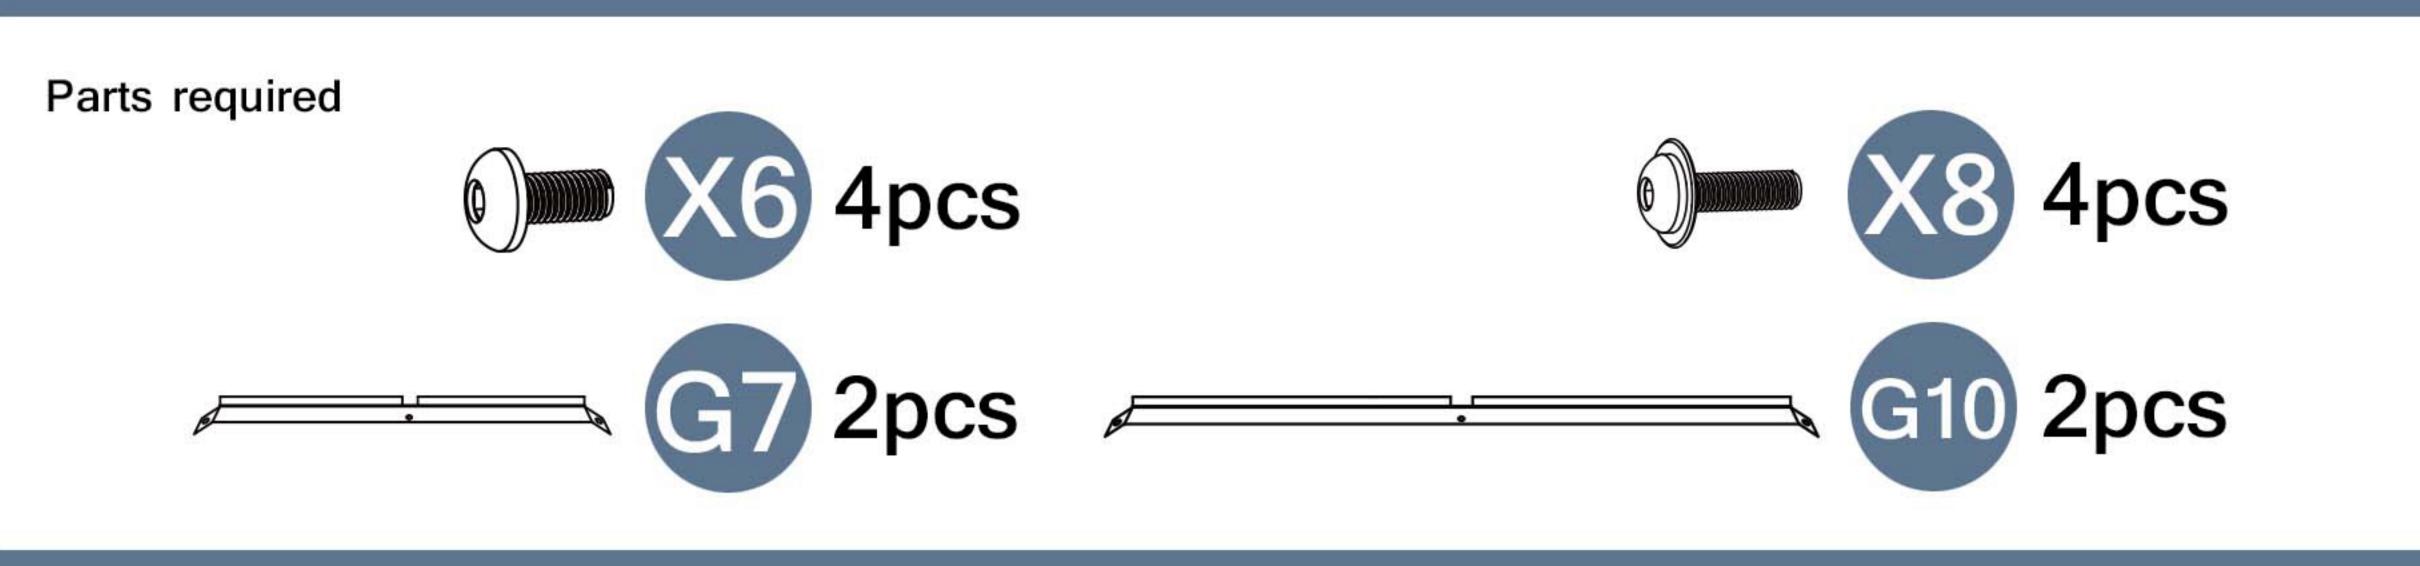


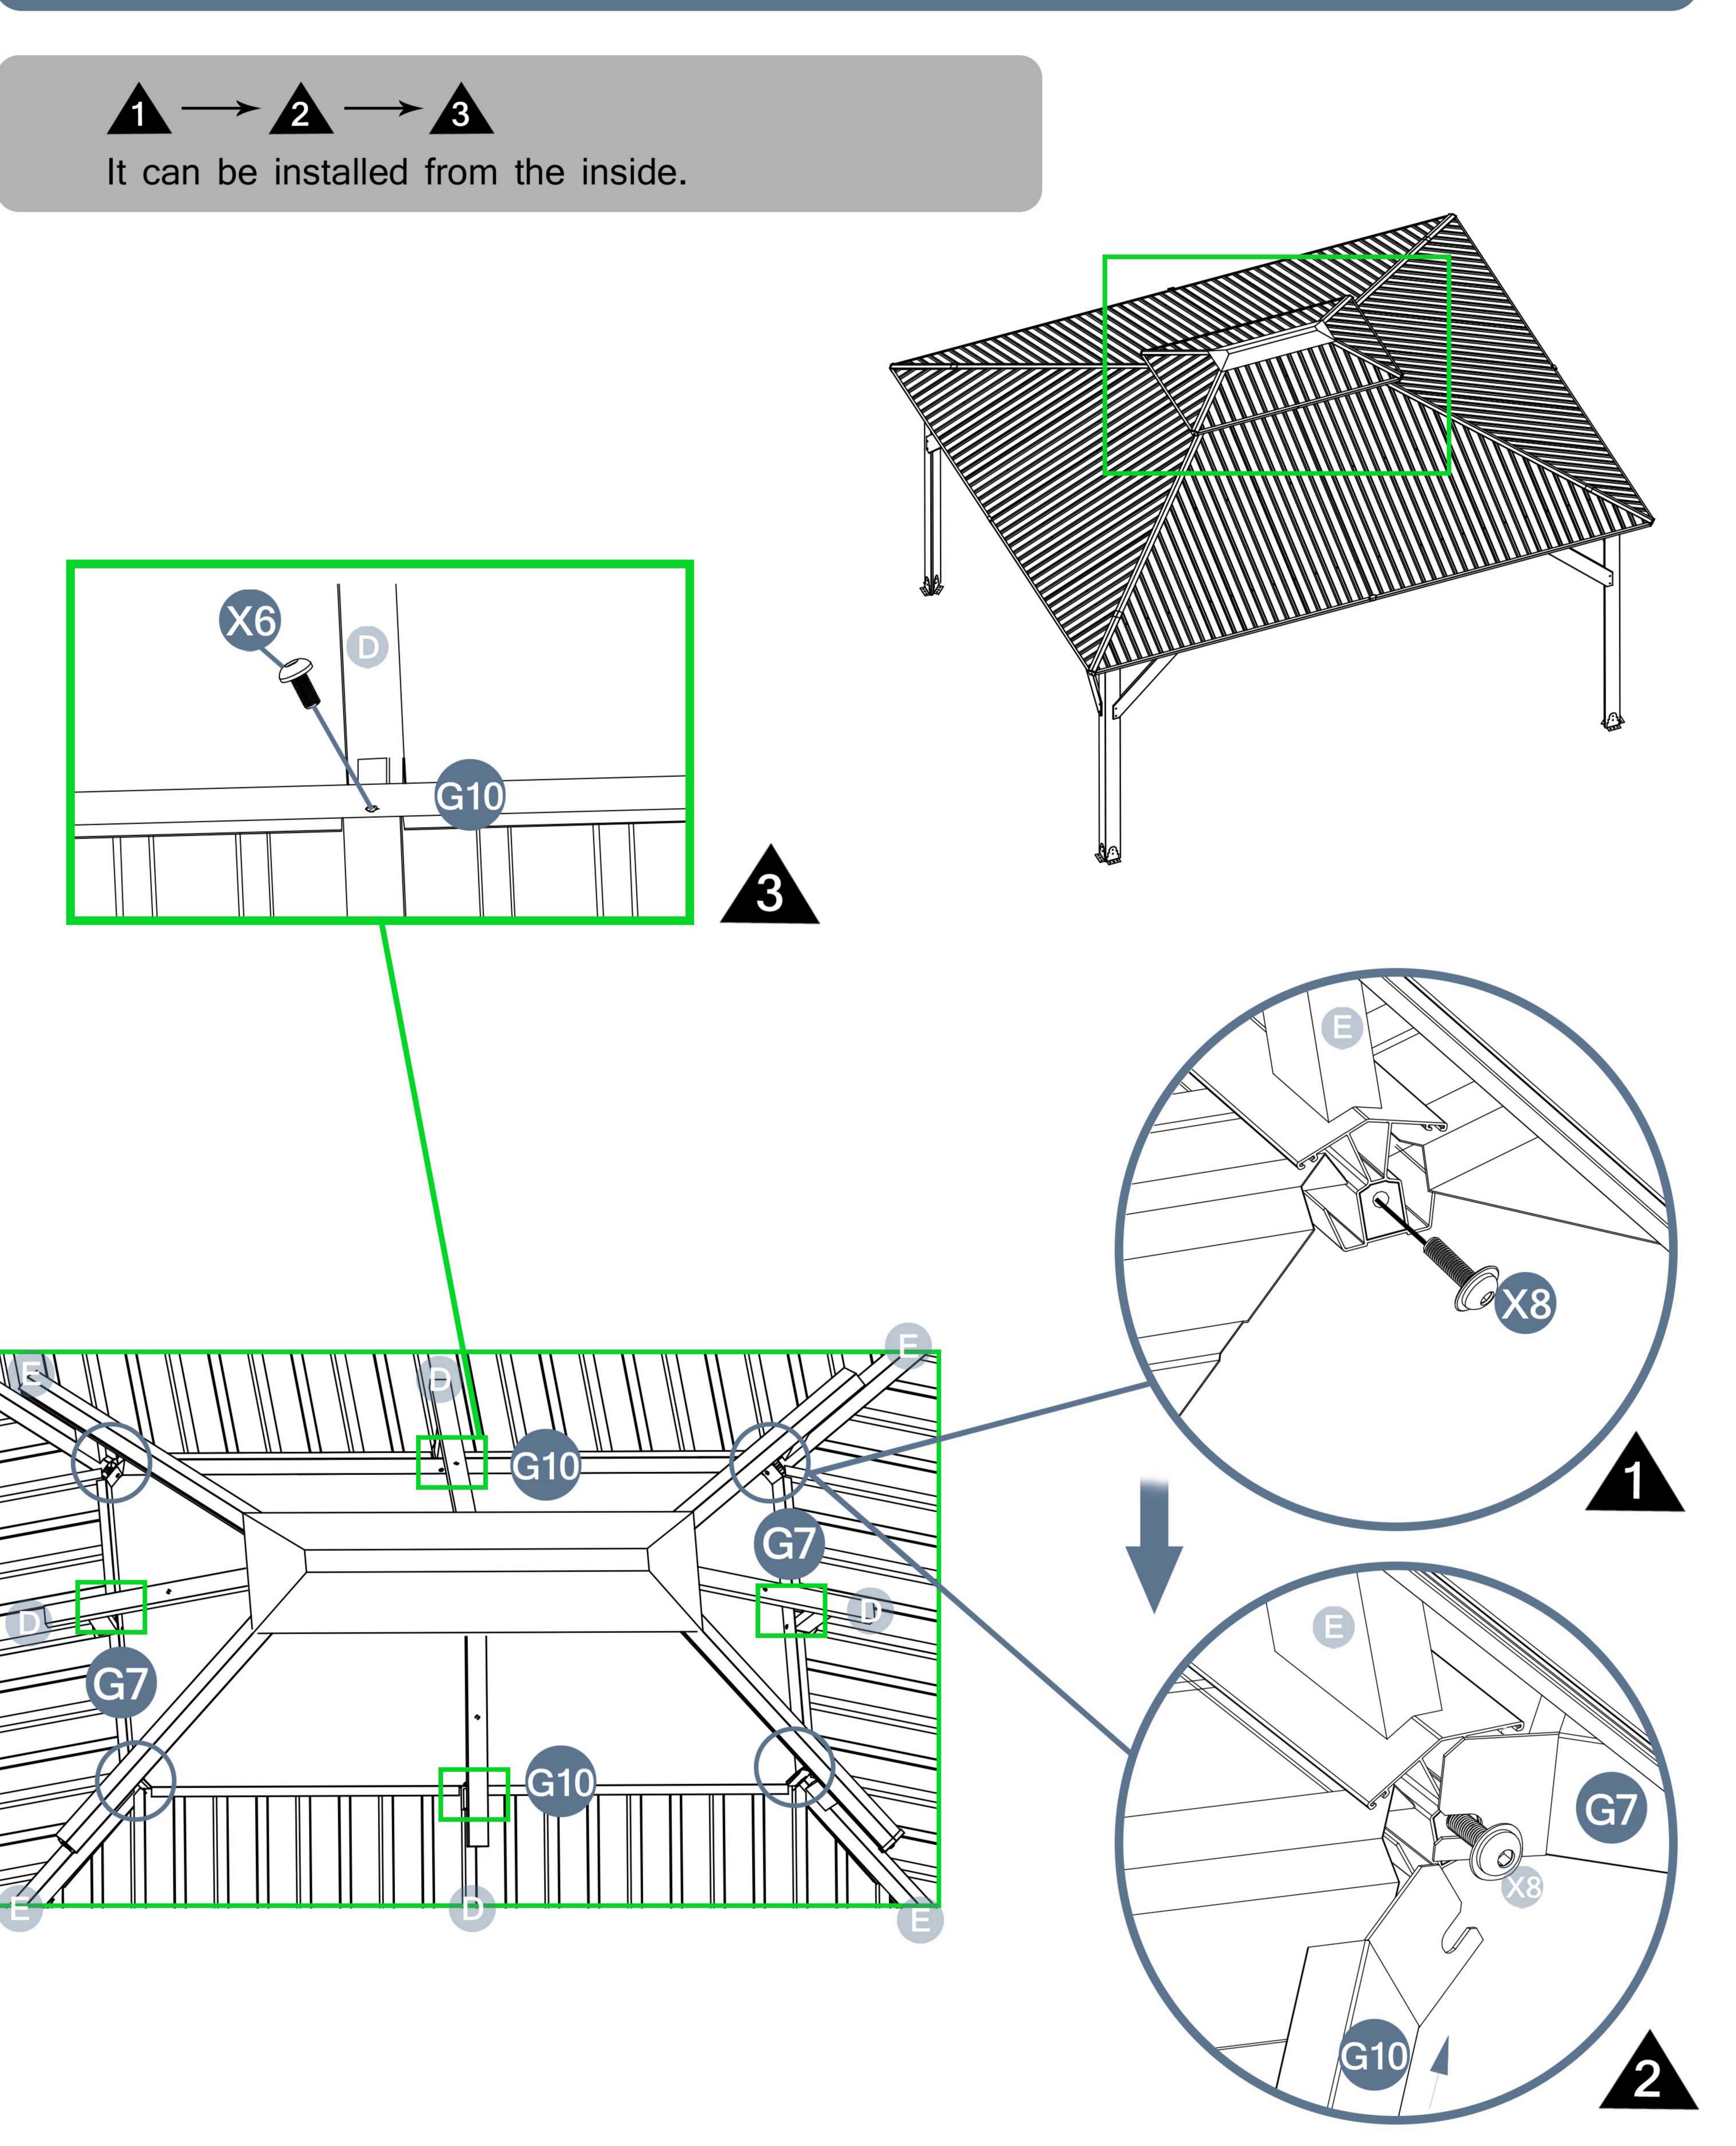

Parts required

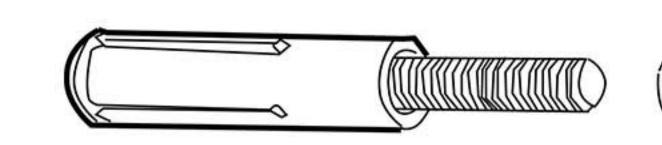


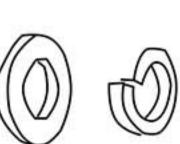

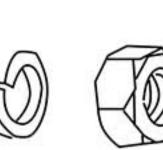



To improve stability of gazebo, expansion screws very necessary. Expansion screws use for cement surfaces. Expansion screws are included in the package.

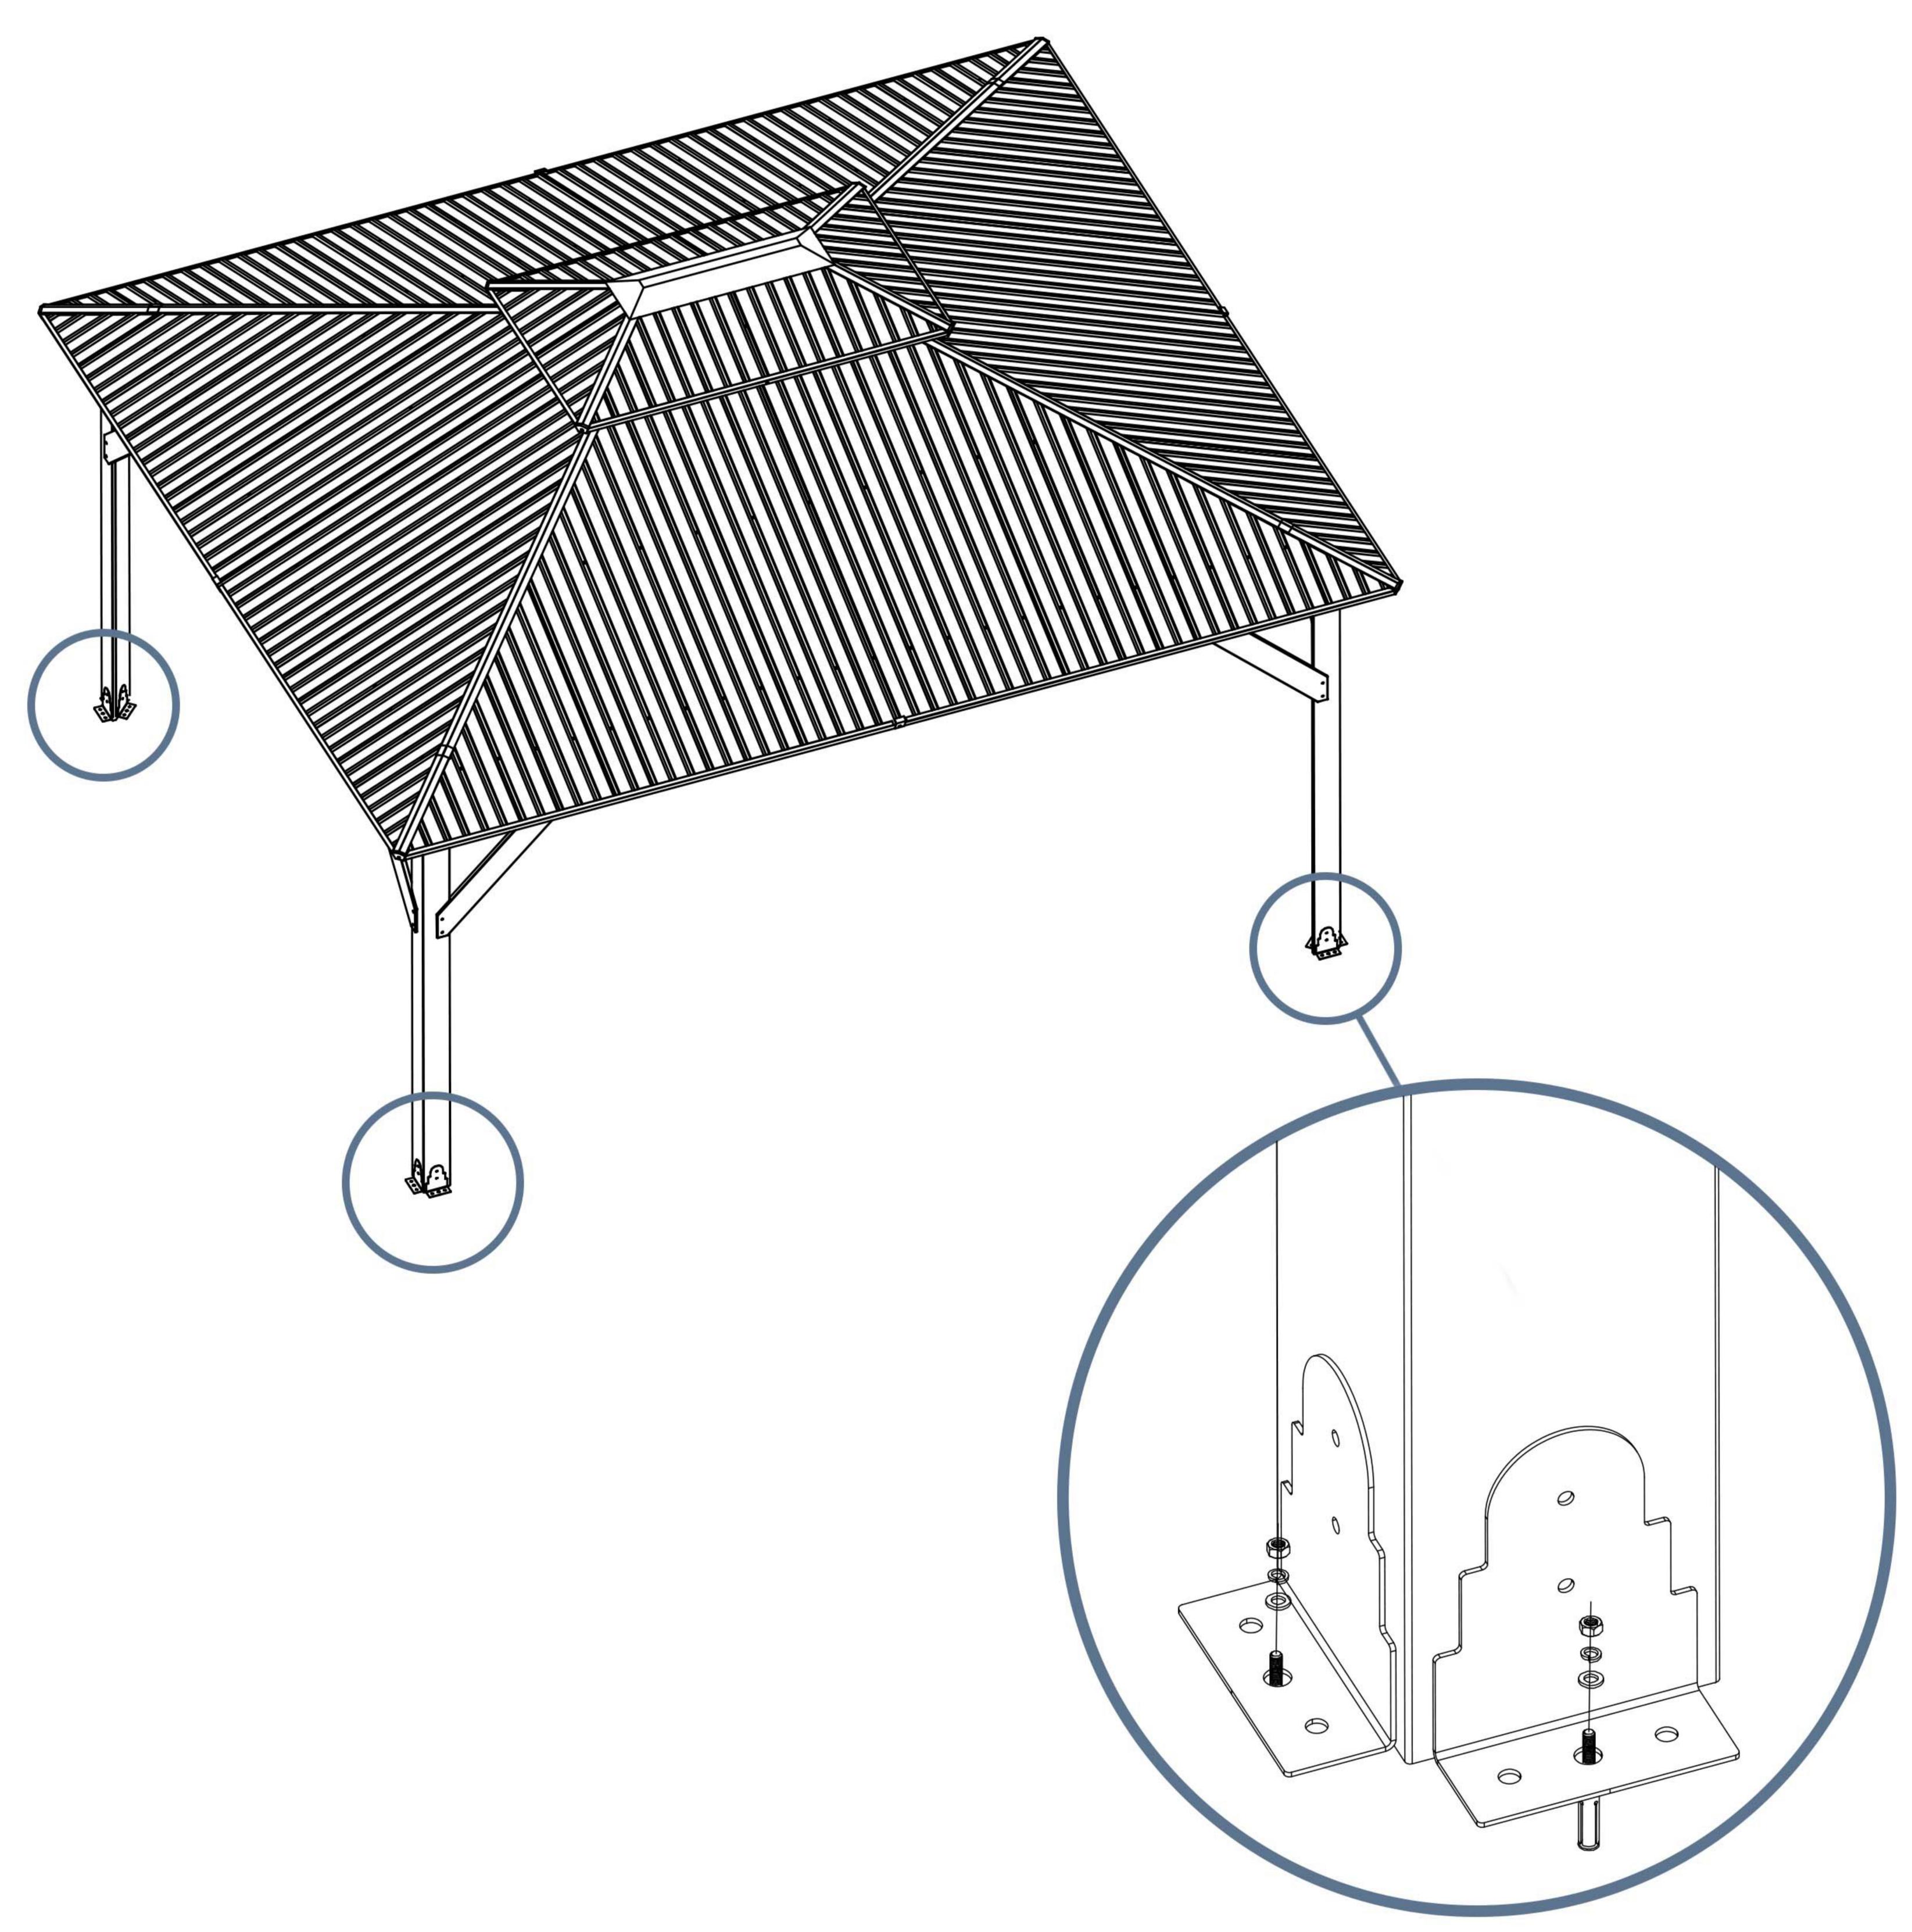

For safety's stake, please check and make sure that all screws are tightened after all installation is complete.

Installation Completed


## Hope you enjoy this product.

If you have any concerns about gazebo Installation, please feel free to contact us. We will reply within 24 hours.



E-mail: cs.helper01@gmail.com

#### 11X13FT

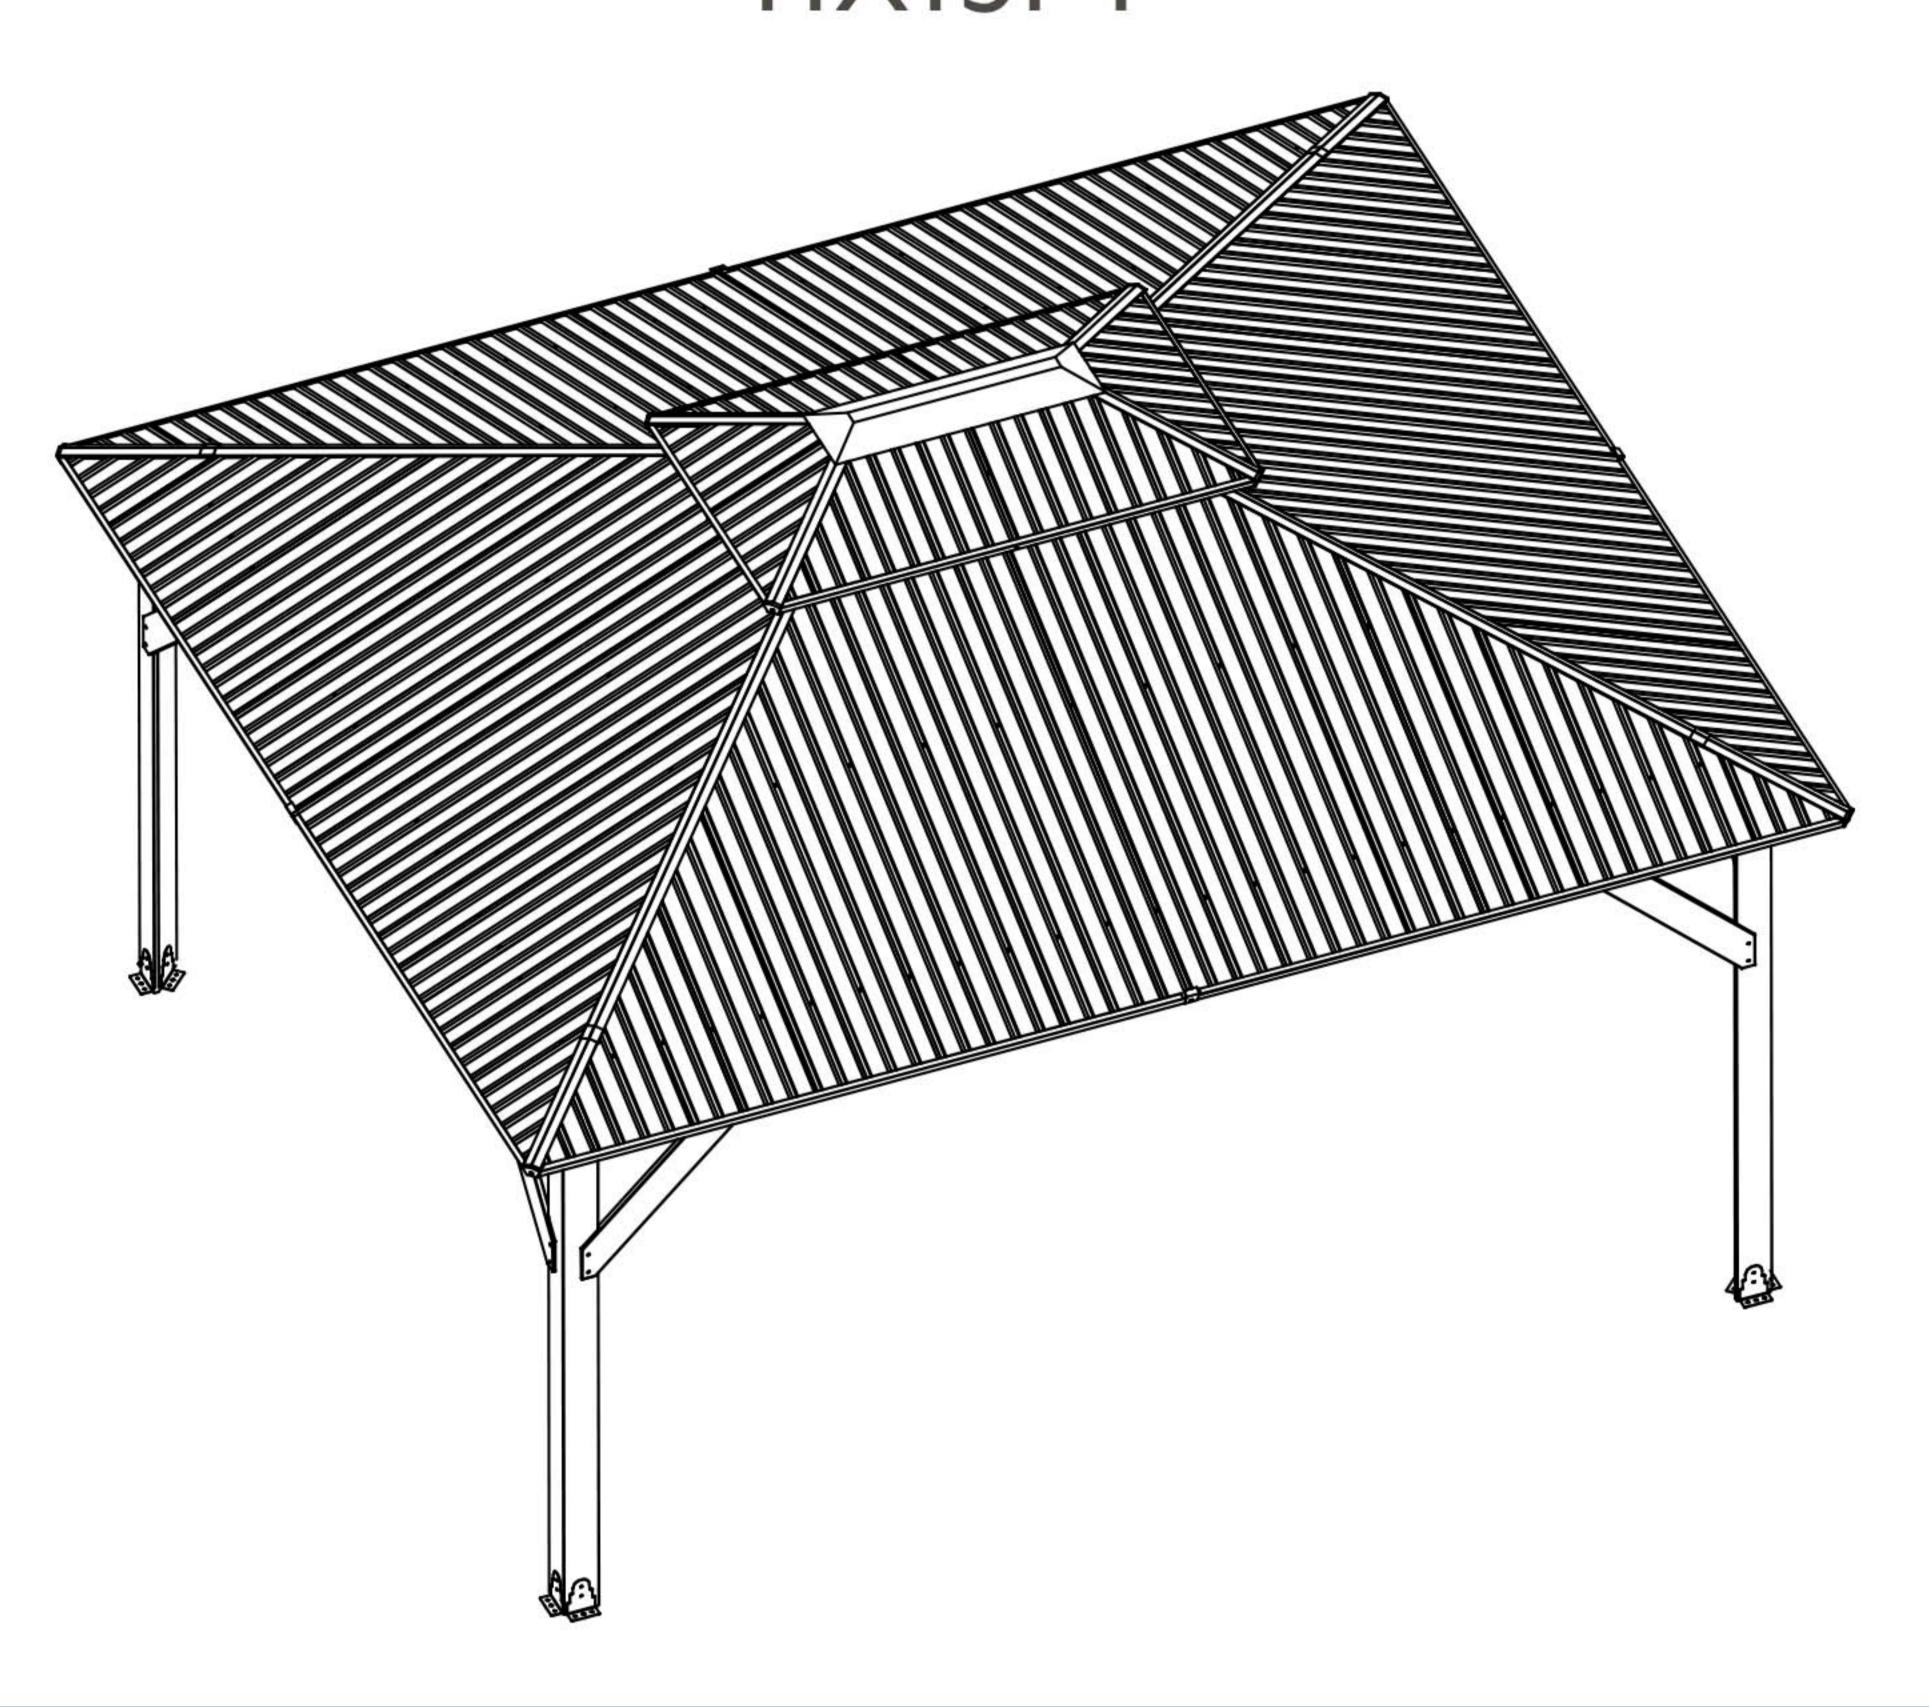

SKU:C-MTSJY24-G009-1

C-MTSJY24-G009-2

C-MTSJY24-G009-3

C-MTSJY24-G009-4

C-MTSJY24-G009-5