








SKU:AU155ZM/AU156ZM


Carton 1/2 Component List



Carton 2/2 Component List




①

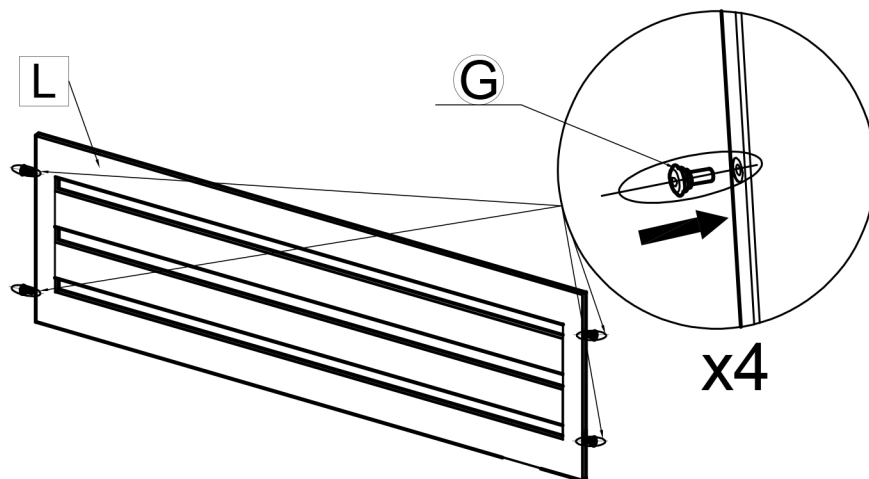


Tighten the screws completely in the step.

②

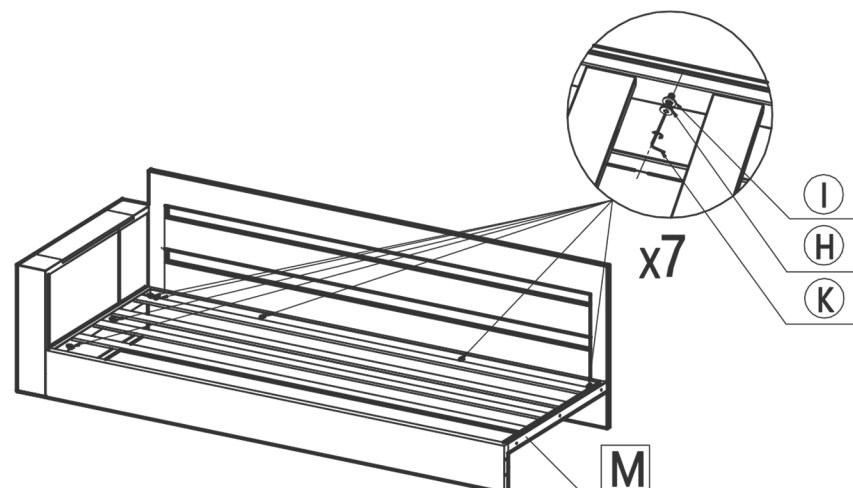


Do not tighten the screws completely in the step.

③

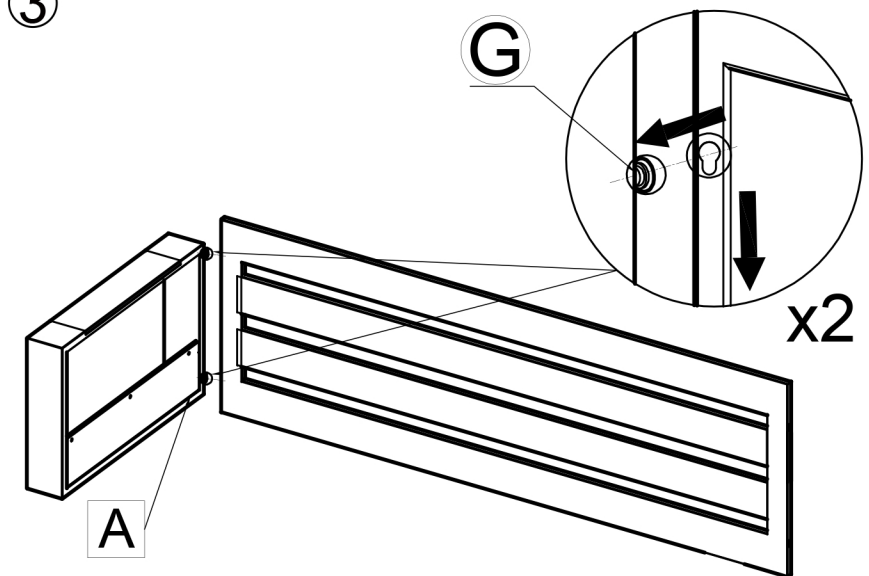

Insert the screw heads into the large holes at the same time and press them down into place.


④

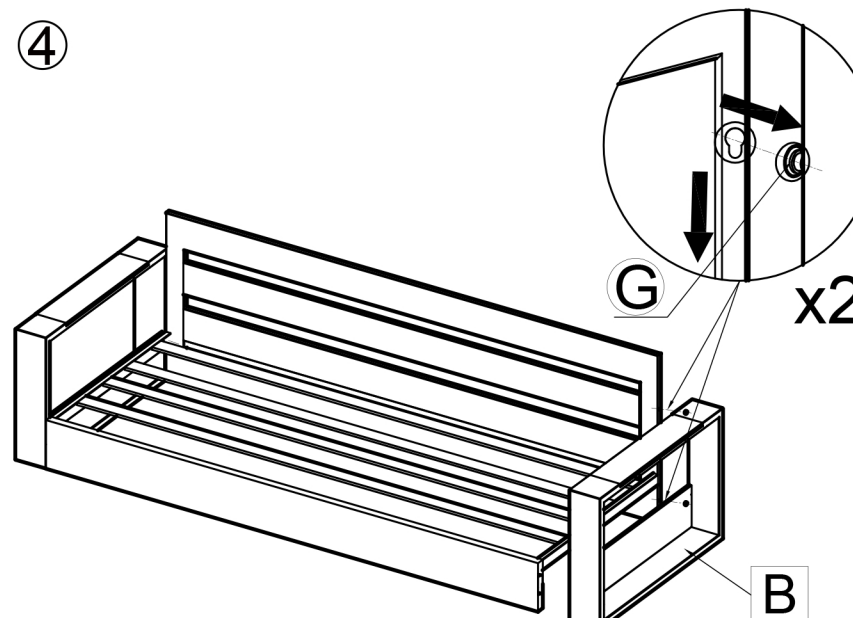


Insert the screw heads into the large holes at the same time and press them down into place.







Tip: We recommend flattening the boxes to use as a protective work surface, or setting up your new furniture on a soft floor like a carpet.

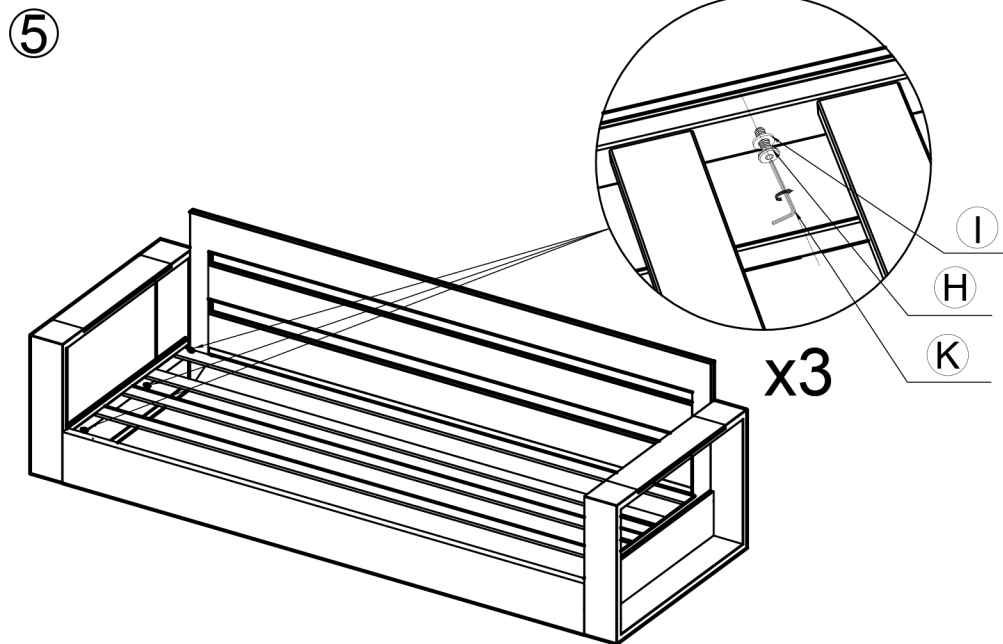


Do not tighten the screws completely in the step.

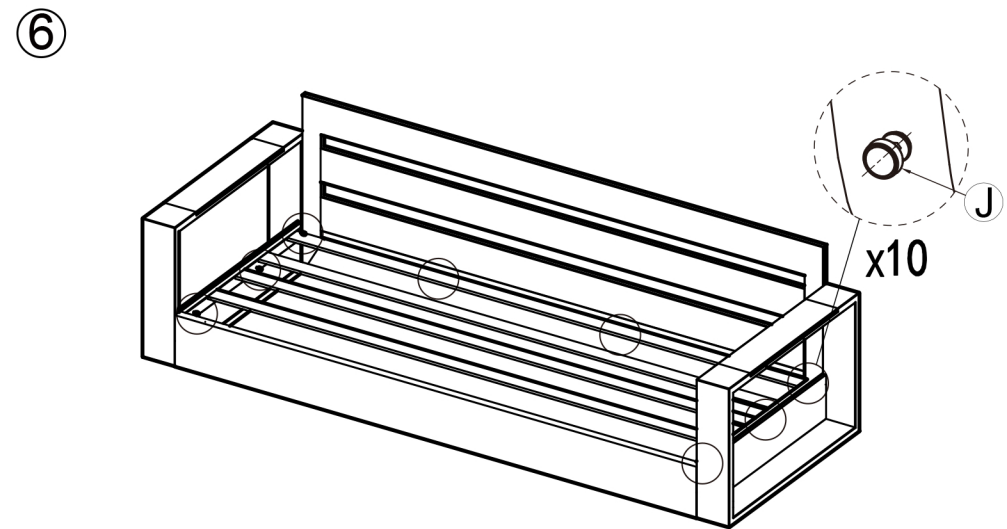

Tighten all 8 screws into place with Allen Key (K) and Install the Caps (J) for protecting and concealing the screws.

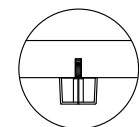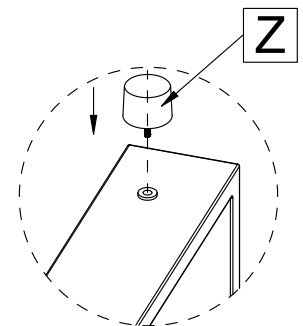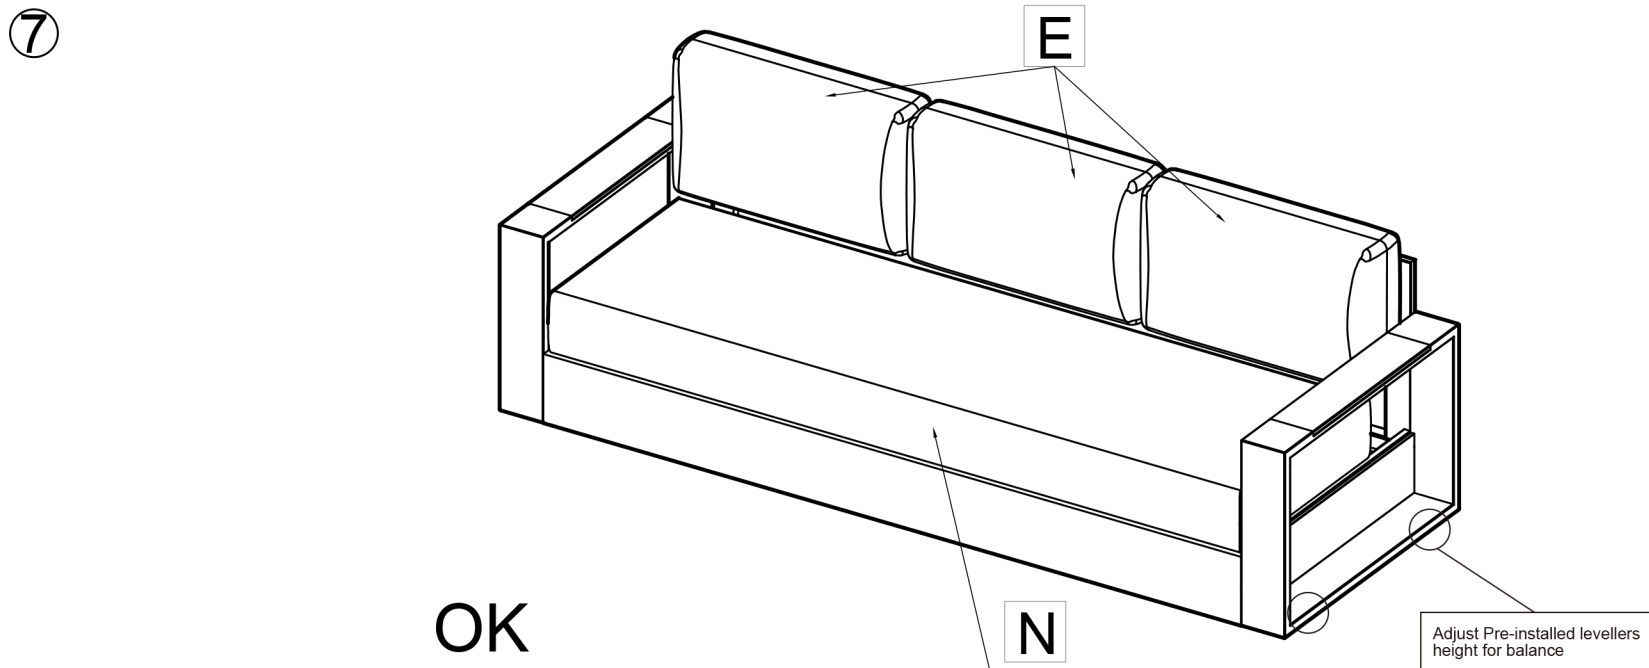

Adjust height for balance

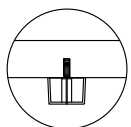

Adjust low for balance