


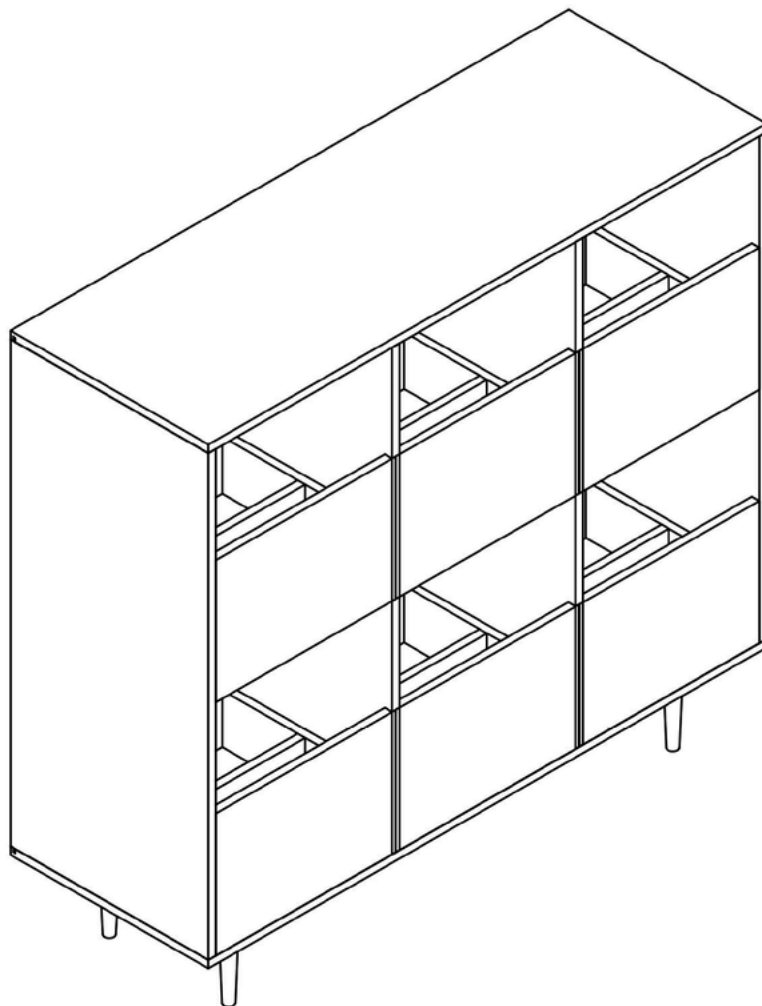

Ax36



Bx36



Cx58




Dx12




















Ex48




Fx1

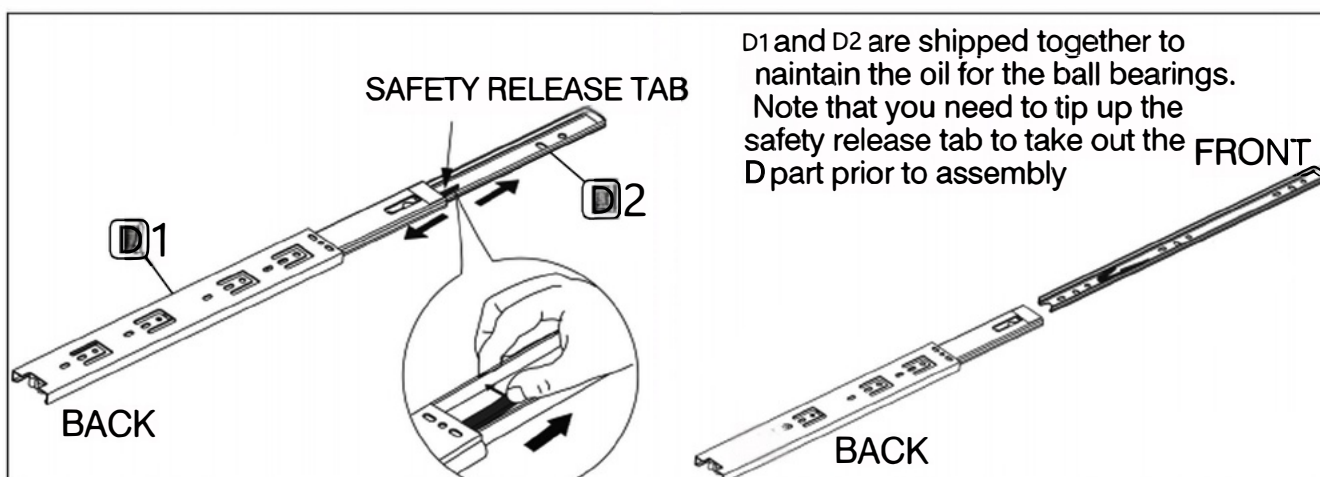


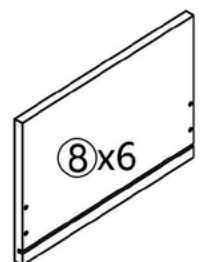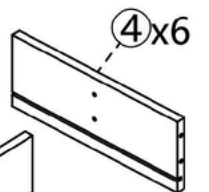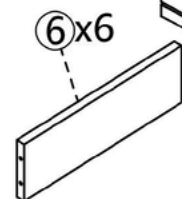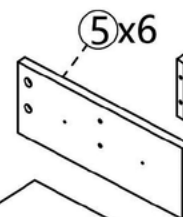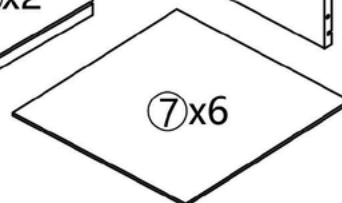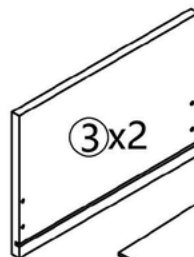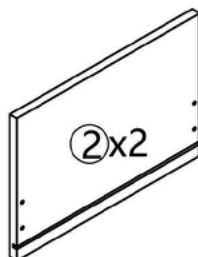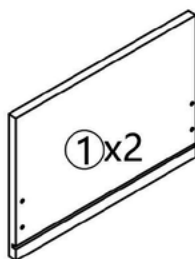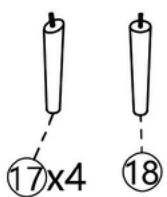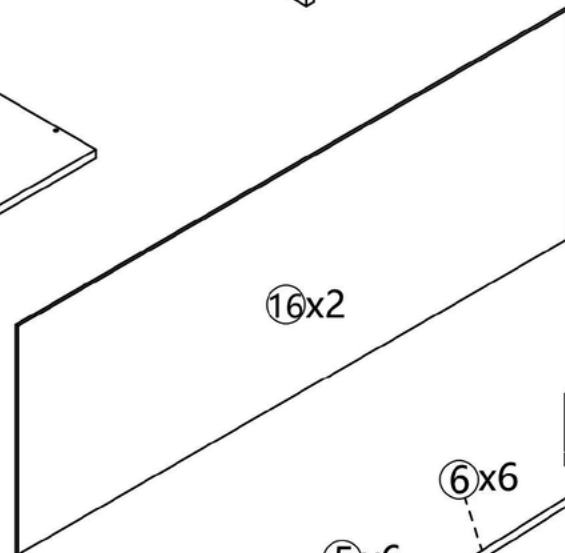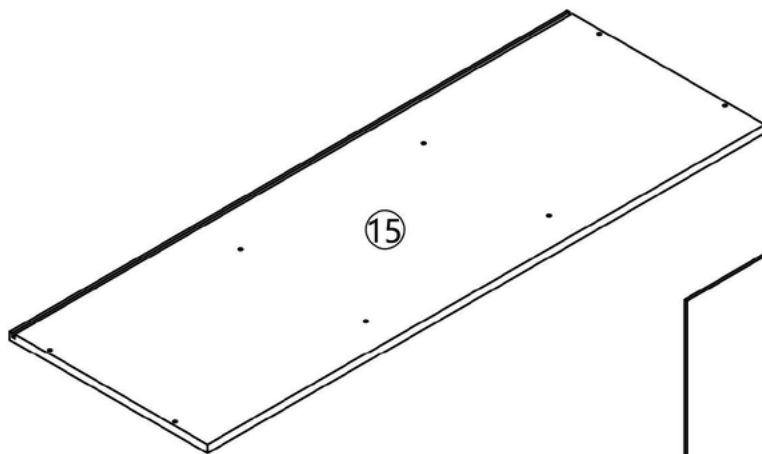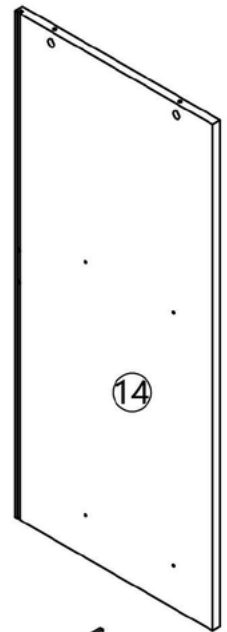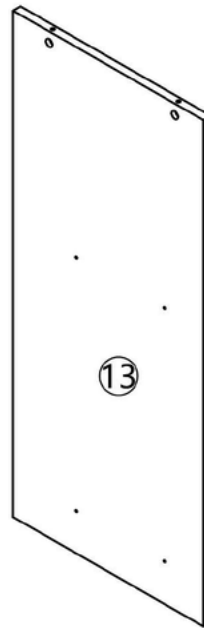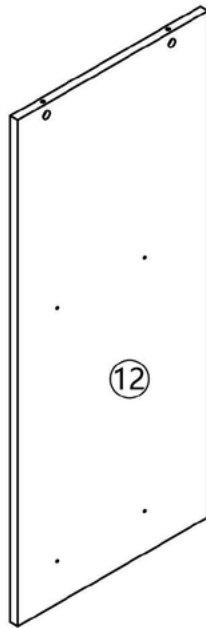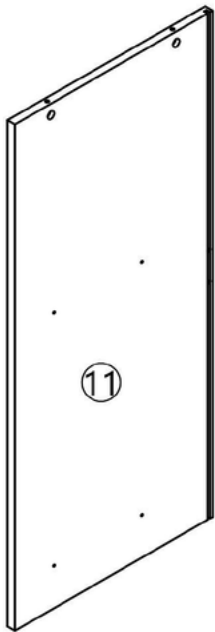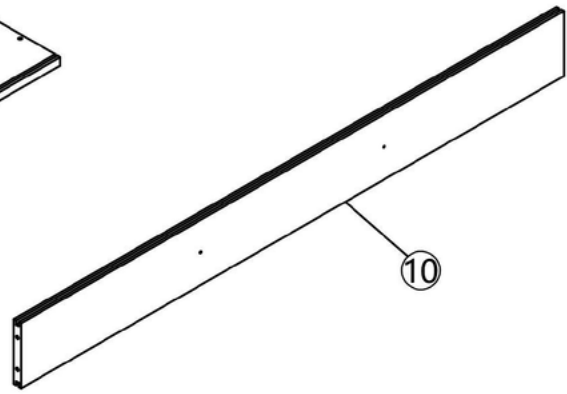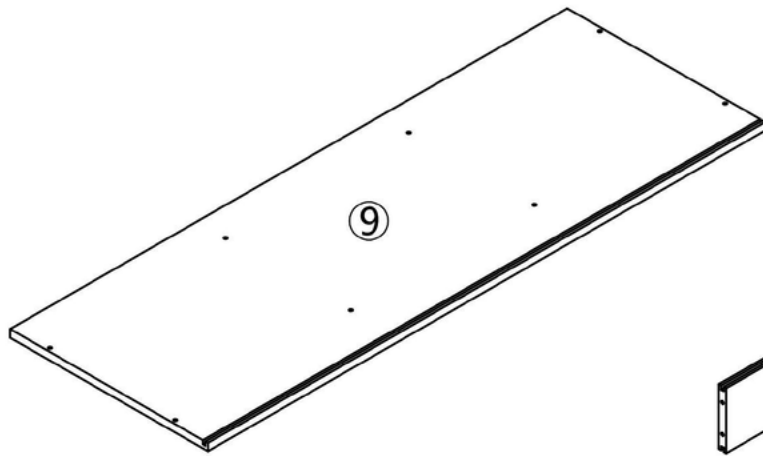


Step 1

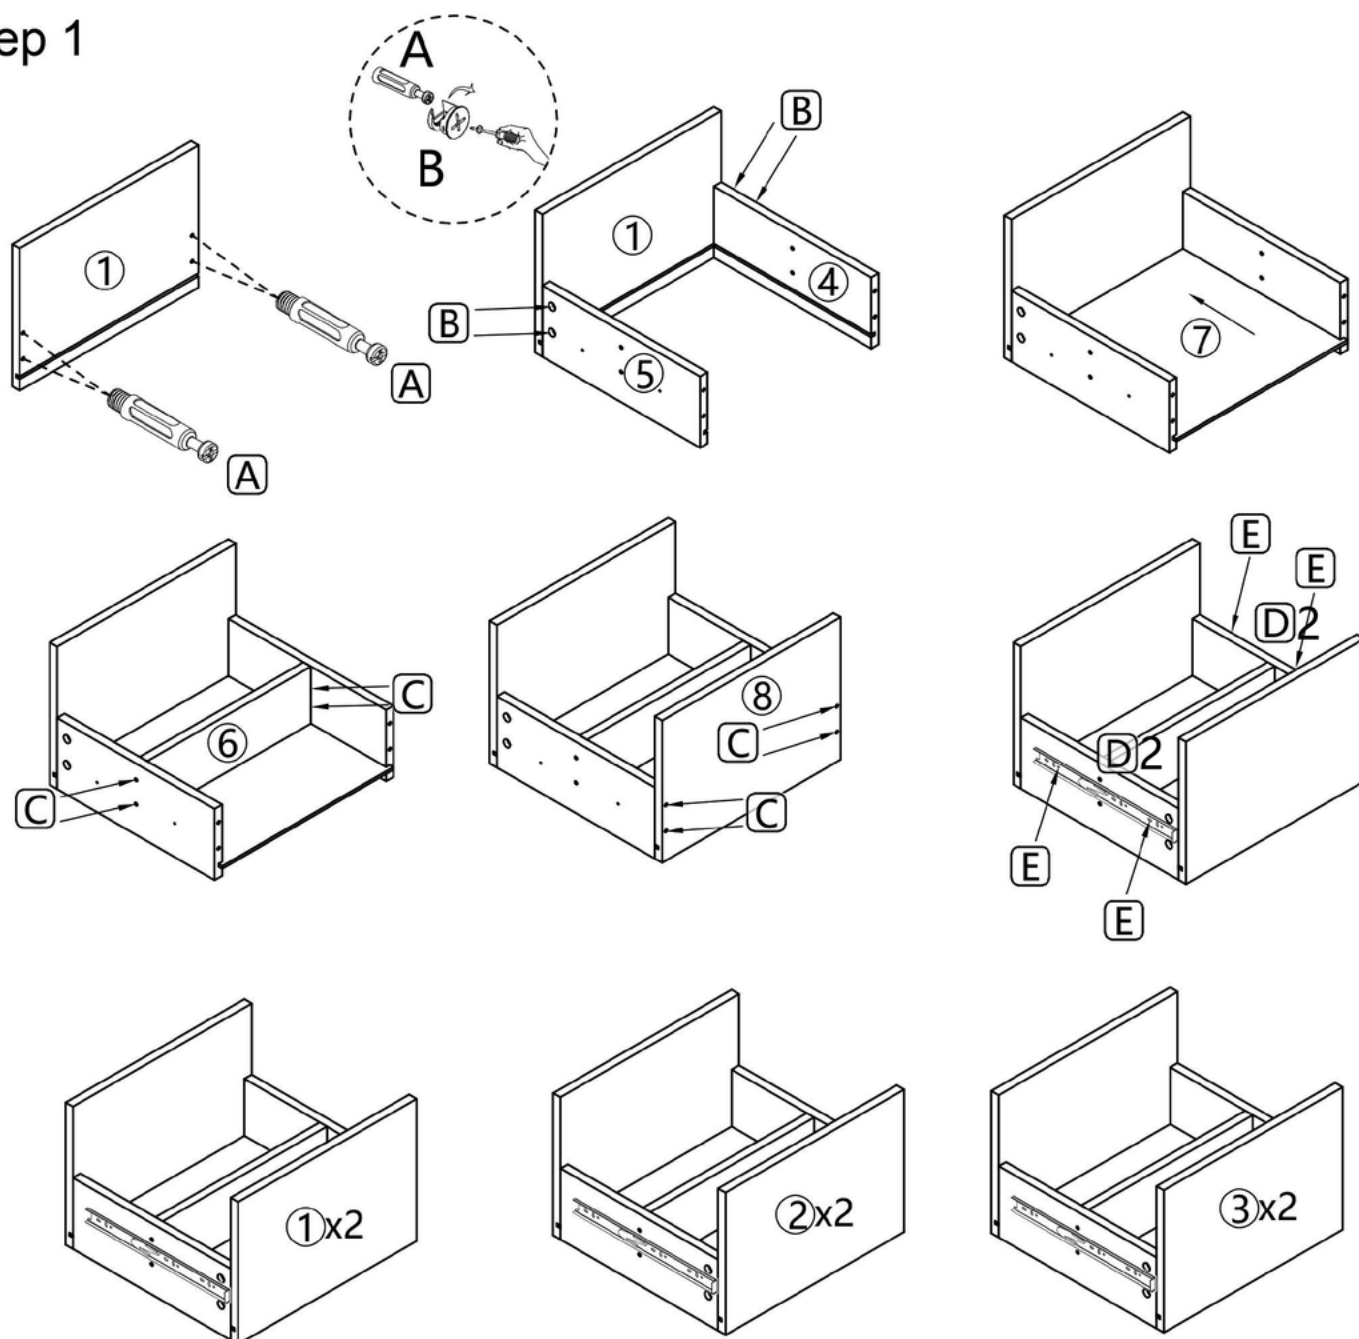


Step 2

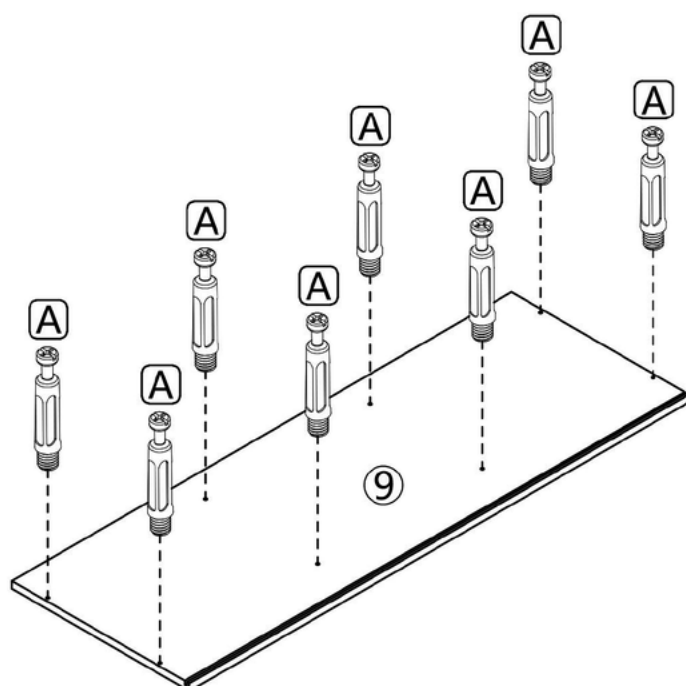


Step 3

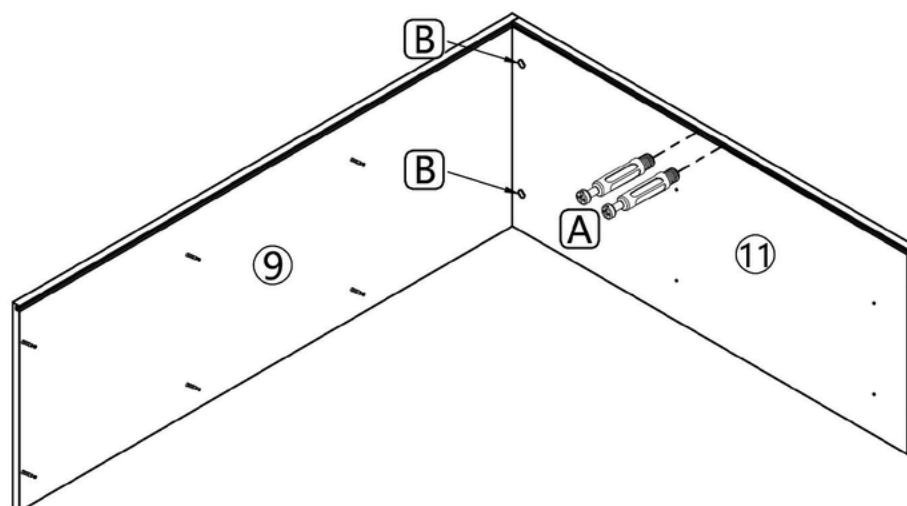


Step 4

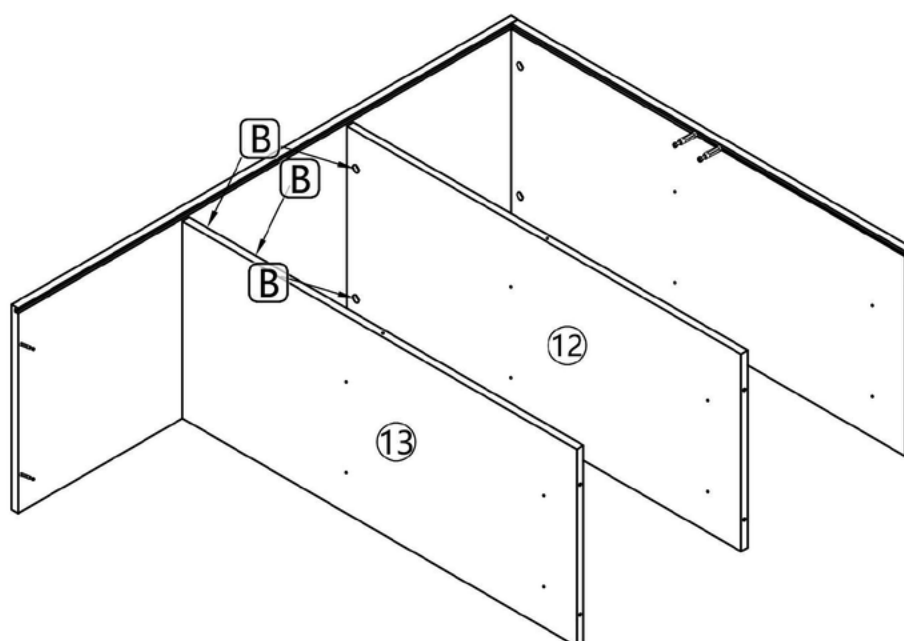


Step 5

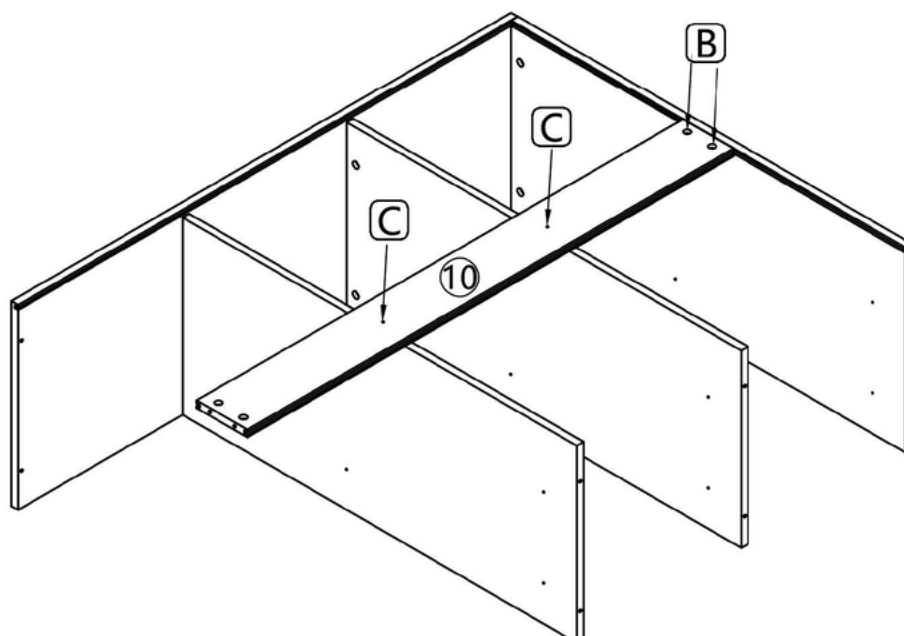


Step 6

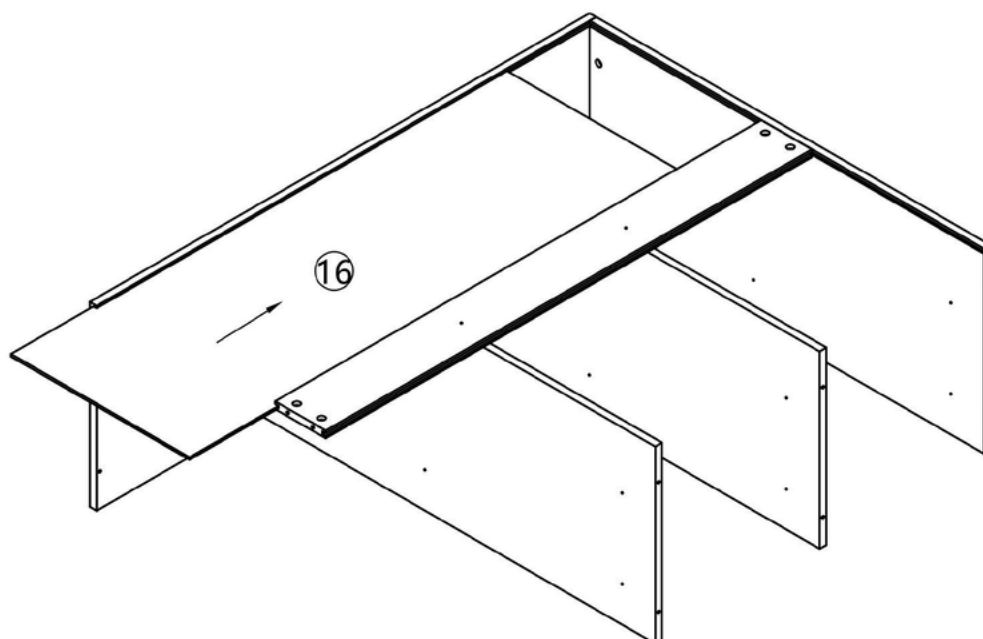


Step 7

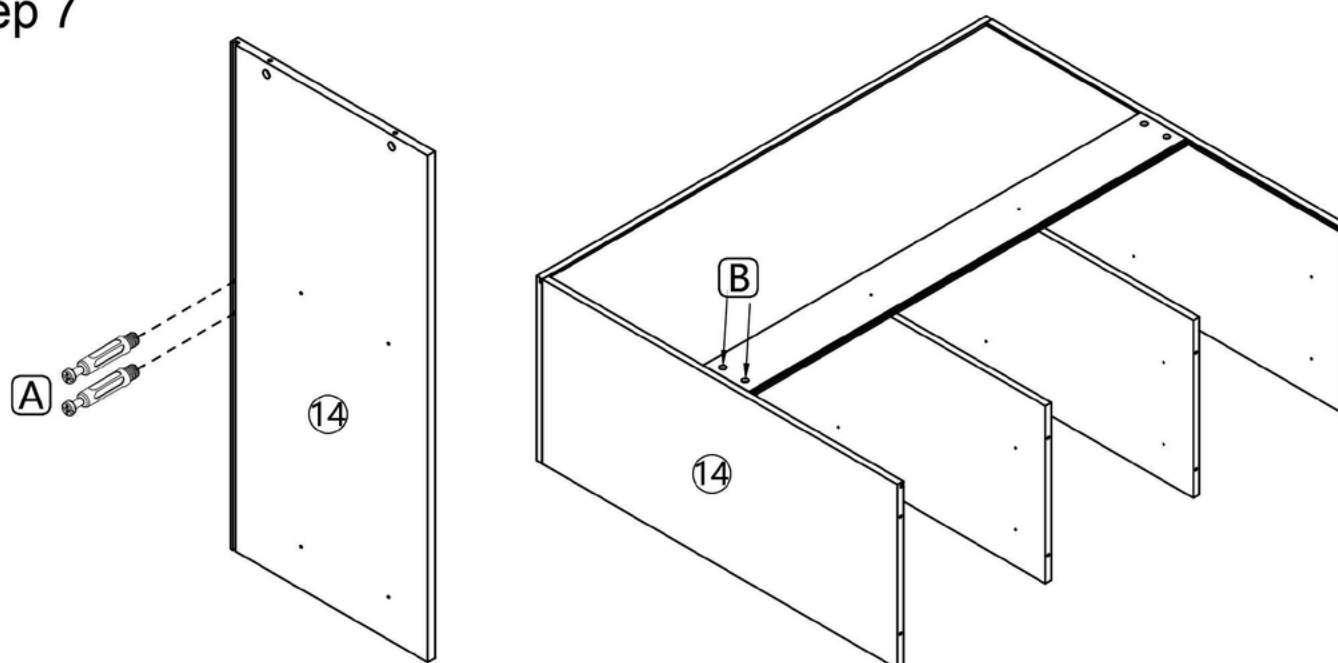


Step 8

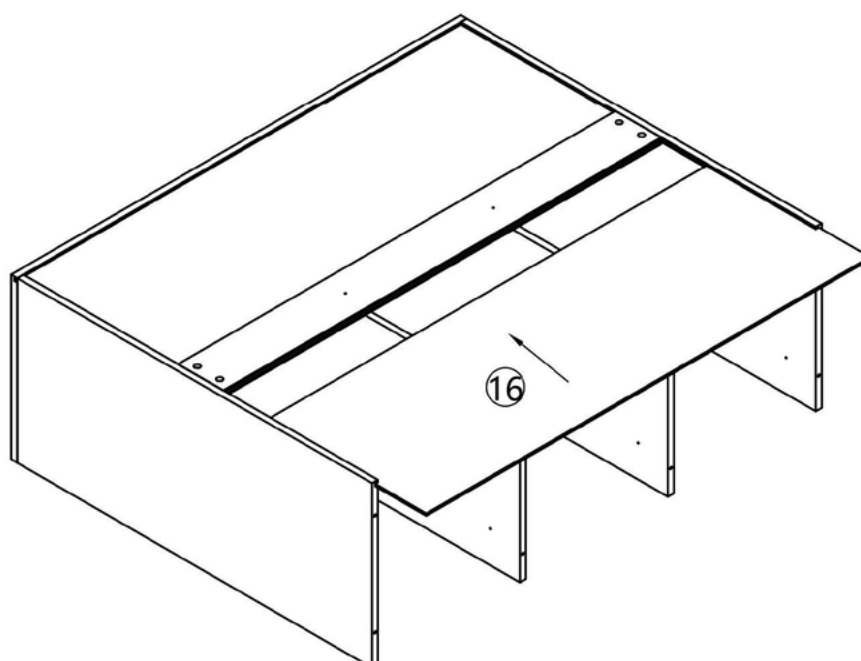


Step 9

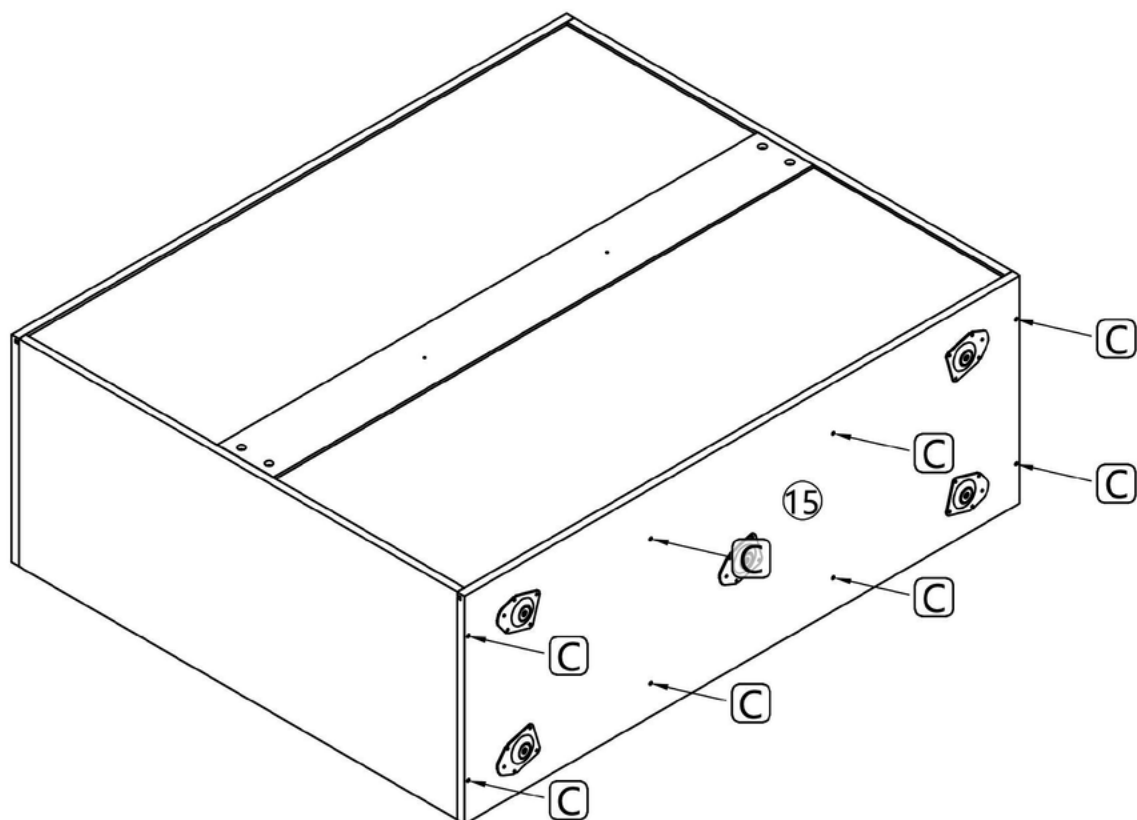

Step 10


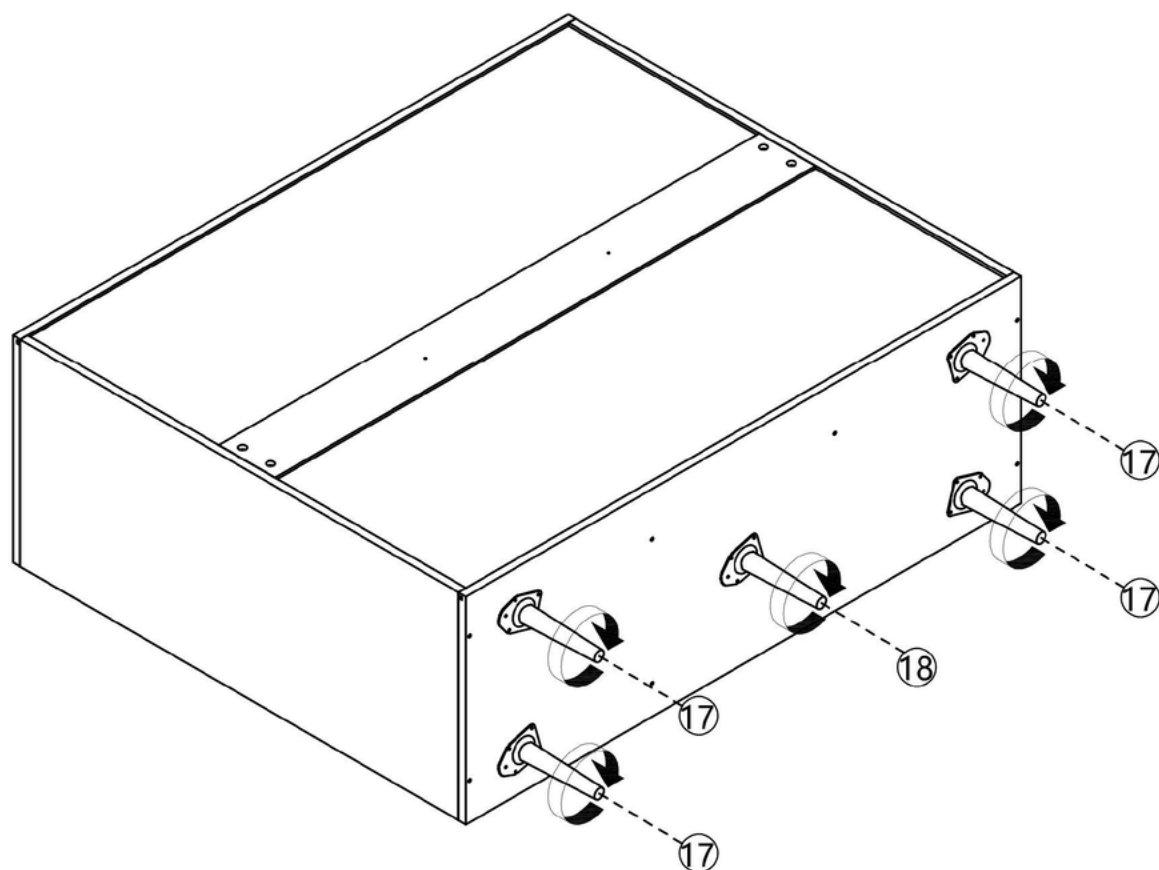


Step 11

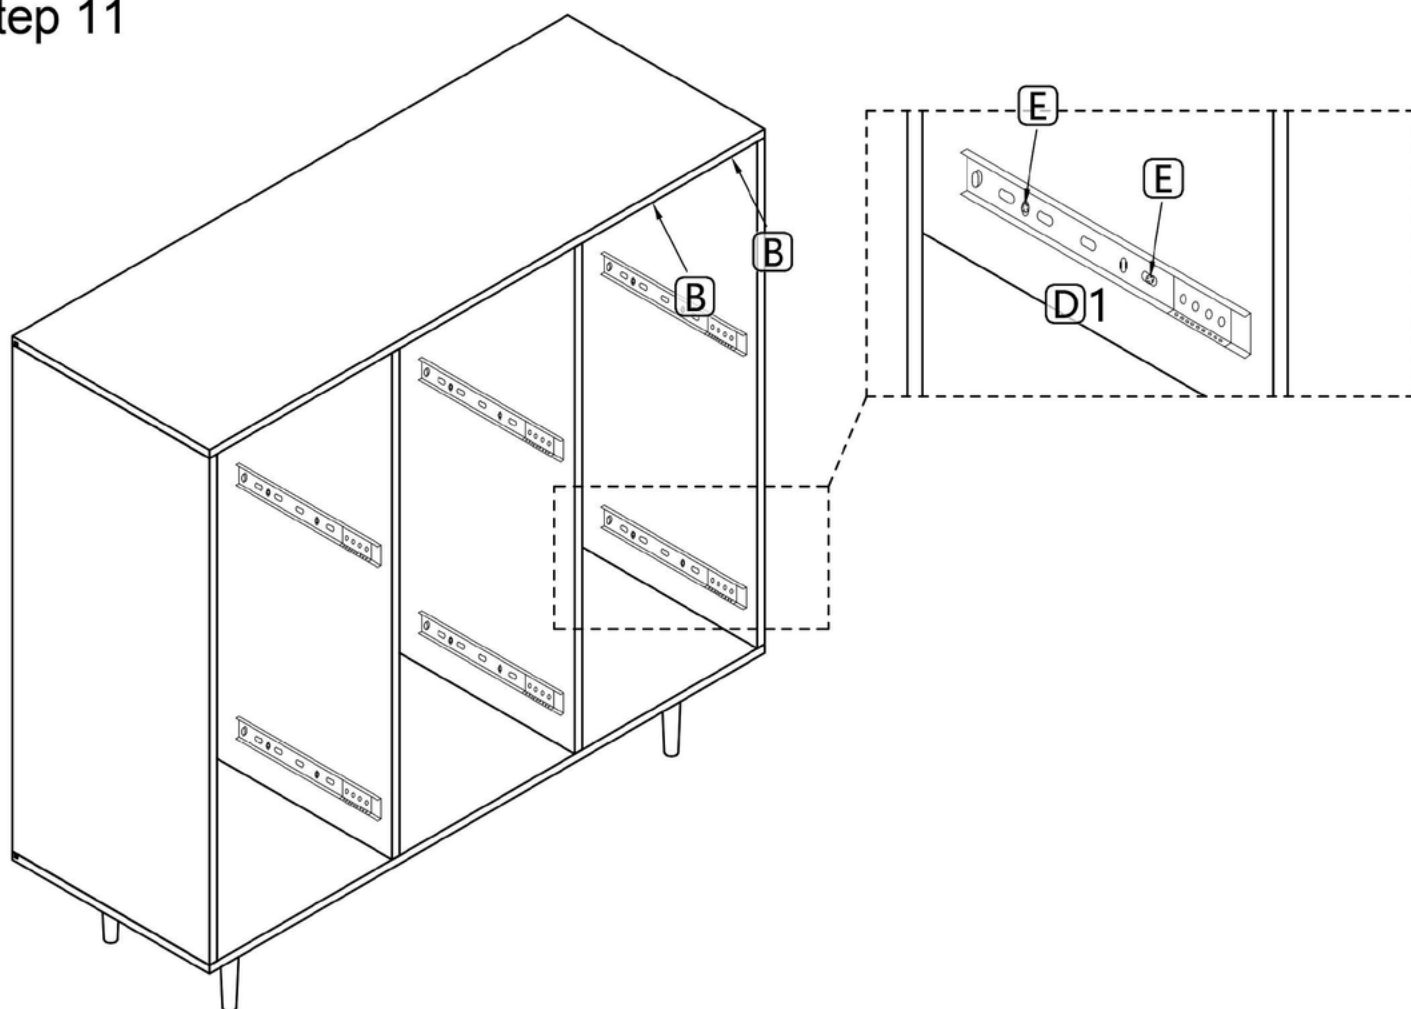

Step 12

Drawers are divided into left, middle, and right, depending on the distance between the drawer and its side. Please choose a suitable drawer opening for installation

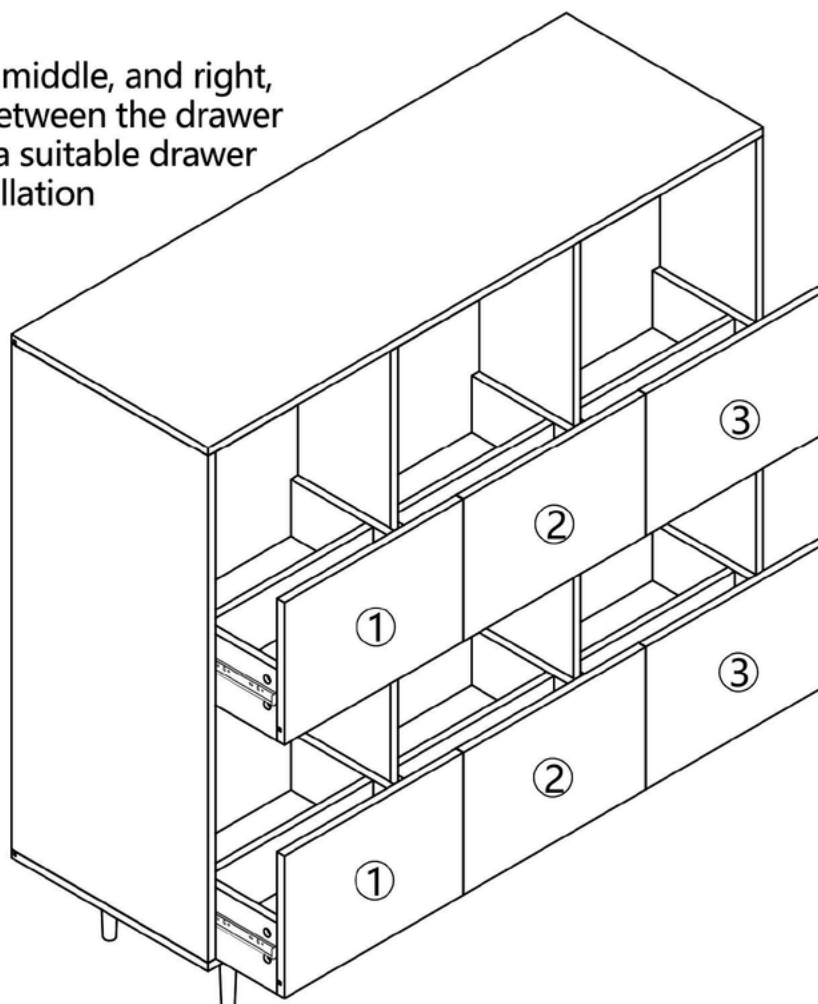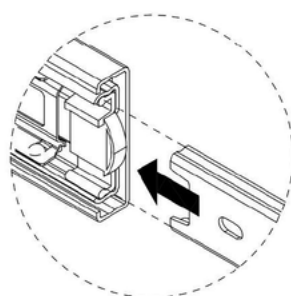

Step 13

