

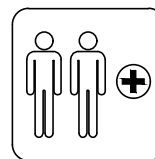
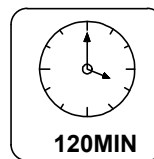
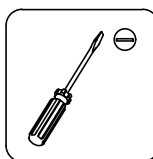


HLG251


Version:1.0

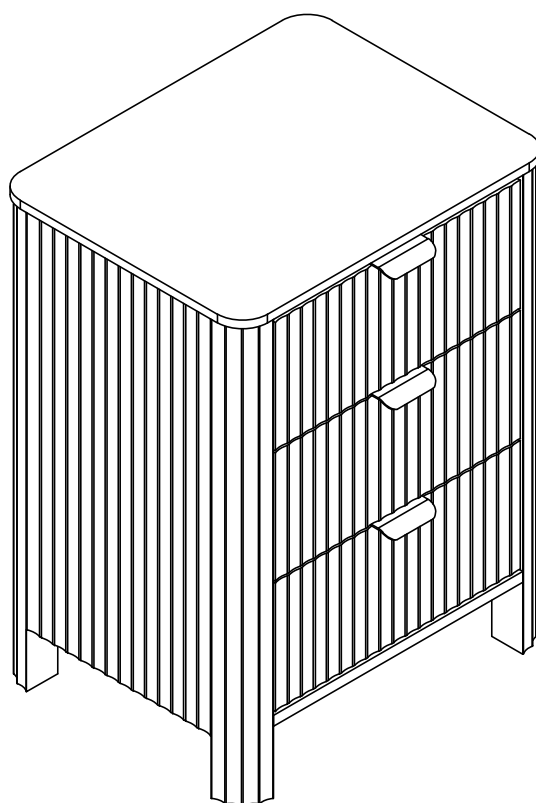


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

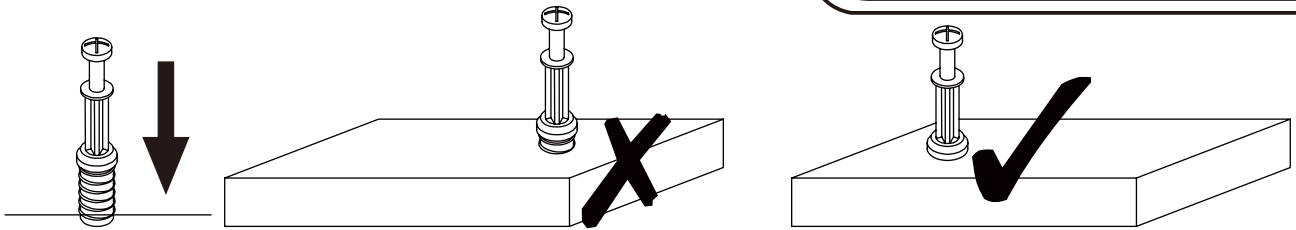


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

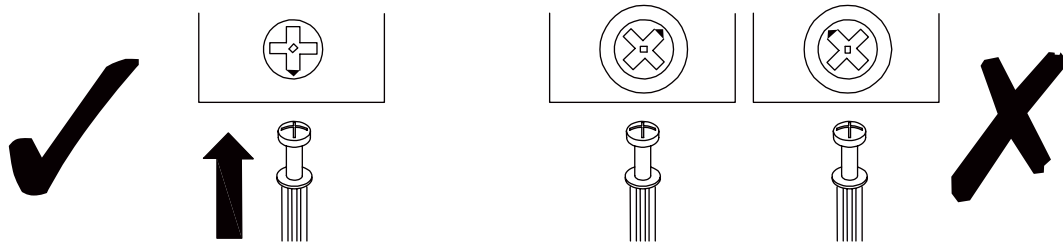










EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.


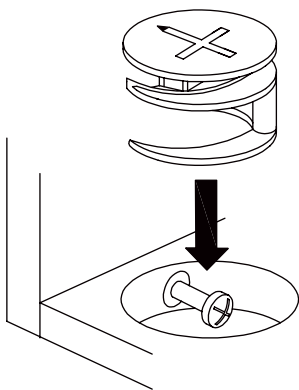




EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

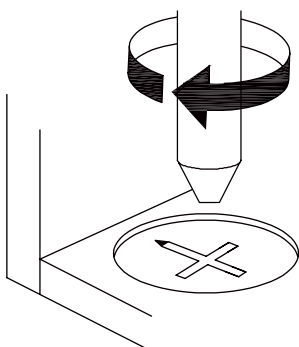


EN_Turn cam lock clockwise to tighten.

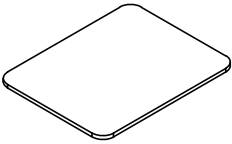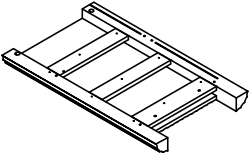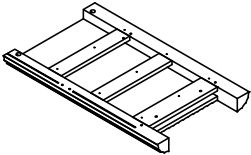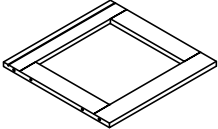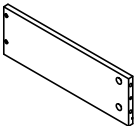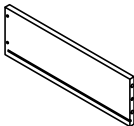
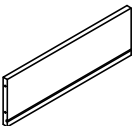
NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x2	
5		x1	
6		x1	
7		x1	
8		x3	
9		x3	
10		x3	

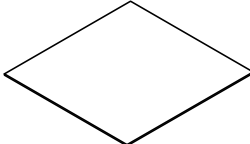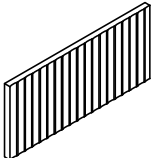NO.	PARTS	QTY	SPARE
11		x3	
12		x3	
	 Hardware Kit	x1	

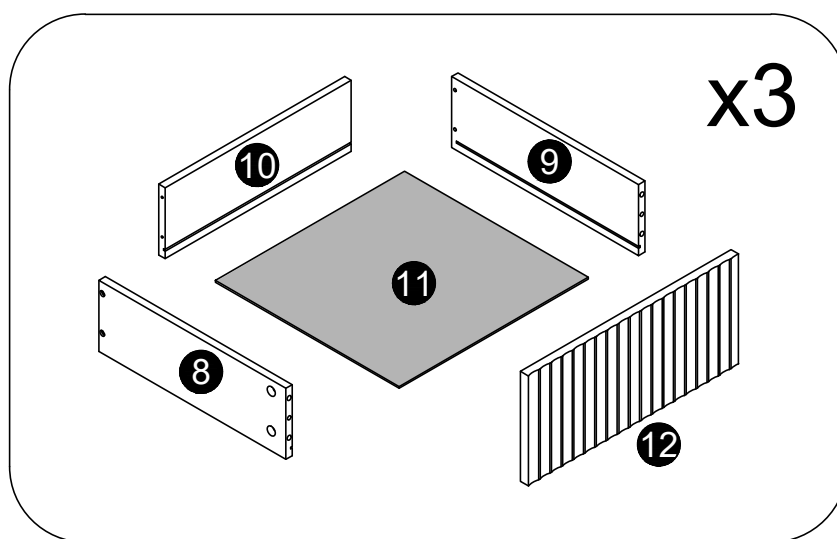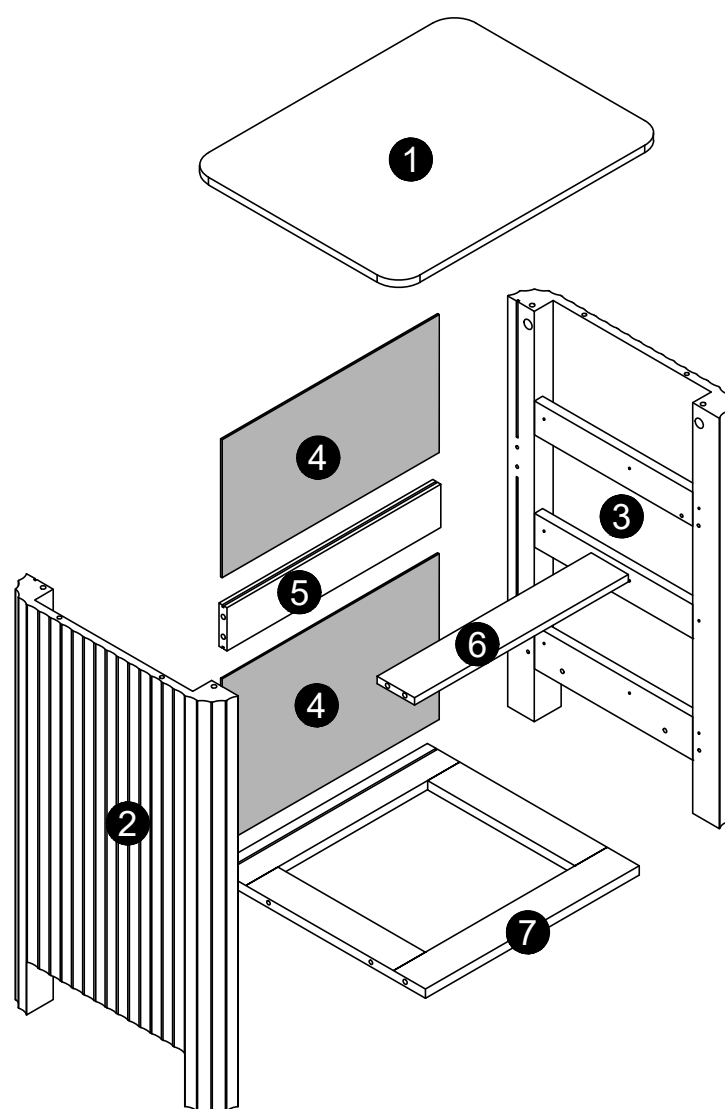

A x28 $\varnothing 6 \times 35 \text{mm}$ +2(spare)	B x28 $\varnothing 15 \times 10 \text{mm}$ +2(spare)	C x14 $\varnothing 6 \times 30 \text{mm}$ +5(spare)	D x14 $\varnothing 4 \times 35 \text{mm}$ +4(spare)	E x36 $\varnothing 3.5 \times 12 \text{mm}$ +8(spare)	F x3 F-1 F-2
G x2 $\varnothing 4 \times 14 \text{mm}$ G-1 G-2	H x4	I x2 $\varnothing 6 \times 30 \text{mm}$	J x8 $\varnothing 3 \times 16 \text{mm}$ +1(spare) J-1 J-2		
CL x3 L350mm	CR x3 L350mm	DL x3 L350mm	DR x3 L350mm		


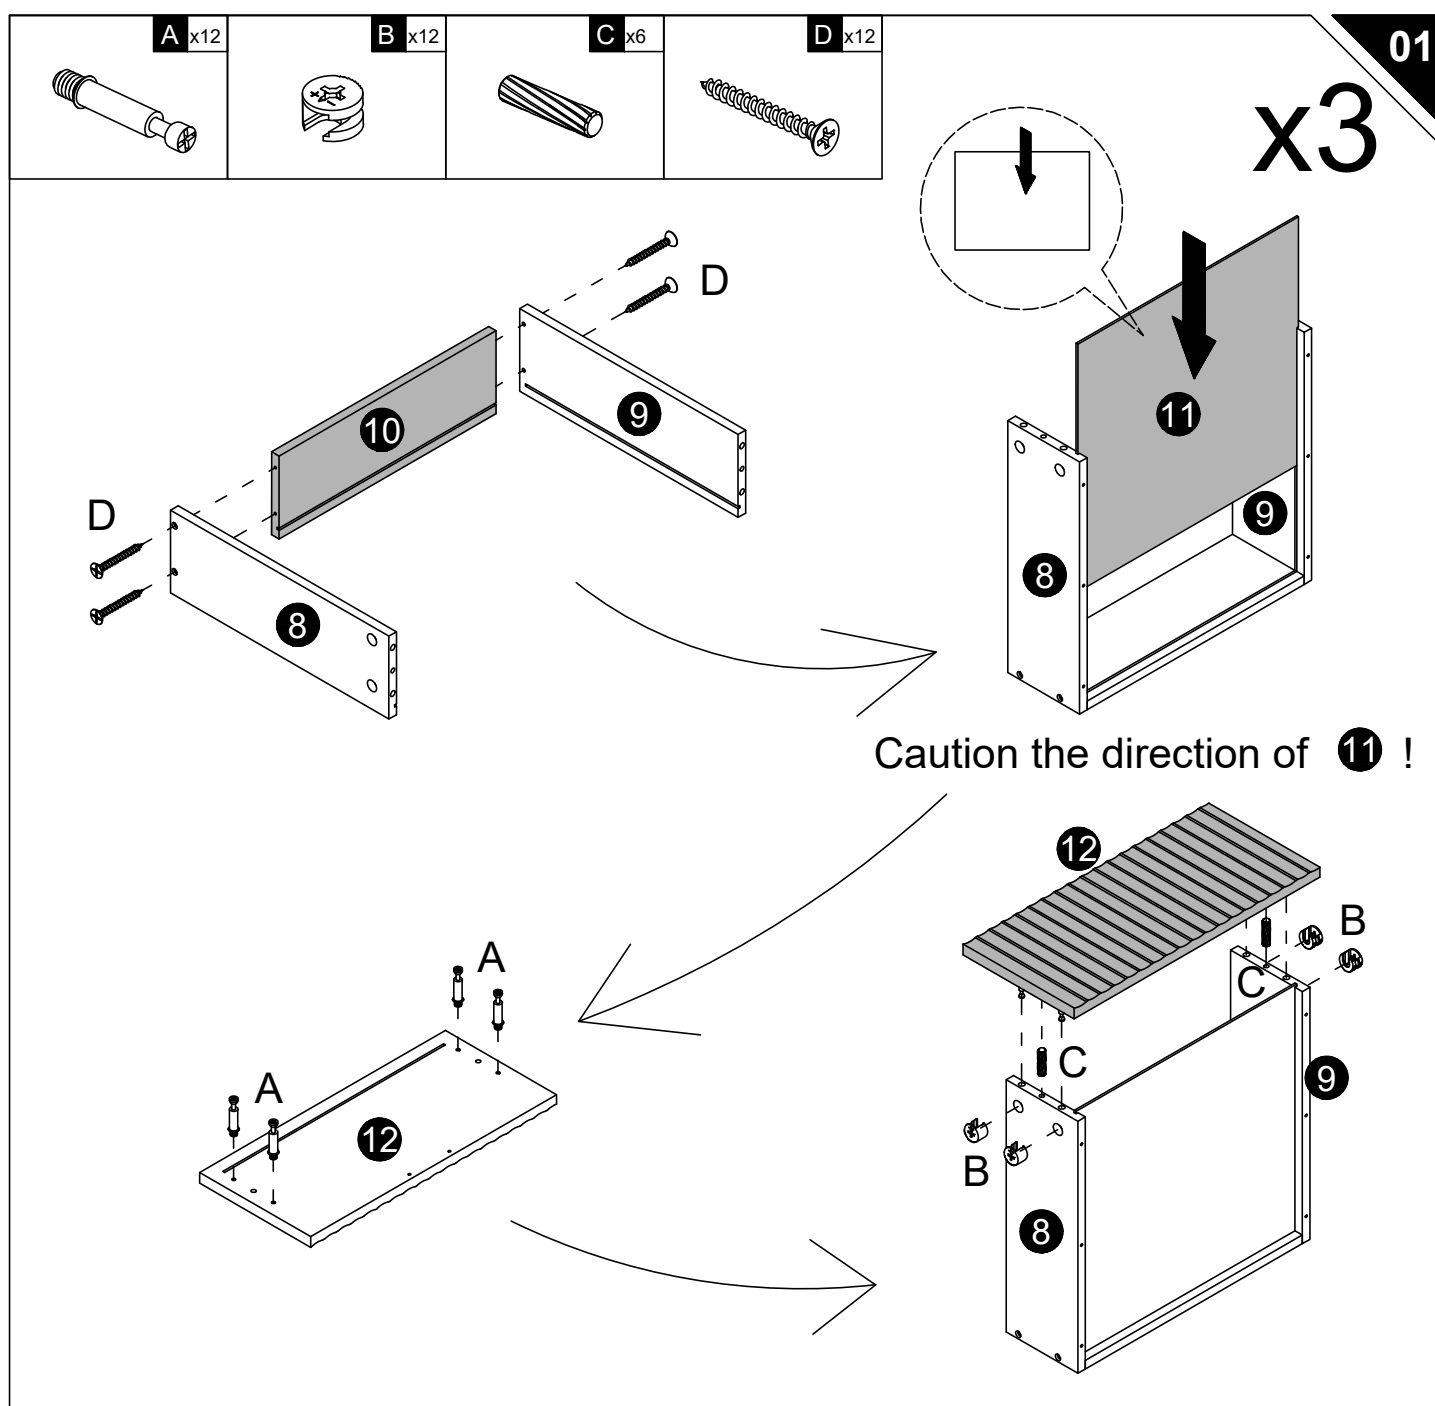


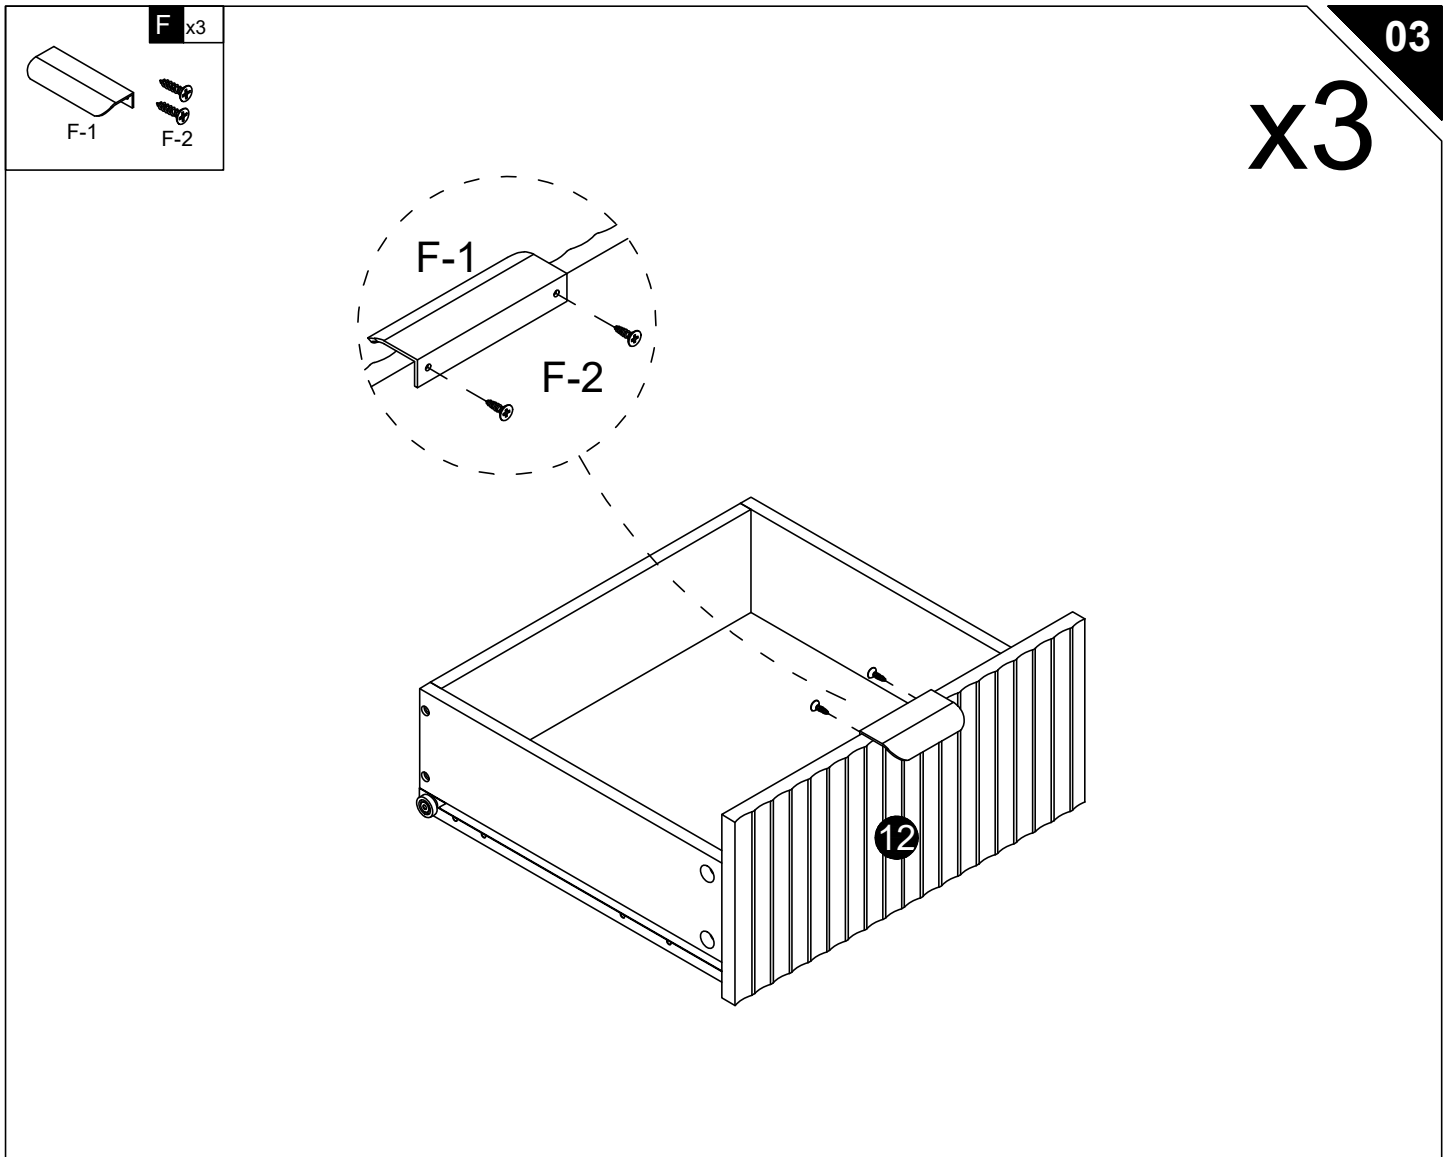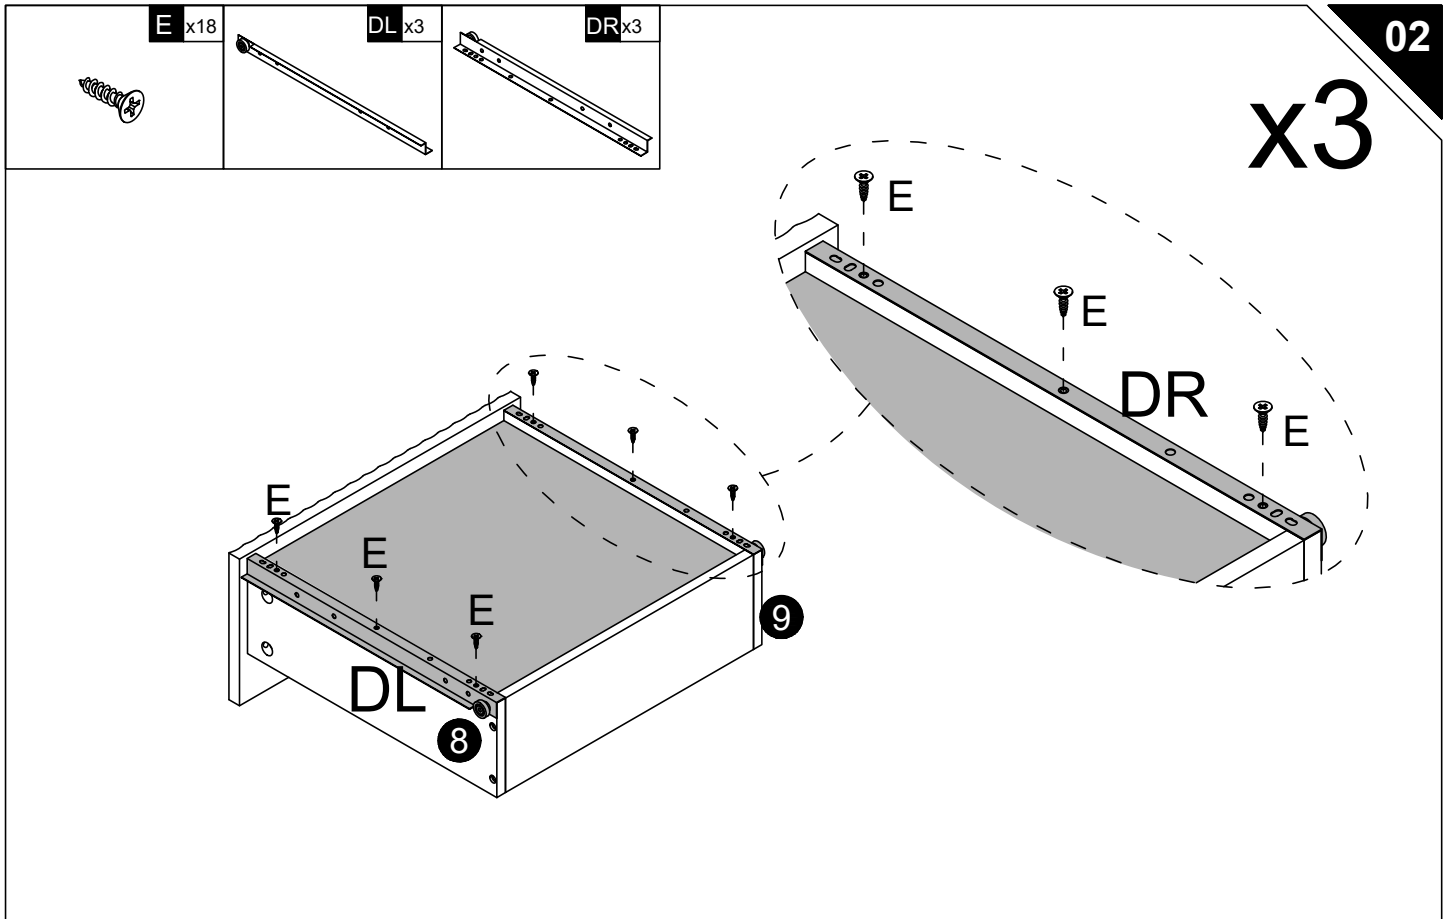

04

E x9



CL x3

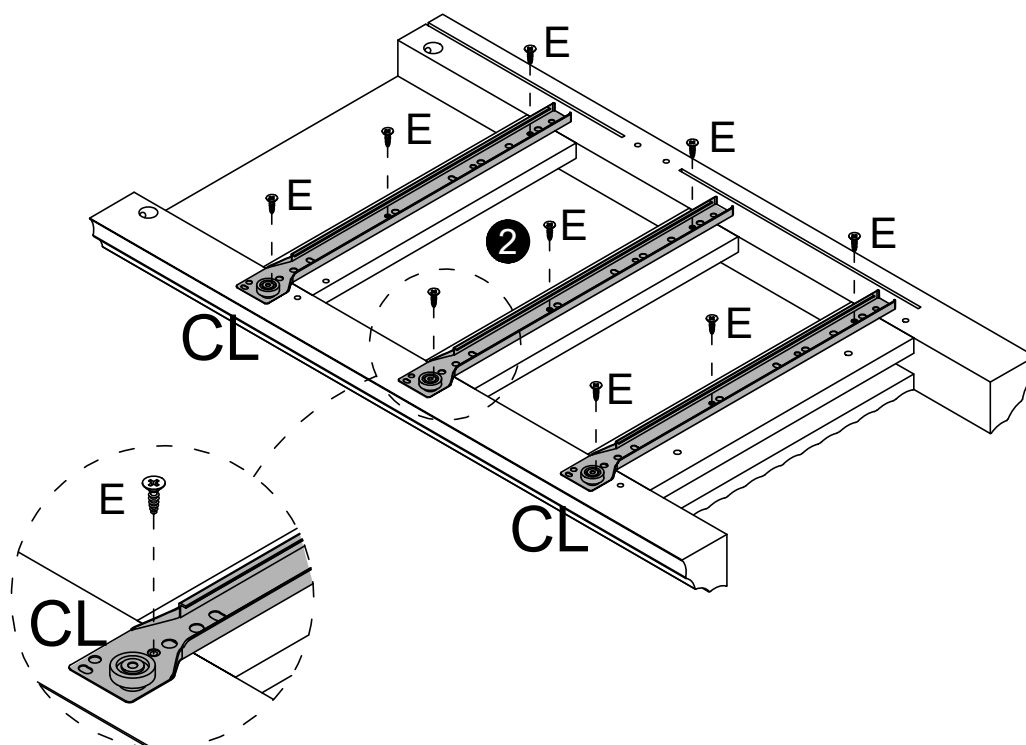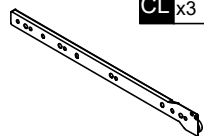

05

A x6


H x2

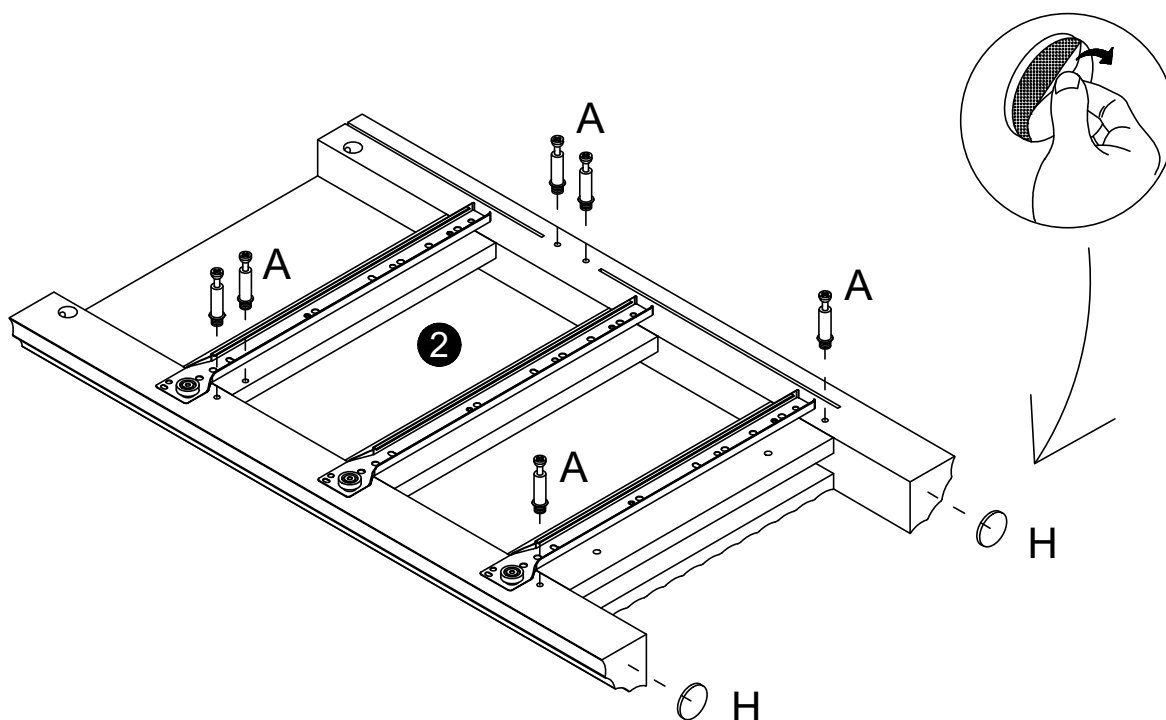

E x9

CR x3



06

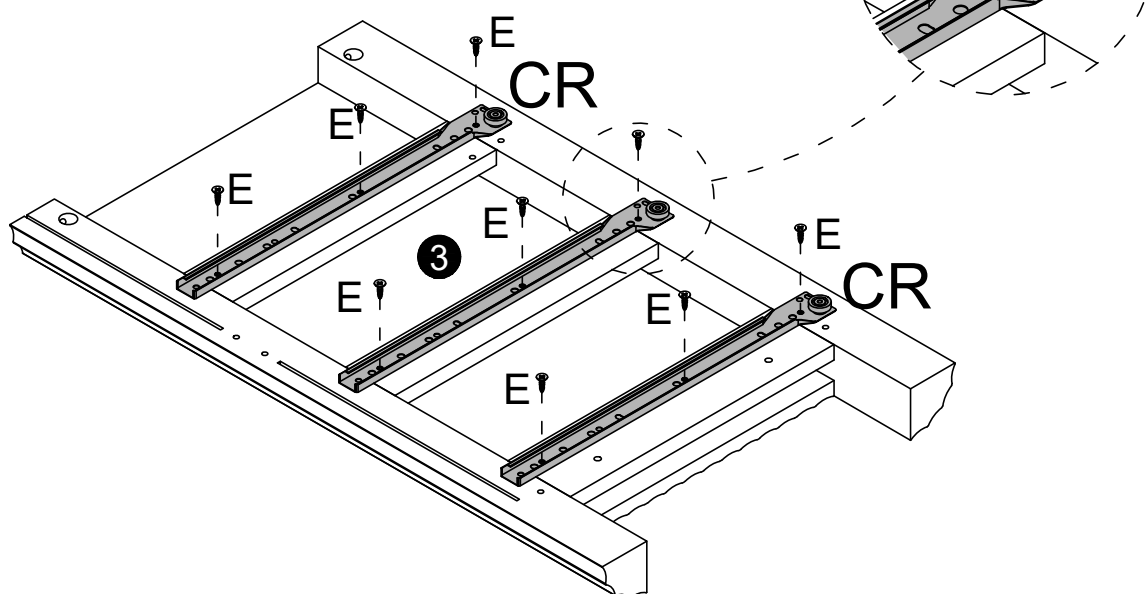

A x6

H x2


07

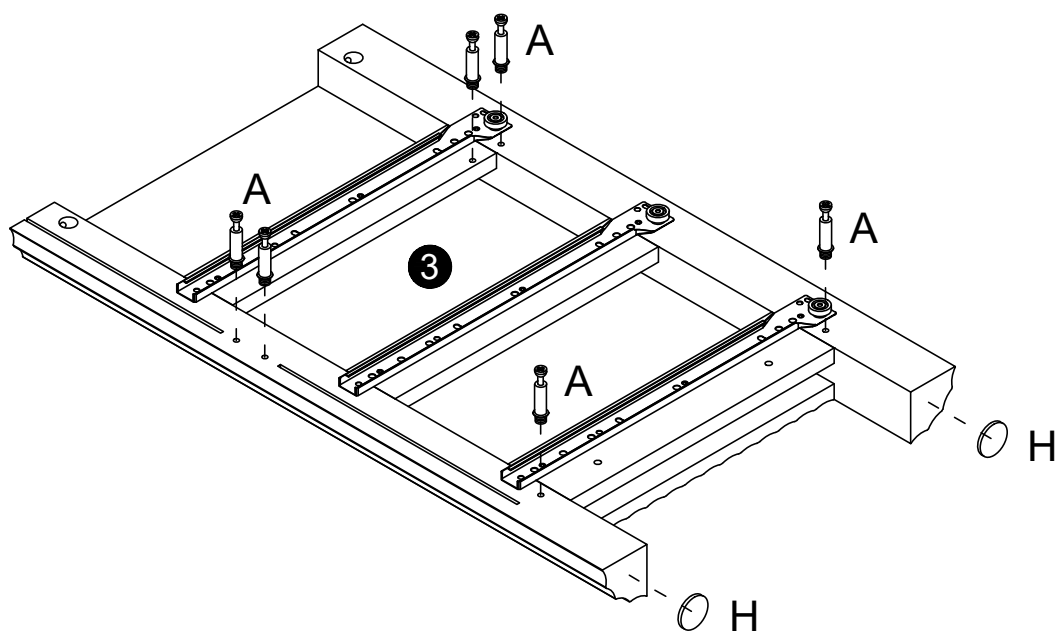

B x6


C x2

08

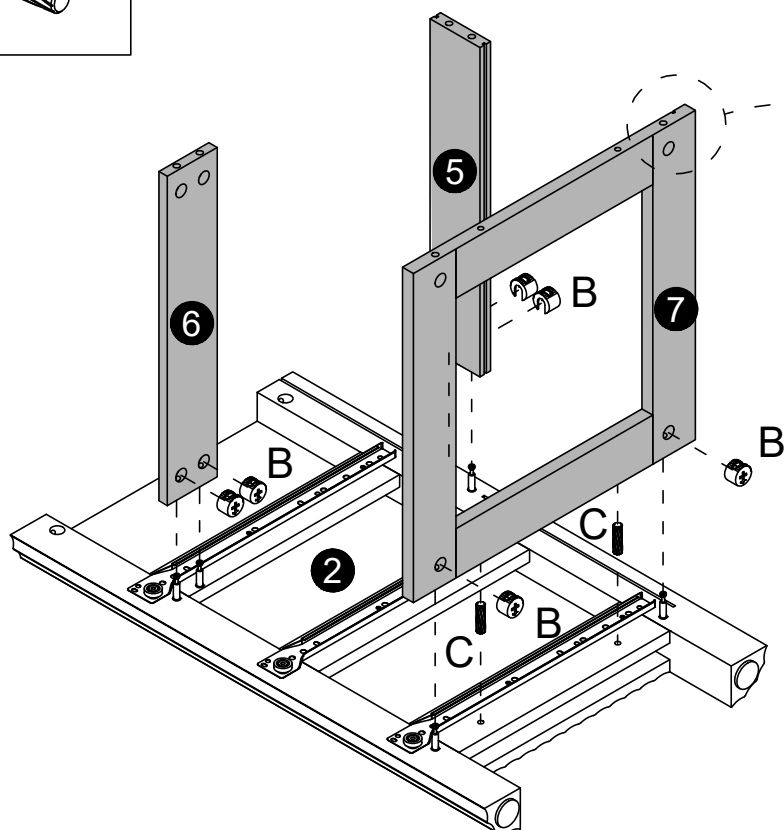


C x2

09

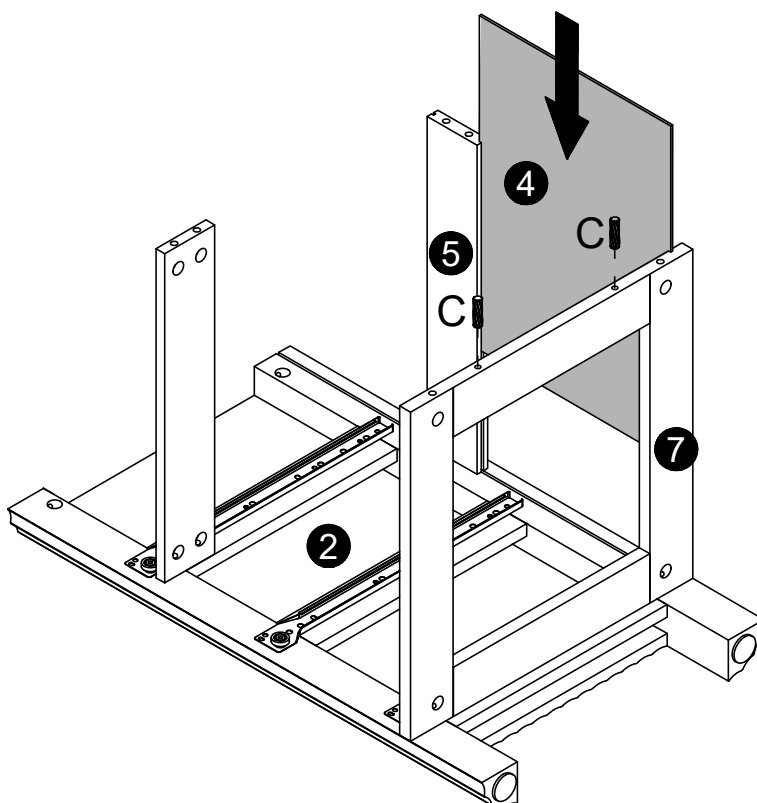


B x6

10


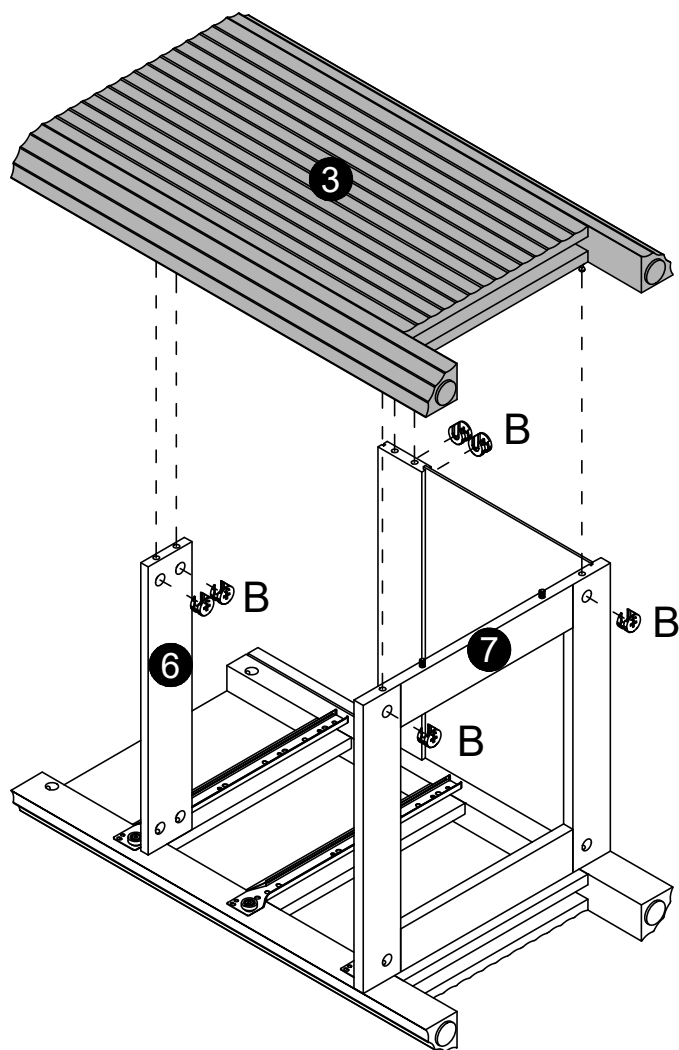


C x4


11

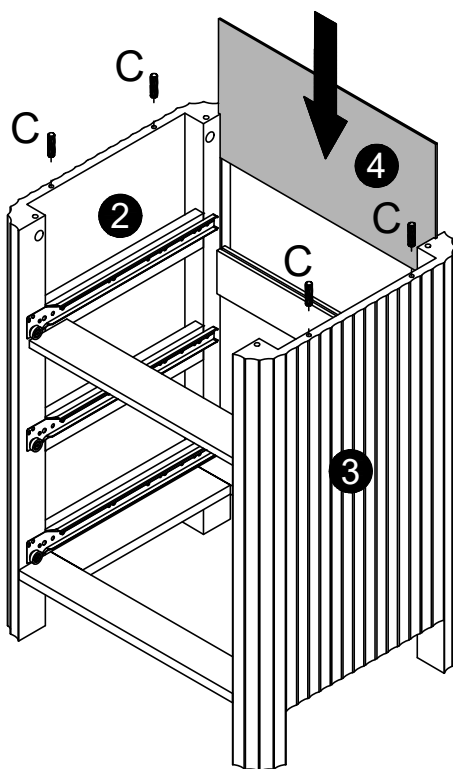

A x4

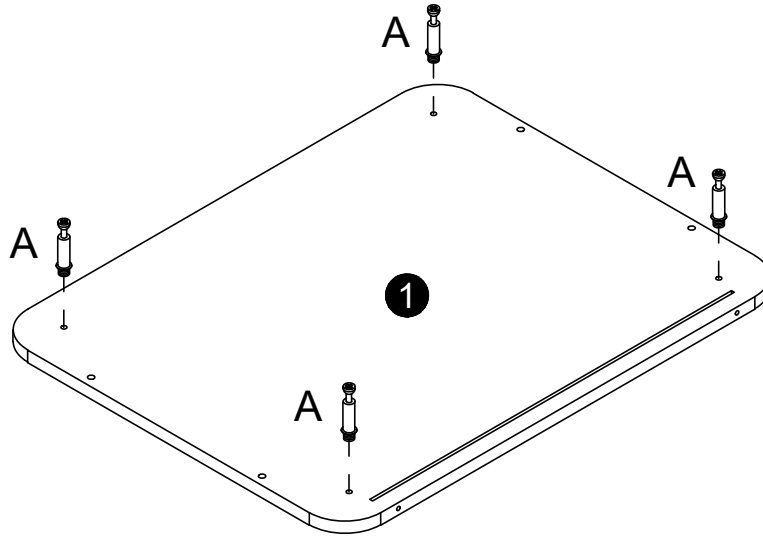

B x4

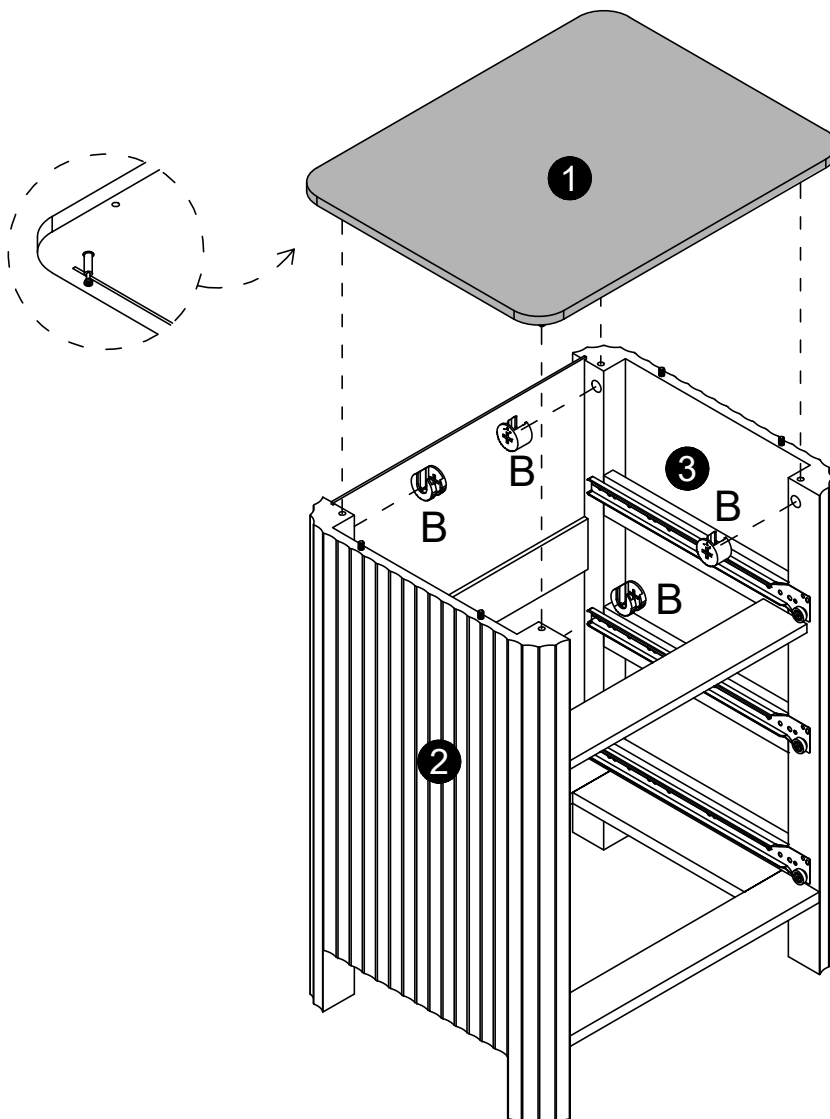








J-1




J-2


J x8

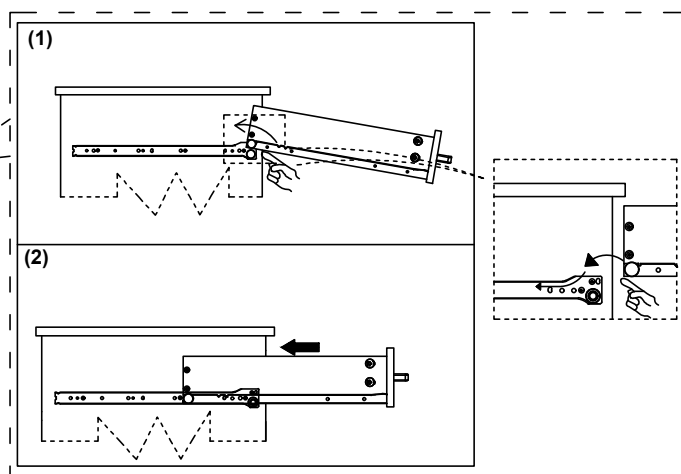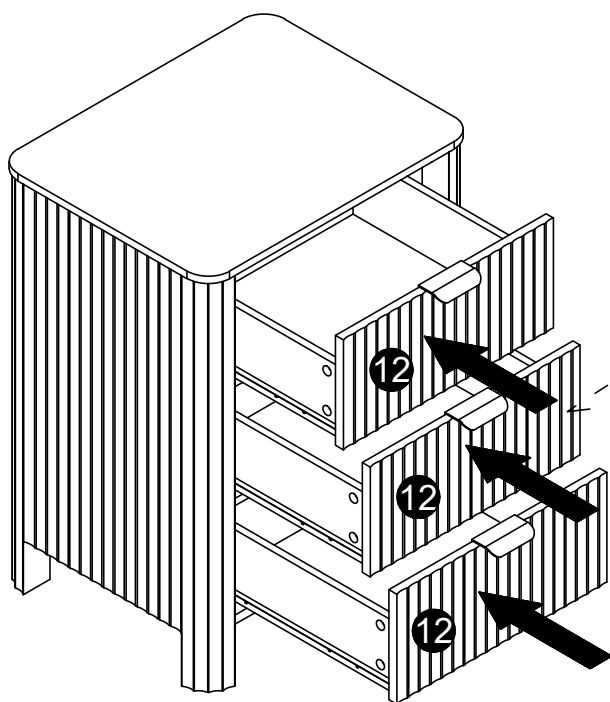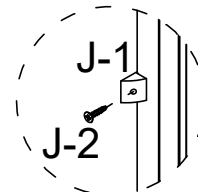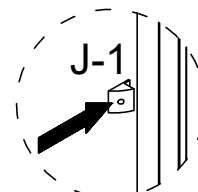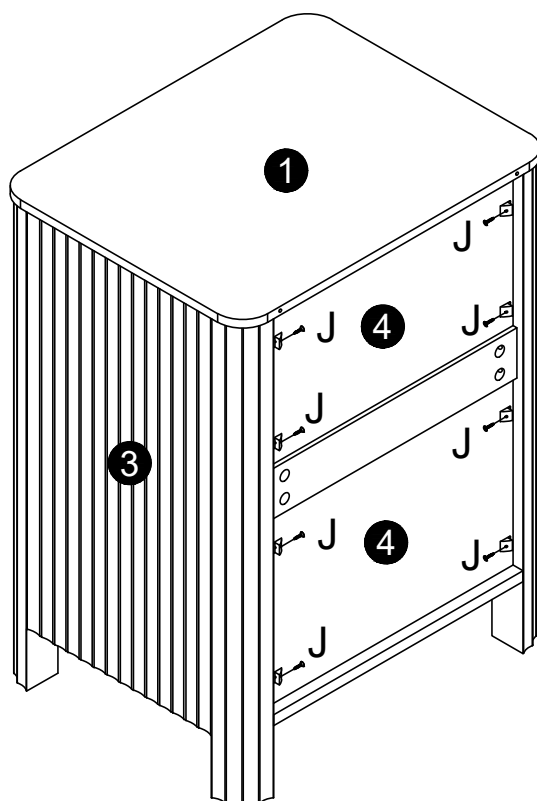


D x2



G x2



I x2




G-1

G-2

(1)x2

First fix the anti-rewind screw in the reserved hole of the product.


WALL

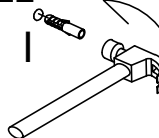

(4)x2

Then, put the expansion bolt into the hole


WALL

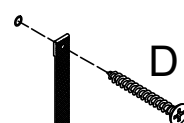

(5)x2

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

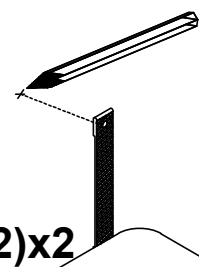

(2)x2

WALL

drilling hole
Ø6x30mm



(3)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.

WALL

