



SKU: HK-BF-019-CL-Q

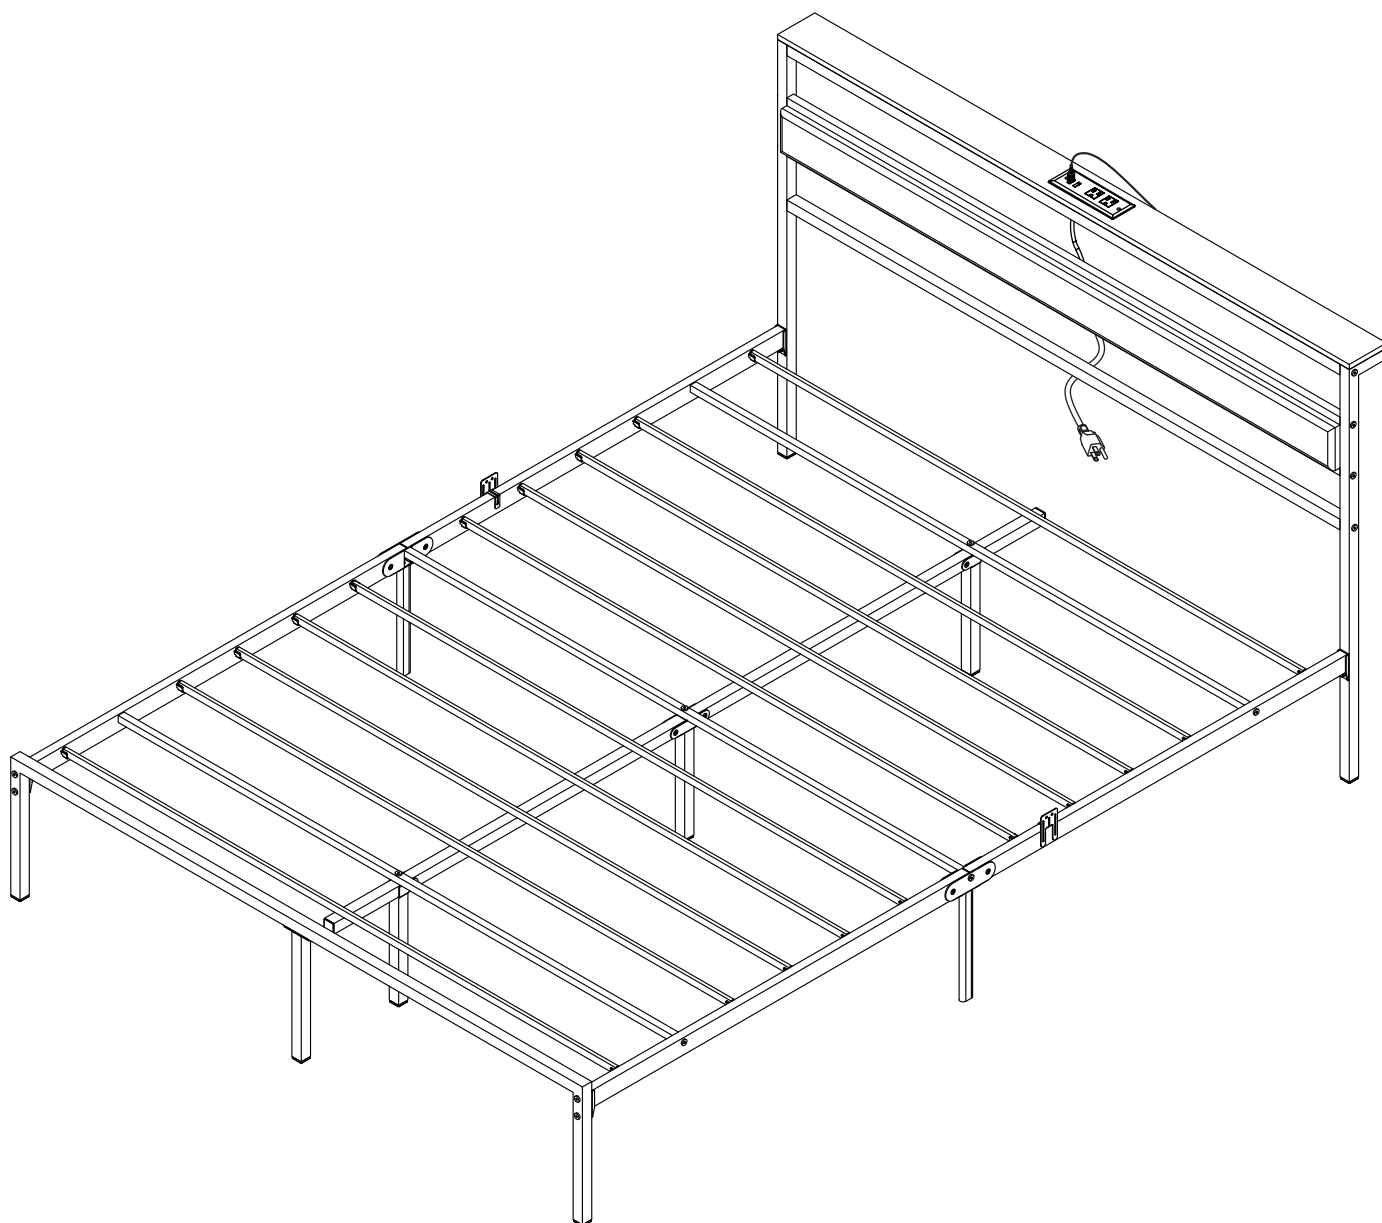














Z7-20250808

User Manual










Disassembly Diagram

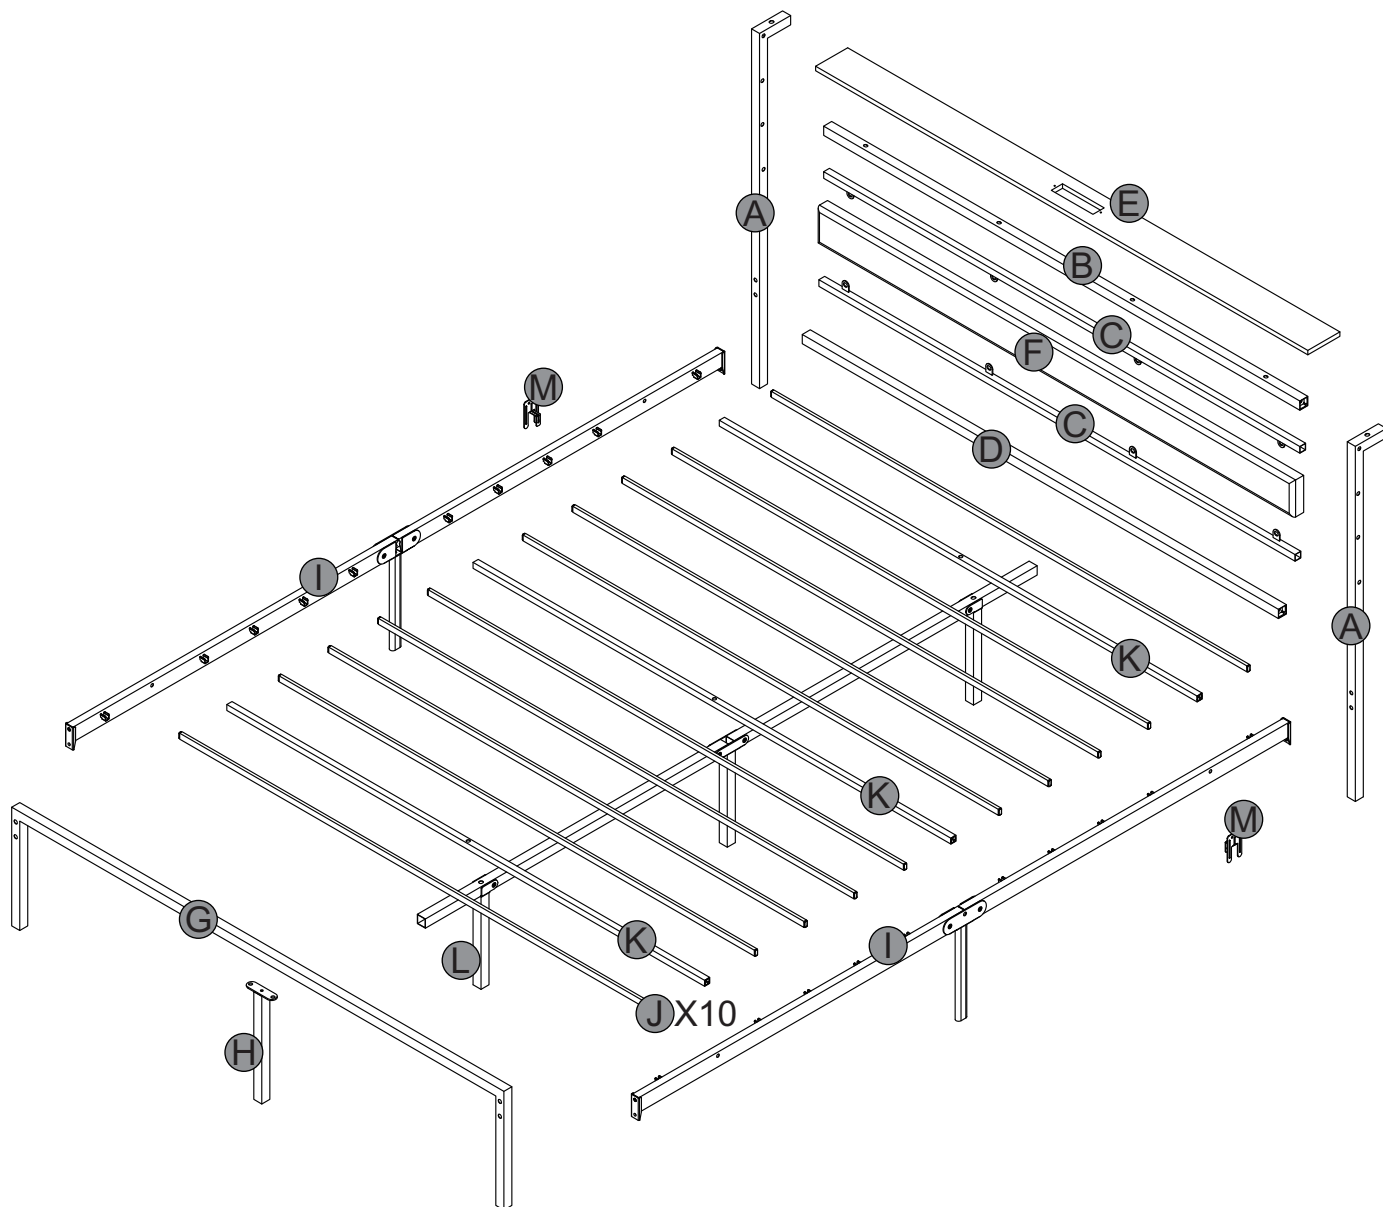

Accessories

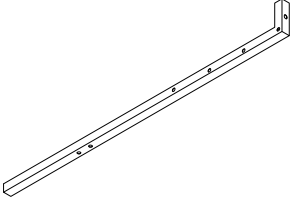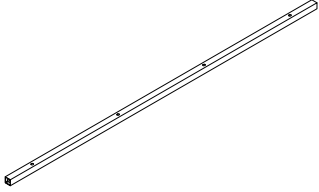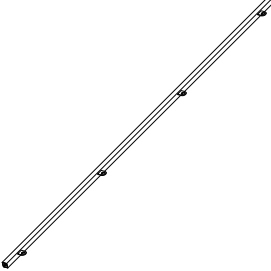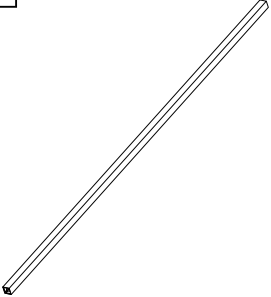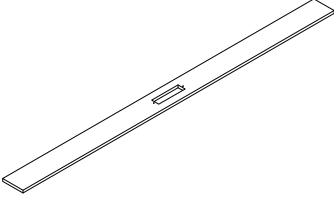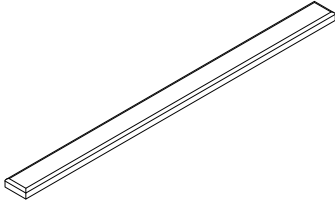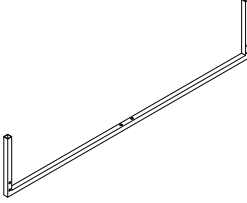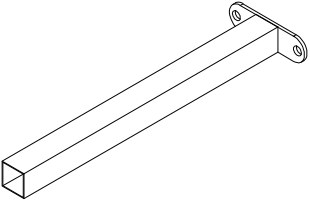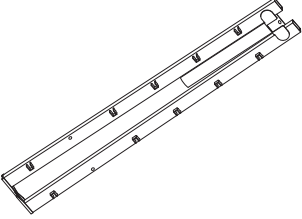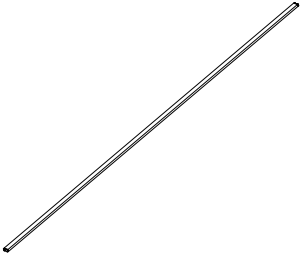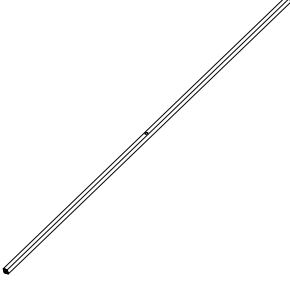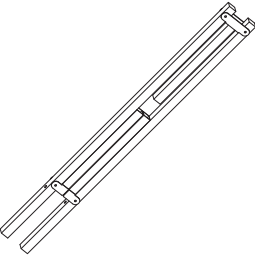

A x2 	B x1 	C x2 	D x1 
E x1 	F x1 	G x1 	H x1 
I x2 	J x10 	K x3 	L x1 
M x2 			

Accessories

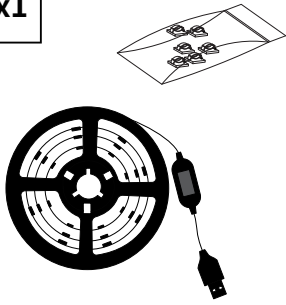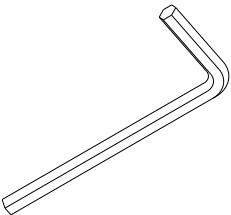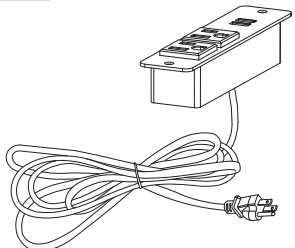
1 x11 +1  M8×55mm	2 x6  M8×45mm	3 x8 +1  M8×35mm	4 x1 
5 x10  M6×15mm	6 x6  M6×33mm	7 x2  Ø4×14mm	8 x1  M5
9 x1  M4	10 x1 		

Assembly Instructions

Step1: Attach part B,C,D onto frame A using screw 1.

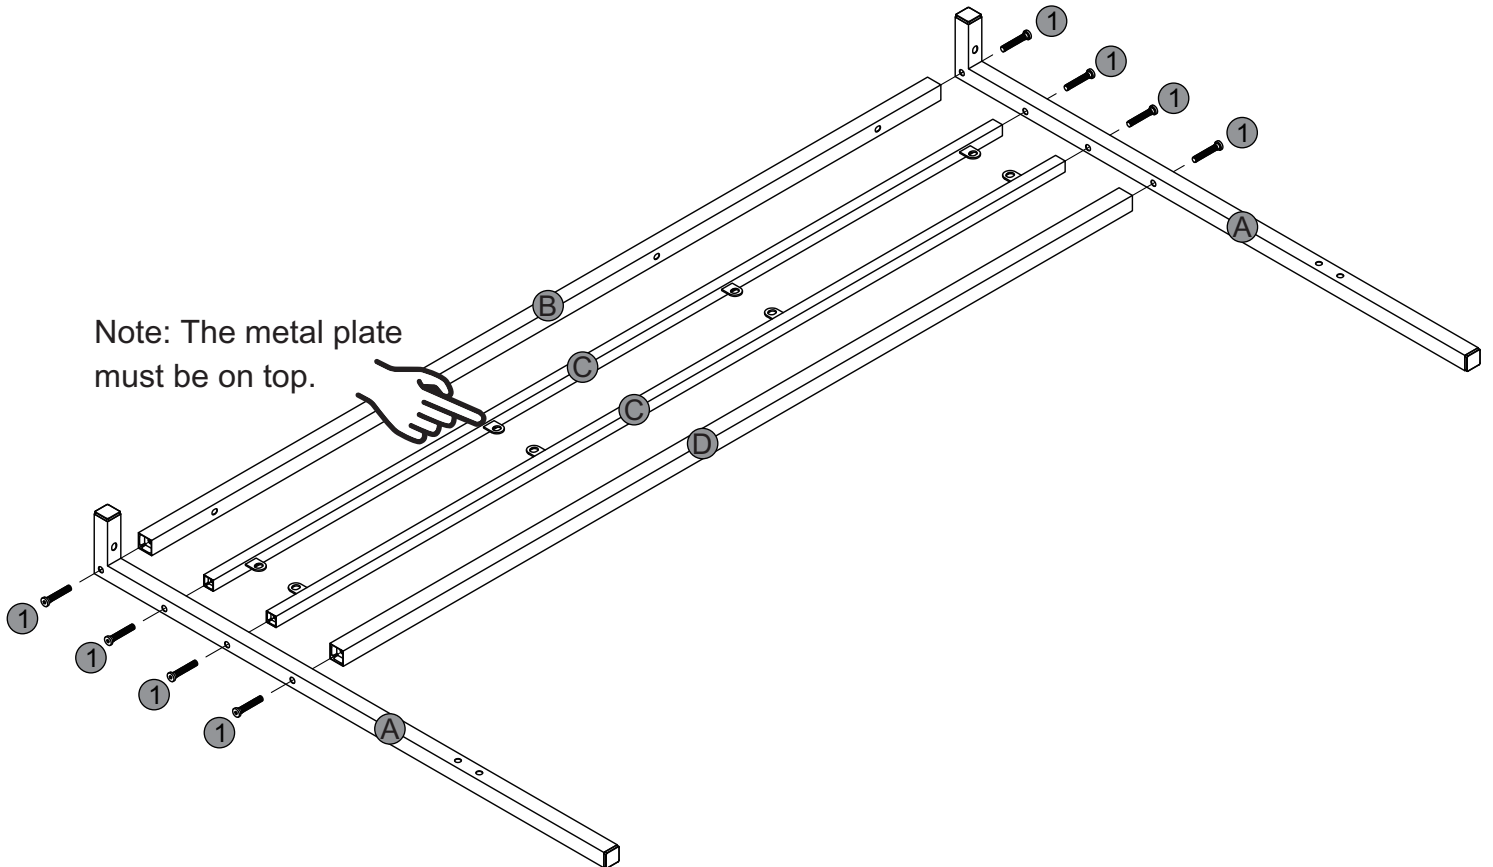



① × 8pcs

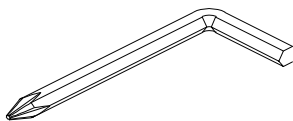


⑧ × 1pc

Assembly Instructions

Step2: Attach part E onto frame A and B using screw 6.

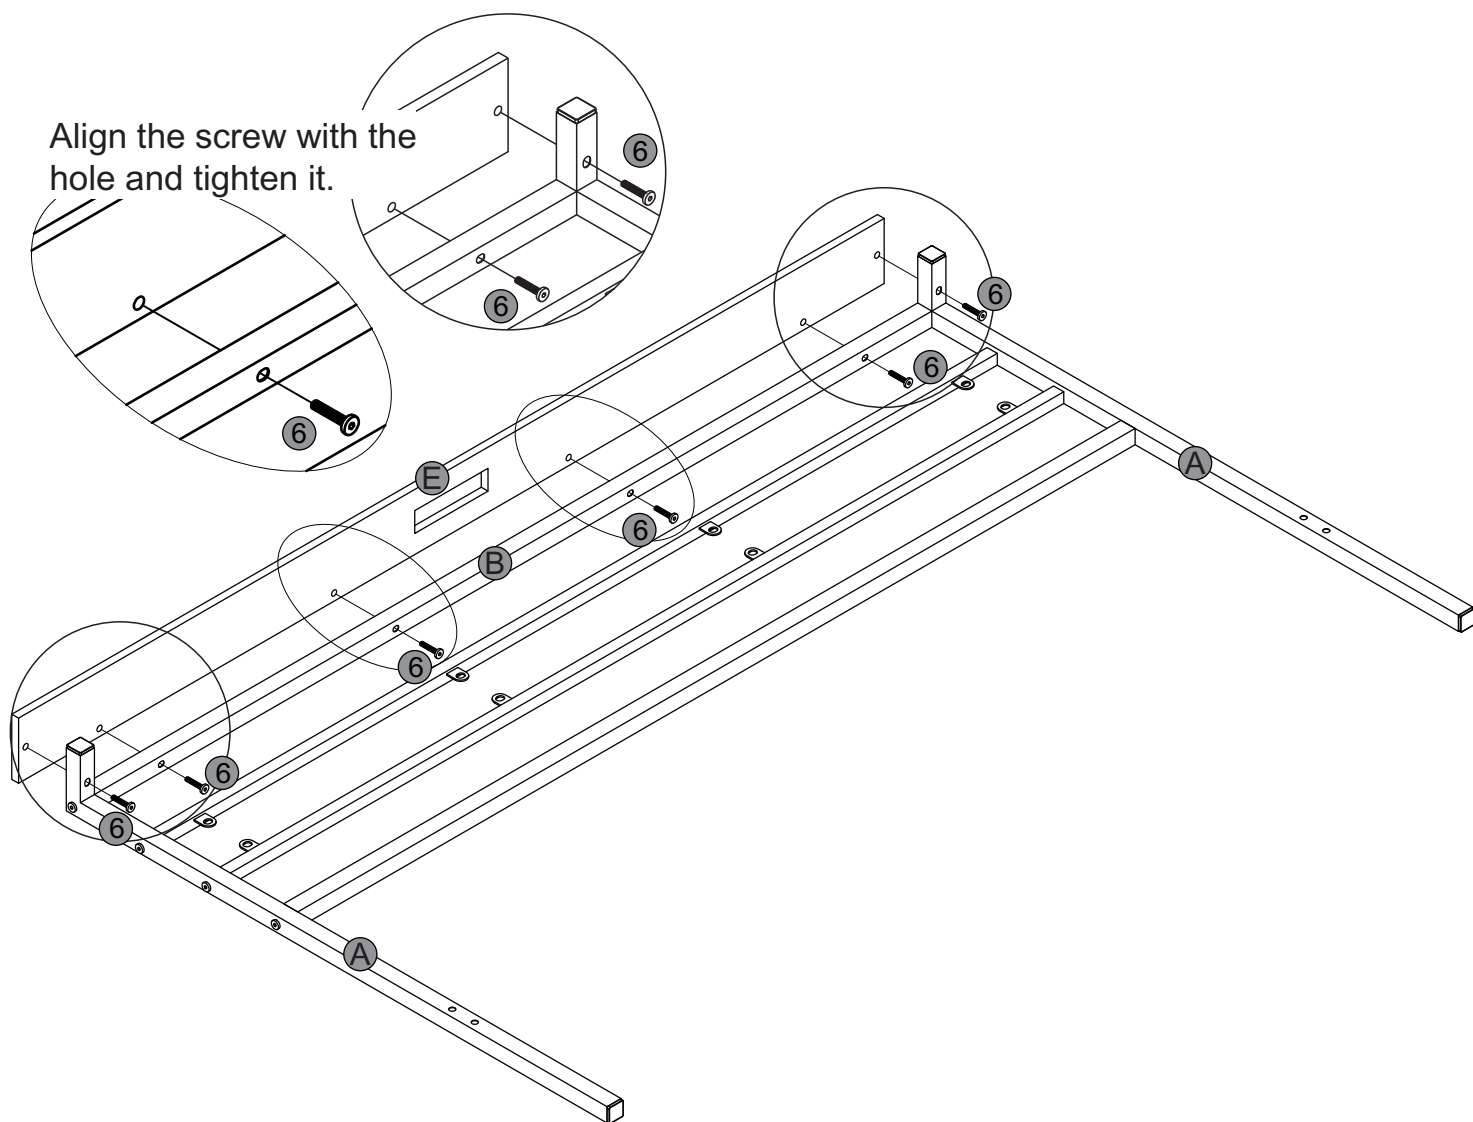



6 × 6pcs

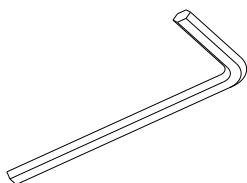


9 × 1pc

Assembly Instructions

Step3: Attach part F onto frame C using screw 5.

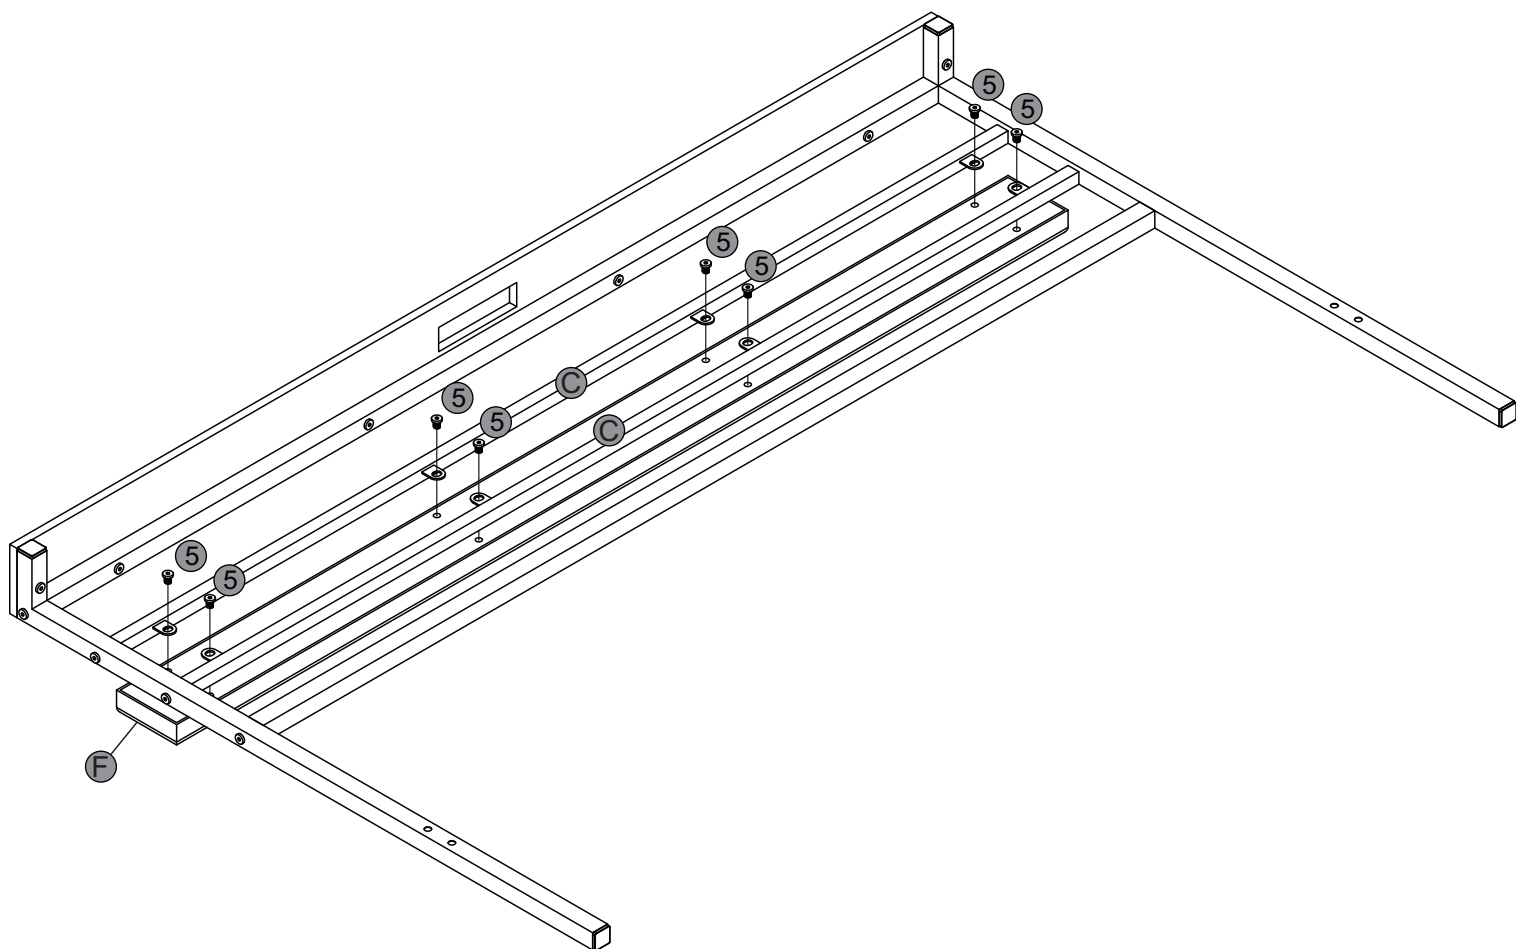



5 × 8 pcs

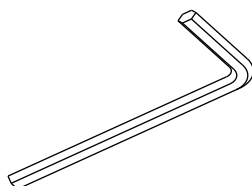


9 × 1pc

Assembly Instructions

Step4: Attach part H onto frame G using screw 5.

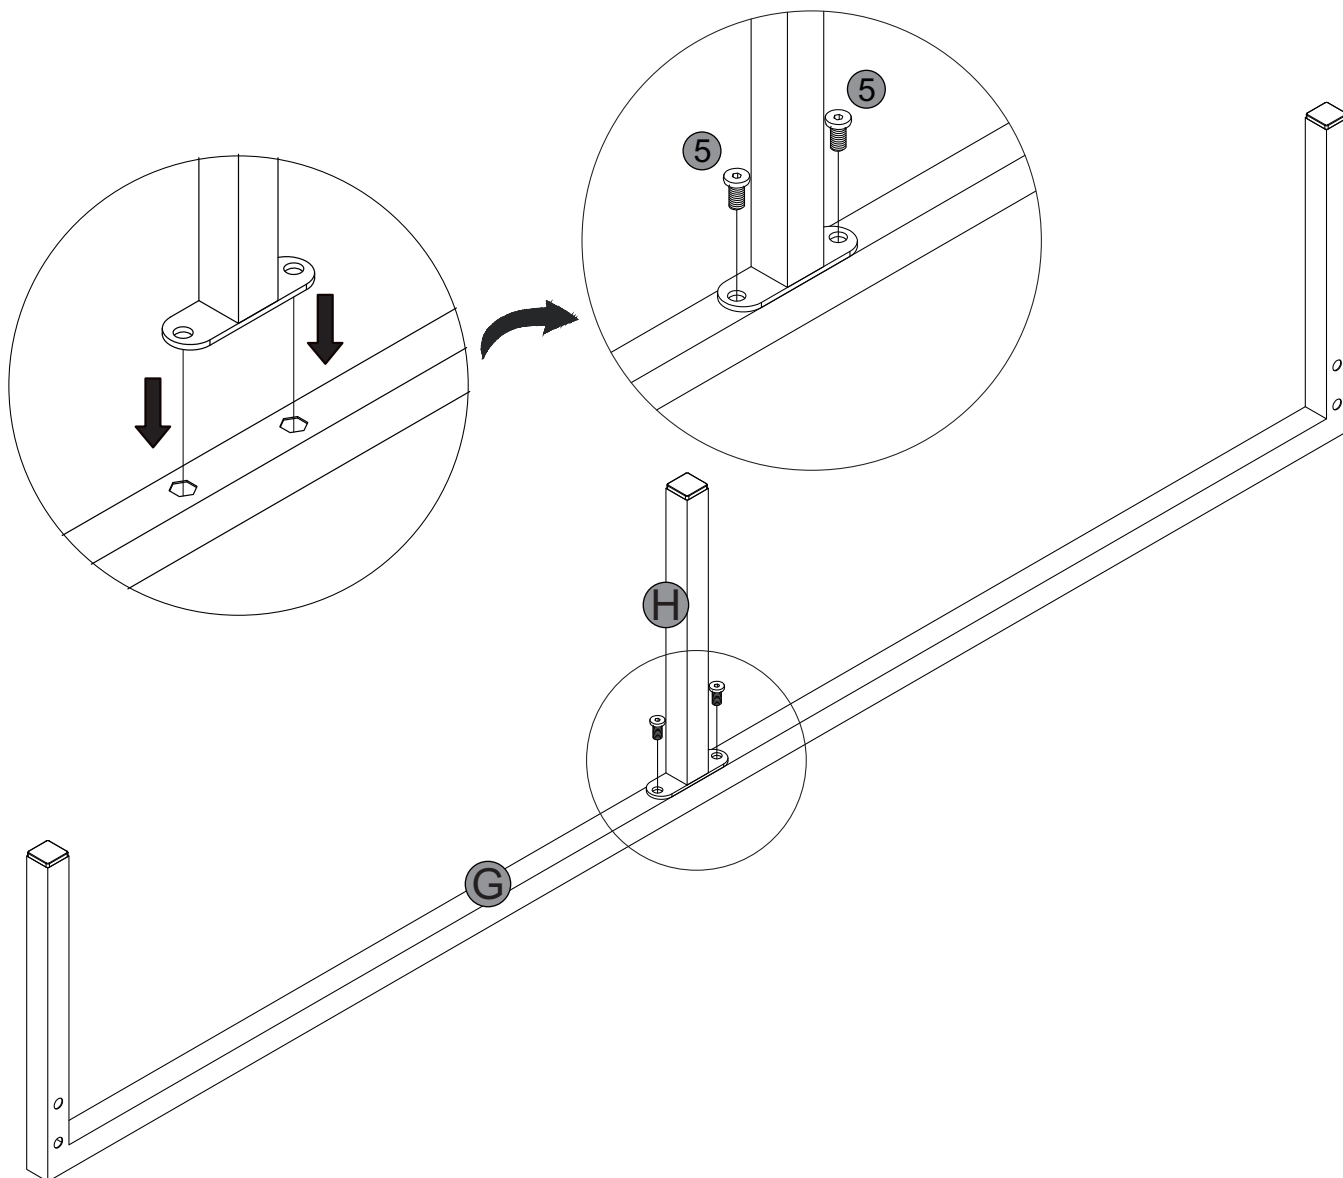


5 × 2pcs

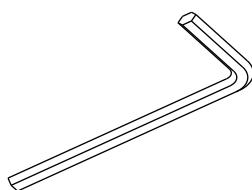

9 × 1pc



Assembly Instructions

Step5: Unfold frame I.

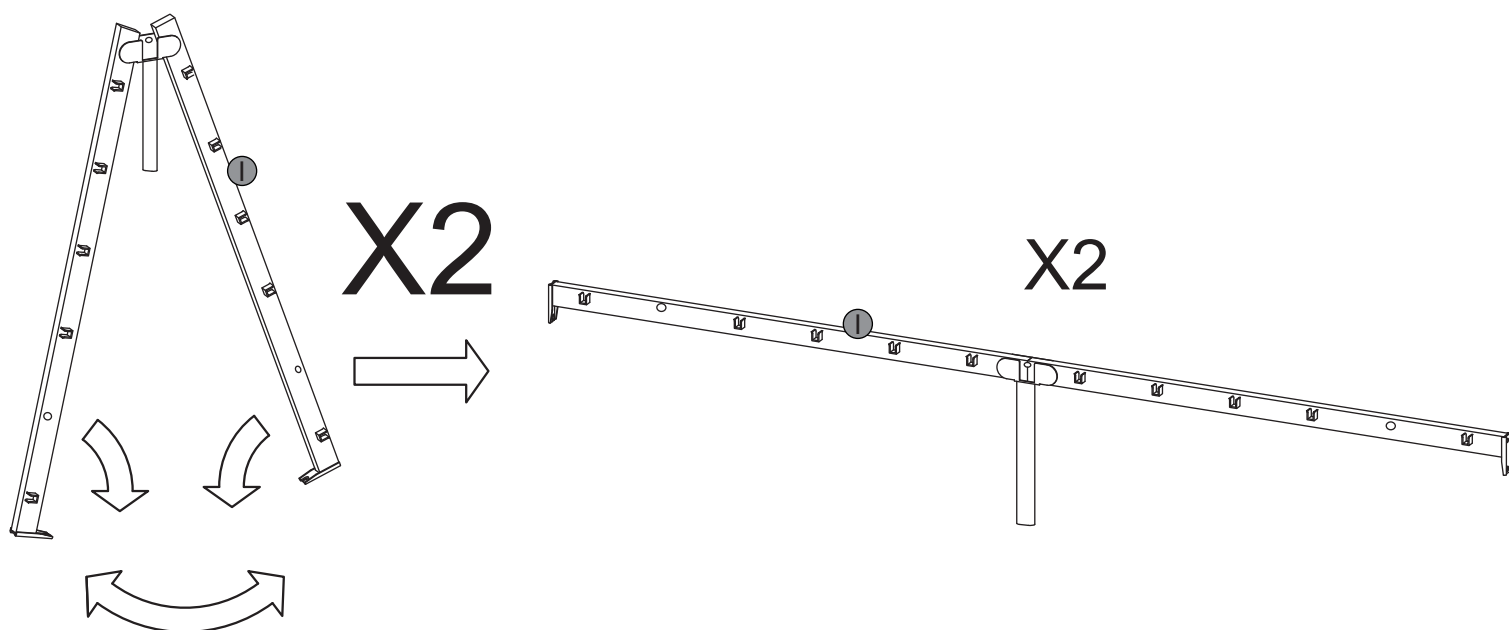


Assembly Instructions

Step6: Connect A and G with Part I using screw 3.

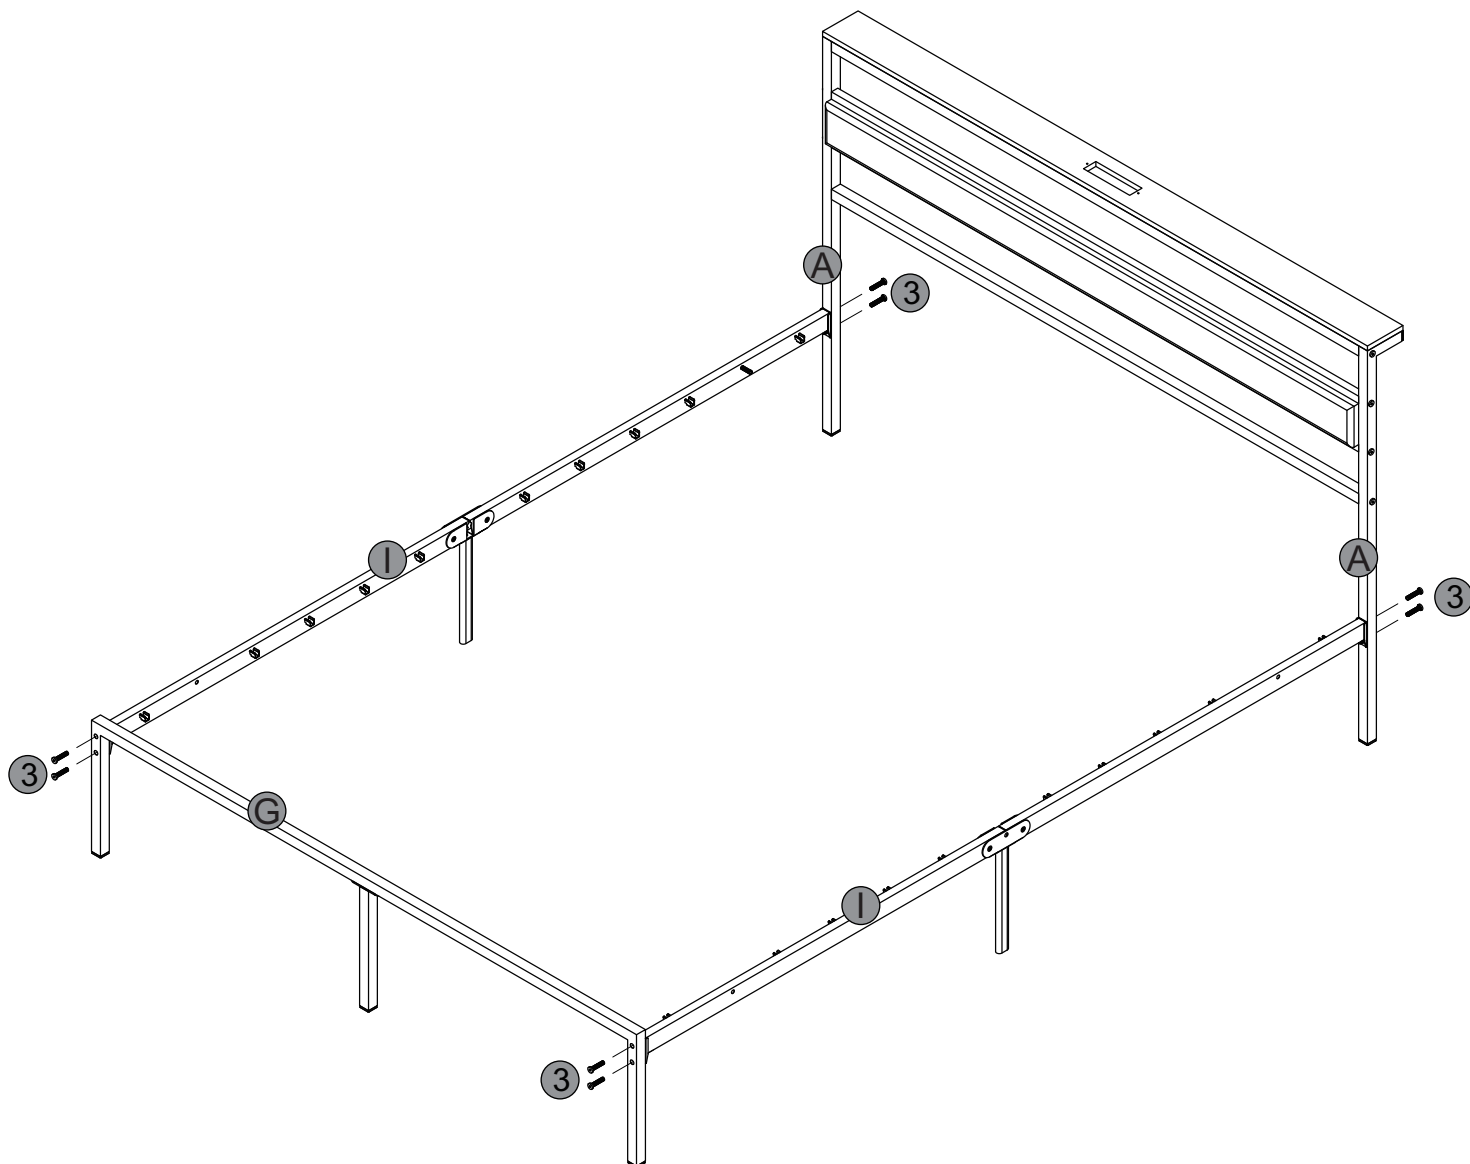



3 × 8pcs

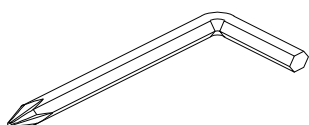


8 × 1pcs

Assembly Instructions

Step7: Attach part K onto frame I using screw 2.

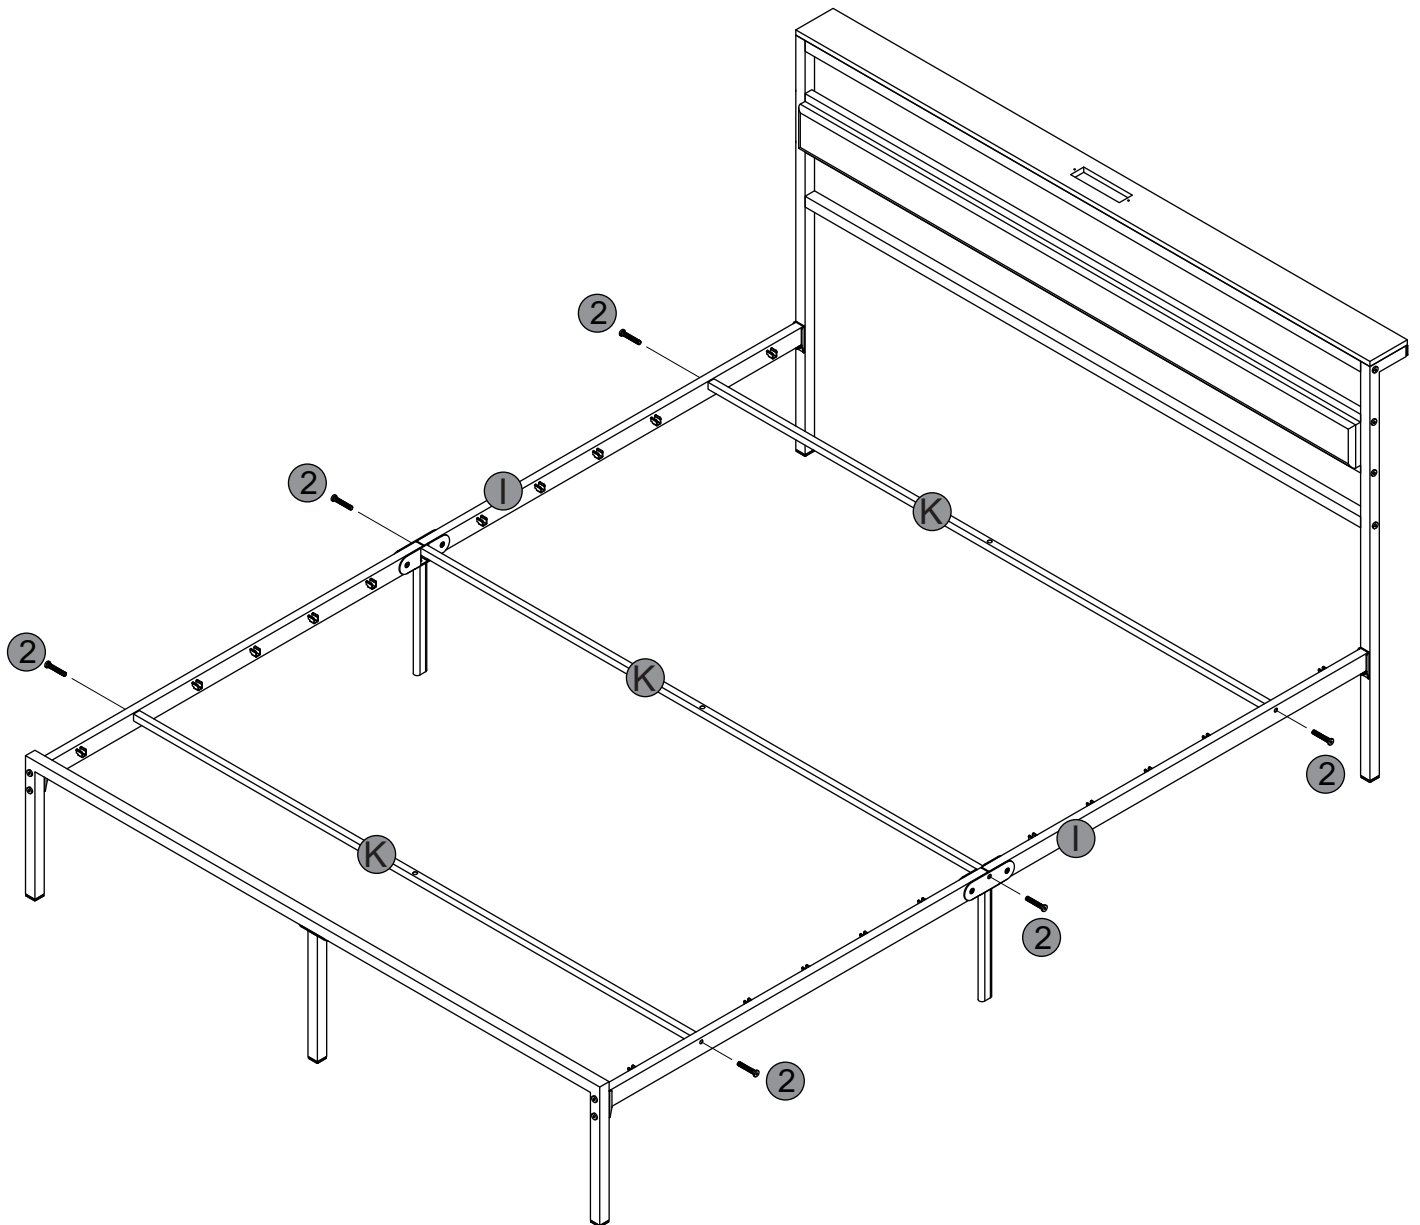


2 × 6pcs



8 × 1pc



Assembly Instructions

Step8: Unfold frame L.

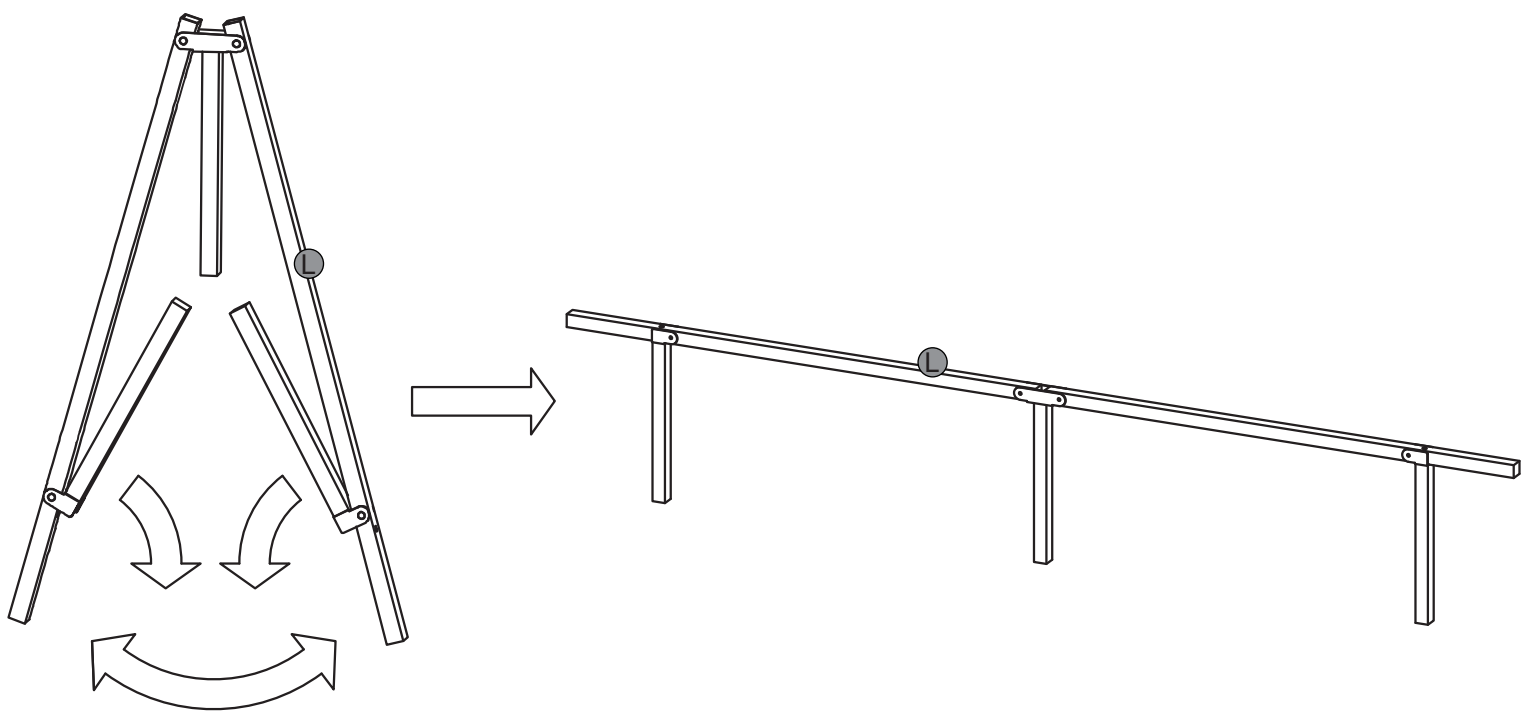


Assembly Instructions

Step9: Attach part L onto frame K using screw 1.

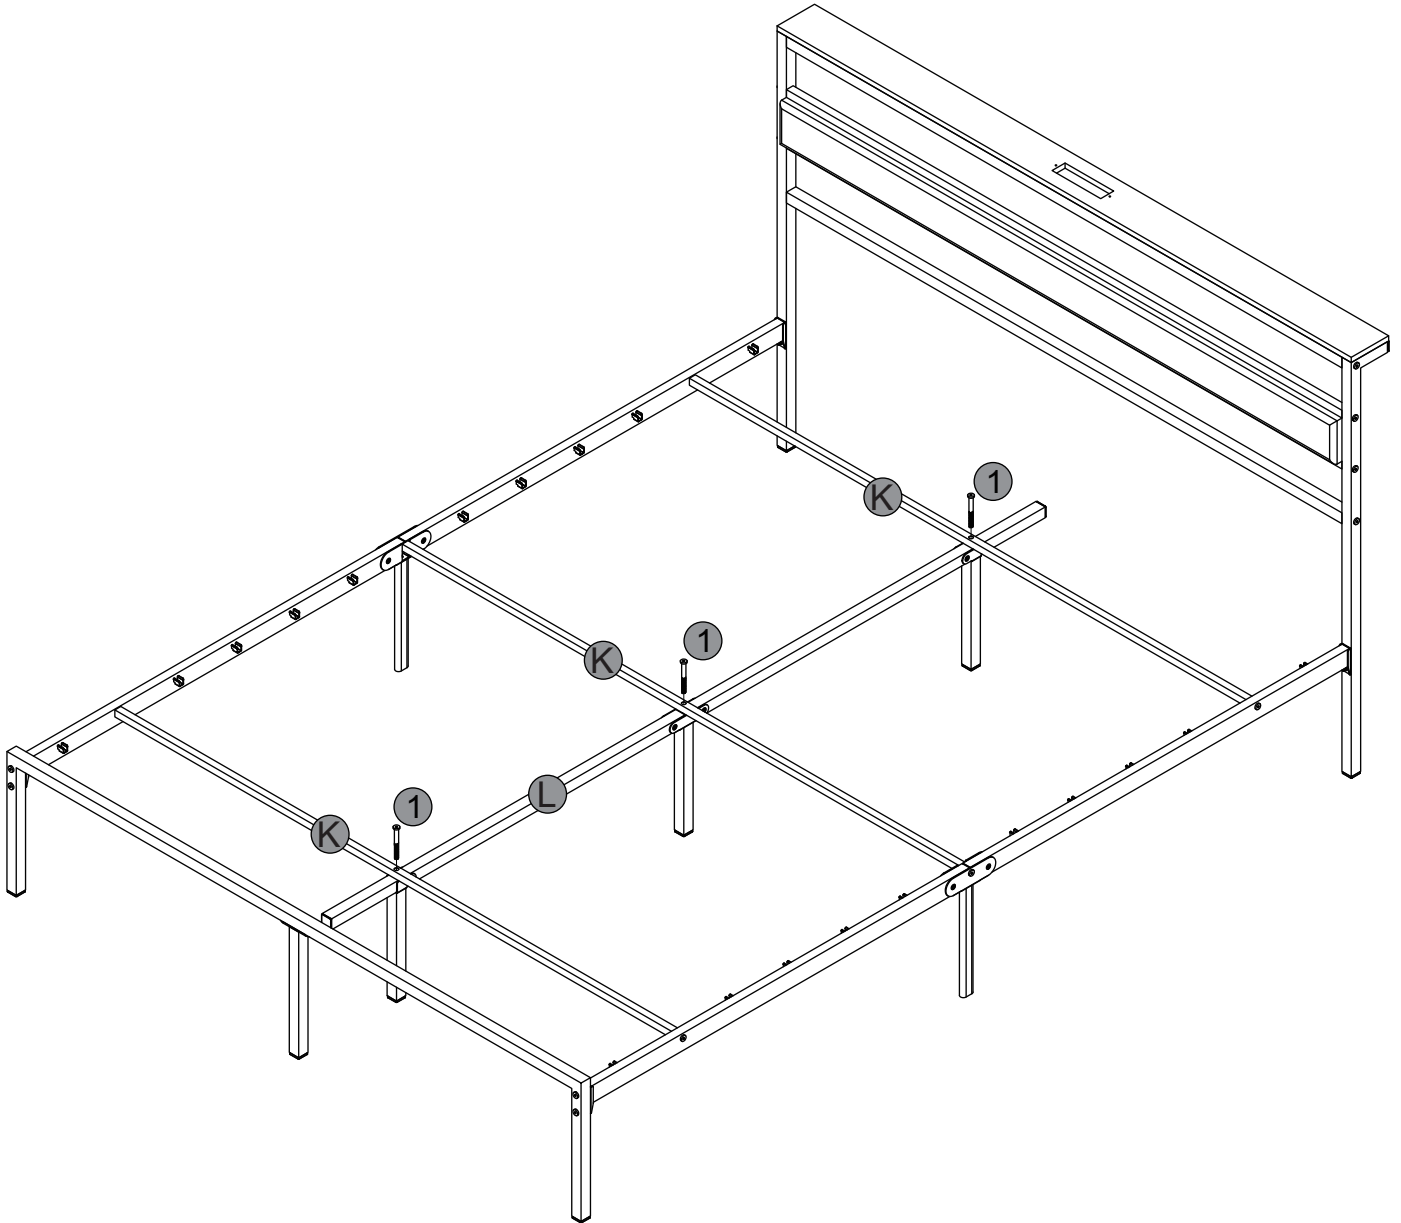


① × 3pcs

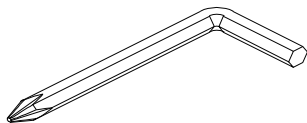

⑧ × 1pcs


Assembly Instructions

Step10: Insert part J into the slot of frame I.

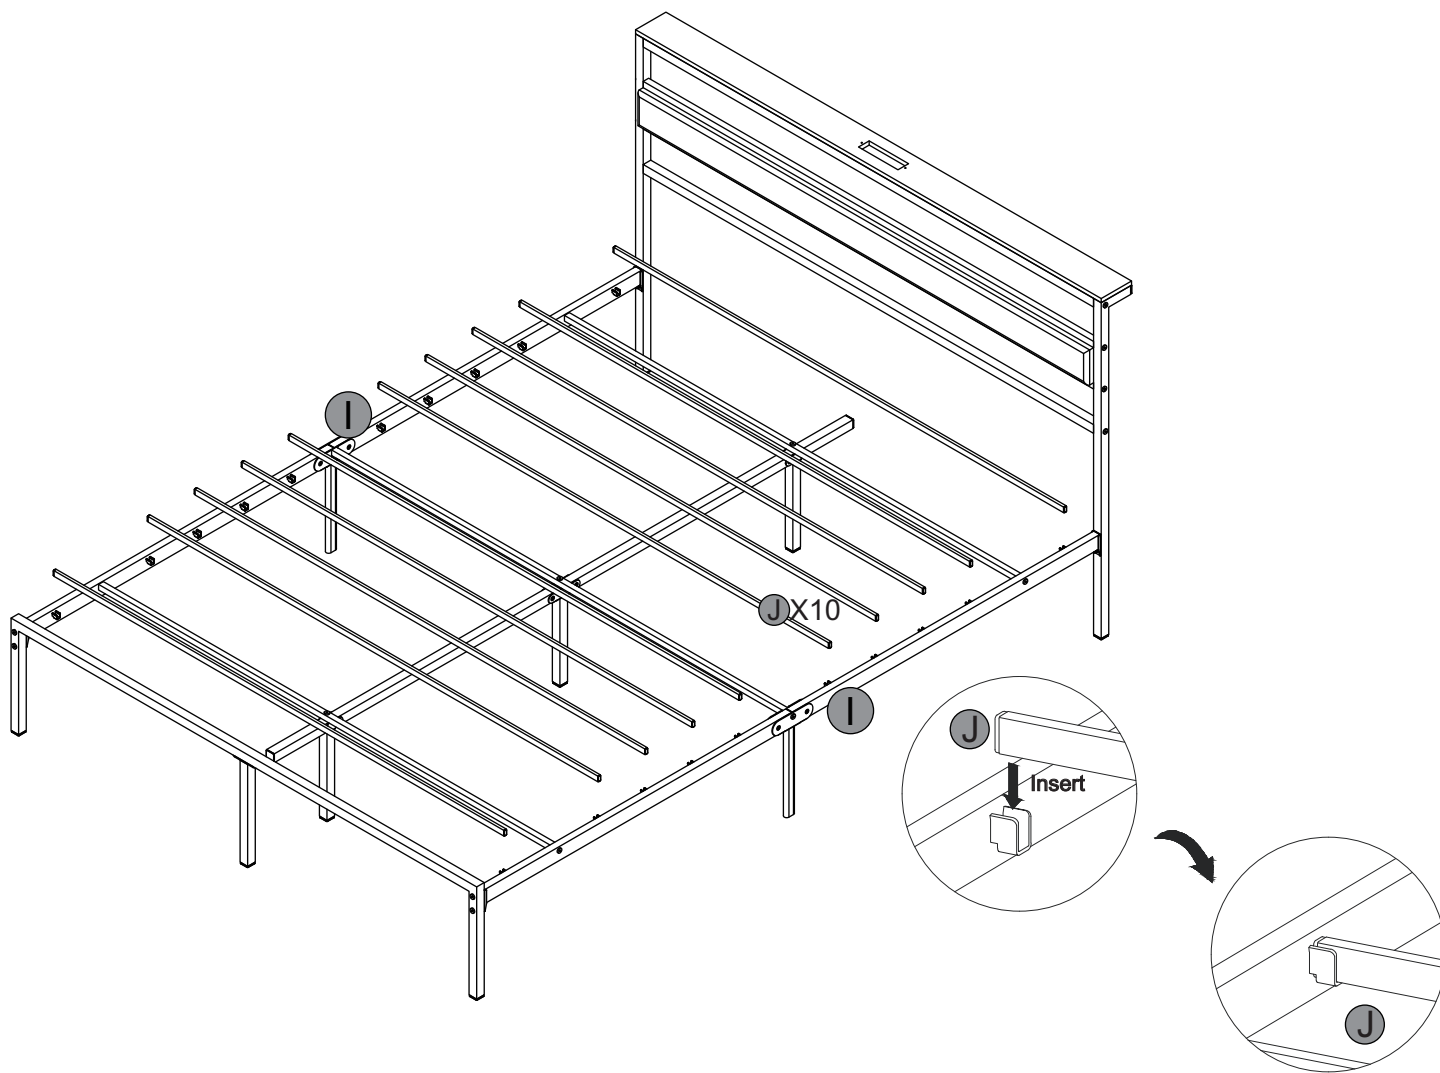




Assembly Instructions

Step11: Insert part M onto part I.

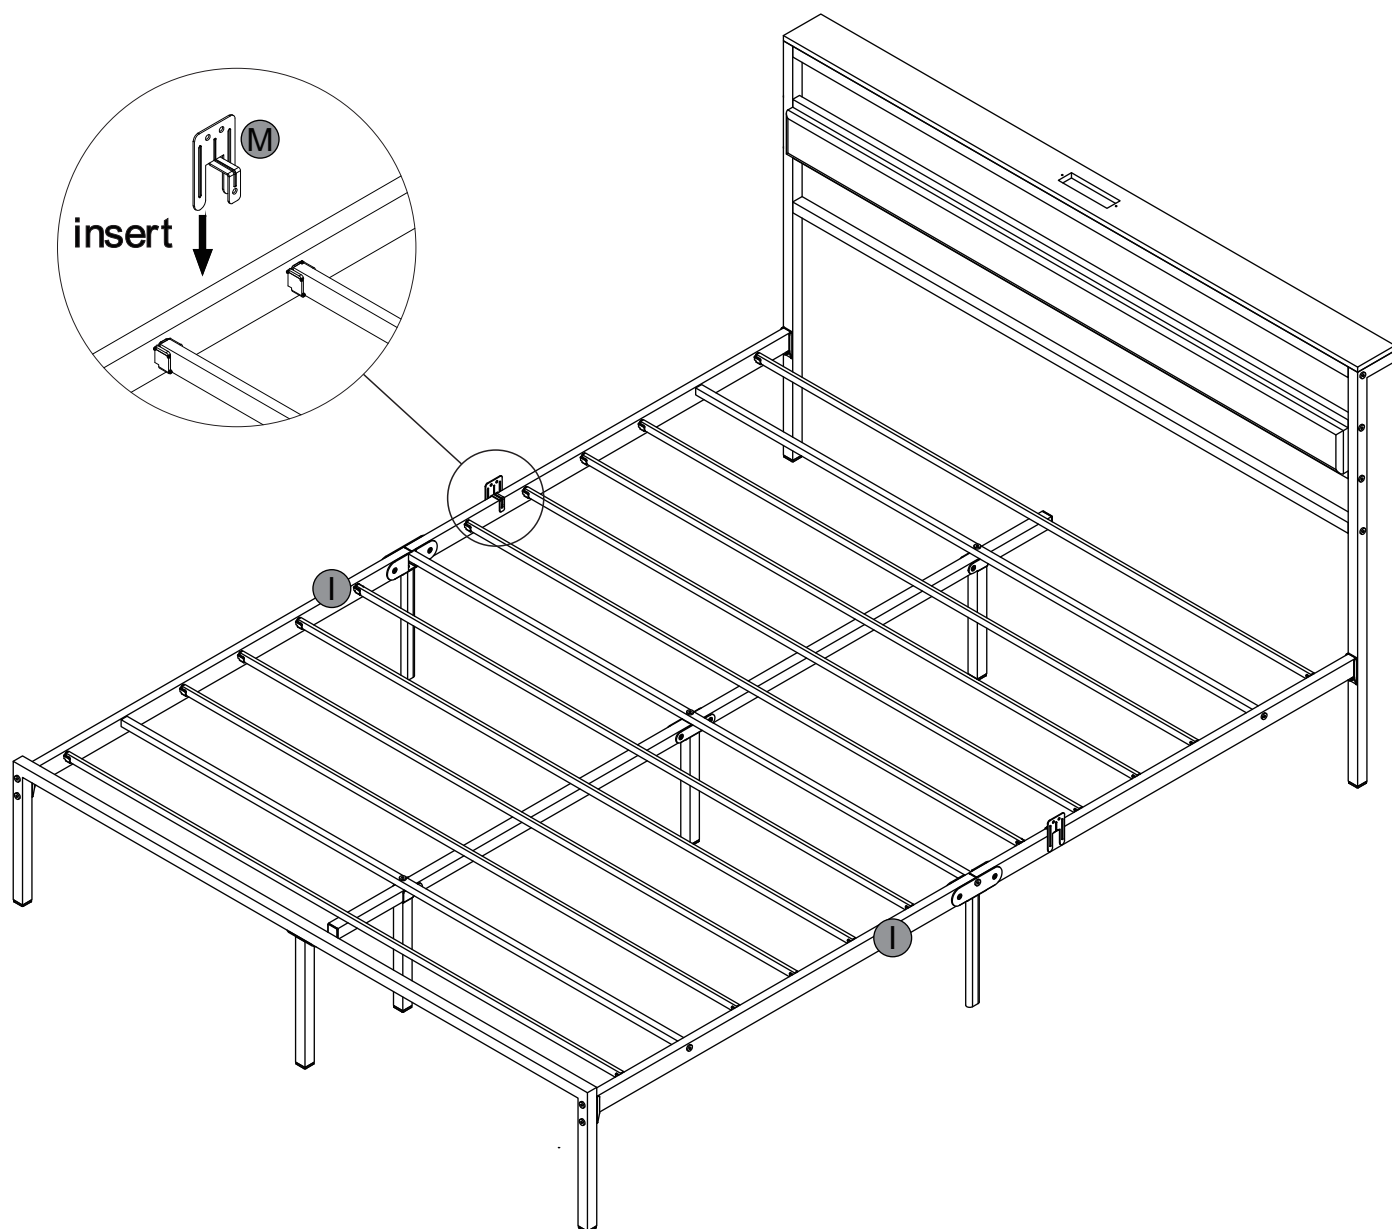

Assembly Instructions


Step 12: Insert outlet 10 into topboard E using screw 7.

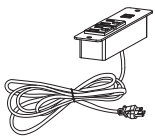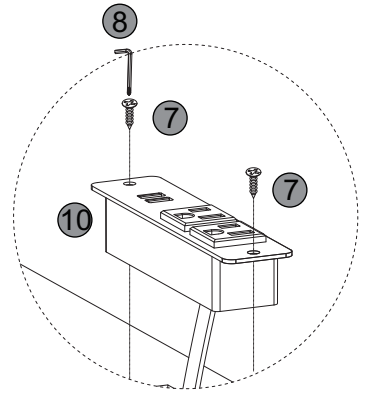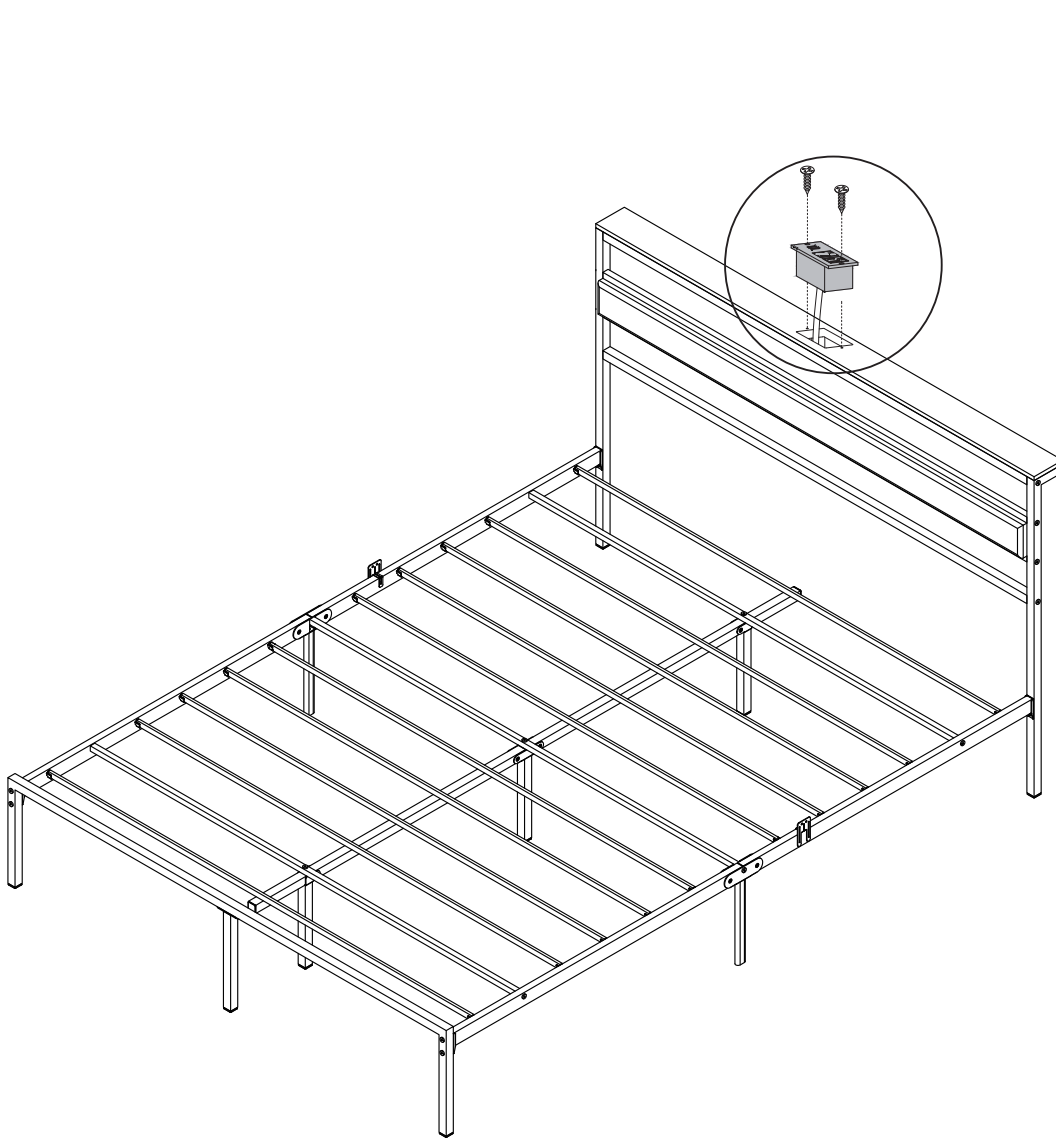

10 × 1pcs





7 × 2pcs



8 × 1pcs

Assembly Instructions

- Step 13:** Peel off the sticker on the LED light strip.
And stick it onto board E (position as shown).

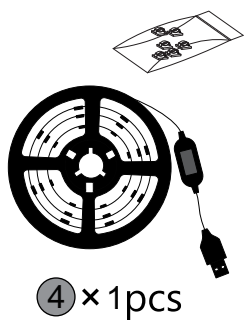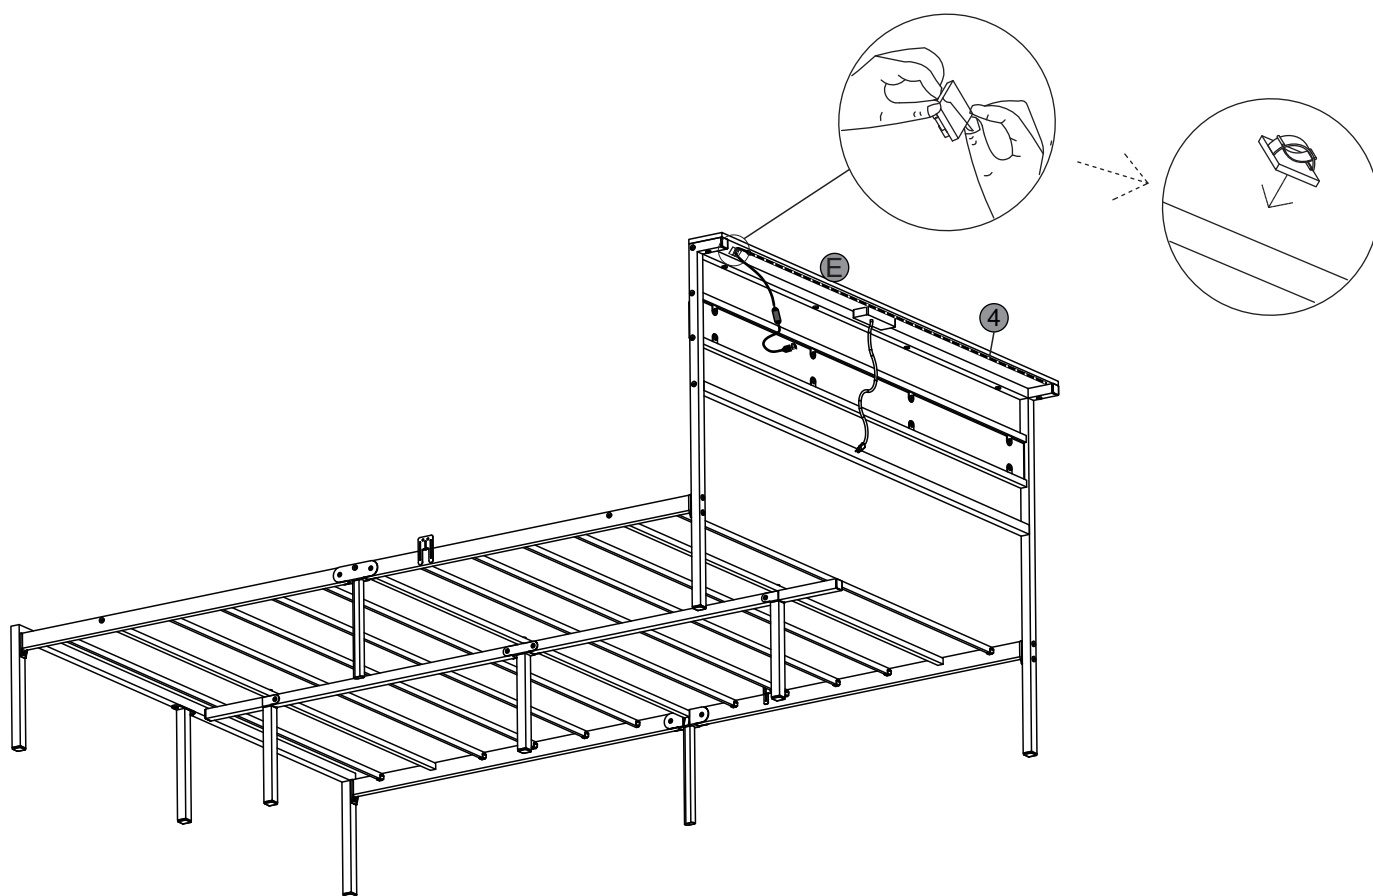

Assembly Instructions

Step 14: Plug the LED in power station .

