











ASSEMBLY INSTRUCTION

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT.
BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS THAT MAY HAVE COME LOOSE INSIDE THE CARTON
DURING TRANSIT.


PARTS LIST:

NO	DESCRIPTION	SIZE(mm)	SKETCH	QTY
A	POLE	55*55		4PCS
B	FRAME	1214*614		1PC
C	STRECTH	1214*614		1PC
D	PUCK	ϕ38*12		4PCS


HARDWARE LIST:

NO	DESCRIPTION	SIZE(mm)	SKETCH	QTY
a	WASHER	ϕ8.5		24PCS
b	SPRING WASHER	ϕ8.5		24PCS
c	BOLT	M8x18		24PCS
d	ALLEN KEY	5		1PC
e	ALLEN KEY	3		1PC
f	SHORT SCREW	1/4"*20		4PCS

Step 1

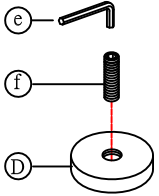


Step 2

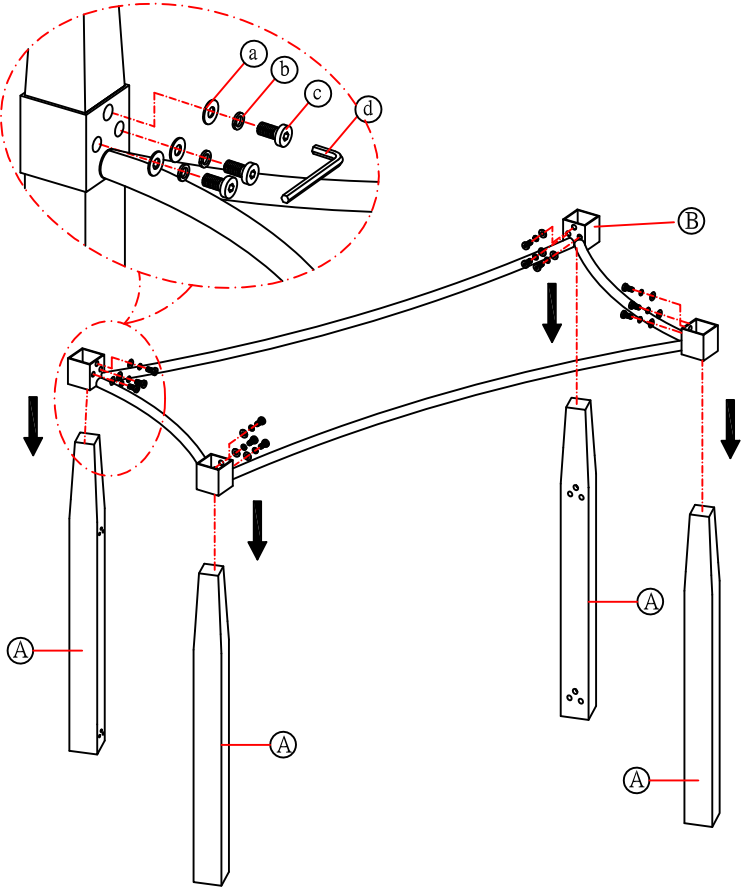

Assemble the stretch , fasten the
screws 80% tight.


ASSEMBLY INSTRUCTION

Step 3

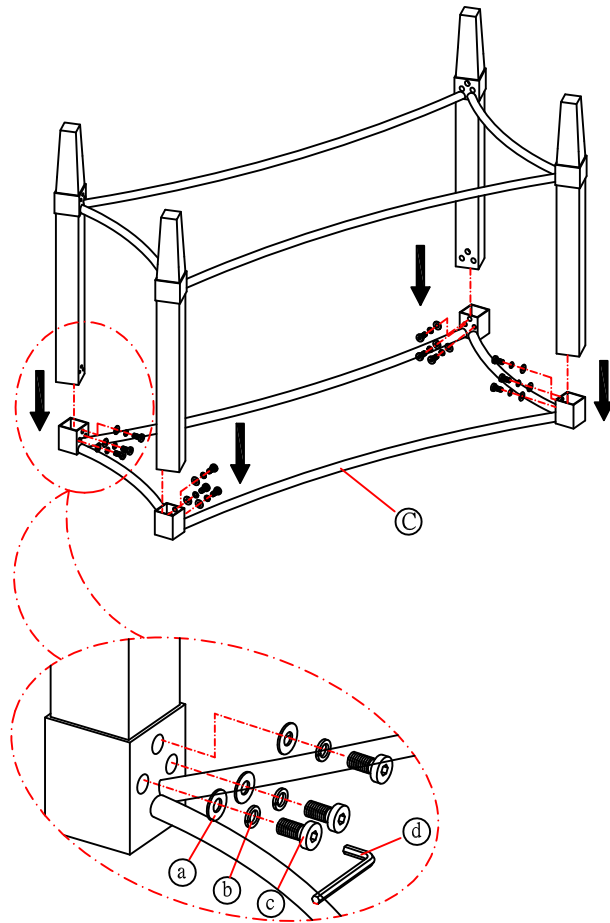

Assemble the frame , and tighten
the screw of stretch .

Step 4

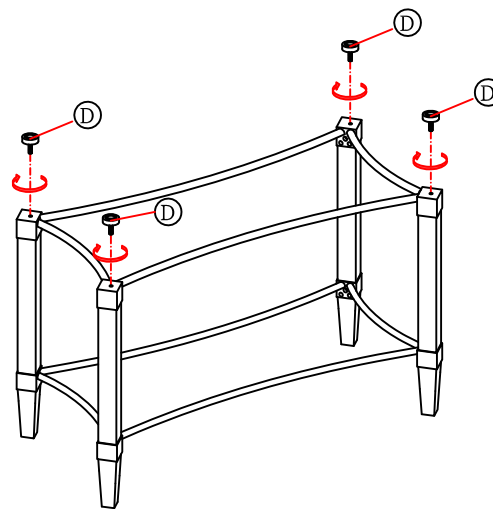

FINISH

