


MIRROR JEWELRY CABINET


ITEM-BJ020

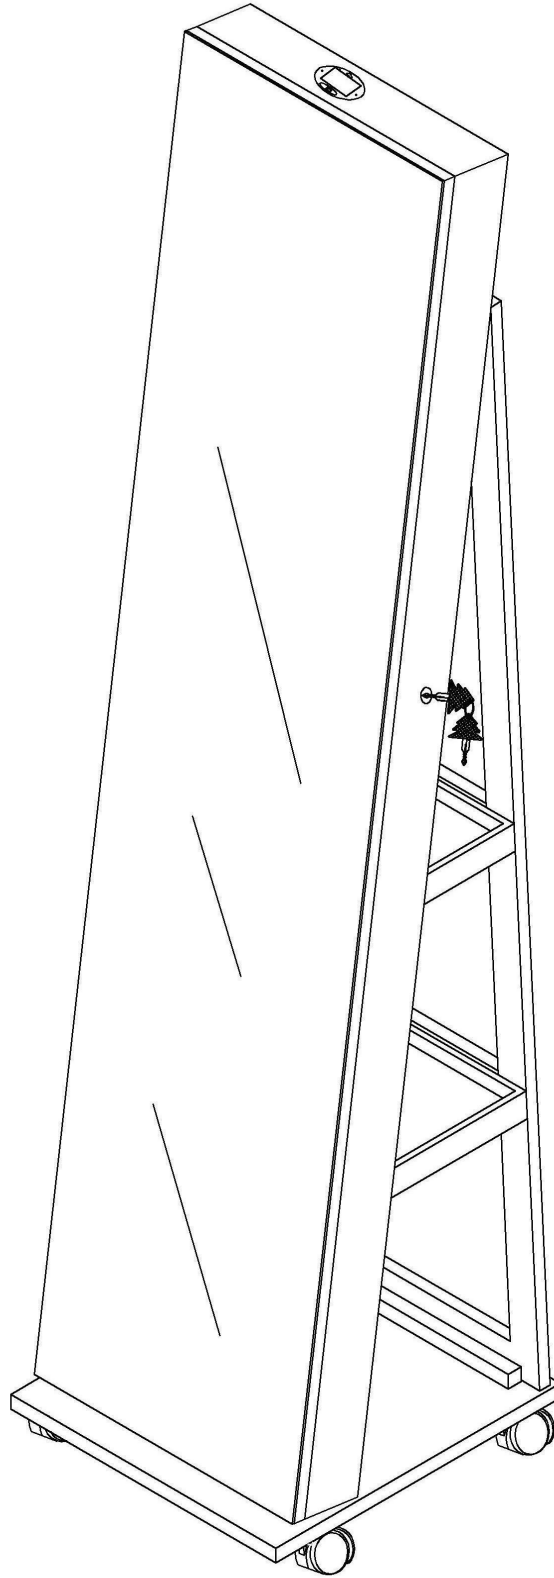

Read before use & keep for future reference.


For more information contact our customer service by sending an email to furniture.services@126.com

Accessories list

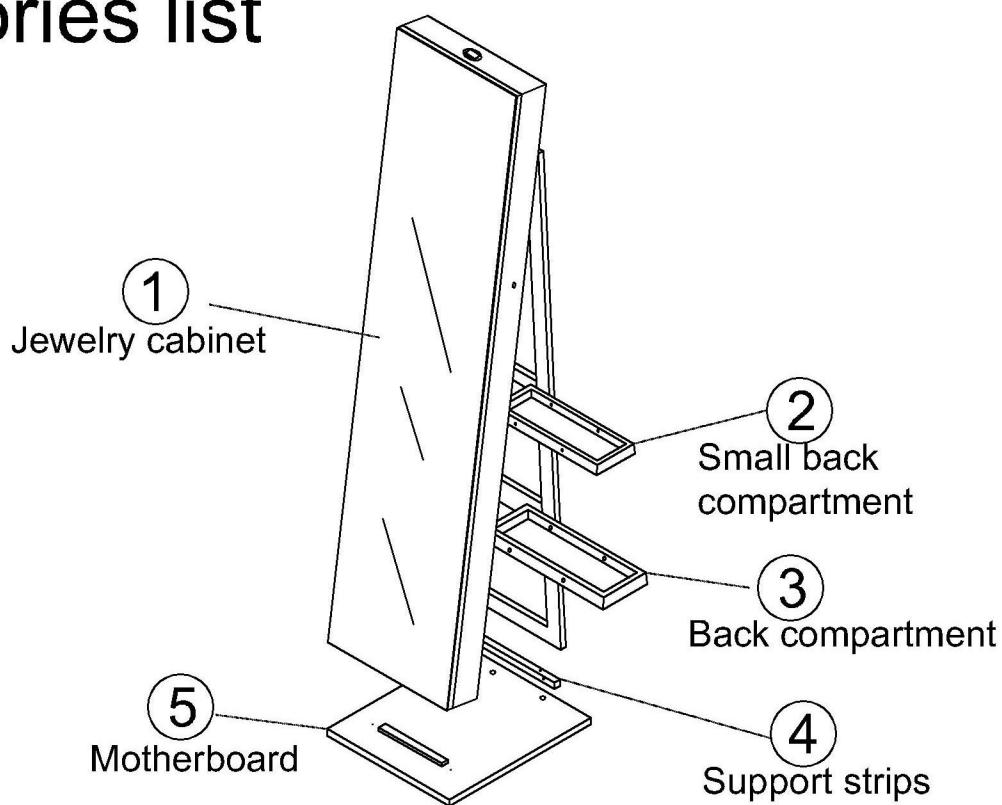


(A)		Long screw(6*30mm)	6 Pcs
(B)		The key	1 Pcs
(C)		Long cross screw assembly (5*20mm)	4 Pcs
(D)		Short cross screw assembly (5*8mm)	4 Pcs
(E)		Bolt driver	1 Pcs
(F)		Wheel	4 Pcs
(G)		Acrylic left and right accessories	14 Pcs
(H)		Acrylic spacer	5 Pcs
(I)		Screw (3.5*12mm)	16 Pcs
(J)		Self tapping wire(3x16mm)	1 Pcs
(K)		Colloidal granules/Self tapping wire(4x45mm)	1 Pcs
(L)		Anti-rewind (290mm)	1 Pcs


Step 1

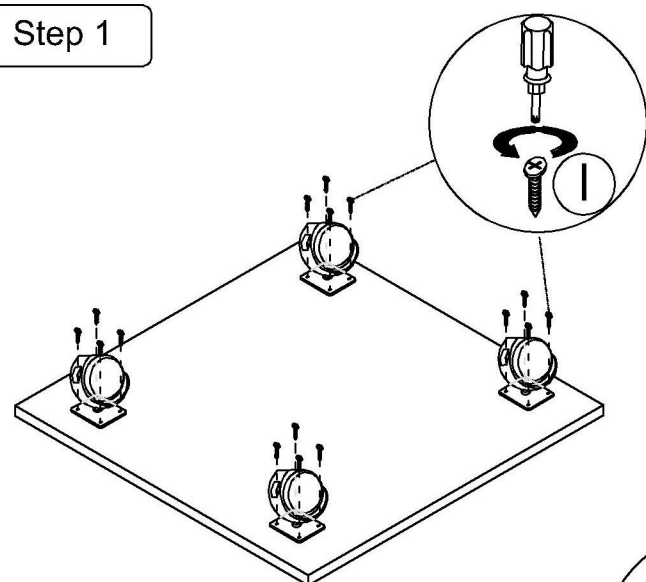

(F)		x 4
(I)	 (3.5*12mm)	x 16
(A)	 (6*30mm)	x 2

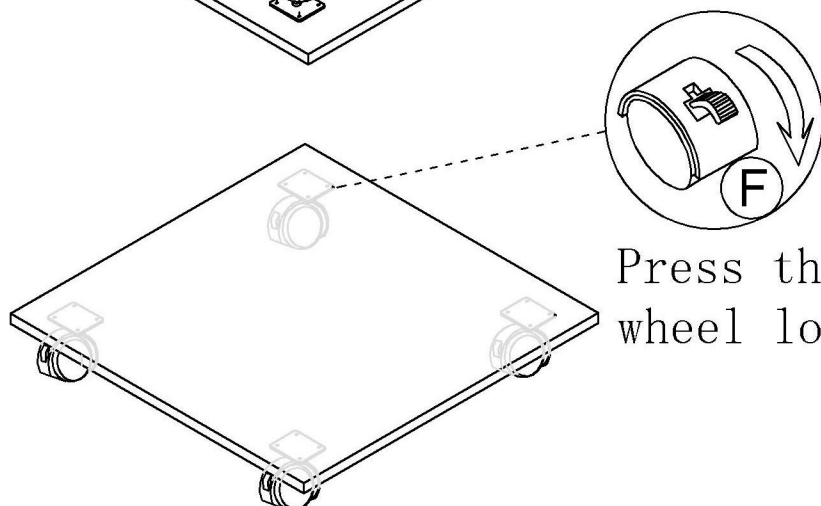


Press the
wheel lock

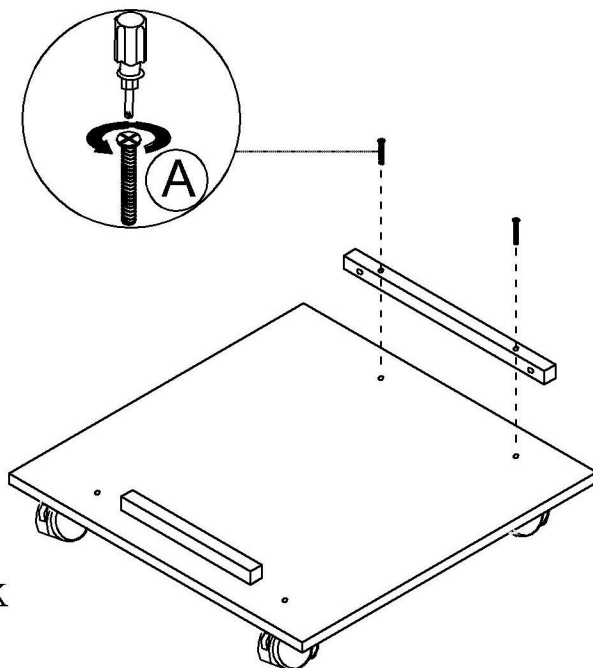


Step 2

Battery installation


(Tip: use 3 AAA Batteries)

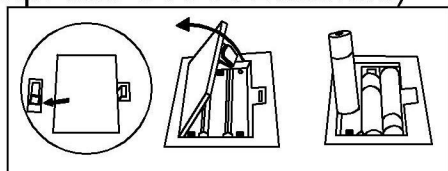

(A)	 (6*30mm)	x 2
(G)		x 10
(H)		x 5

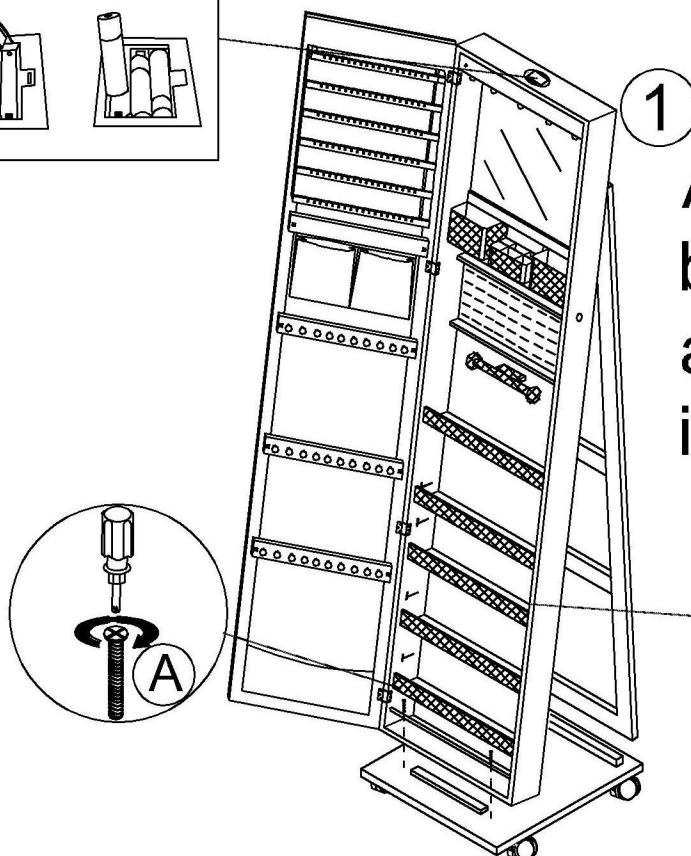


Acrylic layer can
be adjusted
according to
individual needs

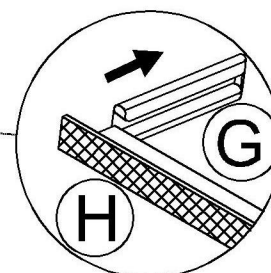

Step 3

(J)		x 1	(D)	 (5*8mm)	x 4
(L)		x 1	(C)	 (5*20mm)	x 4
			(A)	 (6*30mm)	x 2

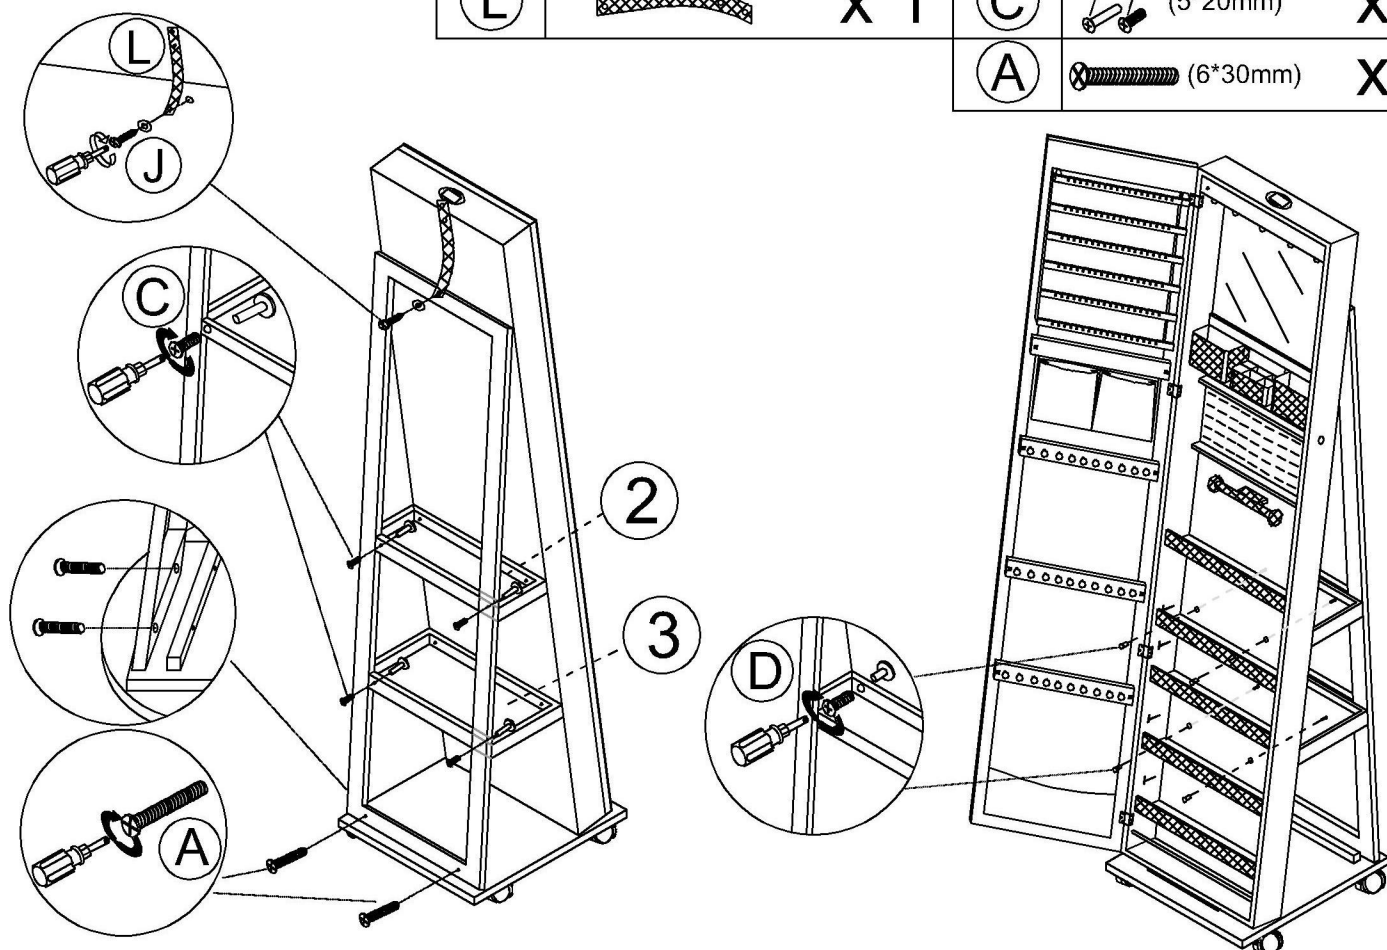

Step 4

(B)		x 1
(K)		x 1

