


Barber Chair Instruction

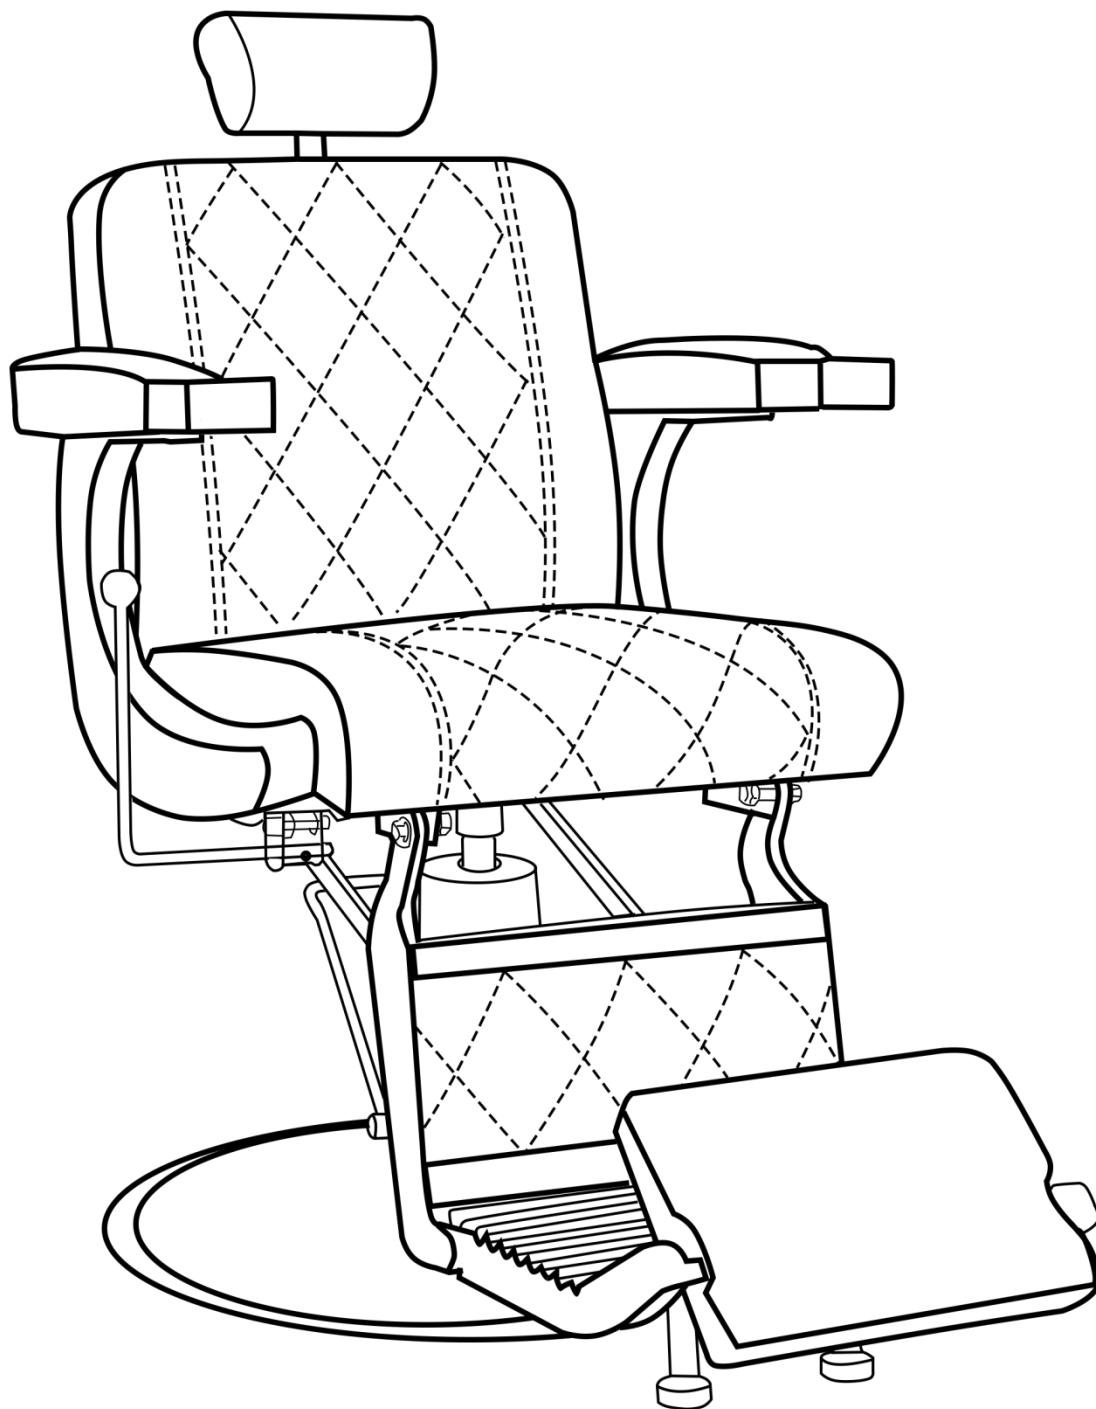

warning notice



Open your item in the area where you plan to keep it to reduce heavy lifting.



Identify, sort, and count the parts before assembling.



Lay all parts on smooth flat surface.



Make sure to always face the point on the top of the Cam Lock towards the outer edge.




Do NOT use harsh chemicals or abrasive cleaners on this item.



Never push, pull, or drag your furniture.

Teamwork




Not having two people involved in the assembly can potentially result in damage to the unit and pose a risk of personal injury.

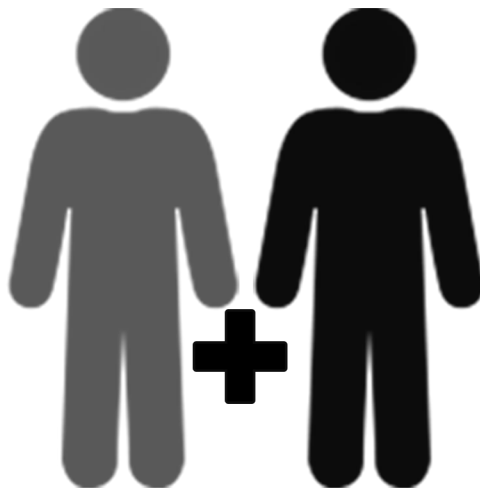







Components

Step 1

Check all parts you received.

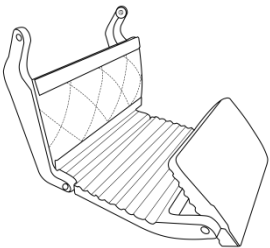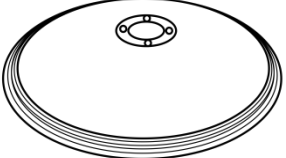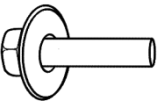Carton A			
			
Ax1	Bx1	Cx2	Dx4
			
Ex1	Fx4	Gx1	Hx4


Components

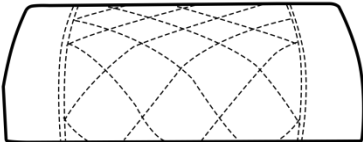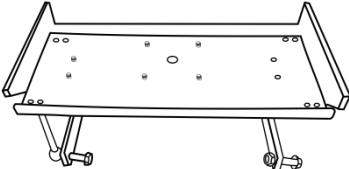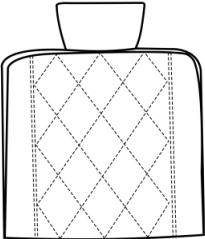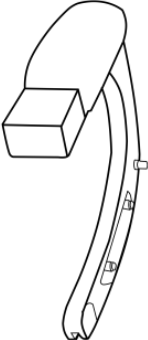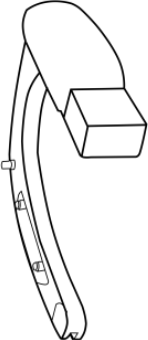Carton B			
			
Ix1	Jx1	Kx1	Mx1
			
Lx1	Nx1	Ox1	Px2

Assembly Instructions


Step 2

Insert threaded bolts on bottom of pump "B" into holes on top of base "E" .Tighten and locking 4 nuts "F" onto threaded bolts.

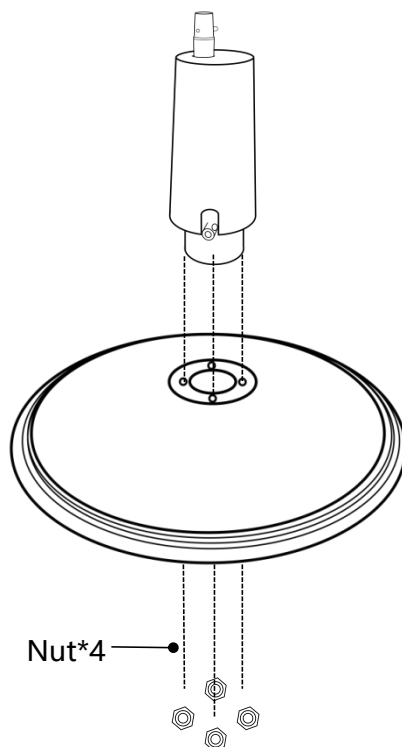

Step 3


Assembled foot bar "O" and hydraulic pump "B" ,tighten the set screws to firmly hold the foot bar in place. (Pay attention to the direction of foot bar)

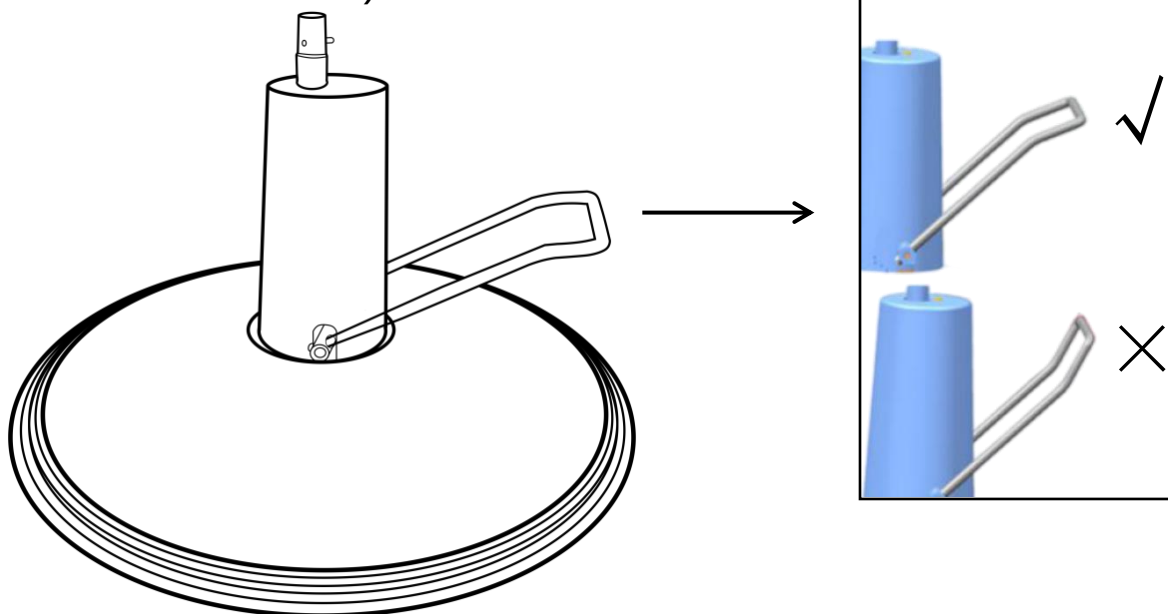

Assembly Instructions


Step 4

Put set plate "J" onto assembled hydraulic pump and base, (Noted: the tray on the set plate must be aligned with the black pin of hydraulic pump)

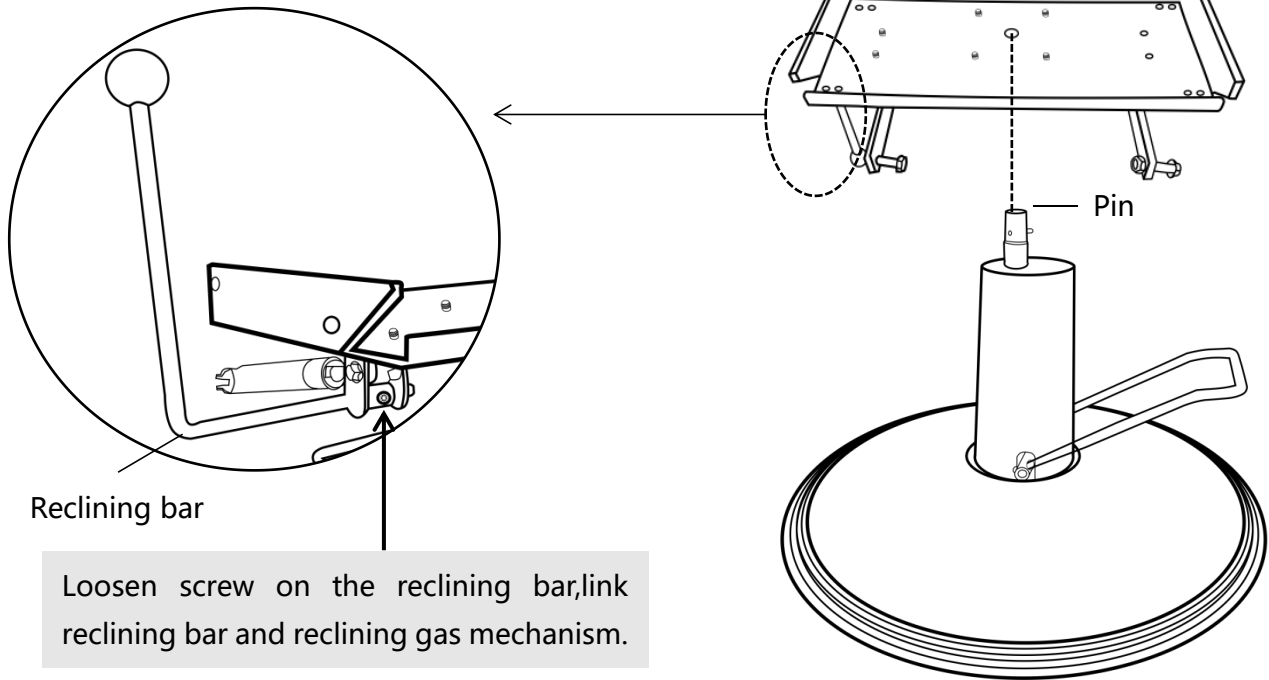

Step 5


Unscrew 2 screws previously assembled on the left and right armrest, assemble armrest "L" and "N" to set plate "J" by those screws (Noted, don't tighten screws)

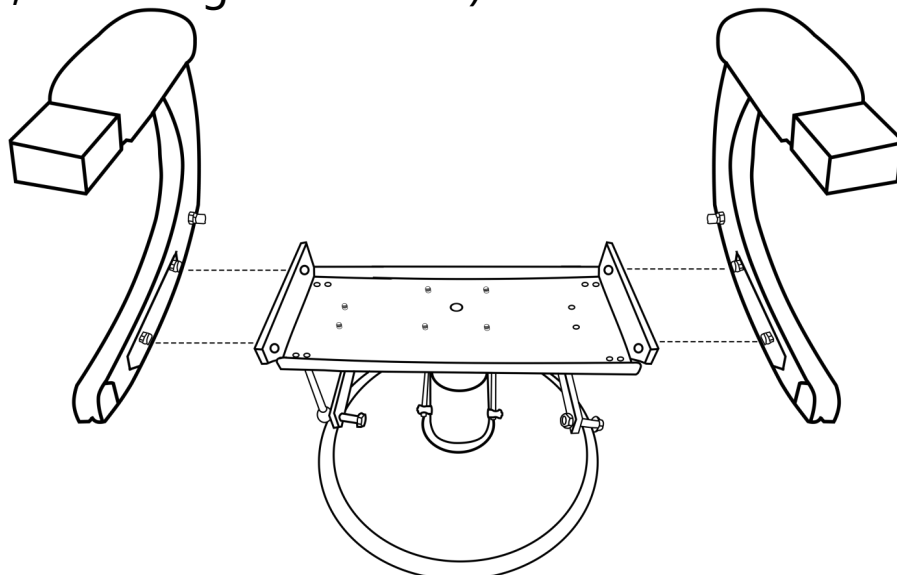

Assembly Instructions

Step 6


Assemble "┐" metal "M" to the armrest, Loosen 2 bolts of left and right armrest, attach assembled metal "M" to the armrest "L" and "N", then loosen bolt on the "┐" metal, link another side of gas mechanism to the "┐" metal.

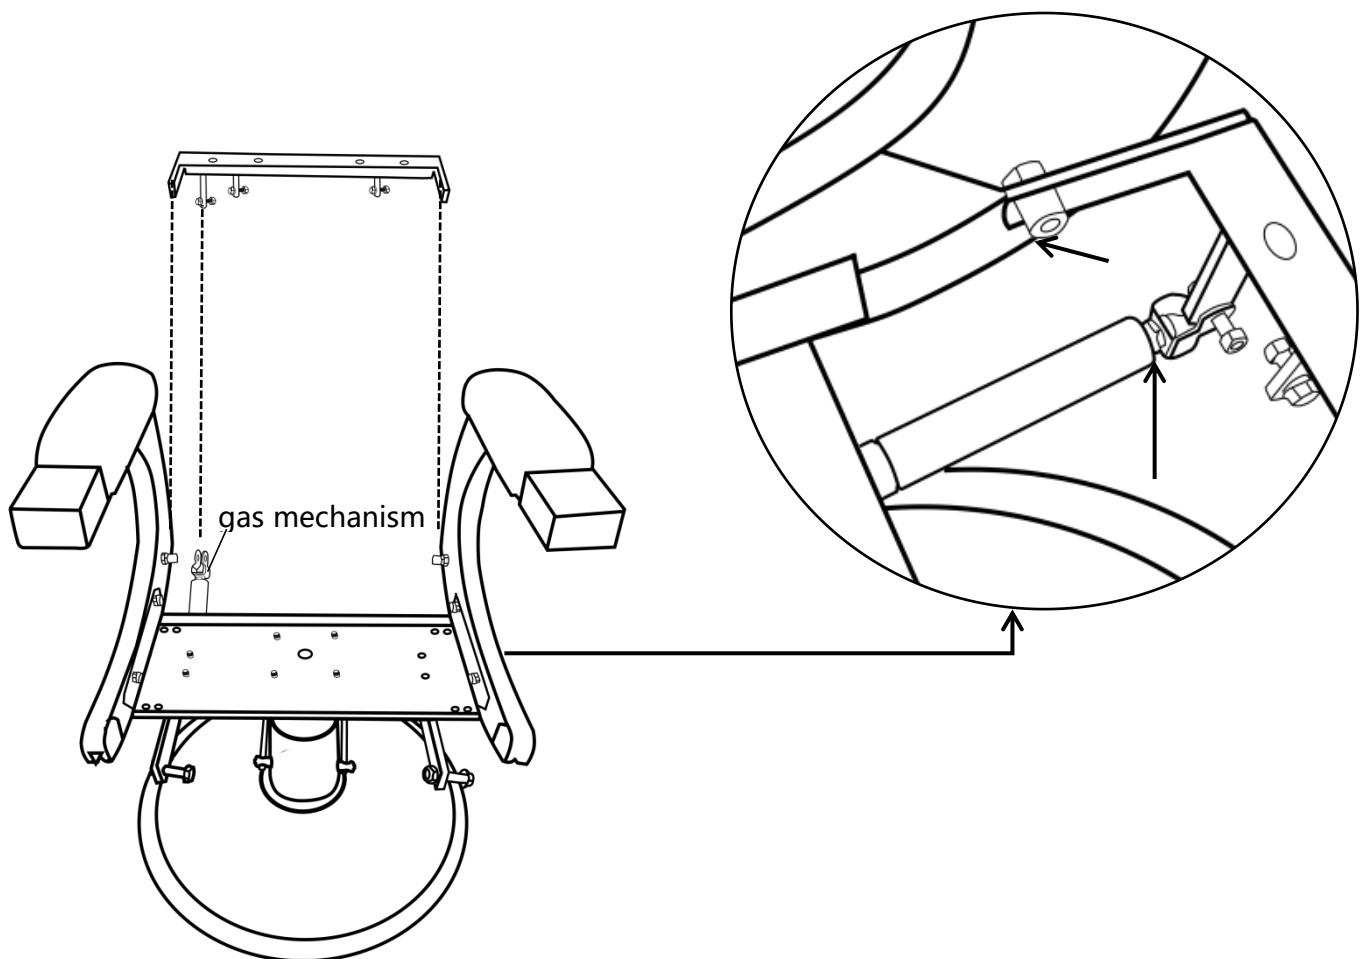

Assembly Instructions


Step 7

Use 4 screws "D" to assemble backrest "K" to the "┐" metal "M".

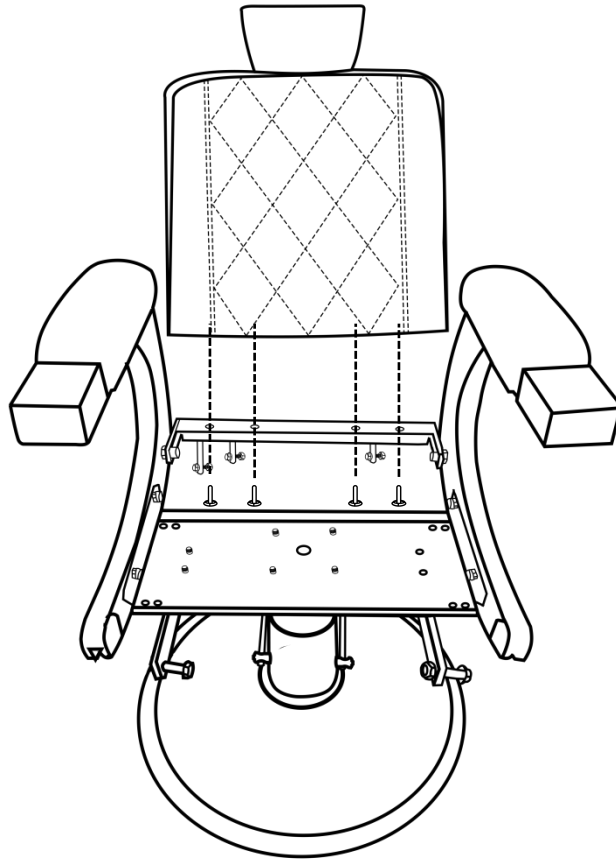

Step 8


Fix the pump by the fixing bolt "G" of pump.

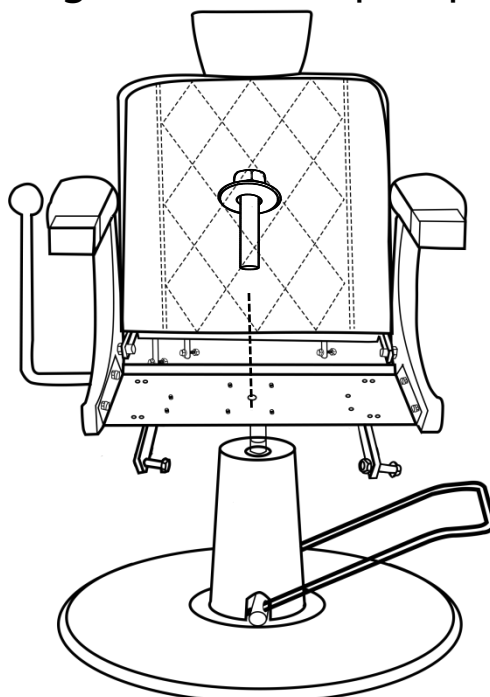

Assembly Instructions

Step 9

Loosen screws of metal pallet "J" and attach footrest "A" to chair, as picture show.

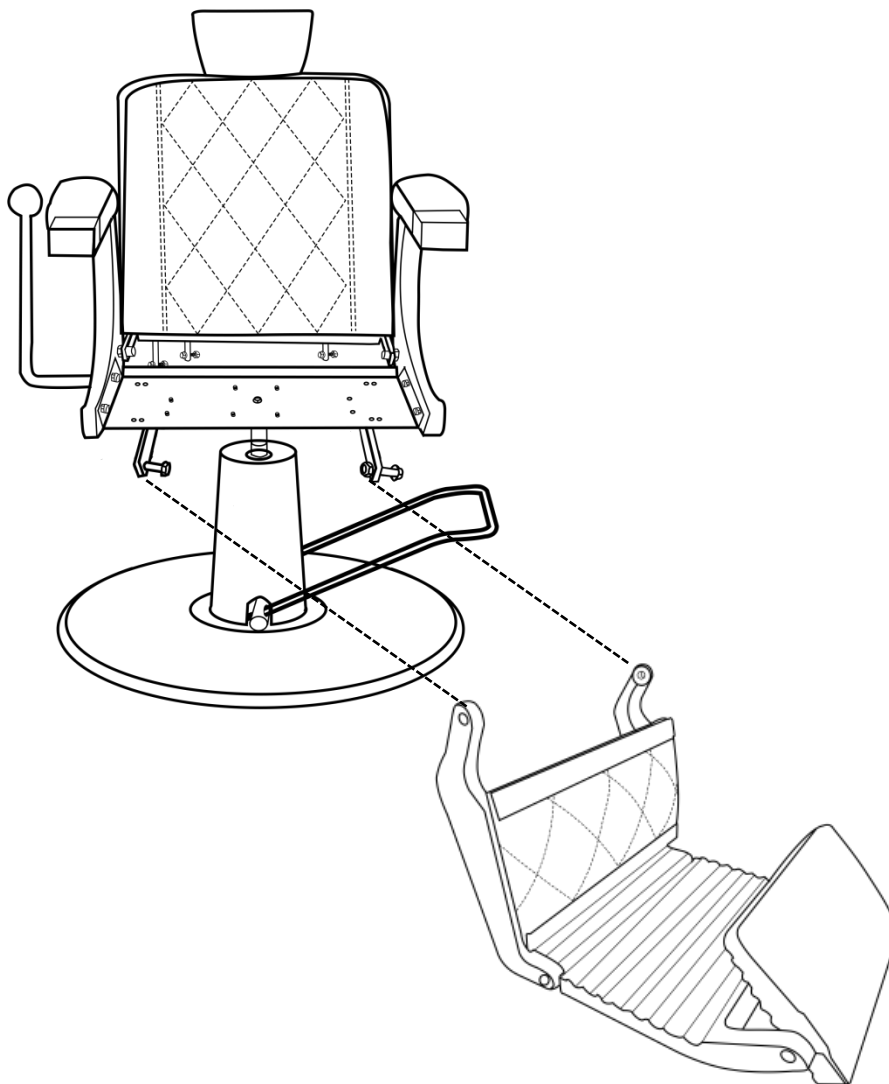


Assembly Instructions

Step 10

Remove screws on the footrest and install 2 stabilizer bar "P", remove 2 bolts on the metal of the bottom of backrest "K" and assemble another side holes of 2 stabilizer bar.

(Noted:if you feel the reclining bar is not long enough,please retreat the reclining lever of left armrest)Please adjust the angle of chair,make sure the backrest and footrest is not tilt,then we have to tighten all screws.

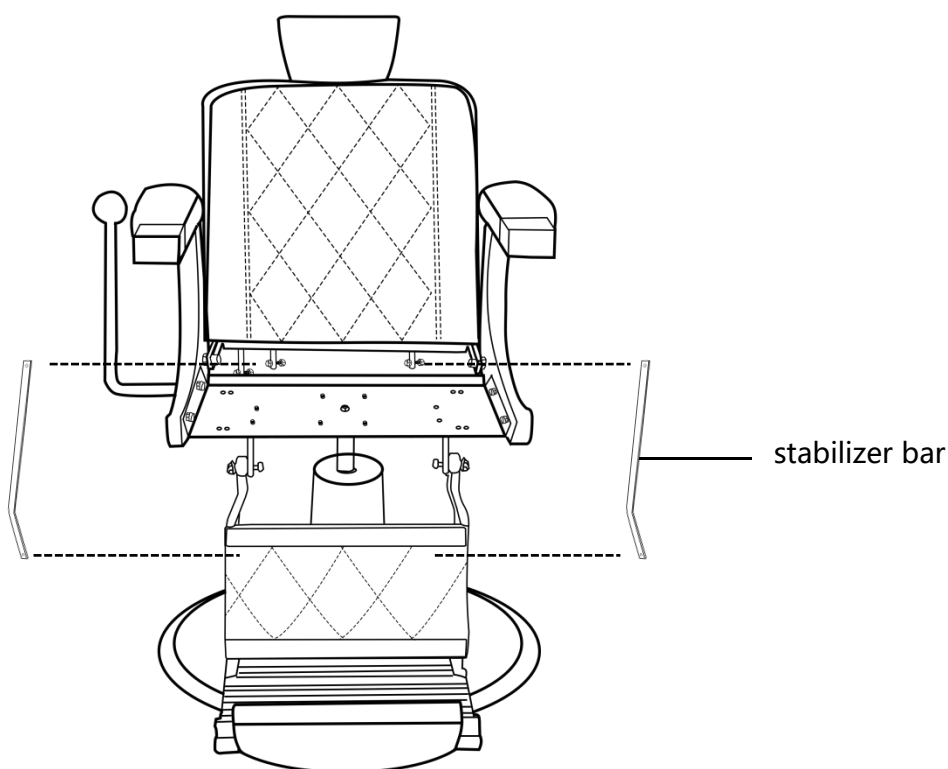

Assembly Instructions

Step 12

Put the seat cushion to the assembled chair and Fix the seat cushion "I" by 4 long screws "H" .

