
J1S053

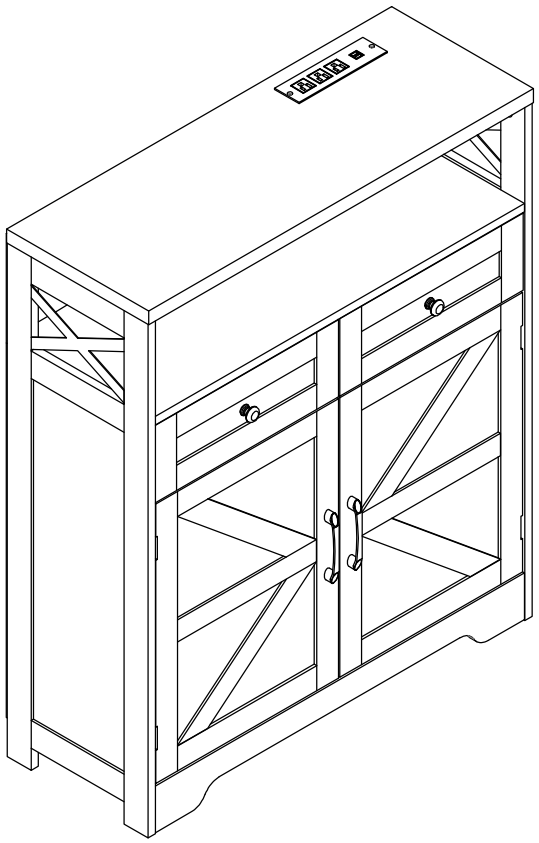


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

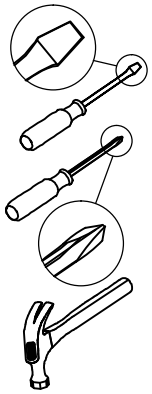

- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screwdriver）

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.



- Identify, sort and count the parts before attempting assembly.



- Compression dowels are lightly tapped in with a hammer.



- Slides are labeled with an **R** (right) and **L** (left) for proper placement.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.

-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.




- Do NOT use harsh chemicals or abrasive cleaners on this item.


- Never push, pull, or drag your furniture.

Board Identification


Not actual size

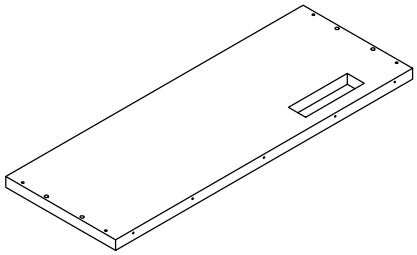


Ⓐ
TOP PANEL

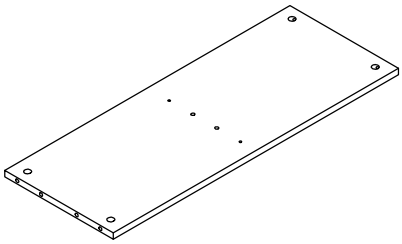


Ⓑ
FIXED SHELF

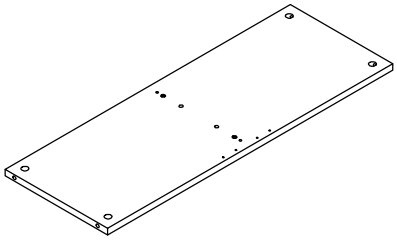


Ⓒ
FIXED SHELF

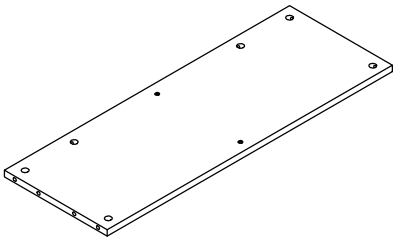


Ⓓ
BOTTOM




Ⓔ
PARTITION

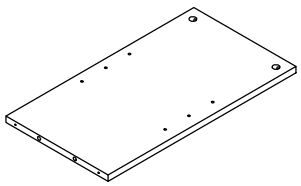


Ⓕ
PARTITION

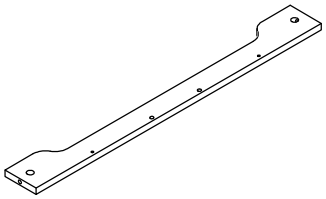

Ⓖ
BOTTOM FRONT RAIL

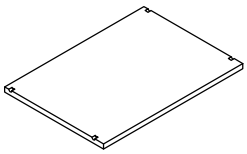


Ⓗ
SHELF PANEL
Qty:2

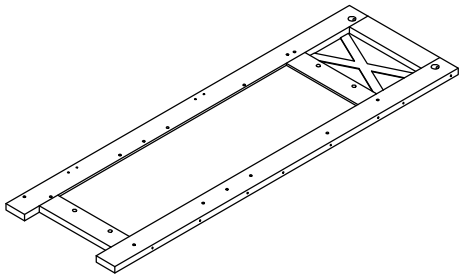


Ⓘ
LEFT SIDE PANEL

Board Identification


Not actual size

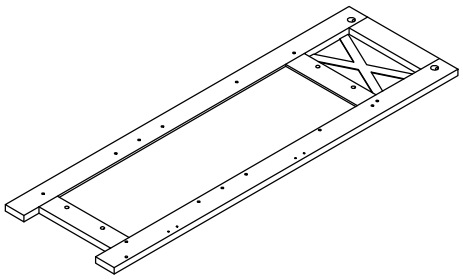


Ⓙ
RIGHT SIDE PANEL

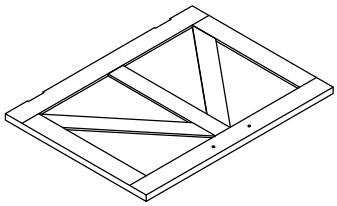


Ⓚ
LEFT DOOR

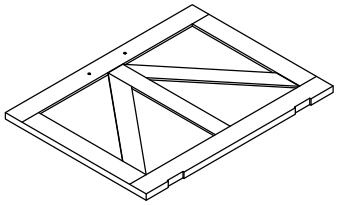


Ⓛ
RIGHT DOOR

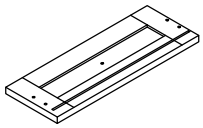


Ⓜ
LEFT DRAWER FRONT

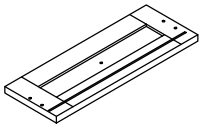


Ⓝ
RIGHT DRAWER FRONT




Ⓞ
DRAWER LEFT SIDE PANEL
Qty:2



Ⓟ
DRAWER RIGHT SIDE PANEL
Qty:2

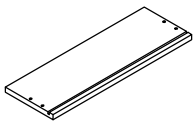


Ⓠ
DRAWER BACK PANEL
Qty:2

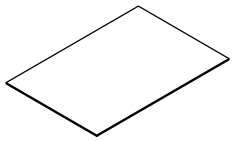

Ⓡ
DRAWER BOTTOM PANEL
Qty:2


Board Identification

Not actual size

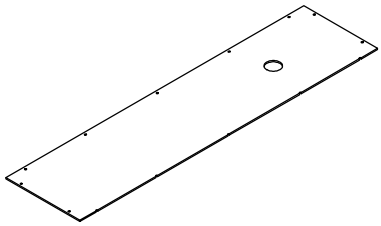

Ⓢ

UPPER BACK PANEL

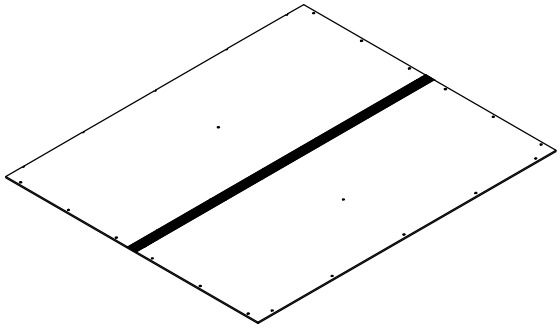


Ⓣ


LOWER BACK PANEL

Board Identification

Not actual size

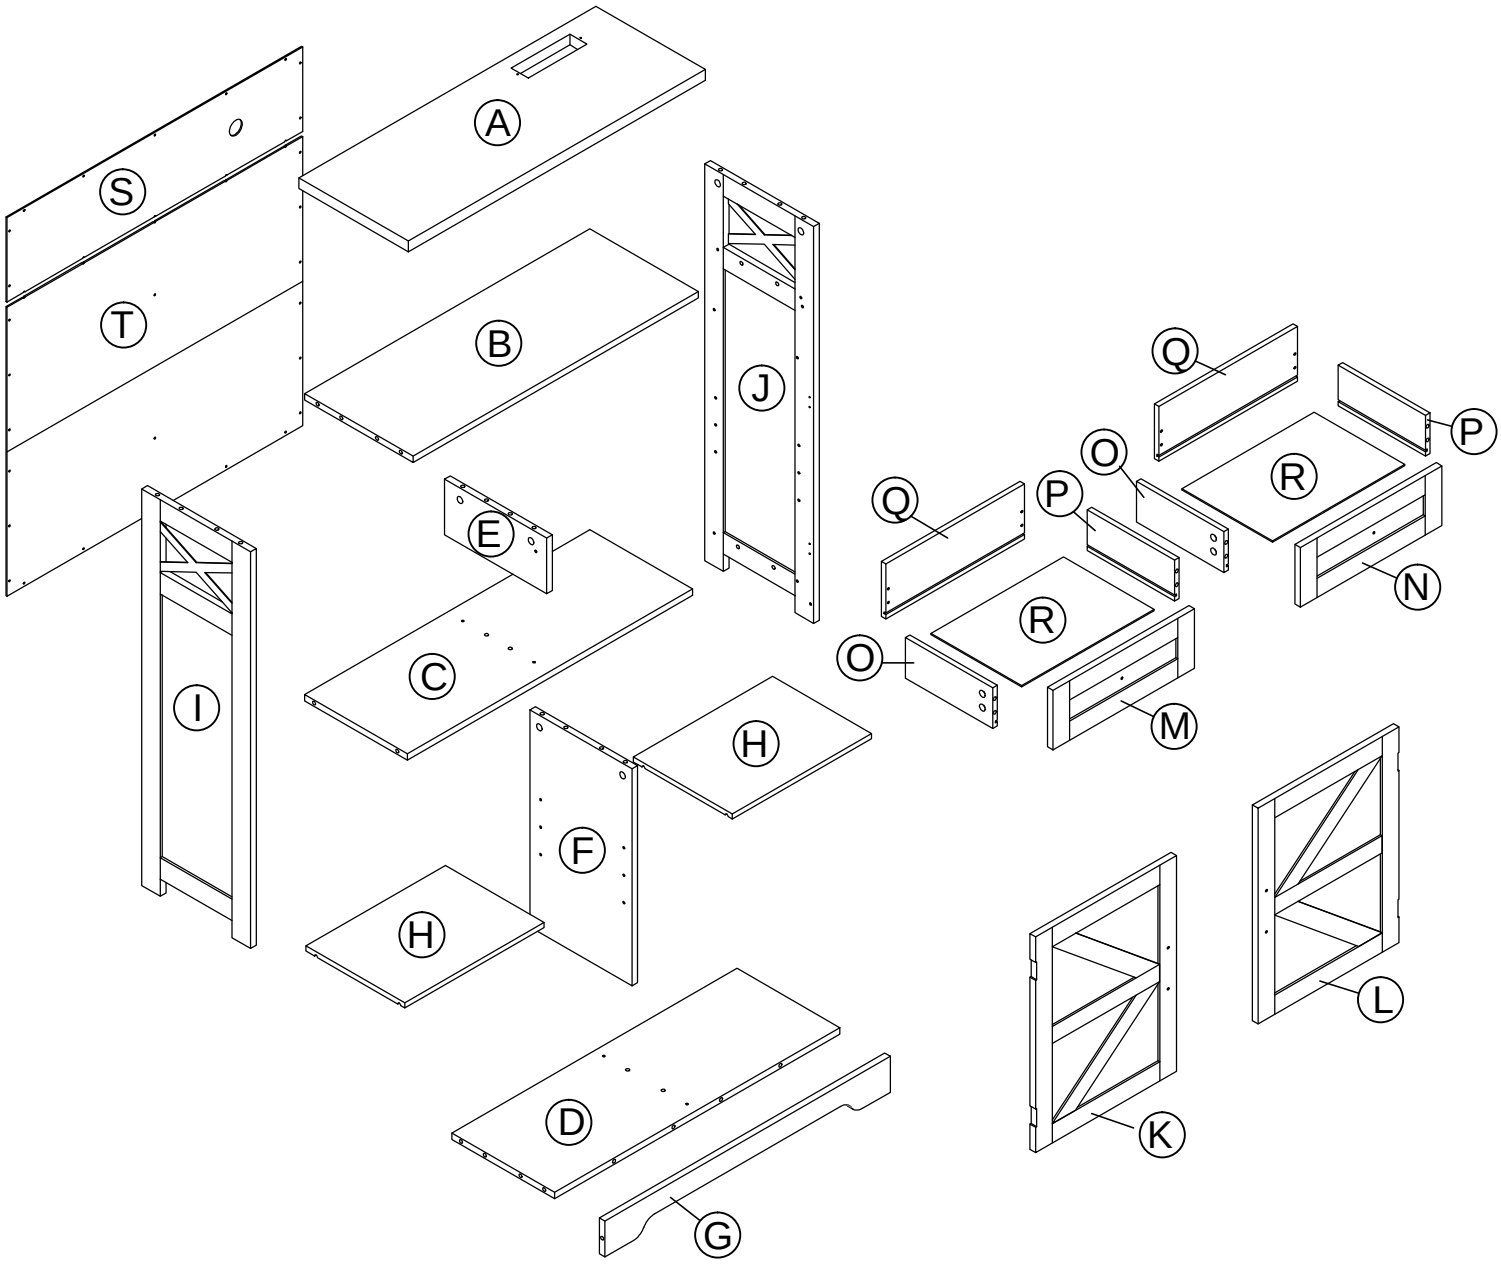


Part List

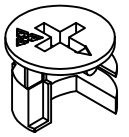

Ø15X9mm

①	X32

CAM LOCK
spare: 3



ϕ6.5X35mm

②	X32


CAM BOLT
spare: 3



ϕ8X30mm

③	X22


WOOD DOWEL
spare: 2



ϕ4X35mm

④	X12


SCREW
spare: 1



Ø3.5X14mm


⑤	X30

SCREW
spare: 3

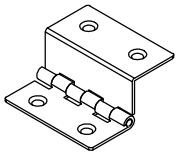


⑥	X4

HARDWARE HINGE

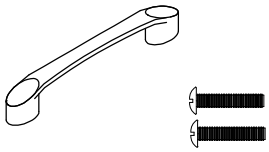

⑦	X2

HANDLE



⑧	X2


HANDLE



Ø3X16mm


⑨	X4

SCREW
spare: 1

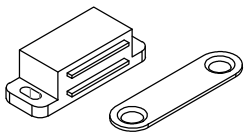


⑩	X2

MAGNETIC CATCH

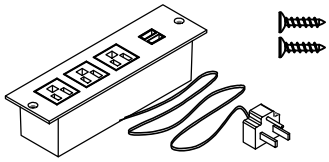

⑪	X1


PLUG BOARD



Ø3 x 12mm

⑫	X32

SCREW
spare: 3

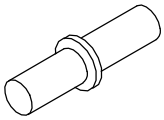

⑬	X8

SHEIF SUPPORT



Ø20mm


⑭	X4

SCAM LOCK COVER
spare: 1



⑮	X1

TIPPING RESTRAINT
HARDWARE KIT




⑯	X4


Part List

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

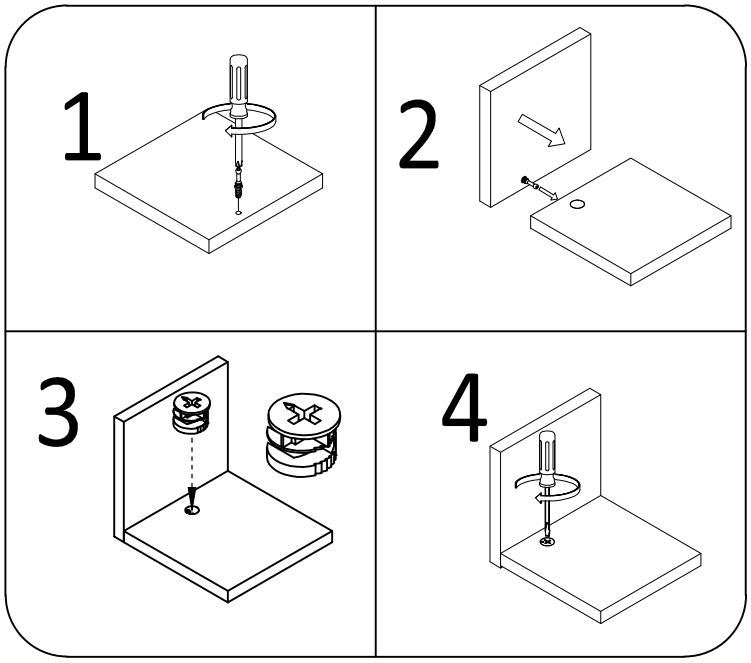



STEP1

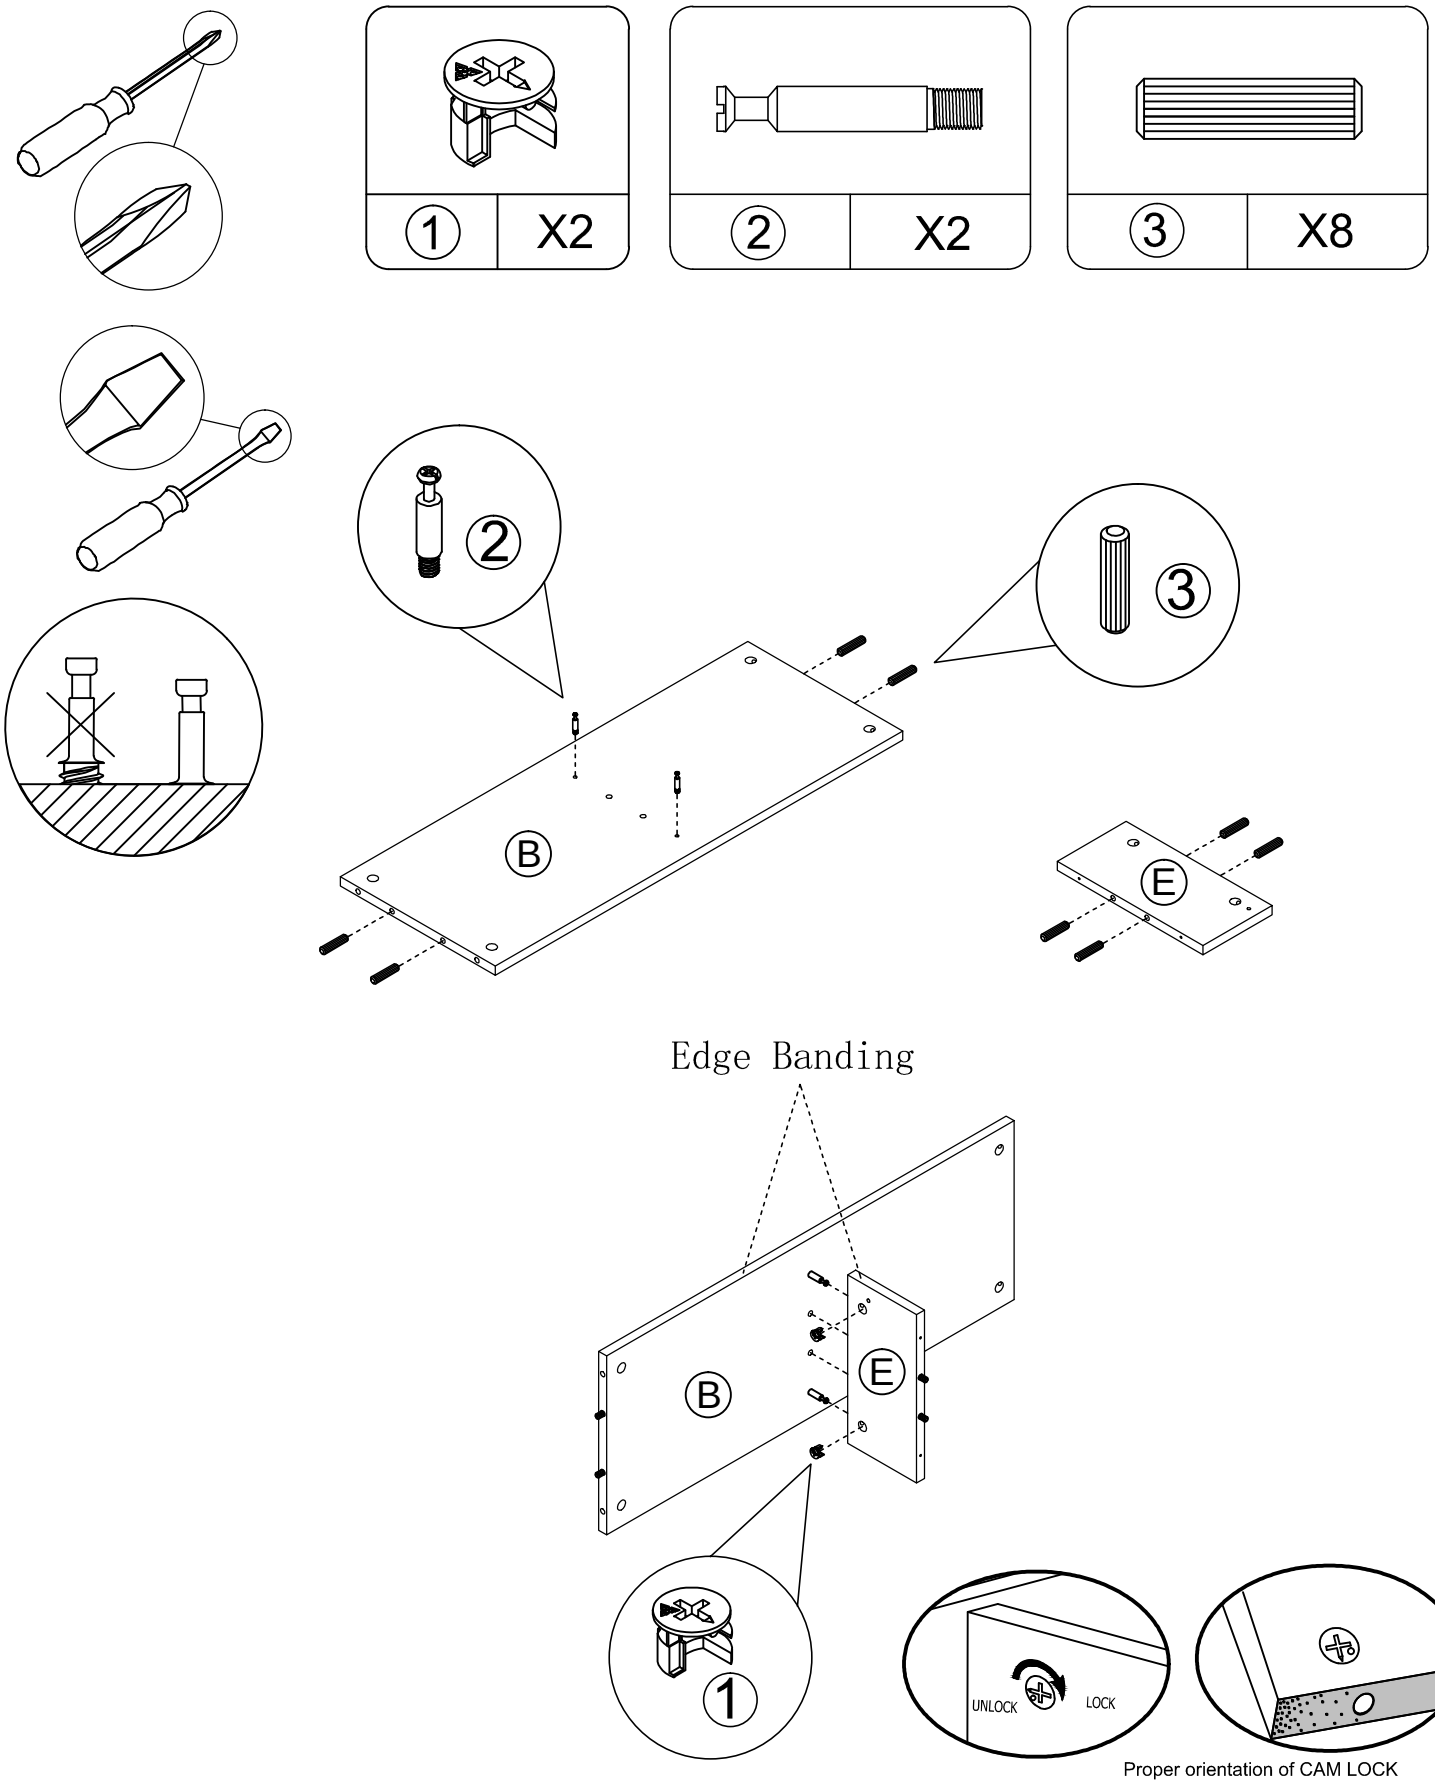

1
X2
2
X2
3
X8
2
3
B
E
Edge Banding
B
E
1
UNLOCK
LOCK
Proper orientation of CAM LOCK


STEP2

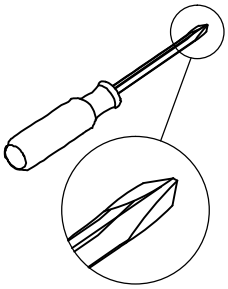


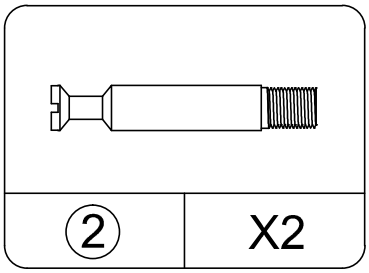


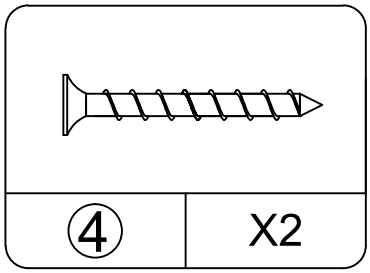


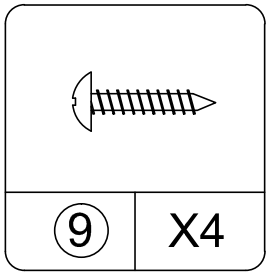


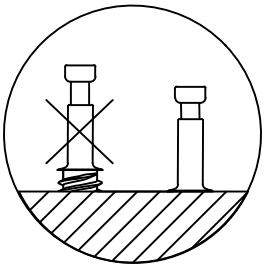

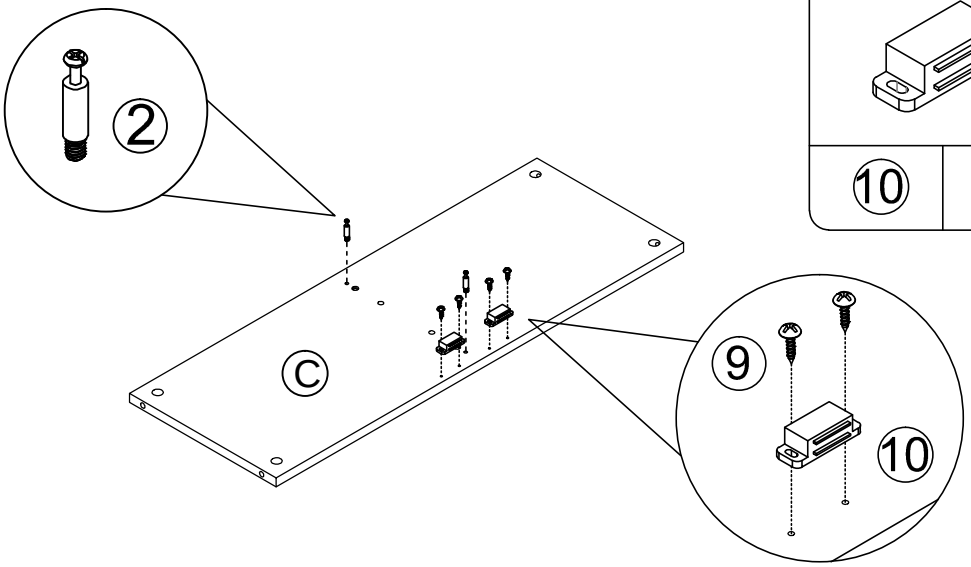

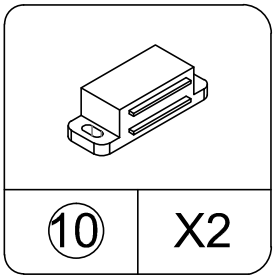


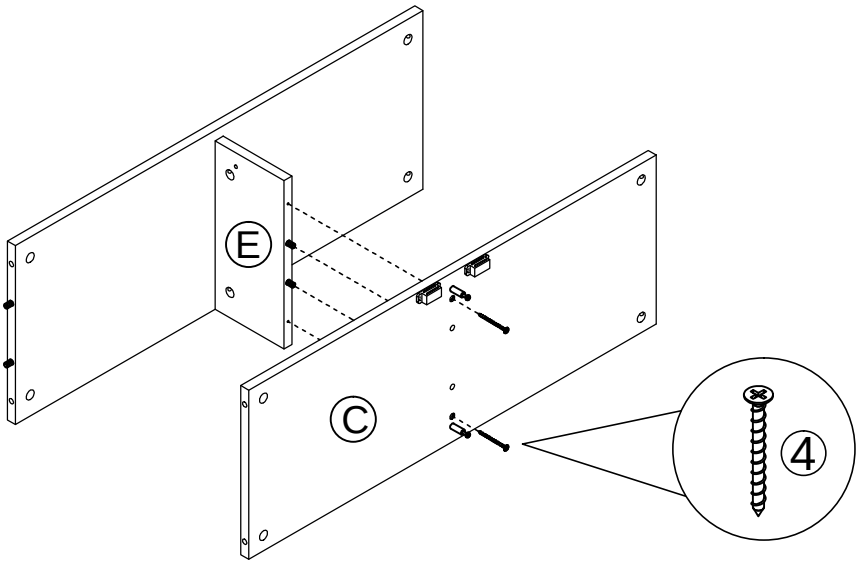


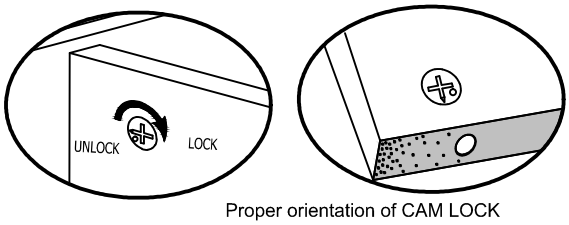



Proper orientation of CAM LOCK


STEP3

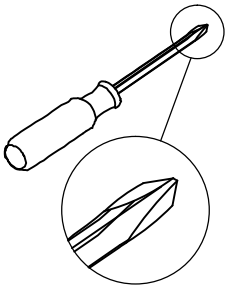


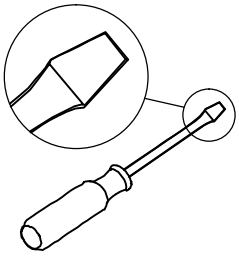


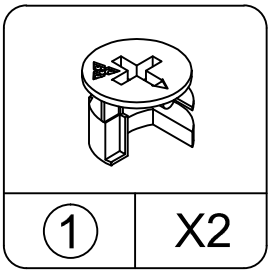

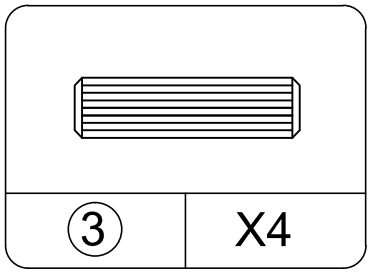

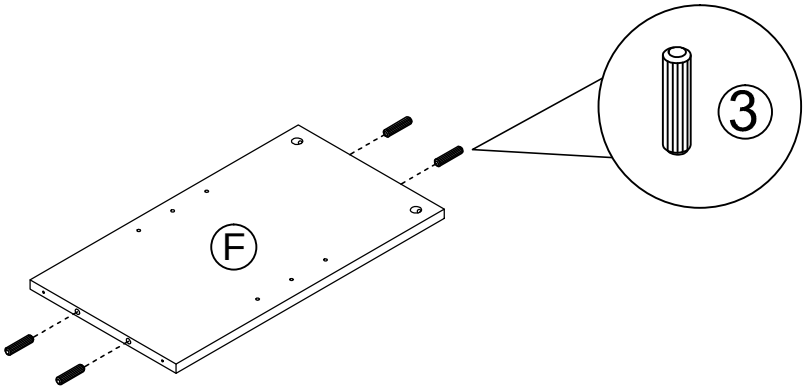


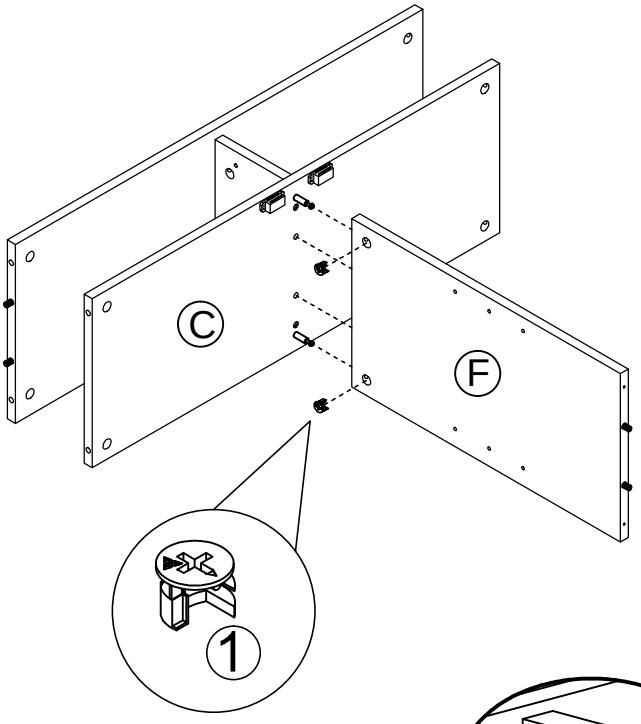


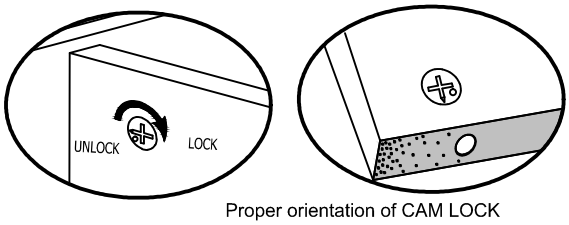



Proper orientation of CAM LOCK


STEP4

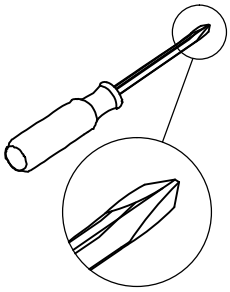


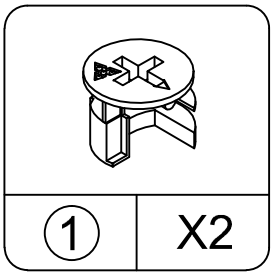


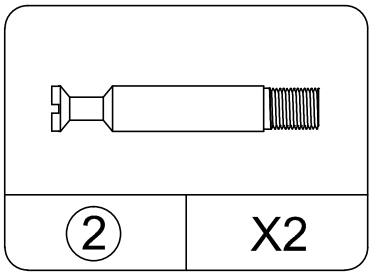


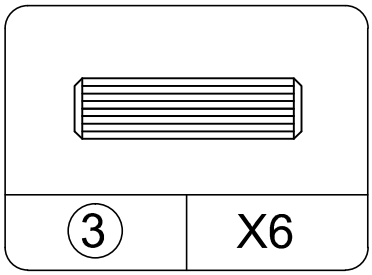


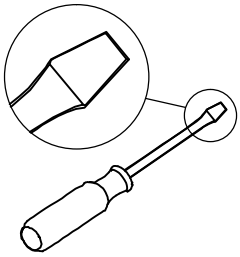


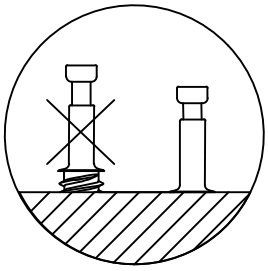


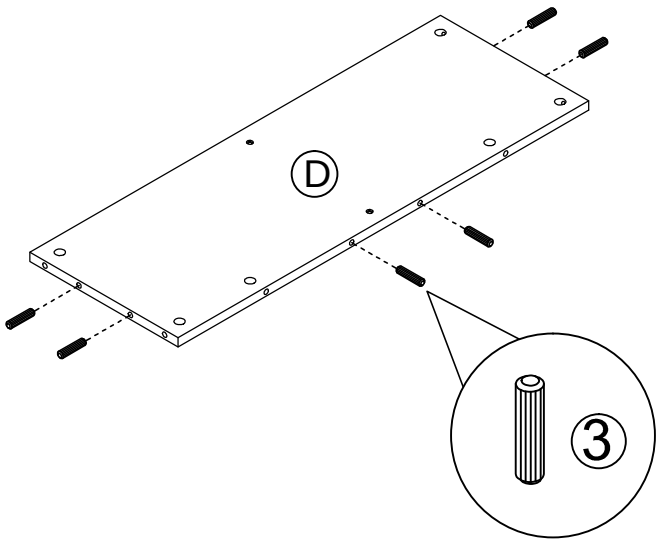

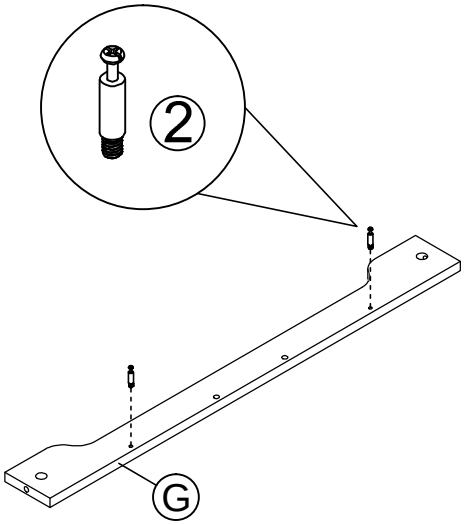

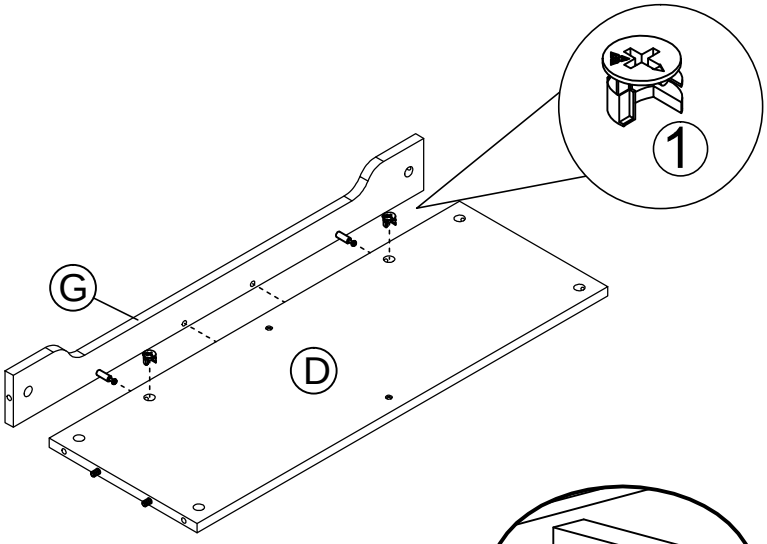


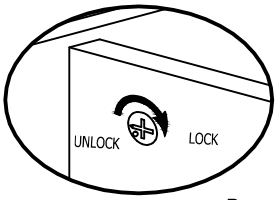


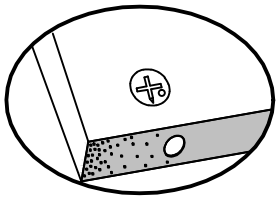


Proper orientation of CAM LOCK


STEP5

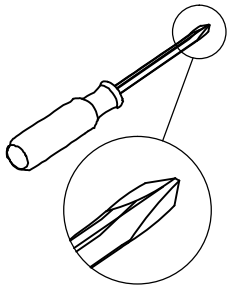


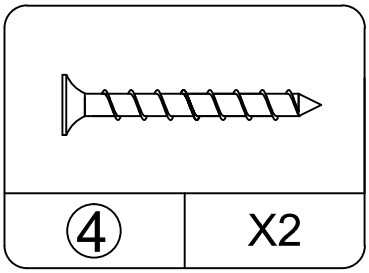


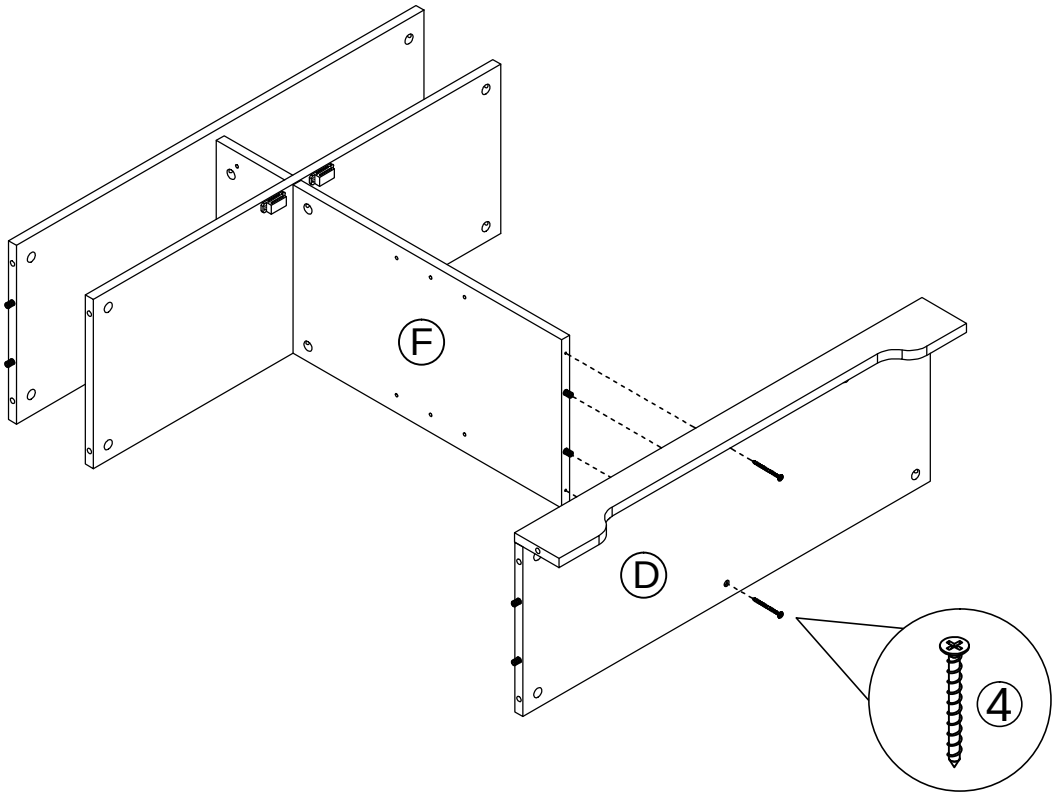



STEP6

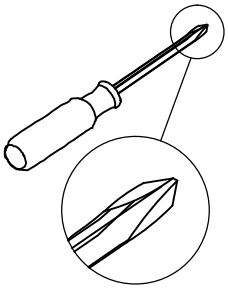


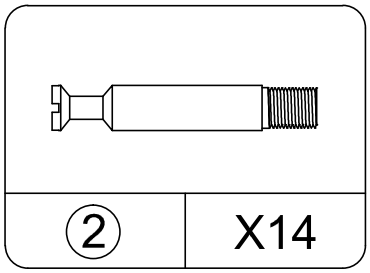

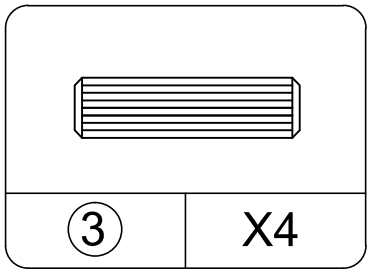


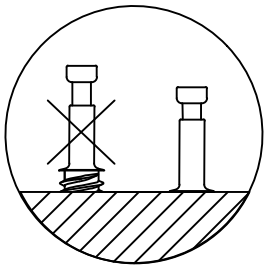


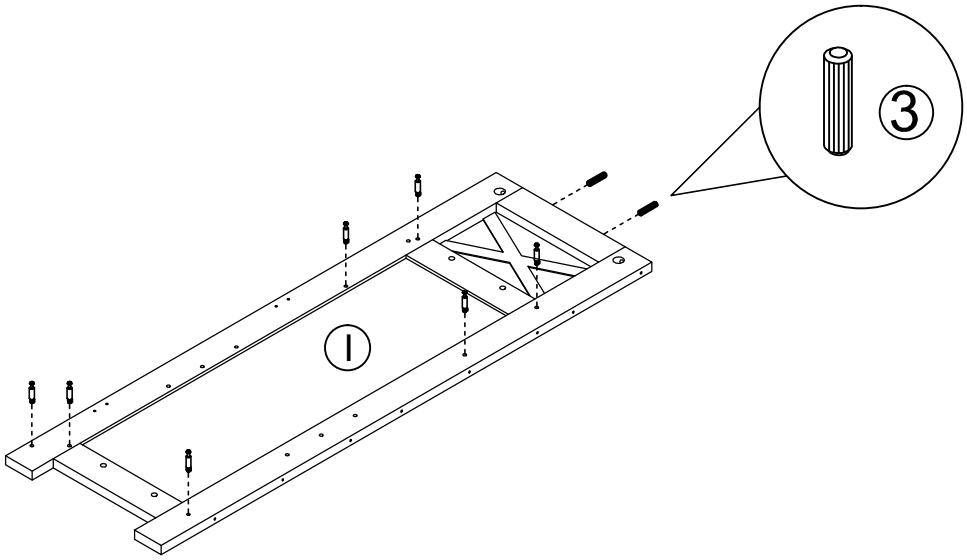


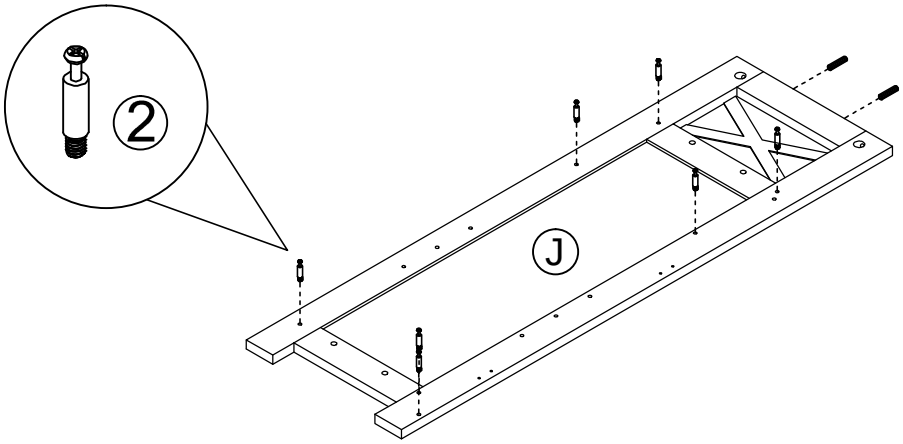



STEP7

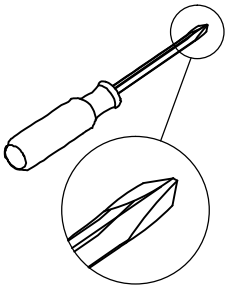


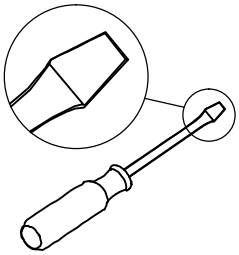

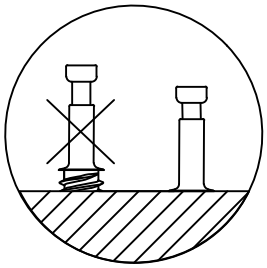

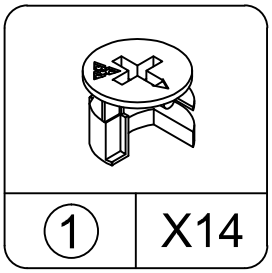


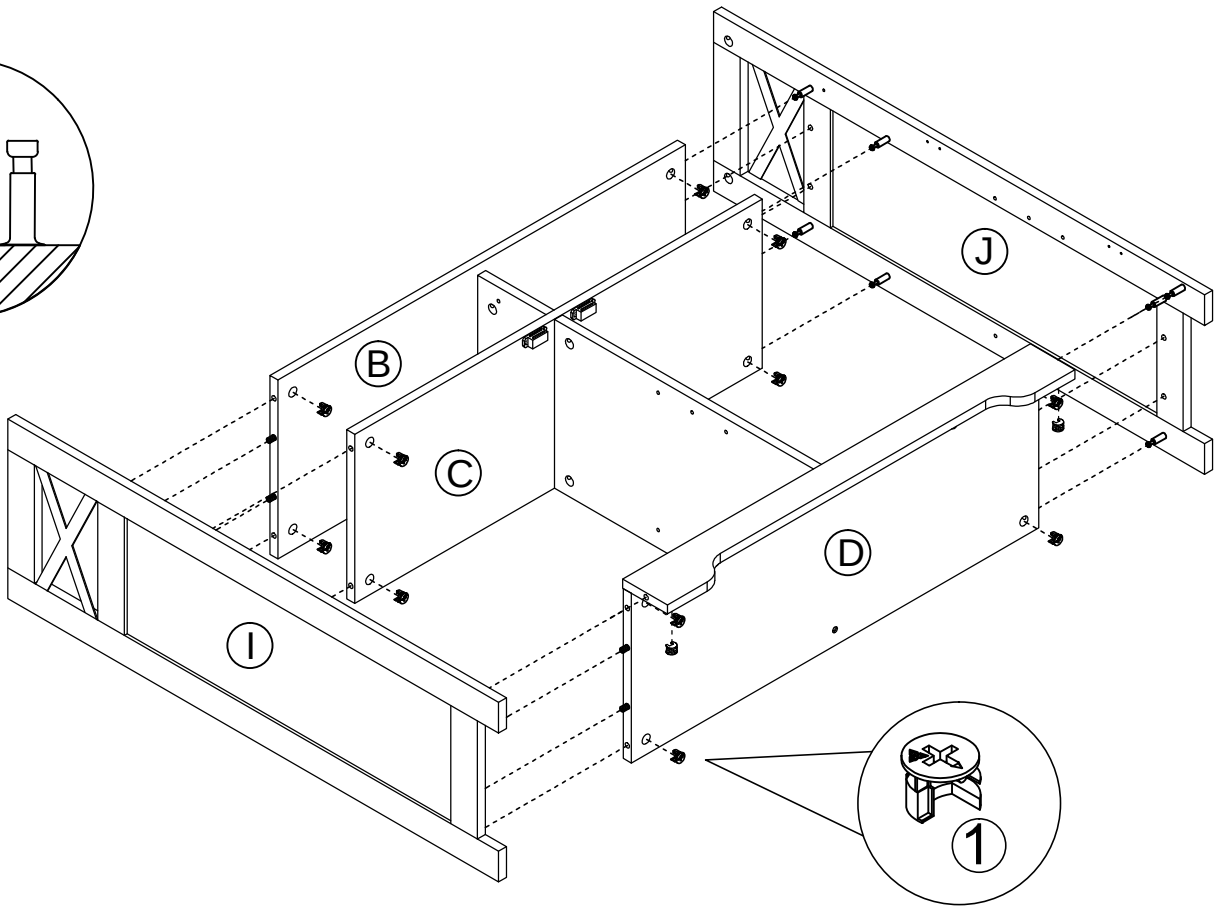

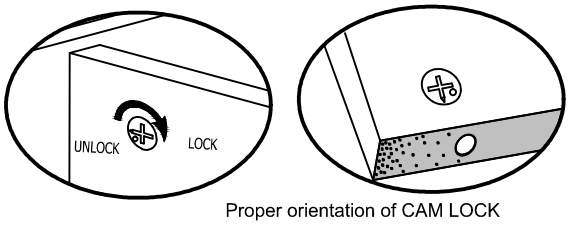


Proper orientation of CAM LOCK


STEP8

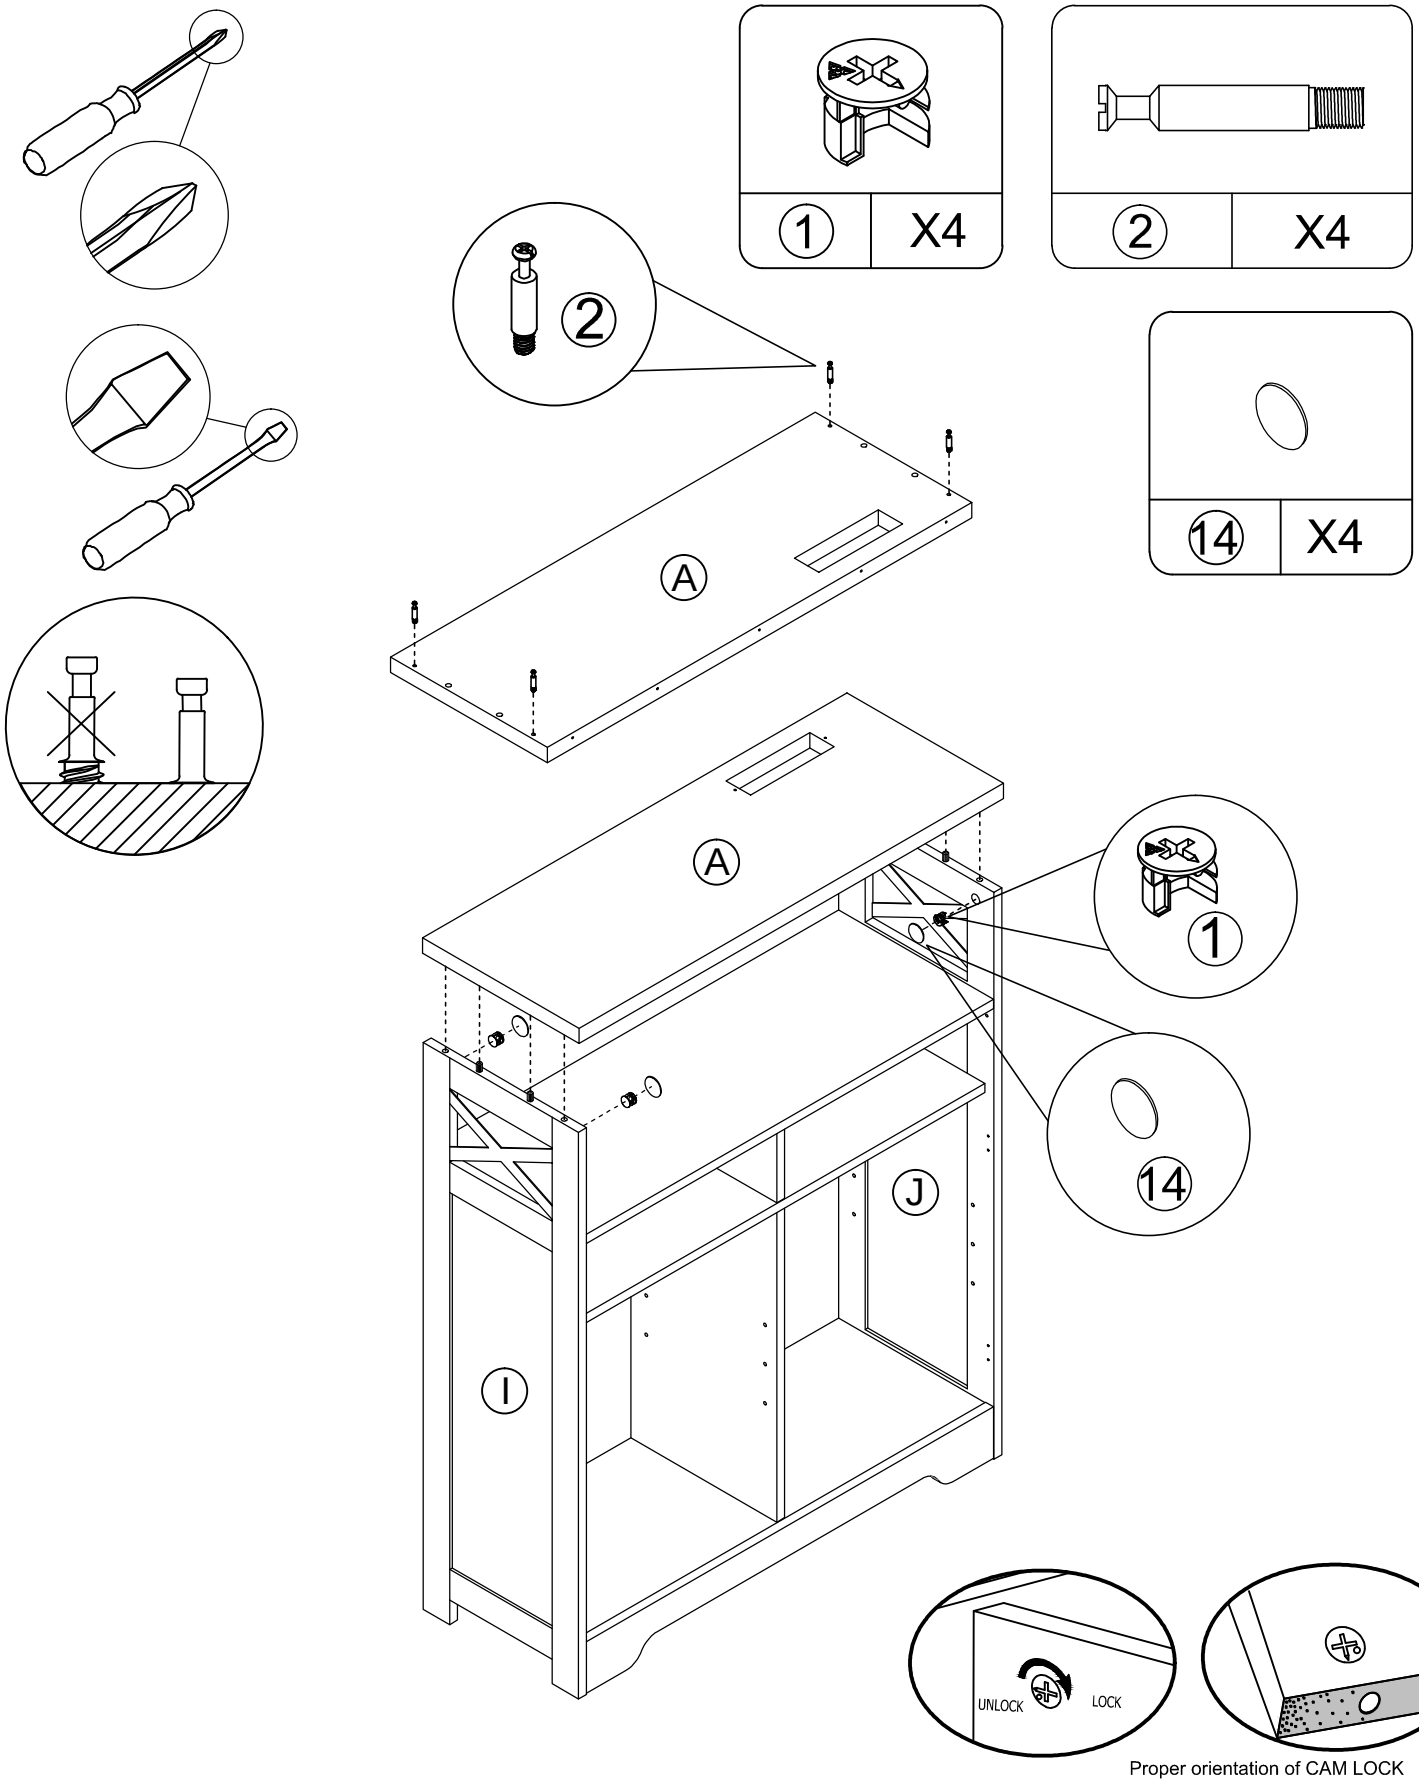



Proper orientation of CAM LOCK


STEP9

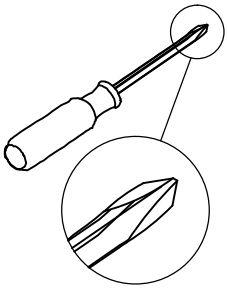

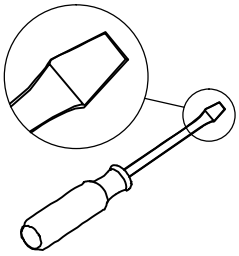

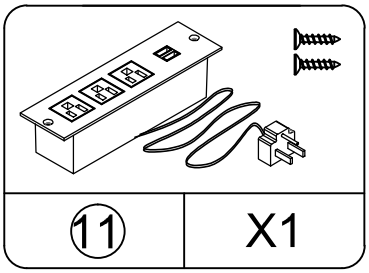


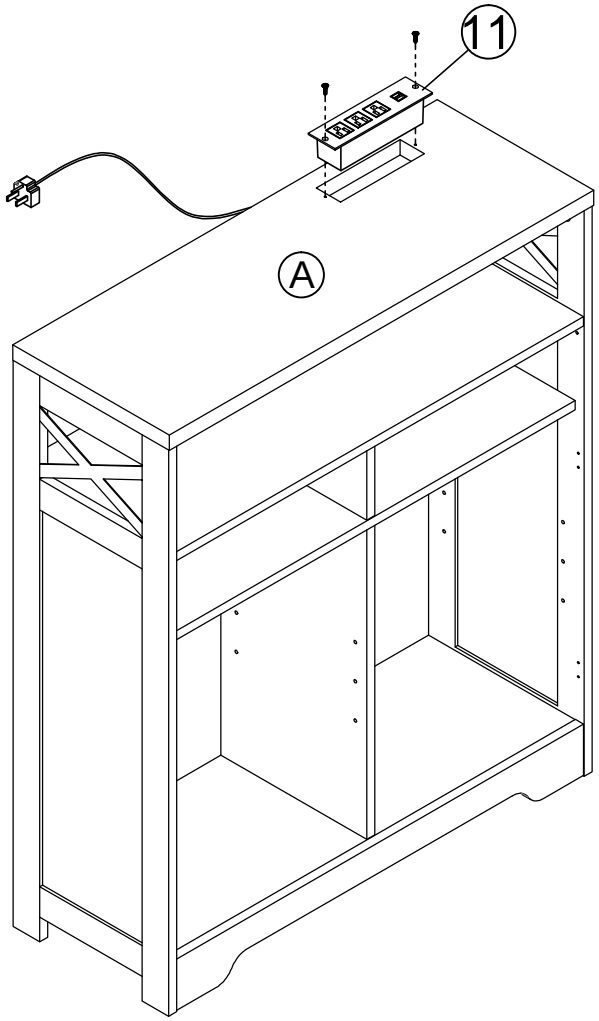


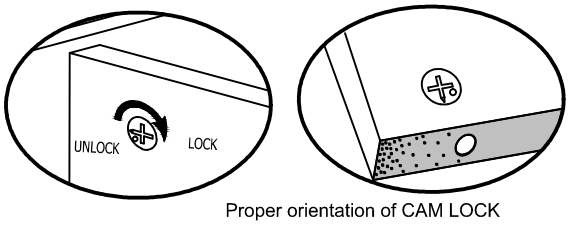


Proper orientation of CAM LOCK

STEP10

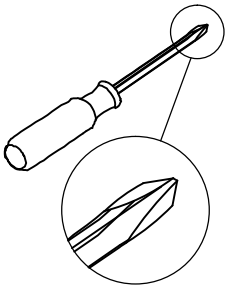

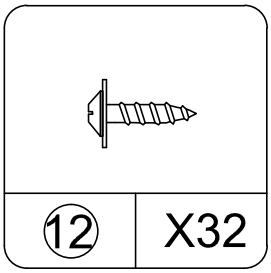



This hole for installation the part ⑮.

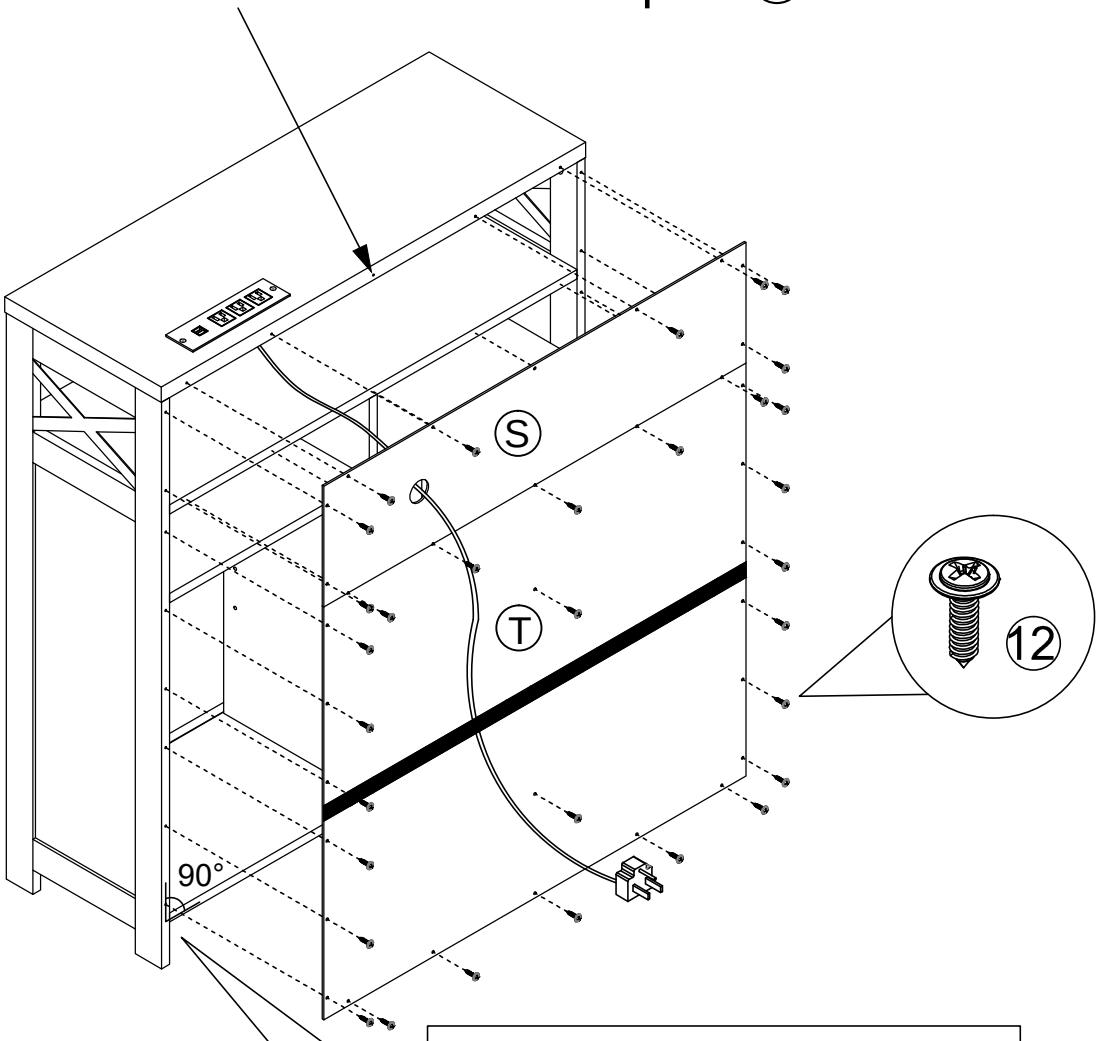



Before attaching the back panel,besure that the unit is at 90°
Avant d'attacher le panneau arrière, assurez-vous que l'unité est à 90°
Antes de fijar el panel posterior, asegúrese de que la unidad esté a 90°


STEP11

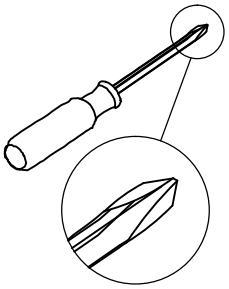


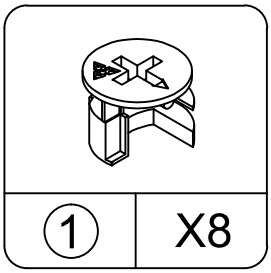


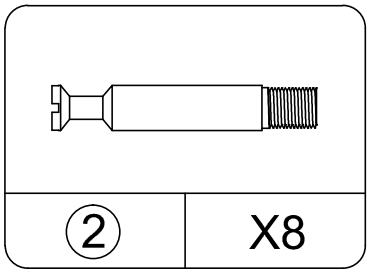


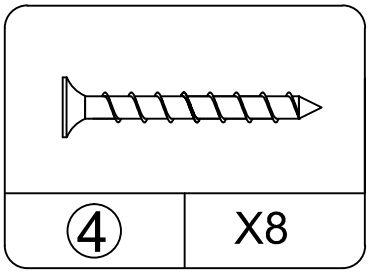

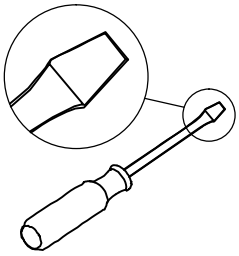


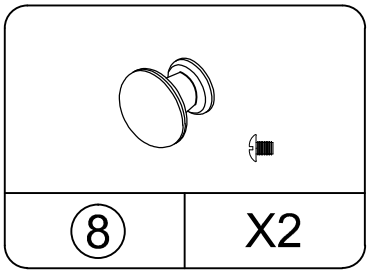

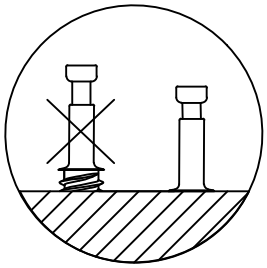

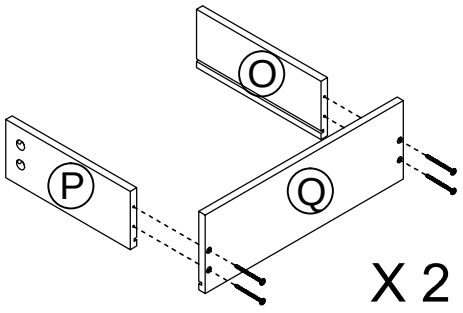


Step 1

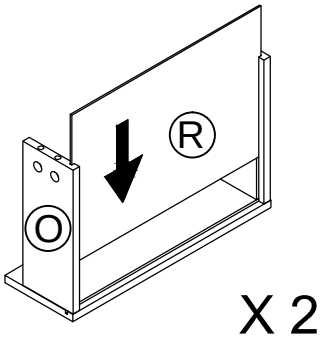



Step 2

Step 4

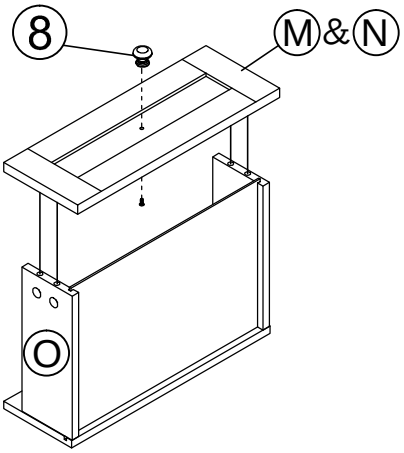


Step 3

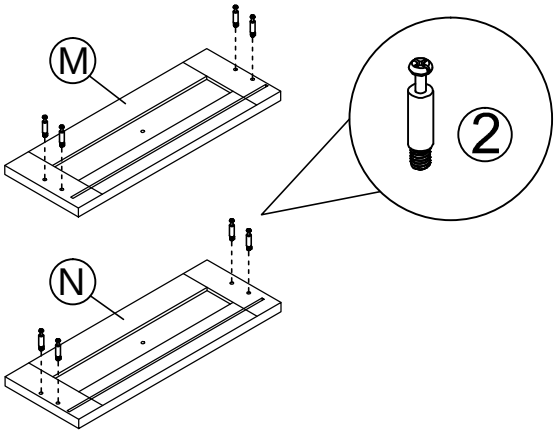


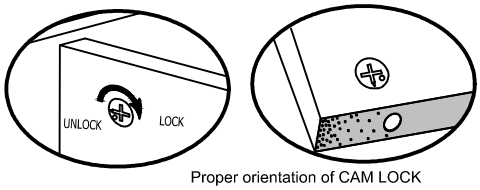


Proper orientation of CAM LOCK


STEP12

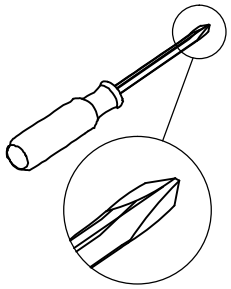


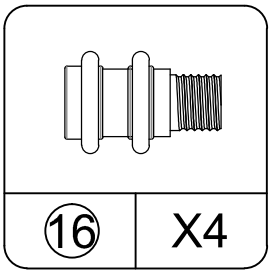


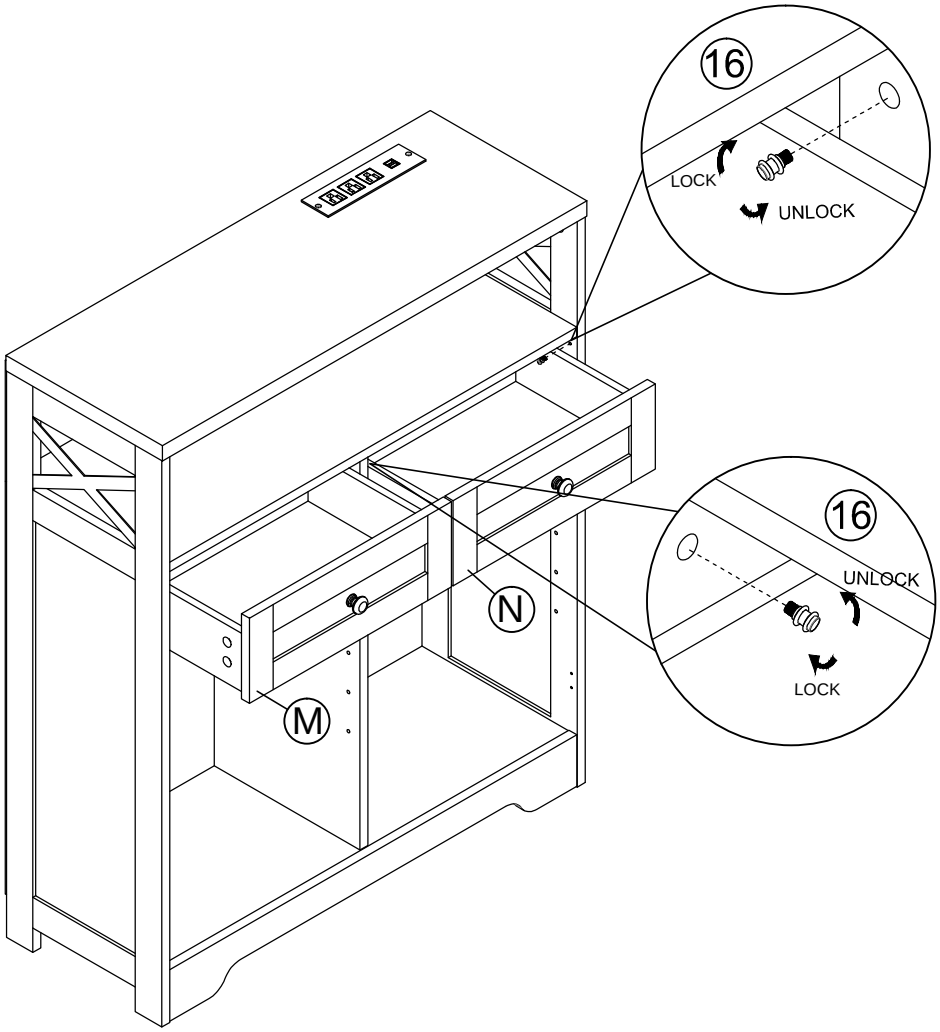



STEP13

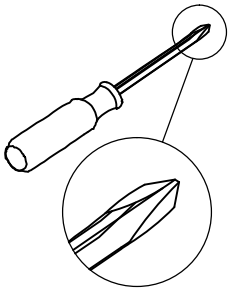


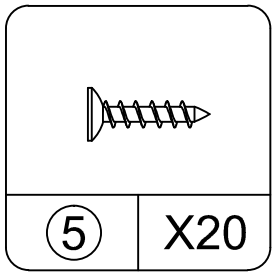


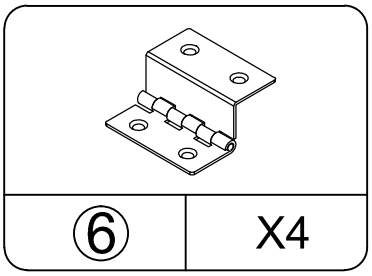


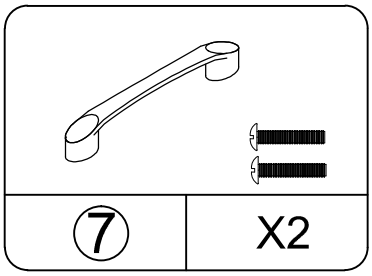

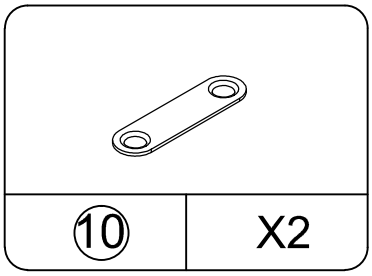


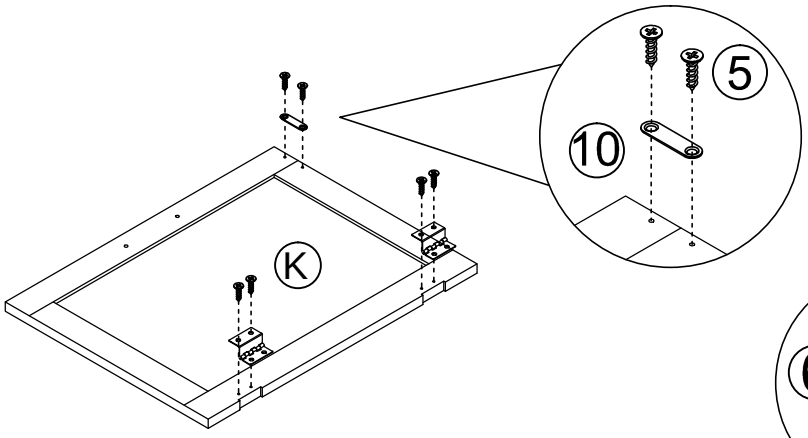


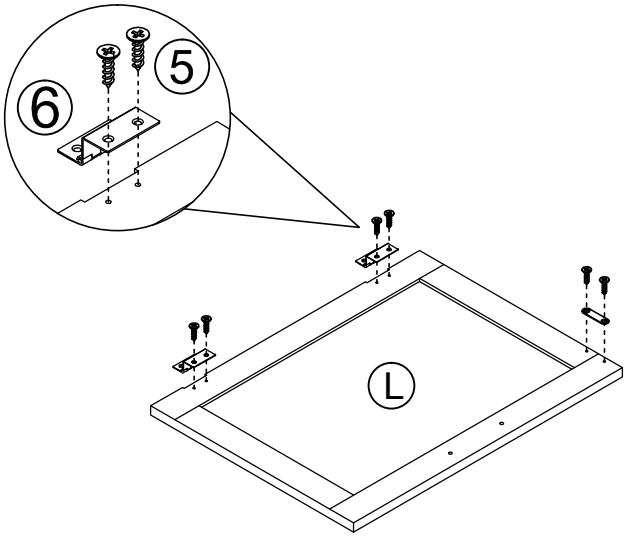


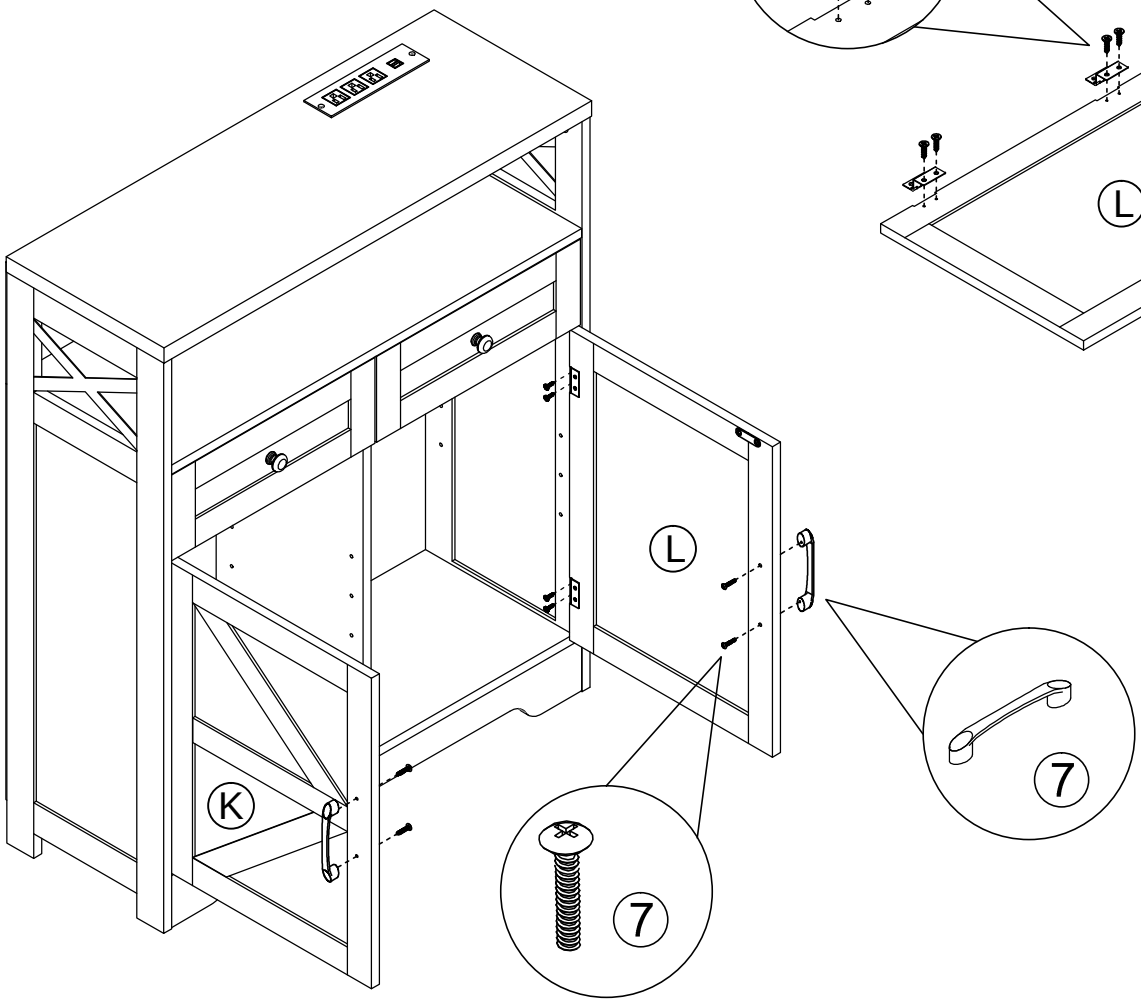


STEP14


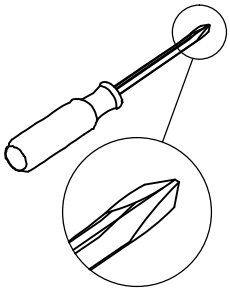


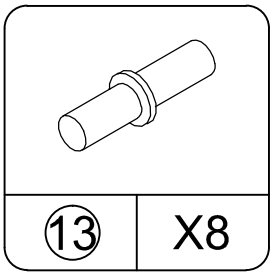

⑬
X8

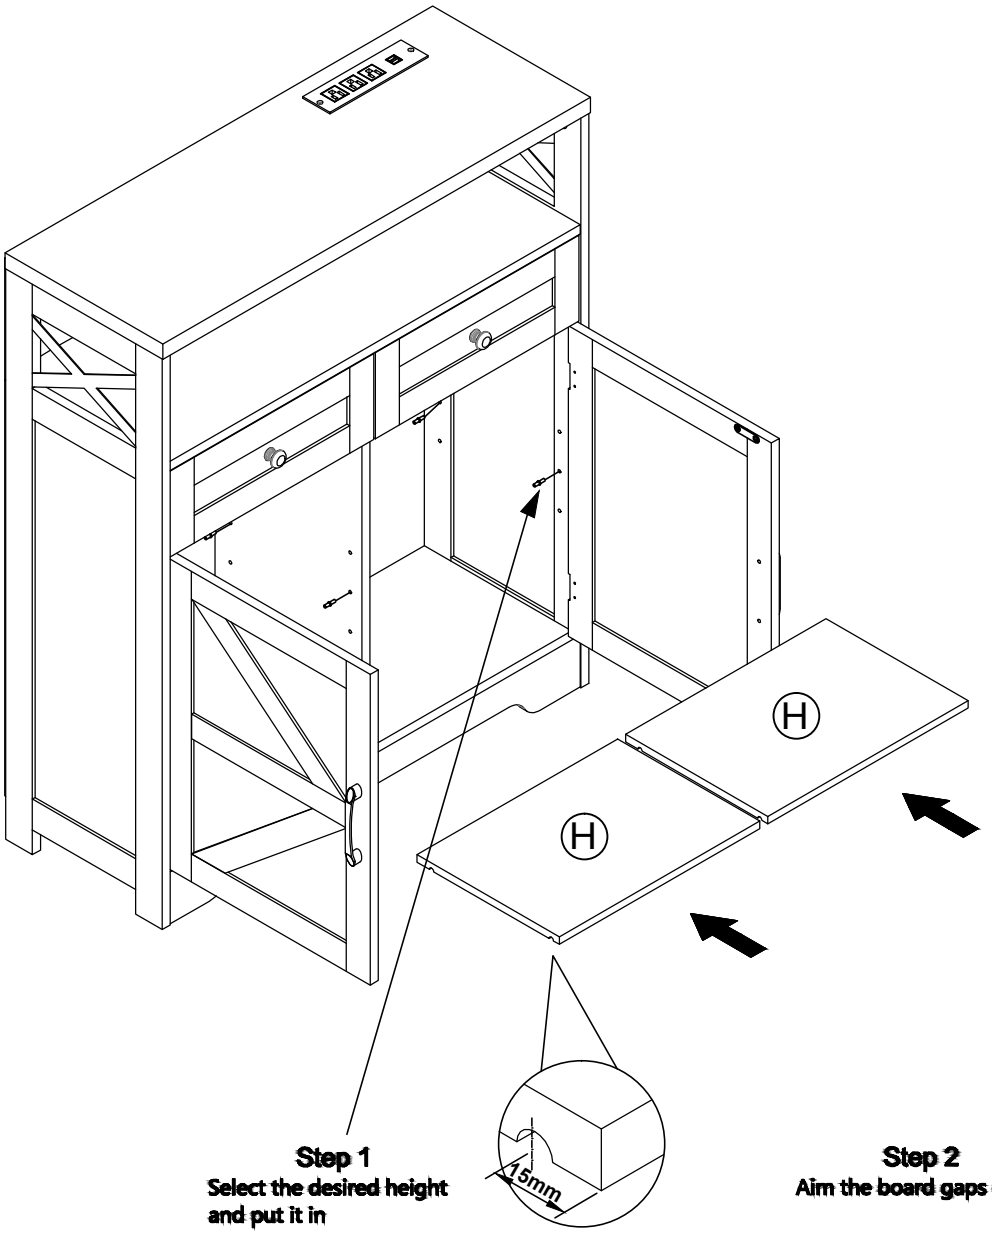
H
H
15mm
Step 1
Select the desired height
and put it in
Step 2
Aim the board gaps down
⑬

STEP15

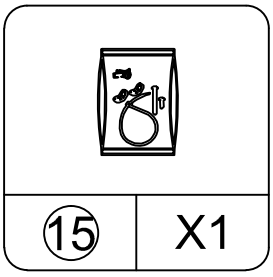

PART LIST	FIGURE	QUANTITY	DESCRIPTION
15.1		1PC	LONG SCREW (Dia.4mmX38mmL)
15.2		1PC	SHORT SCREW (Dia.4mmX19mmL)
15.3		2PC	METAL "L"BRAKET
15.4		1PC	PLASTIC ANCHOR
15.5		1PC	CABLE

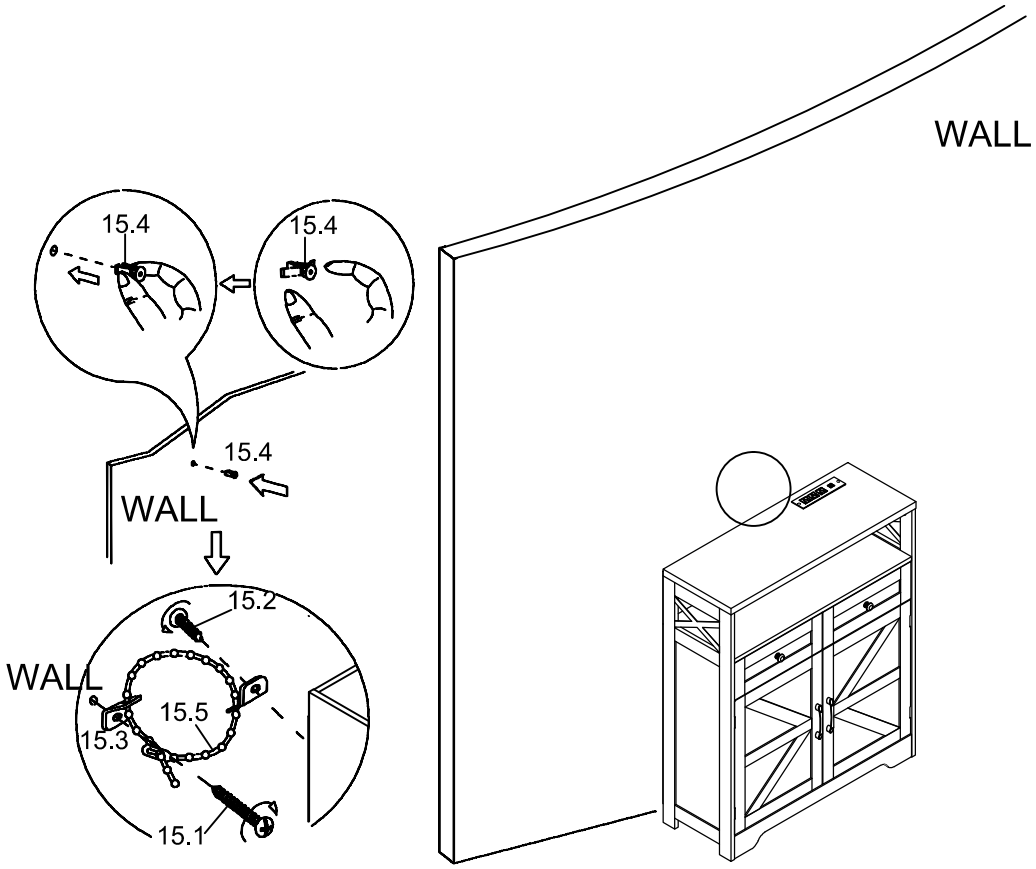

Follow the instructions printed on the plastic bag containing the tipping restraint hardware to attach thetip-over restraints to the unit and the wall.

NOTE:The tipping restraint hardware included is for drywall construction. It will be necessary to drill holes for the wall anchors. Depending upon your wall construction, different anchor hardware mayberequired. Please contact your local hardware store for assistance.