


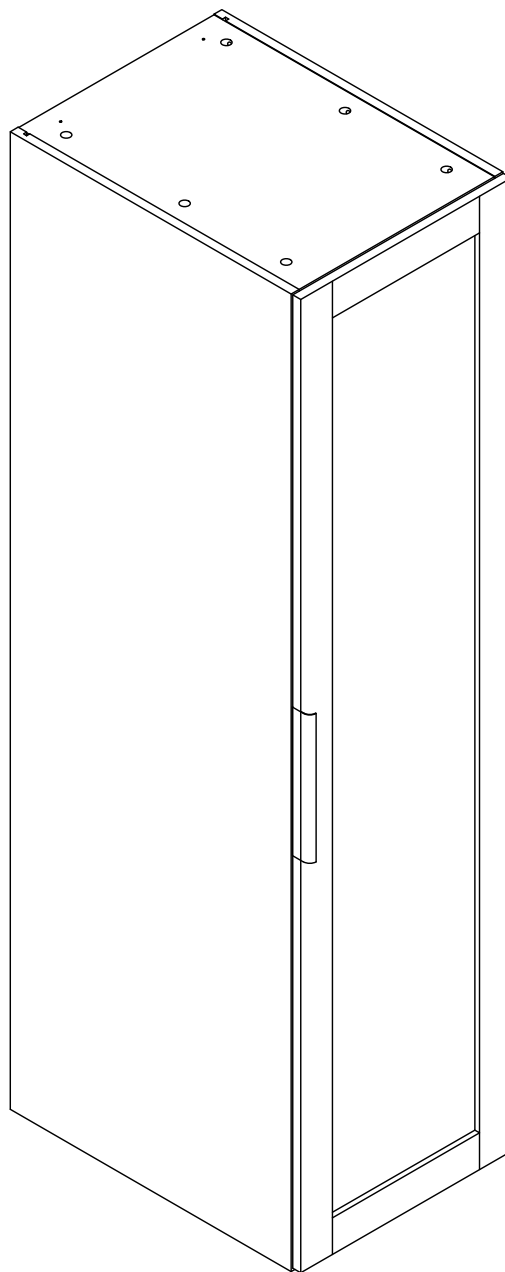
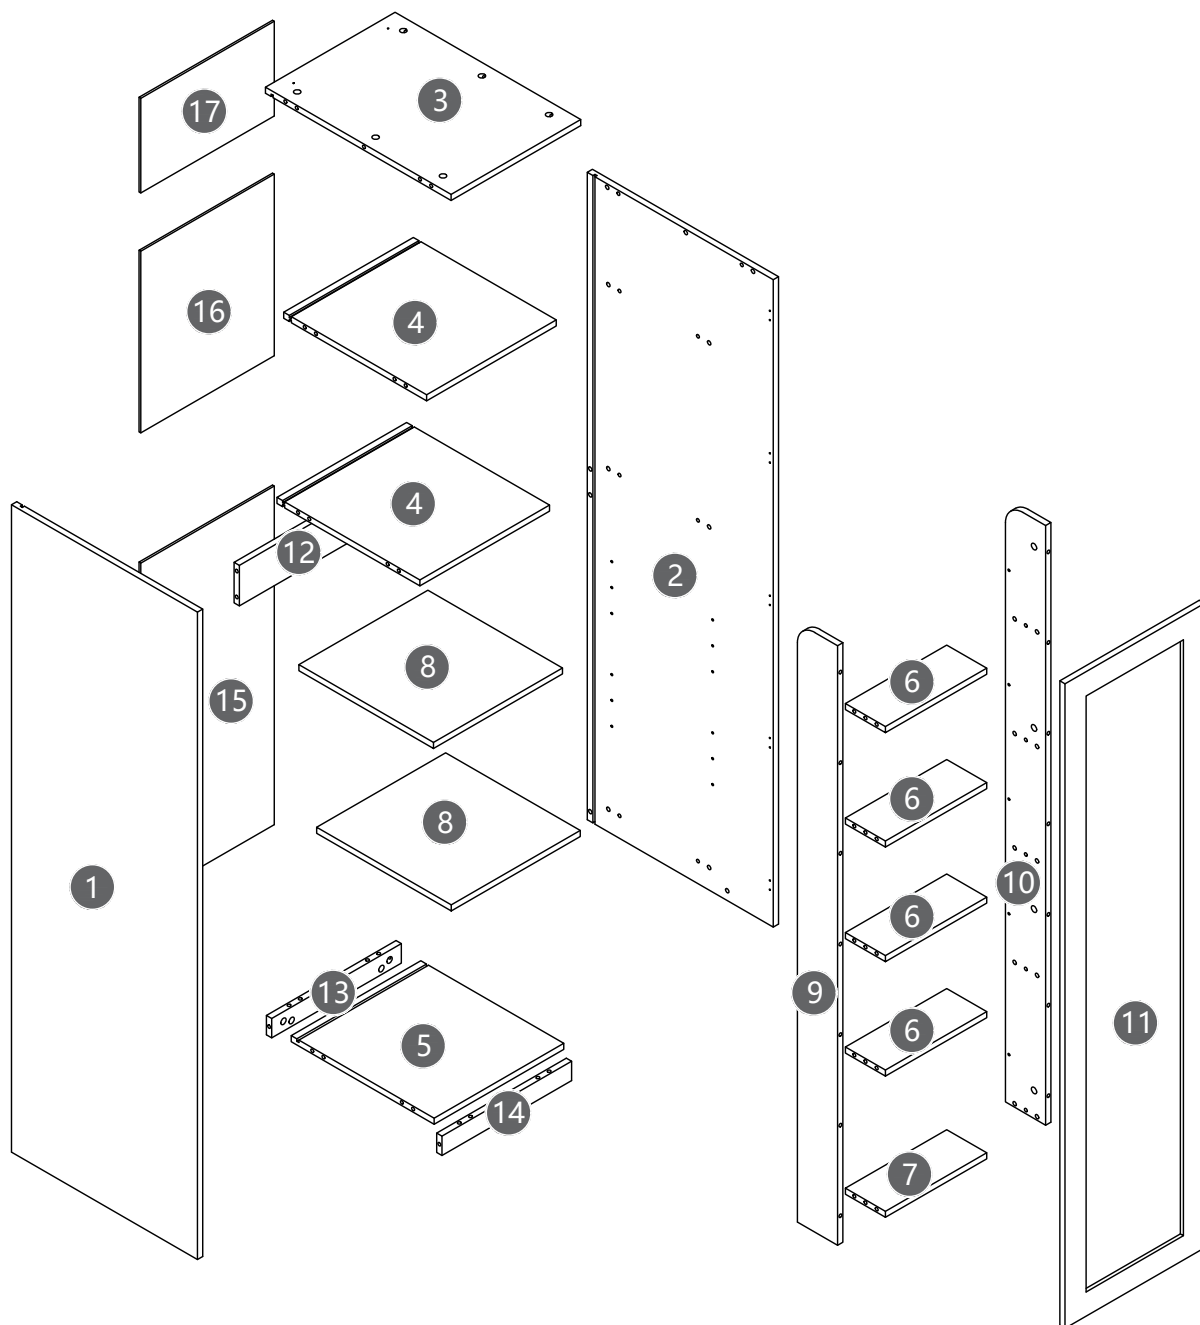
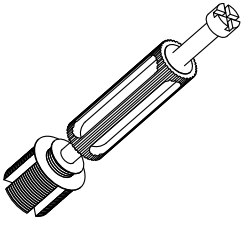

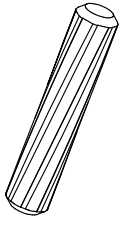

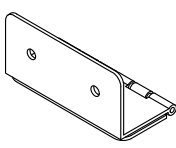

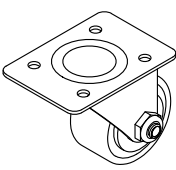

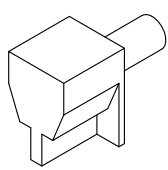
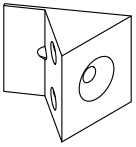

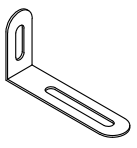





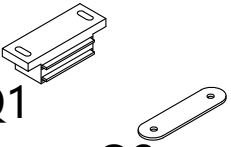


A 58x 	B 58x 	C 36x  M8x40mm	D 25x  M3.5x14mm
E 5x 	F 1x 	G 2x  M3.5x14mm	H 5x  M5x307mm
I 2x 	J 14x  M3.5x14mm	K 8x 	L 16x 
M 16x  M3x12mm	N 2x 	O 2x  M8x40mm	P 2x  M4x50mm
Q 1x Q1 Q2 	R 14x 		




Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

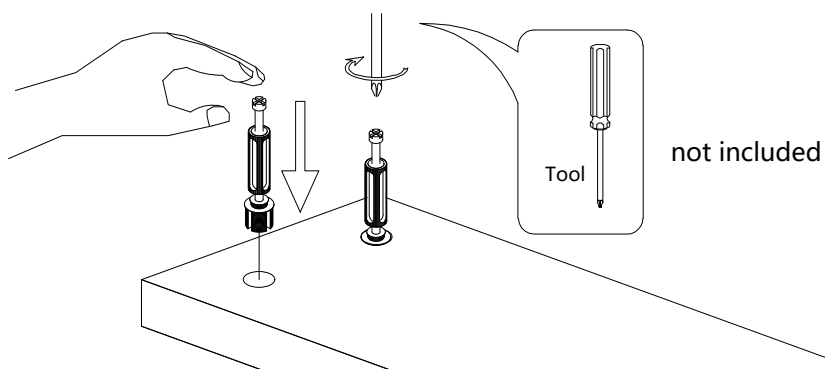

II

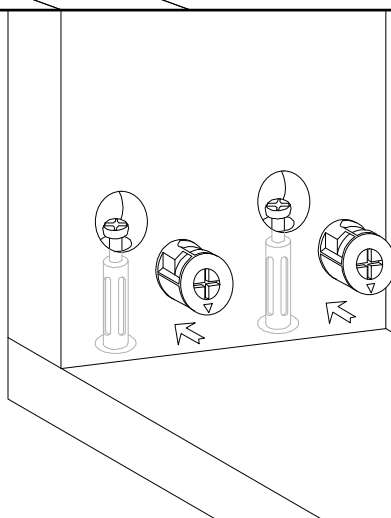

III

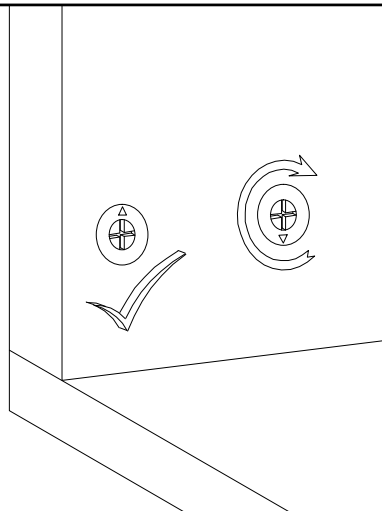


IV



Scan QR code for assembly video


01

A

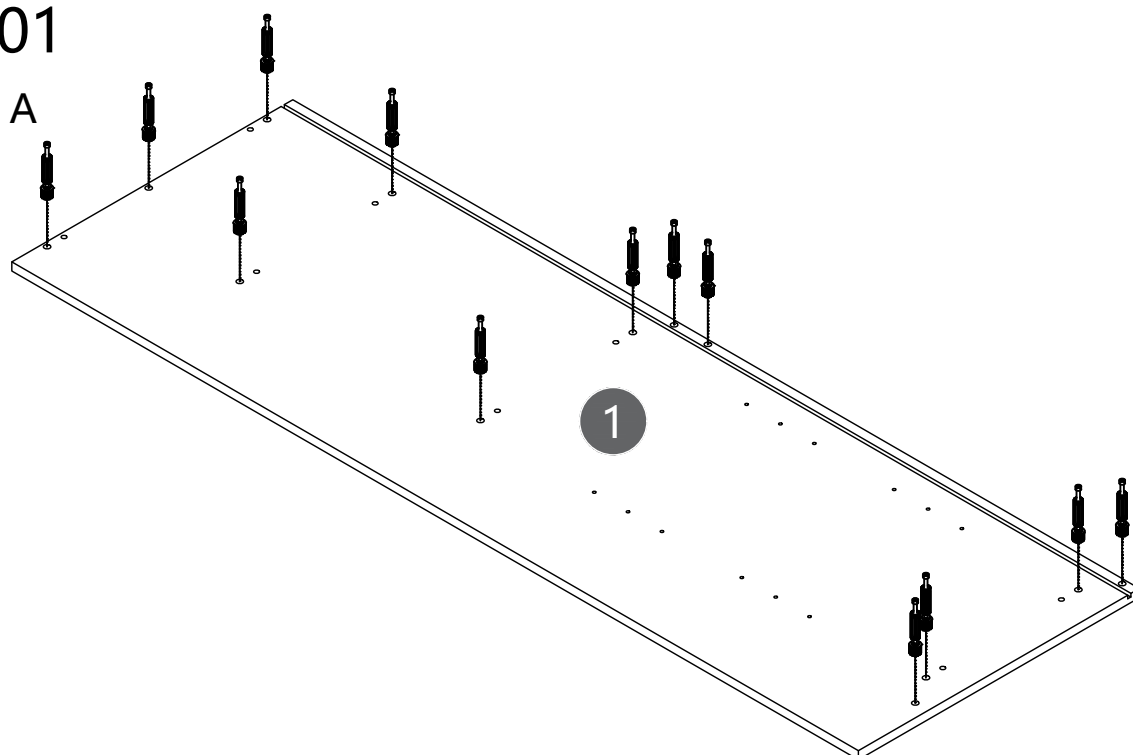


A

13x




02

A


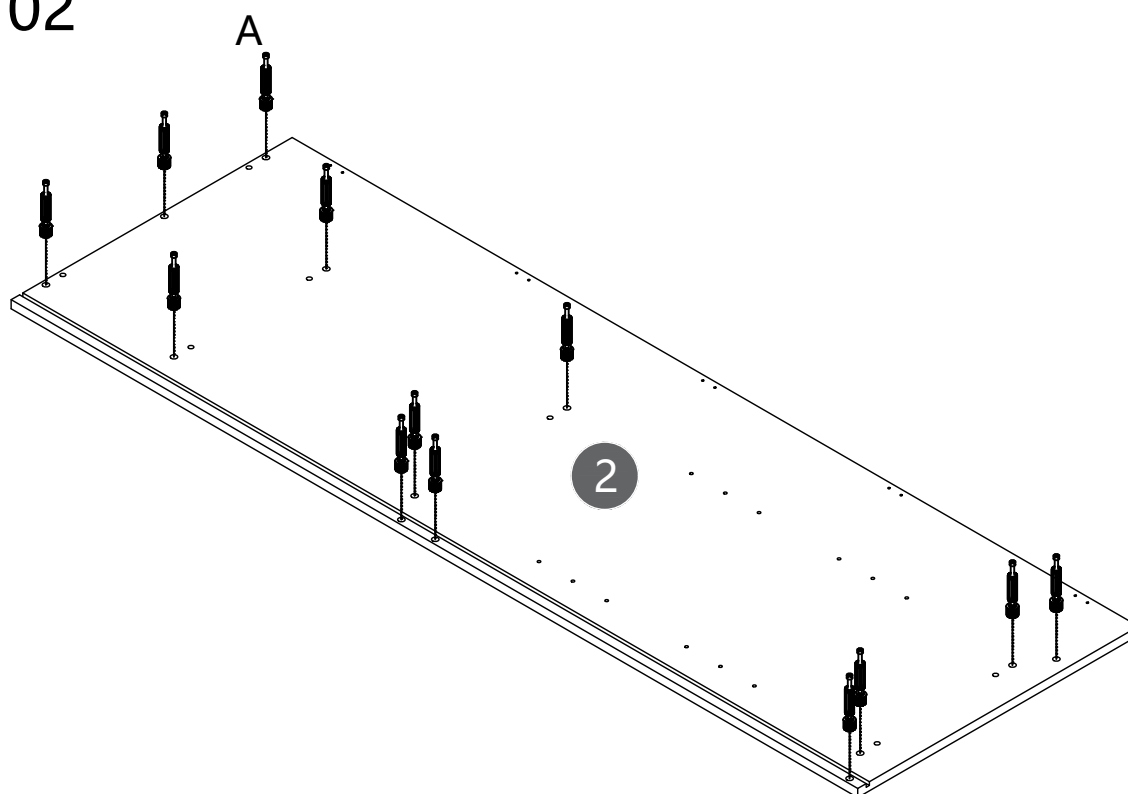


A




13x






03

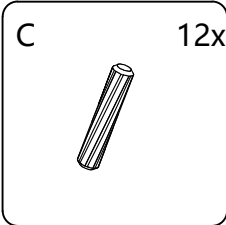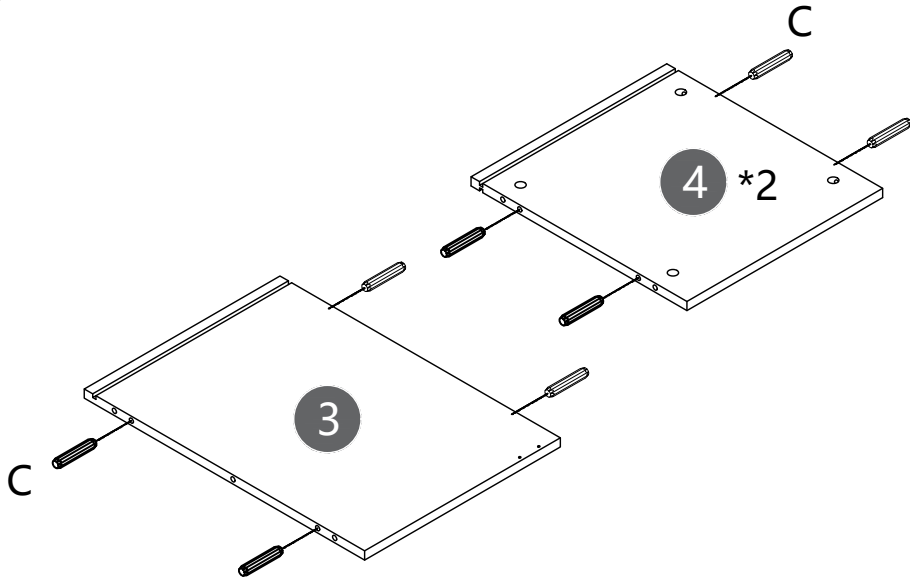







04

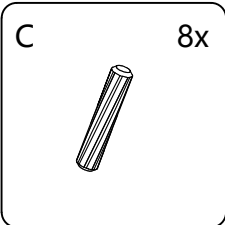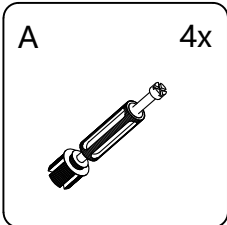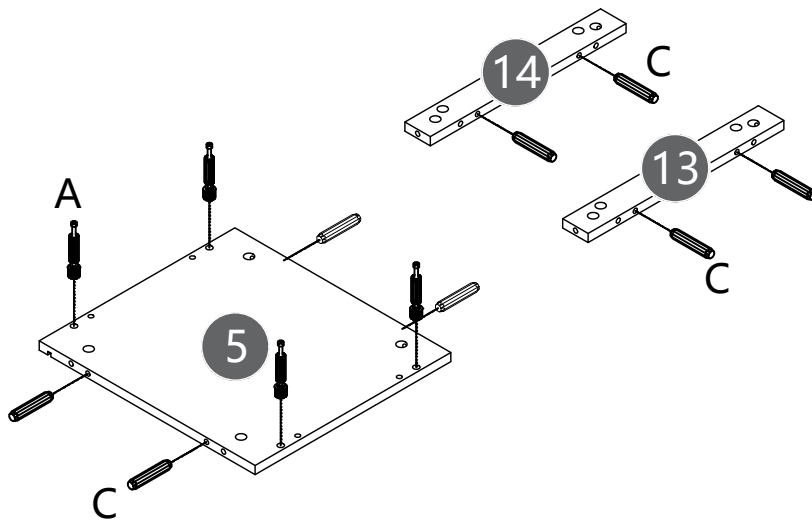


05

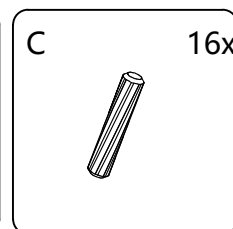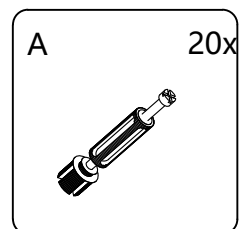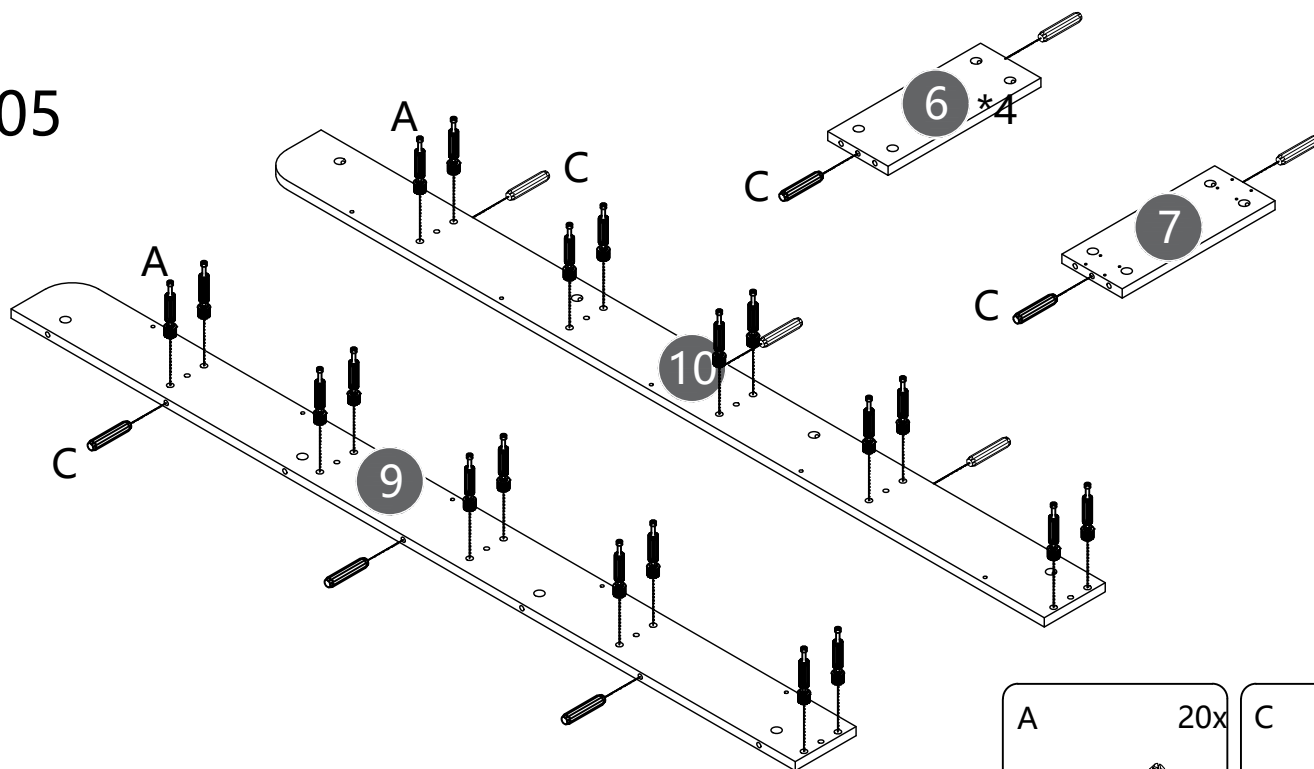

06

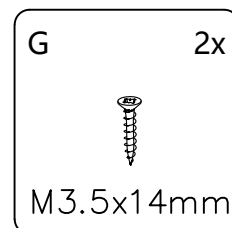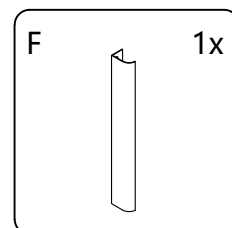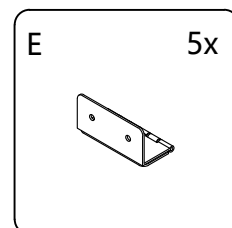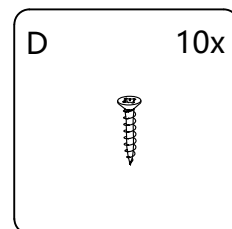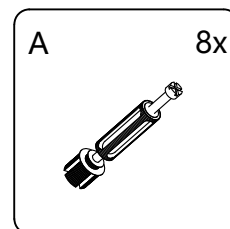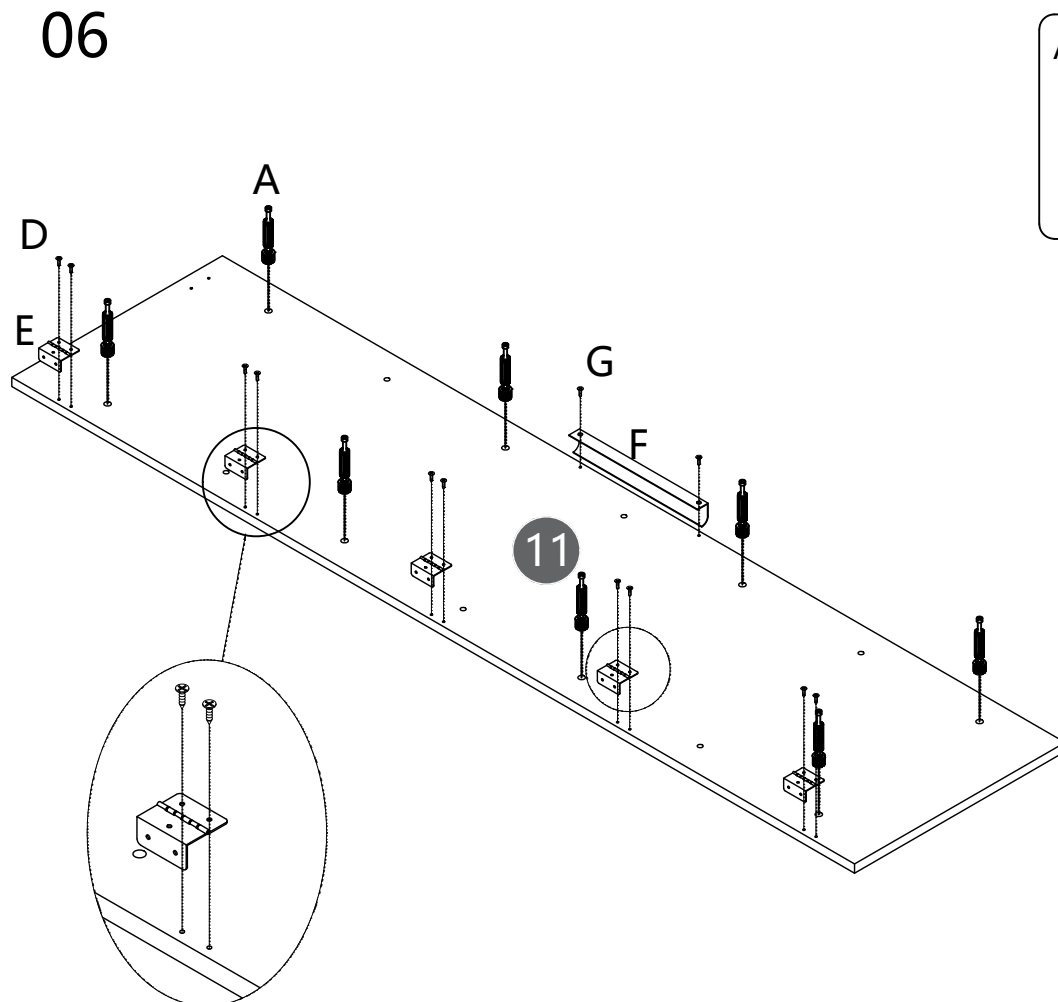


07

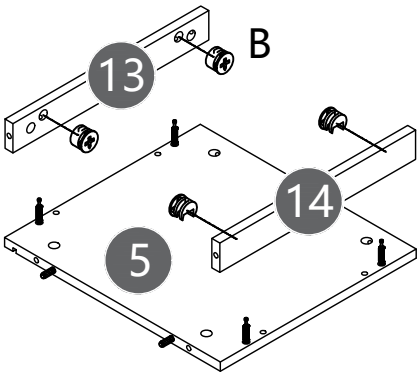


B4x

08




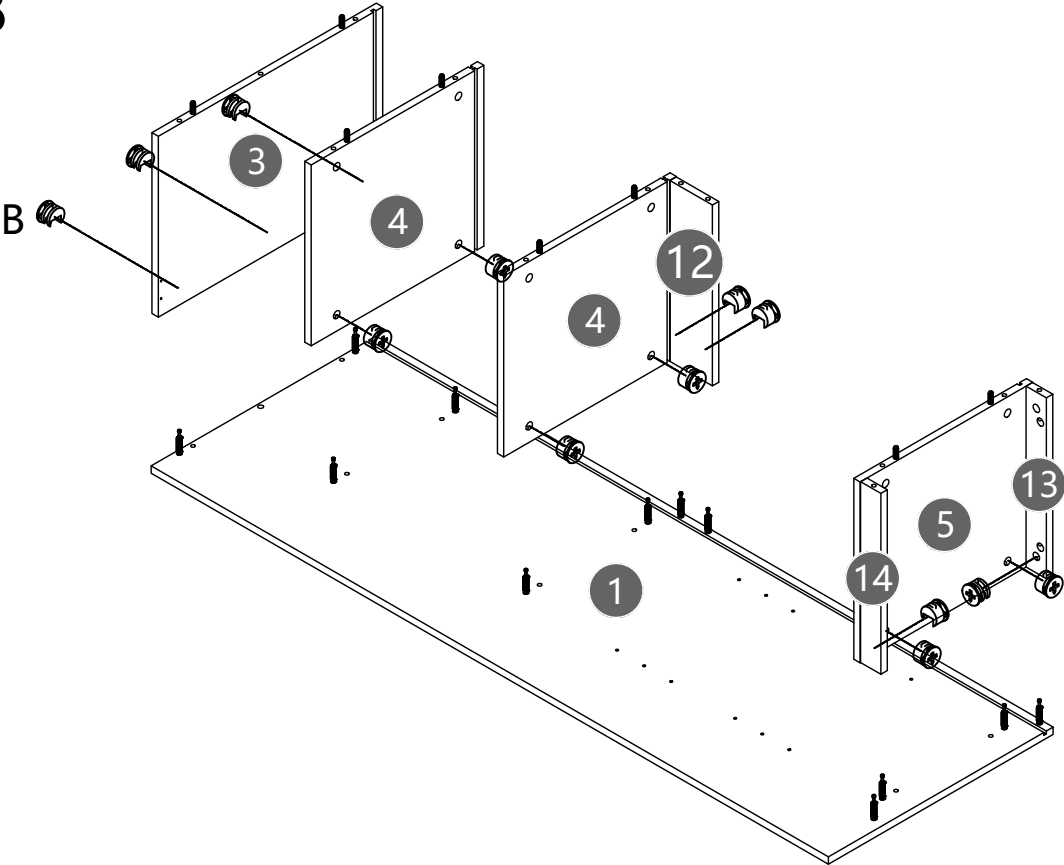


B13x



09

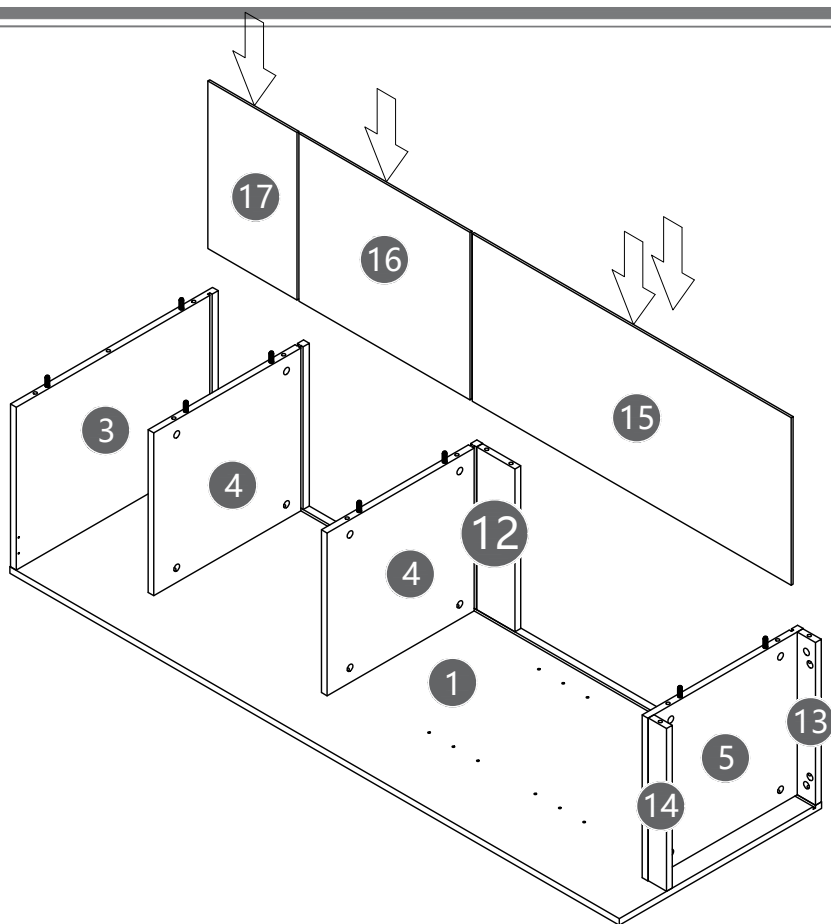



10

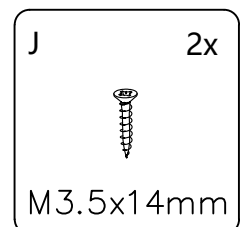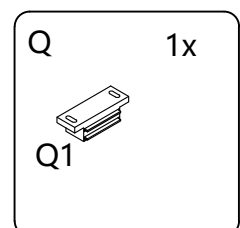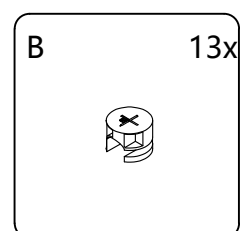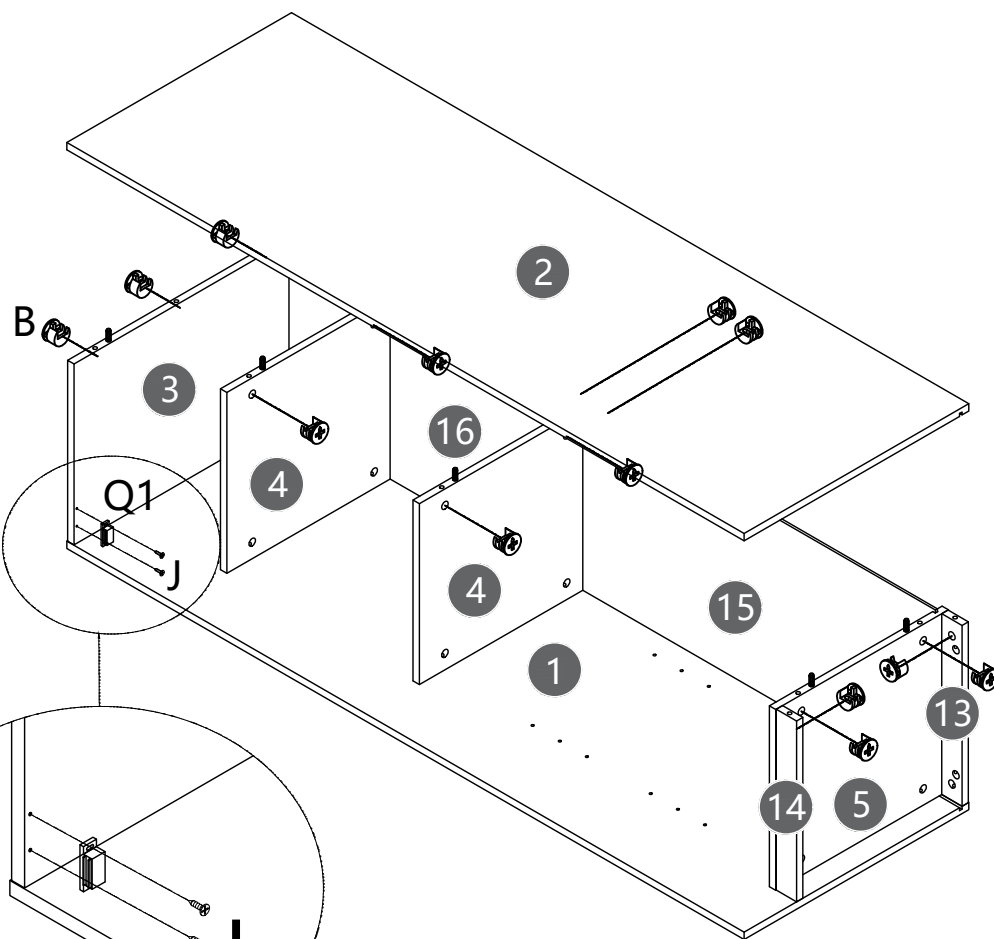



11

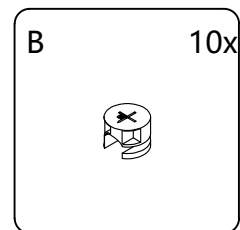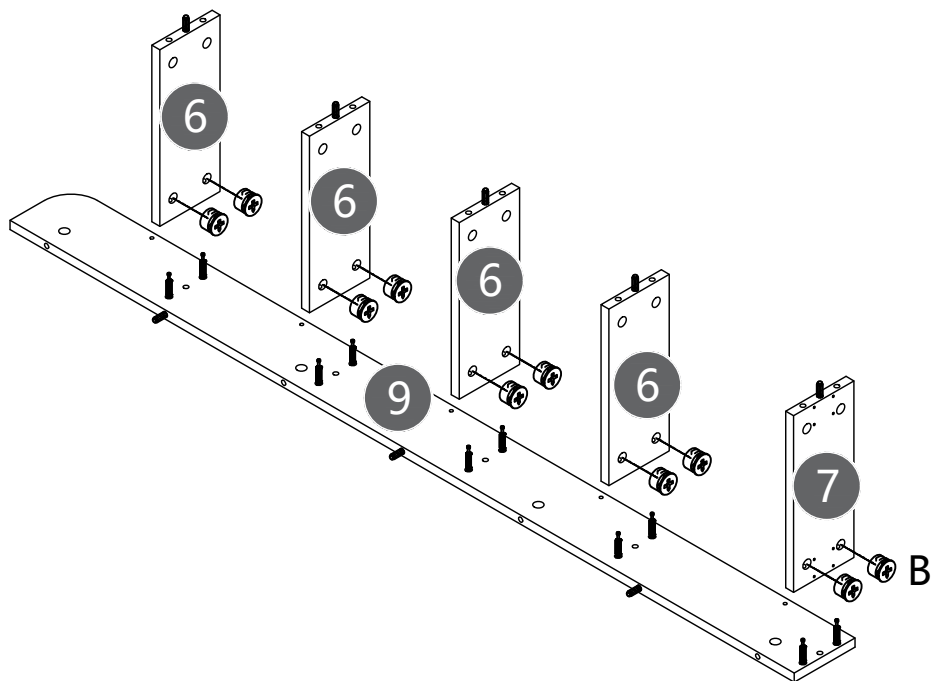




12

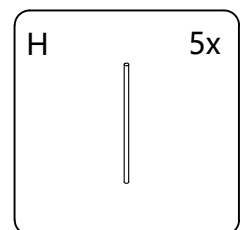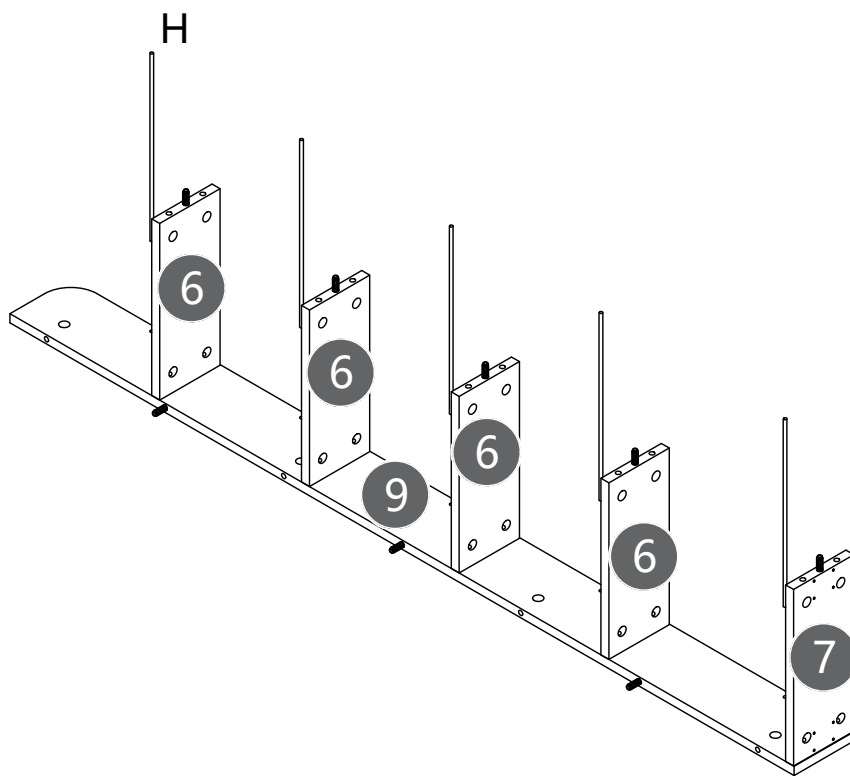





13

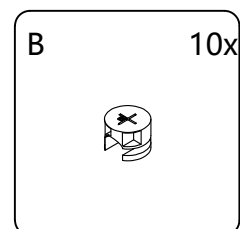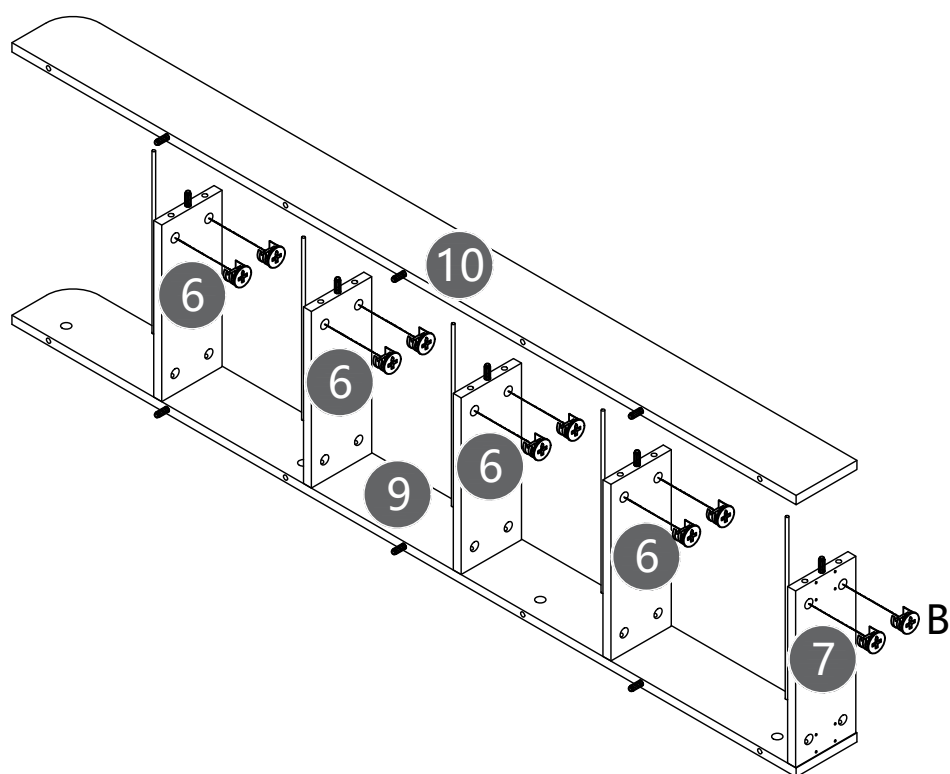



14

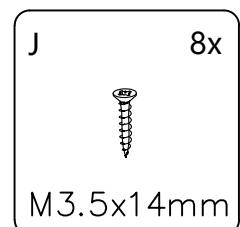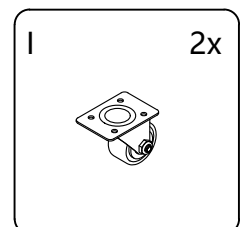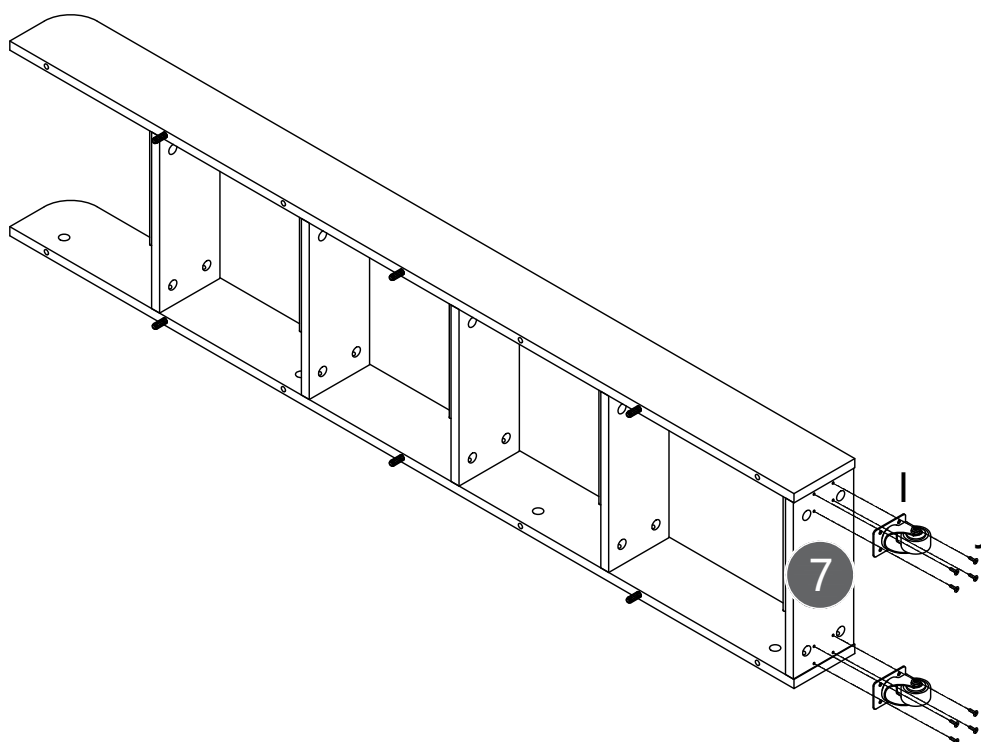




15

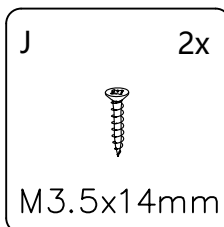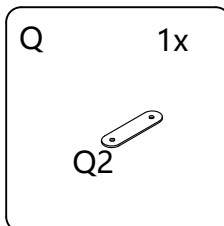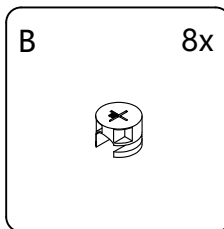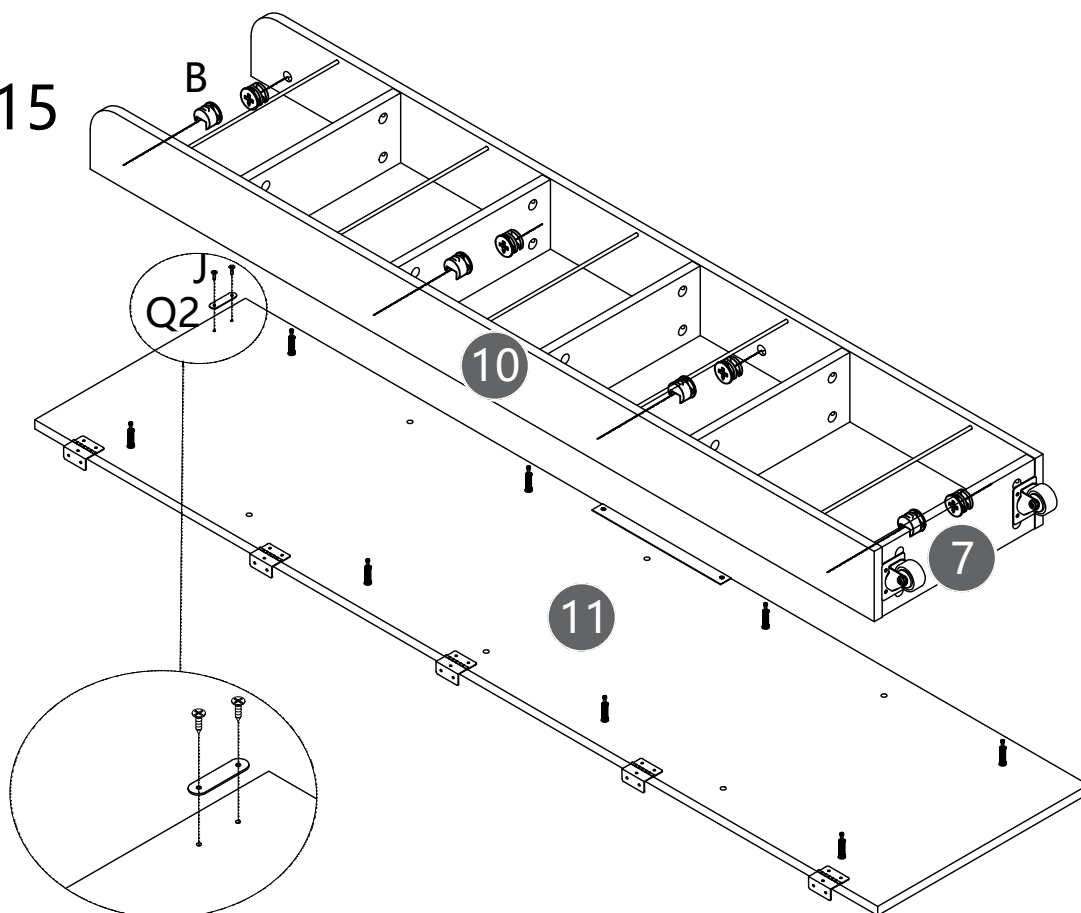




16

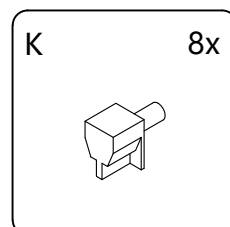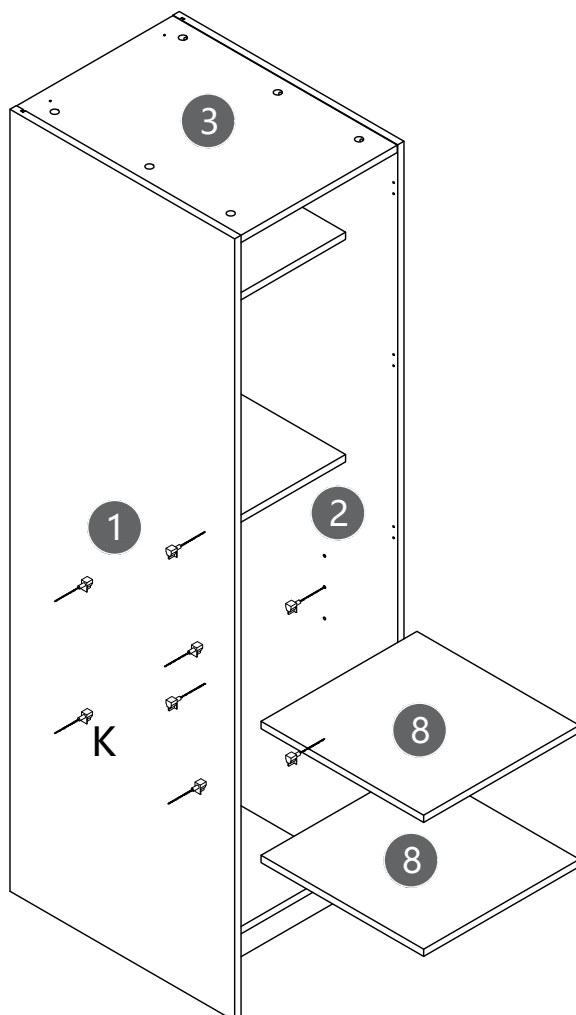



17

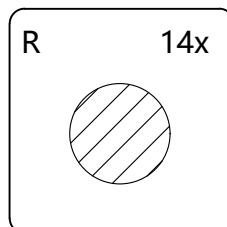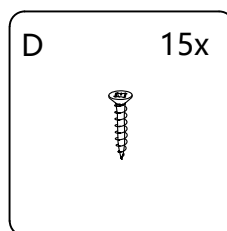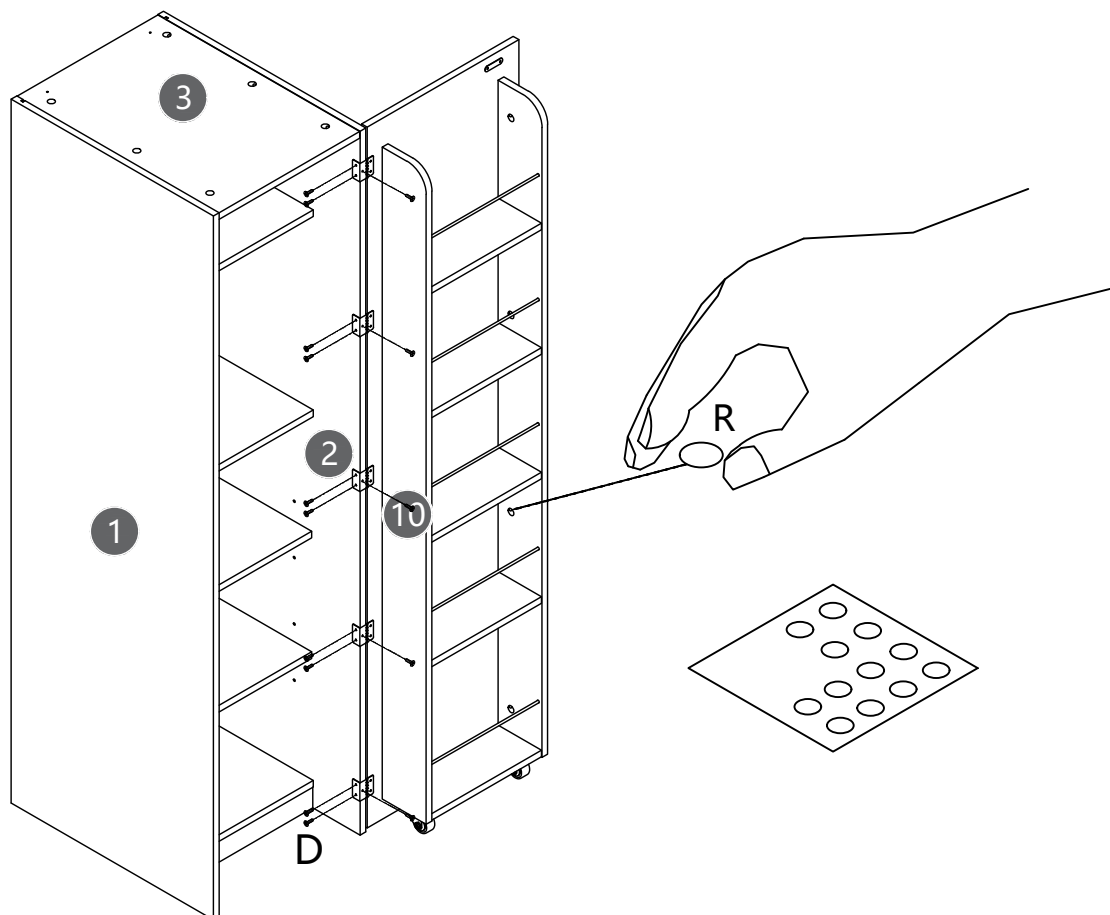

18

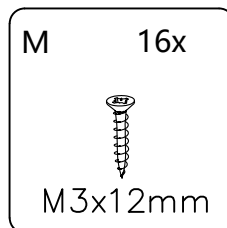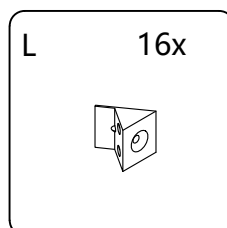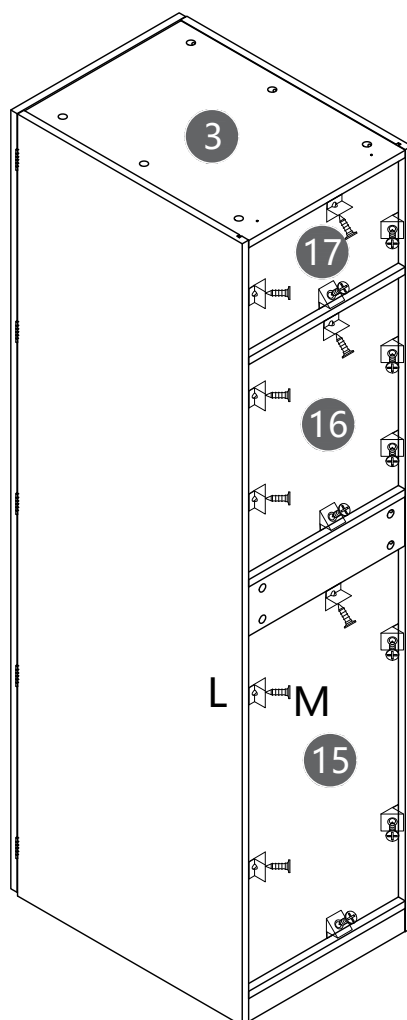

19

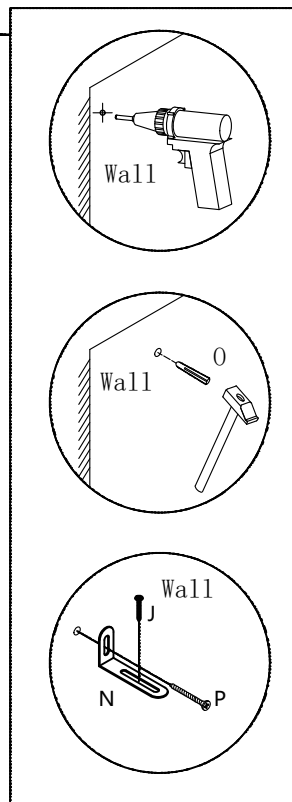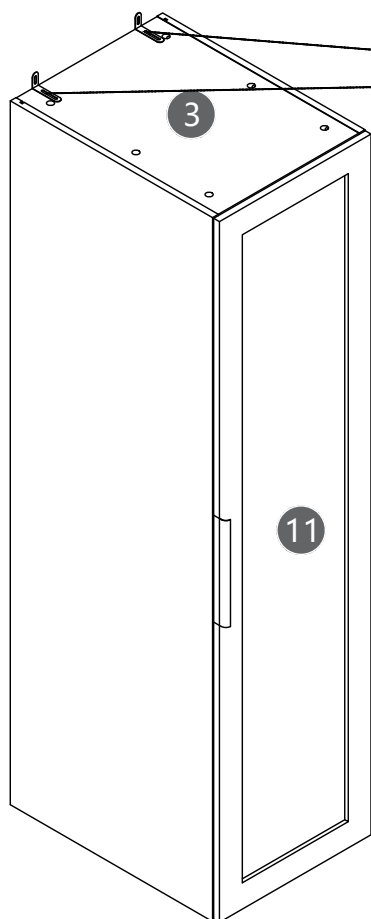


x2

J 2x



M3.5x14mm


N 2x



O 2x



P 2x



M4x50mm

20

