



ASSEMBLY INSTRUCTIONS

TWIN/TWIN SIZE BUNKBED










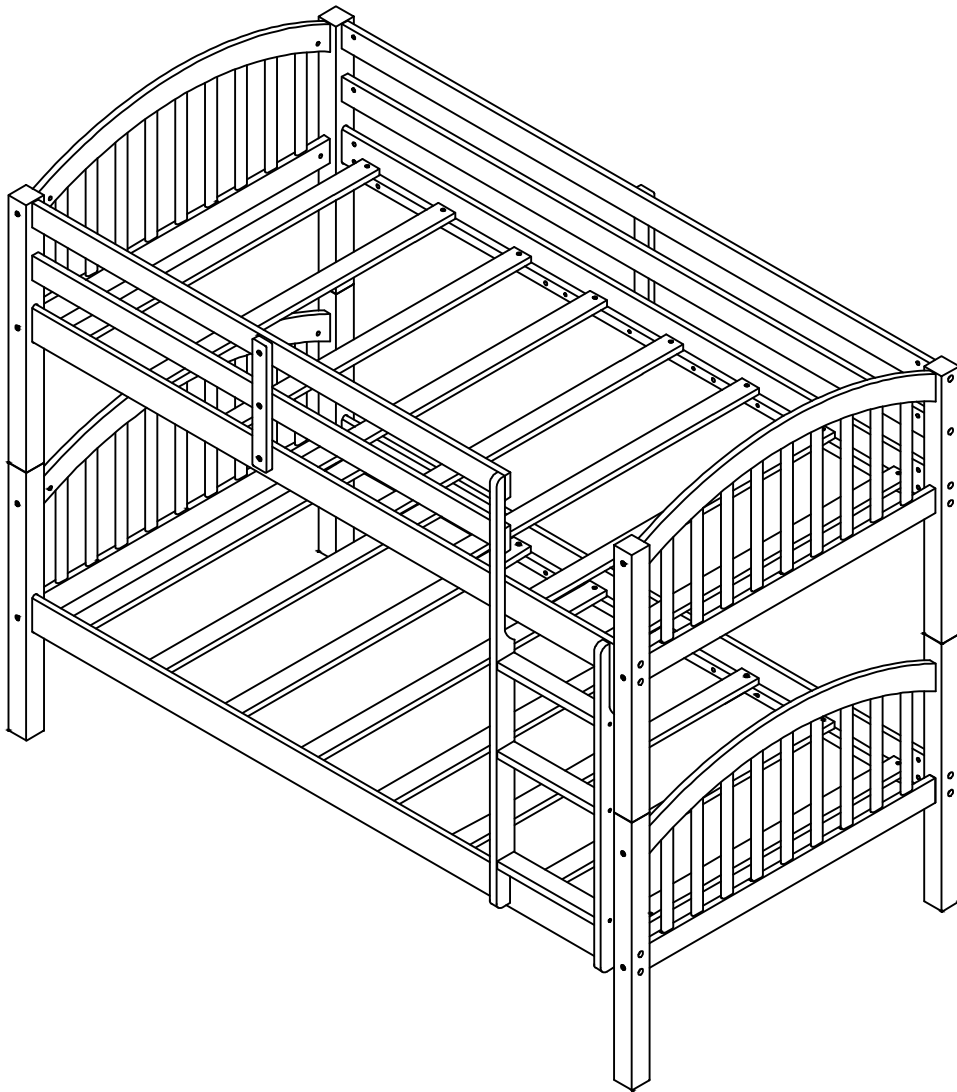


WF191901/191902


Detail View

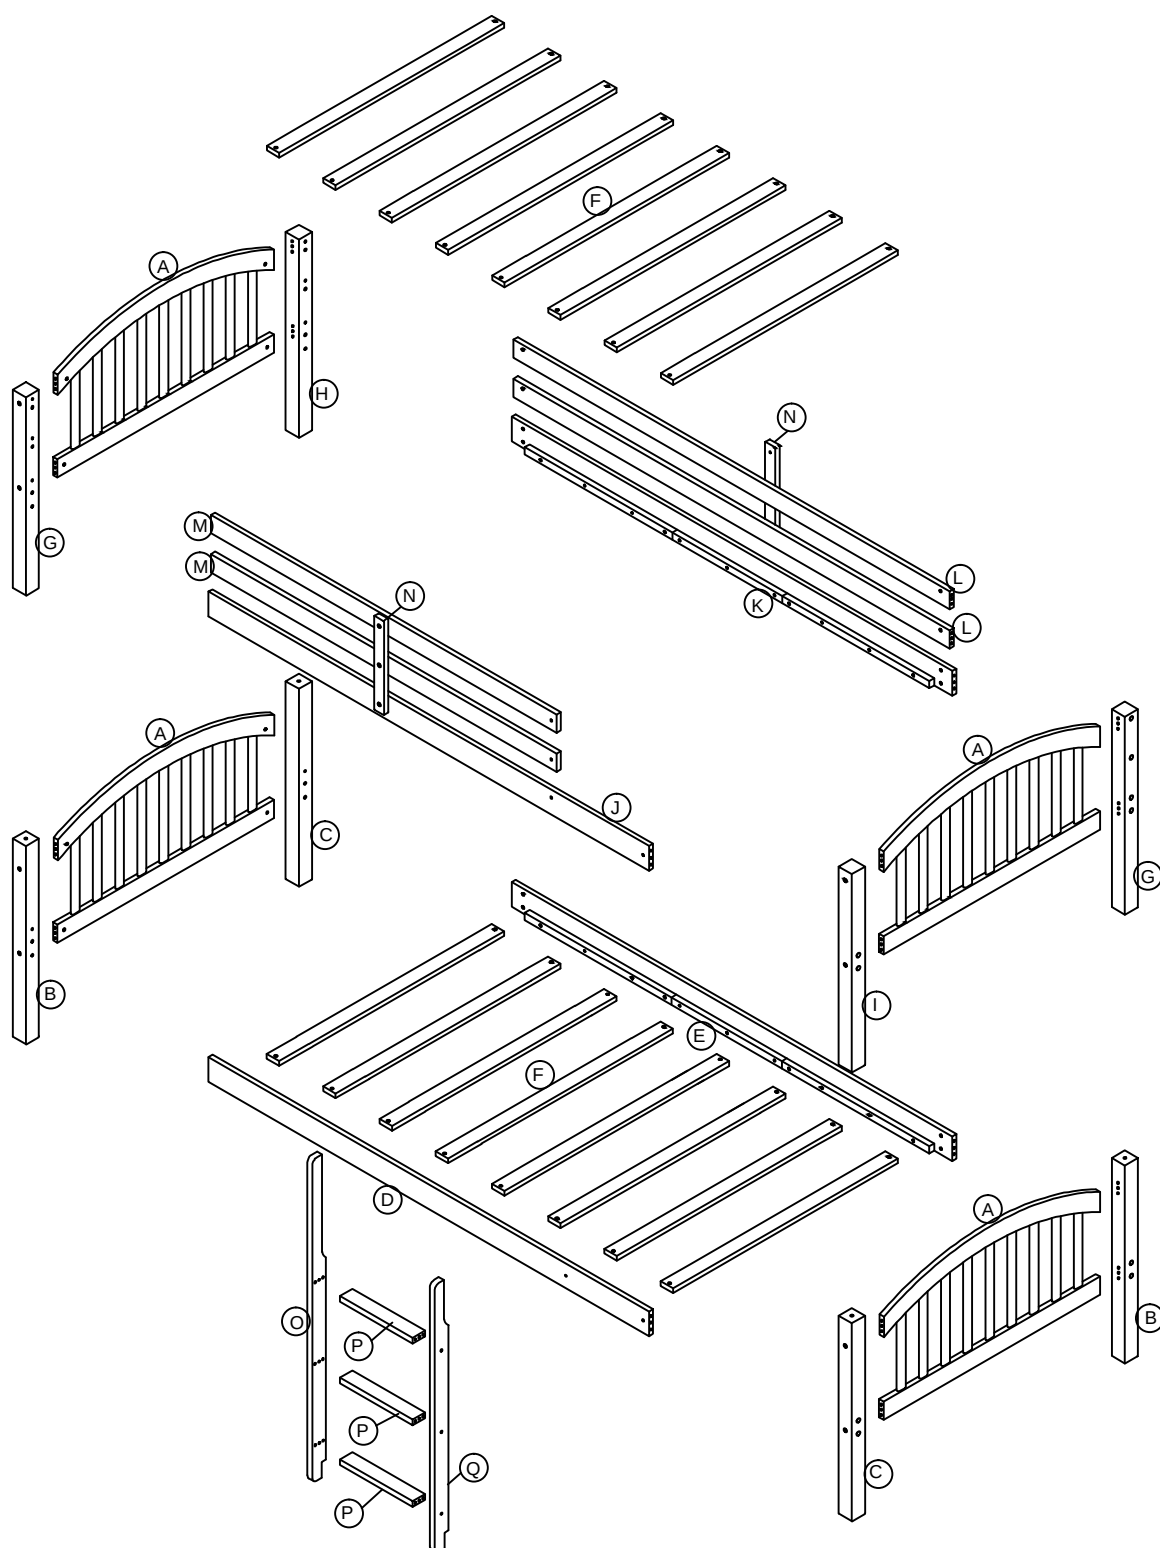



Part List

A		B		C	
Frame HB&FB - 4pcs		Leg HB (Bottom) - 2pcs		Leg HB (Bottom) - 2pcs	
D		E		F	
Side rail(lower)-1pcs		Side rail(lower)-1pcs		Slats - 2sets (8pcs/set)	
G		H		I	
Leg HB (Top) - 2pcs		Leg HB (Top) - 1pc		Leg HB (Top) - 1pc	
J		K		L	
Side rail(upper front)-1pc		Side rail(upper back)-1pc		guard rail(longer) - 2pcs	
M		N		O	
guard rail(shortter) - 2pcs		Vertical guard rail - 2pcs		Ladder side rail (left)-1pc	
P		Q			
Ladder Step - 3pcs		Ladder side rail (right)-1pc			

Hardware List


1  (1/4")4.5*58mm Allen key (1pc)	2  Ø10*30mm Wood dowel (64pcs)	3  (Ø15)1/4"*100mm Hex-Head bolts (38pcs)
4  (Ø15)1/4"*50mm Hex-Head bolts (12pcs)	5  (Ø12)1/4"*30mm Bolts screw (6pcs)	6  Ø4*30mm Wood screws (32pcs)
7  1/4"*15 (9.5mm) Horizontal-Hole bolts(22pcs)	8  Ø9*90mm Metal connector (4pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

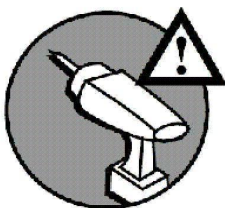


PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

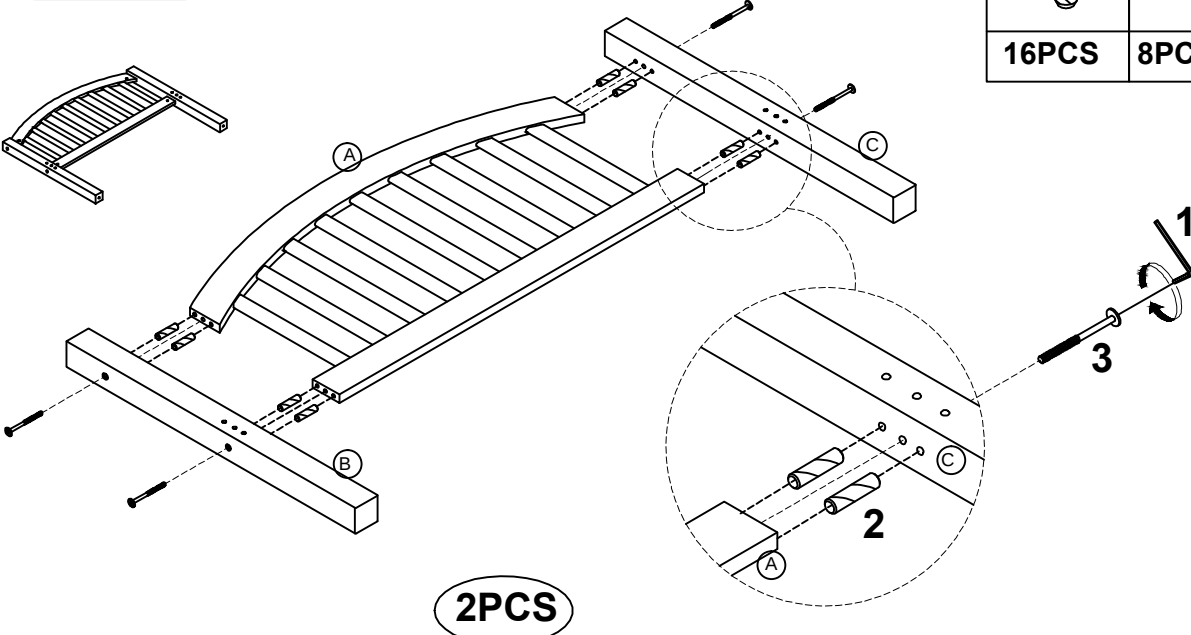

STEP 2:

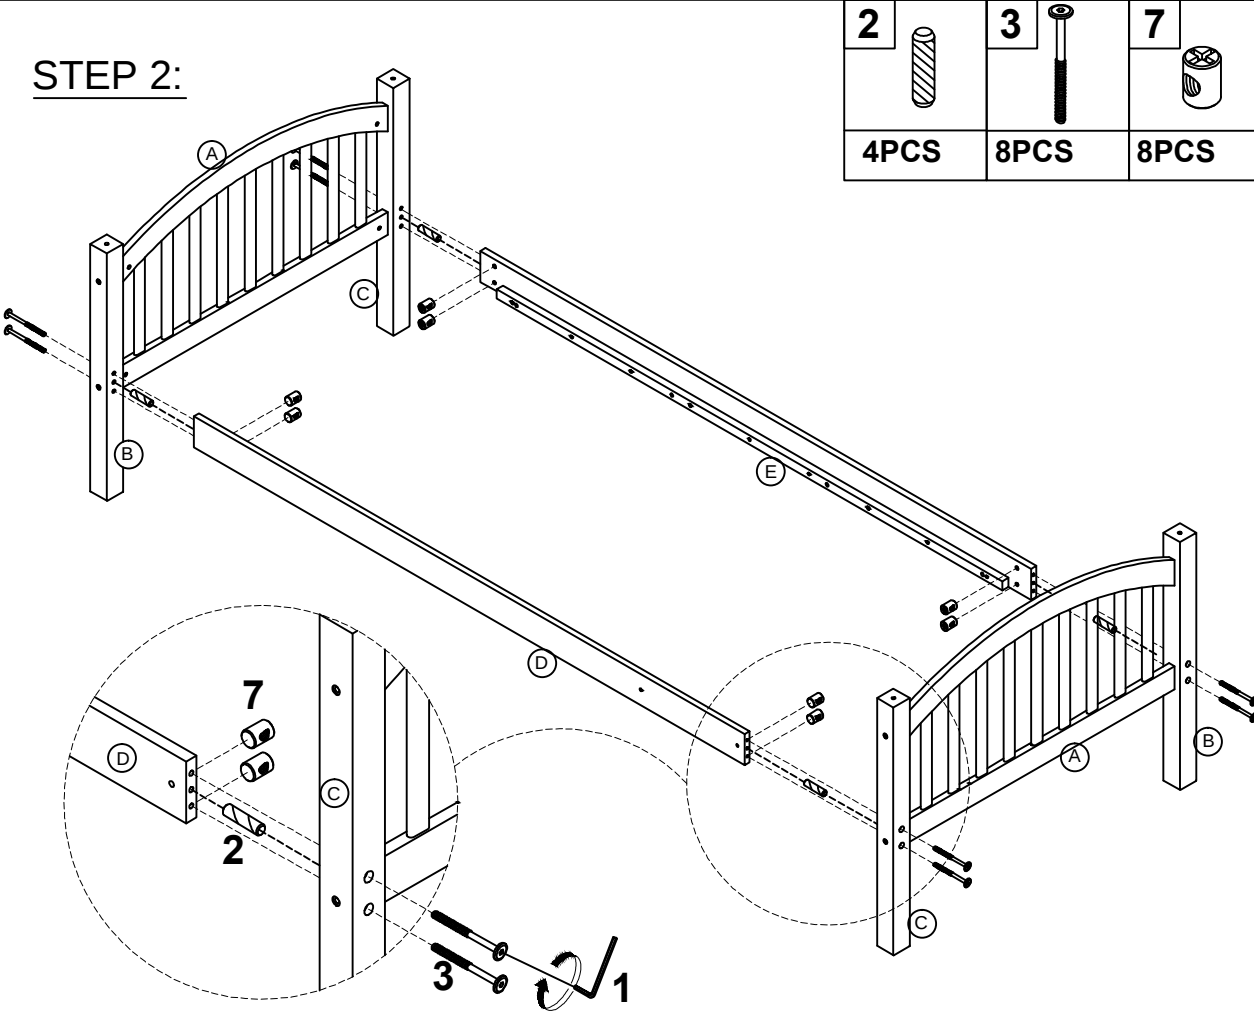


STEP 3:

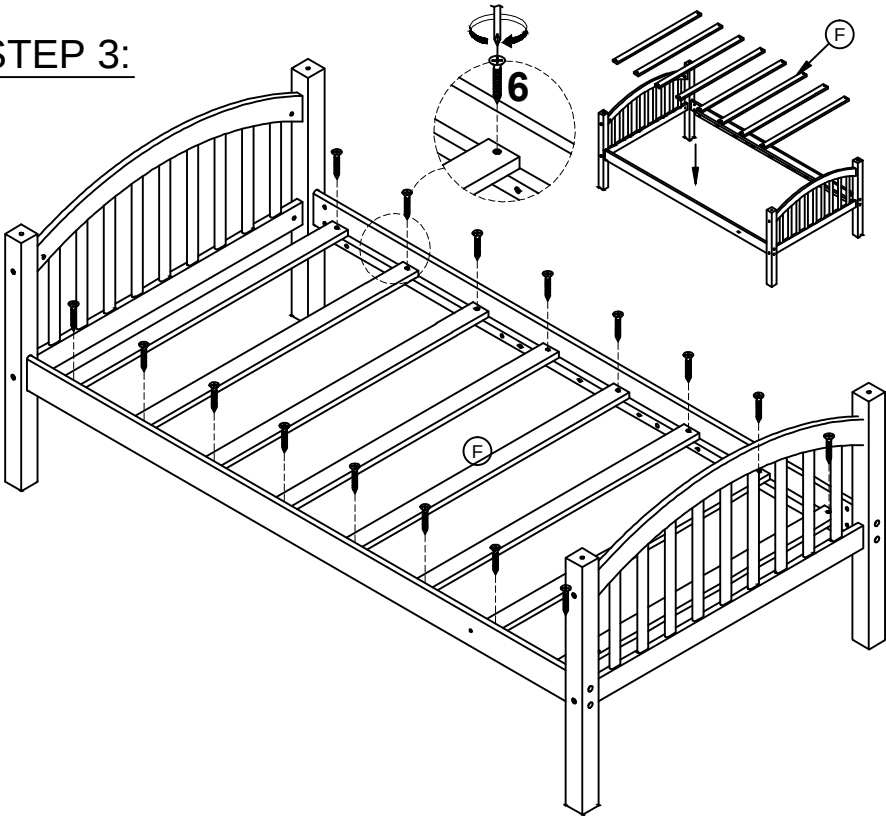

6	
16PCS	


STEP 4:

2		3	
8PCS		4PCS	

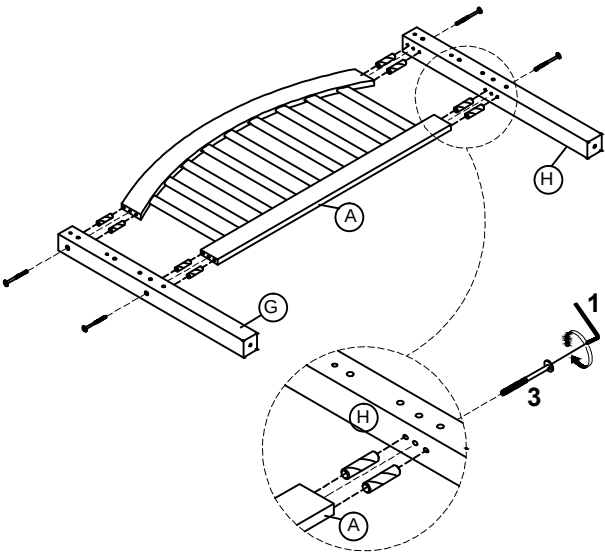


STEP 5:


2		3	
8PCS		4PCS	

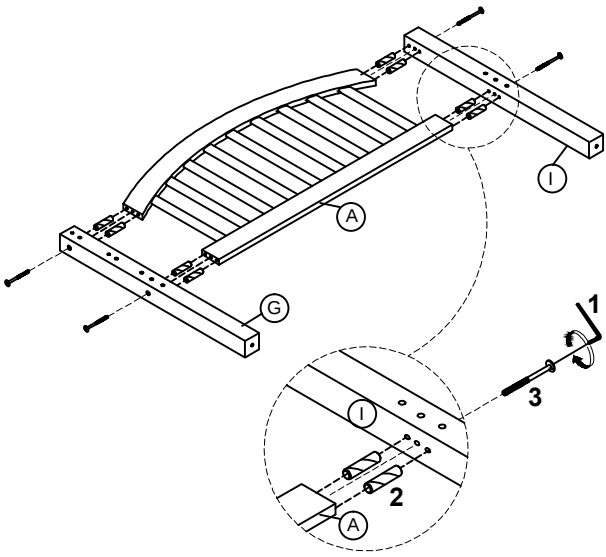

STEP 6:

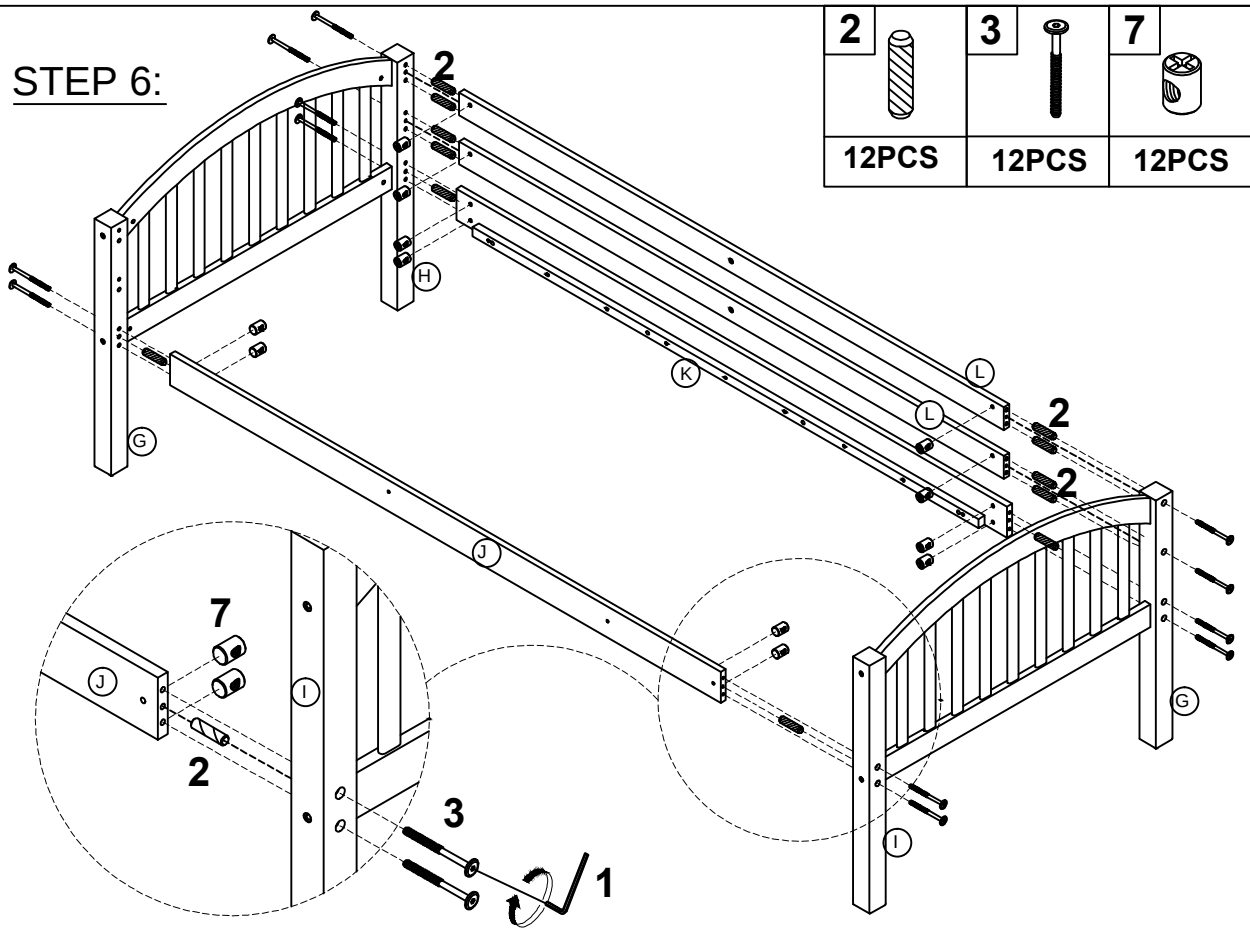


STEP 7:

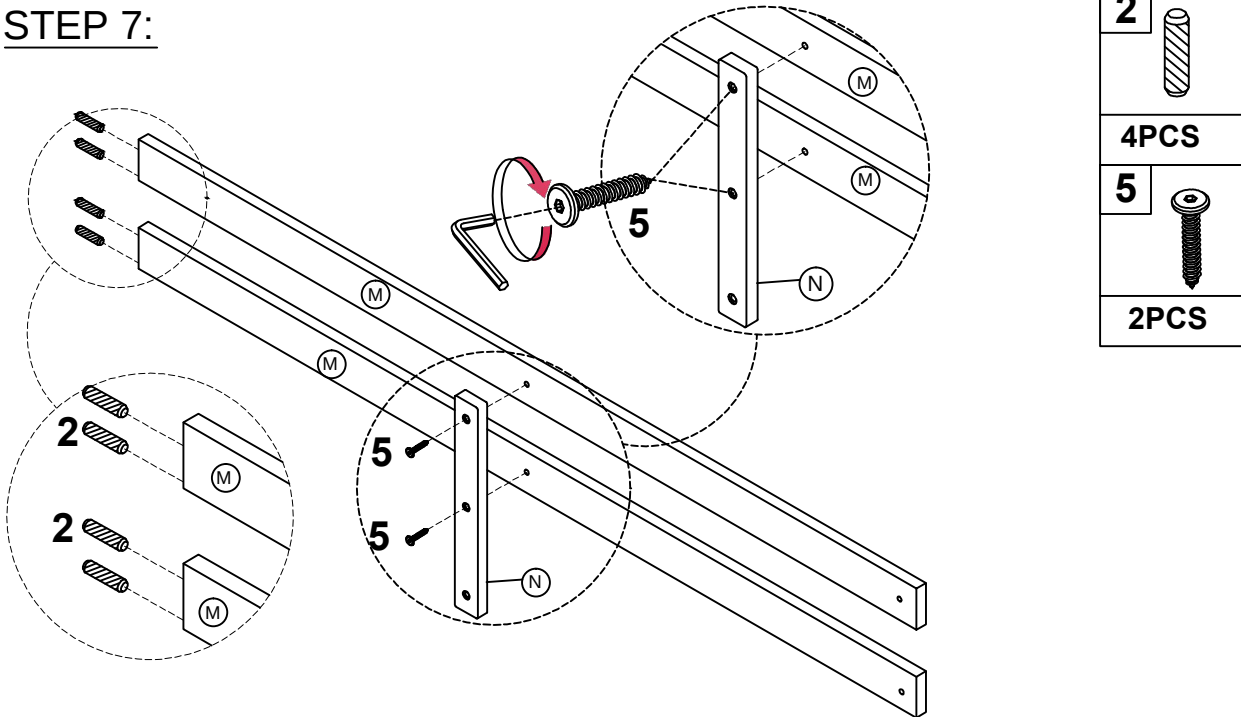


STEP 8:

3		7		5	
2PCS		2PCS		4PCS	

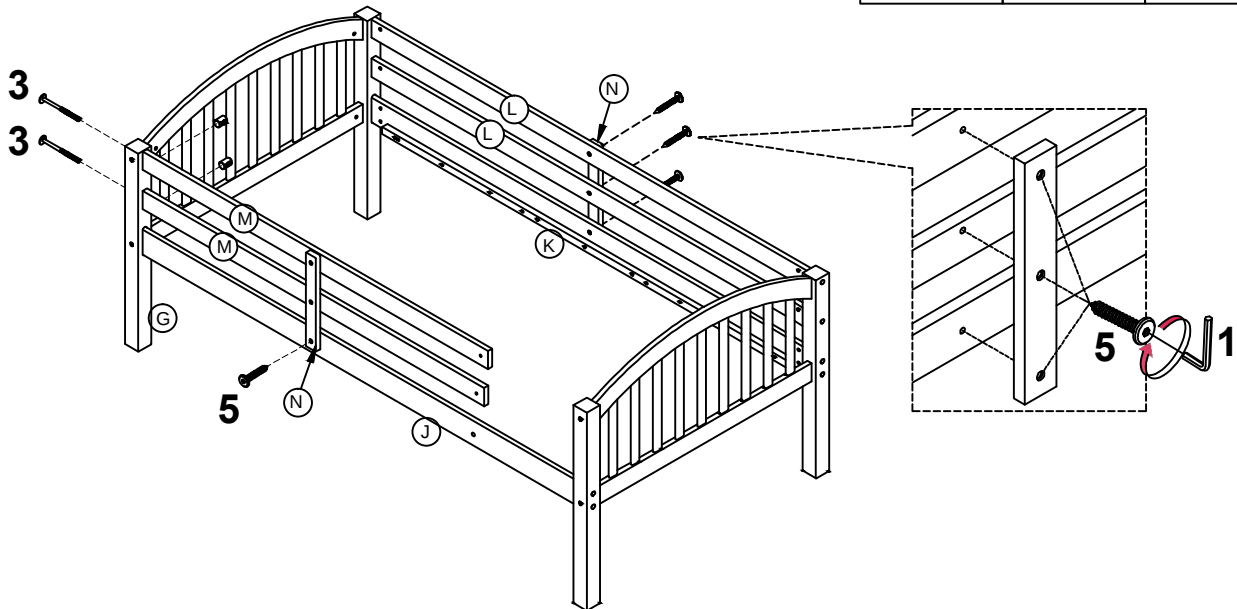



STEP 9:

6	
16PCS	

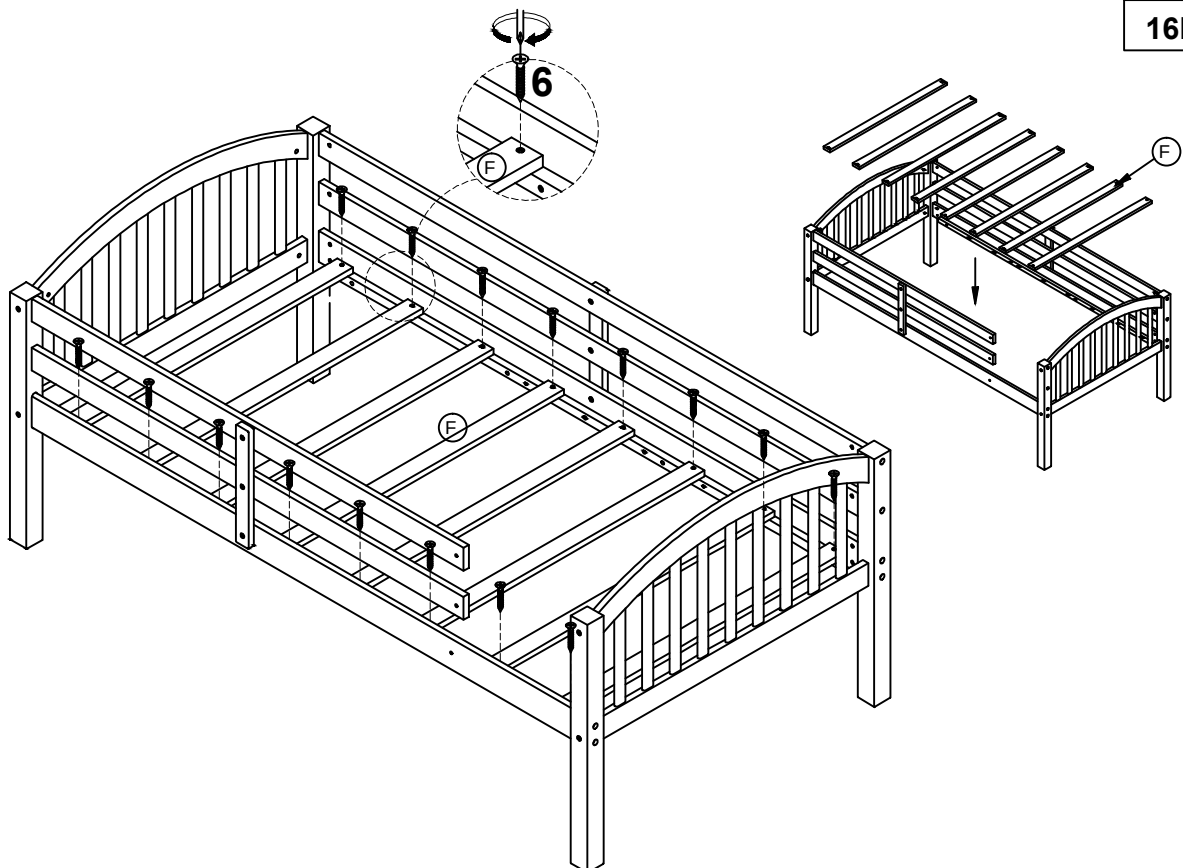



STEP 10:

8	
4PCS	

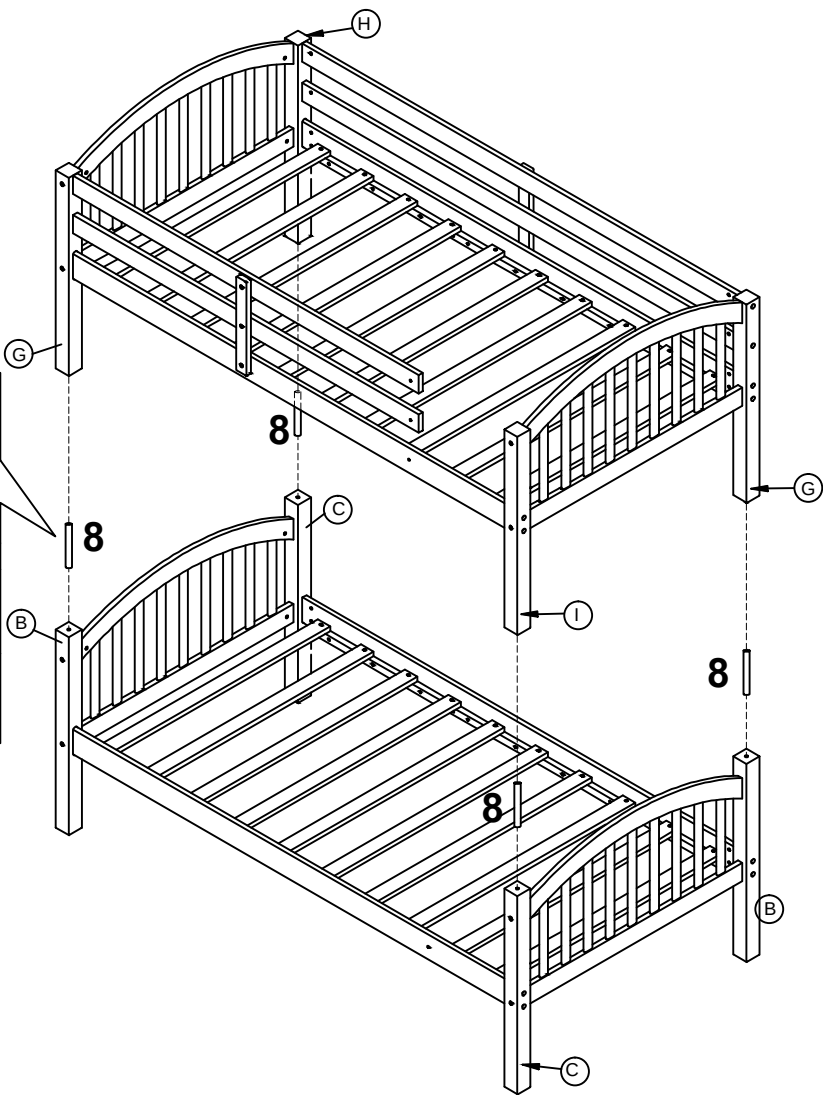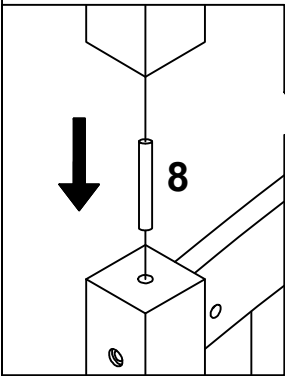

STEP 11:

2		4	
12PCS		6PCS	

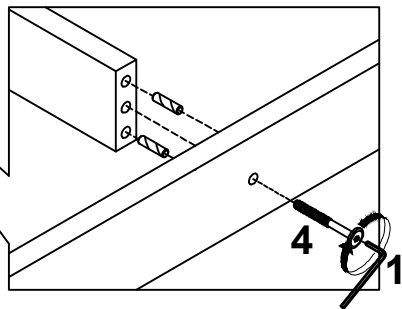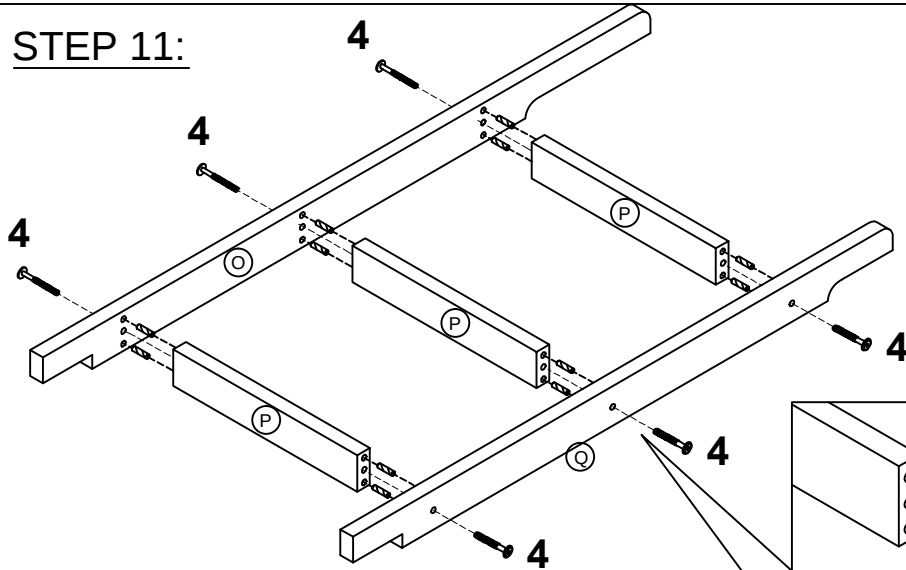

STEP 12:

4	
6PCS	

