



ASSEMBLY INSTRUCTIONS

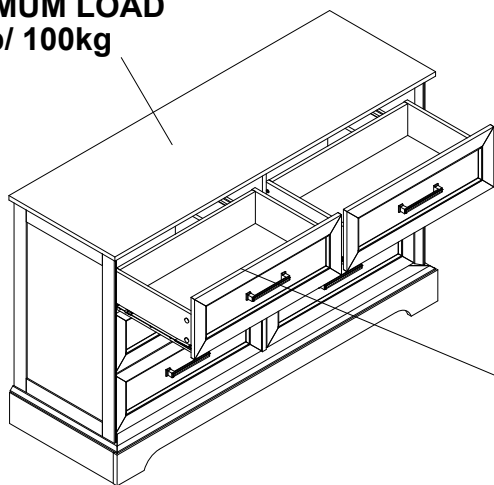

WARNING !


MAXIMUM LOAD
220 lb/ 100kg




Estimated Time for Assembly

60 mins

MAXIMUM LOAD
20 lb/ 9.1kg

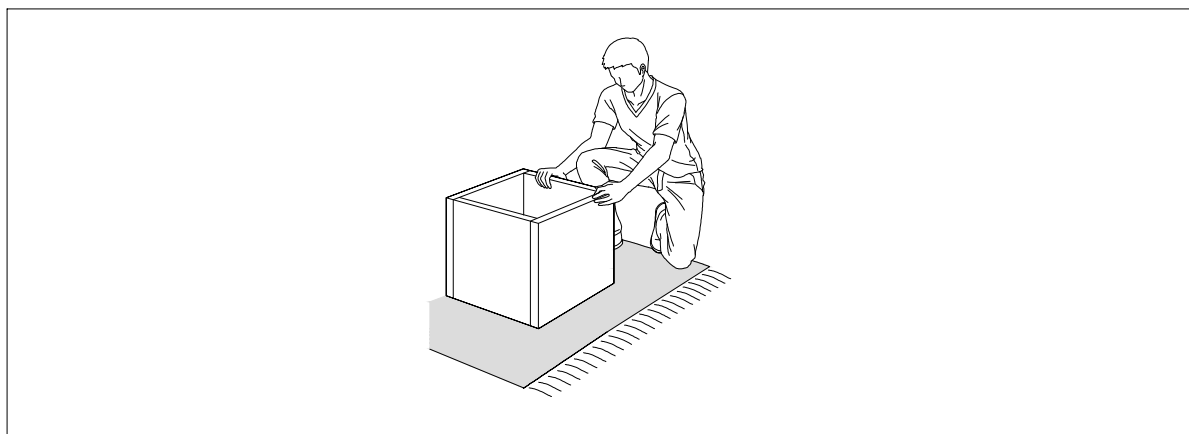

Assemble the furniture on empty carton, carpet, or rug to prevent scratches or damage.

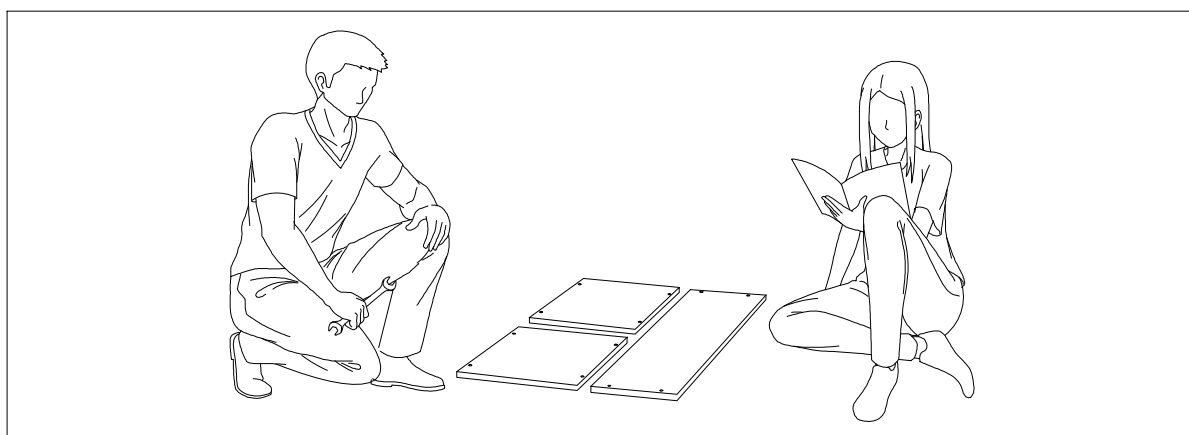


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.


Board Identification

Not actual size

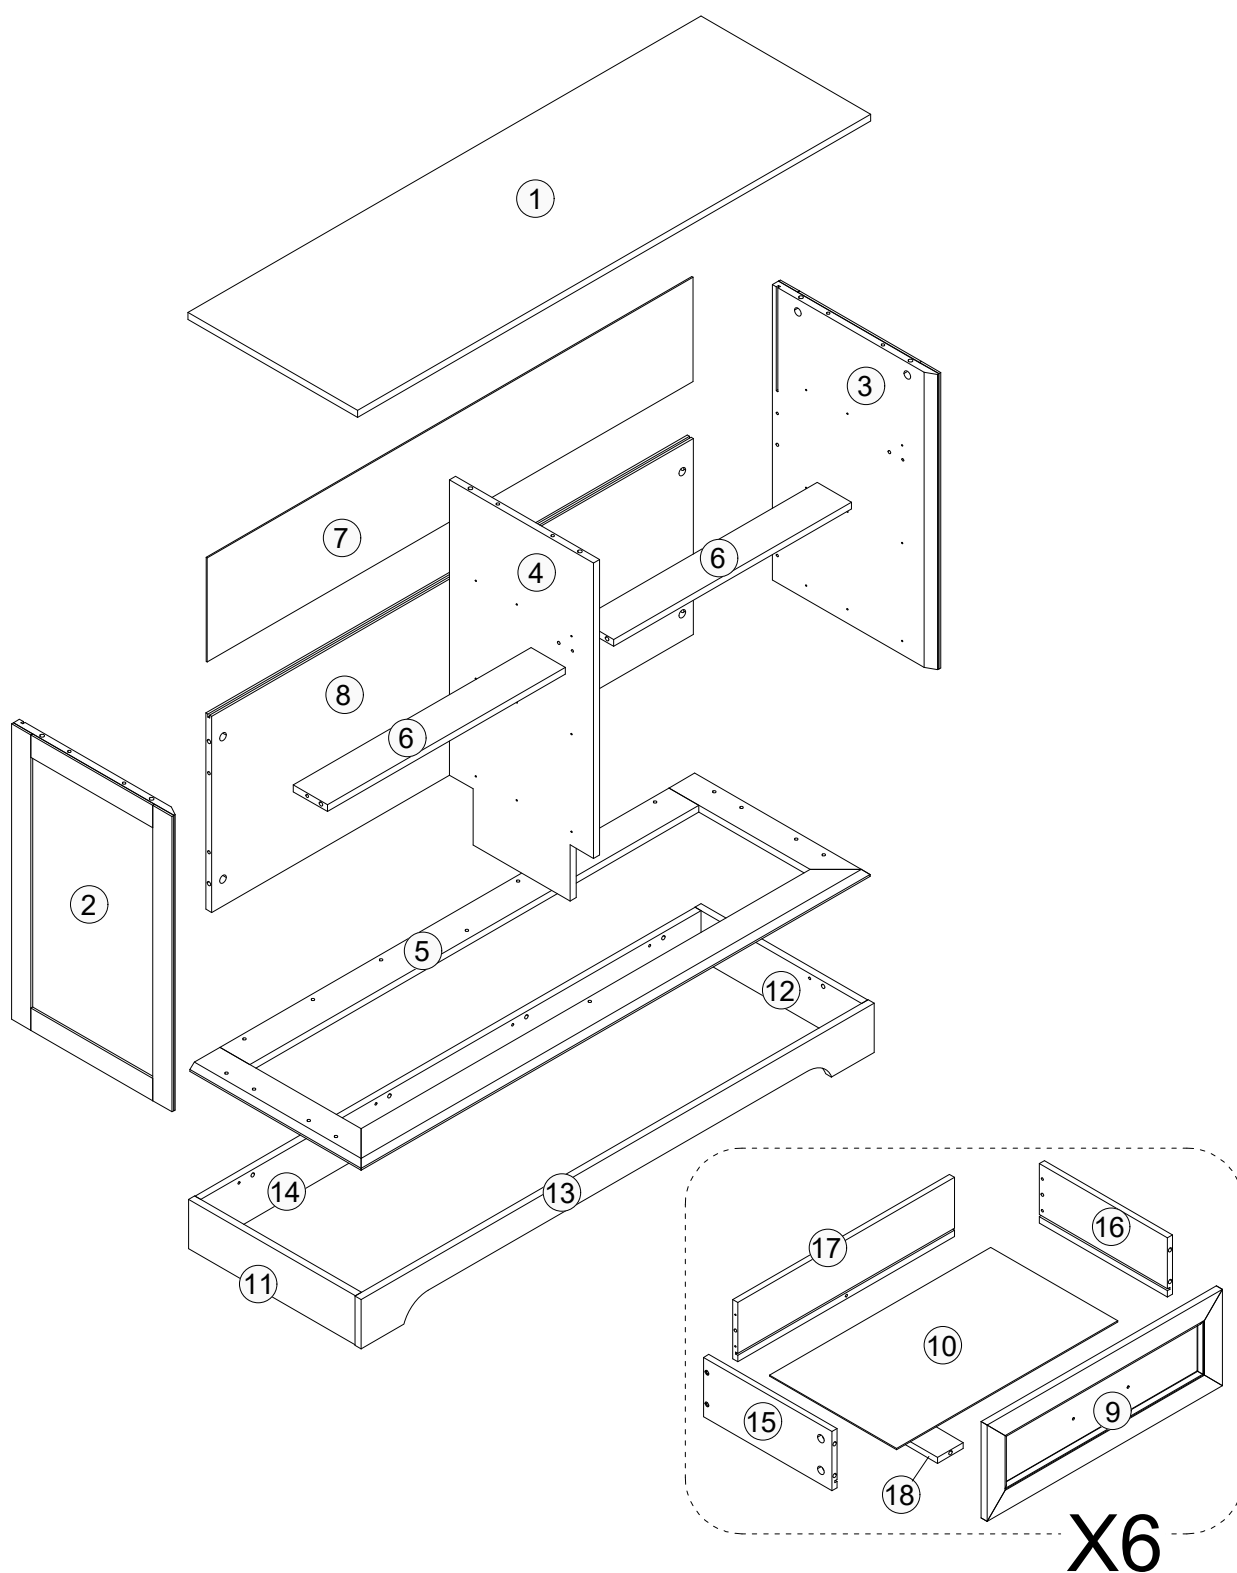


BOARD IDENTIFICATION


Not actual size

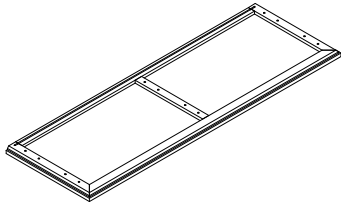


① x1

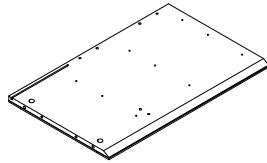


② x1

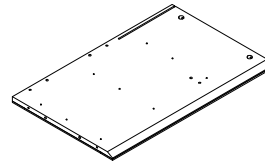


③ x1

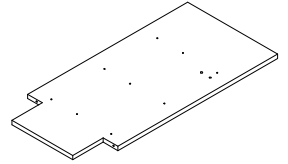


④ x1

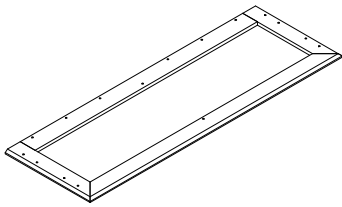


⑤ x1

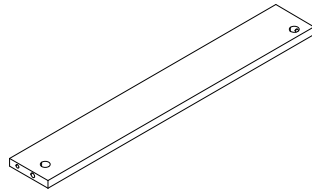


⑥ x2

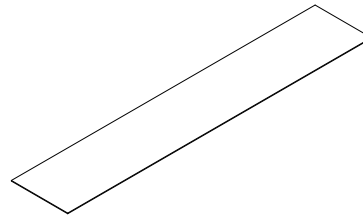


⑦ x1

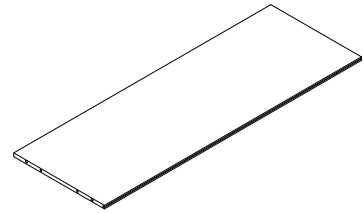


⑧ x1

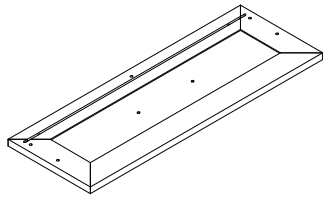


⑨ x6

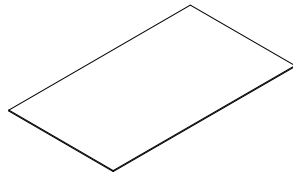


⑩ x6

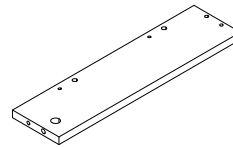


⑪ x1

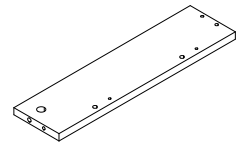


⑫ x1

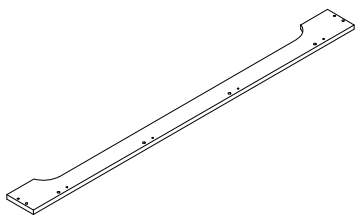


⑬ x1

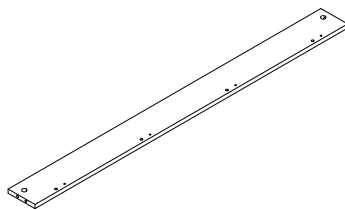


⑭ x1

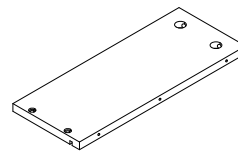


⑮ x6

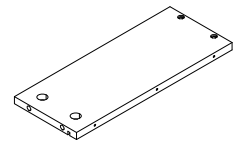

⑯ x6



















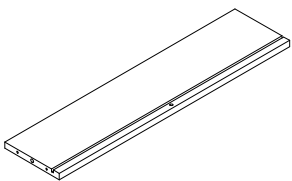


⑰ x6







⑱ x6

HARDWARE LIST

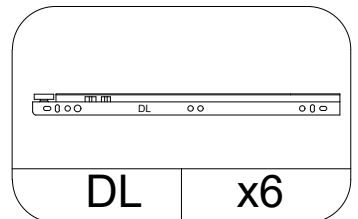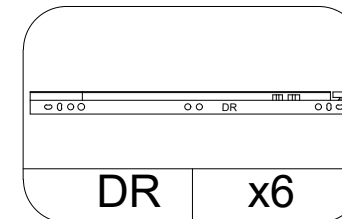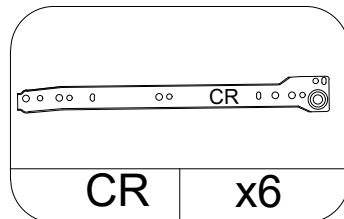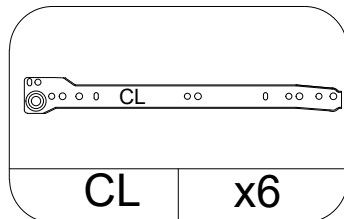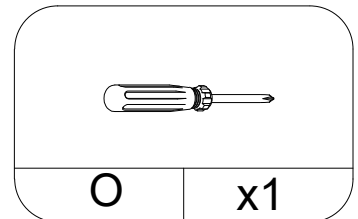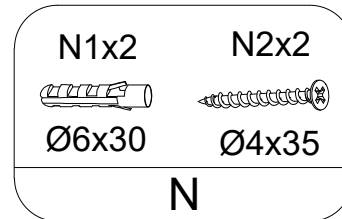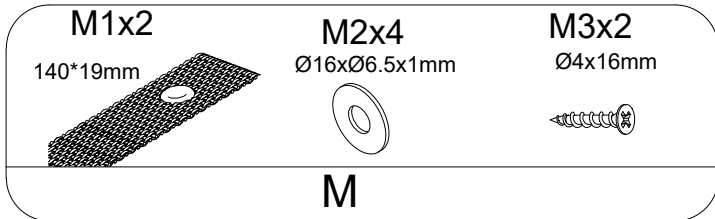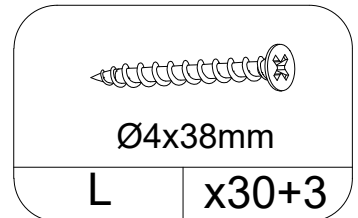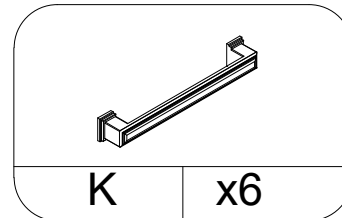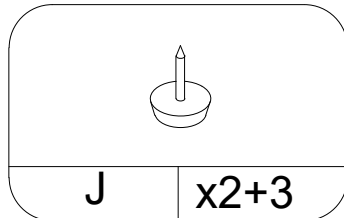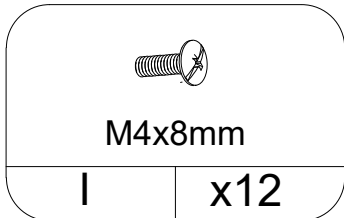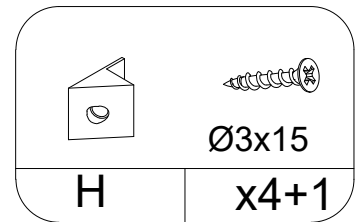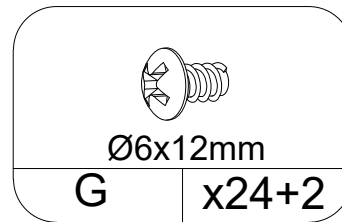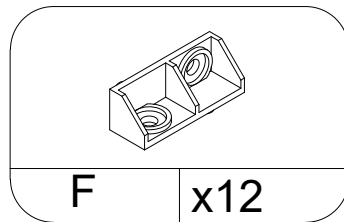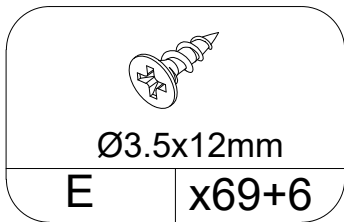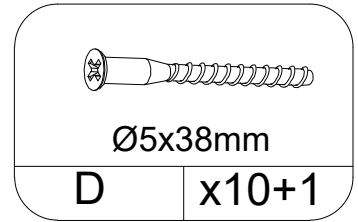
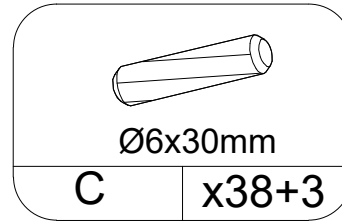
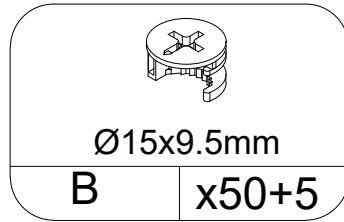
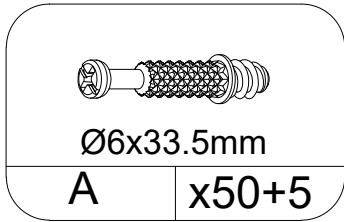


Cam Lock Fastening System




Insert the cam bolt into the hole first, then insert the cam lock and lock it.

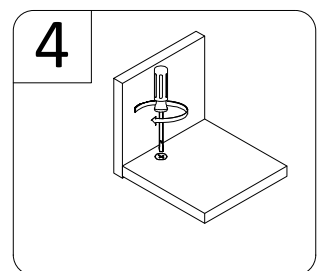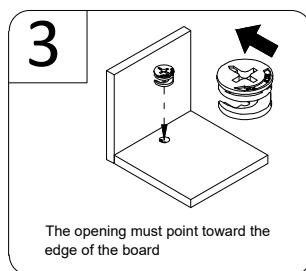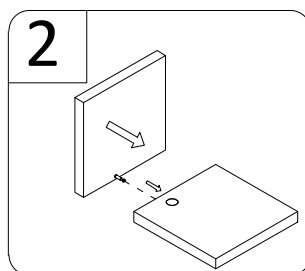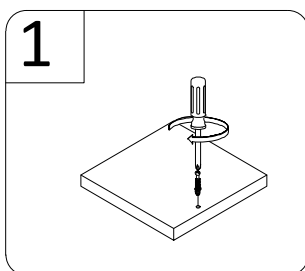




STEP 1

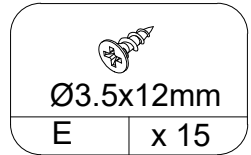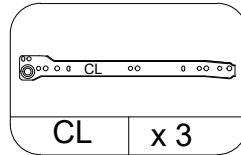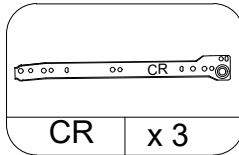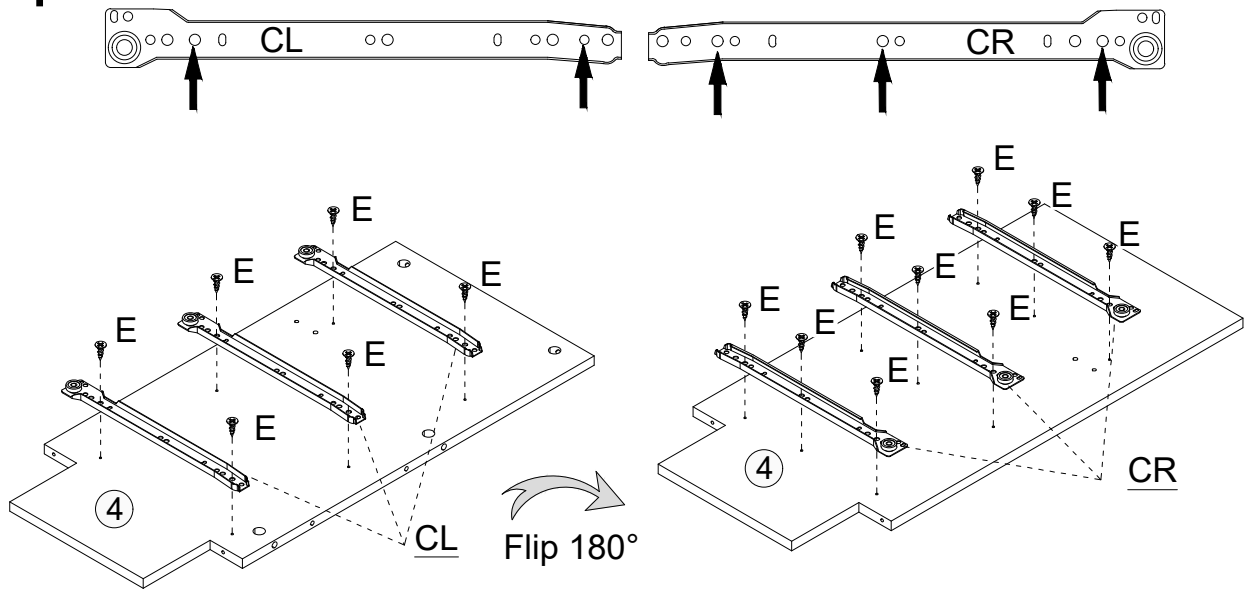





STEP 2

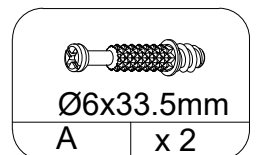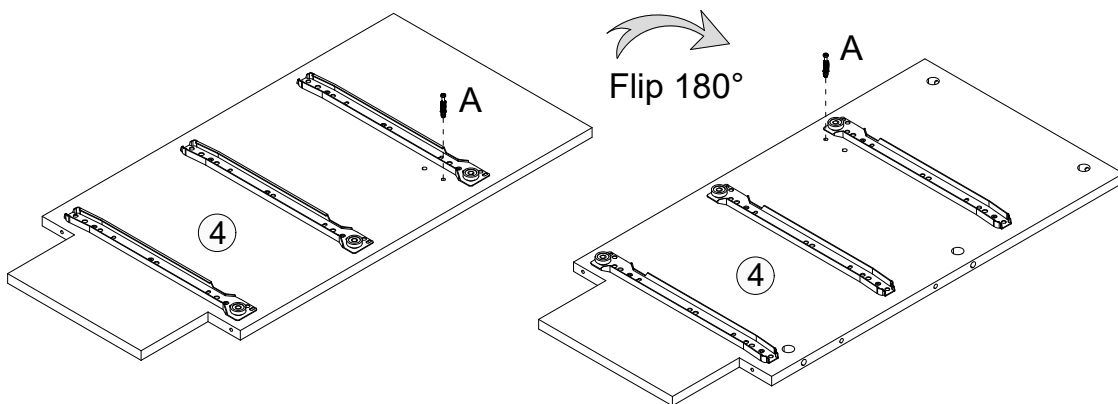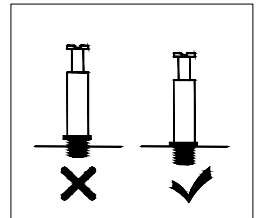




STEP 3

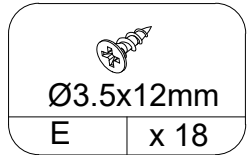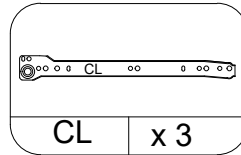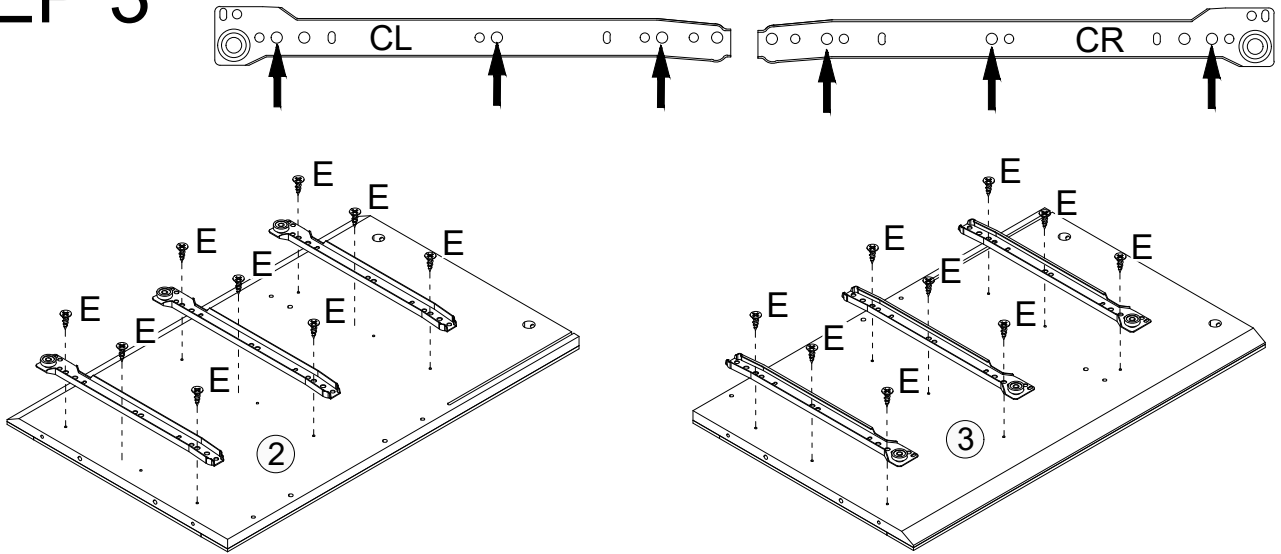





STEP 4

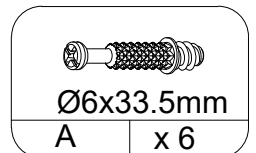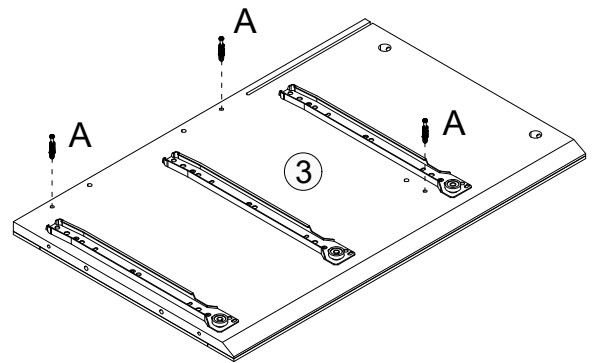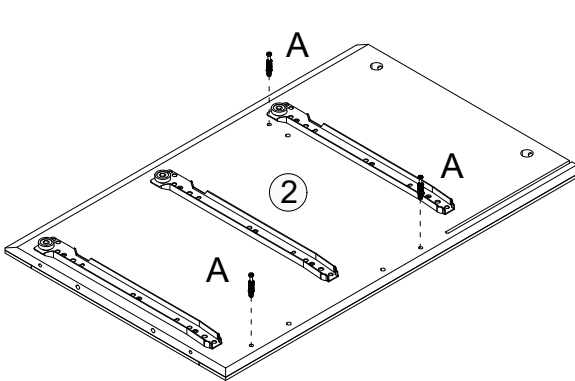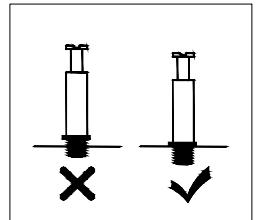


STEP 5

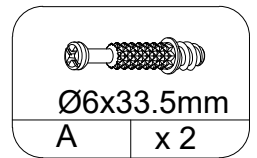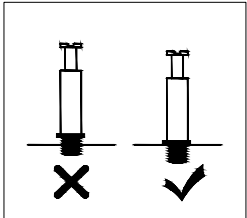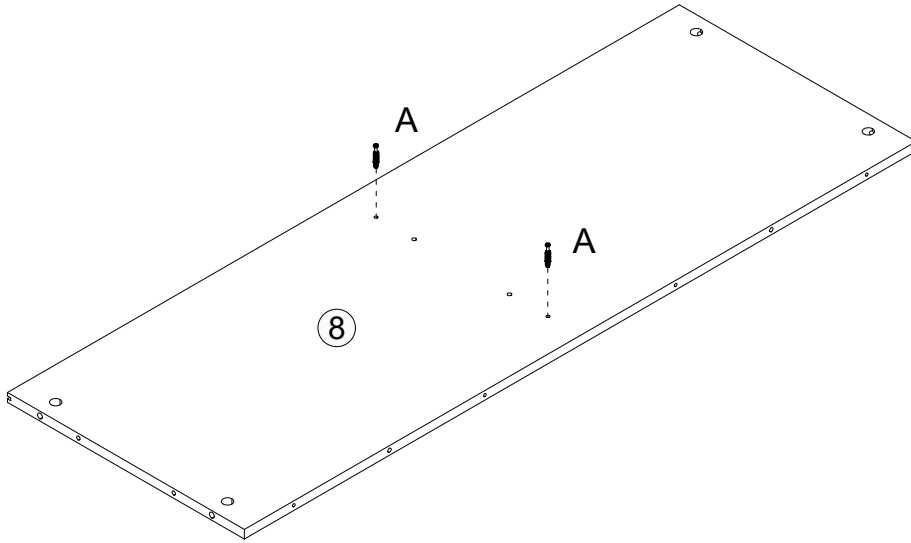





STEP 6

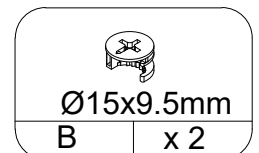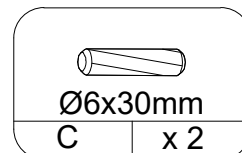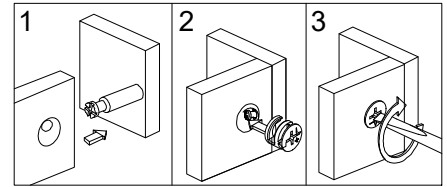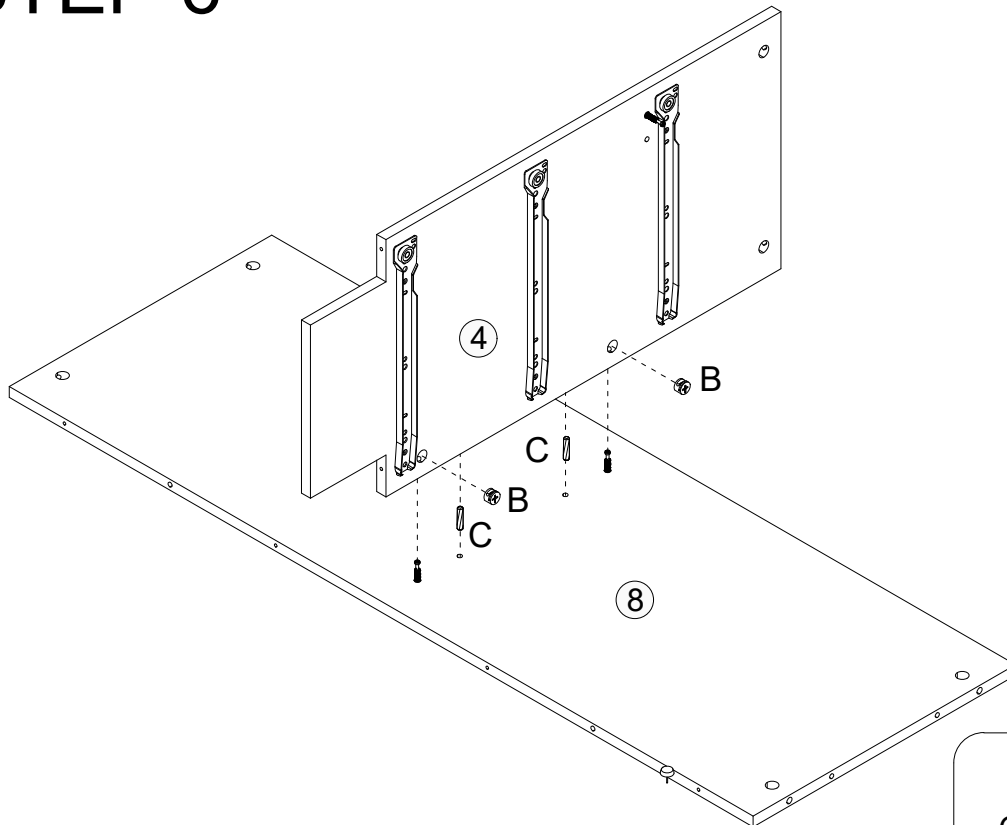




STEP 7

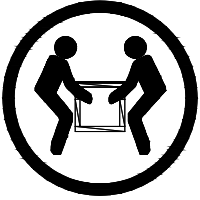


CAUTION: Heavy! You may need assistance with this step

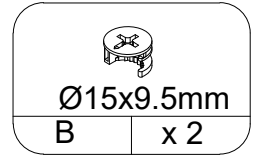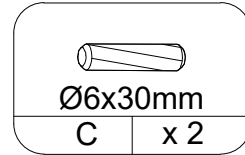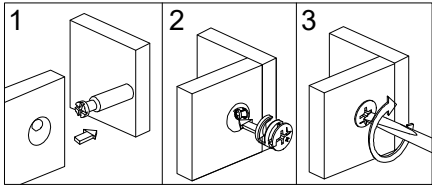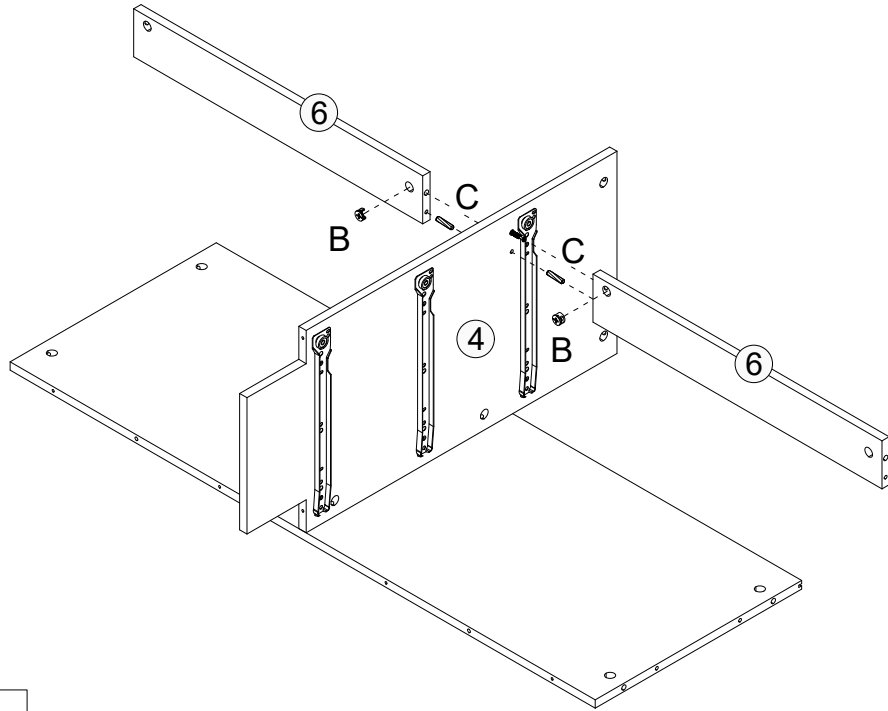



STEP 8

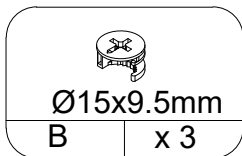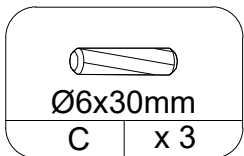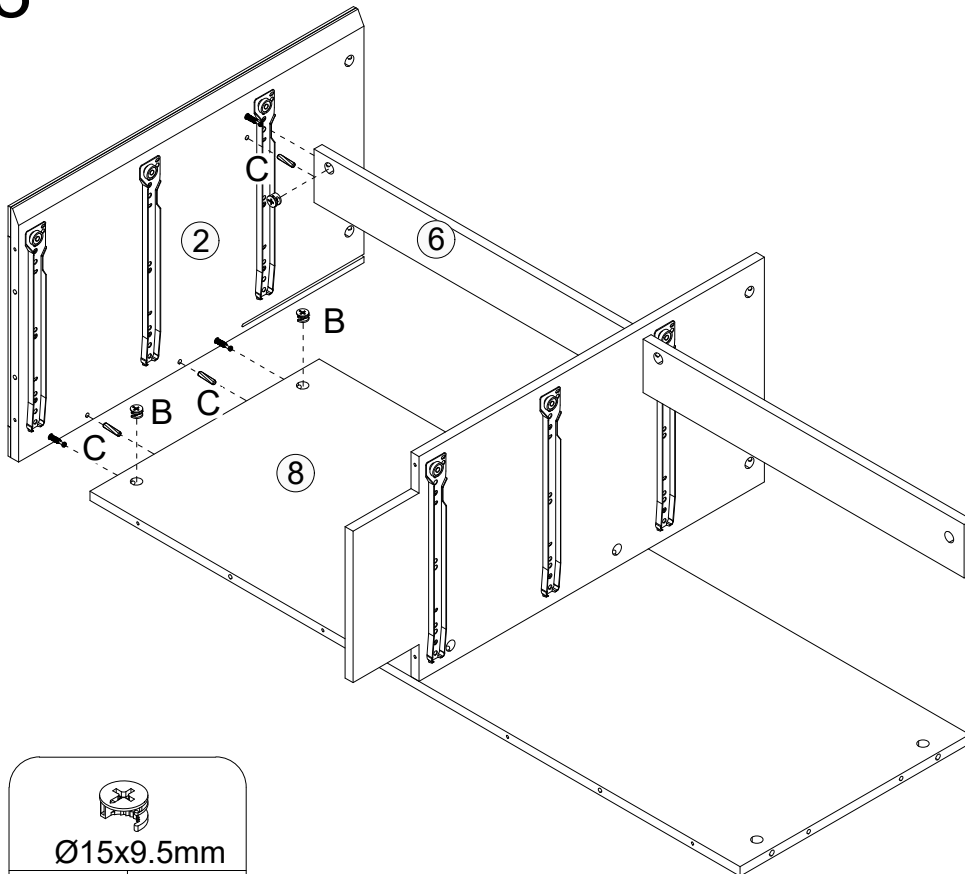




STEP 9

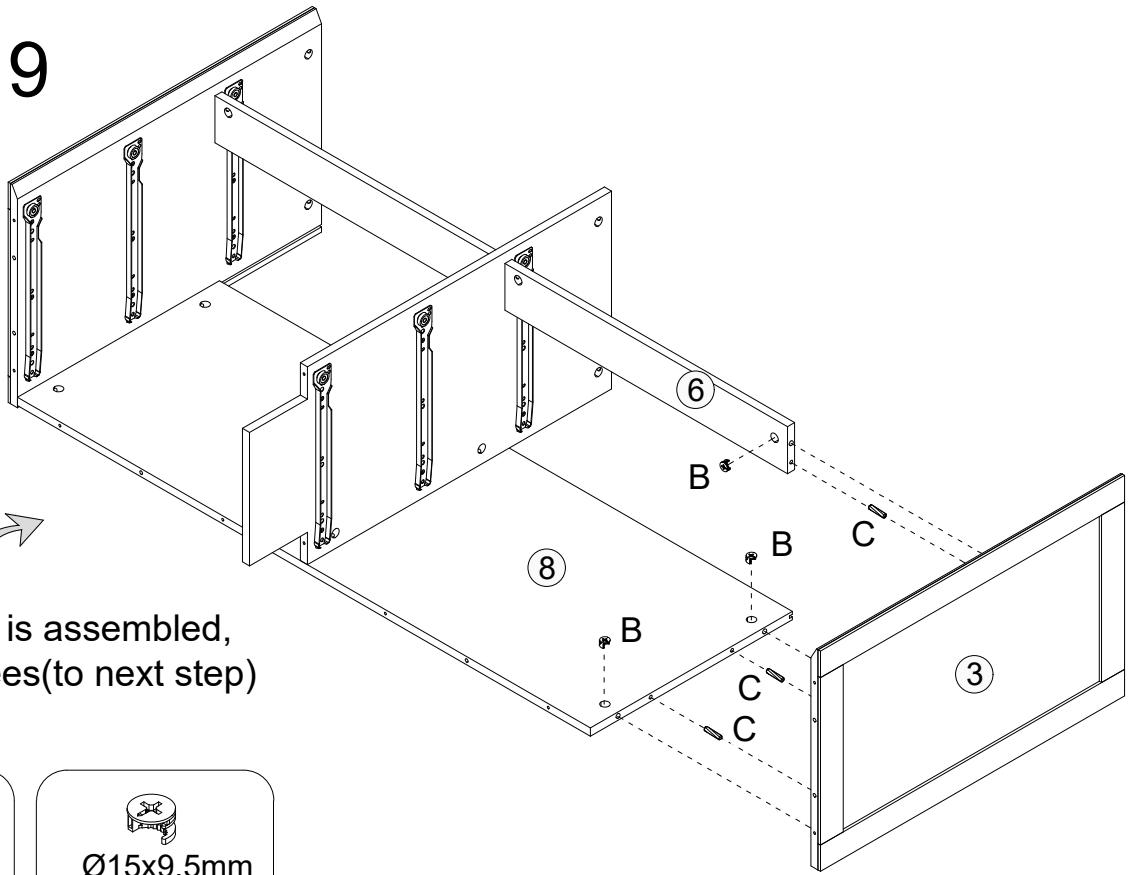


After this step is assembled, flip it 90 degrees (to next step)

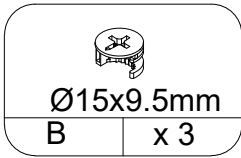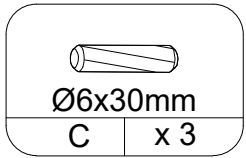


STEP 10

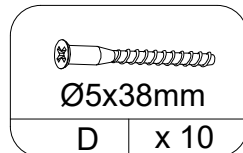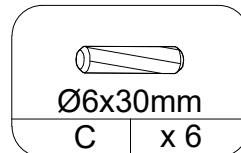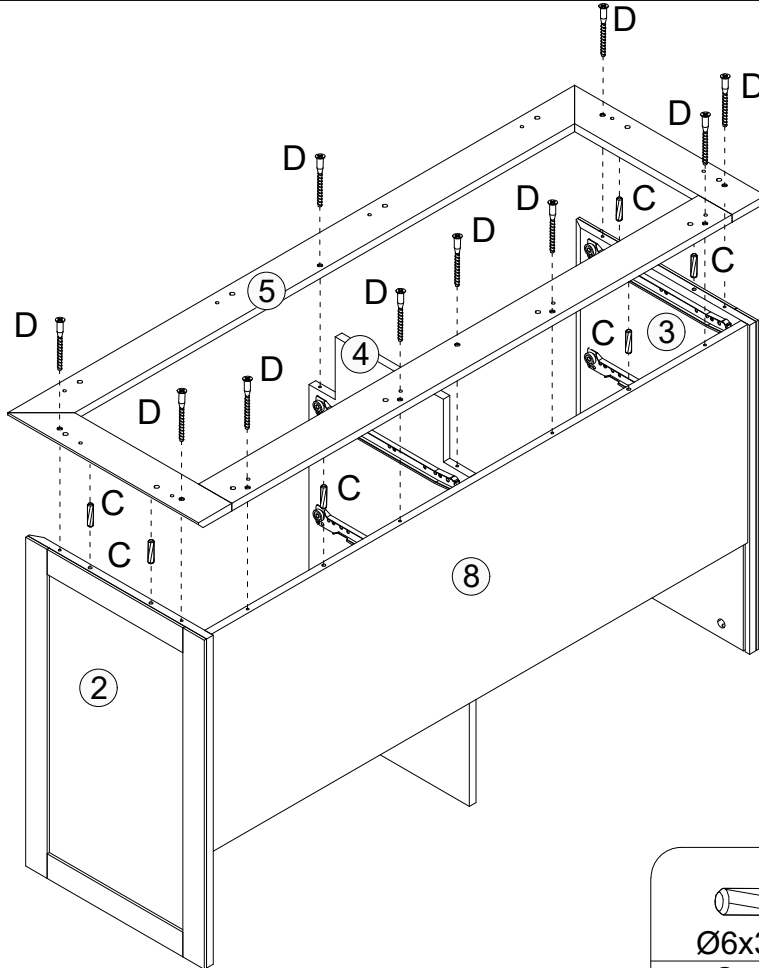





STEP 11

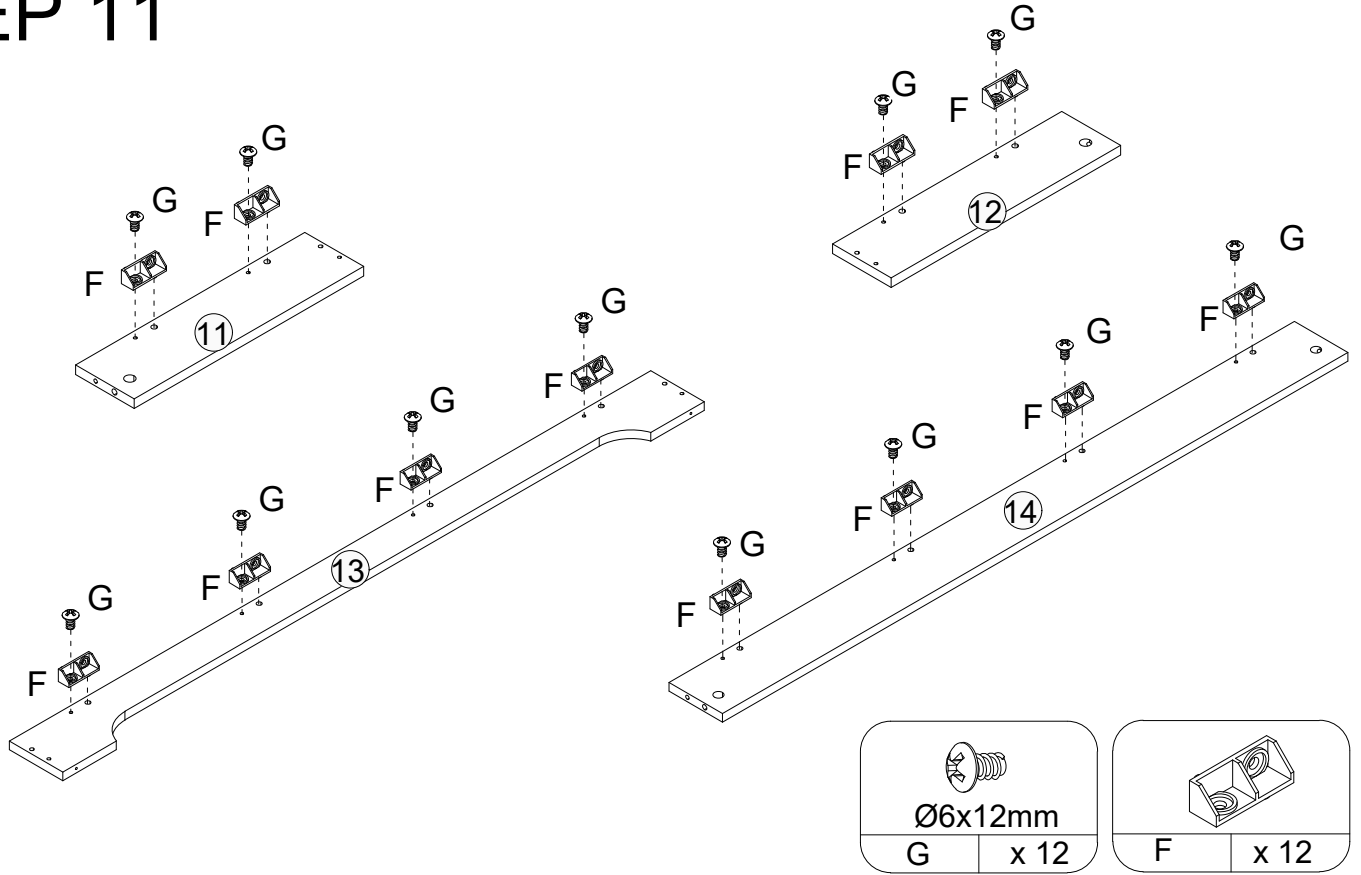





STEP 12

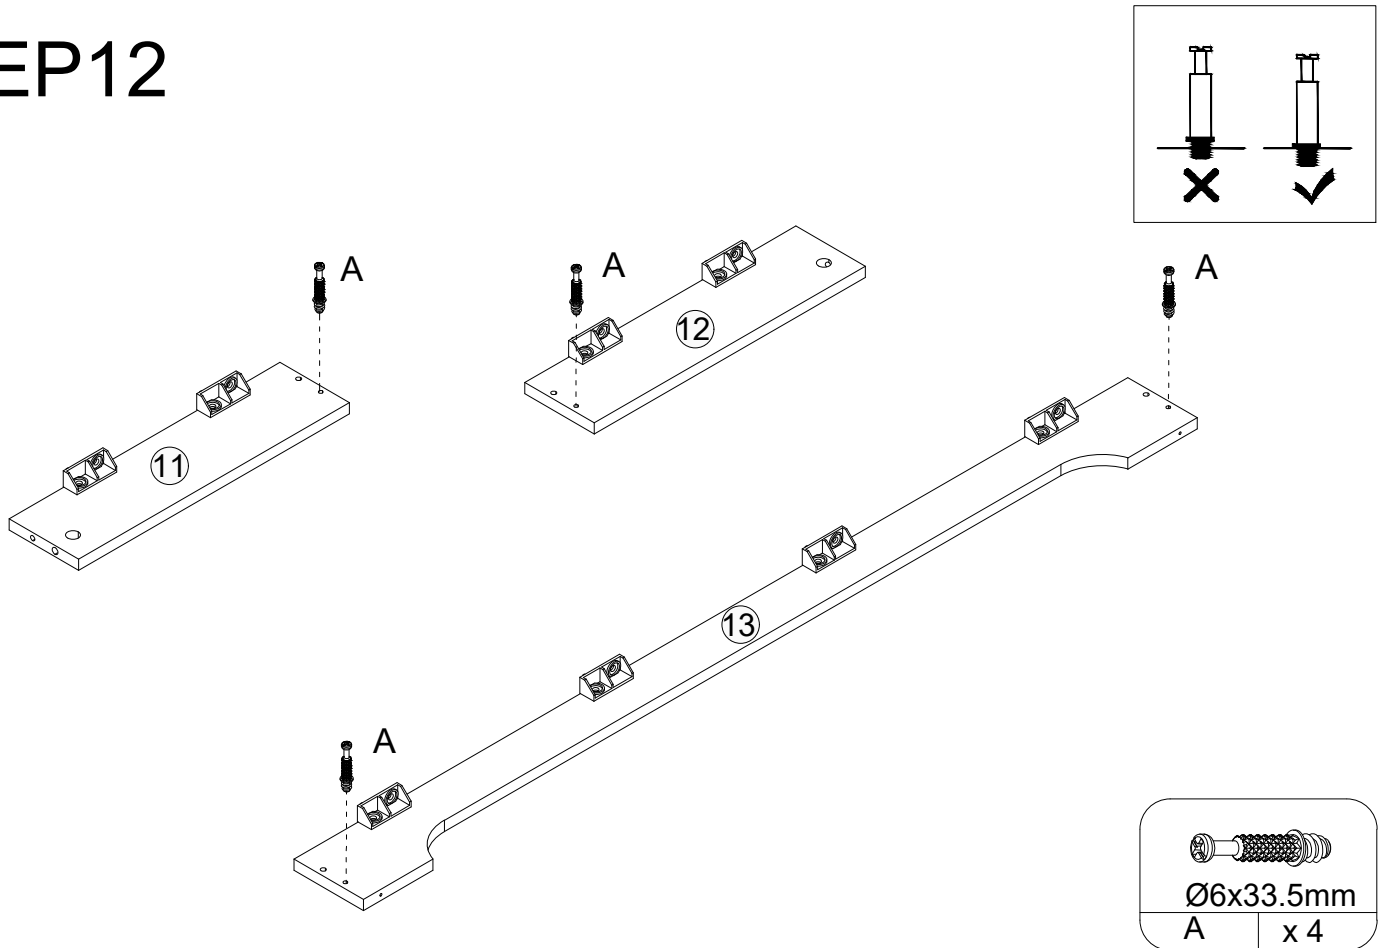



STEP 13

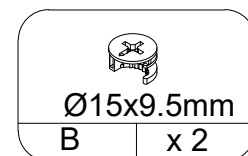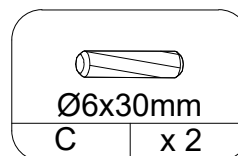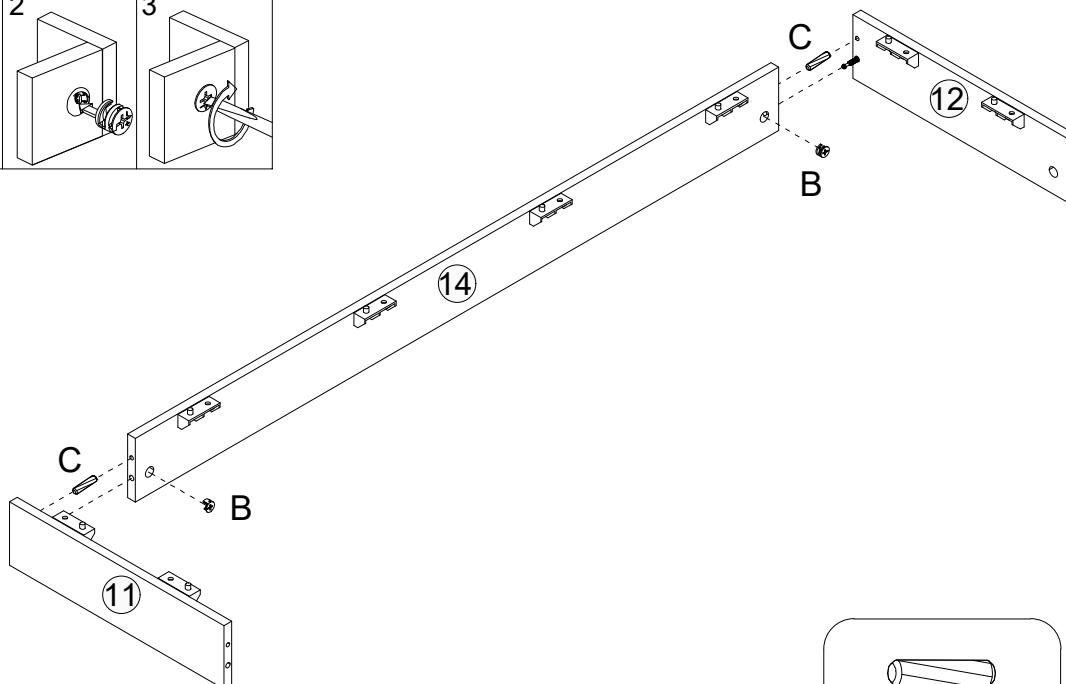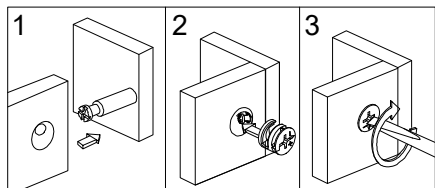


STEP 14

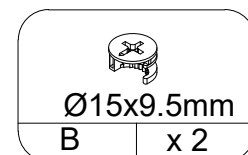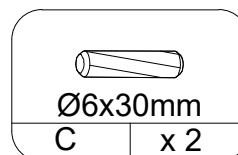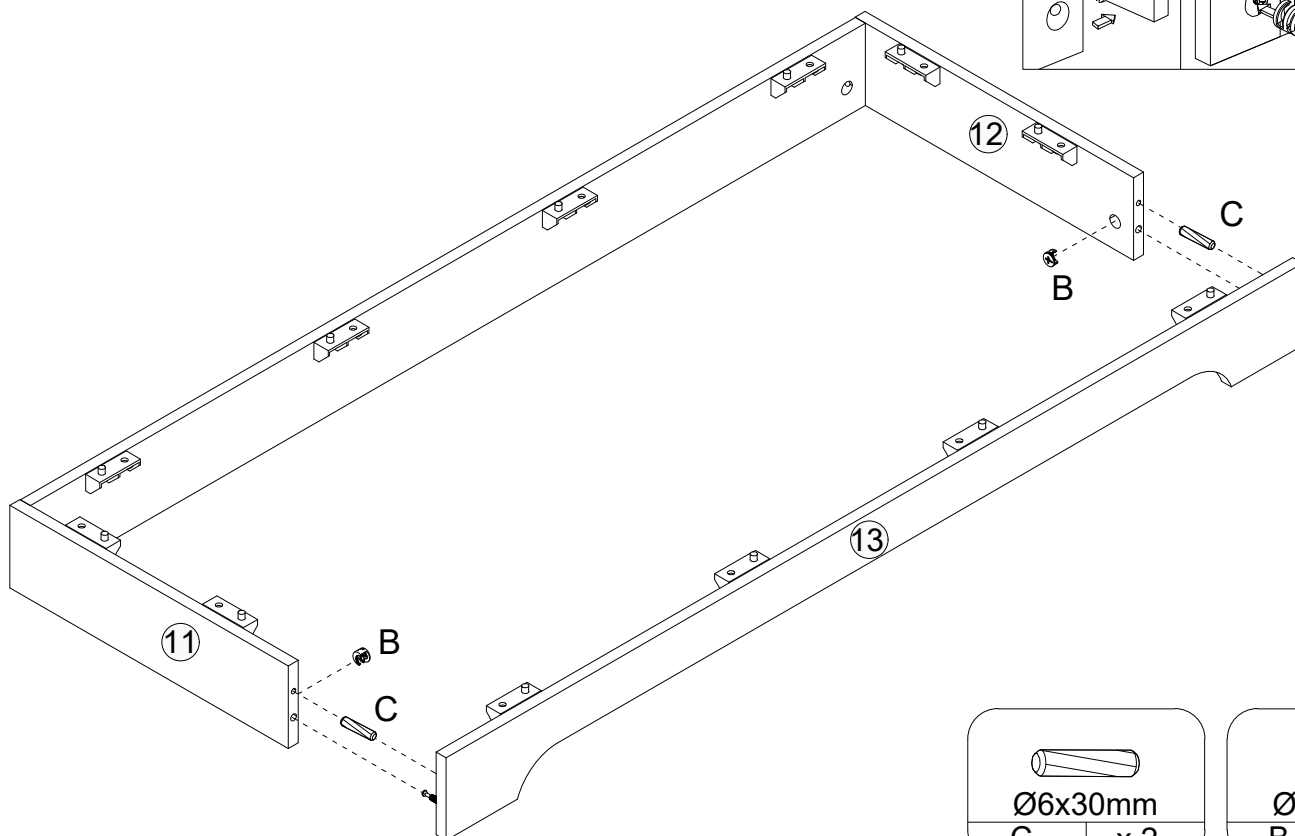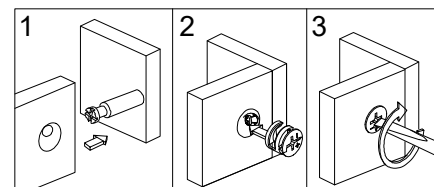


STEP 15

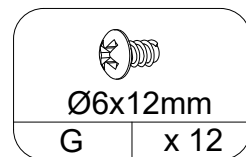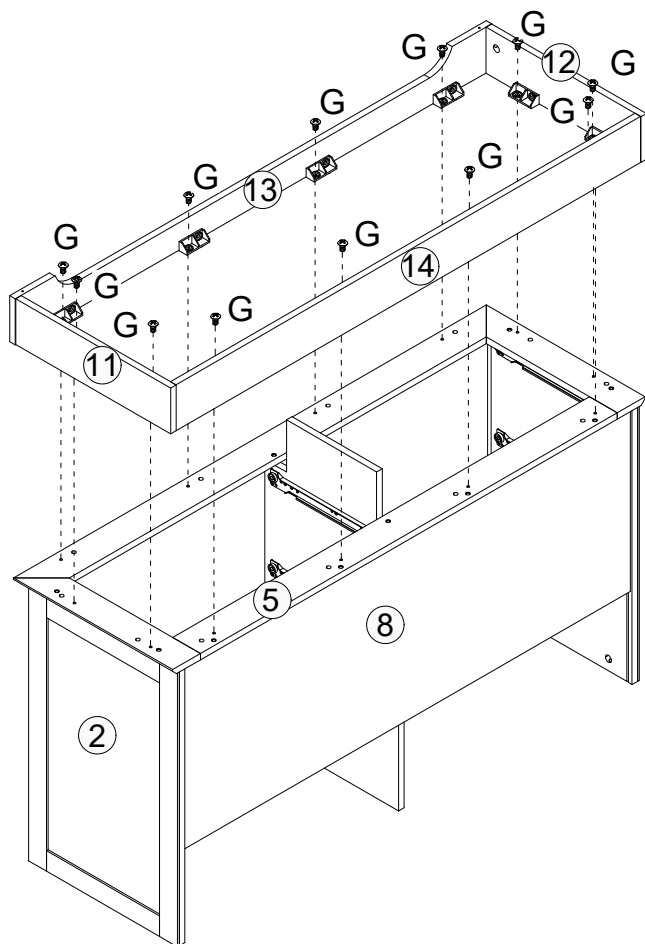


STEP 16

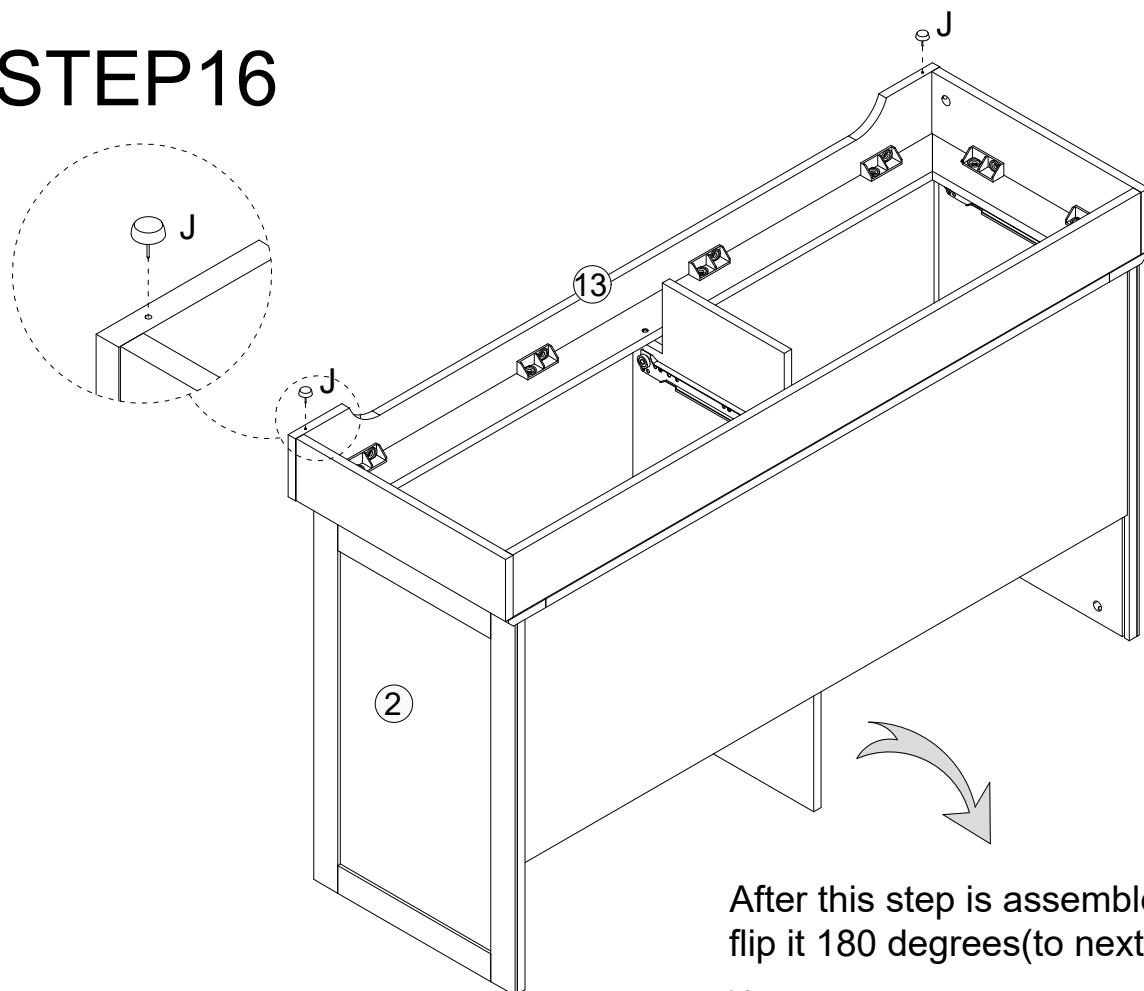




After this step is assembled,
flip it 180 degrees(to next step)

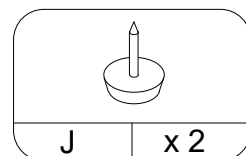

STEP 17




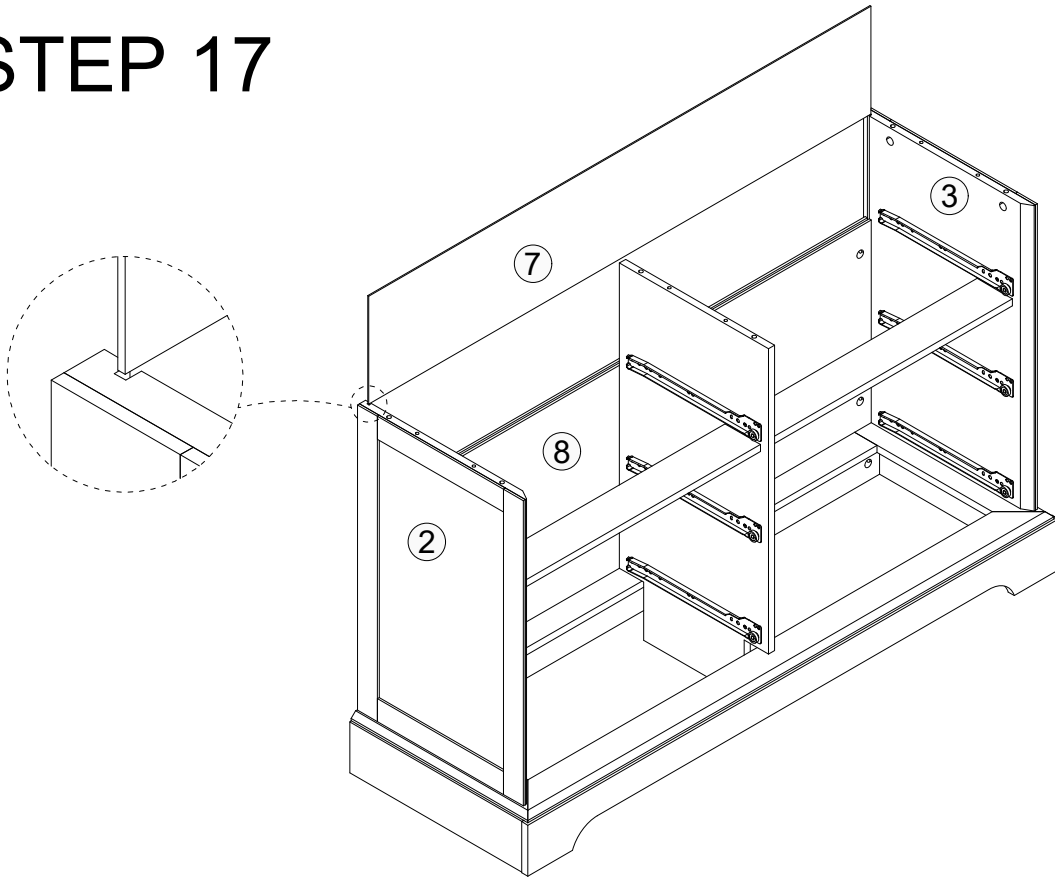


STEP 18

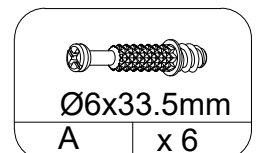
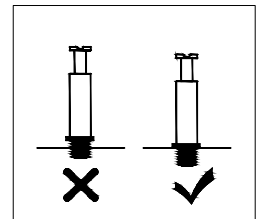
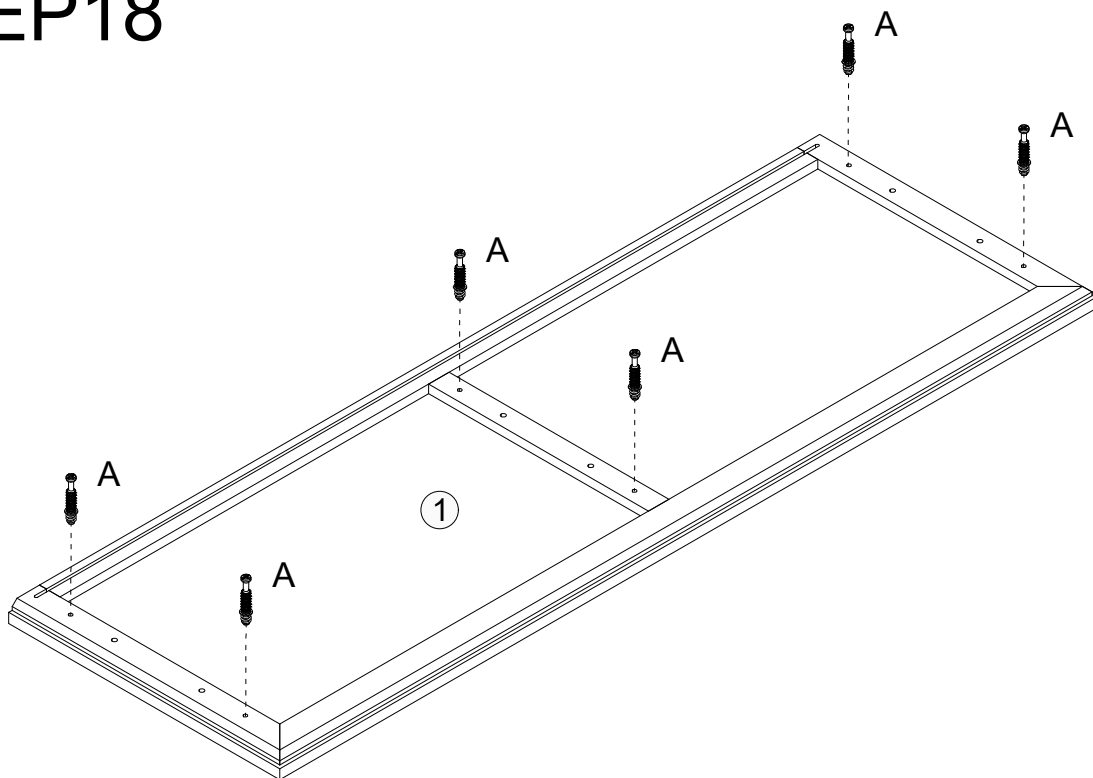


STEP 19


Back panel groove

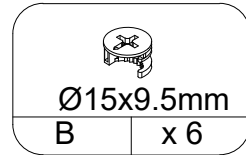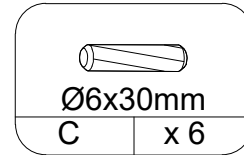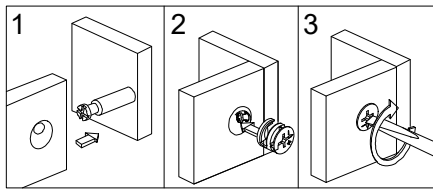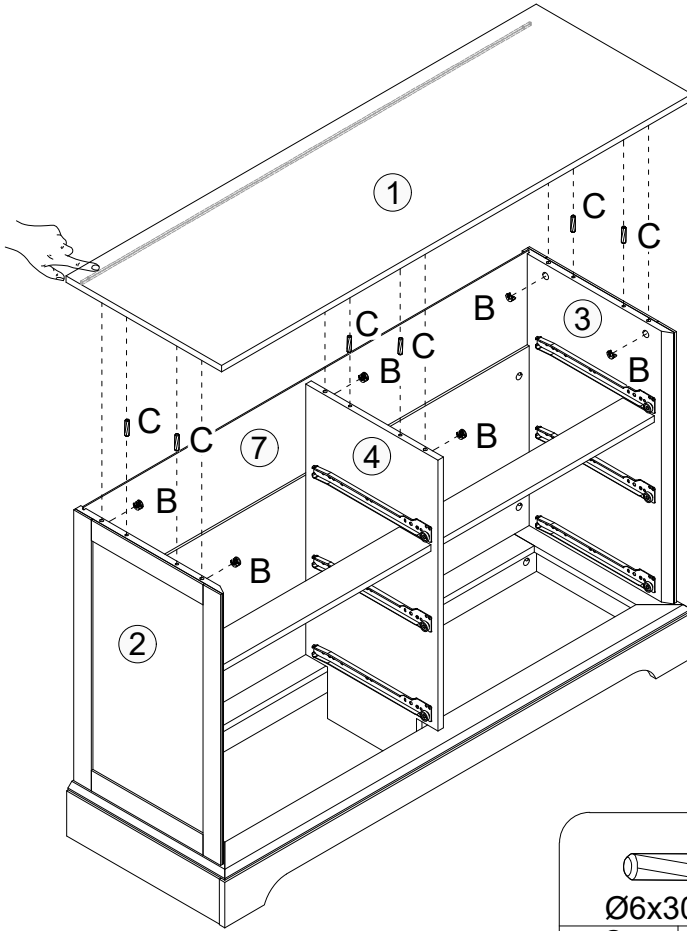


STEP 20

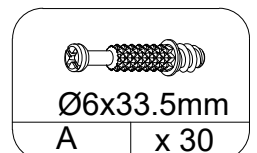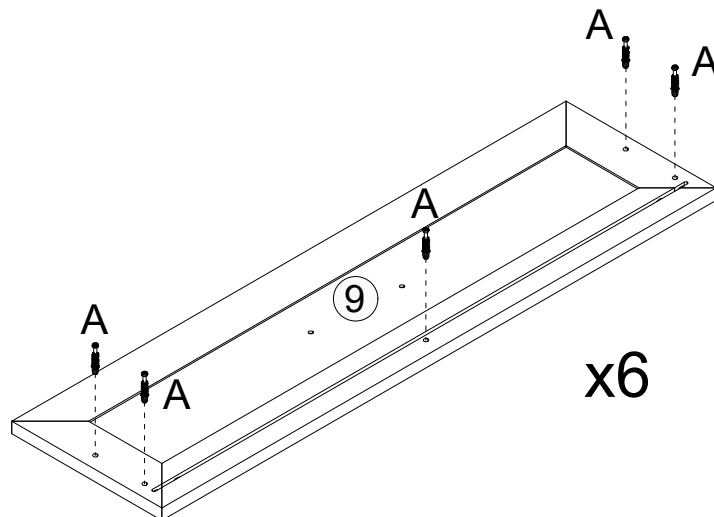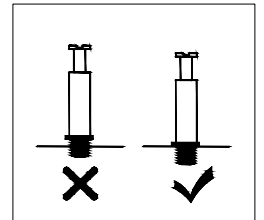


STEP 21

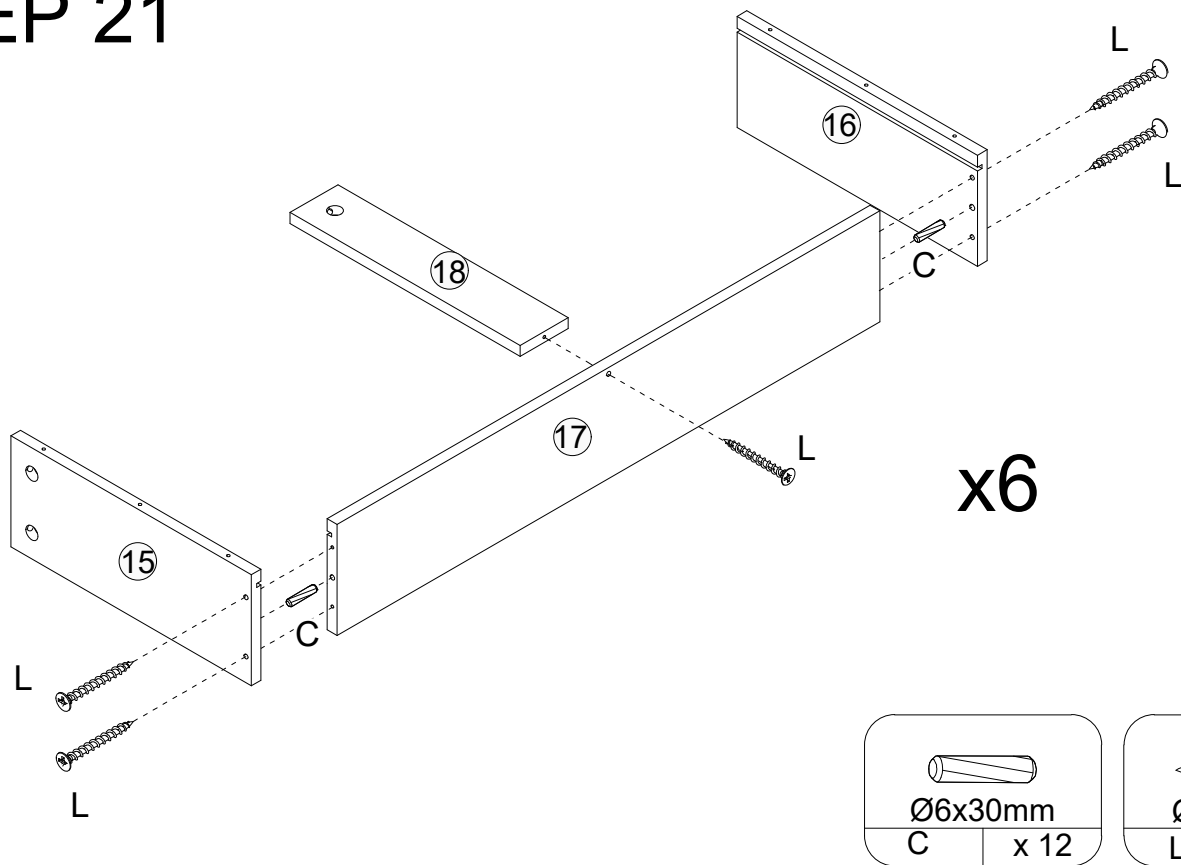


STEP 22

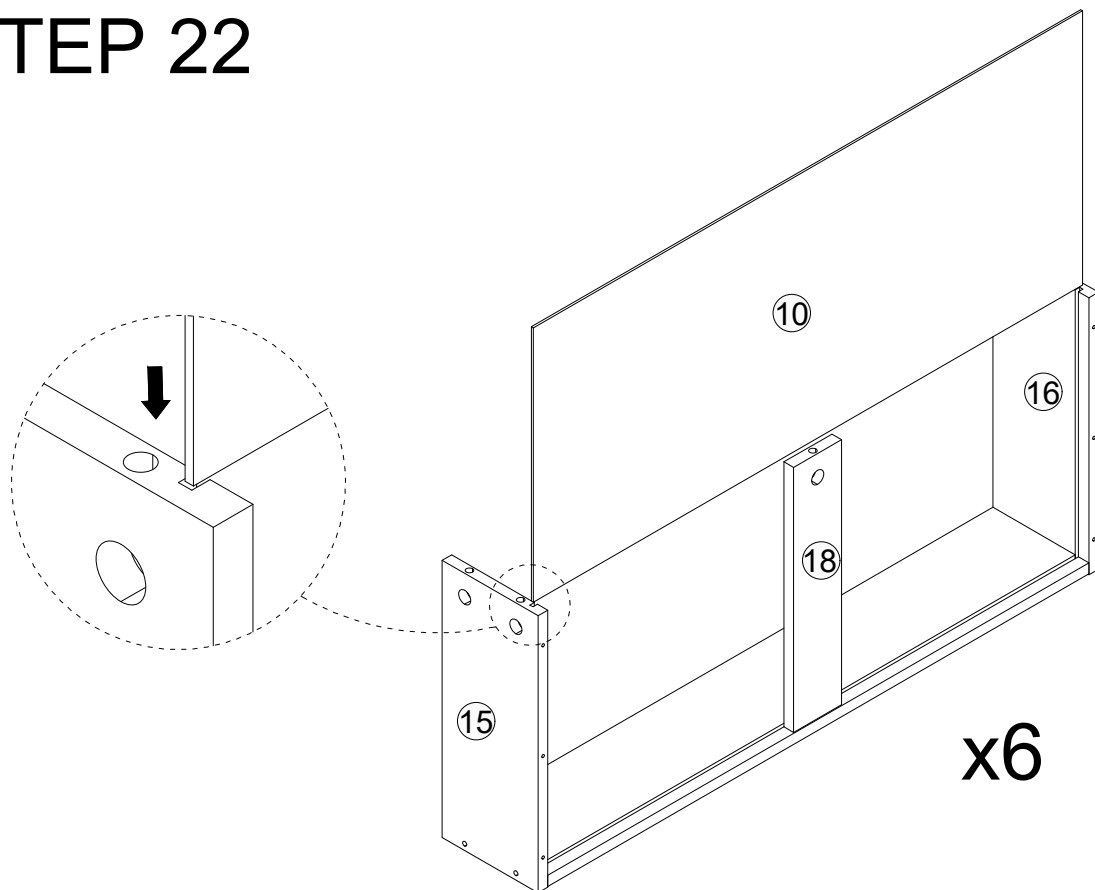



STEP 23

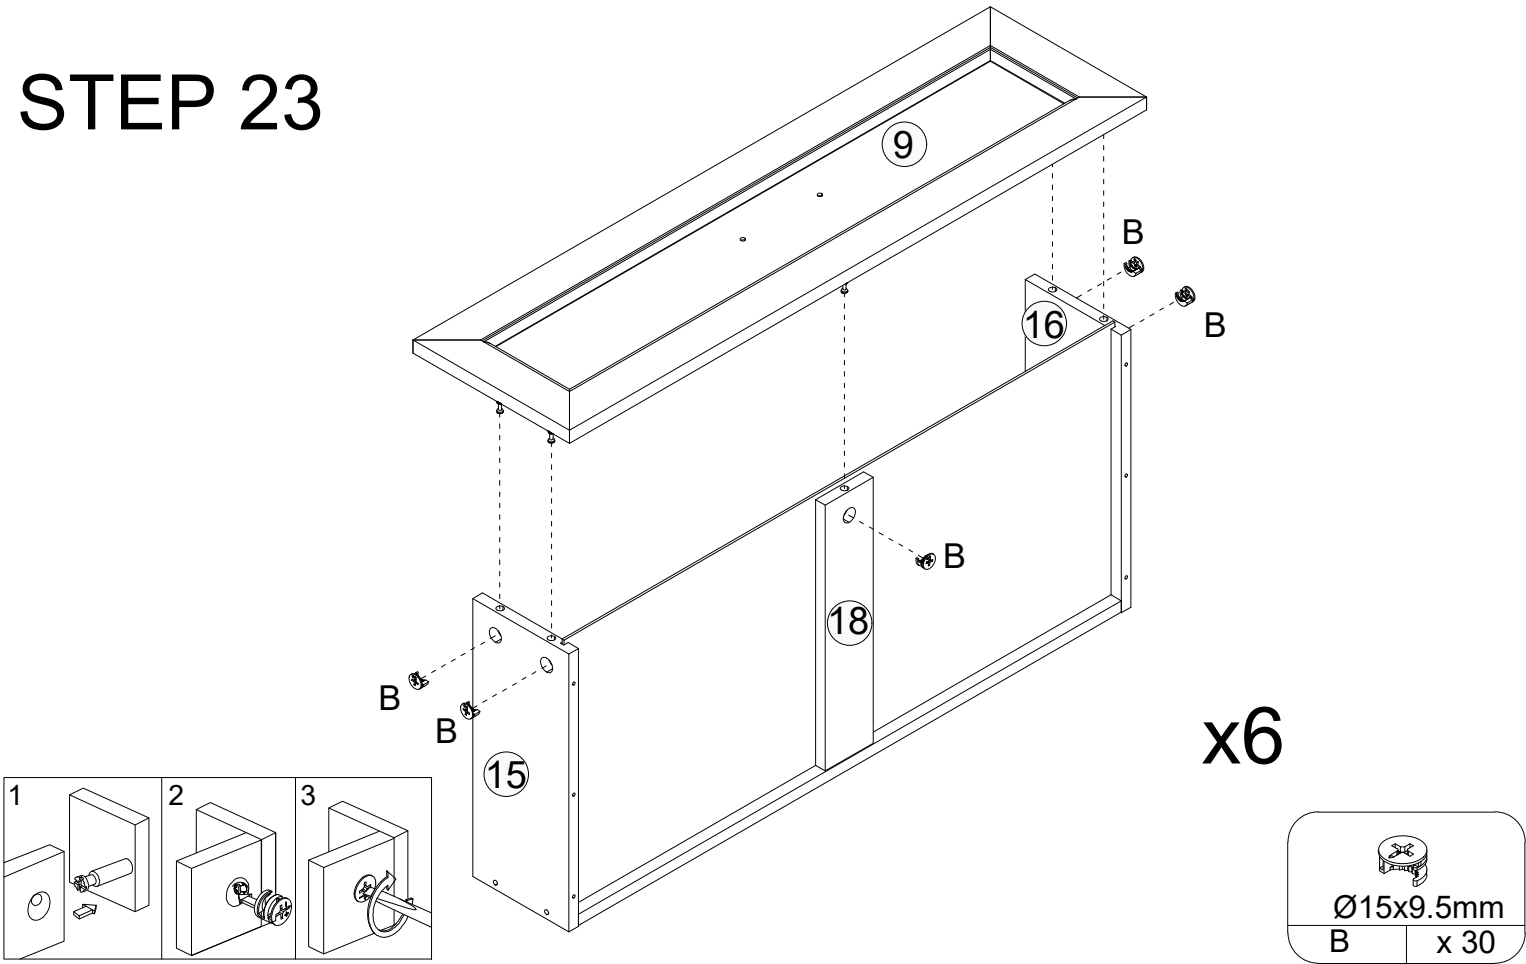


STEP 24

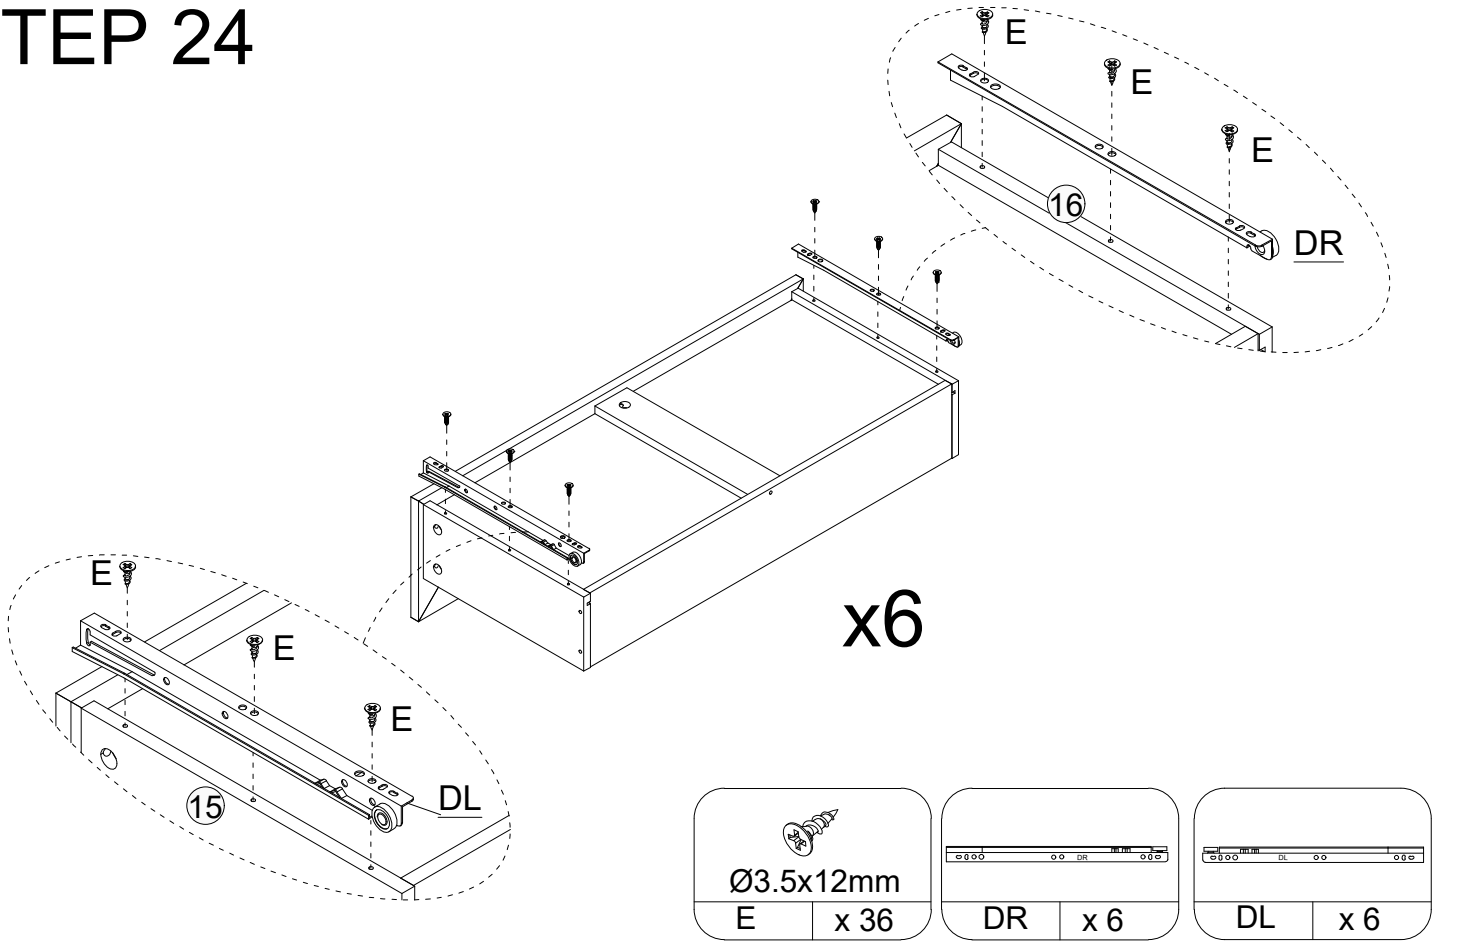


STEP 25

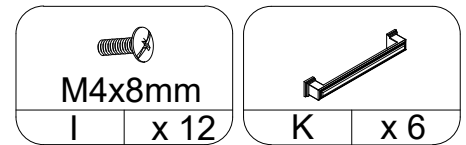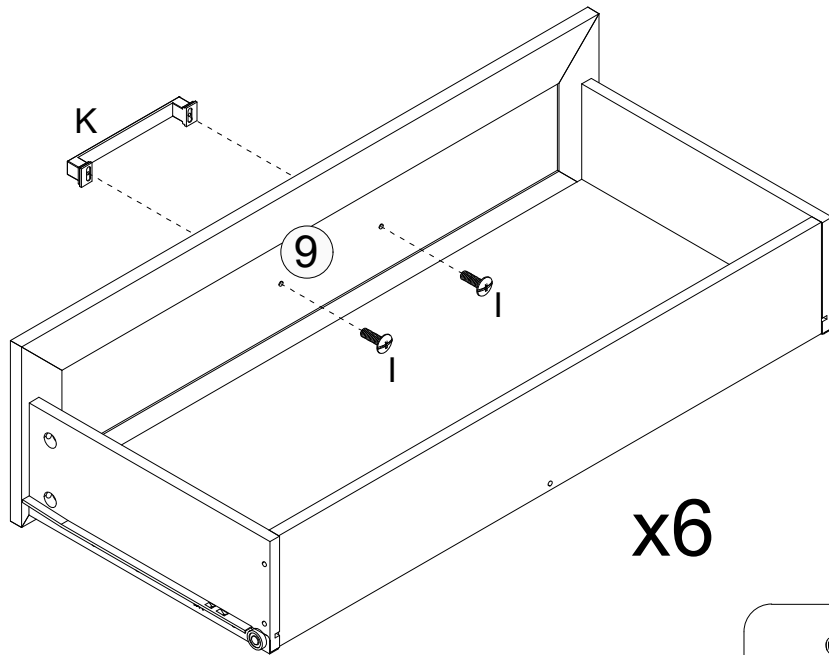

STEP 26

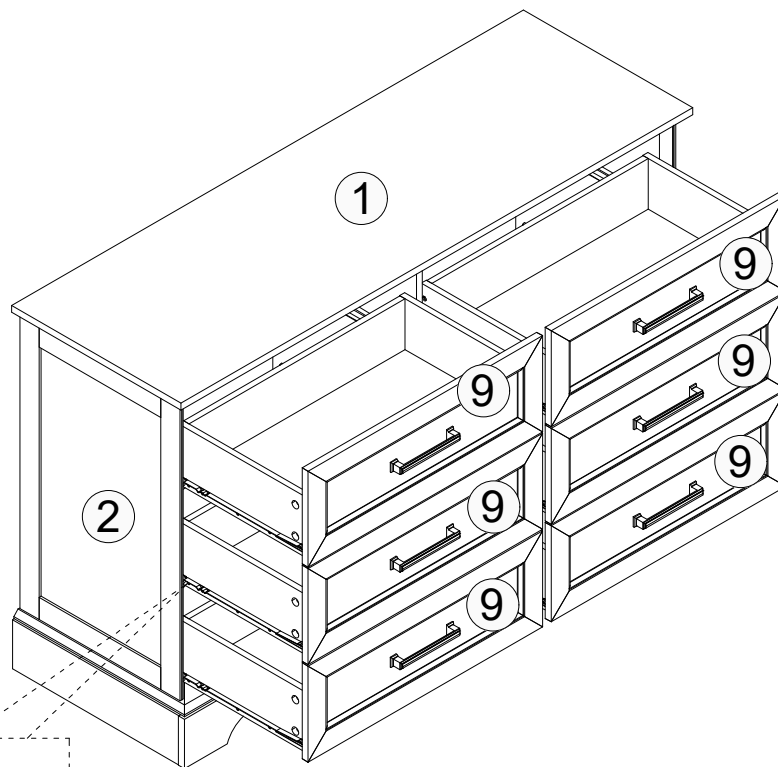


Cabinet Slide arms

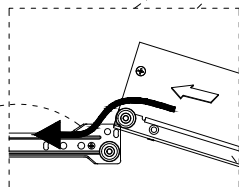


Drawer Slide brackets



STEP 27

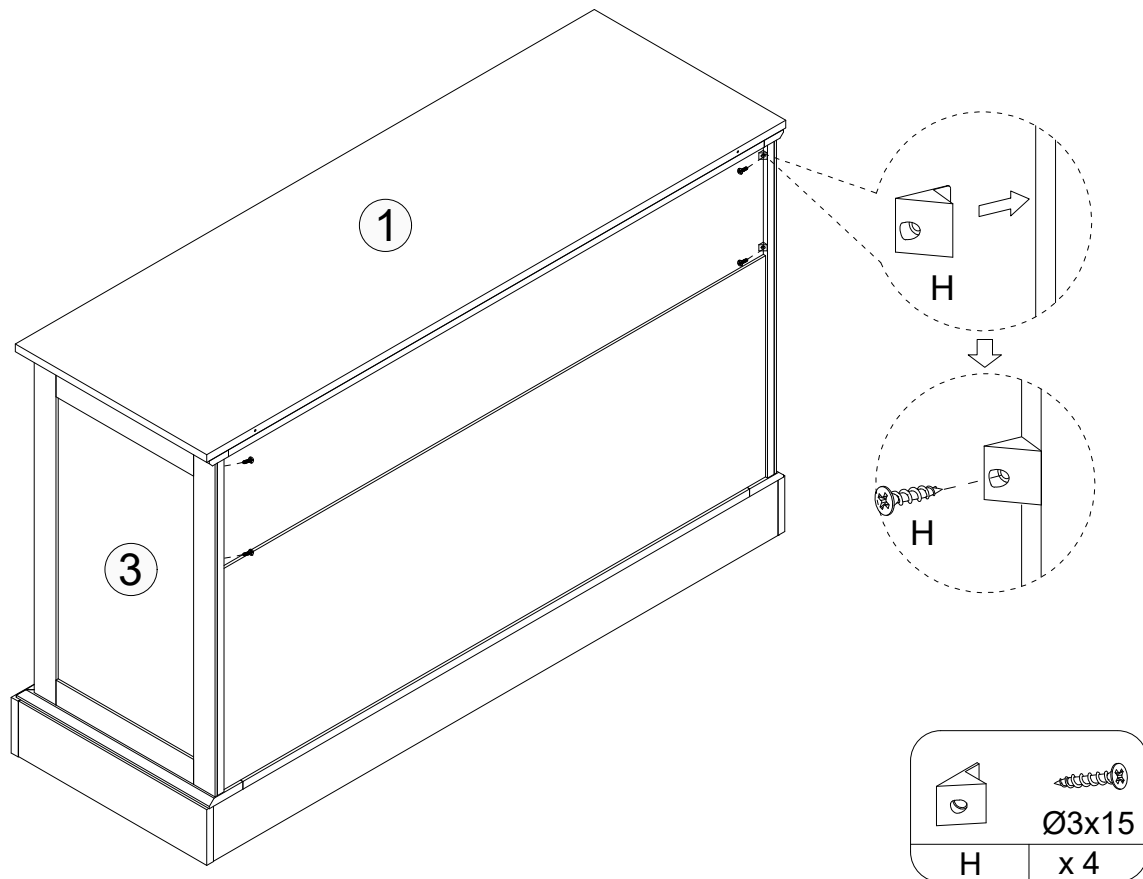

STEP 28

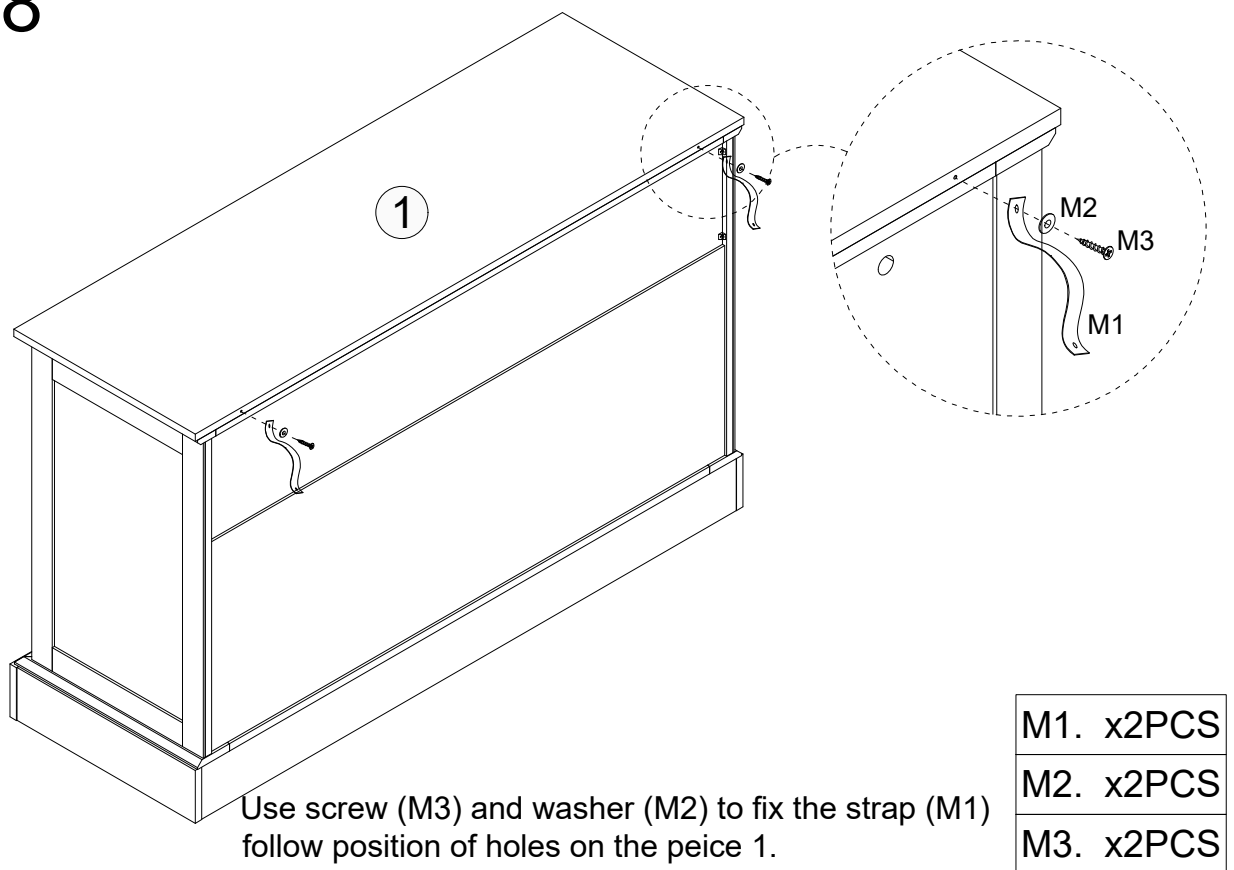

STEP 29

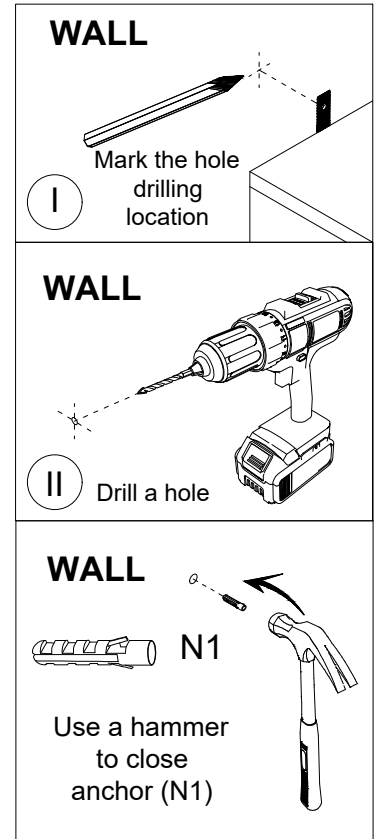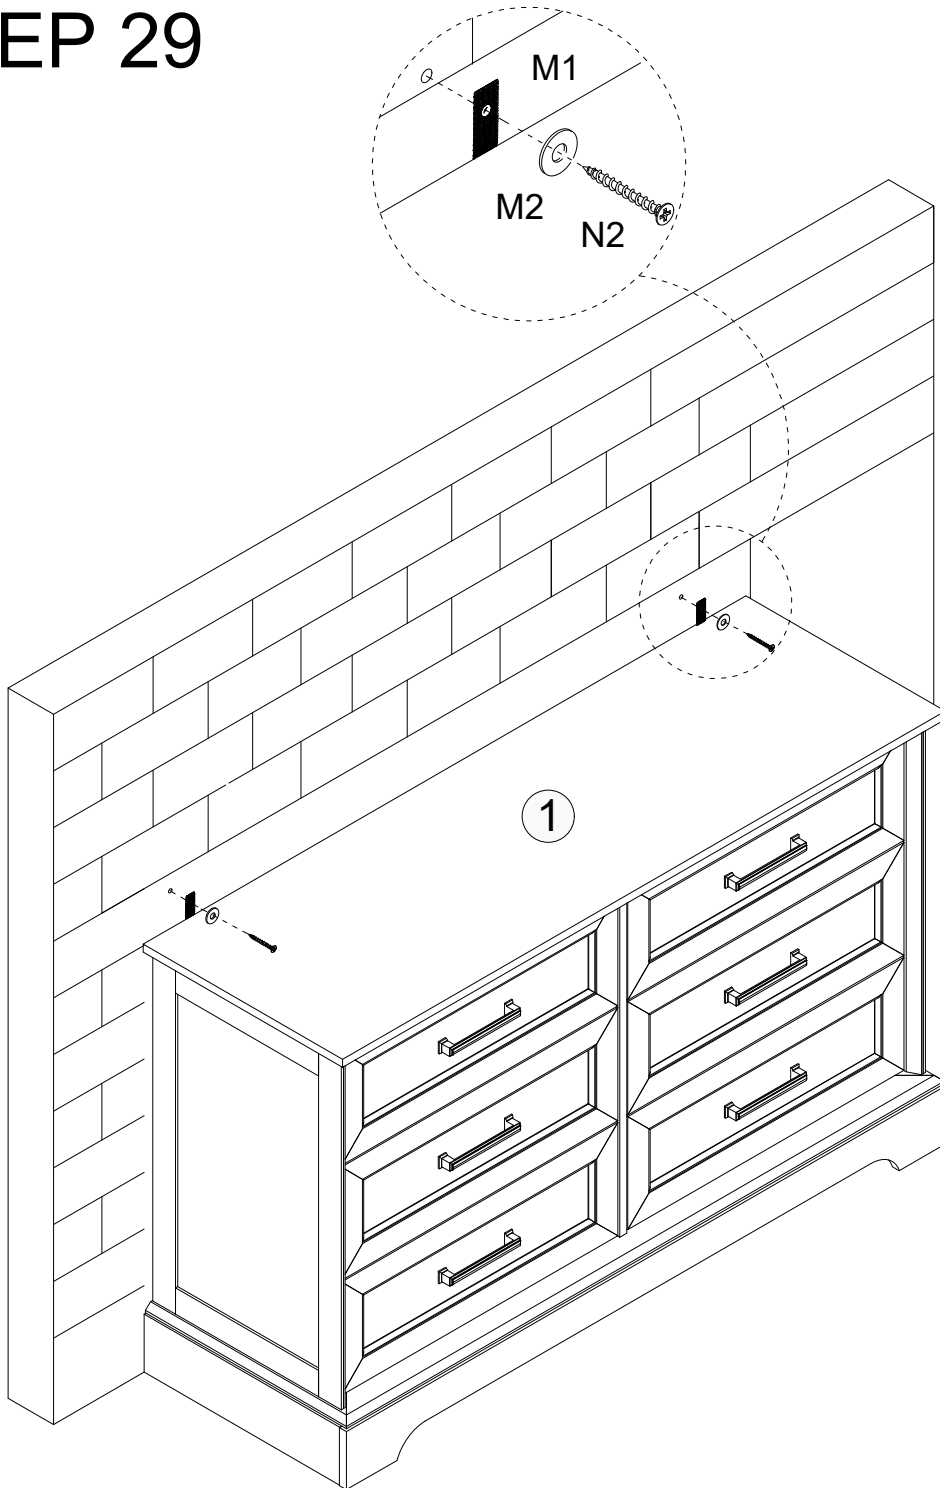

Step1: determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.

Step 2: drill the hole and then fixed the anchor (N1) on the wall.

Step 3: use screw (N2) to fix the strap (M1), (M2) on the wall .

N1.	x2PCS
N2.	x2PCS
M2.	x2PCS

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
 - Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning