

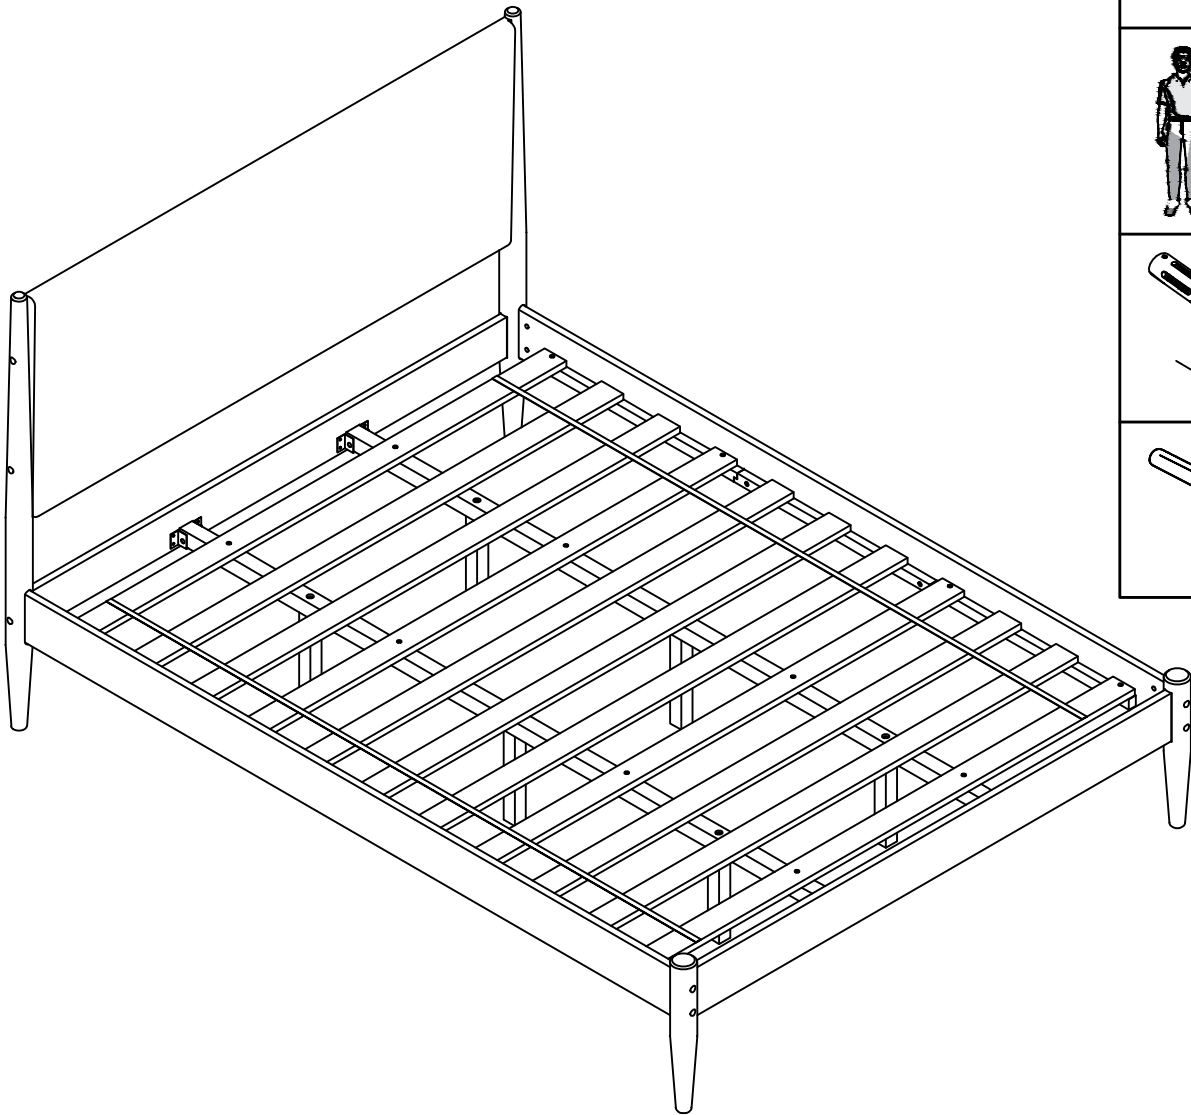
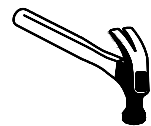


ASSEMBLY INSTRUCTIONS

MID CENTURY UPHOLSTERED BED QUEEN SIZE

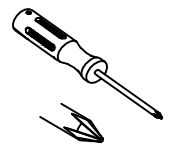


01:00 Hs

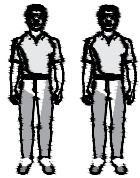




ATTENTION

- 1 - Read and observe carefully all the assembly instructions before beginning assembly.
- 2 - The assembly of the product must be done on a clean and flat surface. We suggest to use the packaging to cover the floor to avoid damages.
- 3 - The screws must be tightened periodically.
- 4 - Avoid contact with sharp objects.
- 5 - Avoid banging pieces together.



PARTS INCLUDED

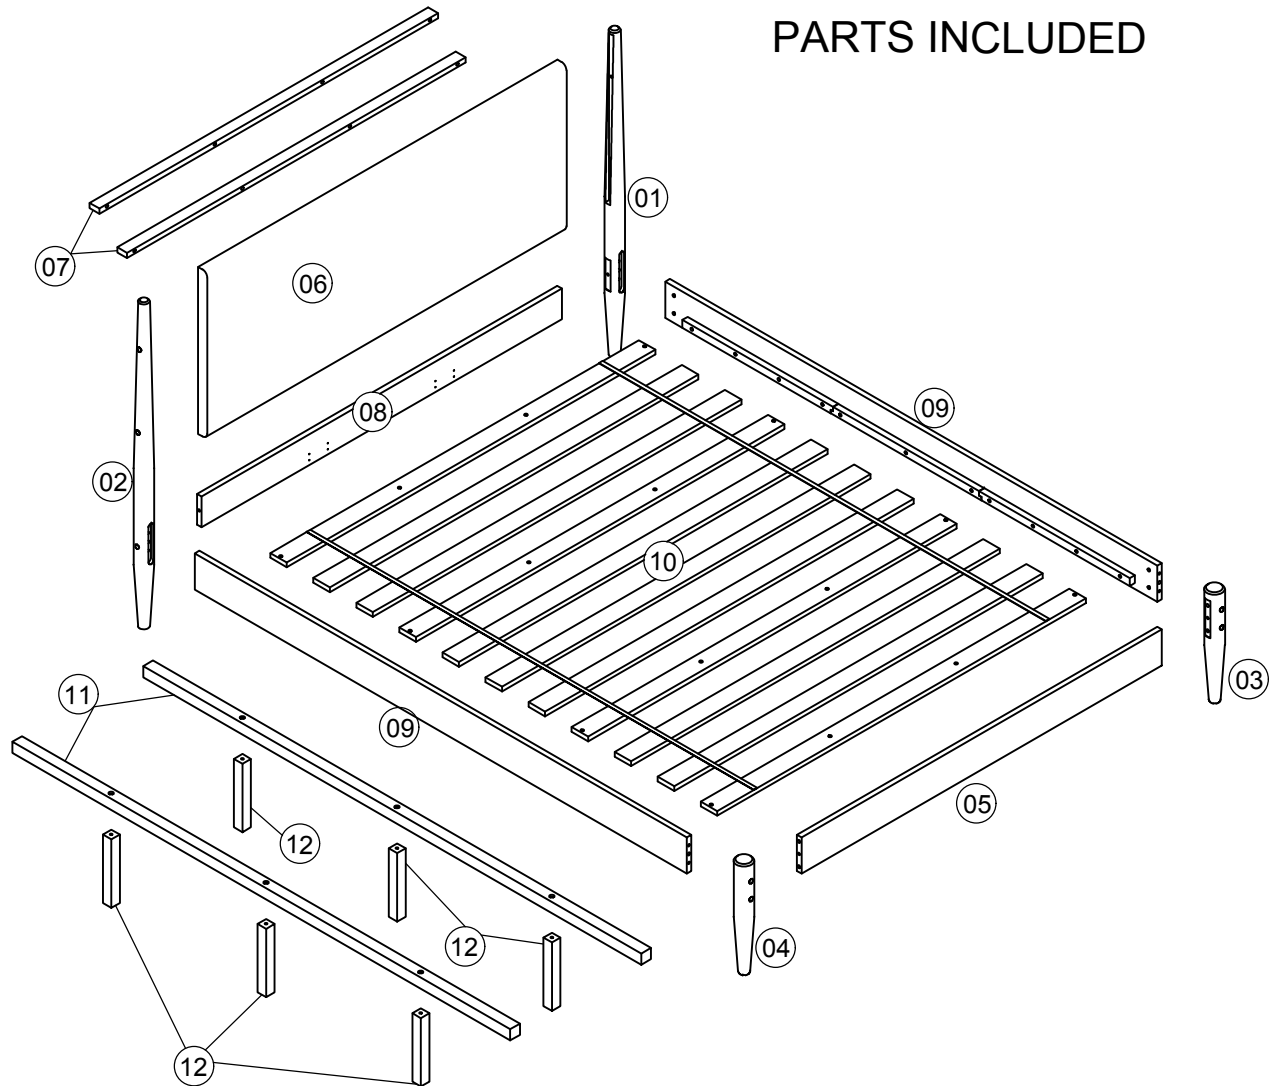



HARDWARE INCLUDED

A  14x $\varnothing 1/4" \times 3 1/2"$	B  10x $\varnothing 1/4" \times 2 1/2"$	C  8x $\varnothing 1/4" \times 2 1/4"$	D  8x $\varnothing 1/4"$
E  8x $\varnothing 1/4"$	F  16x $\varnothing 5/32" \times 1 1/8"$	G  4x	H  4x
I  1x	J  16x $\varnothing 1/8" \times 5/8"$	K  1x	L  8x $\varnothing 3/8" \times 1 1/2"$
M  1x	N  2x $M6 \times 1 1/2"$	O  2x	P  16x



Step 01

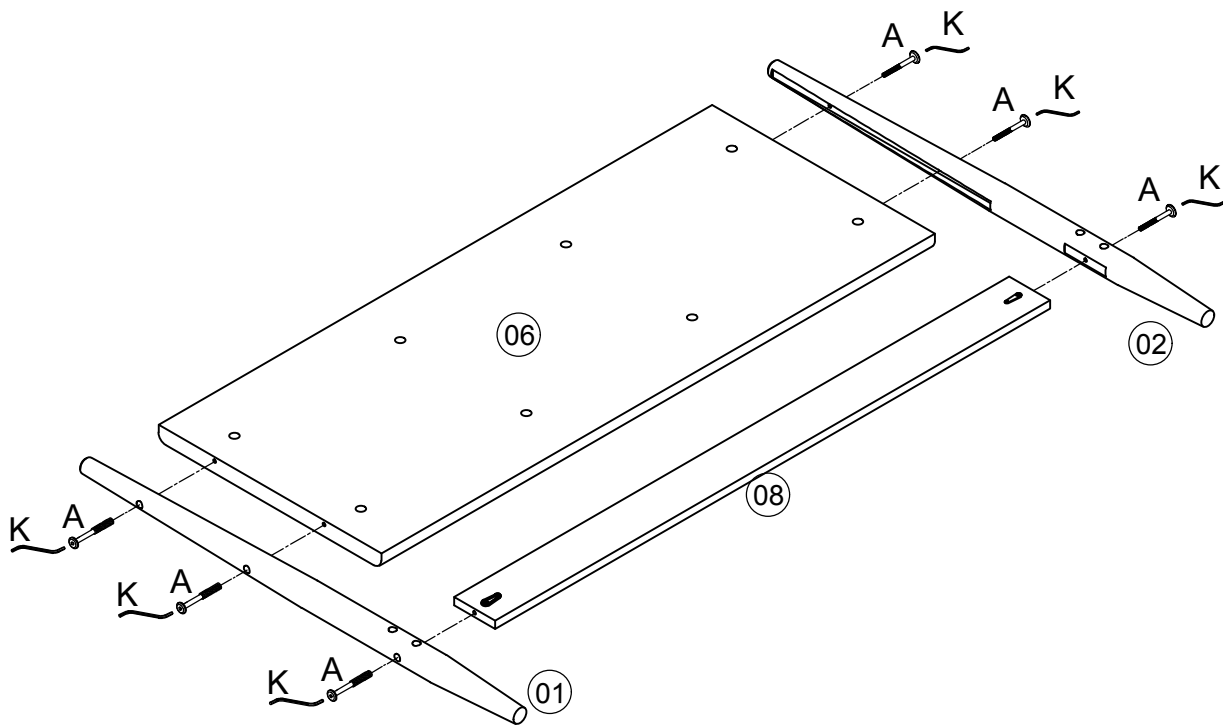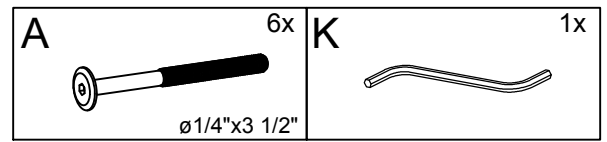




Step 02

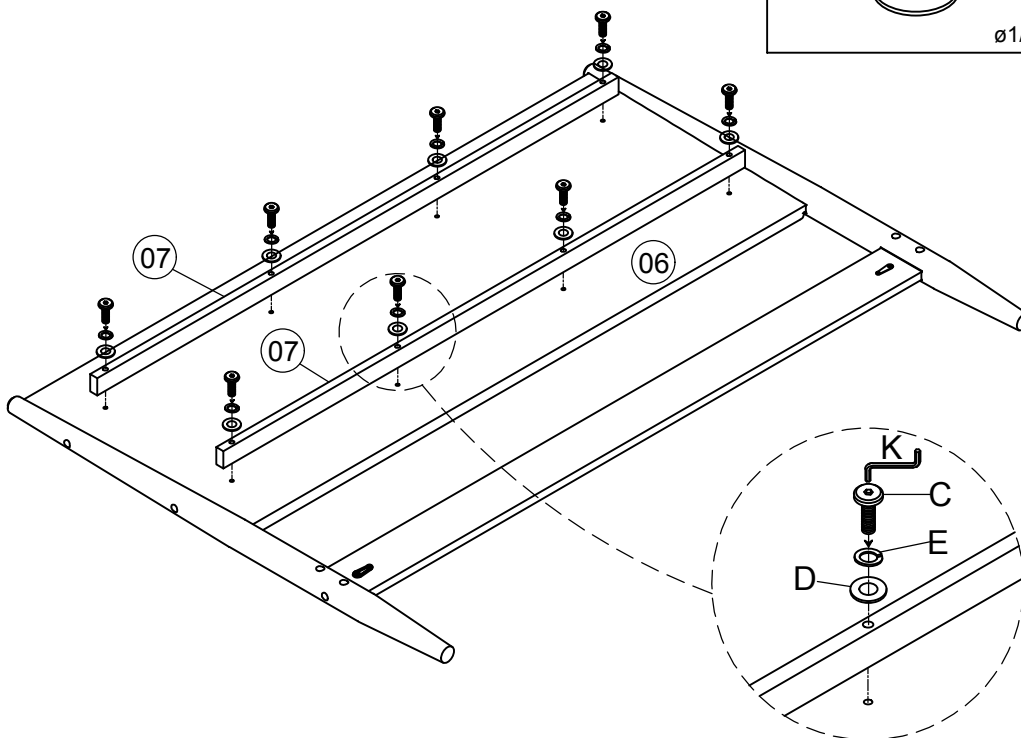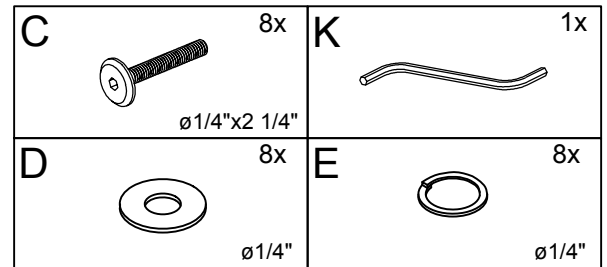


Step 03

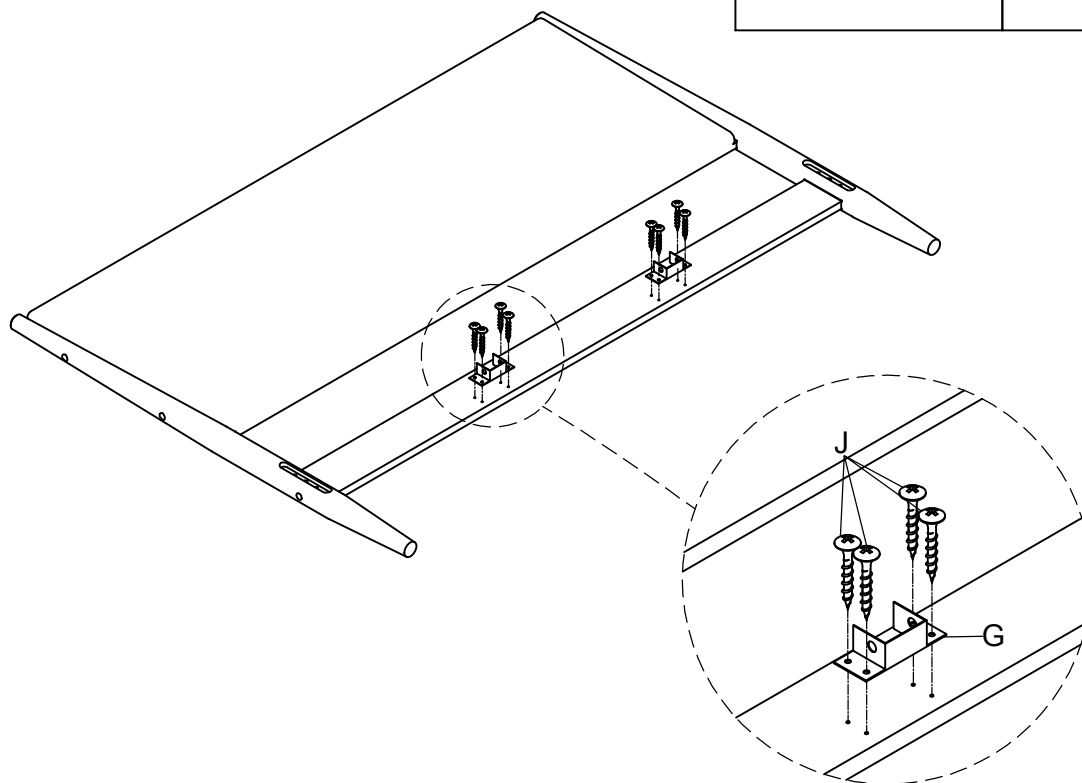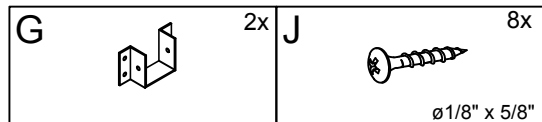


Step 04

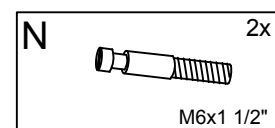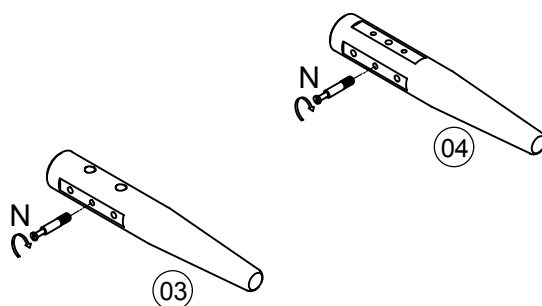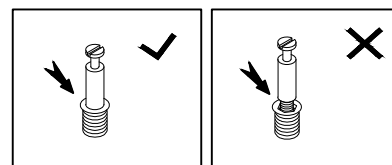



Step 05

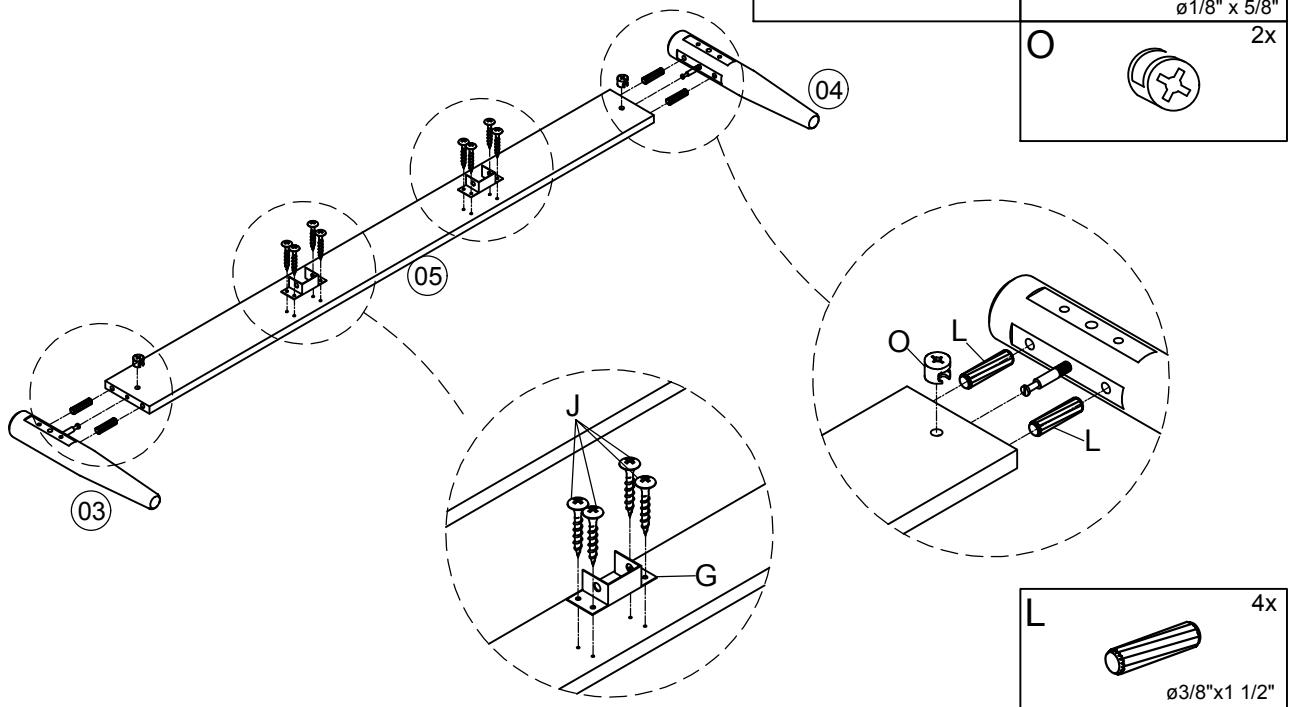



Step 06

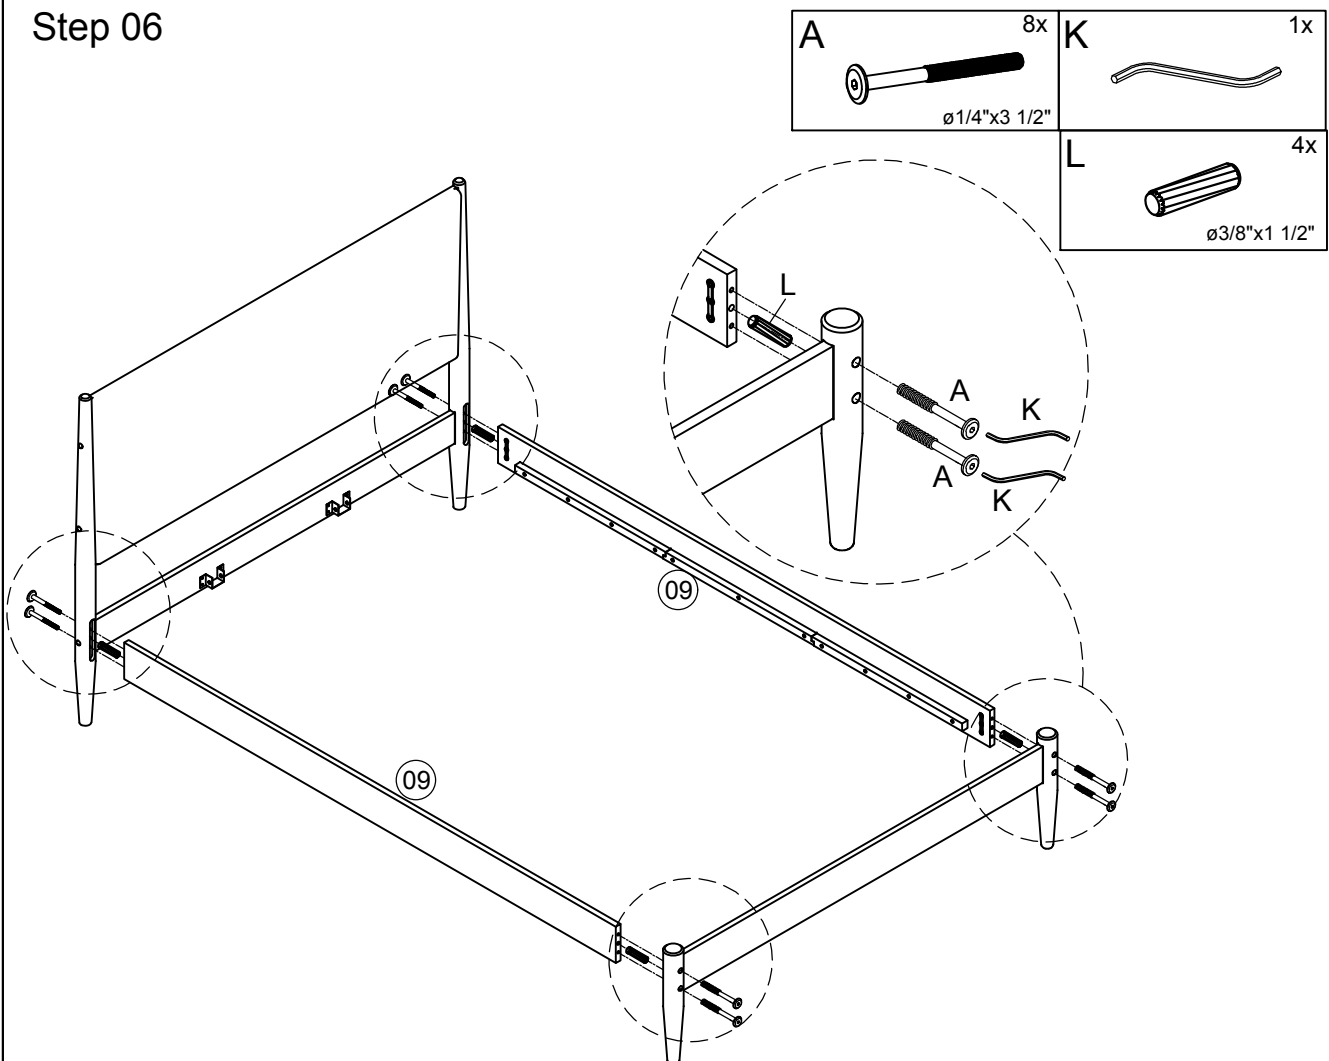

Step 07

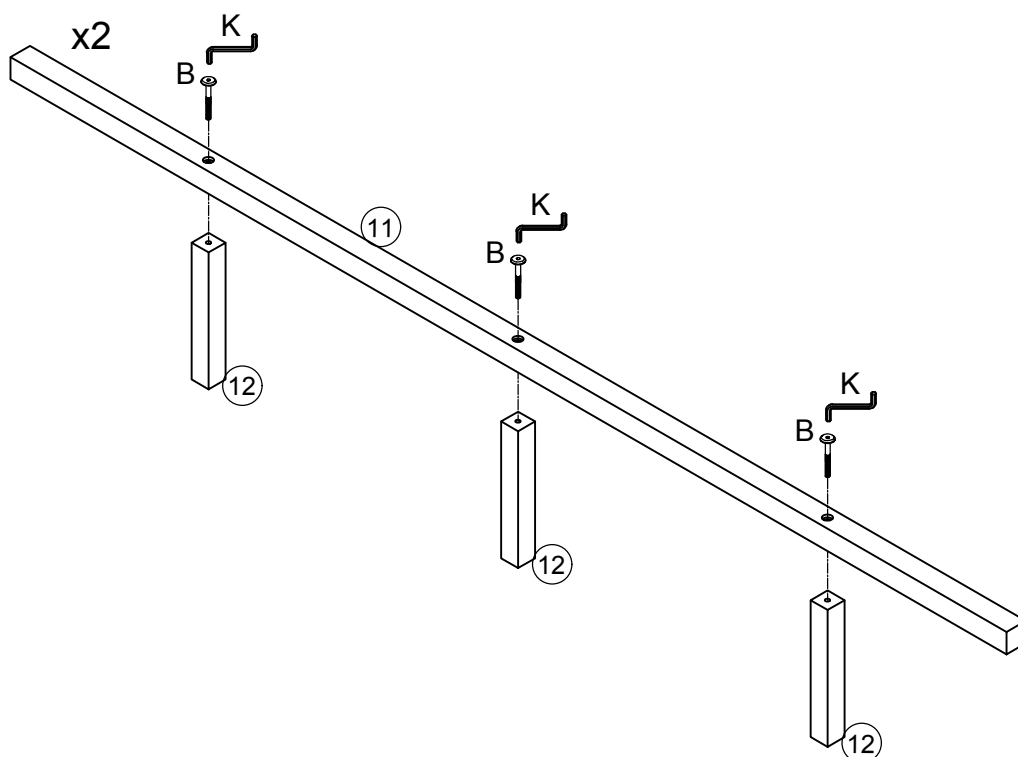
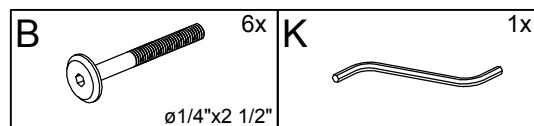


Step 08

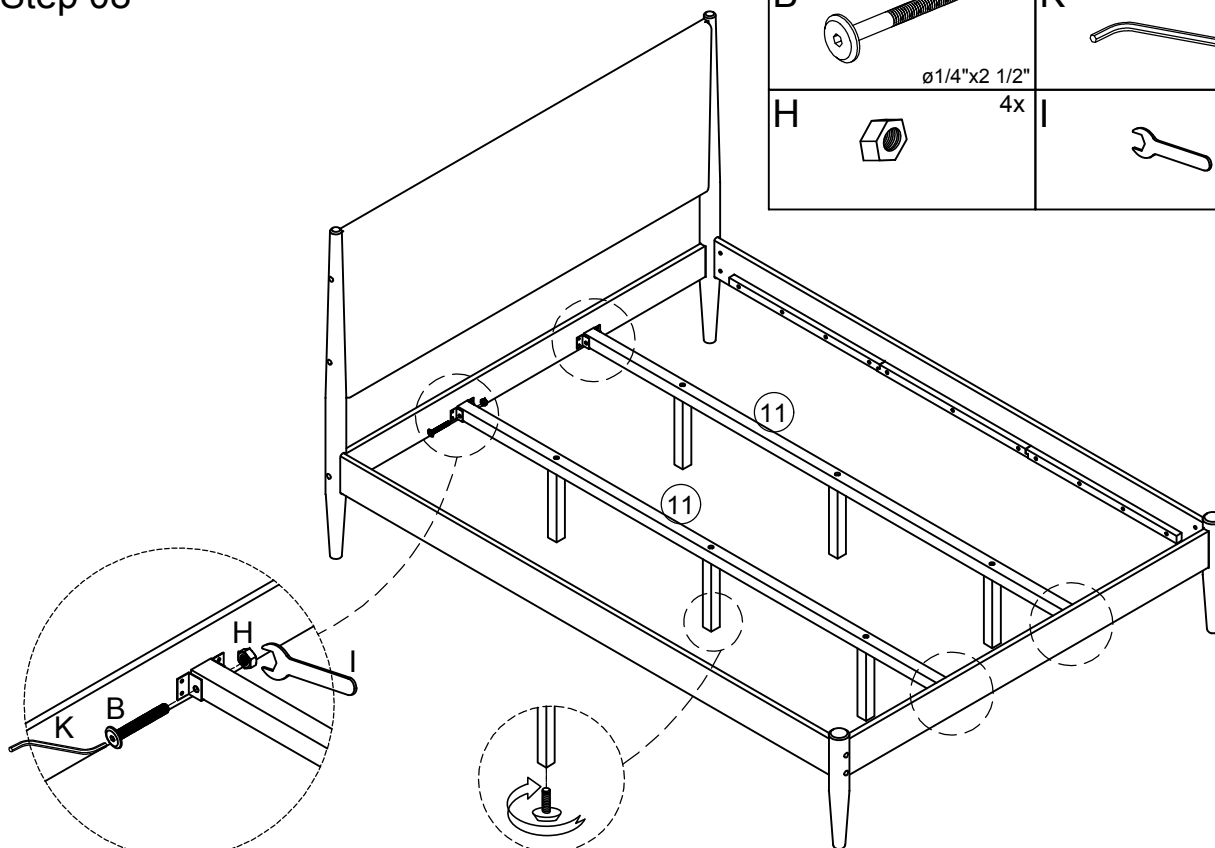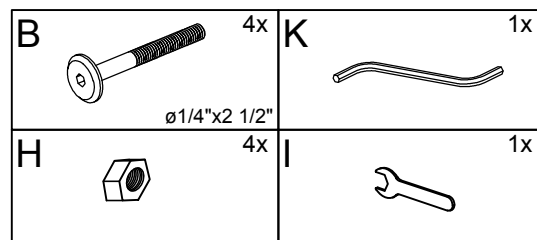

Adjust the leveler to ensure balance.

Step 09

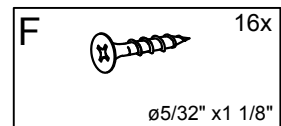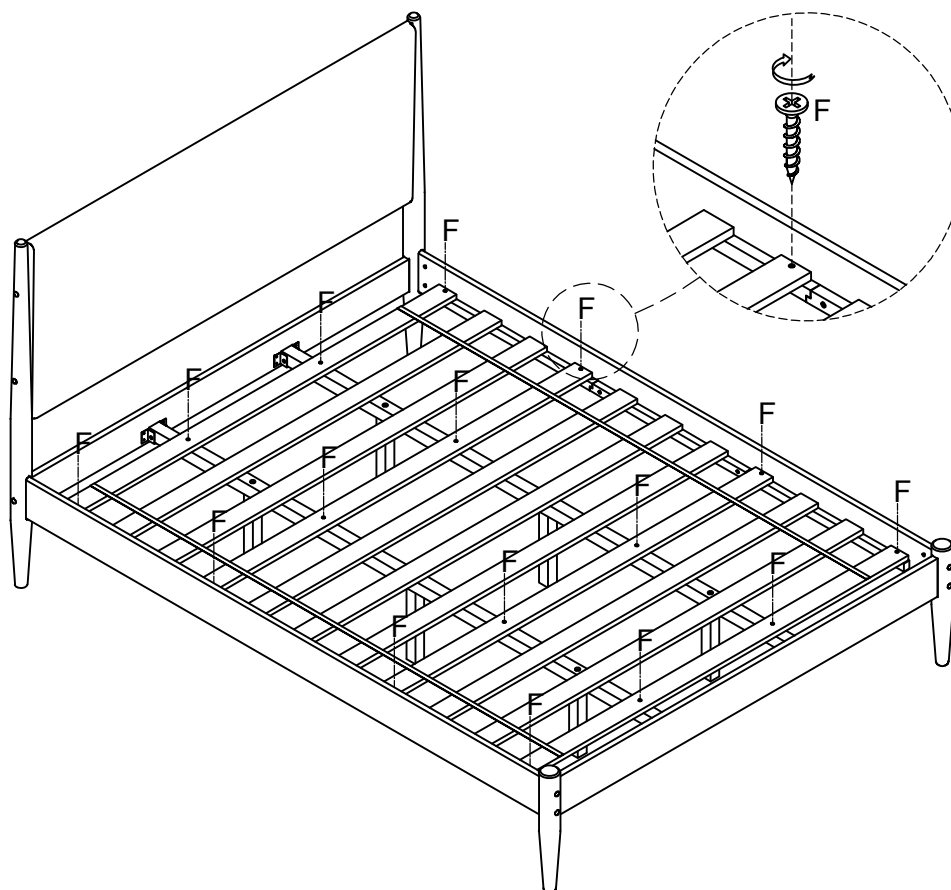

Step 10

