


# ASSEMBLY INSTRUCTIONS

USAAM100067 ☐

USAAM100068 ☐



QT027DS

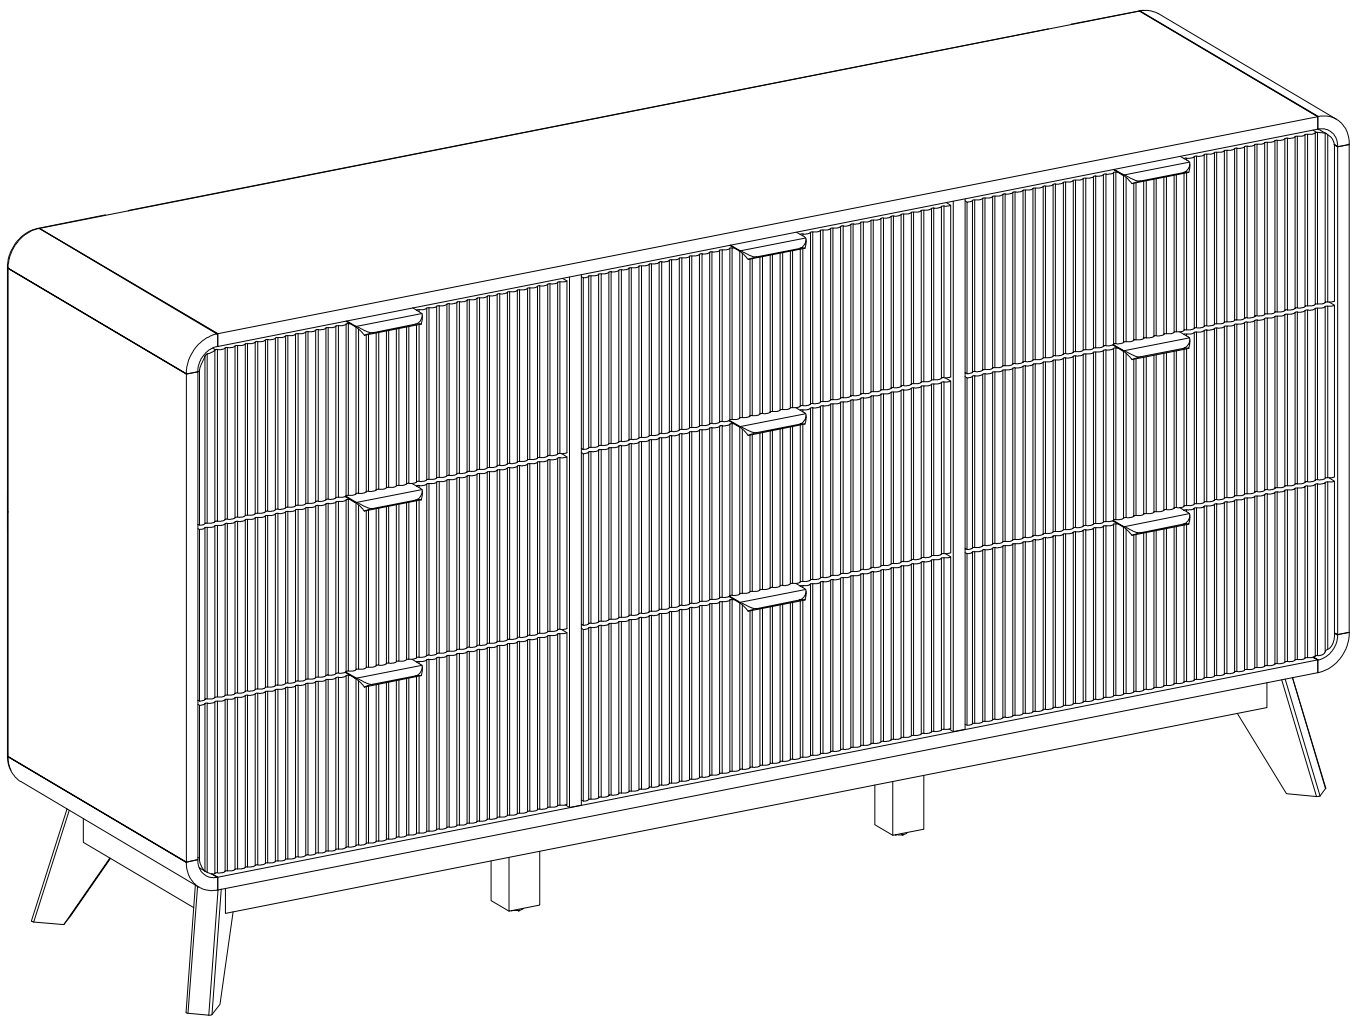

Lot Code:20250829

## Before You Start


1. Read through each step carefully and follow the proper order.
2. Separate and count all your parts and hardware.
3. Give yourself enough room for the assembly process.
4. Assemble this product on the empty carton or carpet to avoid scratching.
5. Two people are recommended for ease in the assembly of this product.
6. Keep all small parts of this product away from children. They may cause serious injury.
7. Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer.

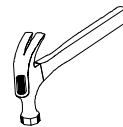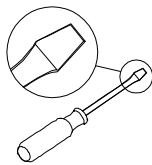


Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

### HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS







1. Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
2. Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
3. Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
4. Use the sticker to conceal the Cam.

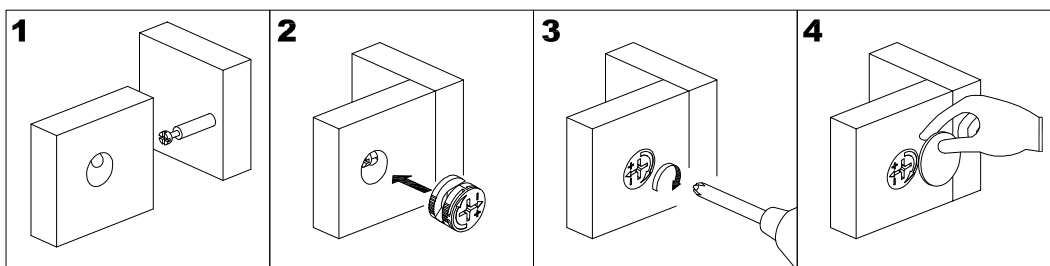


# PARTS LIST

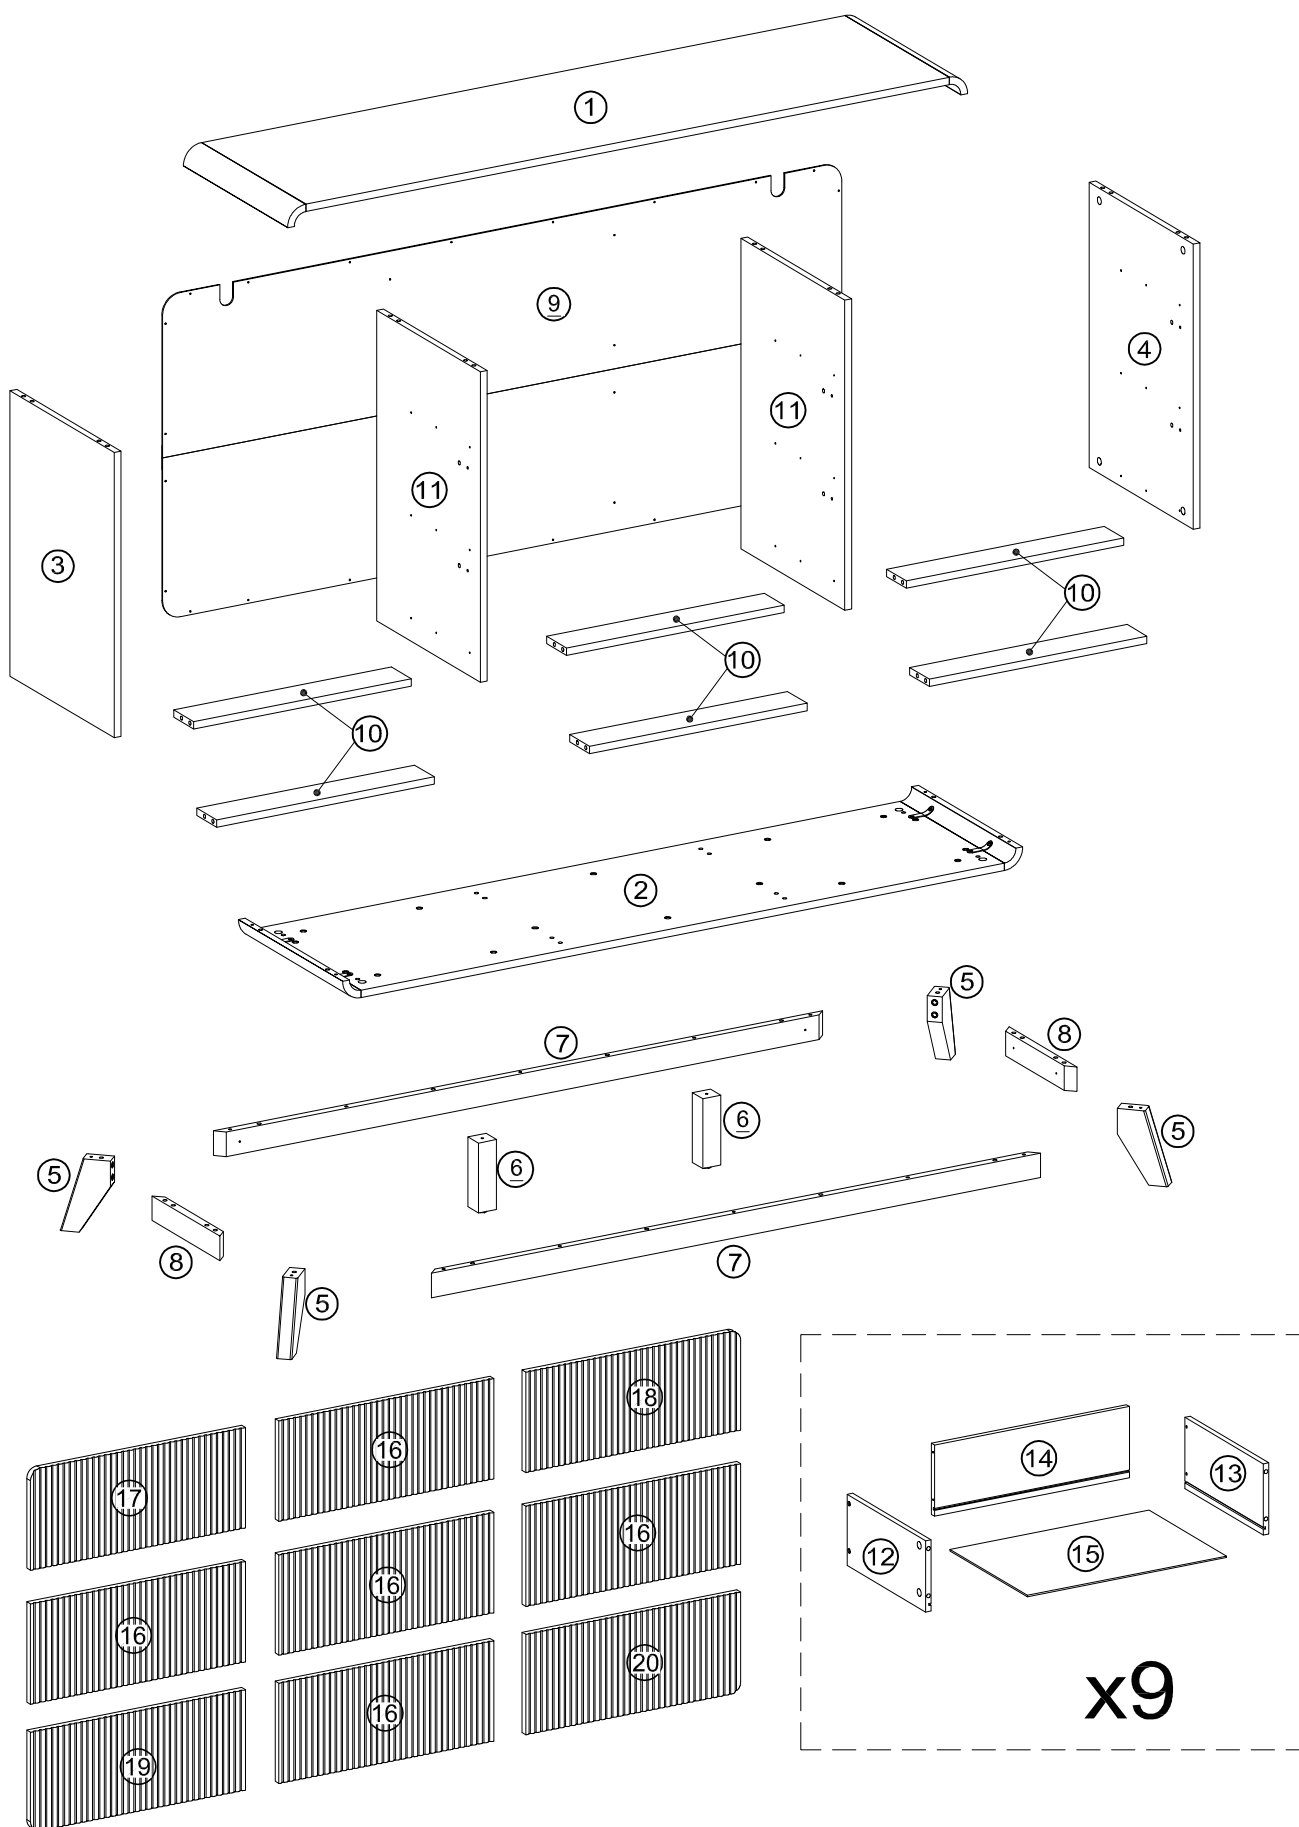

# HARDWARE LIST

|   |                                                                                     |           |                      |     |     |
|---|-------------------------------------------------------------------------------------|-----------|----------------------|-----|-----|
| A |    | Ø6x35mm   | Cam bolt             | 60  | pcs |
| B |    | Ø15x9mm   | Cam lock             | 60  | pcs |
| C |    | Ø30mm     | Cam cover            | 60  | pcs |
| D |    | Ø8x30mm   | Wooden dowel         | 44  | pcs |
| E |    |           | Pull                 | 9   | pcs |
| F |    | Ø3.5x12mm | Screw                | 126 | pcs |
| G |    | Ø4x38mm   | Screw                | 36  | pcs |
| H |    | M 4       | Hex key              | 1   | pc  |
| I |    | Ø6x60mm   | Bolt                 | 14  | pcs |
| J |   | Ø6x50mm   | Screw                | 10  | pcs |
| K |  | 12"       | Left cabinet member  | 9   | pcs |
| L |  | 12"       | Right cabinet member | 9   | pcs |
| M |  | 12"       | Left drawer runner   | 9   | pcs |
| N |  | 12"       | Right drawer runner  | 9   | pcs |
| O |  | Ø6x20mm   | Bolt                 | 8   | pcs |
| P |  |           | Connector            | 4   | pcs |
| Q |  | Ø5x14mm   | Screw                | 8   | pcs |
| R |  |           | Tipping restraint    | 2   | set |
| S |  | Ø3.5x12mm | Screw                | 32  | pcs |

# STEP 1




Ax2




Lx2




Fx6

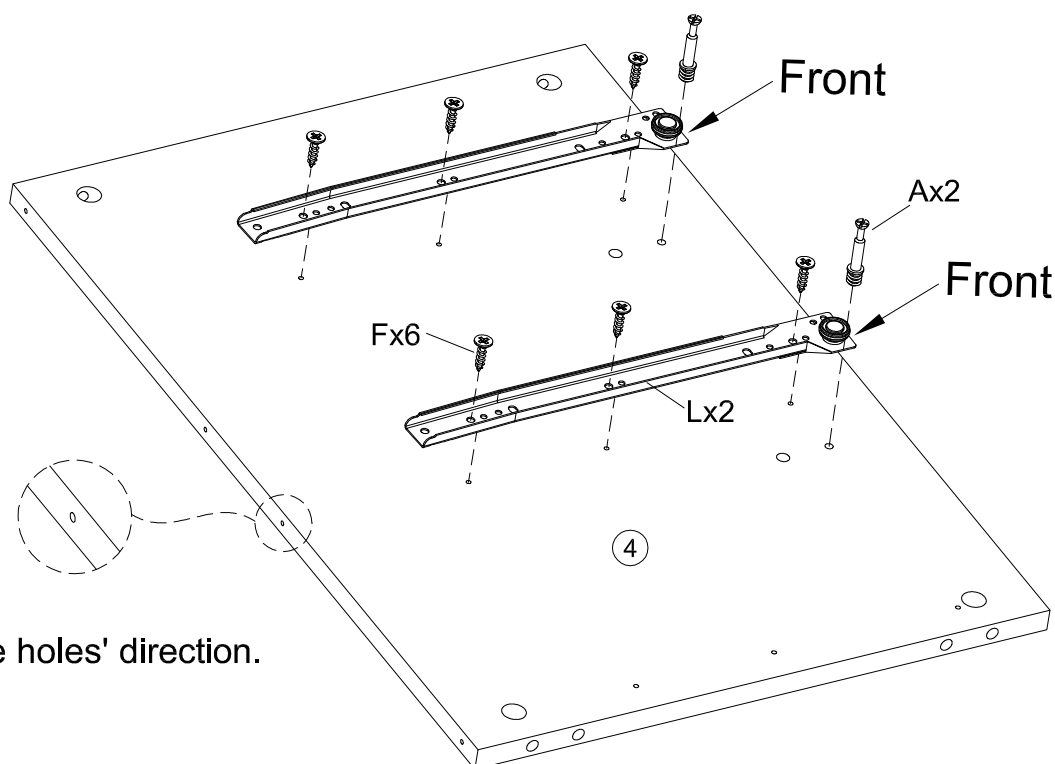

Note the holes' direction.

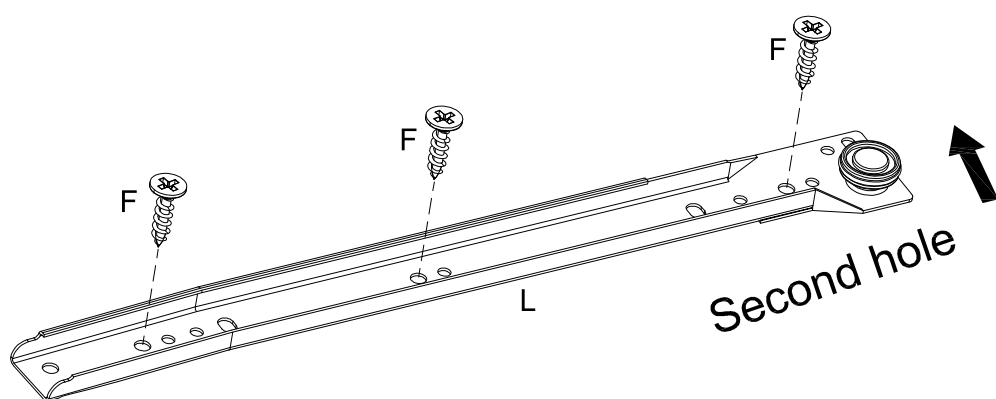

## RIGHT CABINET MEMBER

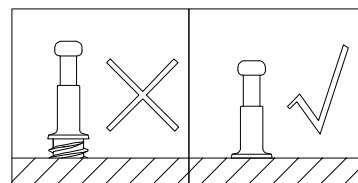



## STEP 2




Dx2



Bx2

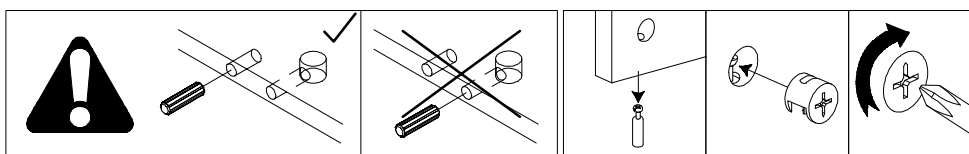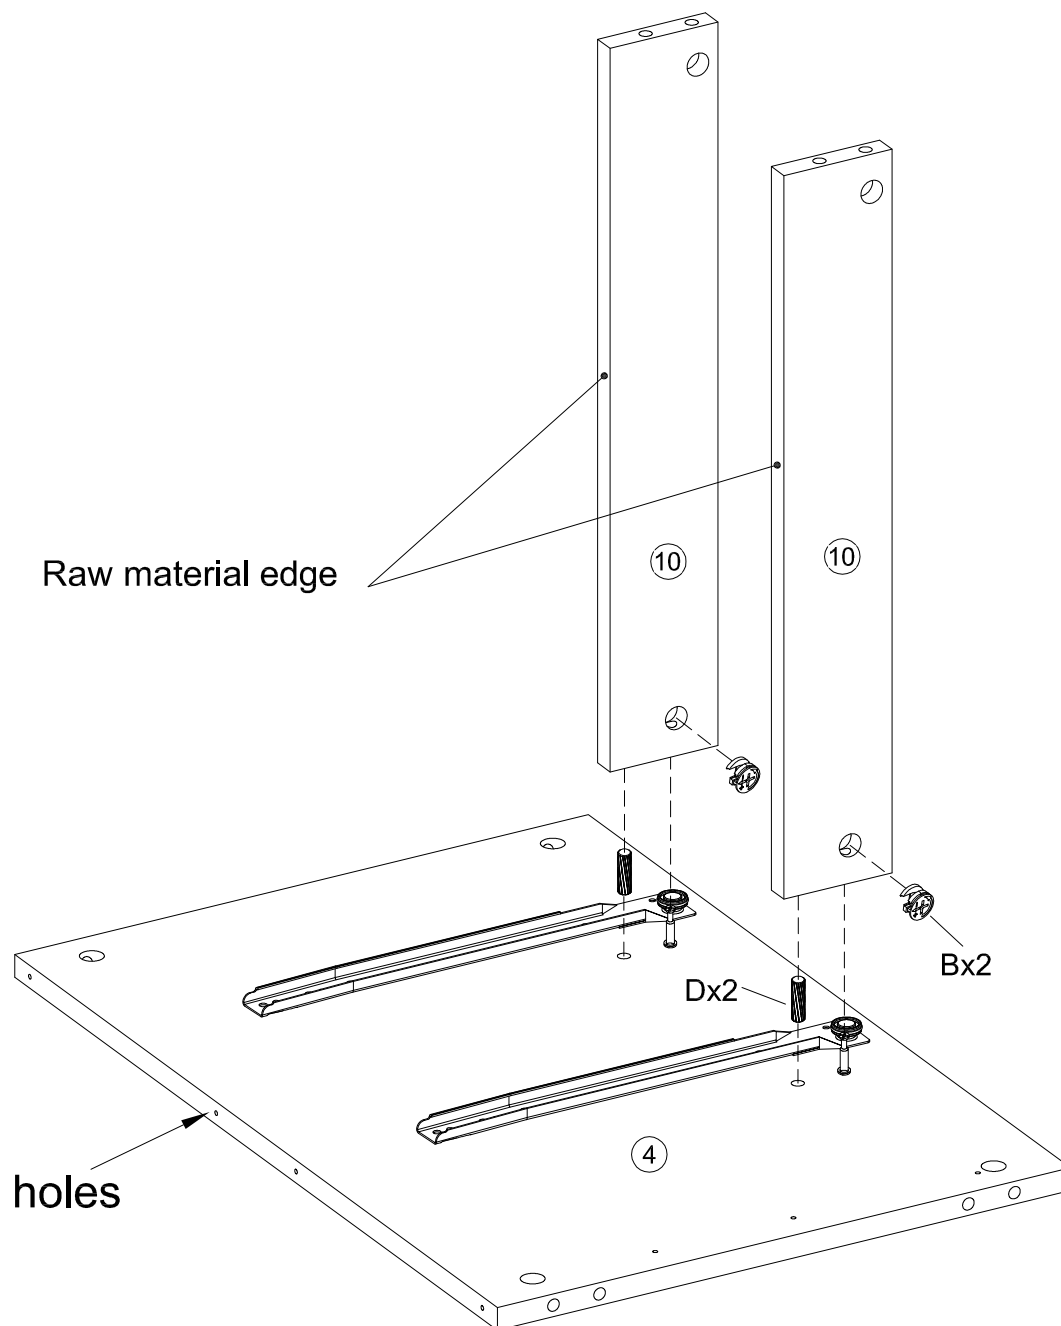

# STEP 3



Ax4




Kx6



Lx6






Fx36

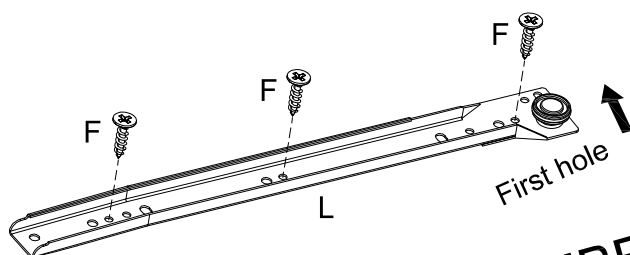

RIGHT CABINET MEMBER

x2

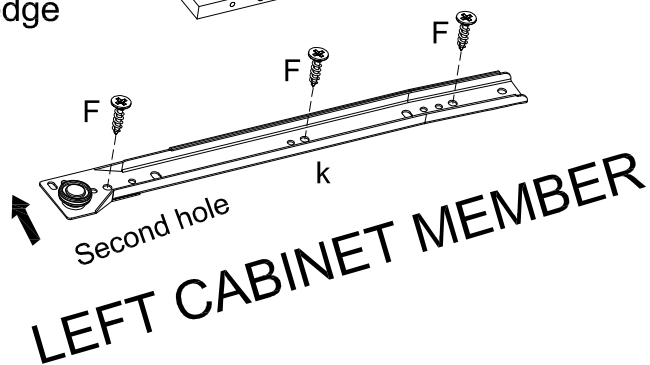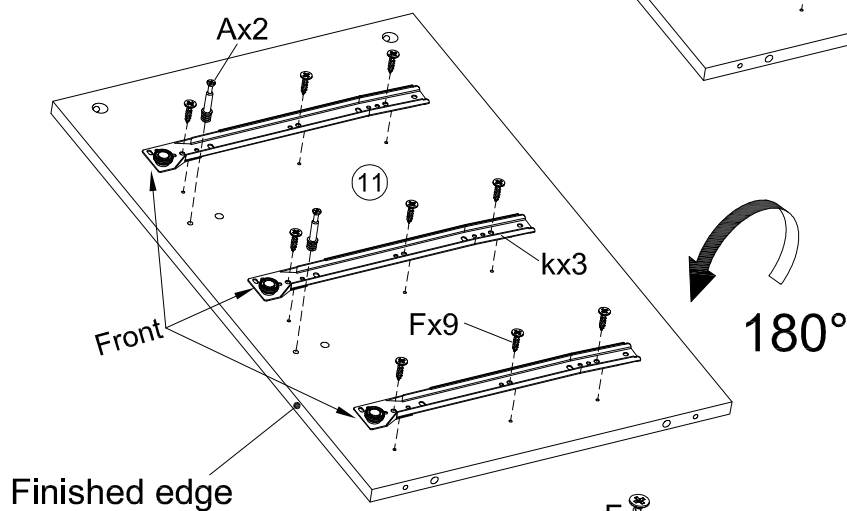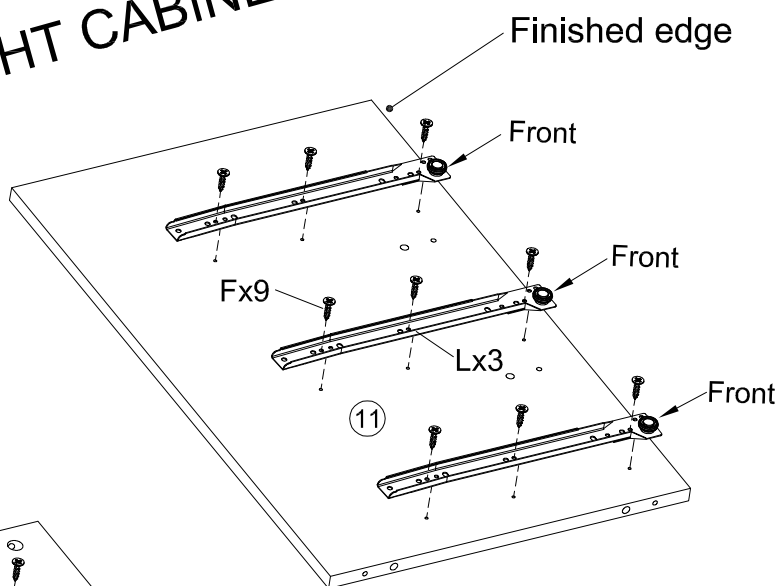

LEFT CABINET MEMBER



# STEP 4



Dx2




Bx2

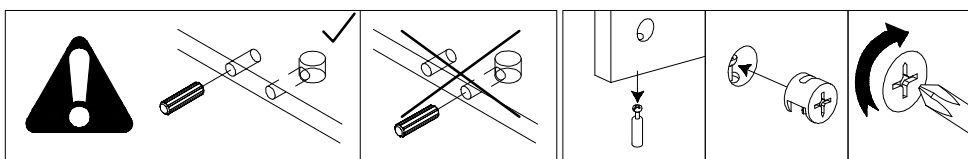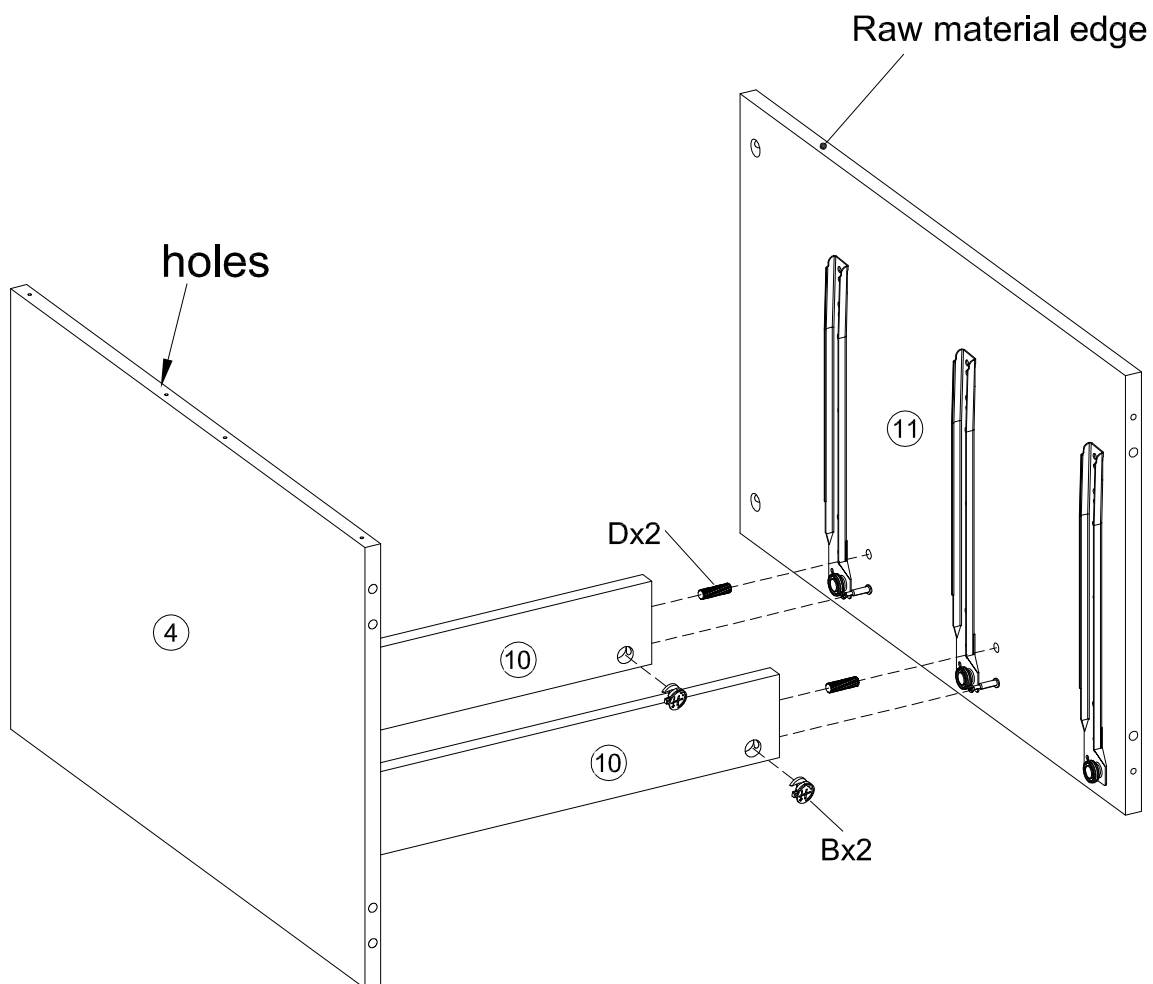




# STEP 5



Ax2

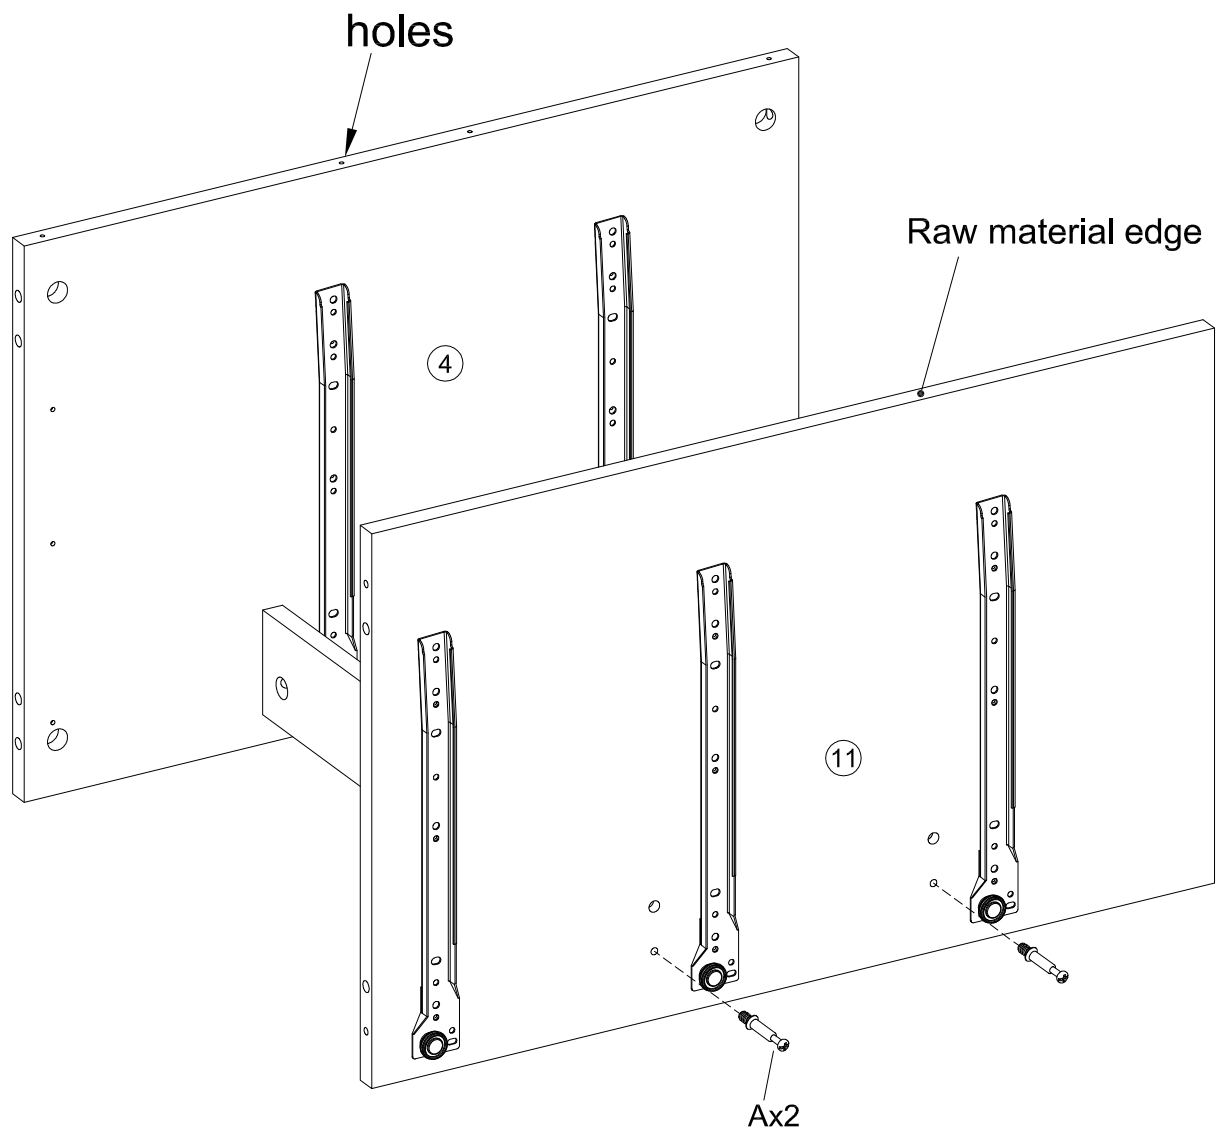



# STEP 6



Dx2



Bx2

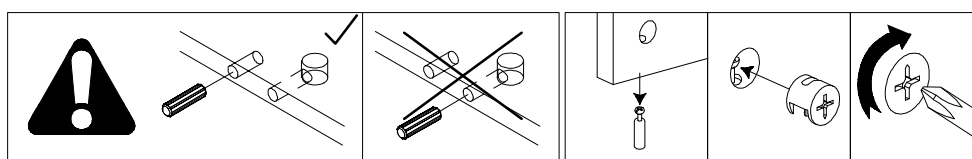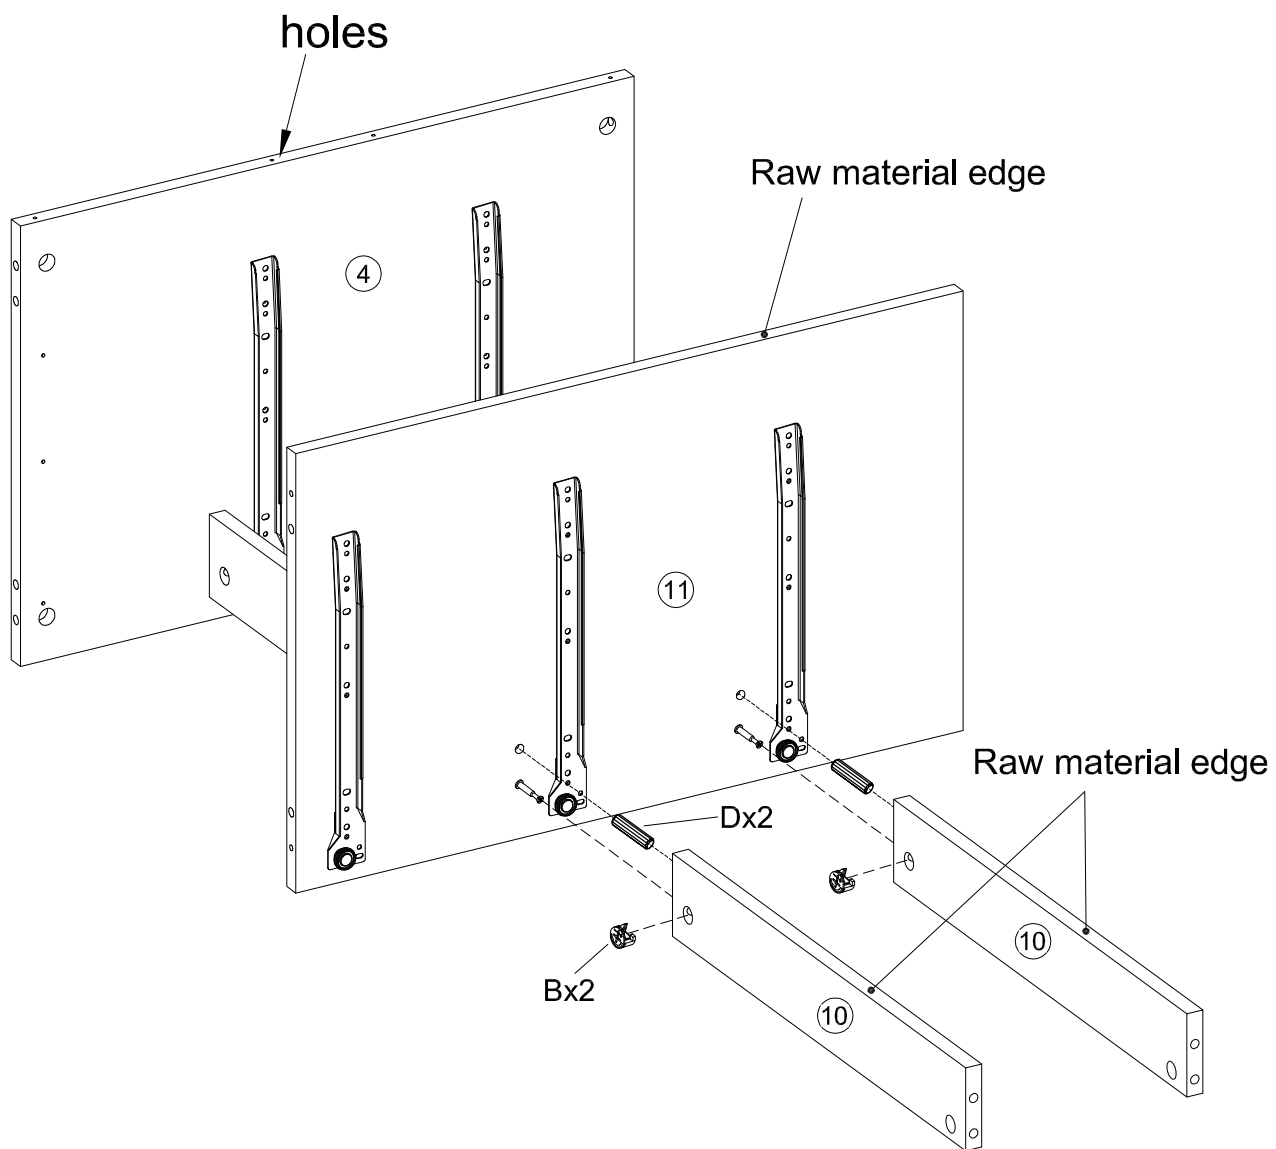



# STEP 7




Dx2




Bx2

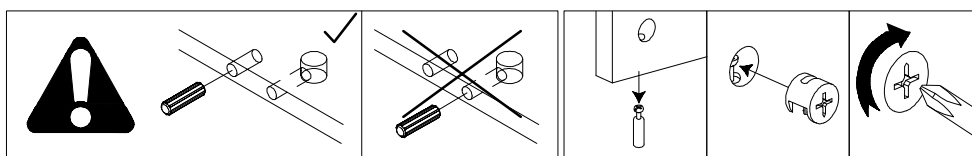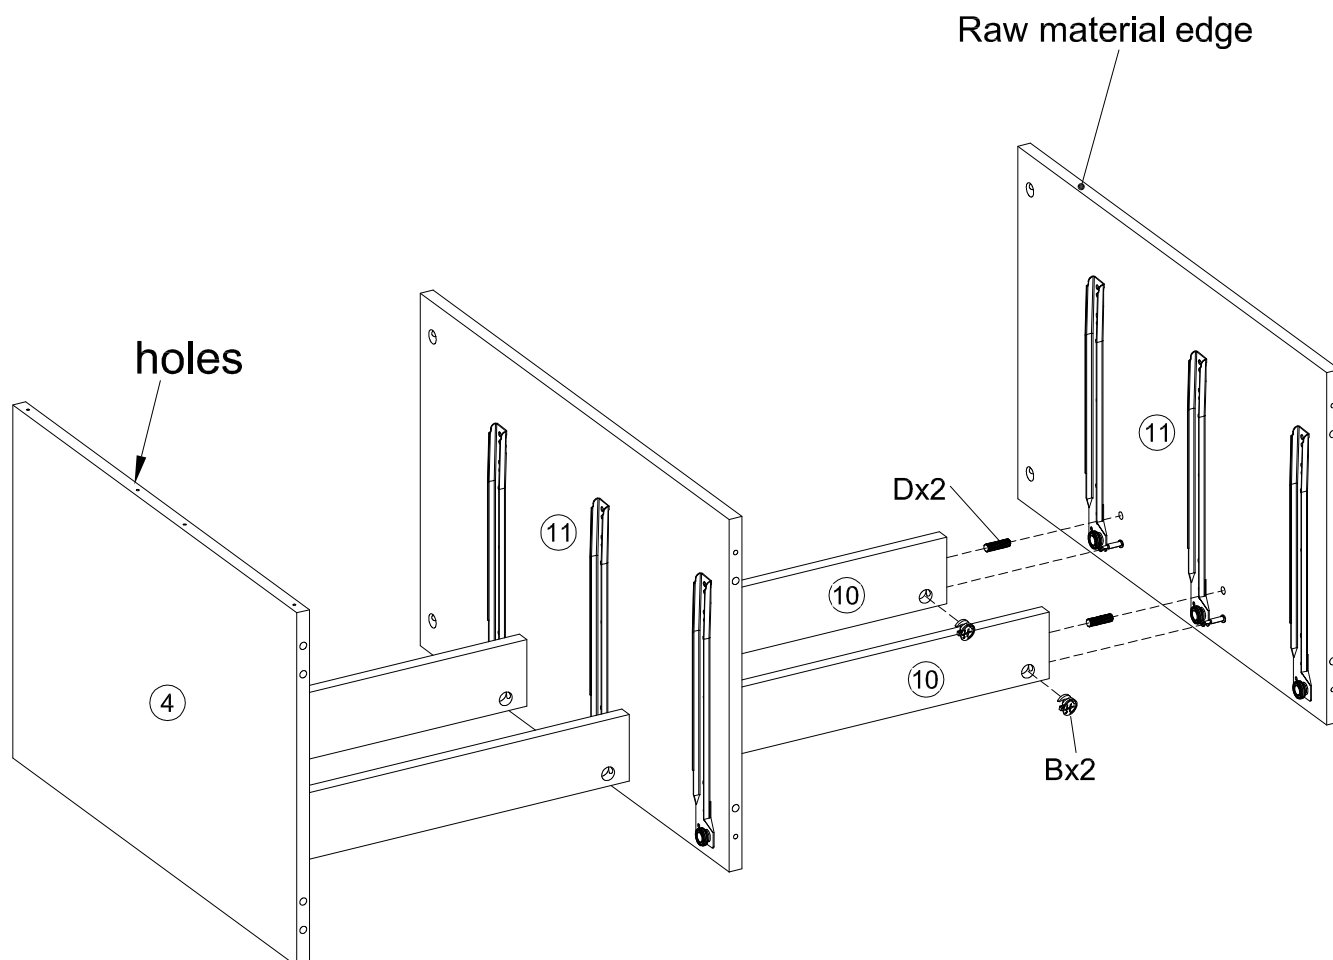

## STEP 8





Ax2

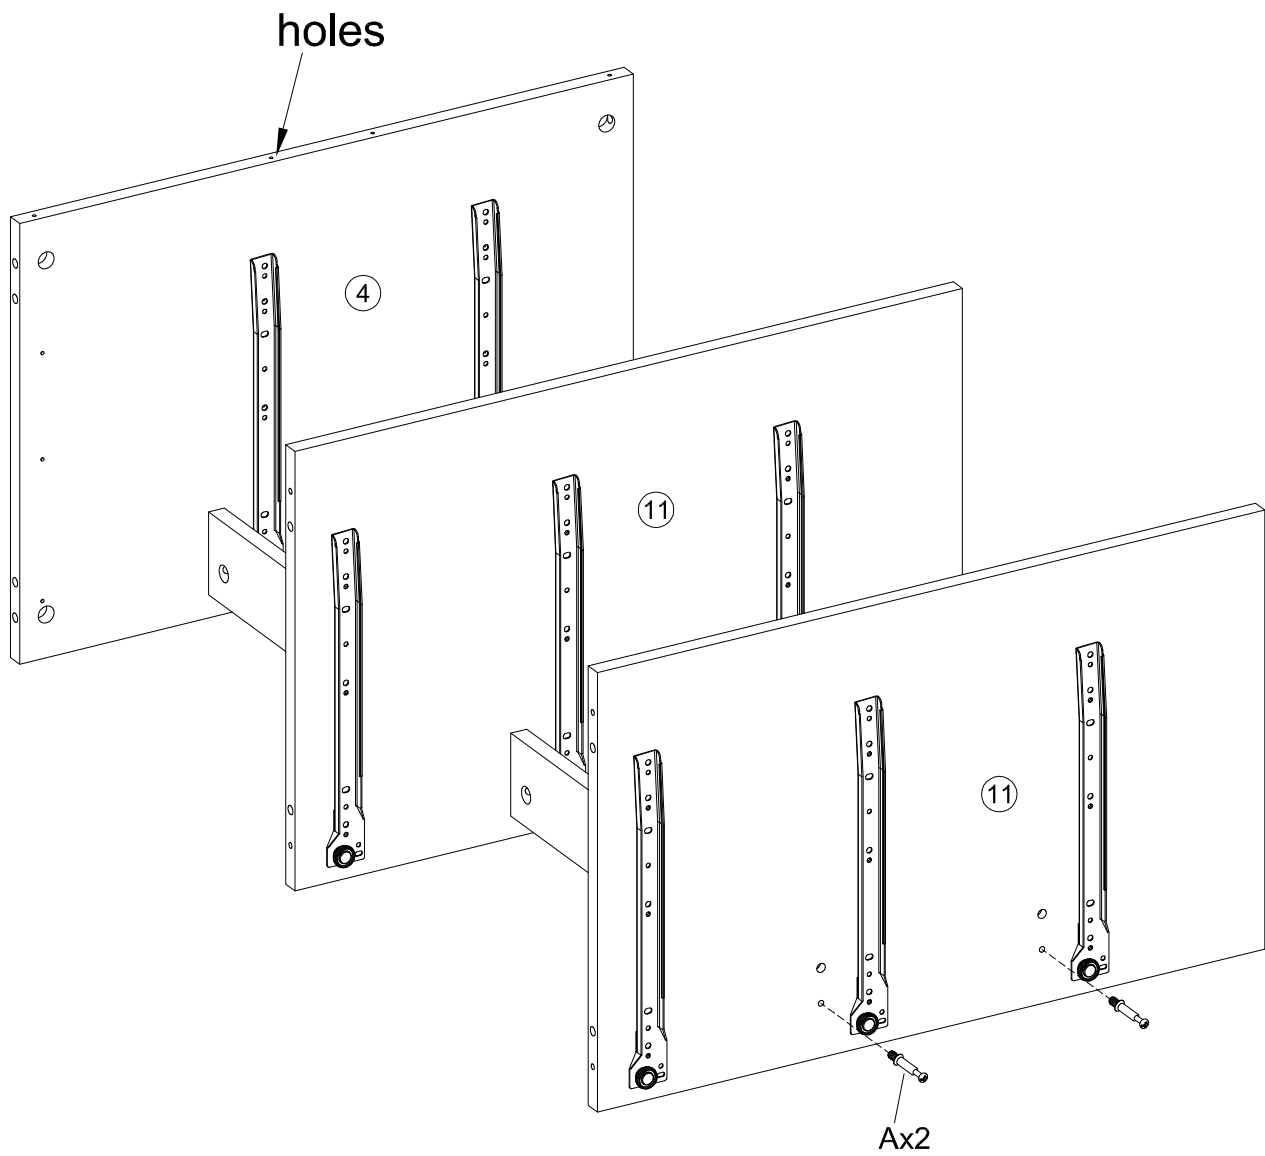


# STEP 9

Dx2

Bx2

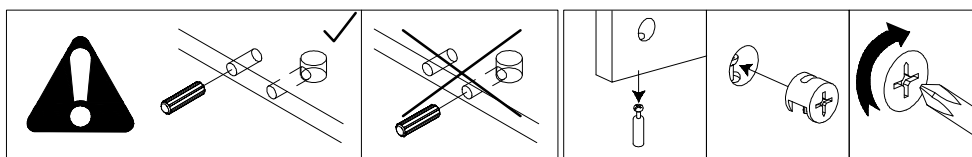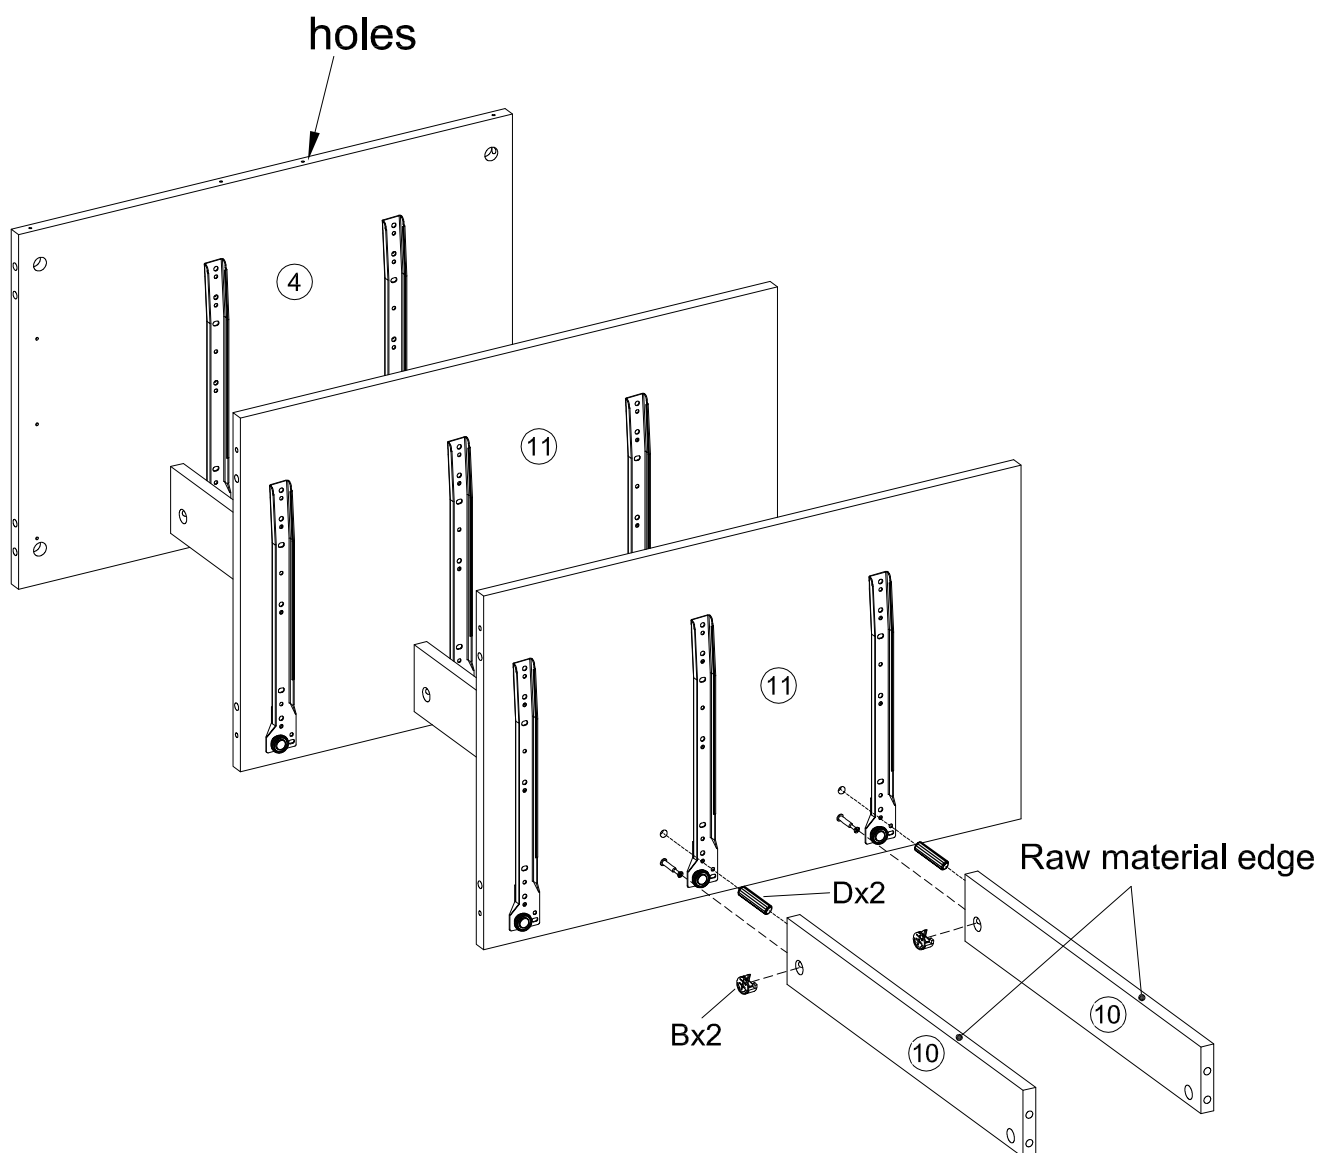

## STEP 10





Ax2



Kx2



Fx6

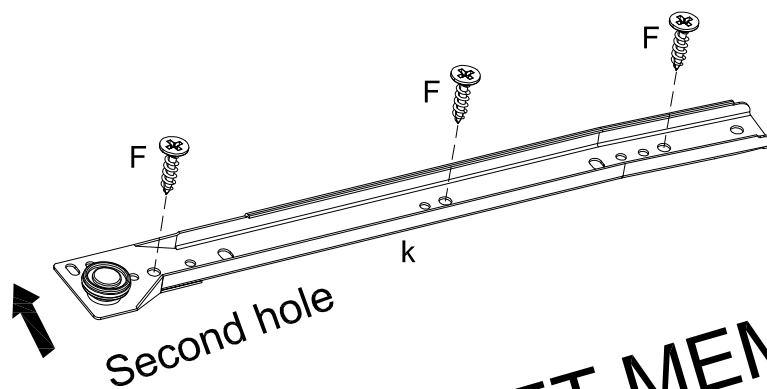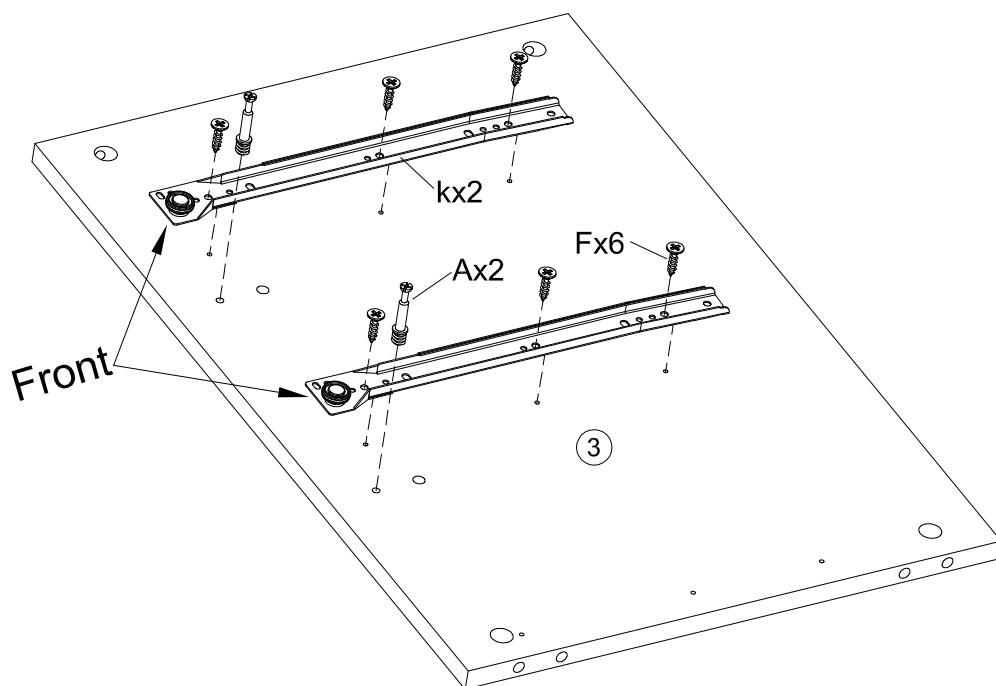

LEFT CABINET MEMBER



# STEP 11




Dx2




Bx2

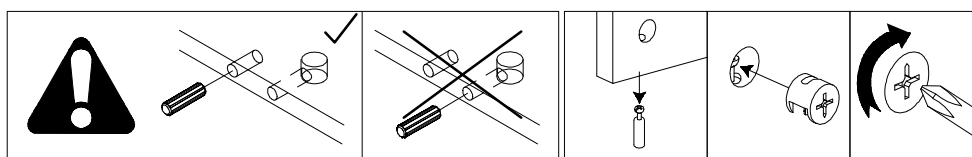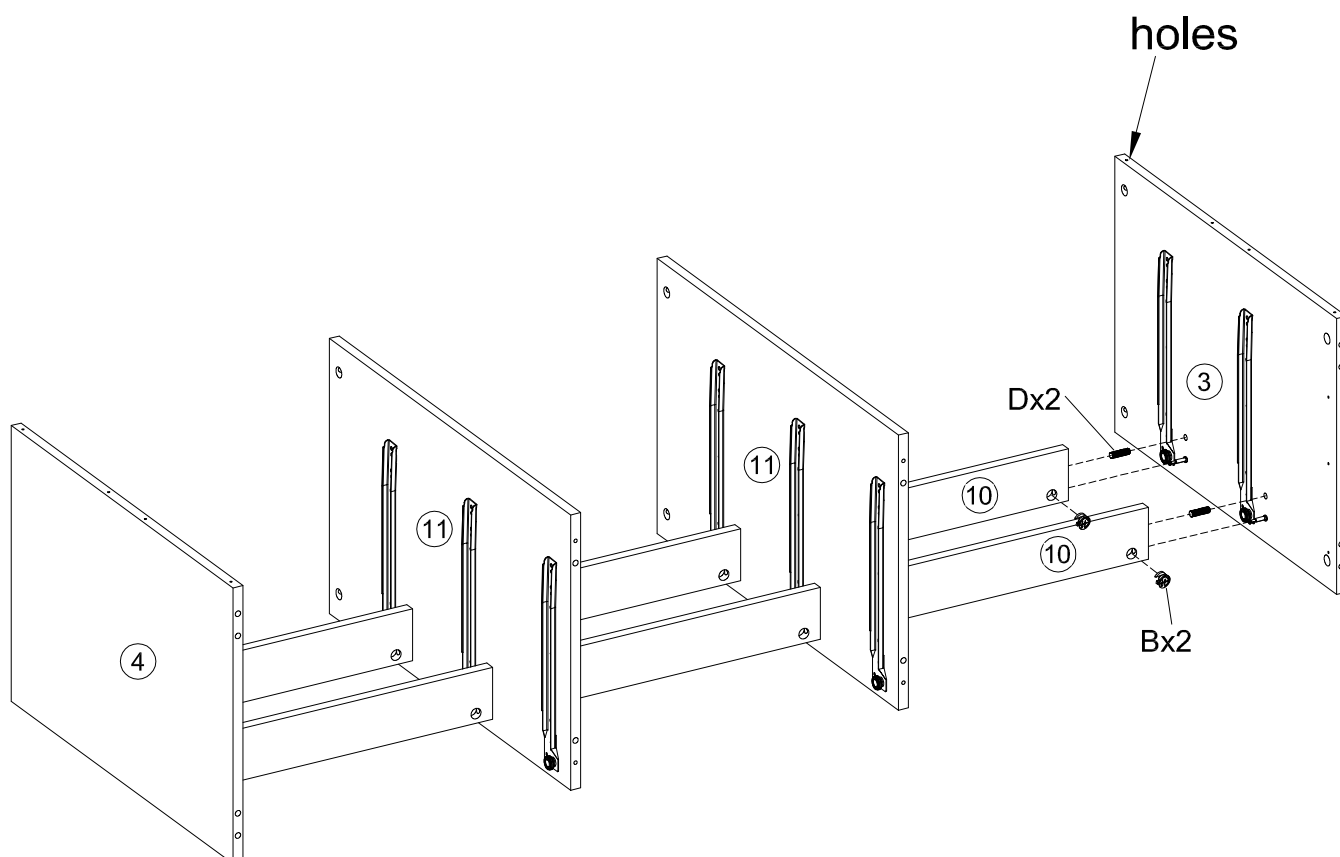


# STEP 12



Ax8



Rx2

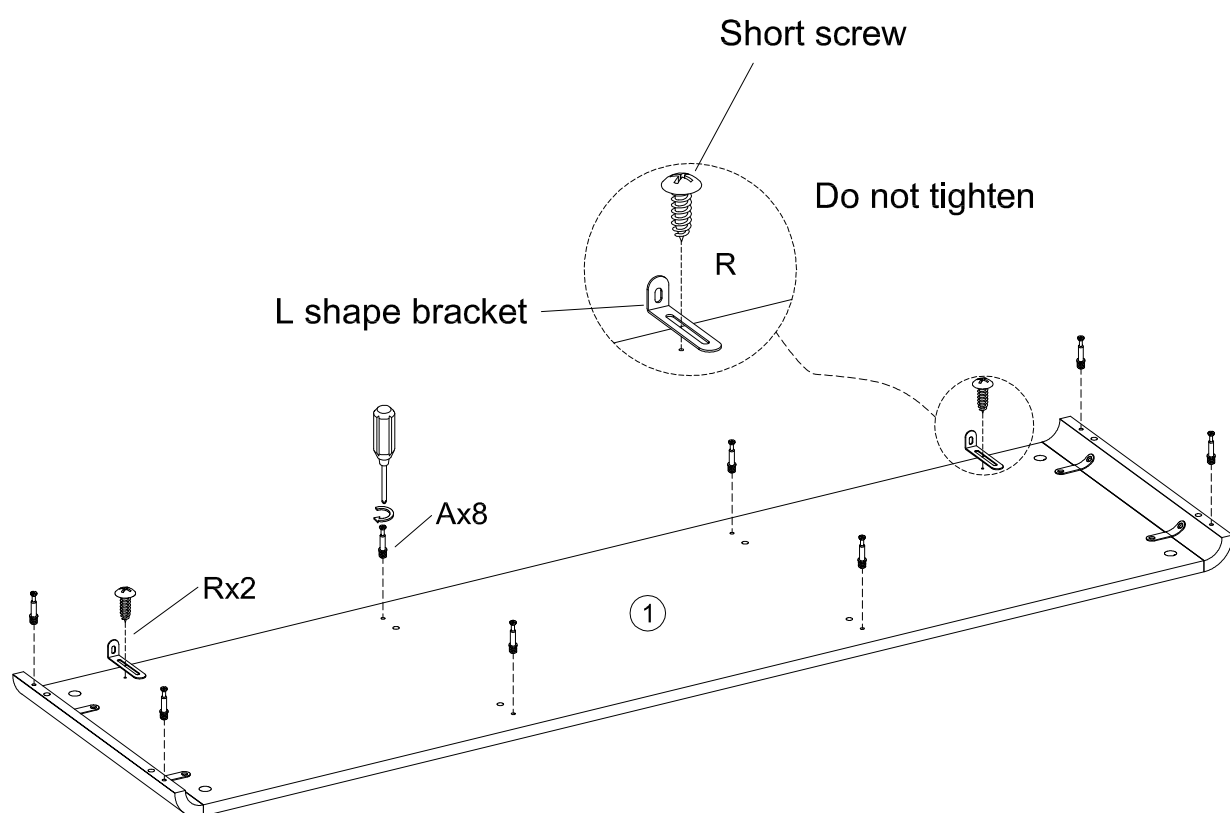





# STEP 13

  
Dx8

  
Bx8

Note the holes' direction.

Note the holes' direction.

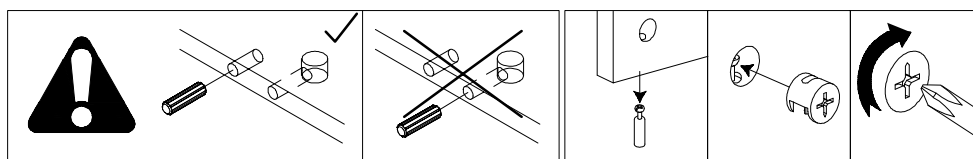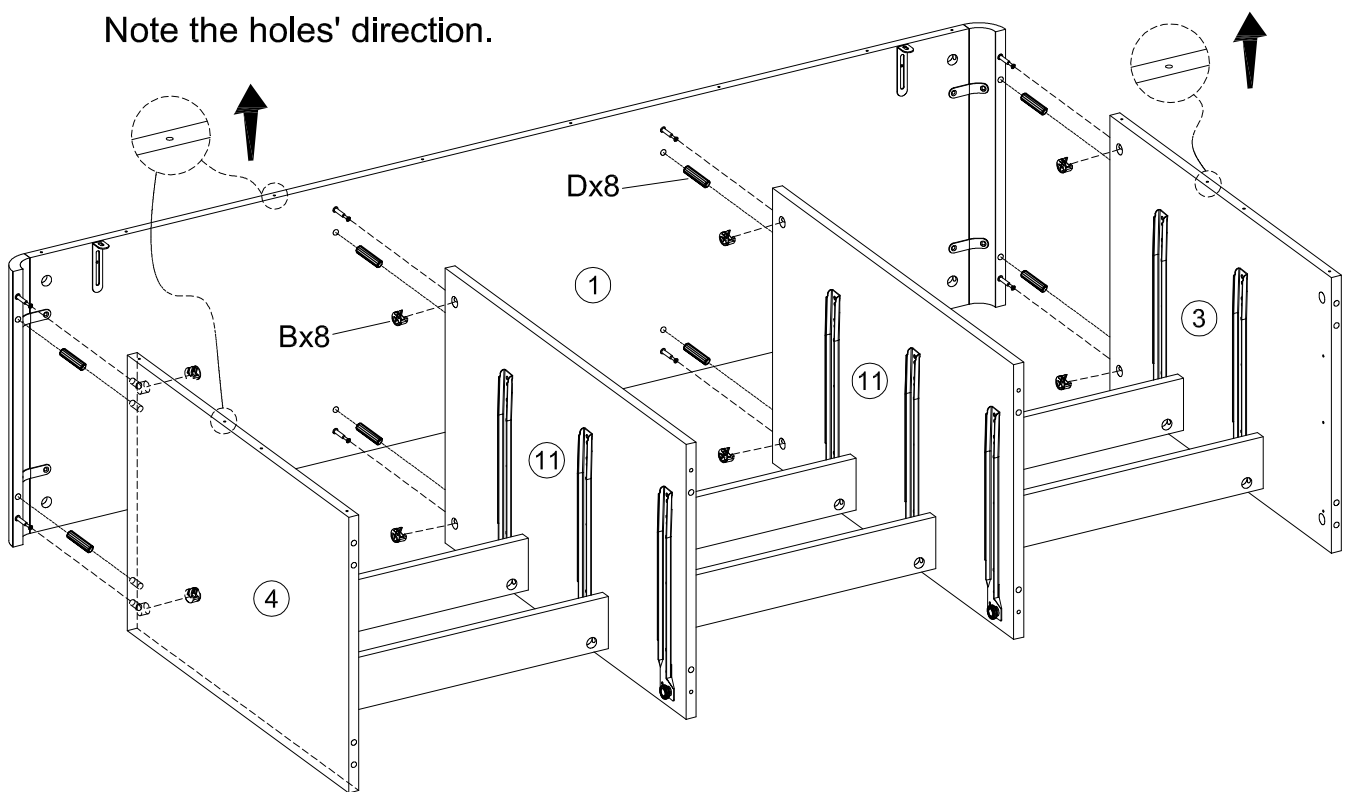


# STEP 14

Dx16

Hx1

Ix14

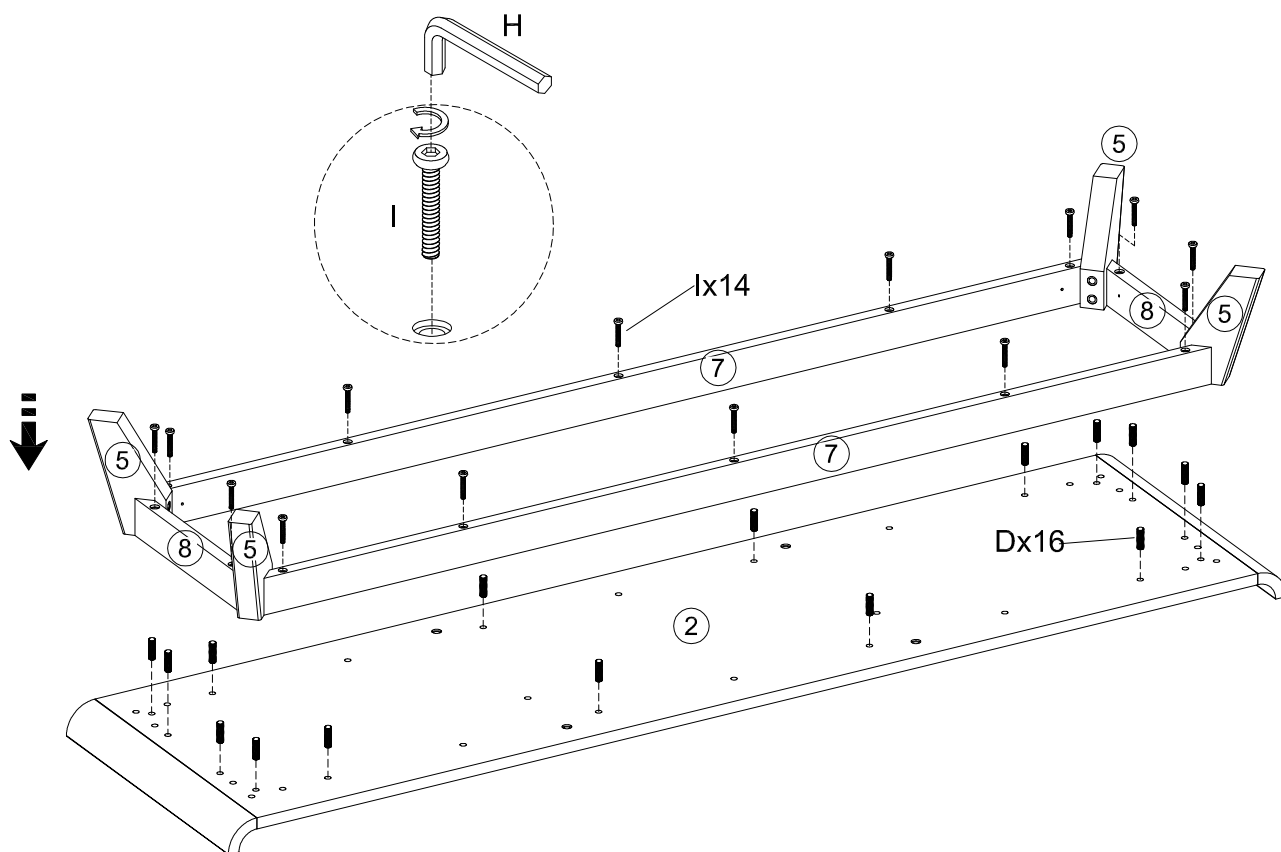

## STEP 15




Ox8



Px4



Hx1

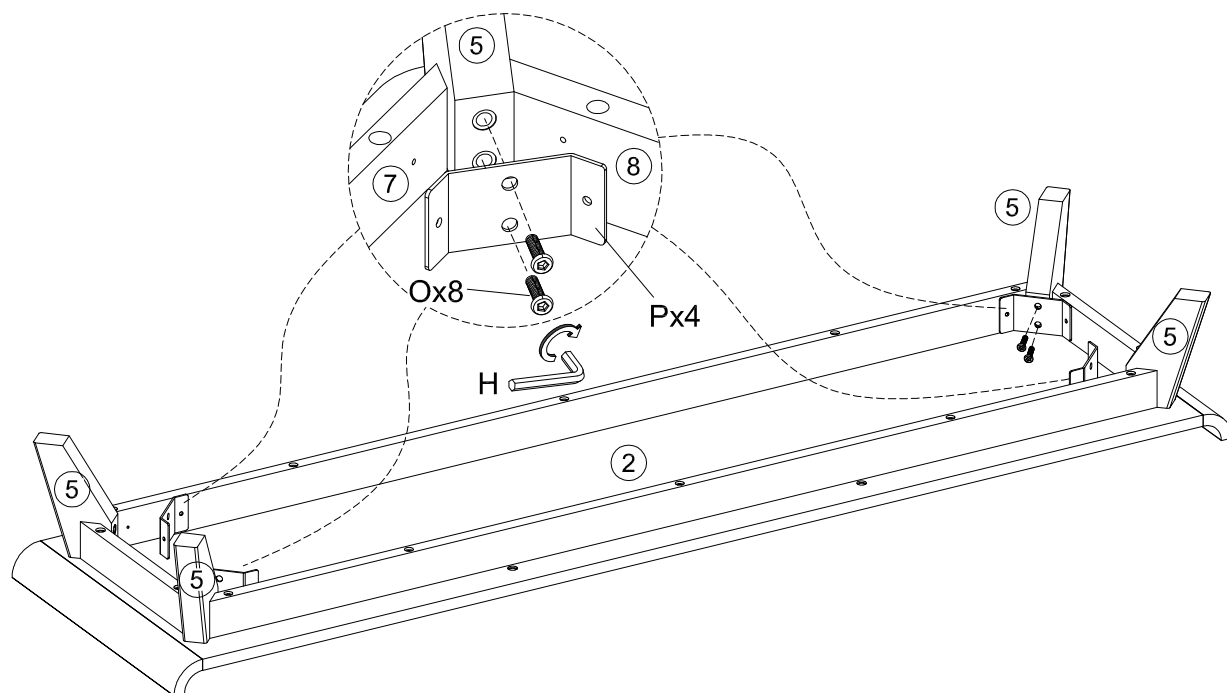


Note: Do not over tighten the bolts.


## STEP 16




Qx8

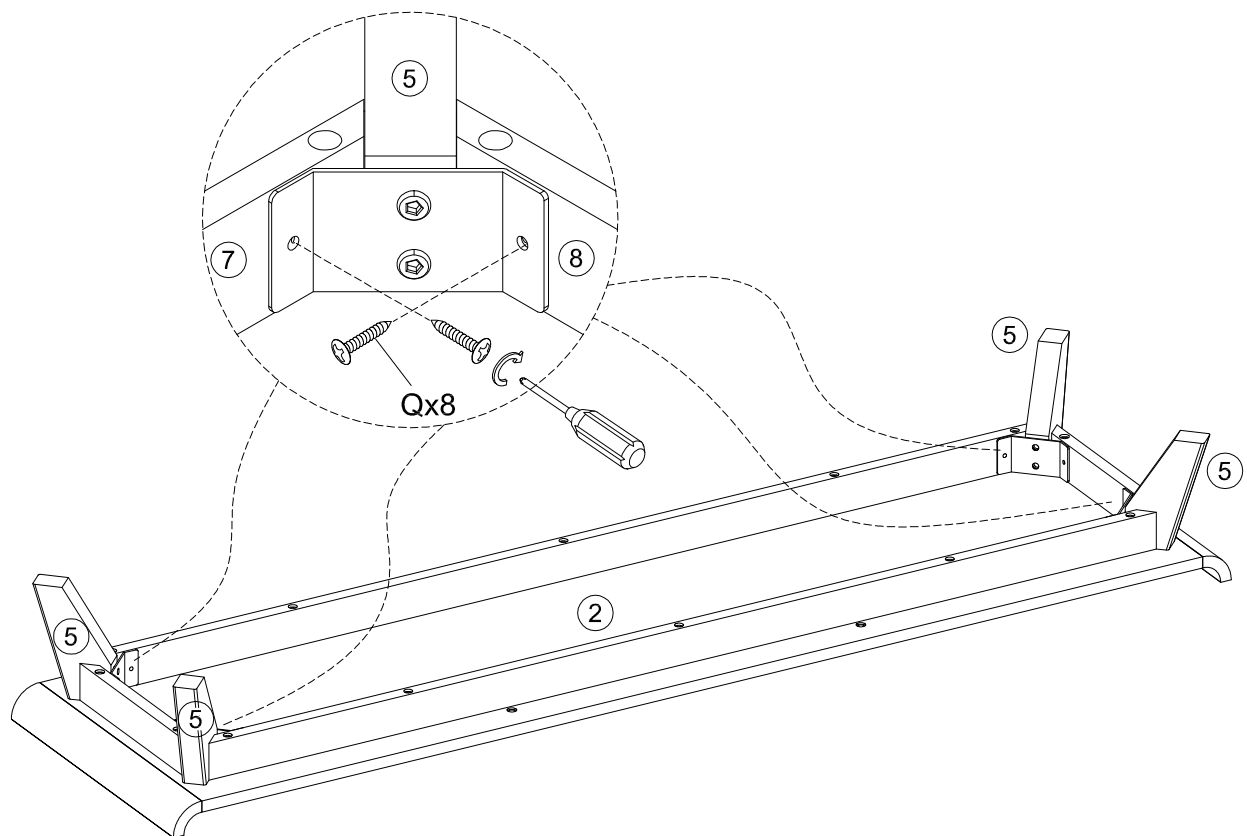

# STEP 17




Ax4




Jx4



Hx1

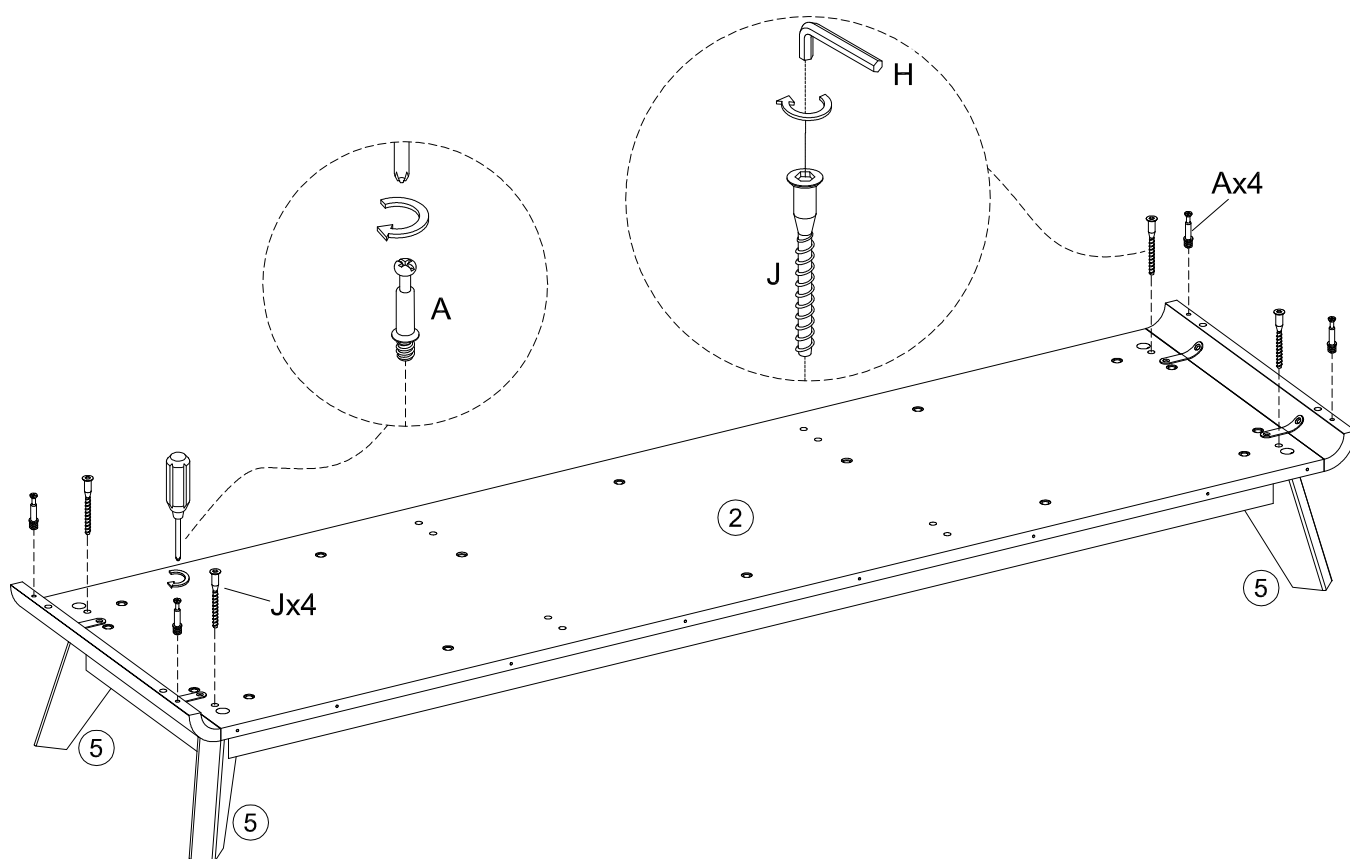


# STEP 18



Jx2



Hx1

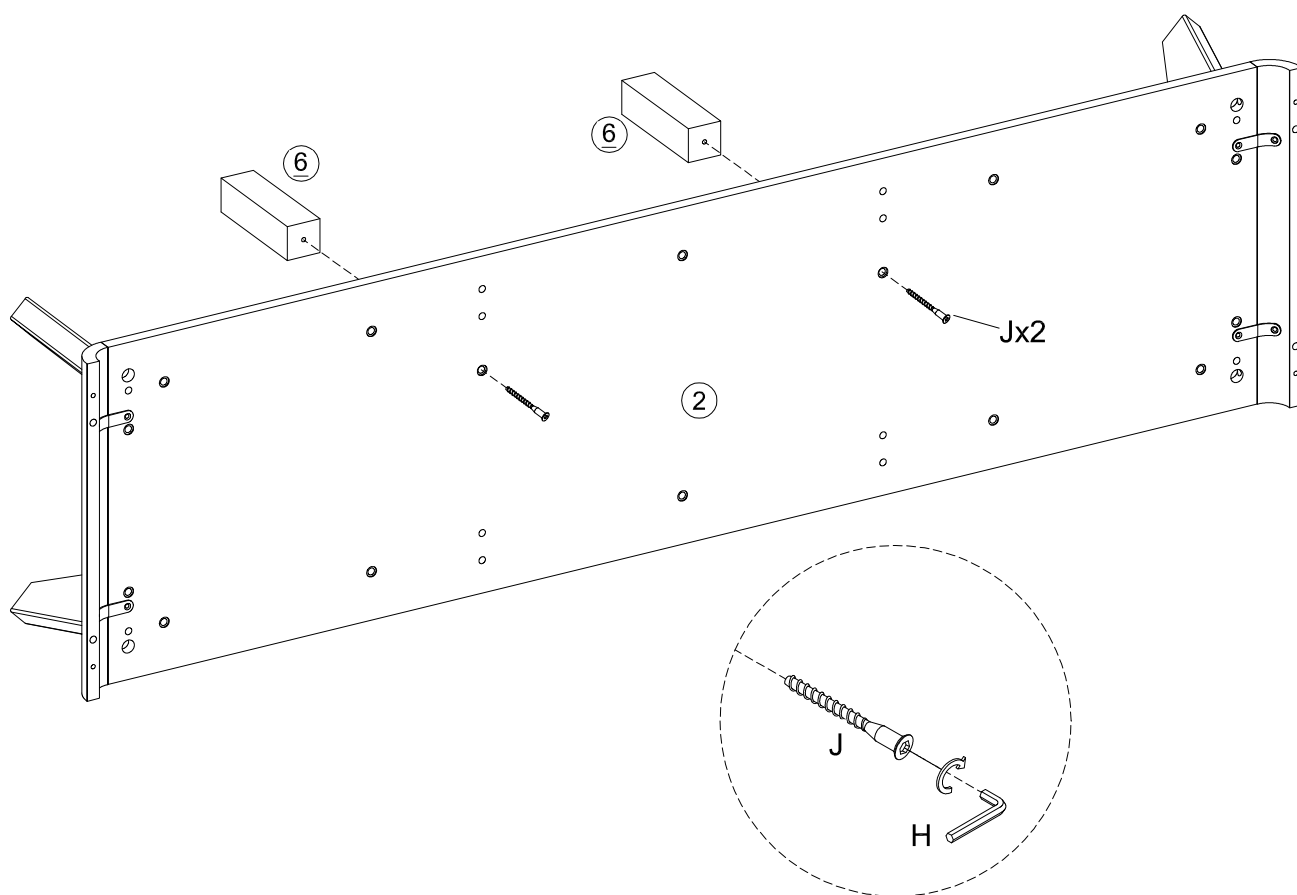


# STEP 19



Dx8





Bx4



Jx4



Hx1

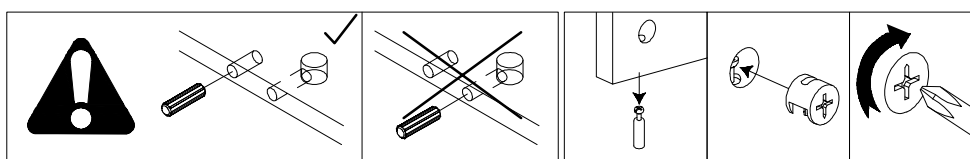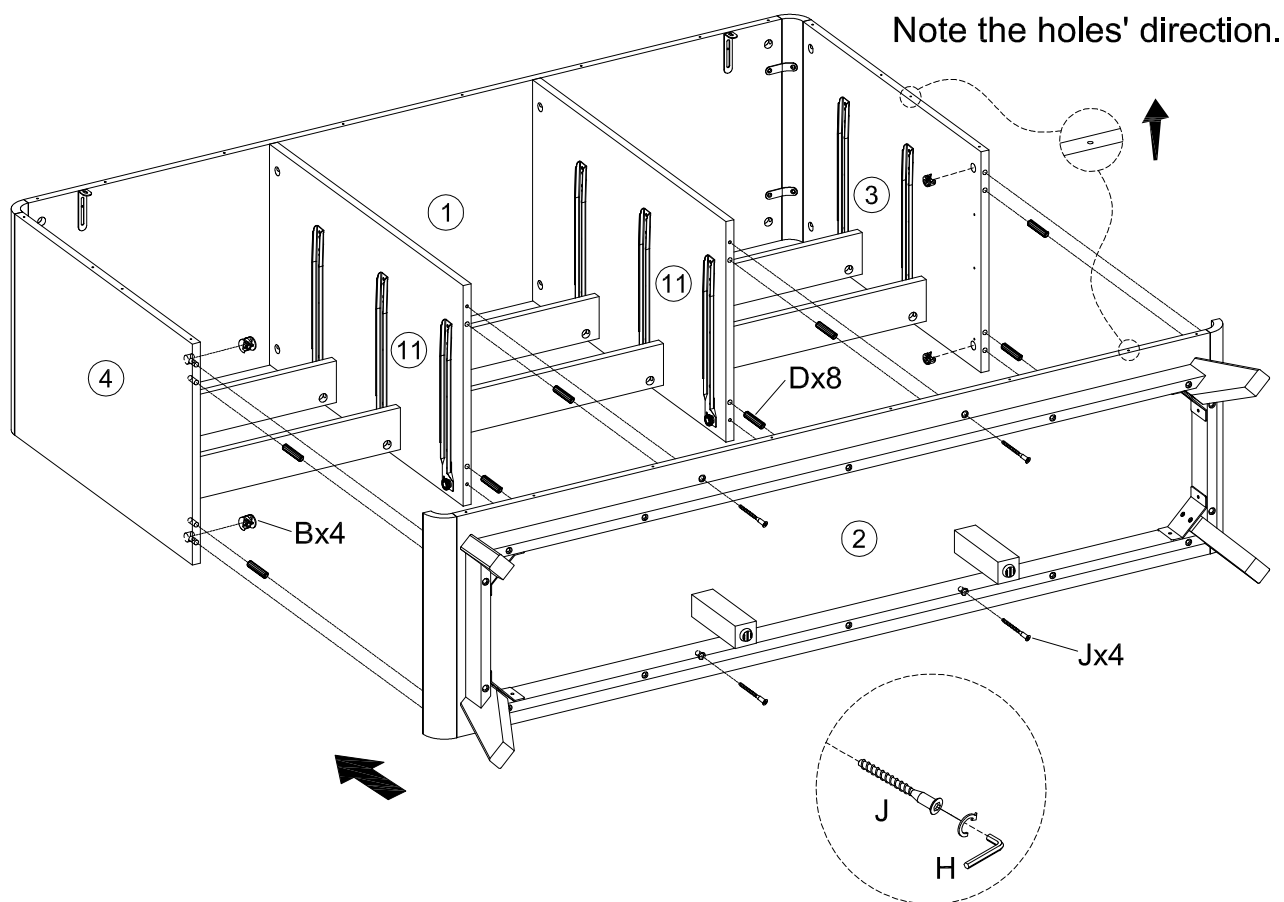


## STEP 20



Sx32

Note the holes' direction.

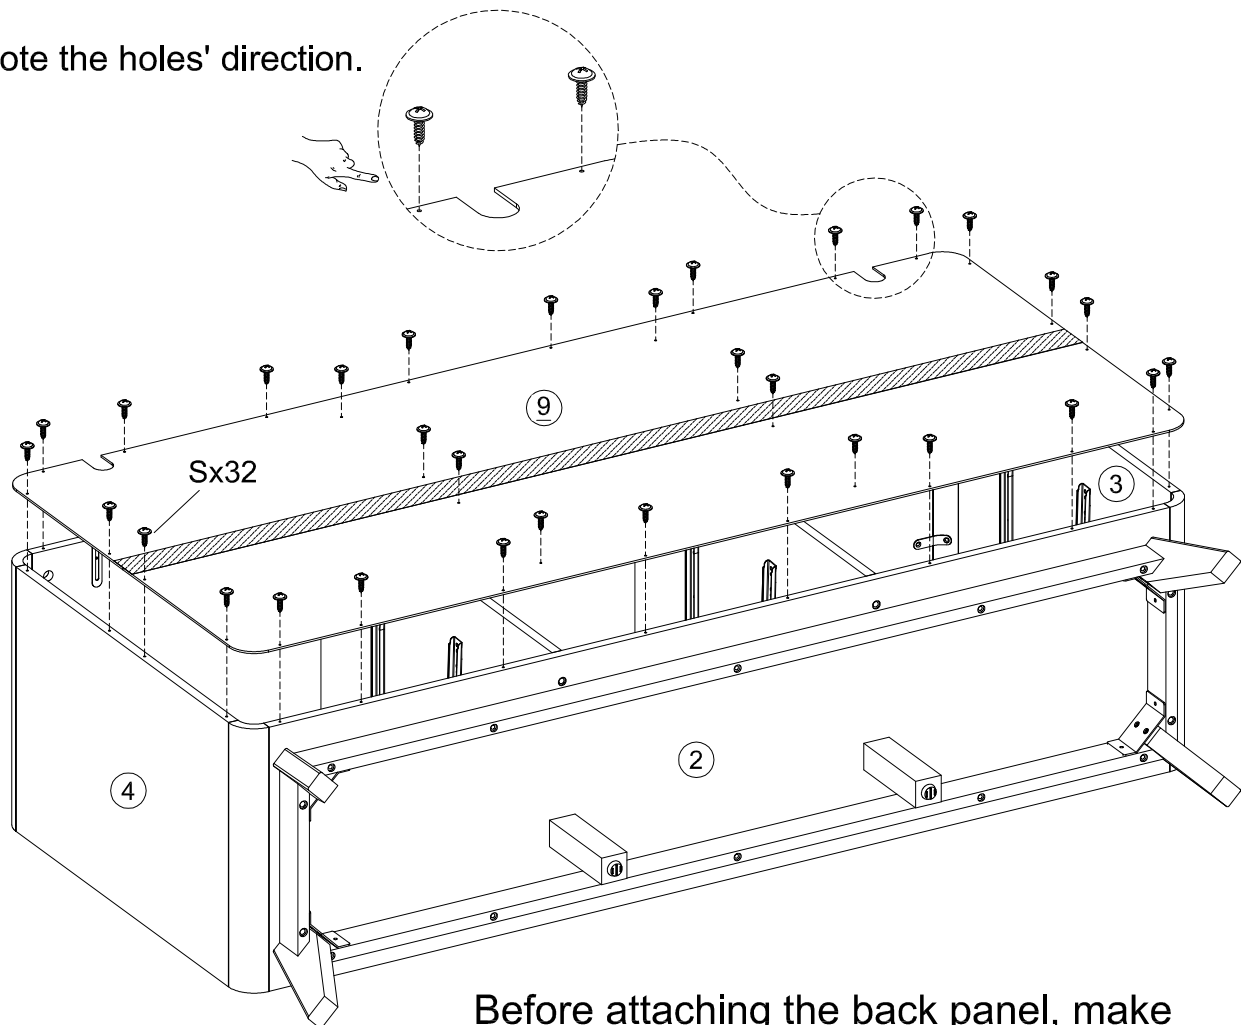

Before attaching the back panel, make sure that it is square to the unit.





# STEP 21



Lx1



Fx3

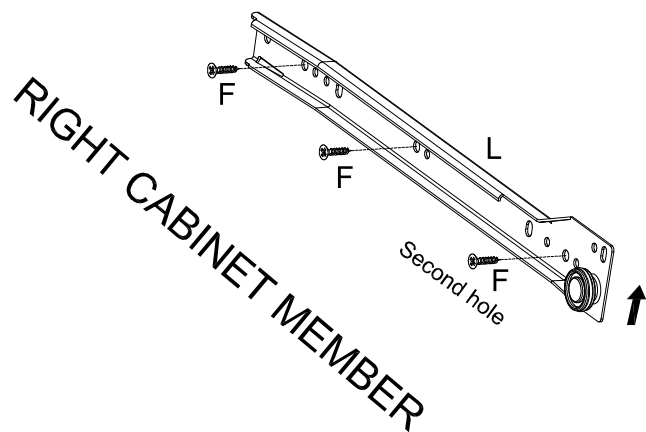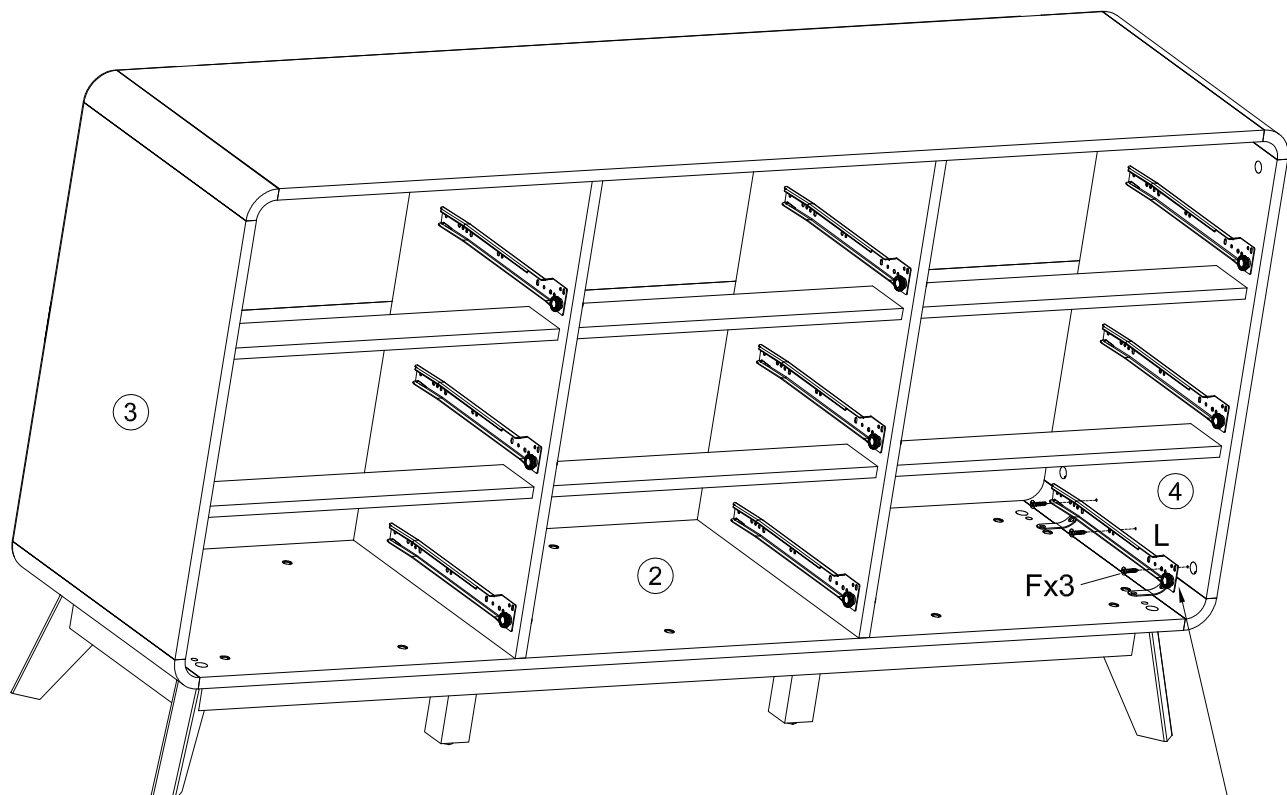


## STEP 22




Kx1



Fx3

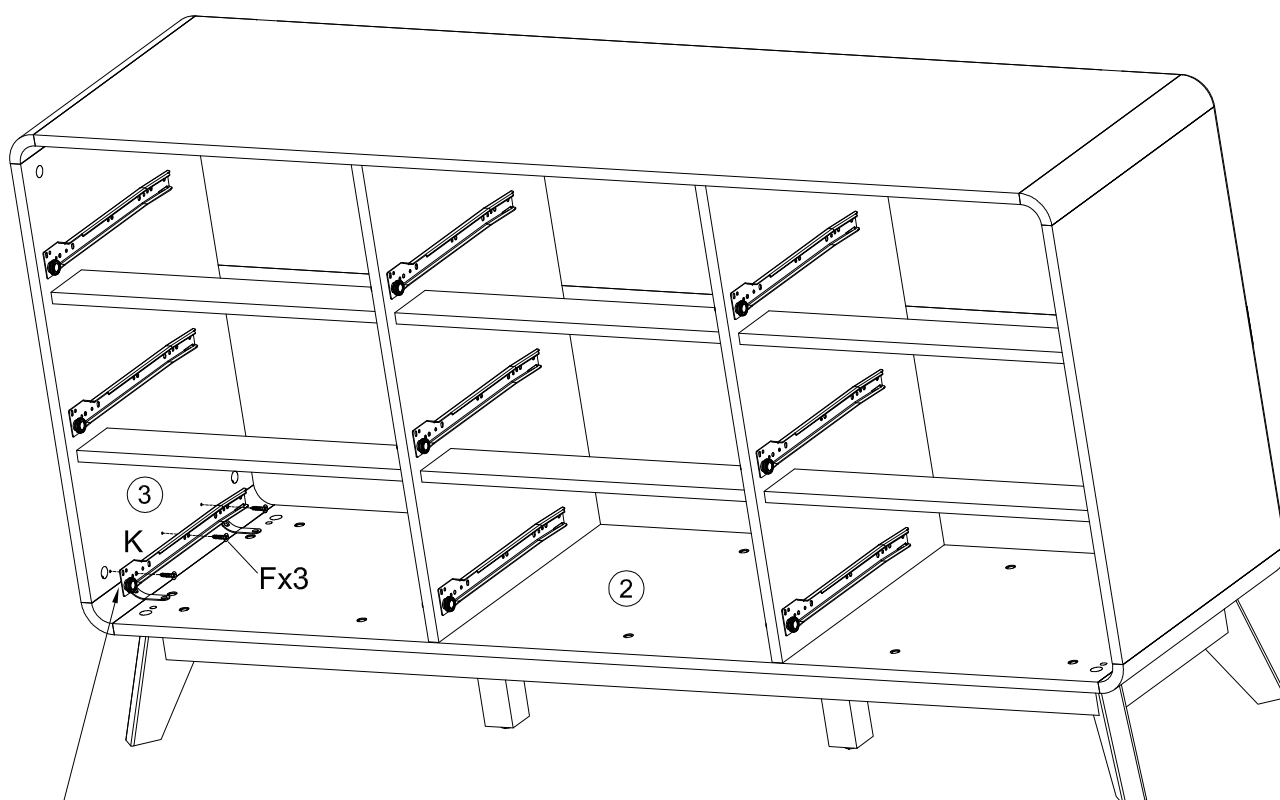


Front

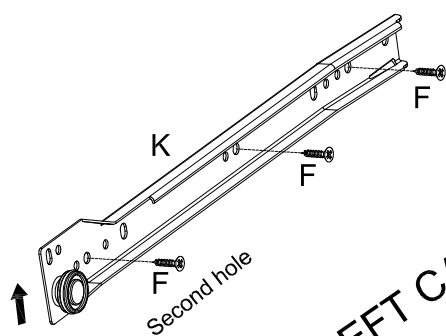



LEFT CABINET MEMBER

## STEP 23

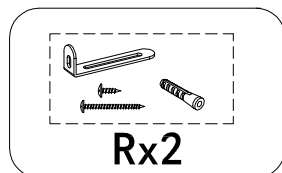

### WARNING


Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

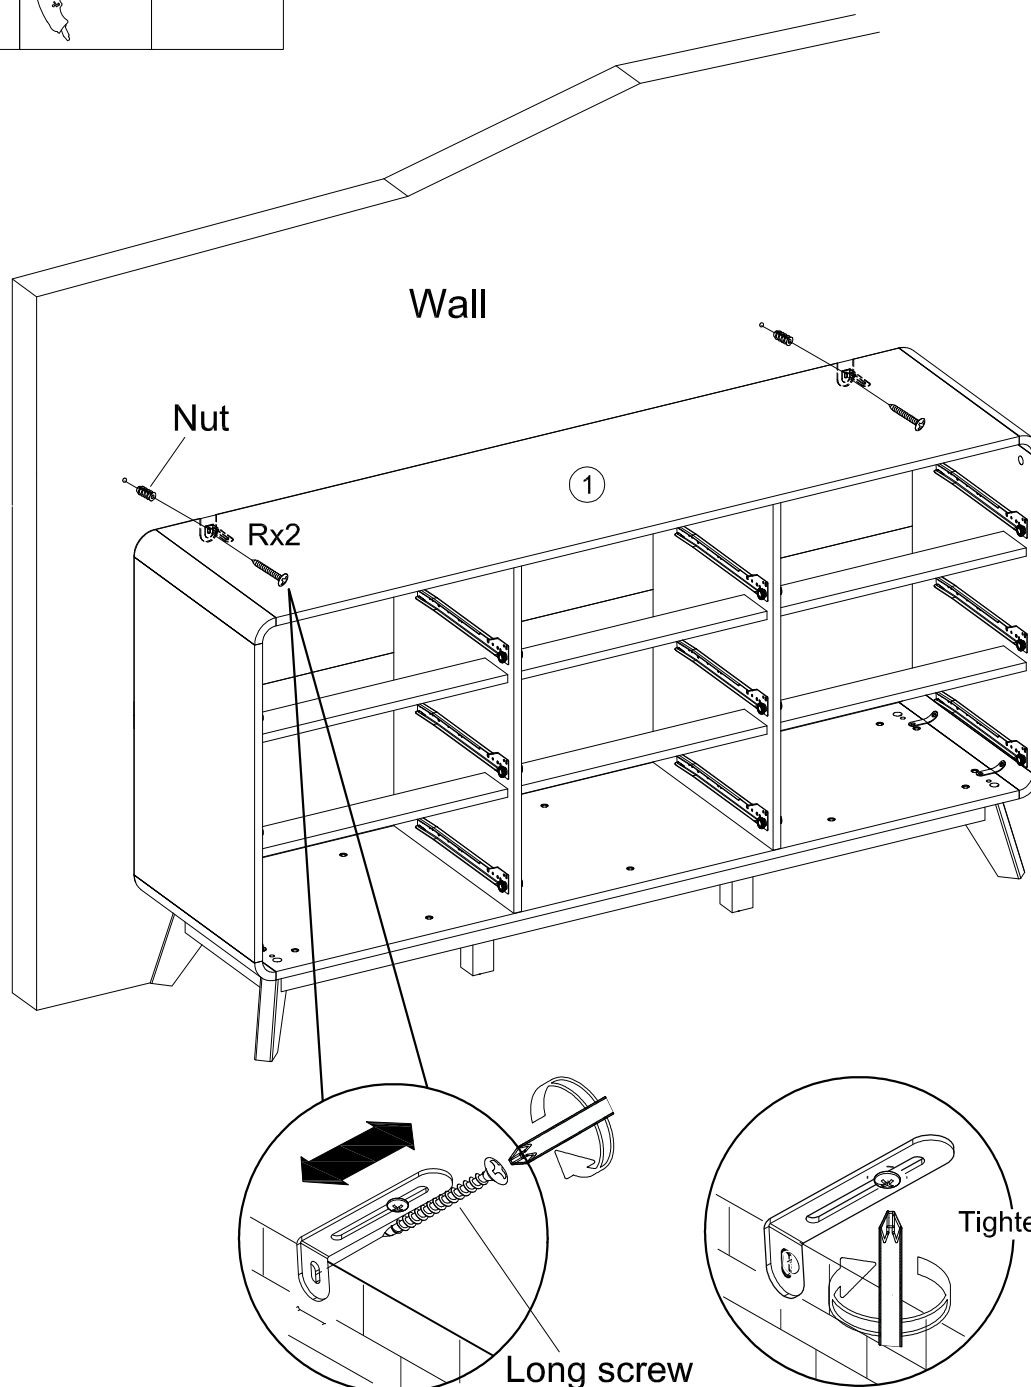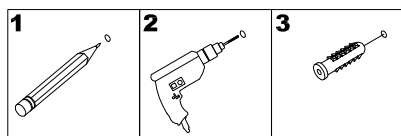


## STEP 24




Gx36

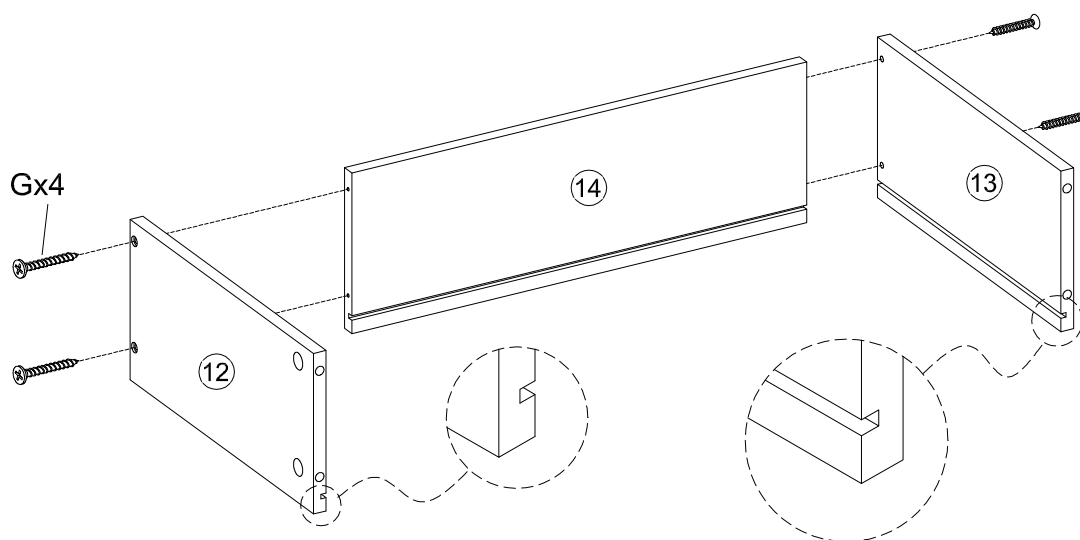

x9

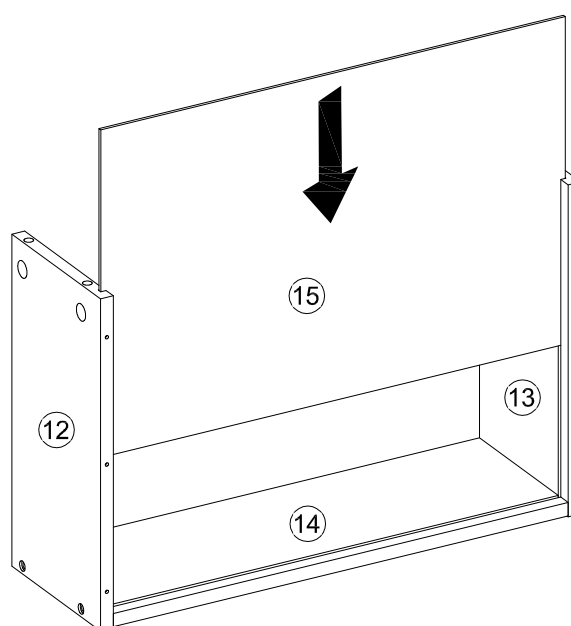




# STEP 25



Ax36



Bx36

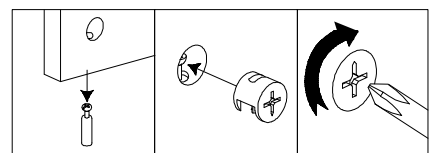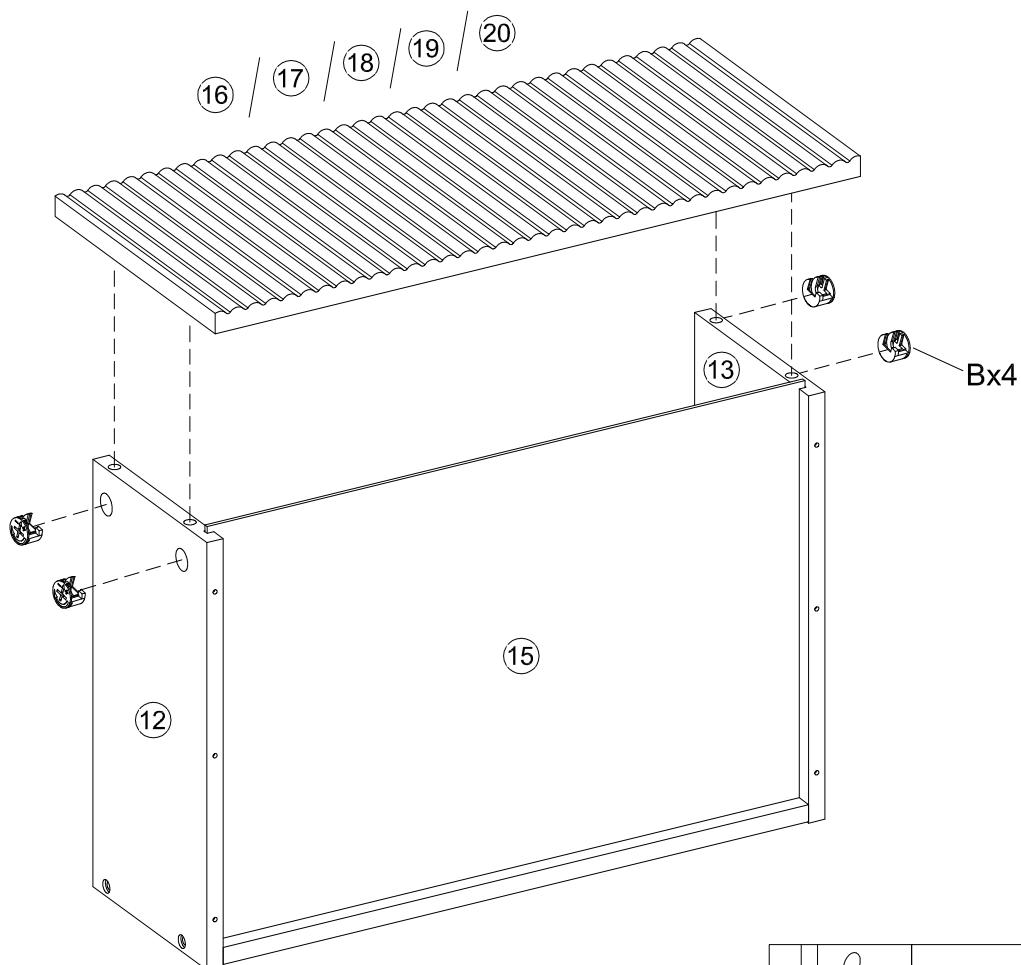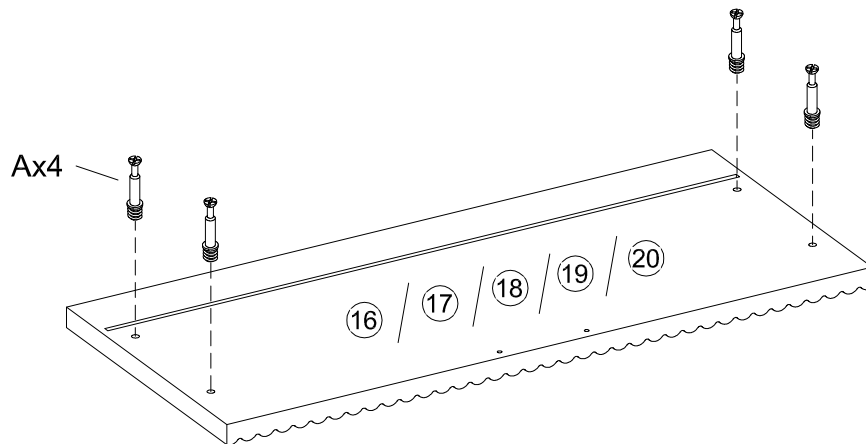

# STEP 26




Fx72






Mx9



Nx9






Ex9

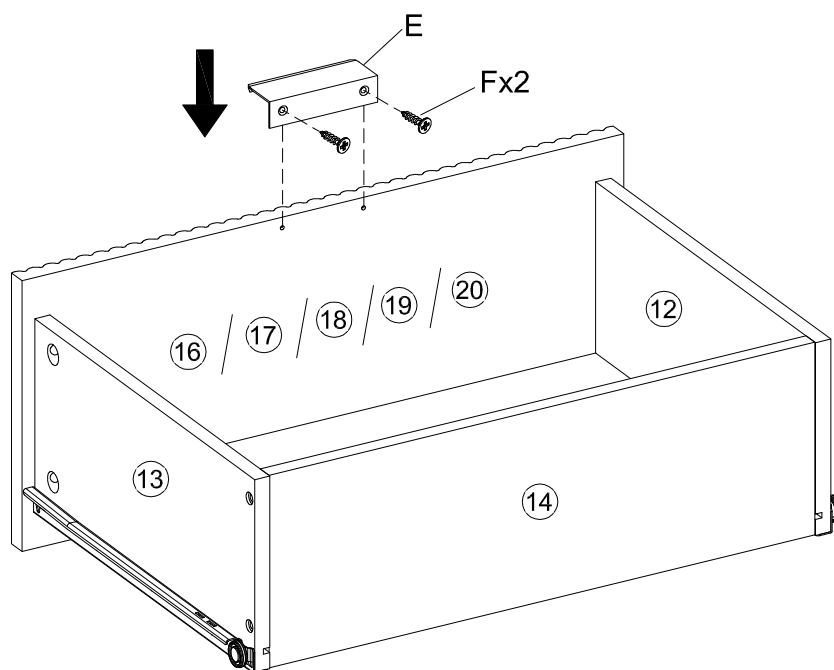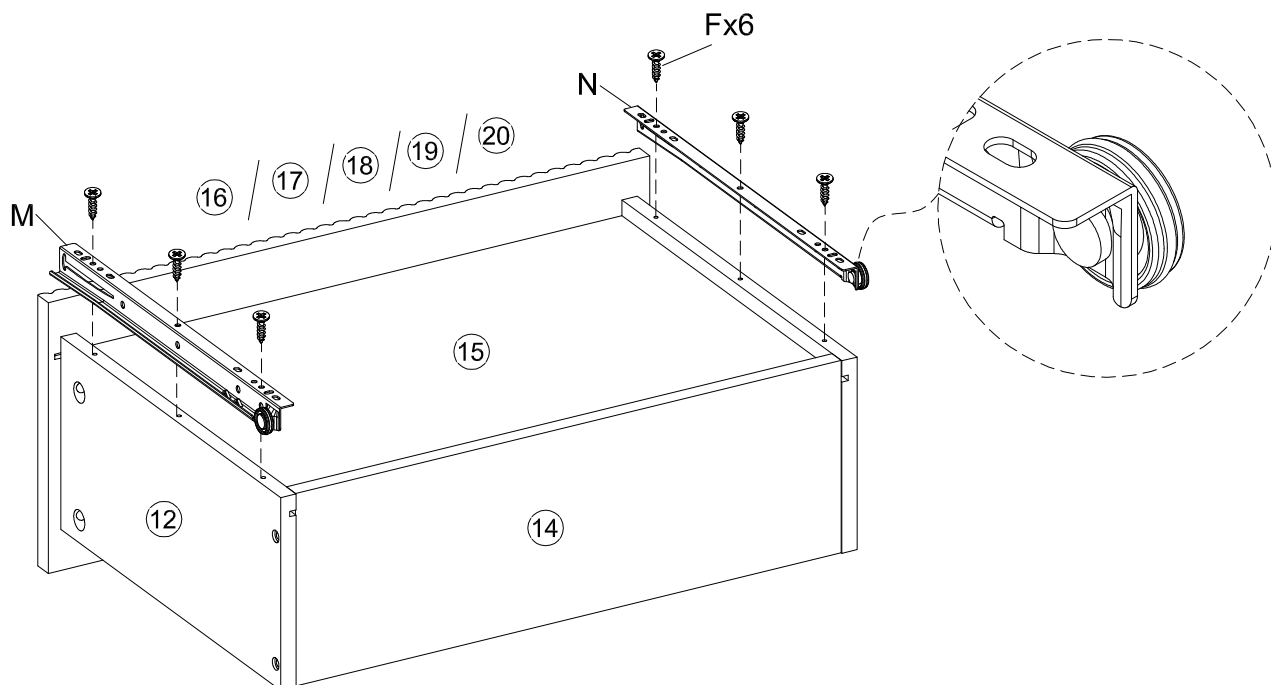



## STEP 27

Warm tip: Never put these drawers in the **WRONG** place, otherwise the drawers will **NOT WORK**. Please follow the instructions to put the drawers in the right place.

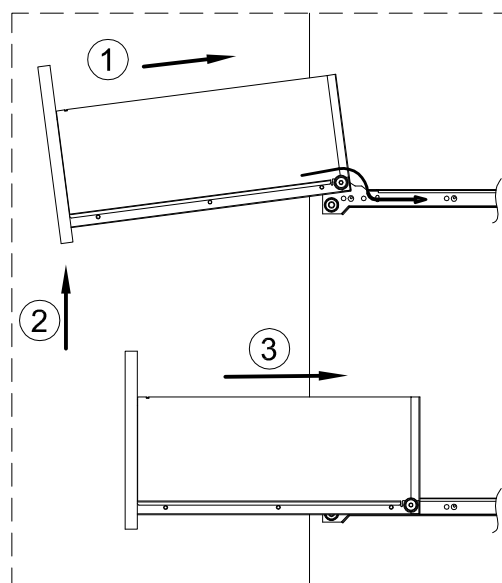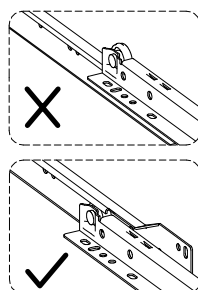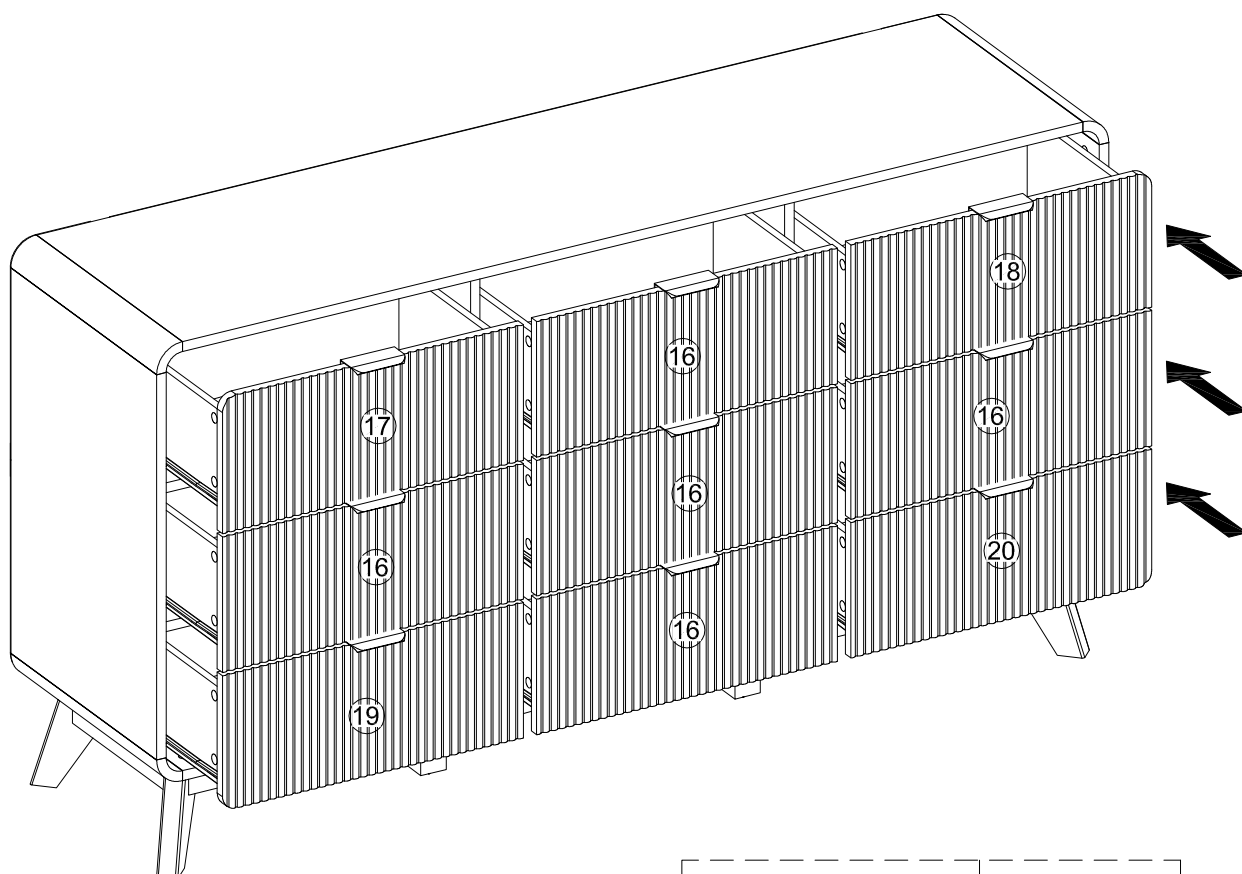


## STEP 28

○  
Cx60

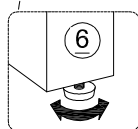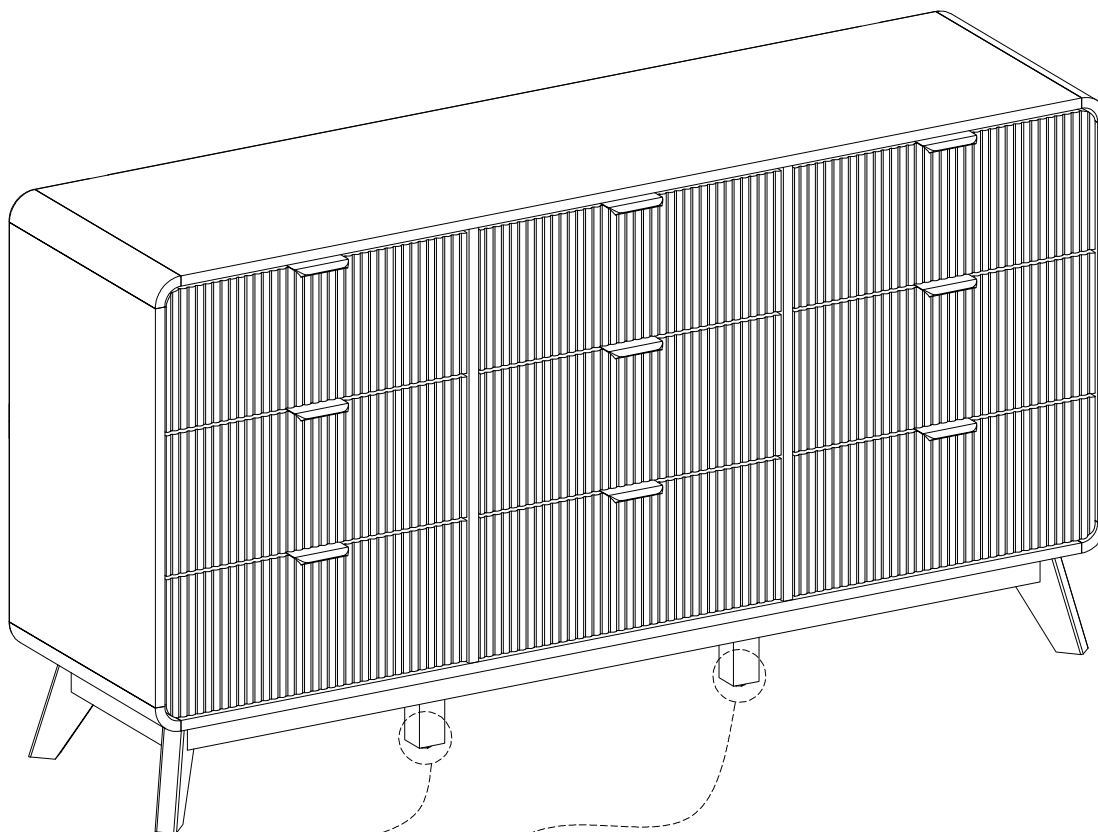

If necessary adjust the floor leveler at the bottom of the leg to level the unit.

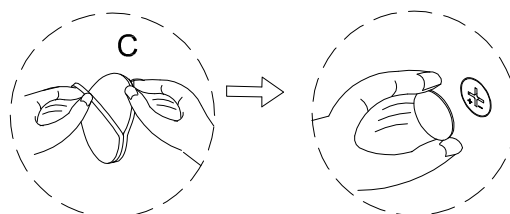

· Stick stickers (C) on cam locks (B).

### Final Assembly