

Installation & Assembly

Note:

A packet with complete set of hardware can be found by pulling the red ribbon that's easily visible upon opening the box.

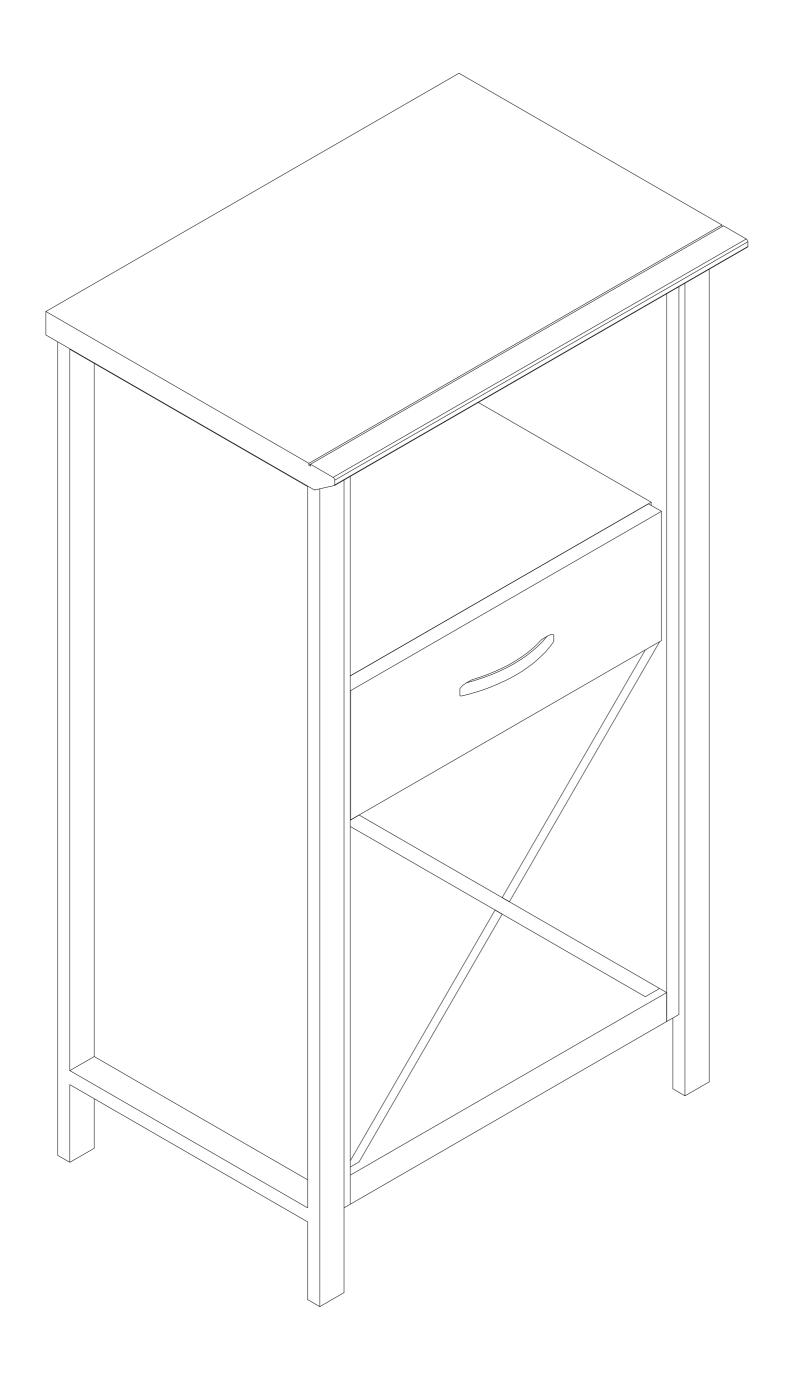


Α	Top Panel		1
В	Left Side Panel		1
С	Right Side Panel		1
D	Drawer box		1
E	X-rack panels		2
F	Bottom Panel		1
G	Back Panel		1
Н	Allen Wrench		1
I	Long Bolts	(b) / ///////////////////////////////////	12
J	Lock Washers		12
K	Flat Washers		12
L	Drawer Pull		1
М	Machine Screws		2
N	Screws		16
0	Wood Dowels		12

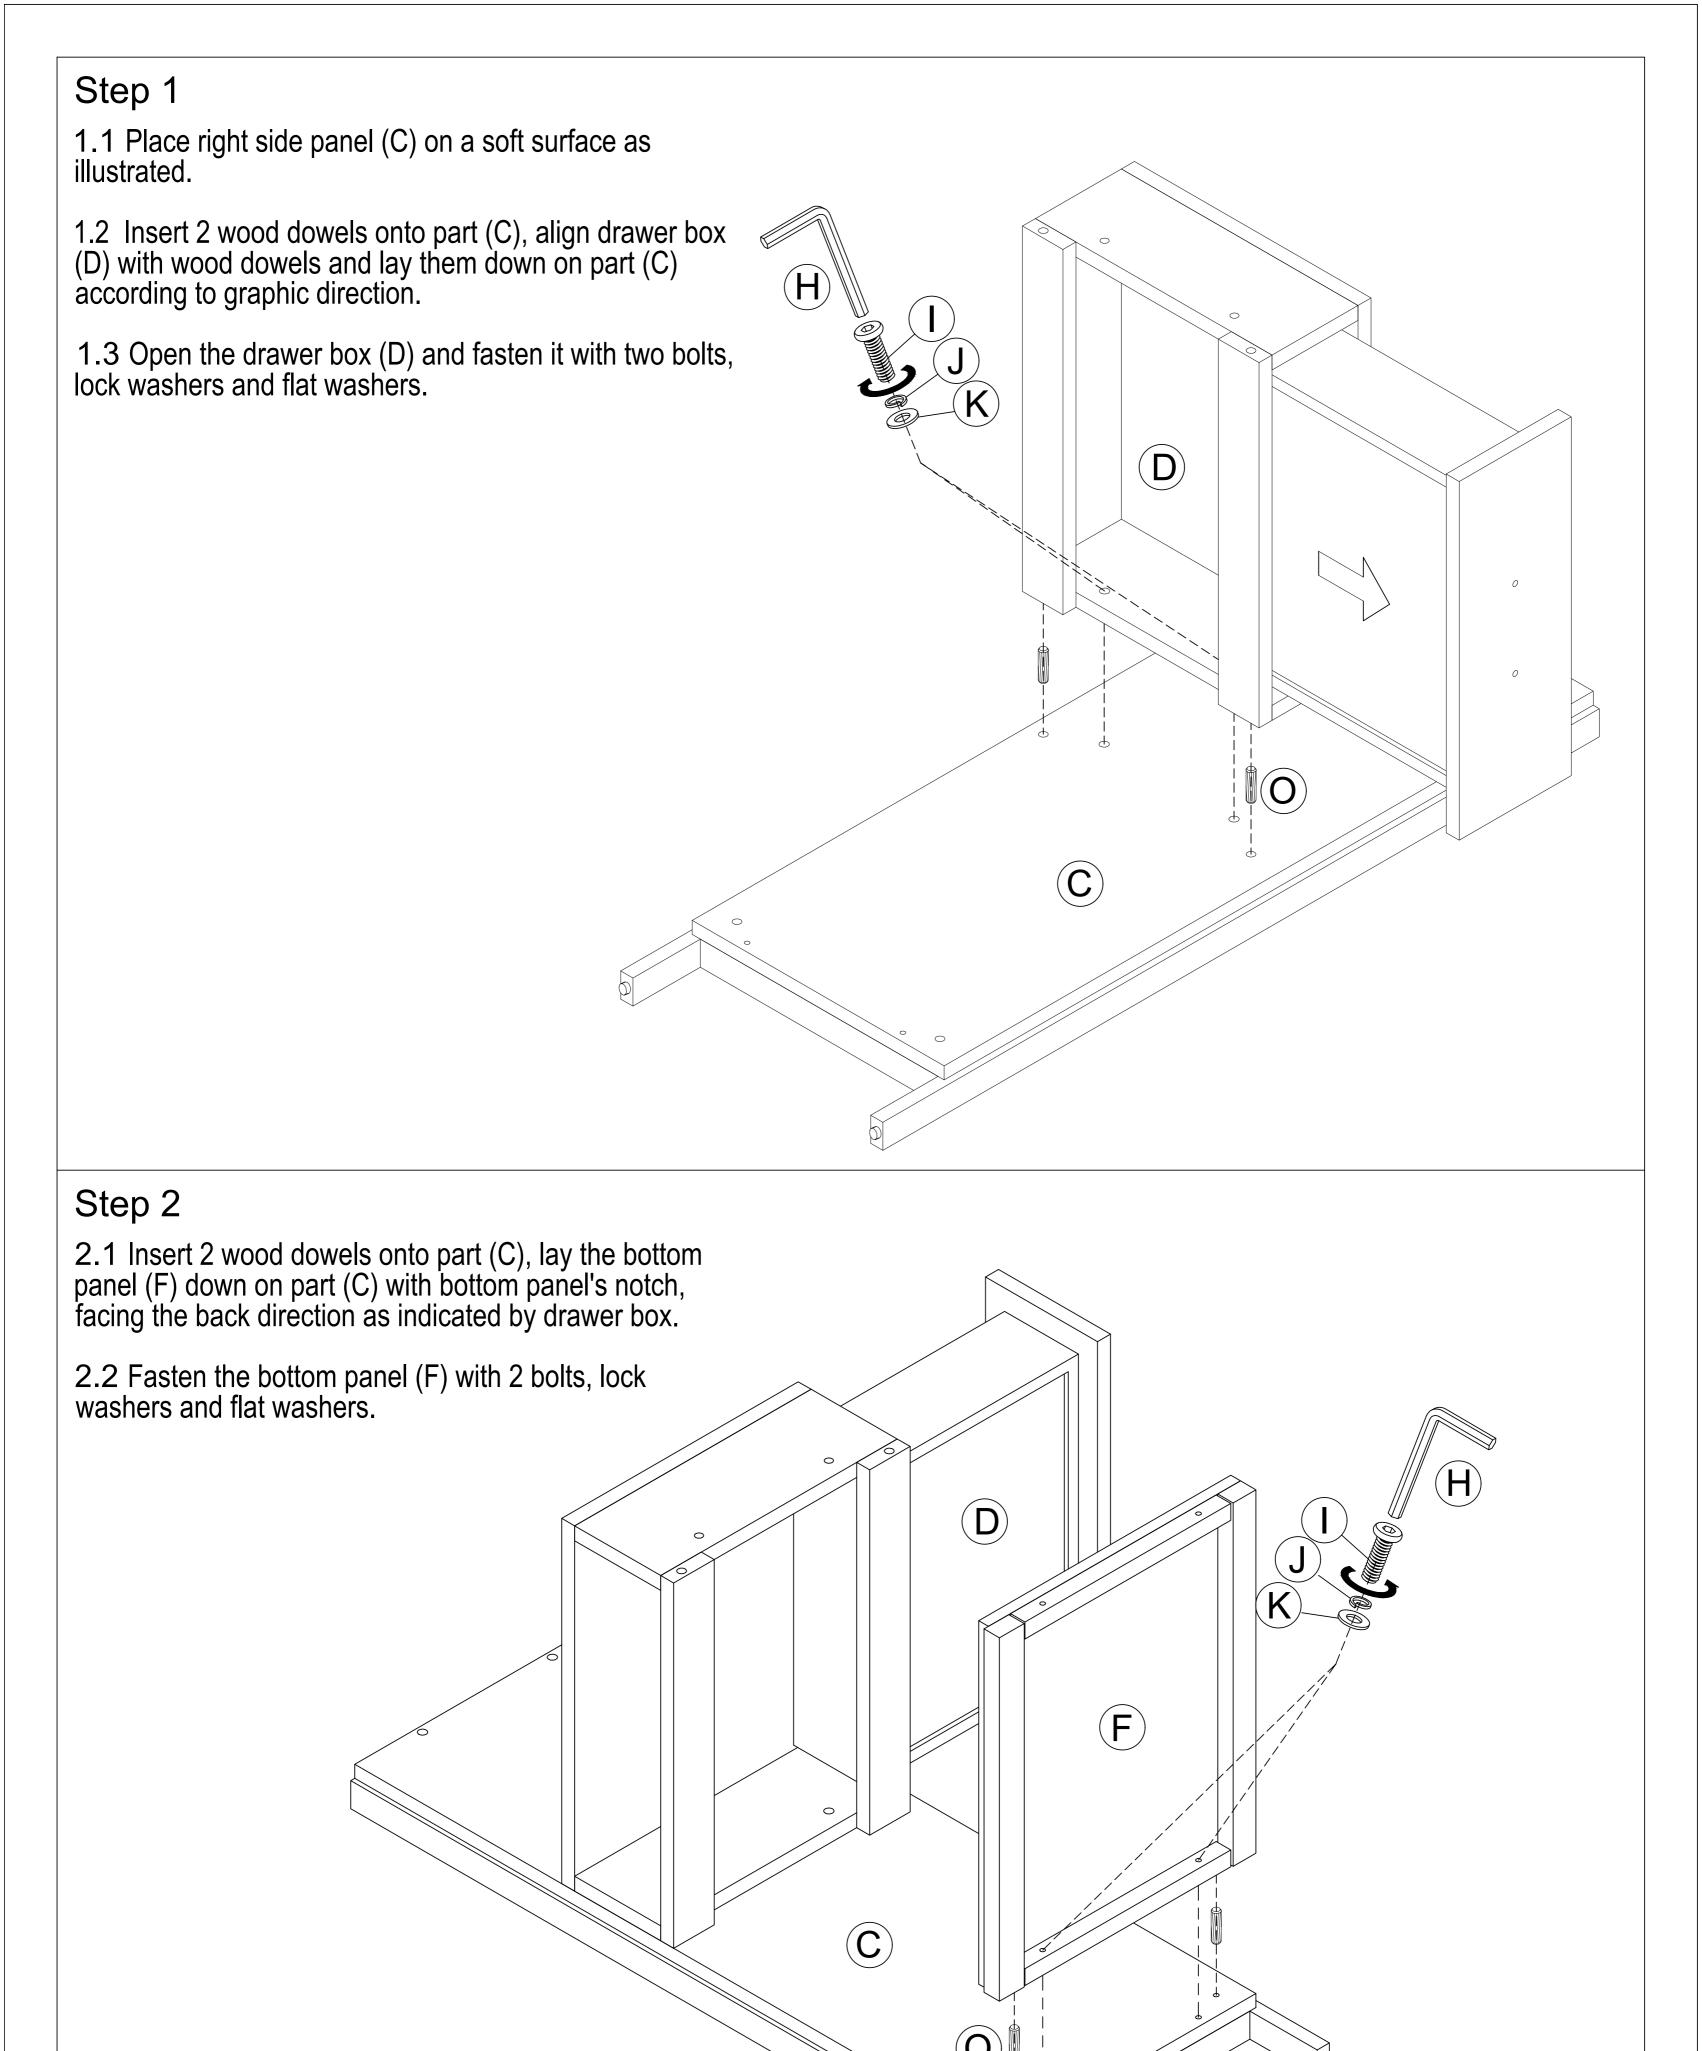

Step 3


3.1 Insert each 2 wood dowels on bottom shelf and drawer box, align the left side panel (B) into wood dowels.

3.2 Fasten the left side panel (B) onto bottom shelf and drawer box with 4 bolts, lock washers and flat washers.

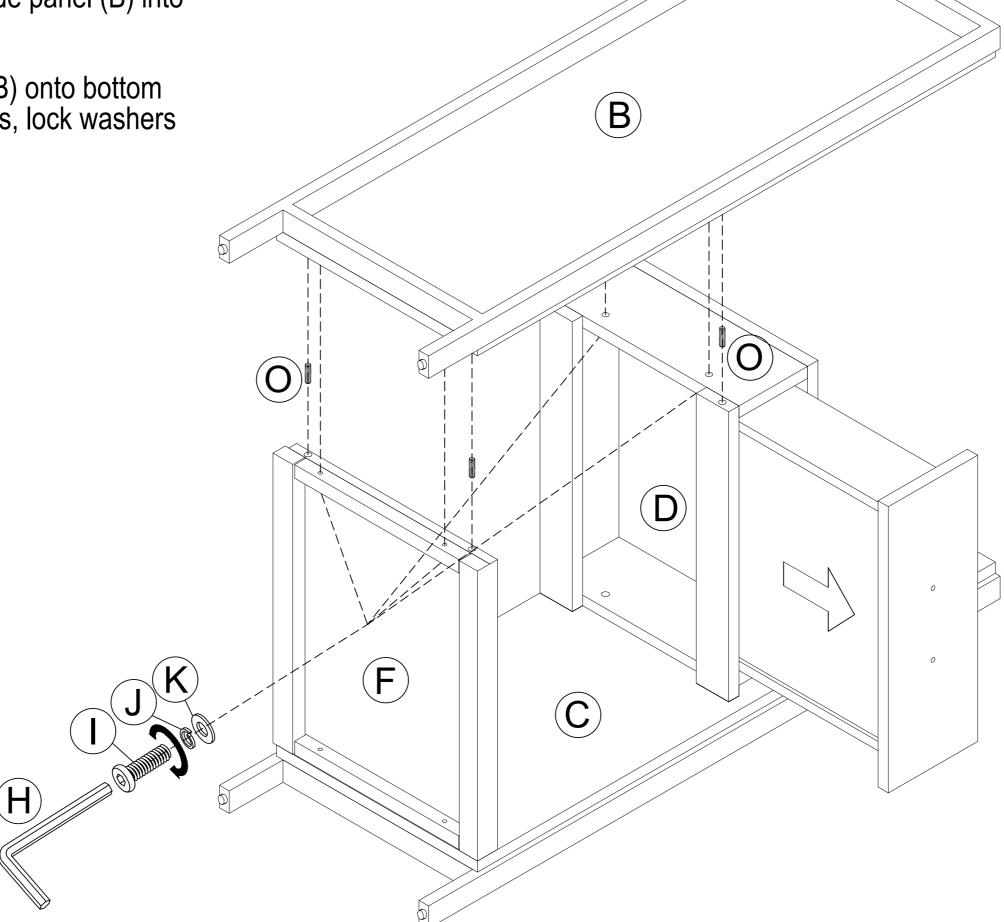


Step 4

- 4.1 Close the drawer box and turn the cabinet upright. Insert 4 wood dowels on top of left and right side panels. Place the top on side panels by aligning wood dowels.
- 4.2 Fasten the top (A) and two side frames with 4 bolts,lock washers and flat washers.

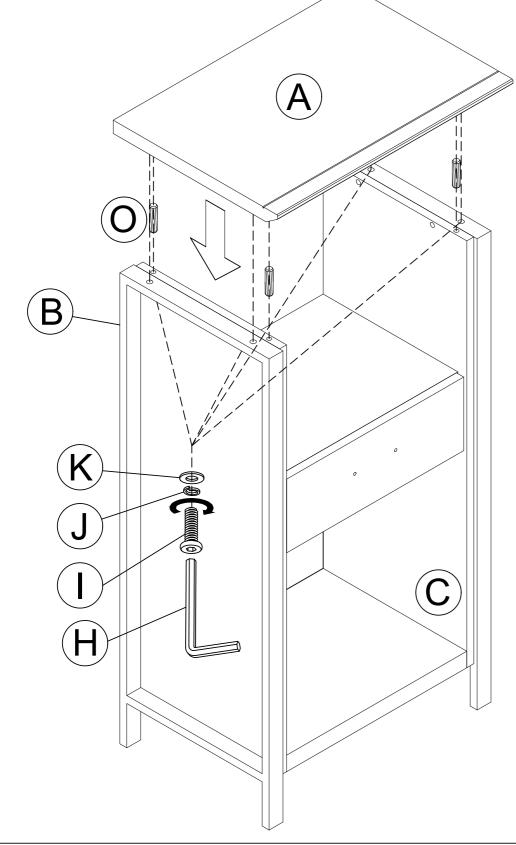


Step 5

- 5.1 Place two X-rack panels (E) as illustrated with "back" stickers facing up, and two panel's grooves facing right.
- 5.2 Pick up two panels, insert the left side panel into right side panel with two "Back" stickers facing each other.

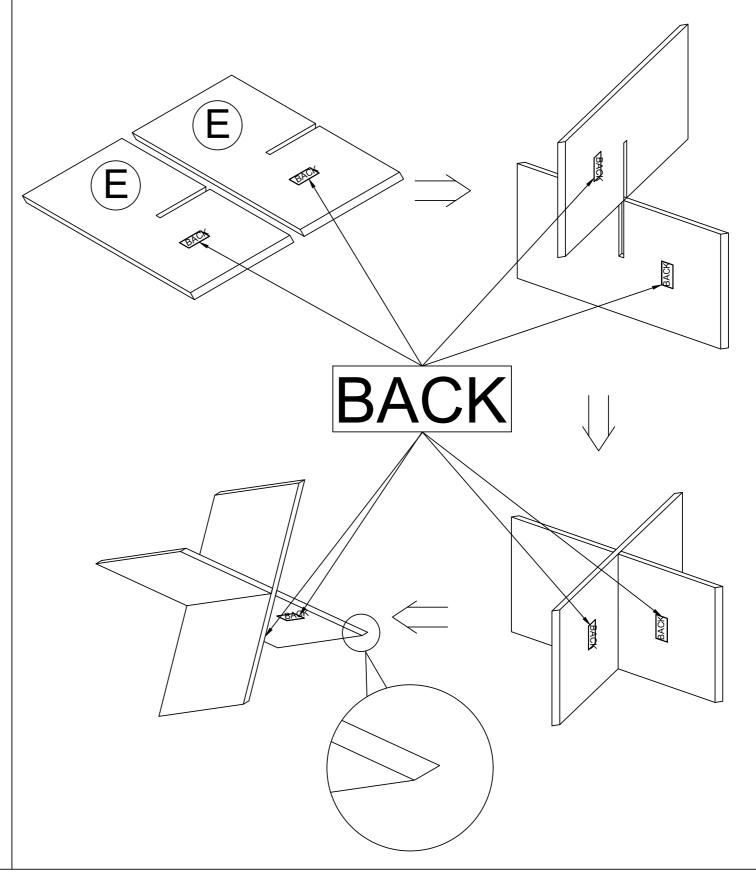


Step 6

- 6.1 Flip up the X-rack with "back" sticker towards to the bottom.
- 6.2 Slide X-rack into the cabinet.

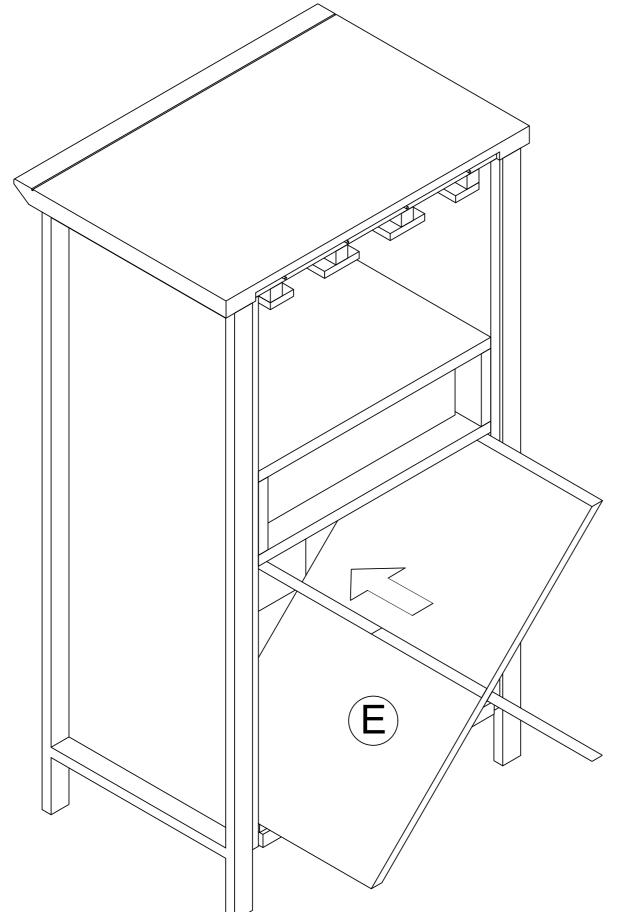


Step 7

7.1 Unfold the back panel (G), fasten to the back of the cabinet with 16 screws.

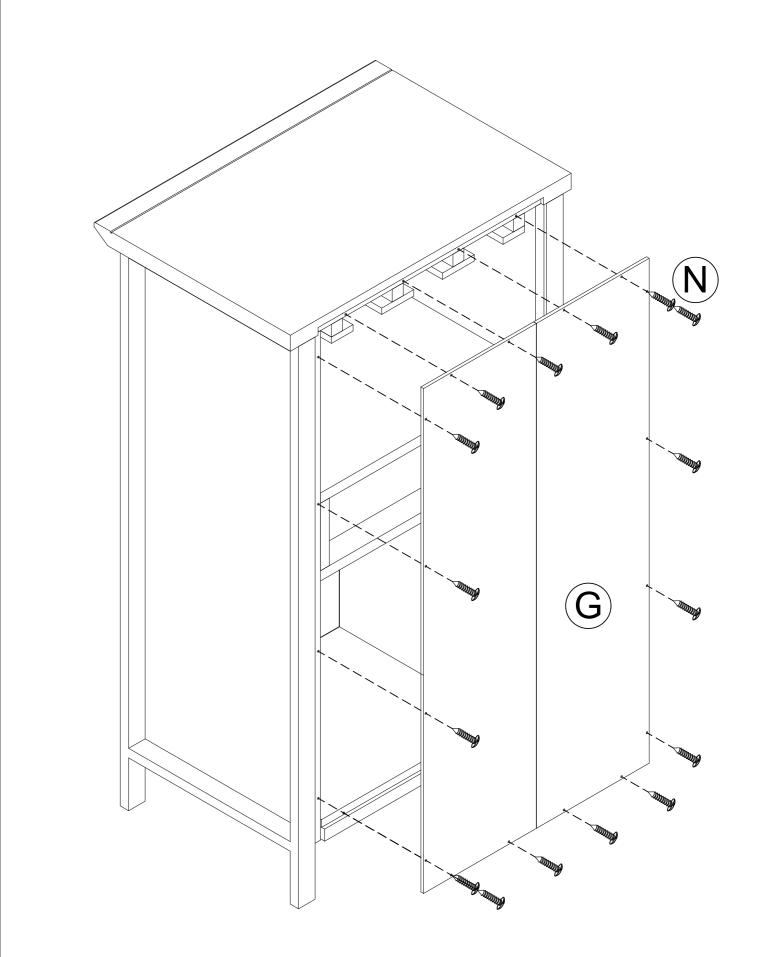

Step 8

8.1 Open the drawer and install the drawer pull.

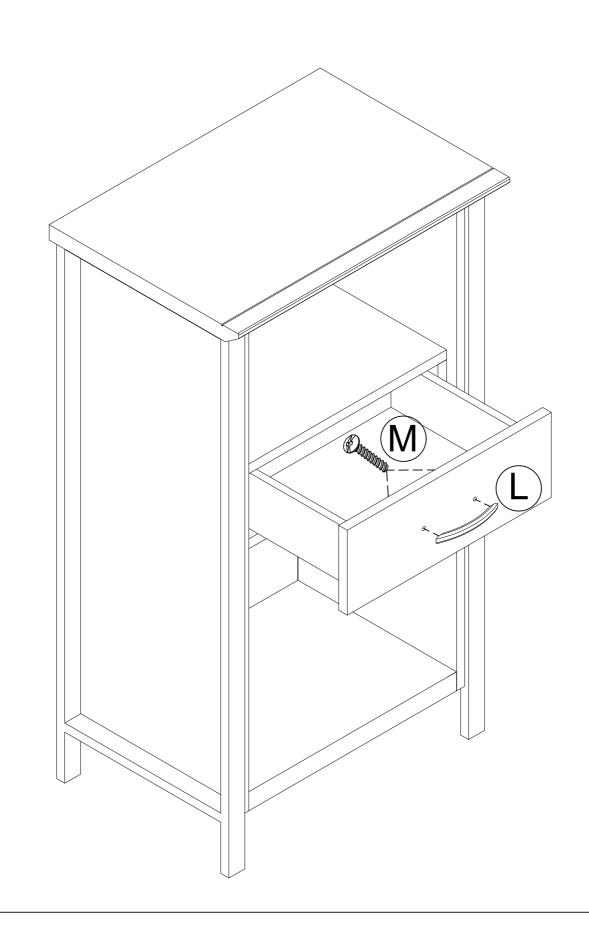

Step 9

9.1 Adjust the levelers at the bottom of its legs if needed.

