


ASSEMBLY INSTRUCTIONS

36 INCH BATH VANITY COMBO

SKU:N710P350172


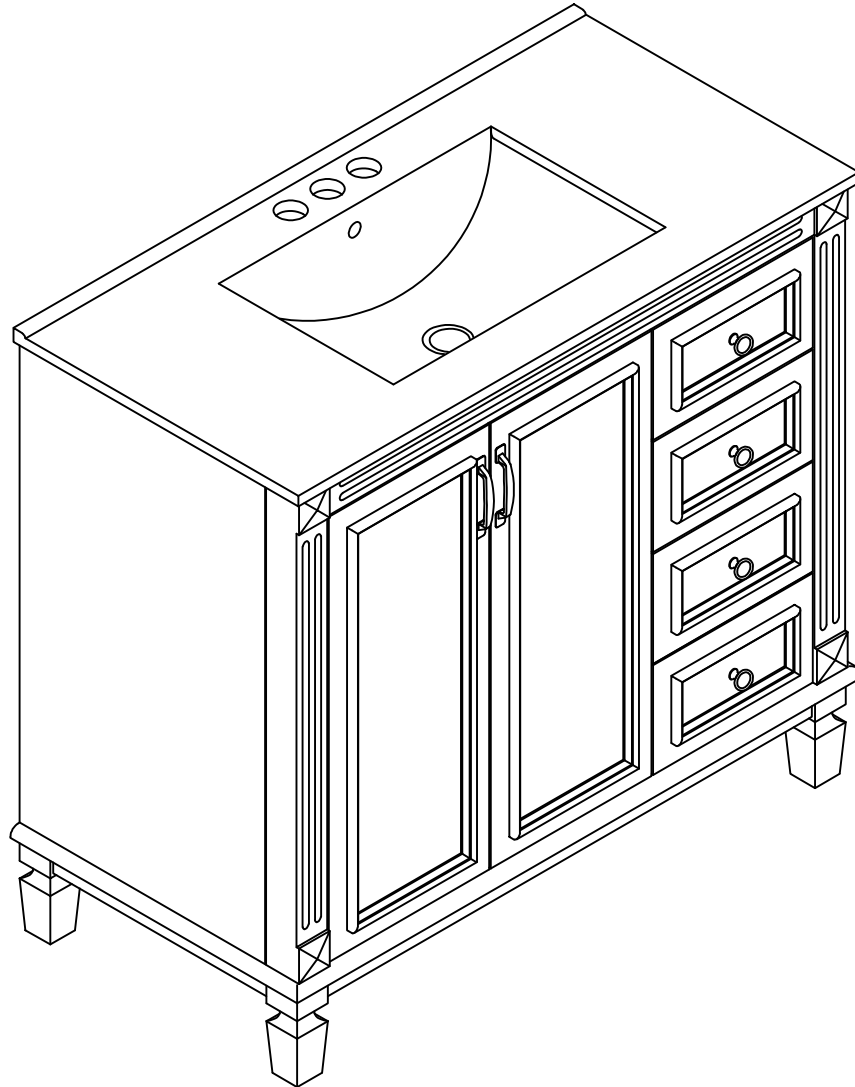


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!
* Please assemble on a clean soft surface to avoid damage.

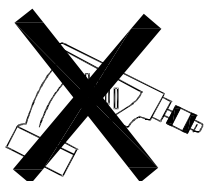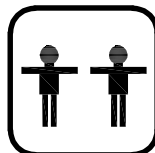

+

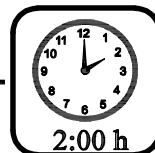

Tools Required



(Not Included)



(Not Included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation









Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- . We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- . Please do not over tighten screws or bolts until the assembly is completed.
- . Keep children and animal away from the work area, small parts could choke if swallowed.
- . Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions

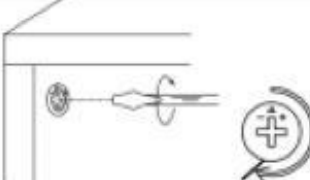		Insert Cam Bolt into hole as shown in diagram A.	
		Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.	
		Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>


Detail View - CABINET

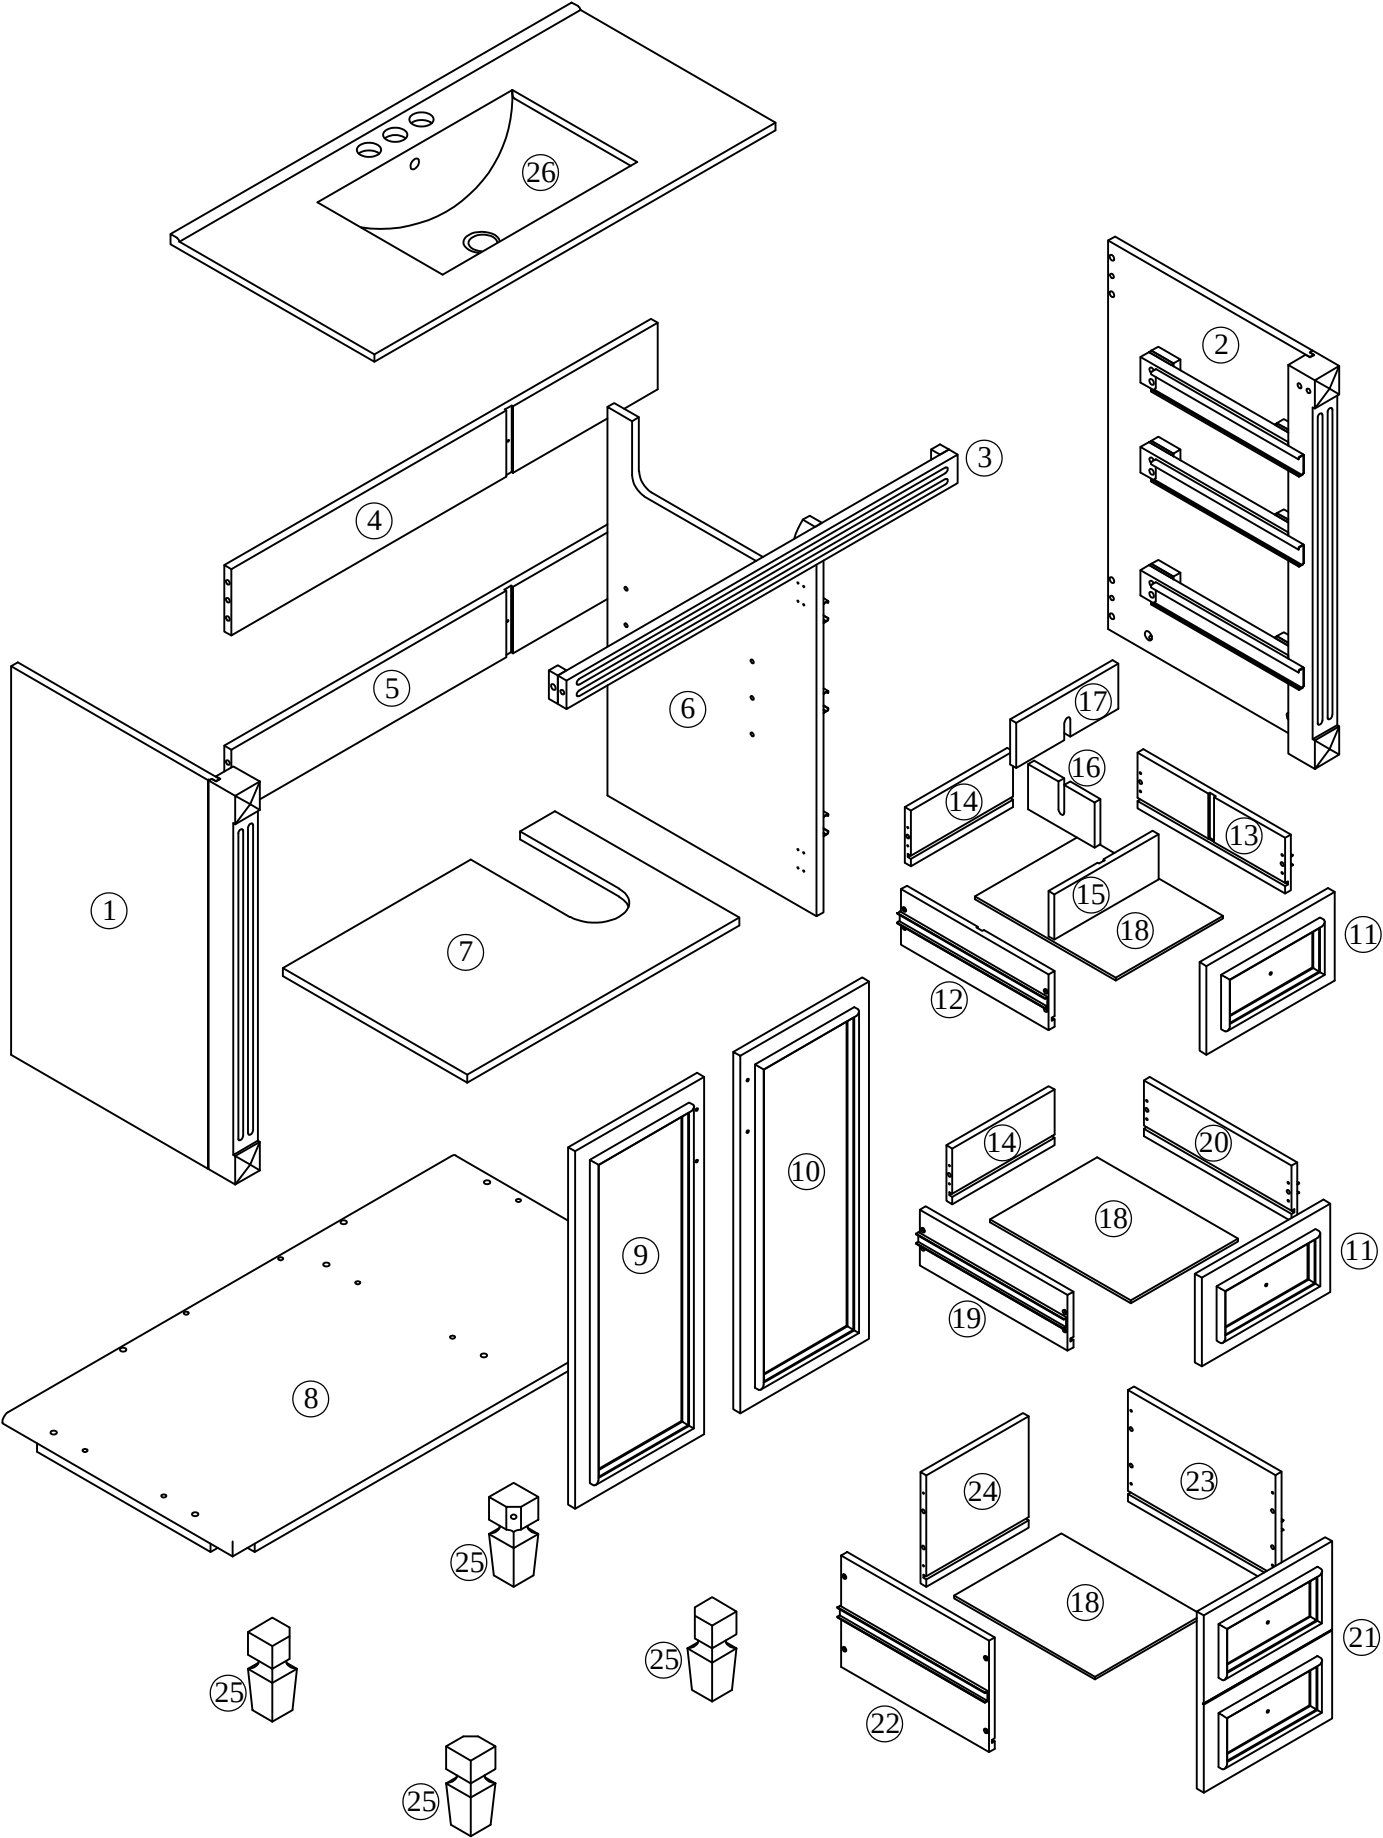

Identifying the Hardware-Identify the hardware using the illustrations below.


Part List - N710P350172

1

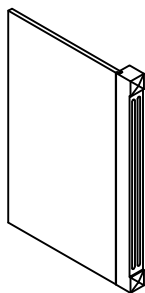


Side Panel (L) - 1pc

2

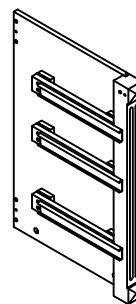


Side Panel (R) - 1pc

3

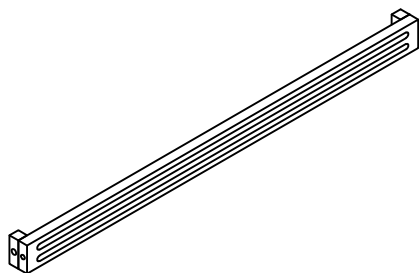


Front Top Bar - 1pc

4

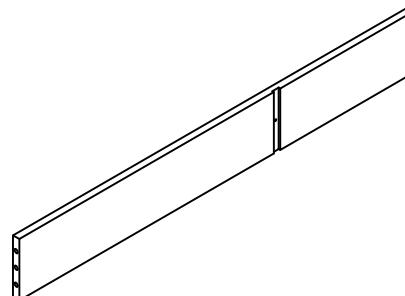


Back Top Bar - 1pc

5

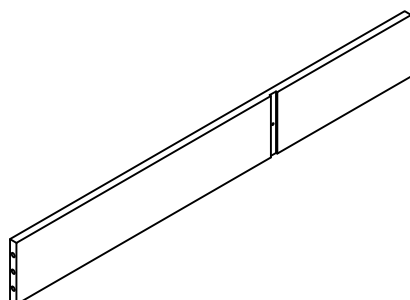


Back Bottom Bar - 1pc

6

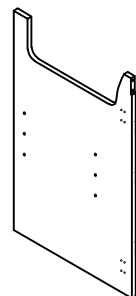


Middle Panel - 1pc

7

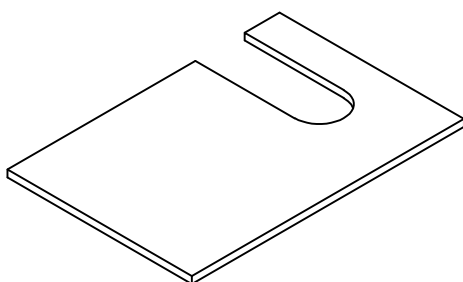

Adjustable Shelf - 1pc

8

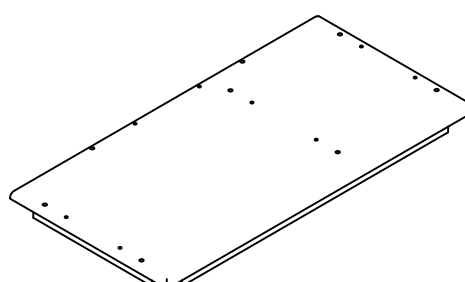


Bottom Frame - 1pc

9



Left Door - 1pc


10



Right Door - 1pc


Part List - N710P350172

11

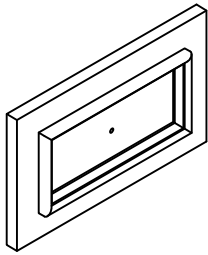


Drawer Face - 2pcs

12

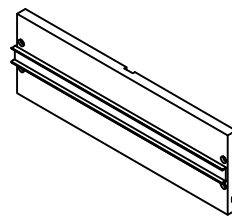


Drawer Side Panel (L) - 1pc

13

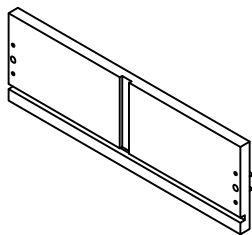


Drawer Side Panel (R) - 1pc

14

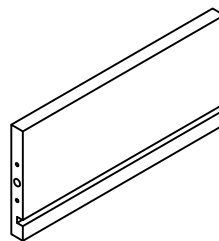


Drawer Back Panel - 2pcs

15

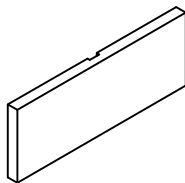


Drawer Middle Panel 1 - 1pc

16

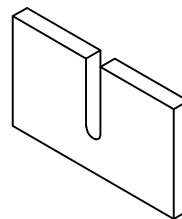


Drawer Middle Panel 2 - 1pc

17

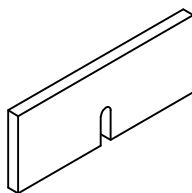


Drawer Middle Panel 3 - 1pc

18

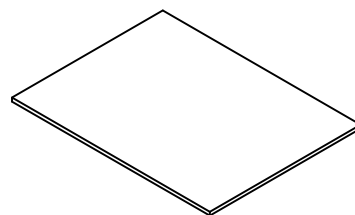


Bottom Panel - 3pcs

19

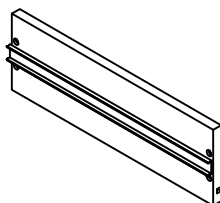







Drawer Side Panel (L) - 1pc

20









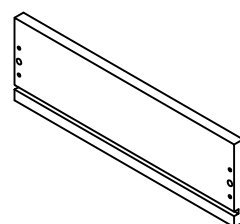


Drawer Side Panel (R) - 1pc

Part List - N710P350172

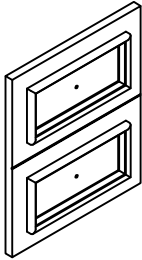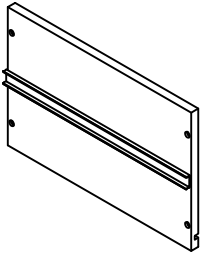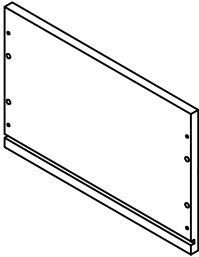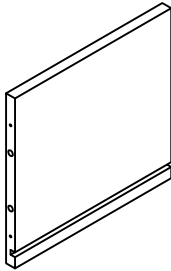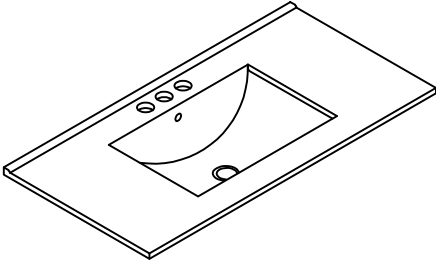
<div>21</div> <div></div> <div>Drawer Face - 1pc</div>	<div>22</div> <div></div> <div>Drawer Side Panel (L) - 1pc</div>
<div>23</div> <div></div> <div>Drawer Side Panel (R) - 1pc</div>	<div>24</div> <div></div> <div>Drawer Back Panel - 1pc</div>
<div>25</div> <div></div> <div>Leg - 4pcs</div>	<div>26</div> <div></div> <div>Sink - 1pc</div>

Hardware List- N710P350172

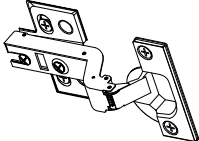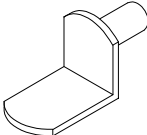
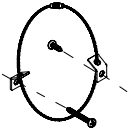
<div>A</div>  <p>Ø6x35mm</p>	<div>B</div>  <p>ø14.5x12mm</p>	<div>C</div>  <p>Ø8x30mm</p>
<p>Three in one bolts (17pcs)</p>	<p>Three in one lock (17pcs)</p>	<p>Wood dowel (15pcs)</p>
<div>D</div>  <p>ø1/4"x30mm</p>	<div>E</div>  <p>ø1/4"x50mm</p>	<div>F</div>  <p>ø1/4"x16x1mm</p>
<p>Hex-Head bolts(2pcs)</p>	<p>Hex-Head bolts(4pcs)</p>	<p>Washer(6pcs)</p>
<div>G</div>  <p>ø8xø4x25mm</p>	<div>H</div>  <p>ø5/32"x20mm</p>	<div>I</div>  <p>ø5/32"x35mm</p>
<p>Round head screw (2pcs)</p>	<p>Handle screw (4pcs)</p>	<p>Handle screw (4pcs)</p>
<div>J</div> 	<div>K</div> 	<div>L</div> 
<p>Handle (2pcs)</p>	<p>Knob (4pcs)</p>	<p>Damping hinge (2pcs)</p>
<div>M</div> 	<div>N</div>  <p>ø7xø3.5x12mm</p>	<div>O</div>  <p>ø8xø4x32mm</p>
<p>Hinge (2pcs)</p>	<p>Flat head screw (24pcs)</p>	<p>Round head screw (24pcs)</p>
<div>P</div>  <p>ø6x30mm</p>	<div>Q</div> 	<div>R</div>  <p>4mm</p>
<p>Wood dowel (16pcs)</p>	<p>Shelf Pin (4pcs)</p>	<p>Allen key(1pc)</p>
<div>S</div>  <p>Anti fall hardware (2sets)</p>		

STEP: 1


A






17PCS

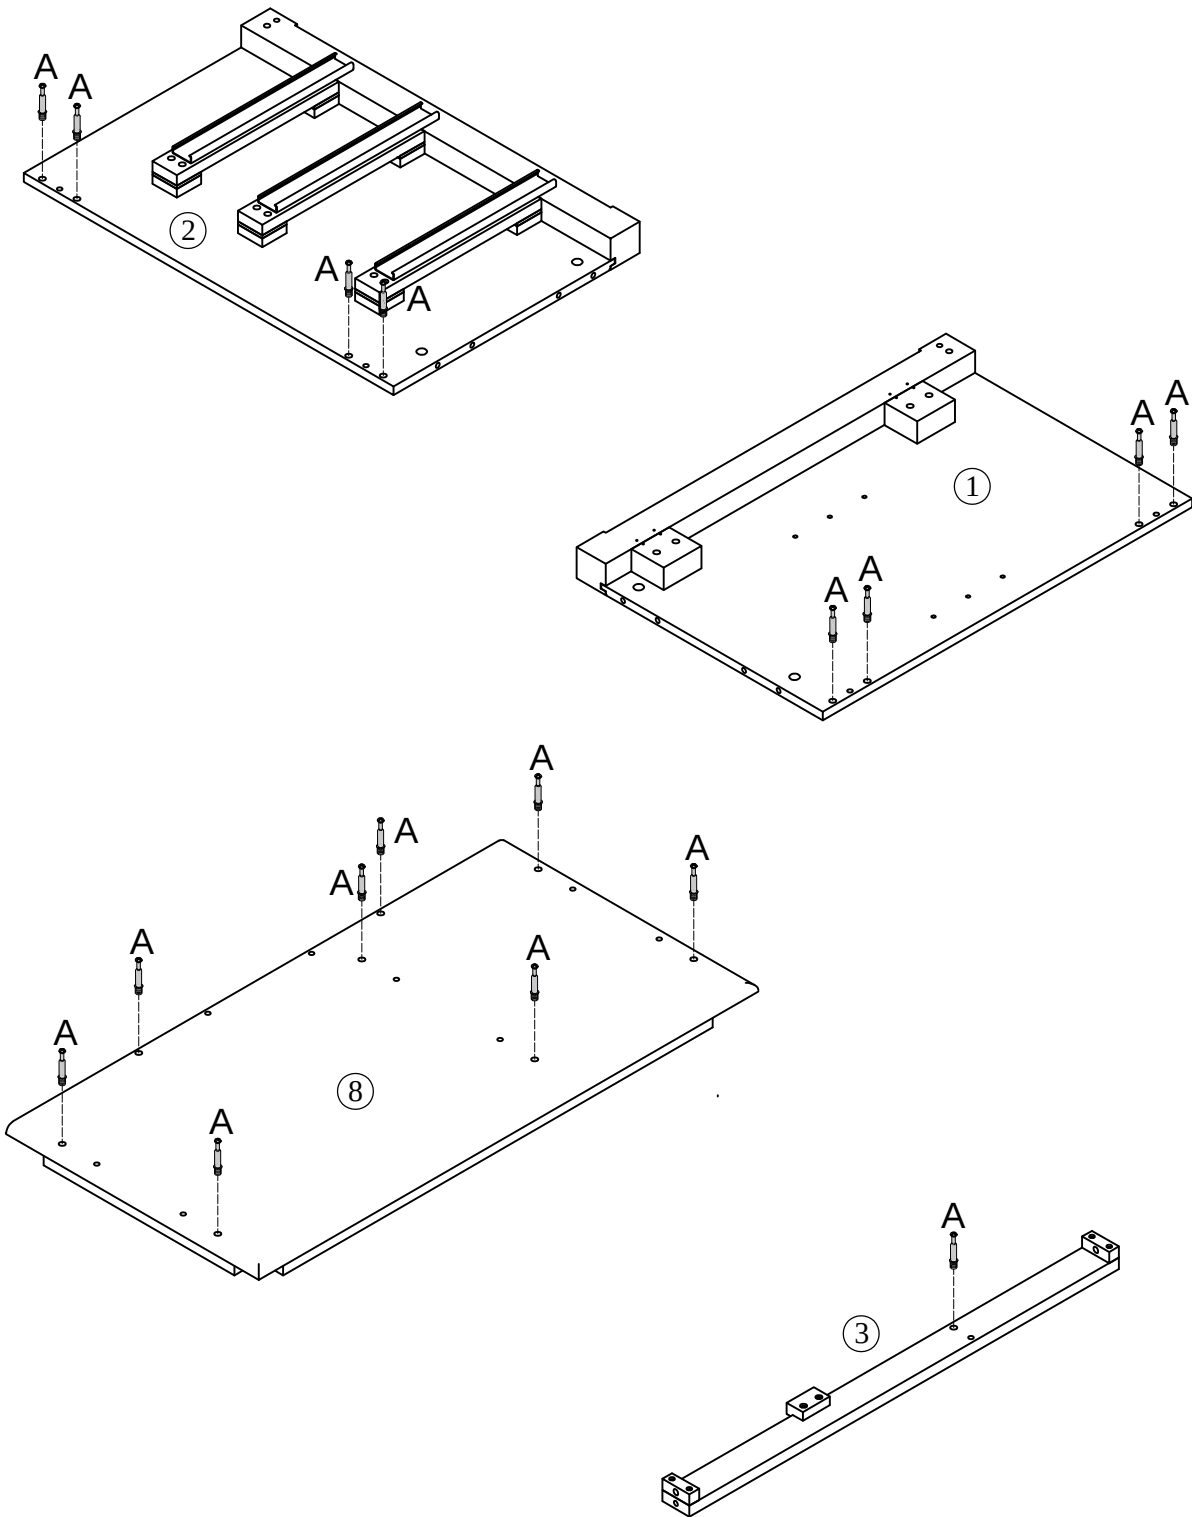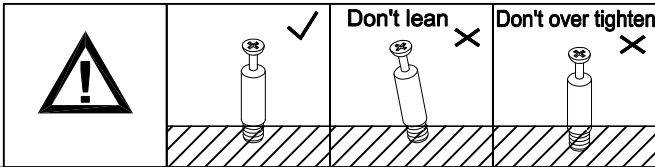


STEP: 2


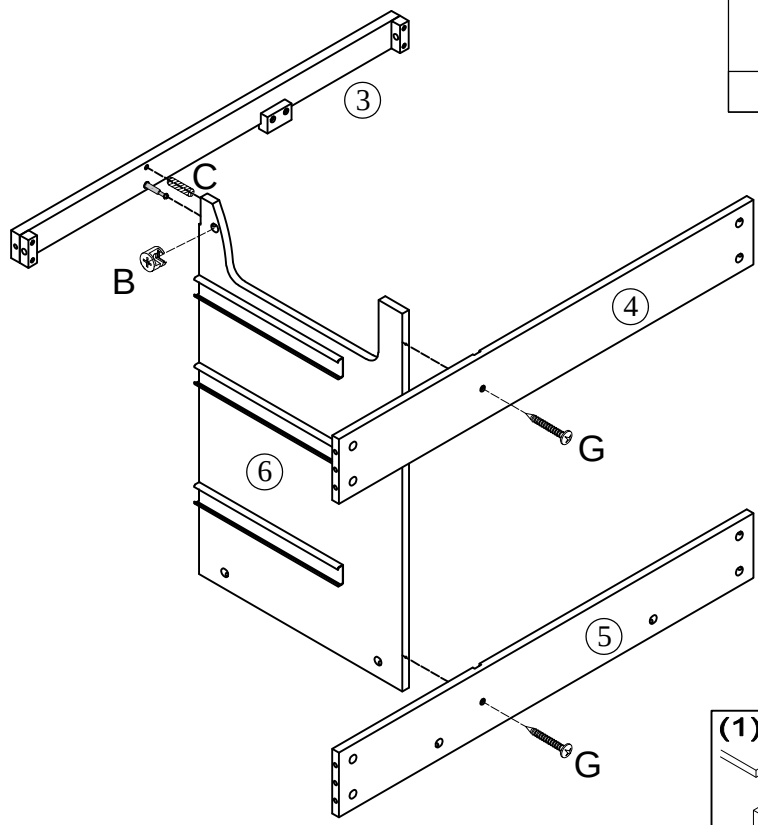


B	C	G
		
1PC	1PC	2PCS

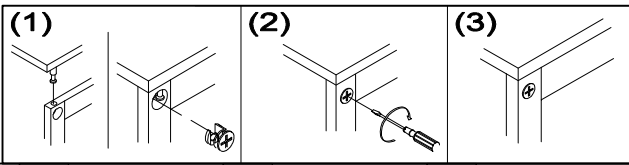




STEP: 3

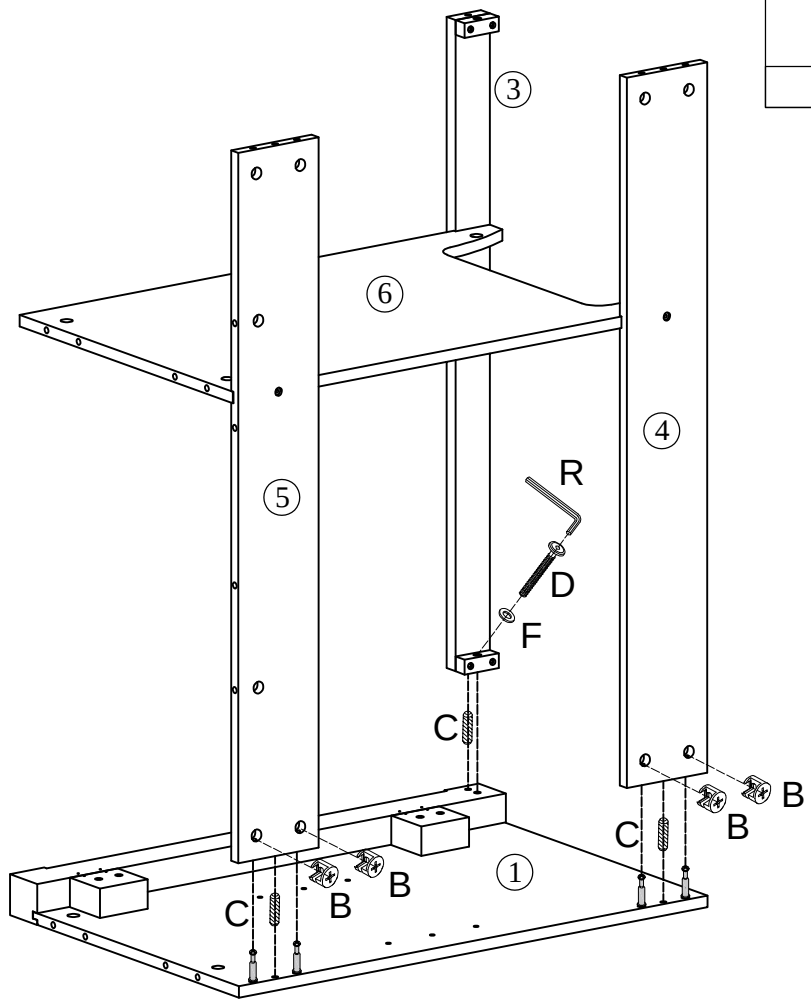


B	C	D
		
4PCS	3PCS	1PC
F	R	
		
1PC	1PC	


STEP: 4

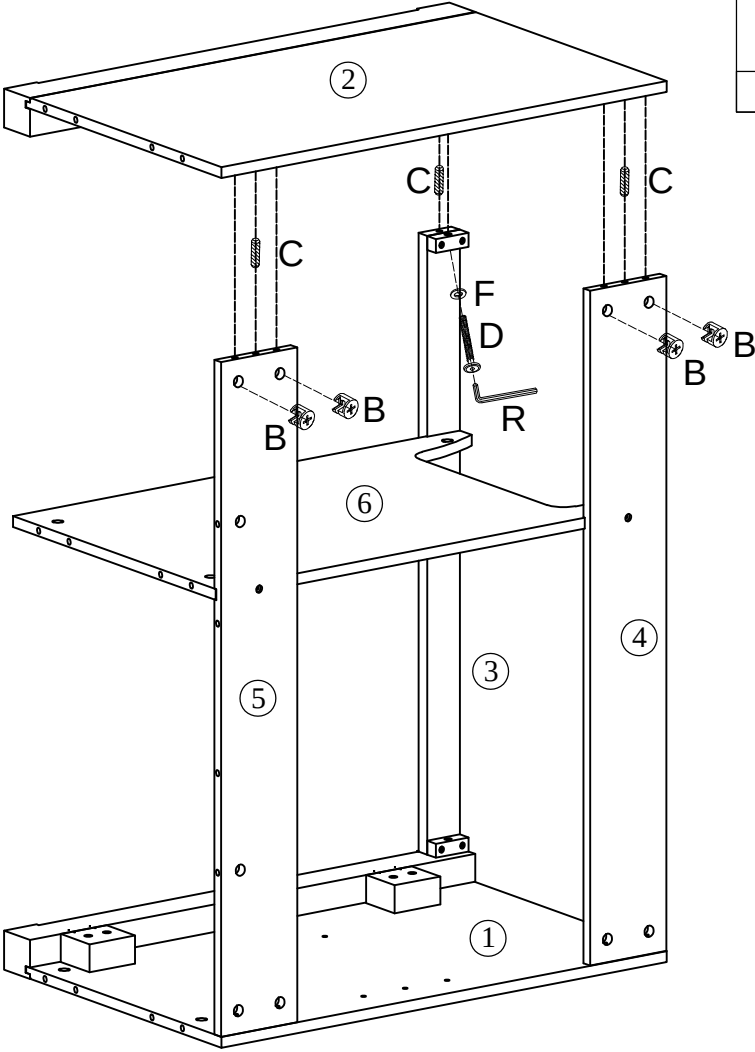


B 	C 	D 
4PCS	3PCS	1PC
F 		R 
1PC		1PC


STEP: 5

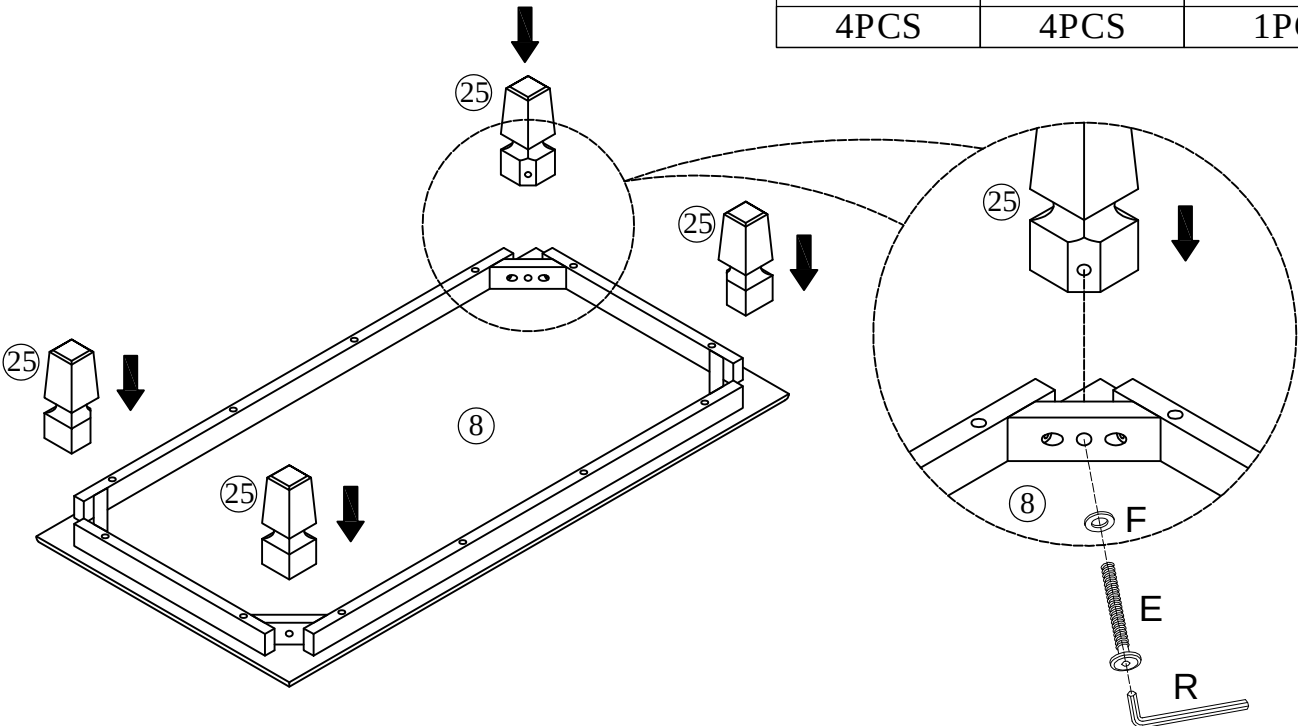





E 	F 	R 
4PCS	4PCS	1PC


STEP: 6

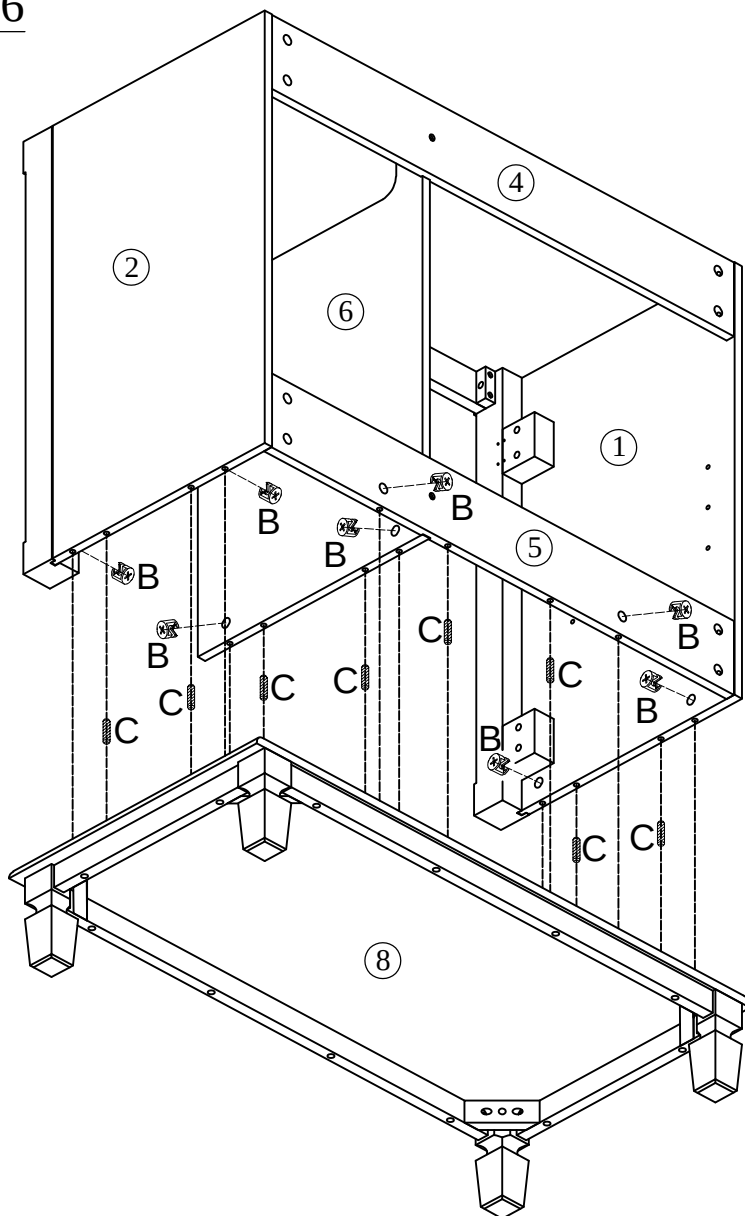

B	C
	
8PCS	8PCS

STEP: 7

H	J	L	M	N
				
4PCS	2PCS	2PCS	2PCS	8PCS

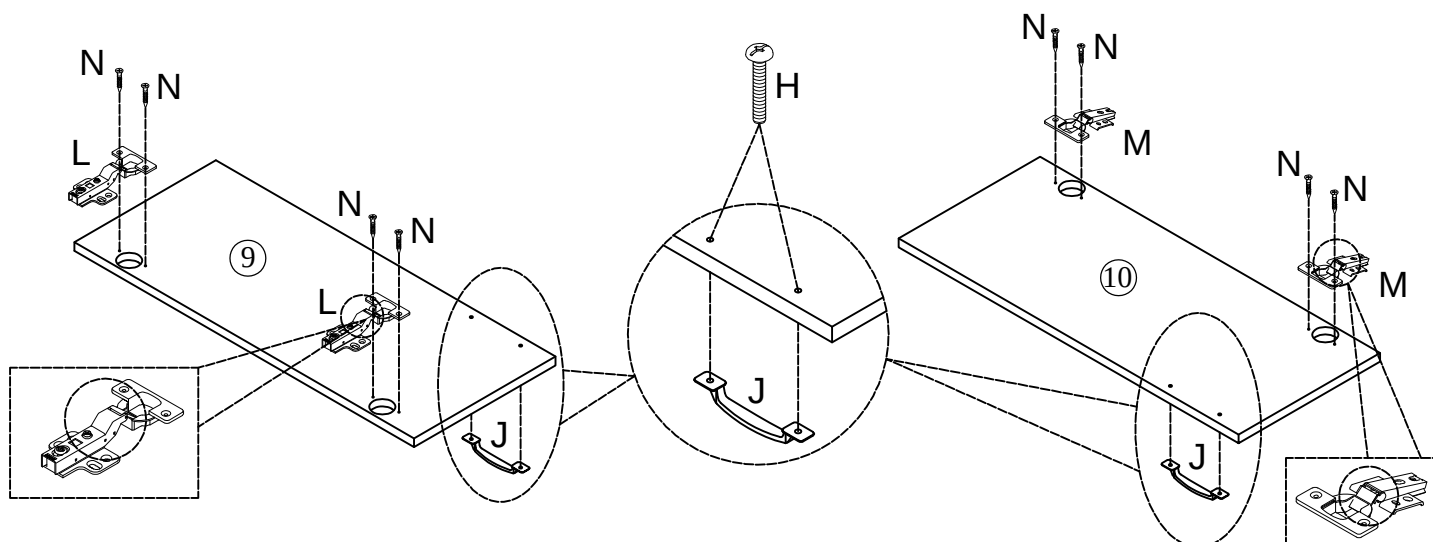



*Please note that hinge L and M are different, please do not install them backwards.

STEP: 8


N




8PCS

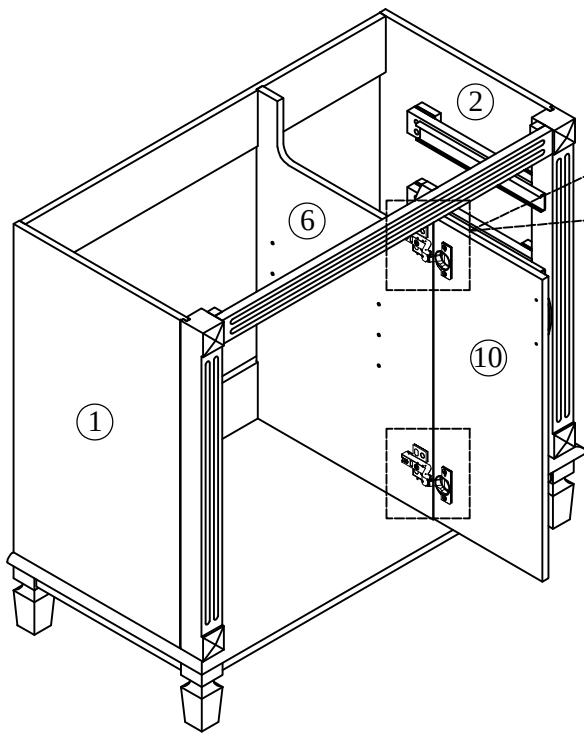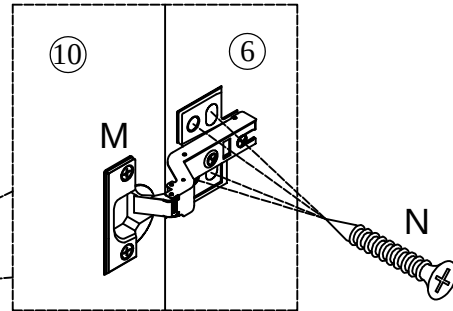


Use the screws to adjust up or down

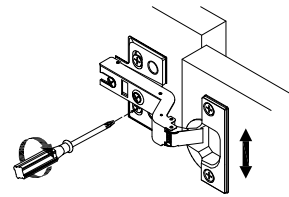


Use the screws to permanent

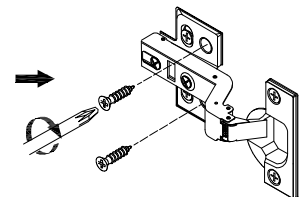

Use the screws to adjust left or right

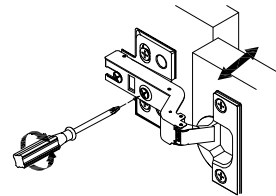

Use the screws to adjust in or out

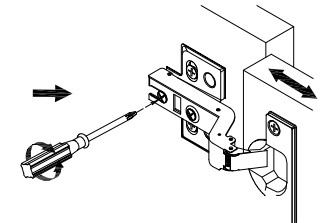


STEP: 9

N





8PCS

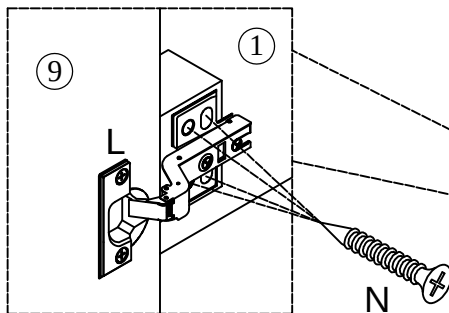




Use the screws to adjust up or down

Use the screws to permanent


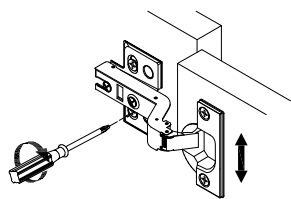
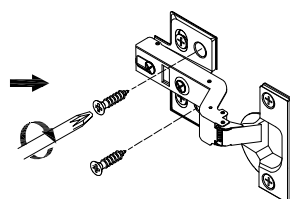





Use the screws to adjust left or right

Use the screws to adjust in or out

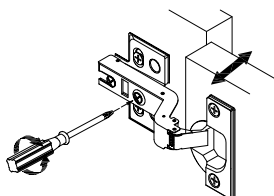
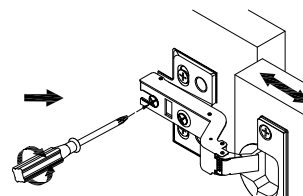
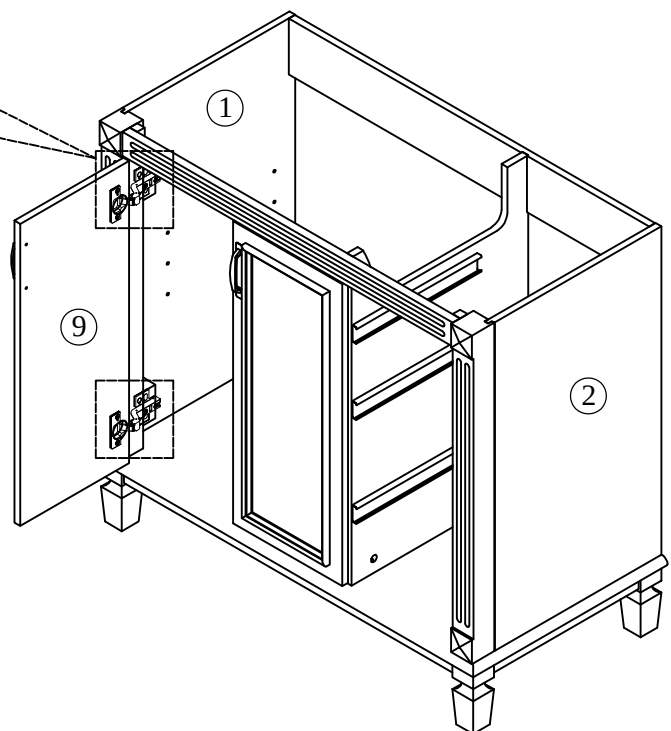





STEP: 10

I	K	O	P
			
2PCS	2PCS	8PCS	8PCS



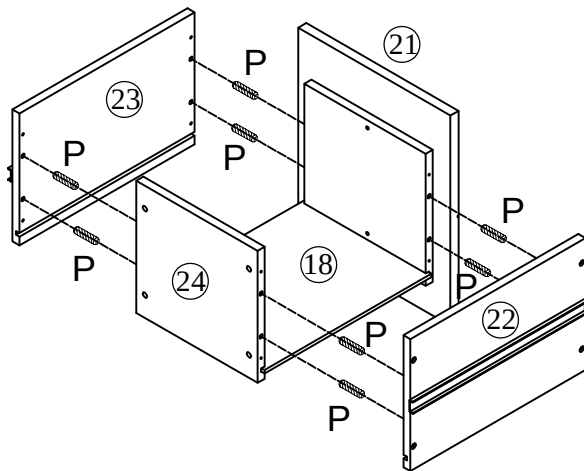
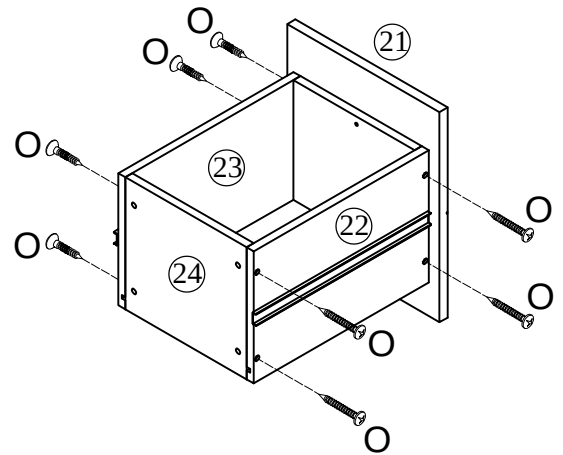
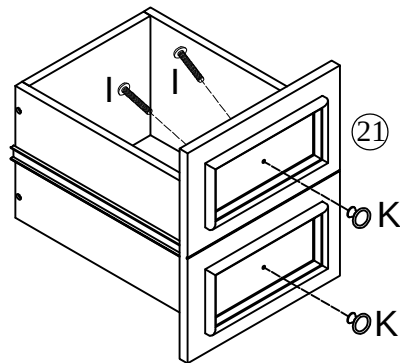


STEP: 11


I	K	O	P
			
1PC	1PC	8PCS	4PCS

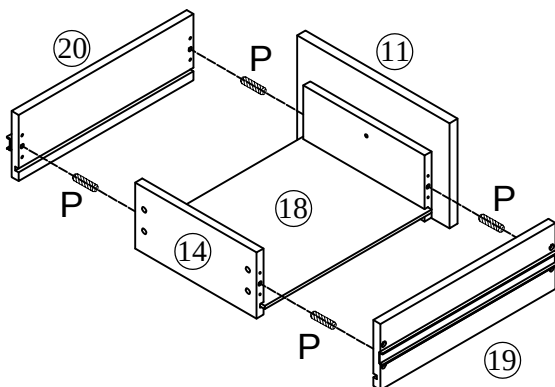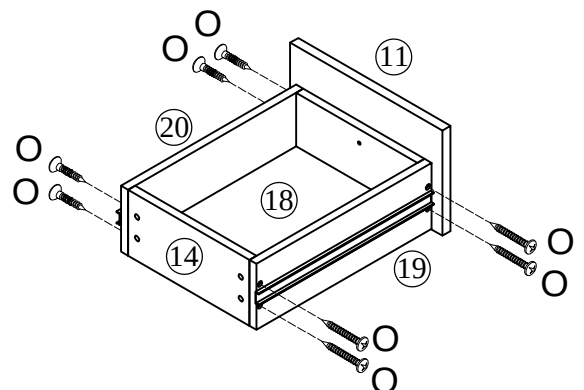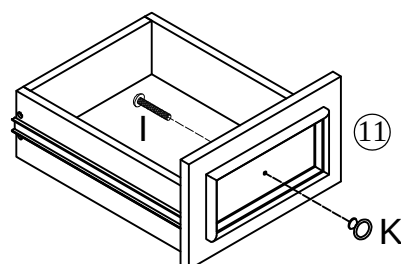


STEP: 12

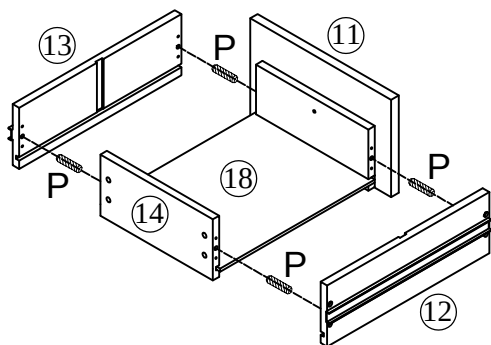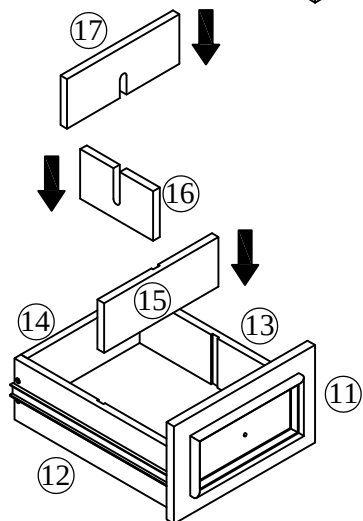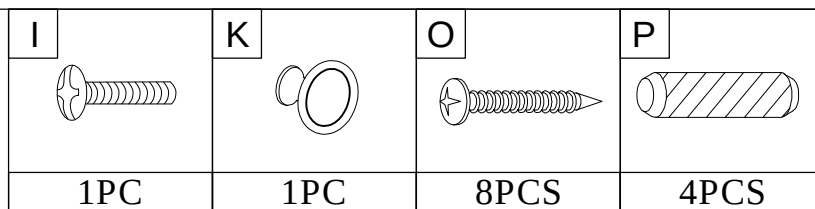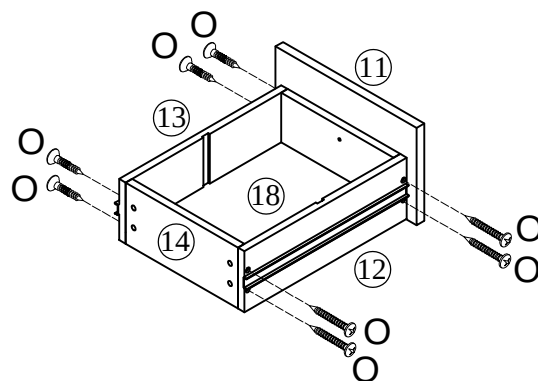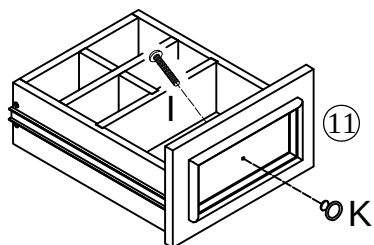


STEP: 13

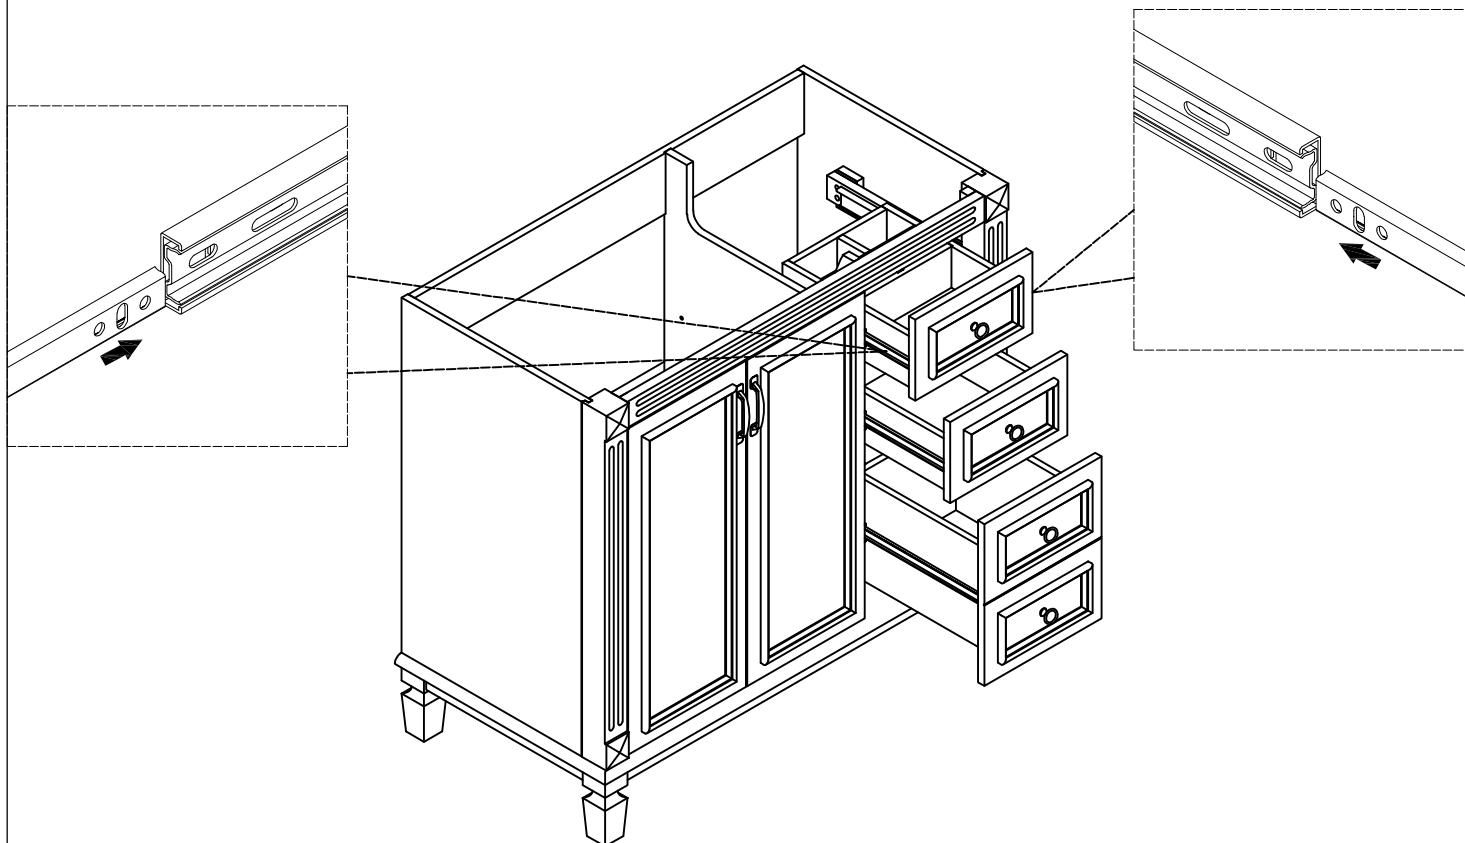

STEP: 14

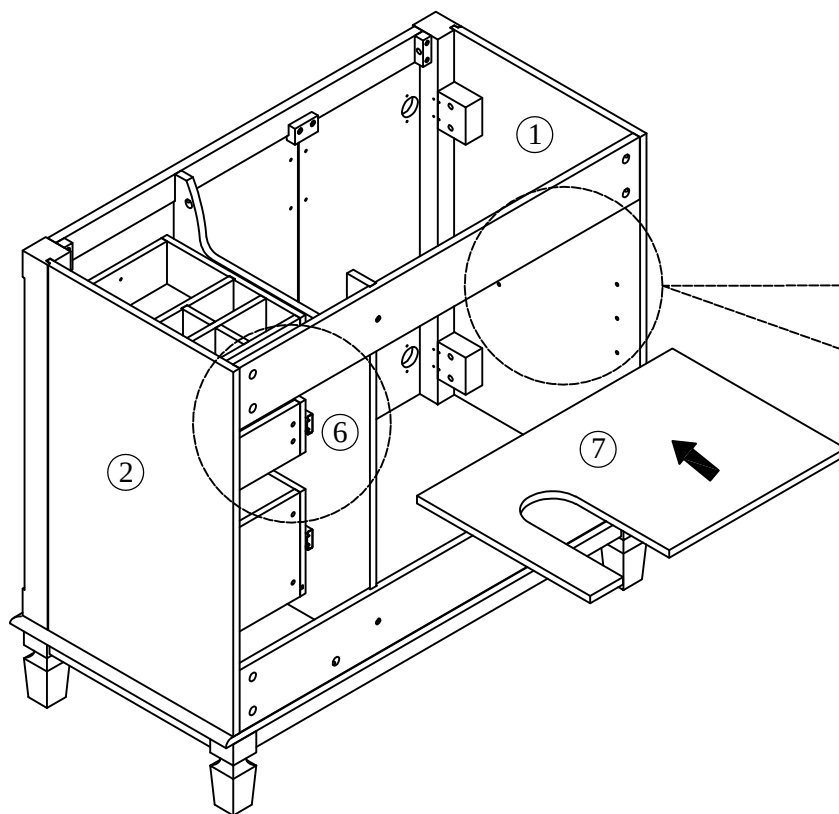


Q




4PCS

STEP: 15

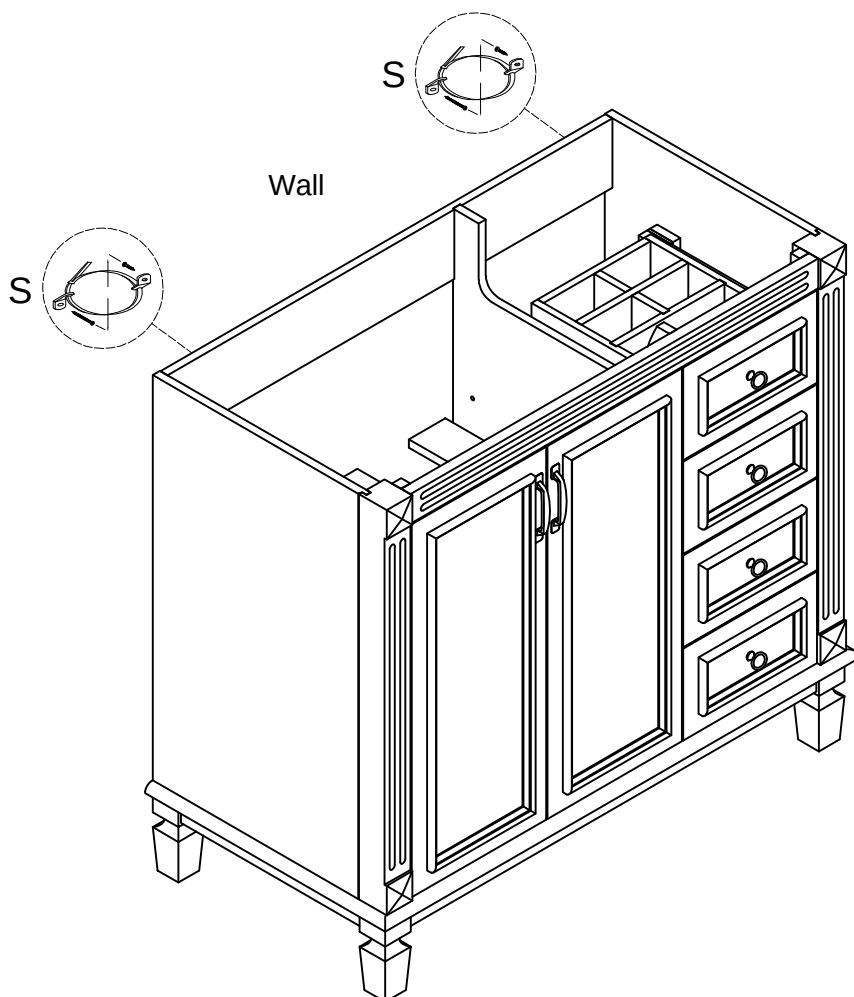


S

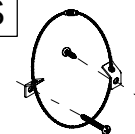



2 SETS

STEP: 16


Install the sink on the cabinet with glue.
Let stand for 24 hours

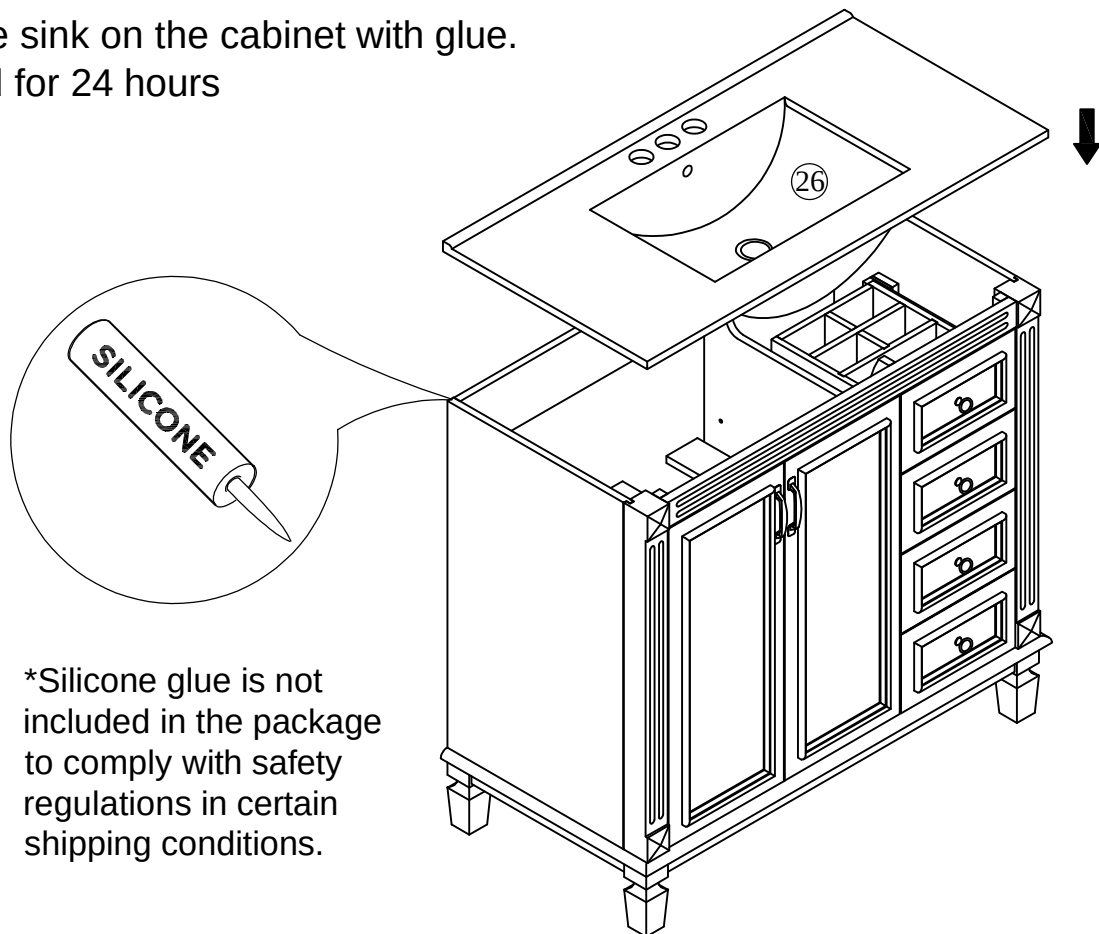

STEP: 17

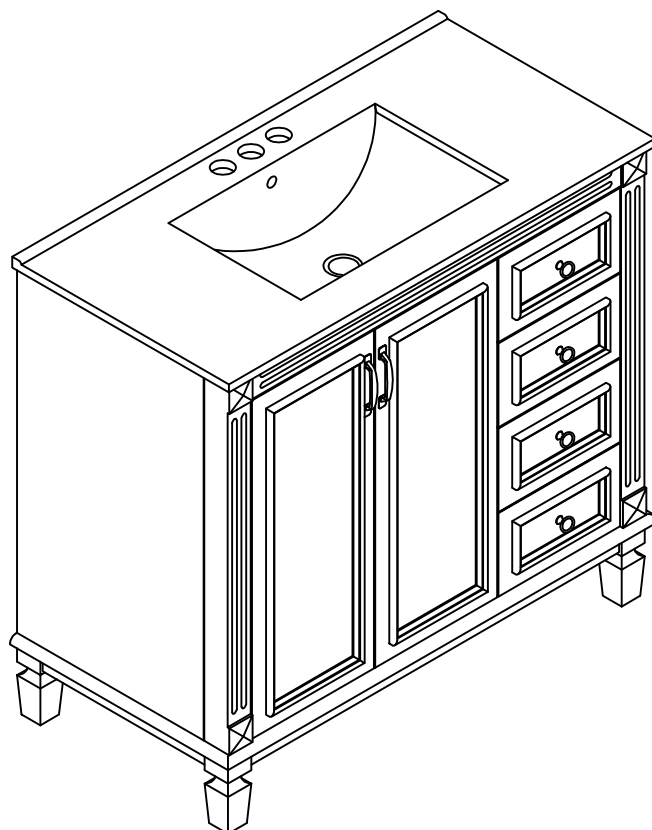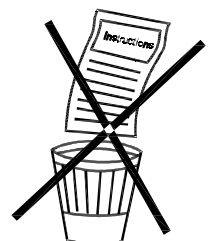


HINGE ADJUSTMENTS

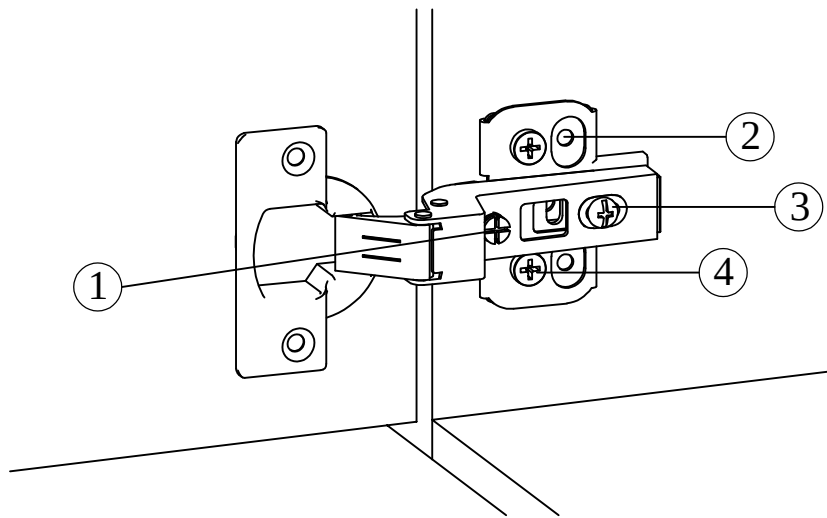


1 Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

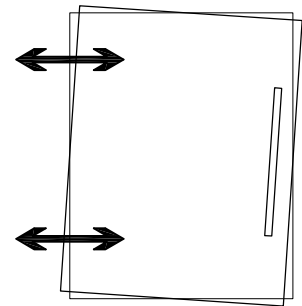

2 4 Height adjustment

While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

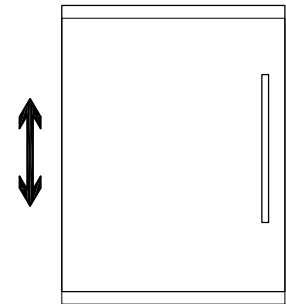

3 Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

