



Assembly Instructions

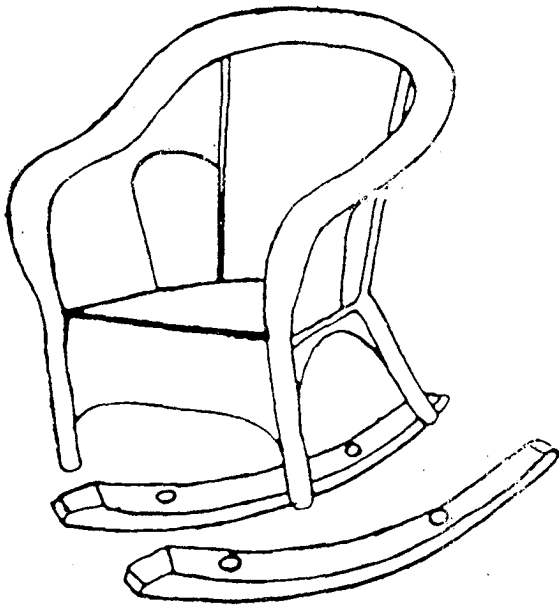


Step 1 :

Back

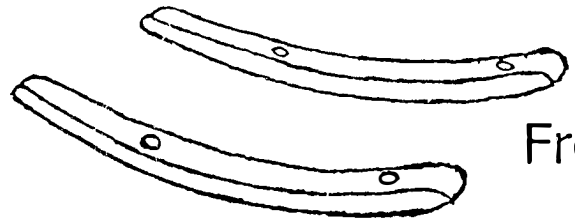

Front



Step 2 :

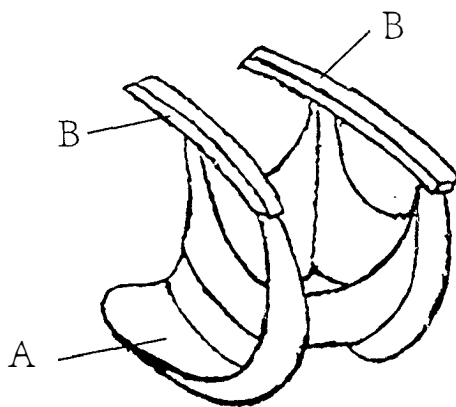

Step 3:

Metal
Screw

Counter
Sunk

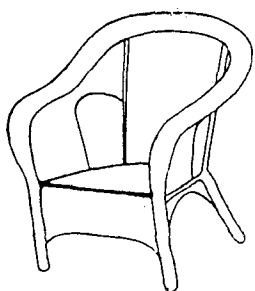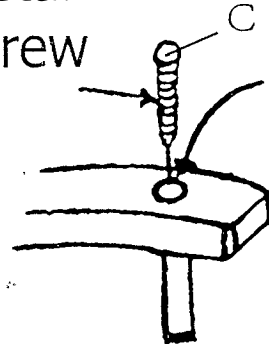

A. Chair Body : 1pc



B. Glider : 2pcs



C. Screw : 4pcs(Ø4X50MM)