

HOW TO USE AND CLEAN

In order to keep the product in perfect condition, we suggest a proper use and regular cleaning.

How to Use

1. Please ensure that the product is used within the safe voltage range of 100V-120V.
2. Please wrap electrical tape around the wires to prevent electrical leakage.
3. Avoid using hard or pointed items to strike the mirror glass so as to prevent damage.

How to Clean

When cleaning the mirror, please follow these steps:

1. Use a soft, non-abrasive cloth to clean the mirror. Avoid using rough or abrasive materials that may damage the surface.
2. Do not use any cleaning agents that may cause irritation or damage to the mirror's finish. Instead, use any of the recommended cleansers to remove dirt and grime:

☒ Gentle liquid detergents ☒ Colorless cleansers

3. If any adhesive residue left, please wipe it off with a cloth dipped in water (instead of detergents).





★ Warranty

A two-year warranty from the date of your purchase.

If you have any questions, please feel free to contact us via
MC@ZRsupport.com

BATHROOM LED MEDICINE CABINET

INSTALLATION MANUAL

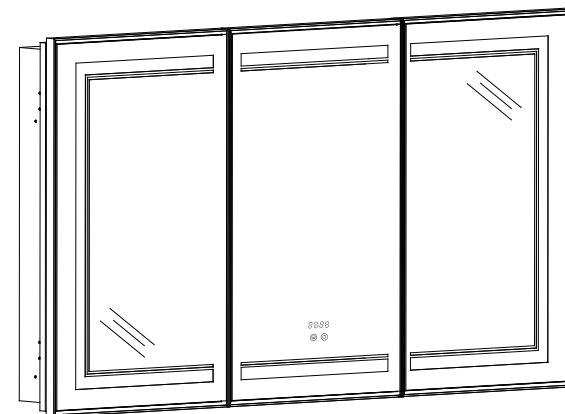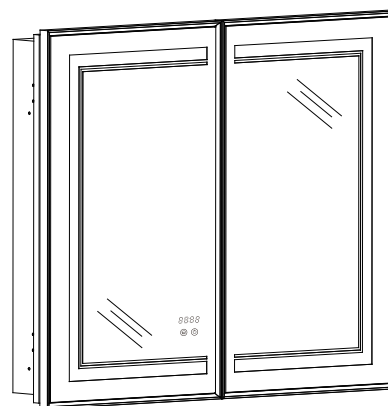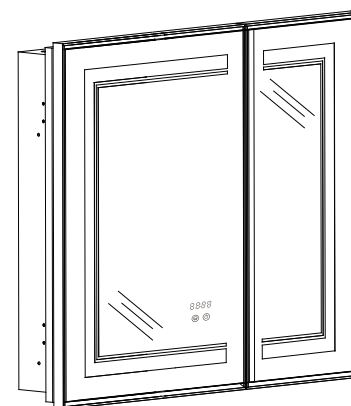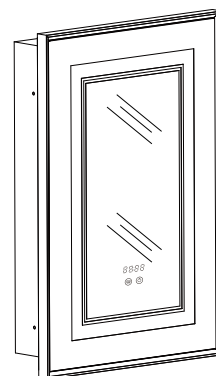


CONTACT US





Thank you for shopping with us! We hope that our products have added a touch of brightness to your life. If you need any assistance, please don't hesitate to reach out. Our dedicated team is available 24/7 to ensure your satisfaction.

✉ MC@ZRSupport.com 📞 1-888-204-3326 📱 ZRSupport

PACKING LIST

	 Wall anchor A	 Wall anchor B	 Short screw	 Long screw	 Small spout plug	 Big spout plug	 Sticker	 Bubble level
	4+1	4+1	4+1	4+1	4+1	4+1	10+2	1
	4+1	4+1	4+1	4+1	4+1	4+1	10+2	1
	4+1	4+1	4+1	4+1	4+1	4+1	10+2	1
	6+1	6+1	6+1	6+1	6+1	6+1	12+2	1

INSTALLATION TOOLS

 Electric Drill	 Hammer	 Marker	 Tape Measure
 Level	 Phillips Screwdriver	 Safety Goggles	

BEFORE INSTALLATION

To ensure the best experience, **please read carefully and follow the instructions provided below before assembling and installing the product.**

1. Important Safety Instructions:



- Assembly by two or more adults is highly recommended, so as to ensure proper installation.
- To connect the wires to the electrical junction box, a qualified technician or electrician is highly recommended.
- Disconnect power before installing, adding, or changing any components.
- Make sure that the fixing location can support the weight of the entire fixture (e.g. solid stone or brick walls).
- To prevent injury, the mirror must be installed as per the instructions provided.
- The medicine cabinet can be wall-mounted or recess-mounted. If you prefer wall mounting, the wall should be covered with wood panels and supported by a framed wall studs behind, or a strong concrete wall.

2. Pre-assembly:

- Inspect the product immediately upon receipt for any transit damage or missing parts.
- The voltage for your product should be between 100V and 120V. If the voltage exceeds 120V, please use a transformer.

3. Before Installation

Please check and make sure that the mirror is functioning properly.

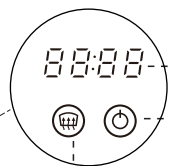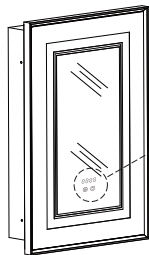

- 88:88 Digital clock
- On/Off
- Brightness
- Color Temperatures
- Anti-fog

• Touch Switch



Mirror with 3 color temperatures

The button controls the light switch, brightness and color temperature. Keep holding it and the brightness will change. You can adjust the color temperature as well: the first tap is white light, the second one is warm light, and the third one is natural light.

If no button is pressed within 15 seconds, the next tap will turn off the light immediately.

• Anti-fog



The anti-fog function helps resist the troubling fog and keep a clear reflection image. To save energy, it will automatically turn off after one hour.

• Digital clock

88:88


Bluetooth Time Synchronization: Turn on phone Bluetooth, search & pair with "Smart Clock" → time auto-calibrates.

Manual Time Setting: Hold Defog 3s → minute adjust. Short press Power (+1) or hold. Short press Defog → hour adjust. Short press Power (+1) or hold. Short press Defog again or wait 5s → exit settings.


WALL-MOUNT INSTALLATION

1. Before installation, release the cable that connects the door and the cabinet (①). Press the lever under the hydraulic hinge (②), detach and slide the door off the frame (③)


①

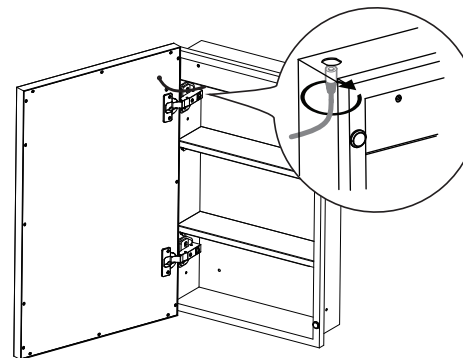

②

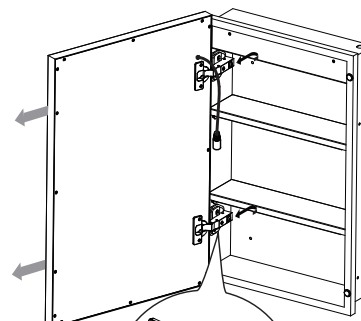

③

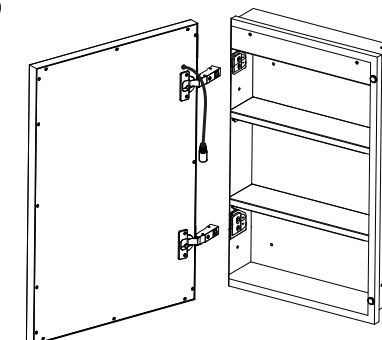


Press

2. Place the medicine cabinet against the wall and mark spot ❶ on the wall (①). Put the cabinet down, drill at the marked spot and apply a wall anchor (②).


WALL-MOUNTED INSTALLATION

1. Place the medicine cabinet against the wall and mark spot ①②③④ on the wall.

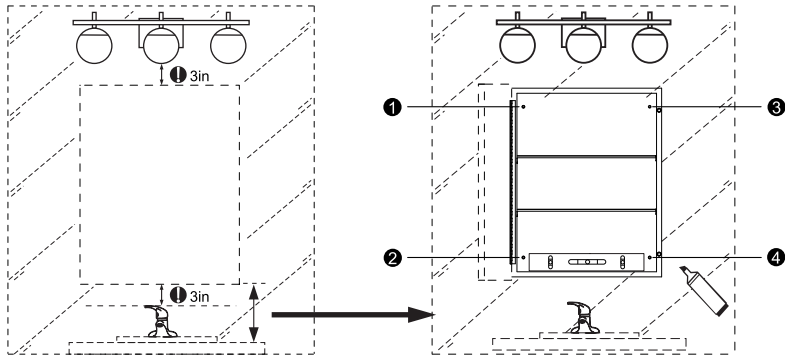

Note: Please hang the cabinet at least 3 inches above the faucet.


2. Put the medicine cabinet down, drill at the marked spots (①) and apply wall anchors(②).

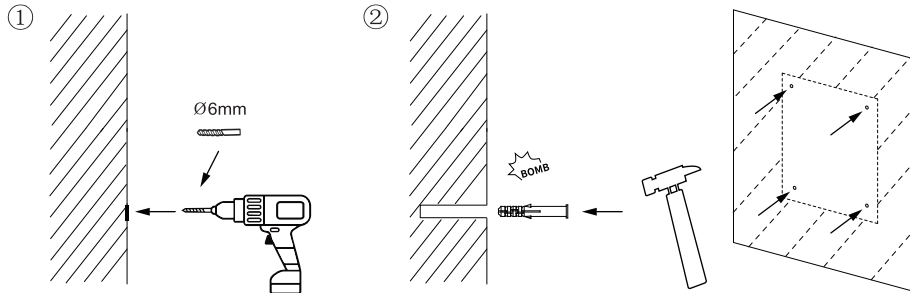


Thickness of Wall :	Recommended Drill Bit :
> 5/8" (16mm)	1/4" (6mm) drill bit, drilling depth in 1 31/32" (50mm)
5/16" (8)-5/8" (16mm)	25/64" (10mm) drill bit
< 5/16" (8mm)	Unapplicable

Note: Please hang the cabinet at least 3 inches above the faucet.

3. Fit screws into the anchors, but leave a 7mm gap between the screw head and the wall (①). Align the medicine cabinet with the screw holes on the wall and secure it in place with four screws at the corners (②).

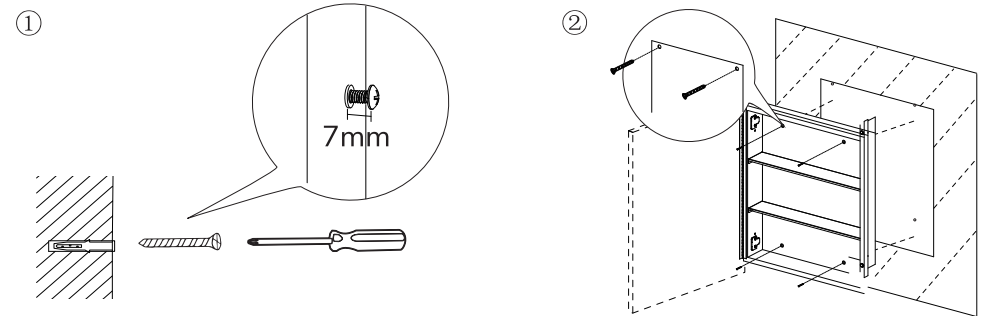


4. Apply stickers to cover the keyhole and screws installed (③). Finally, insert the spout plugs to the holes on both sides of the cabinet - the larger plugs for wall screw holes (④).

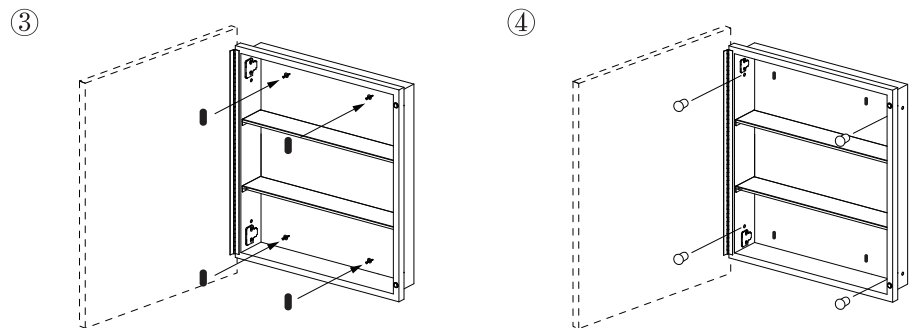

5. Connect the power by plugging into an outlet or hardwired to a standard circuit panel.

• **Option 1: Plug-in**

After hanging the mirror securely, plug the power cable to a standard socket.

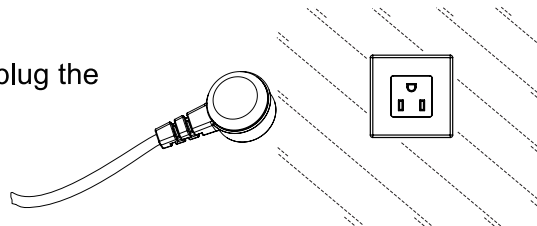


• **Option 2: Hardwired**

Cut the head off the plug and hardwire it into an outlet.

Black wire --- power supply L (LIVE)


White wire --- power supply N (NEUTRAL)

Green wire --- power supply E (EARTH)

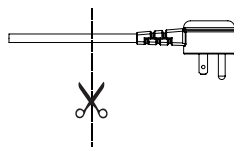


⚠ **REMINDER:** Please make sure the power is cut off before installation.


⚠ **WARNING:** This mirror must be earthed.

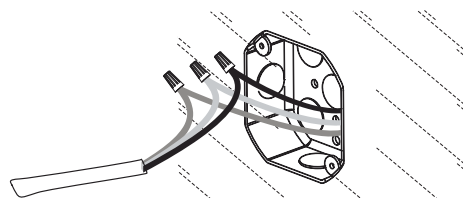

6. Attach the cabinet door back (①), plug the cable back to the top of cabinet and tighten it securely. (②)

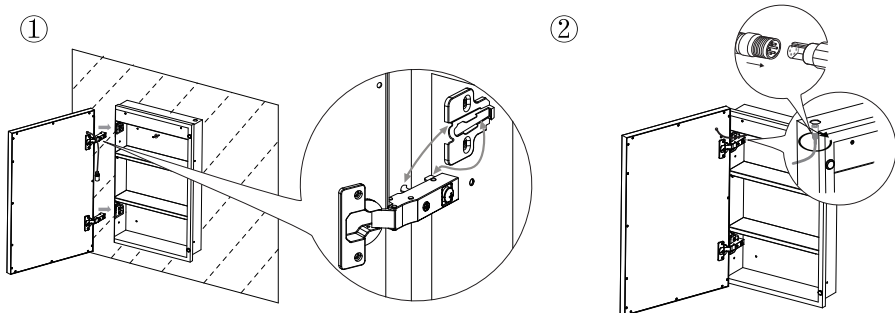


HOW TO ADJUST HYDRAULIC HINGES

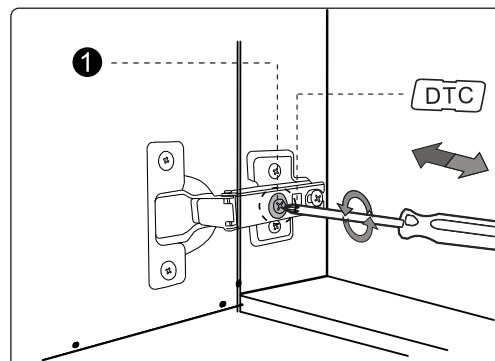


Open the “DTC” cover

Turn screw ① to adjust the depth of door overlay.

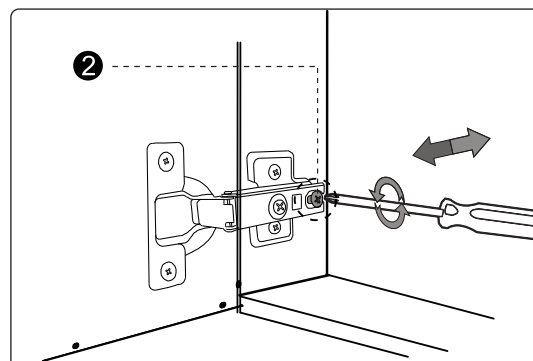


Turn front screw ② to adjust the gap between the door and cabinet.

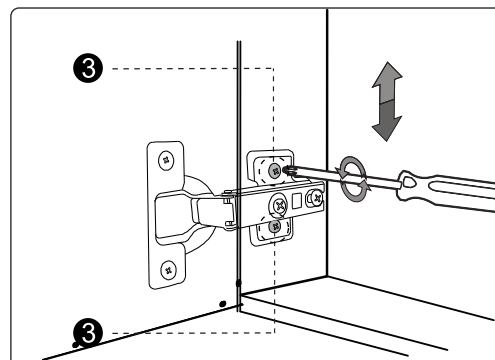

Turn the eccentric screw ③ to release the mounting plate from the cabinet, allowing the door to be moved up and down.


HOW TO INSTALL AND ADJUST SHELVES

Loosen the screws on parts D1 and D2.

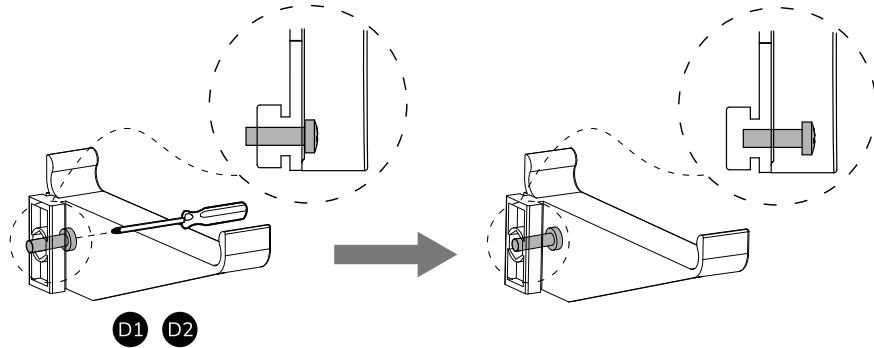


If you choose a left-handed door opening and do not adjust the shelf position, You can directly place the shelf panel on the shelf bracket and tighten the screws, then the installation is complete.

2-1. Left-handed door

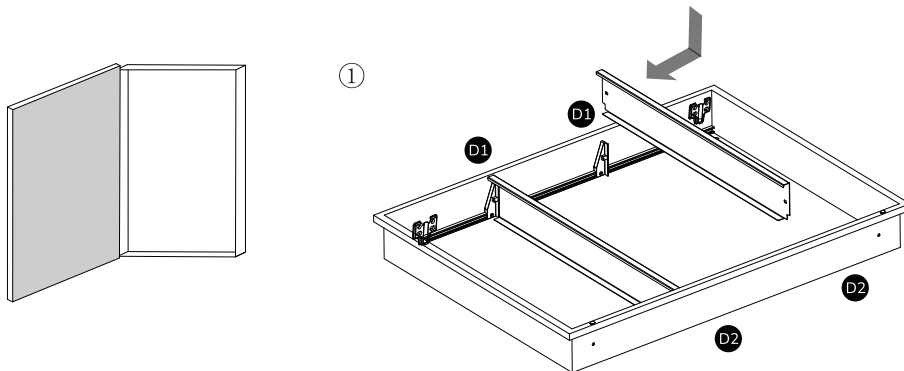


②

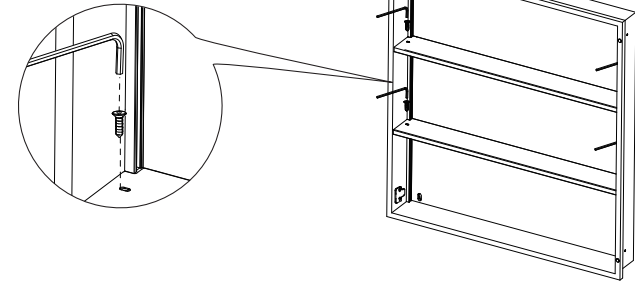


2-2. Left-handed door

If you choose a left-handed door opening and need to adjust the shelf position, first, place the shelf panel on the shelf bracket and loosen the screws, Then move the shelf brackets and shelves to the desired position.


①

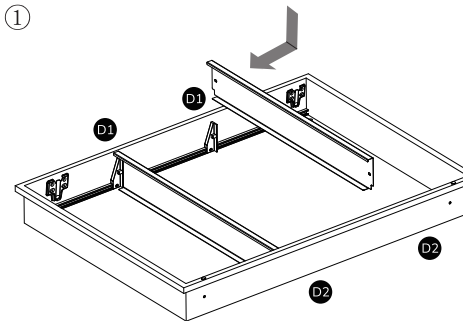


②

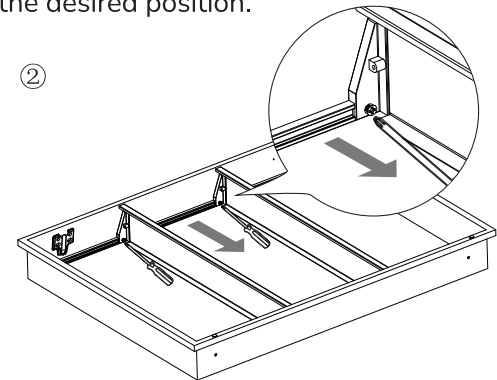

③

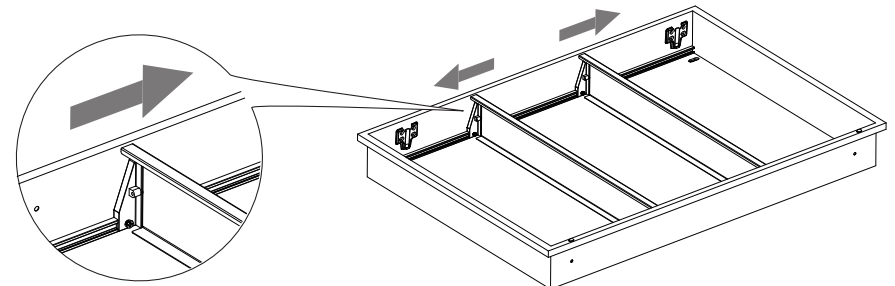


Finally tighten the screws to complete the installation.

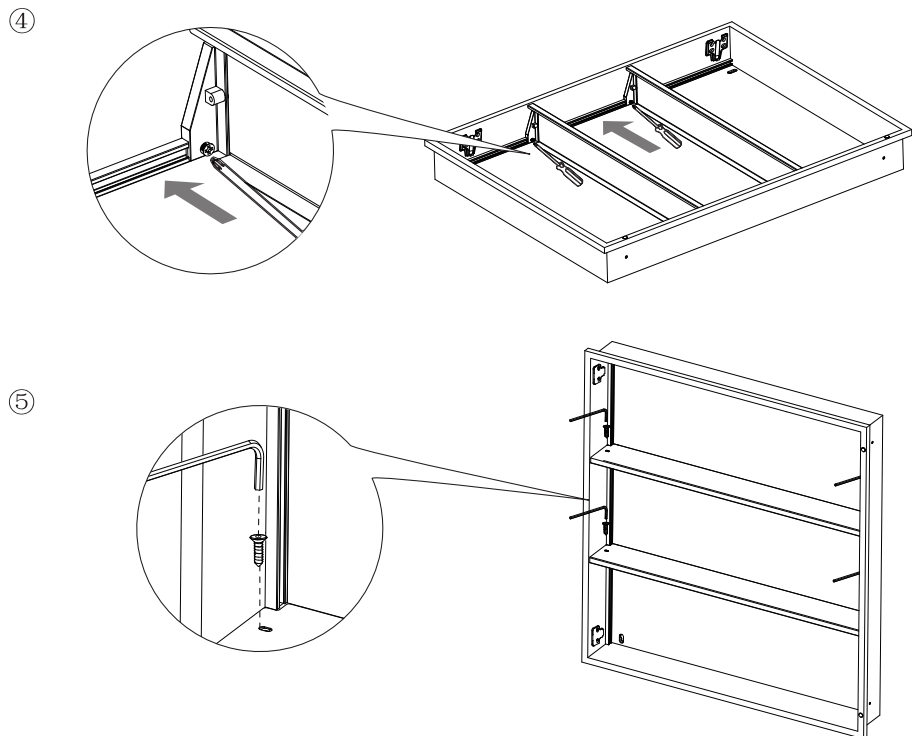


3. Right-handed door


If you choose a right-handed door opening, first unscrew the screws.

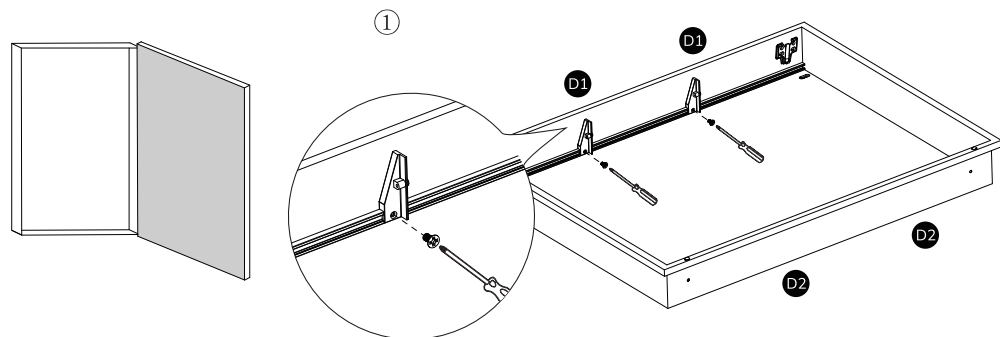


Remove the shelf brackets and rotate the cabinet body 180 degree. Then swap the left shelf bracket with the right one, install the original left shelf bracket on the right side, and install the original right shelf bracket on the left side.

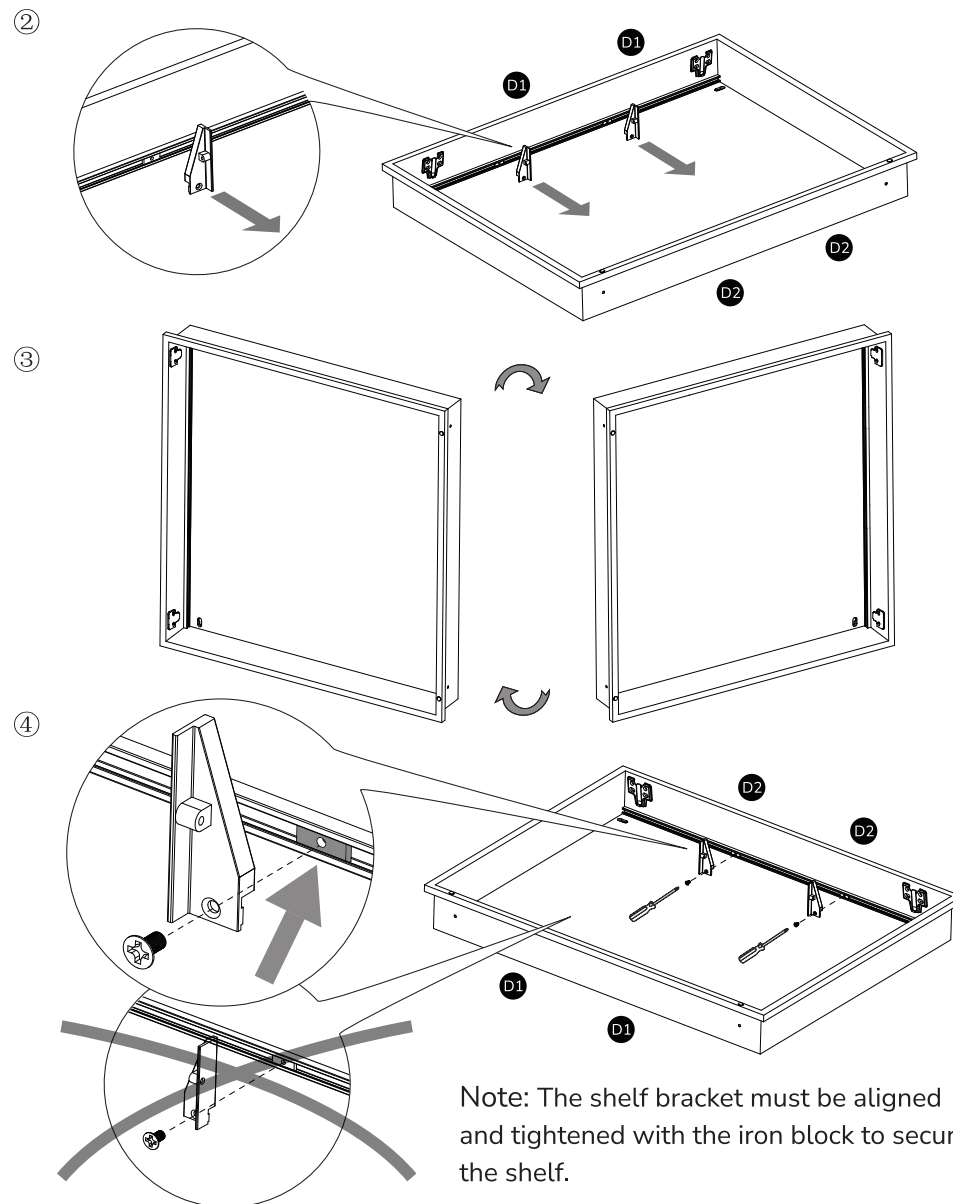

Place the shelf panel on the shelf bracket, then move the shelf brackets and shelves to the desired position. Finally, tighten the screws to complete the installation.

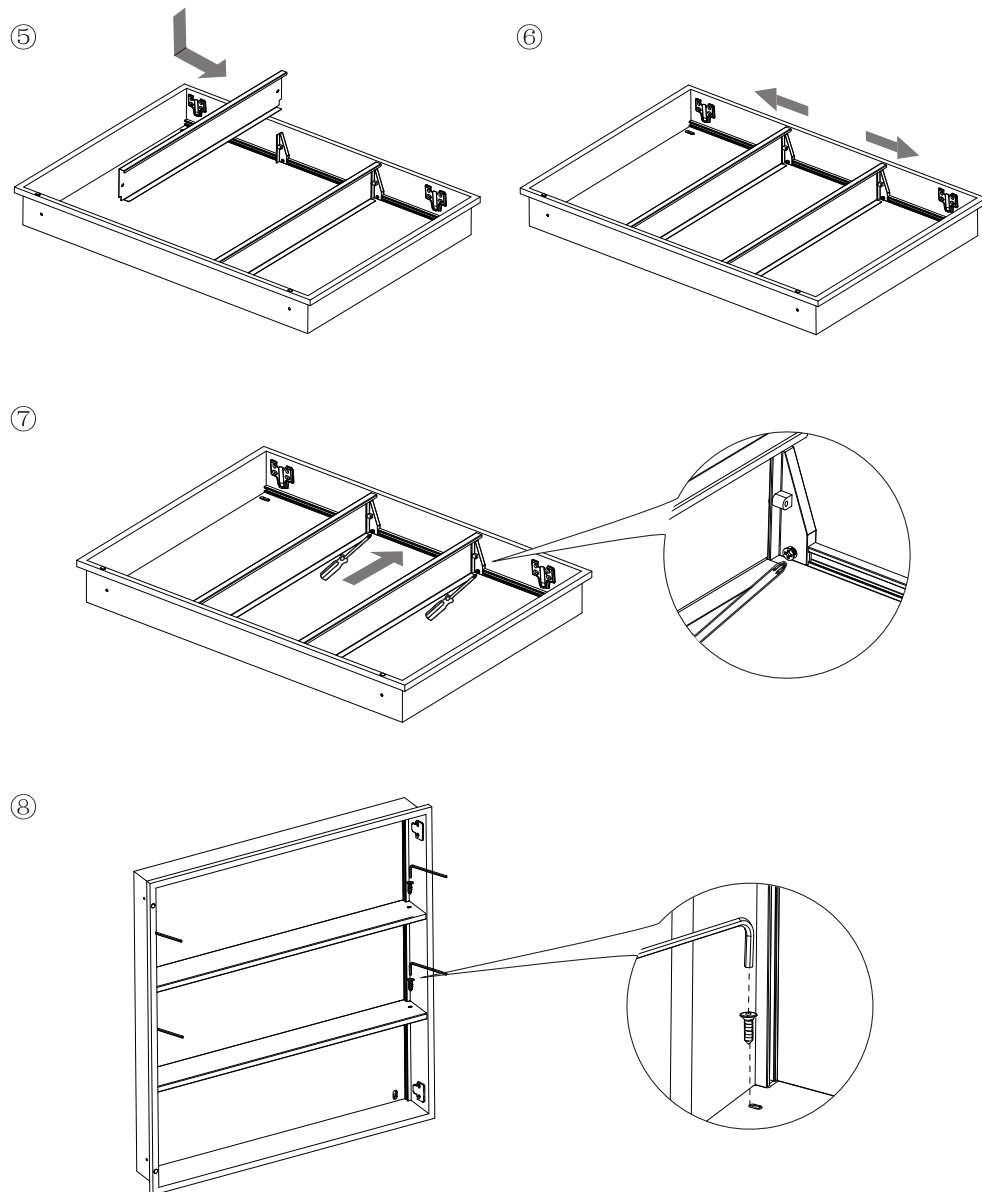


4. Place the cabinet vertically on the desktop, Please ensure the shelves are horizontal with the bubble level.

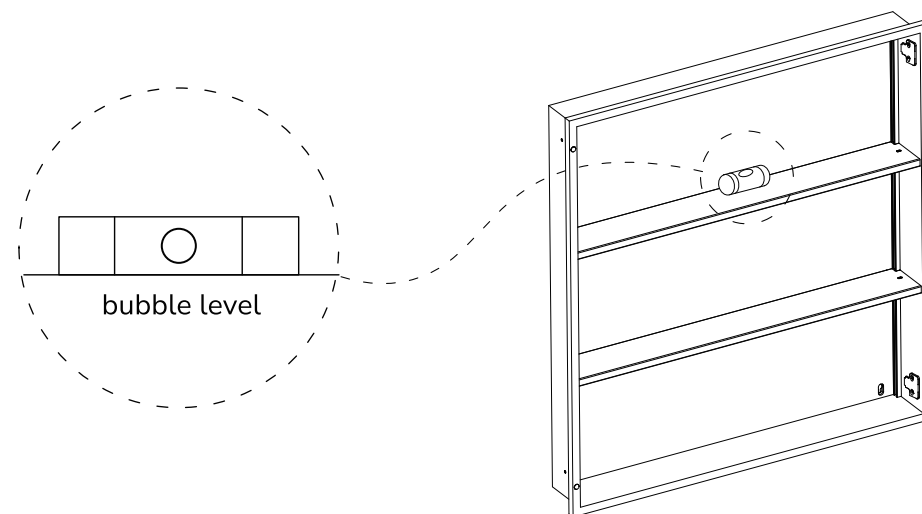


RECESSED-MOUNT INSTALLATION

1. Before installation, release the cable that connects the door and the cabinet (①). Press the lever under the hydraulic hinge (②), detach and slide the door off the frame (③)

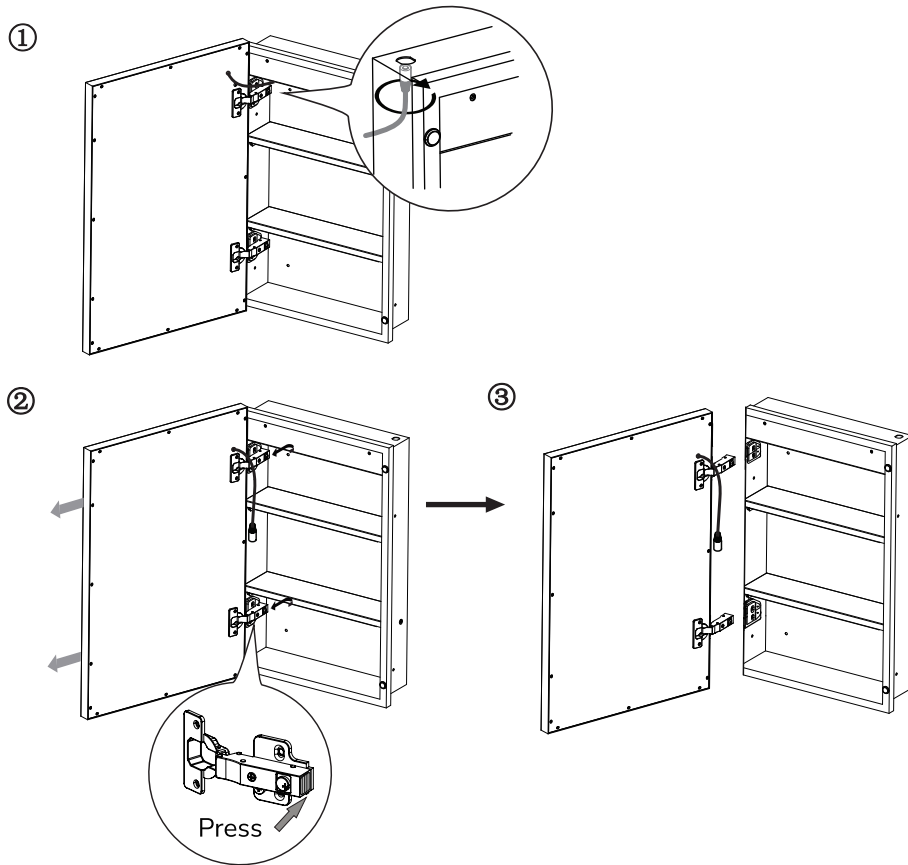


2. Place the medicine cabinet against the wall and make an outline of the cabinet box with the help of a level.

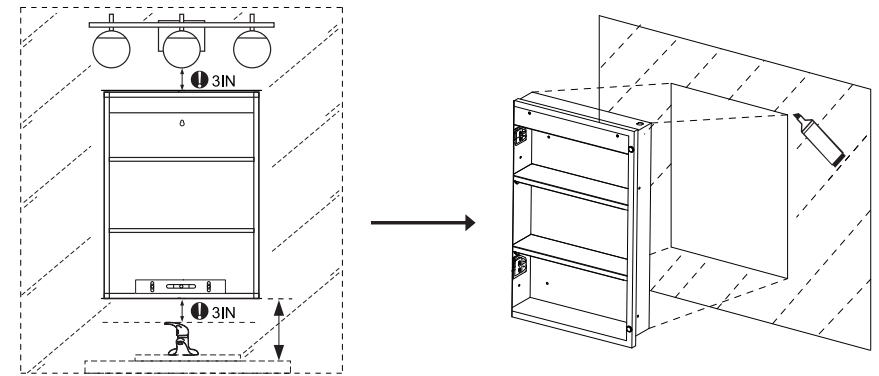


Note: Please hang the cabinet at least 3 inches above the faucet.

3. Cut the marked perimeter through the drywall (①), remove the cutout (②), and frame the cutout opening as instructed.

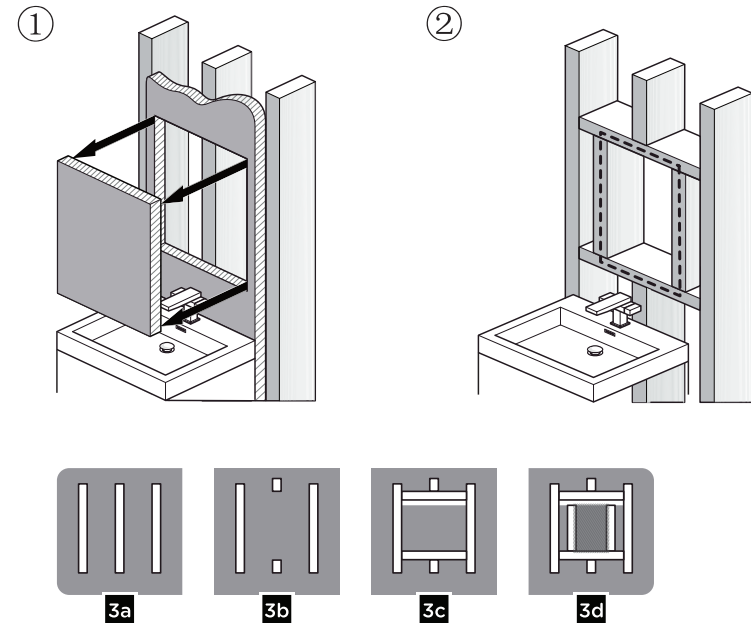



a. Mark the center stud;
 b. Saw it for cabinet to rest on;
 c. Add additional 2 studs on the top and at the bottom of the opening to support the cabinet;
 d. Two more studs on both sides for the cabinet to be secured on.

4. Put the medicine cabinet into the cutout opening (①) and mark the spots ①②③④ for drilling on the wall (②).

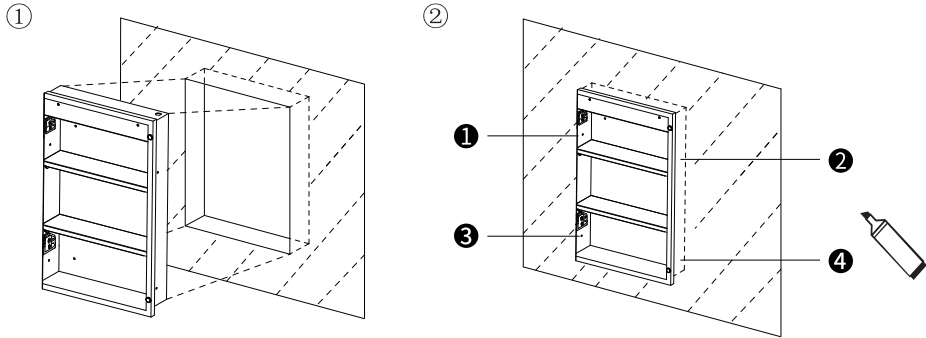


5. Take out the medicine cabinet, punch holes at the marked spots with an electric drill (①), and apply wall anchors with a hammer (②).

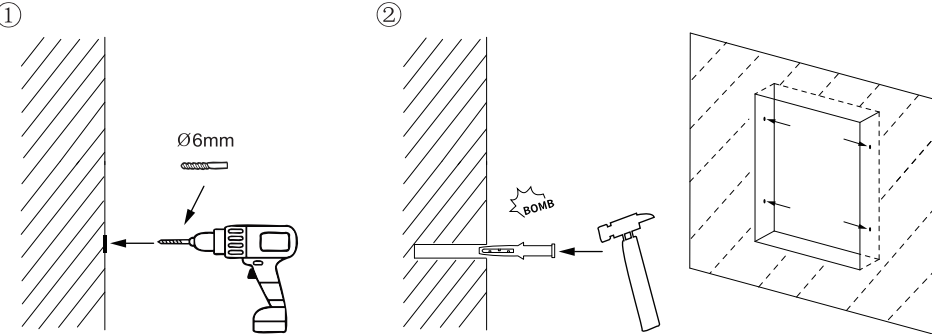

Thickness of Wall :	Recommended Drill Bit :
> 5/8" (16mm)	1/4" (6mm) drill bit, drilling depth in 1 31/32" (50mm)  
5/16" (8)-5/8" (16mm)	25/64" (10mm) drill bit  
< 5/16" (8mm)	Unapplicable


6. Place the medicine cabinet in the cutout opening and secure the cabinet with screws (①). Apply stickers to cover the keyhole located in the middle and screws installed on both sides of the cabinet (②). Finally, insert those larger spout plugs to the holes on back panel of the cabinet (③).

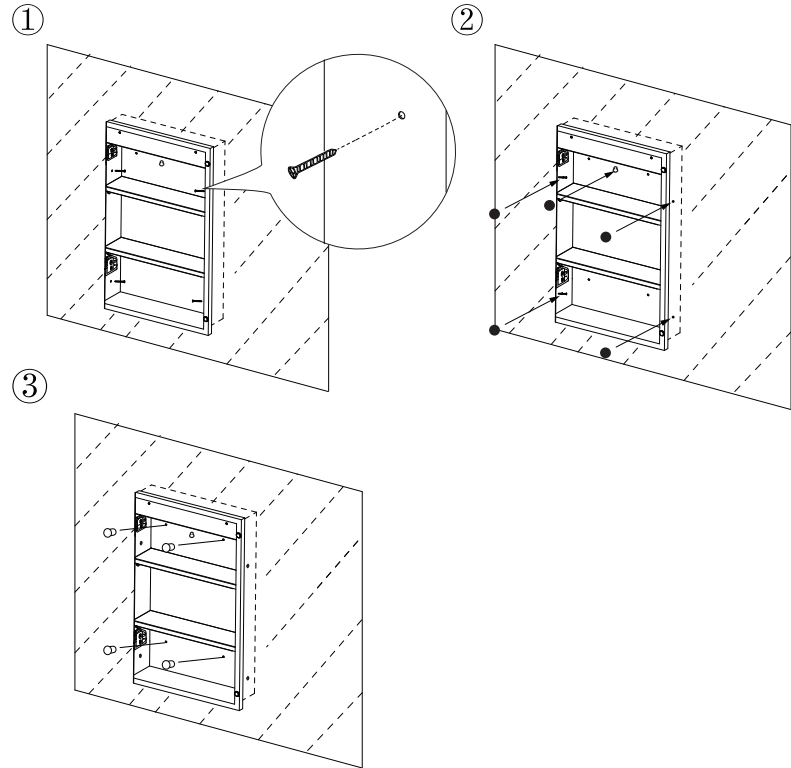

7. Connect the power by plugging into an outlet or hardwired to a standard circuit panel.

• Option 1: Plug-in

After hanging the mirror securely, plug the power cable to a standard socket.

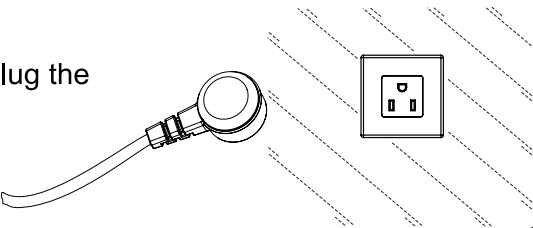

• Option 2: Hardwired

Cut the head off the plug and hardwire it into an outlet.

Black wire --- power supply L (LIVE)

White wire --- power supply N (NEUTRAL)


Green wire --- power supply E (EARTH)



Reminder: Please make sure the power is cut off before installation.




Warning: This mirror must be earthed.

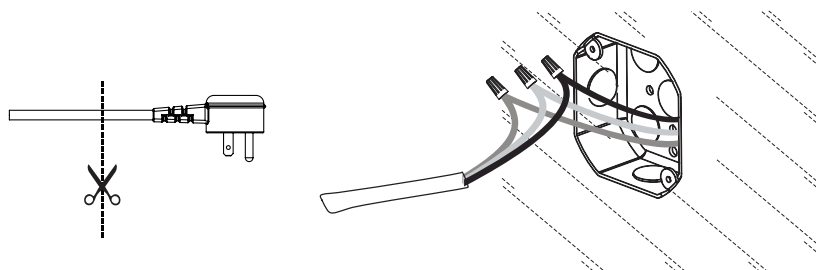


8. Attach the cabinet door back (①), plug the cable back to the top of cabinet and tighten it securely. (②)


①

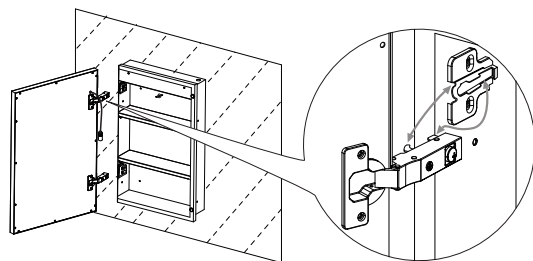

②

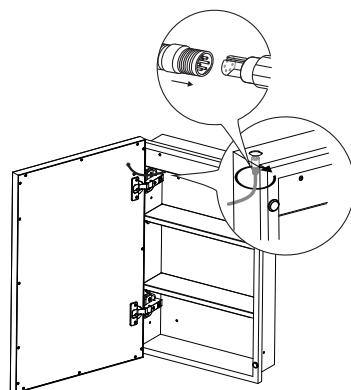


HOW TO ADJUST HYDRAULIC HINGES

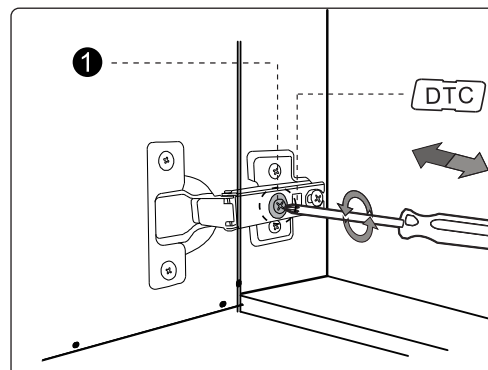


Open the “DTC” cover

Turn screw ① to adjust the depth of door overlay.

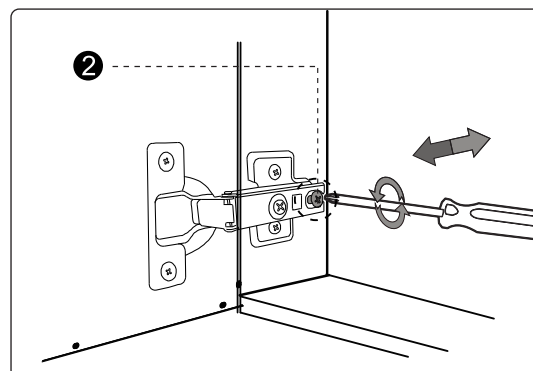

Turn front screw ② to adjust the gap between the door and cabinet.

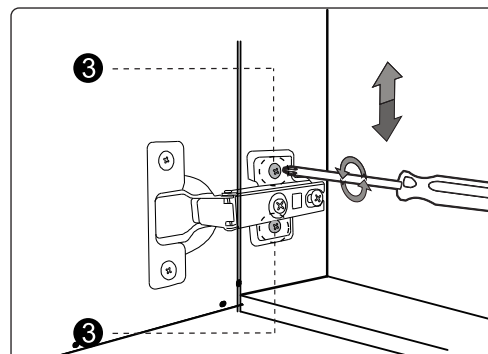

Turn the eccentric screw ③ to release the mounting plate from the cabinet, allowing the door to be moved up and down.