
Instruction Manual

MOCUTEEN

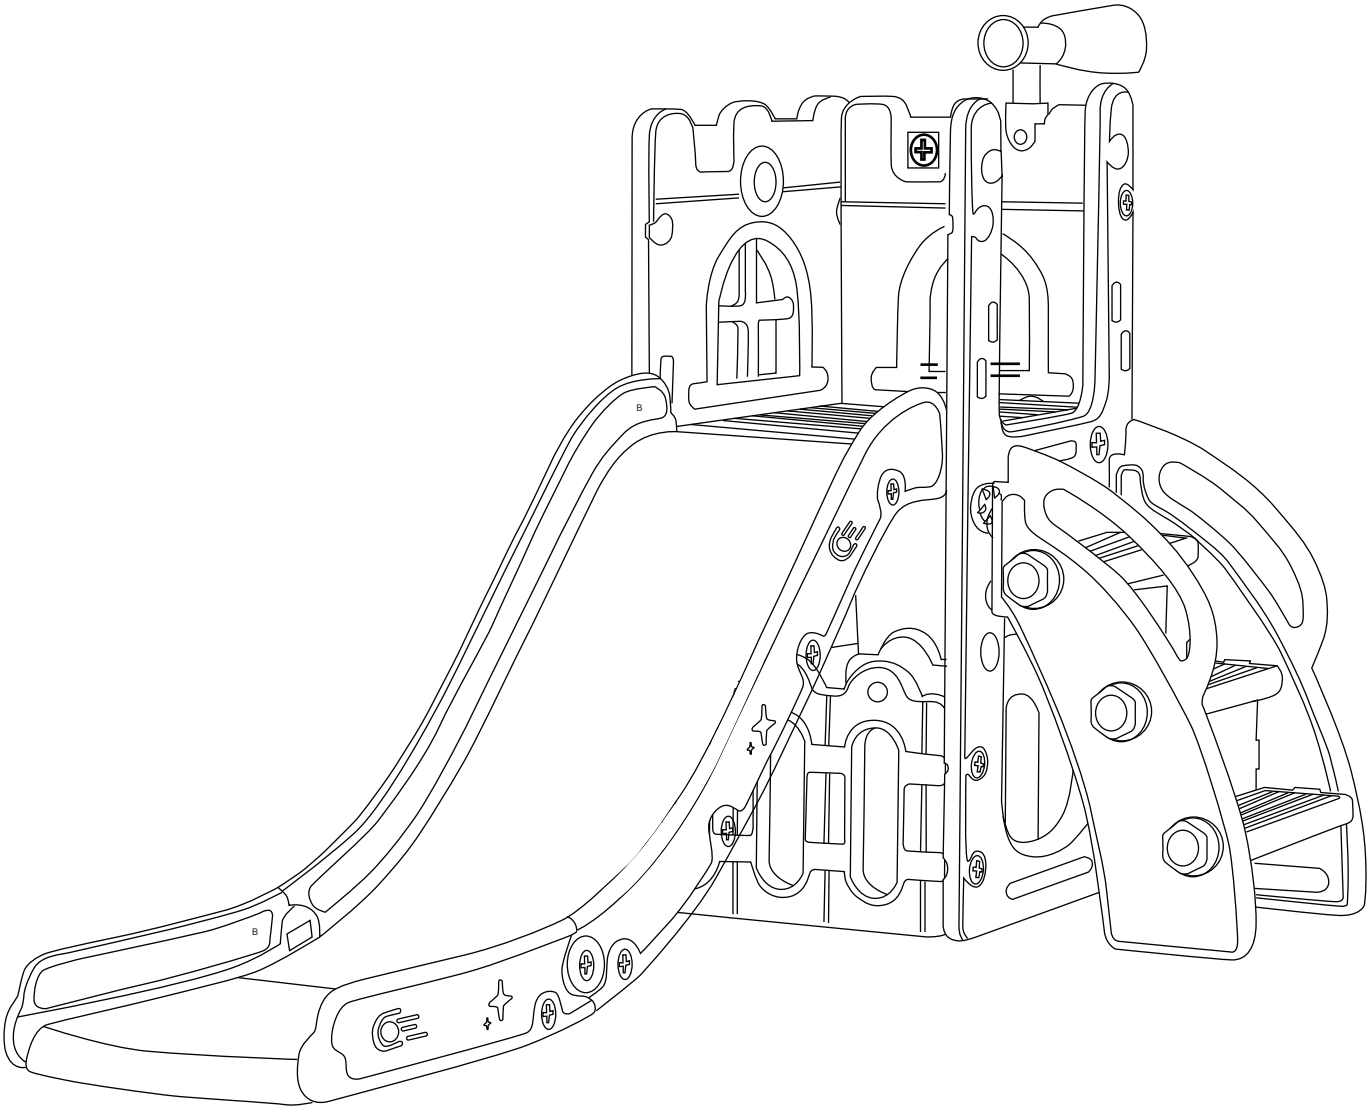


Please read the manual carefully before
using this product and keep it properly for future reference

Parts
Introduction


Parts Inventory

A

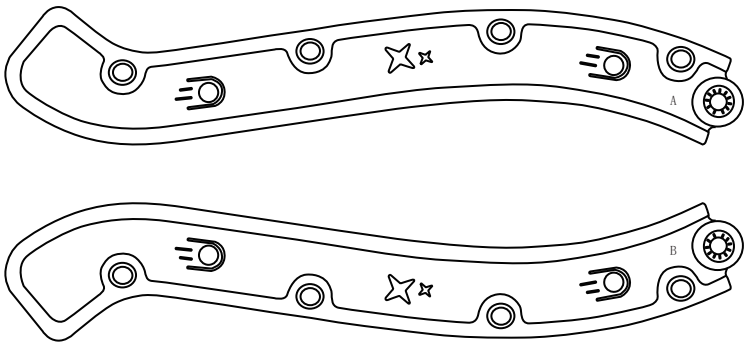


ABx1

B

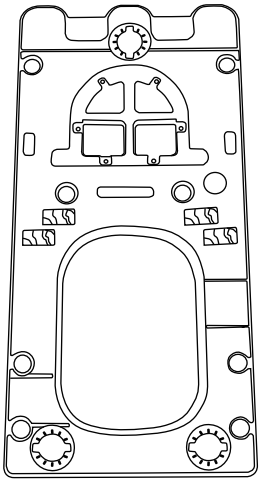


x1

C

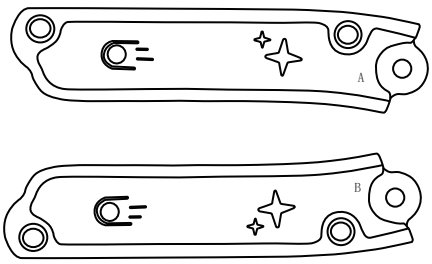


ABx1

D

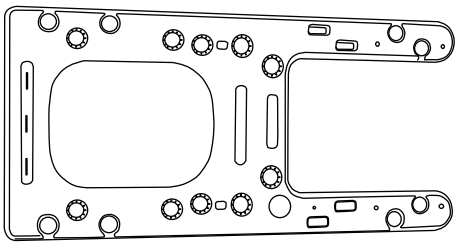


x1

E

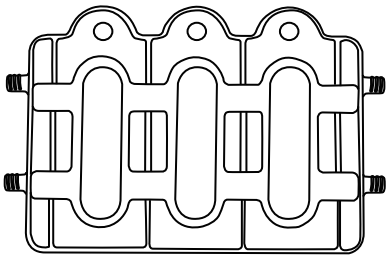


x2

F

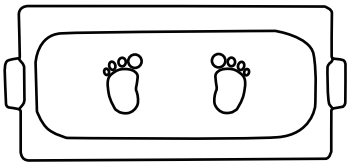


x2

G

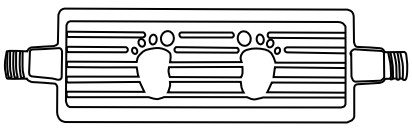


x3

H

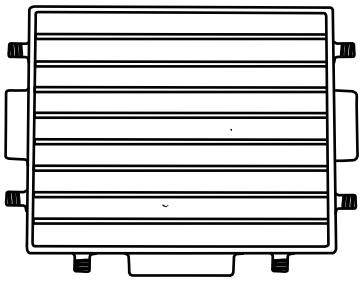


x1

I

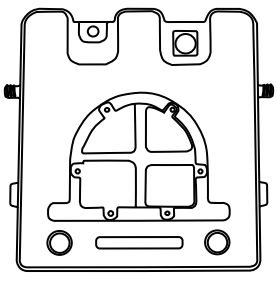

x1


J

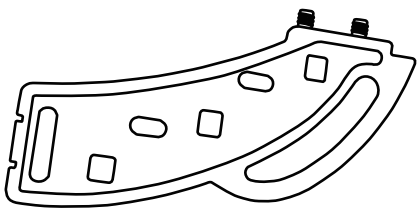

x2


Parts Inventory

K

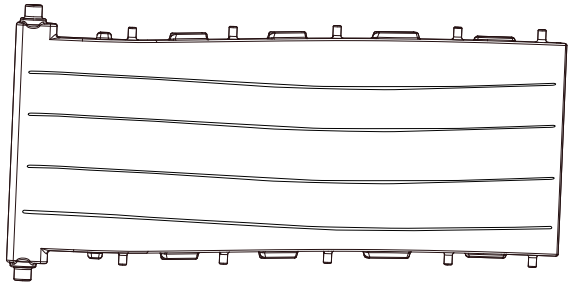


x1

L

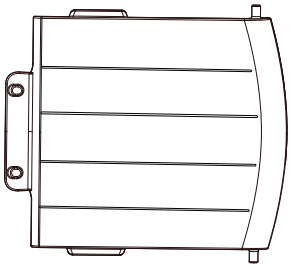

x1

M

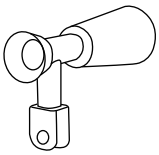

x1

N




x14+2

O



x21+2

P

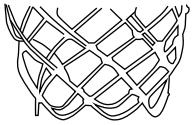


x1

Q



x1

R

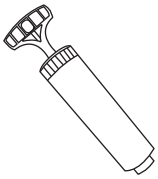

x1

S


M10



x1


T

10*20mm




x1

U



x2

V




x1

W




x6+1

X

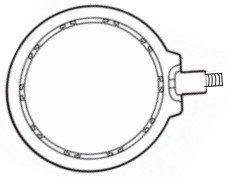


x1

Y

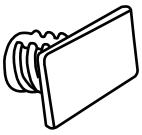


x2

Z




x2

a

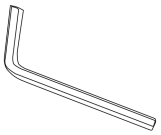

x2

b




x2

01

N X 2	Y X 2
	


For track A, align the holes on the upper and lower side panels, and secure them using the square nut Y on the inside and the track nut N on the outside.

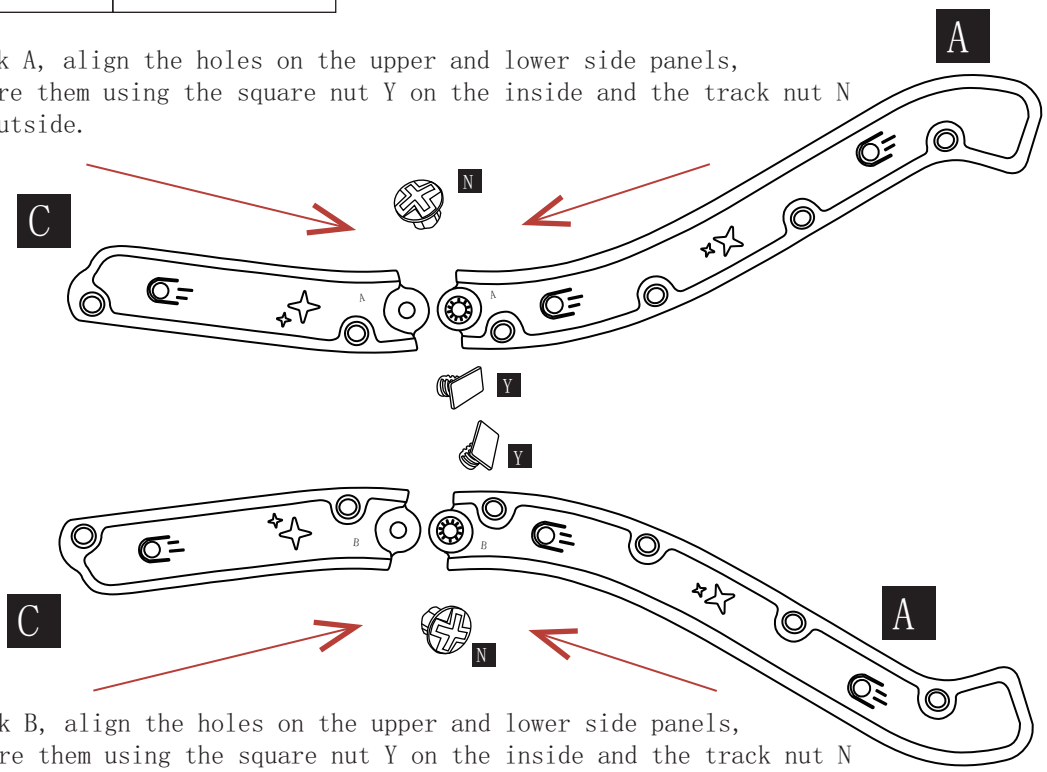

For track B, align the holes on the upper and lower side panels, and secure them using the square nut Y on the inside and the track nut N on the outside.

02


Align and combine the upper and lower tracks by aligning the holes.

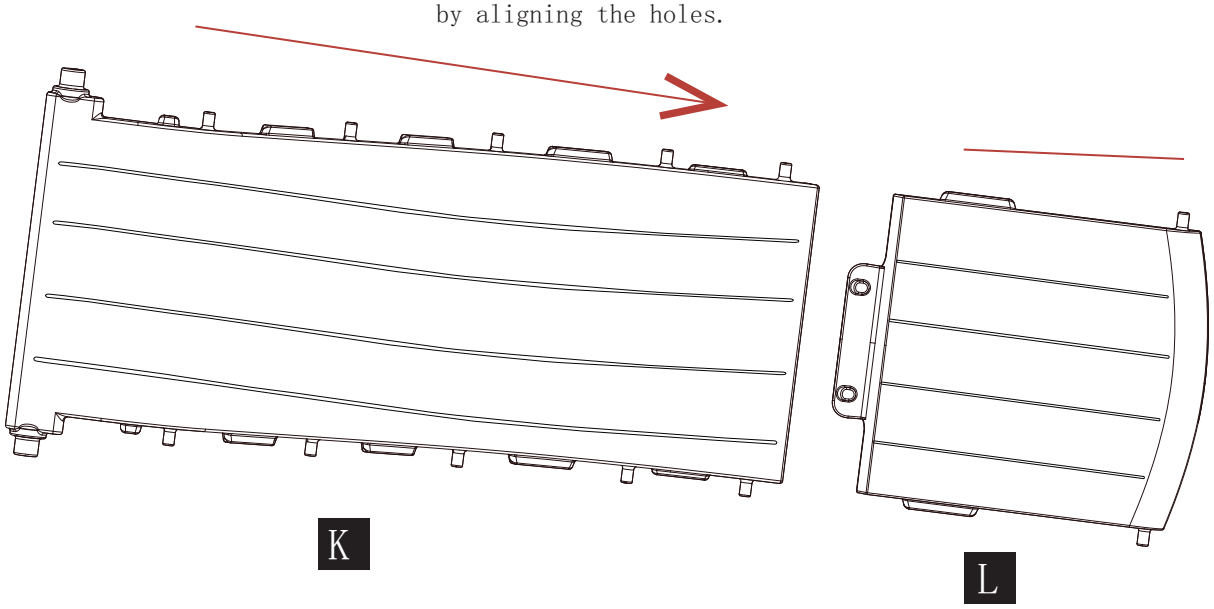

03


N X12

After installing the side panel of the slide,
align the holes with the studs on the slide nut column,
and secure them using the slide nut N.

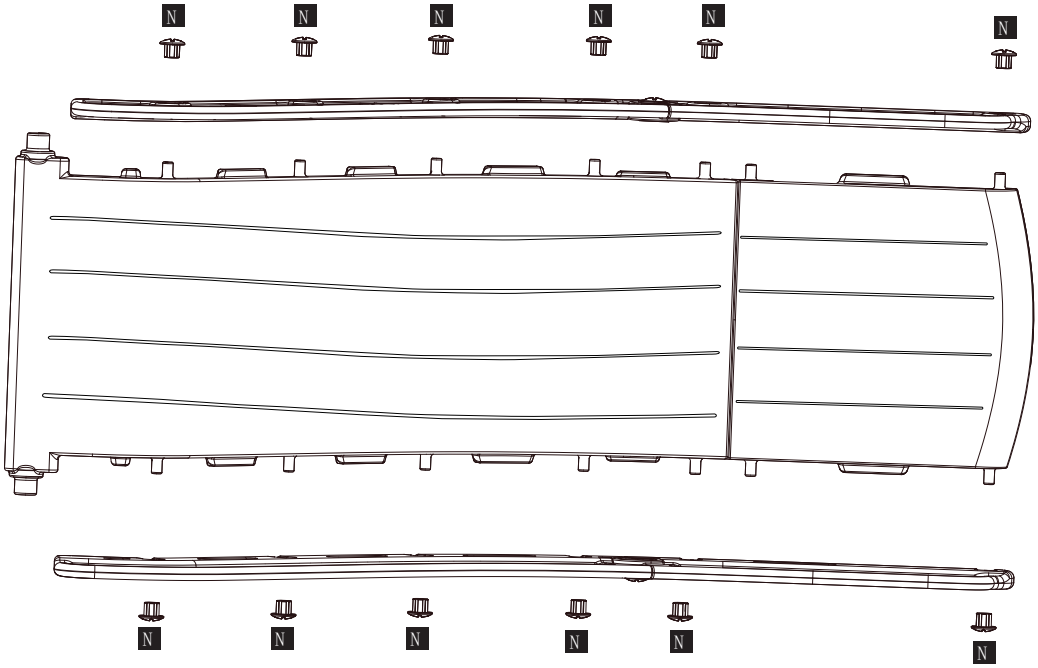

04

O X4

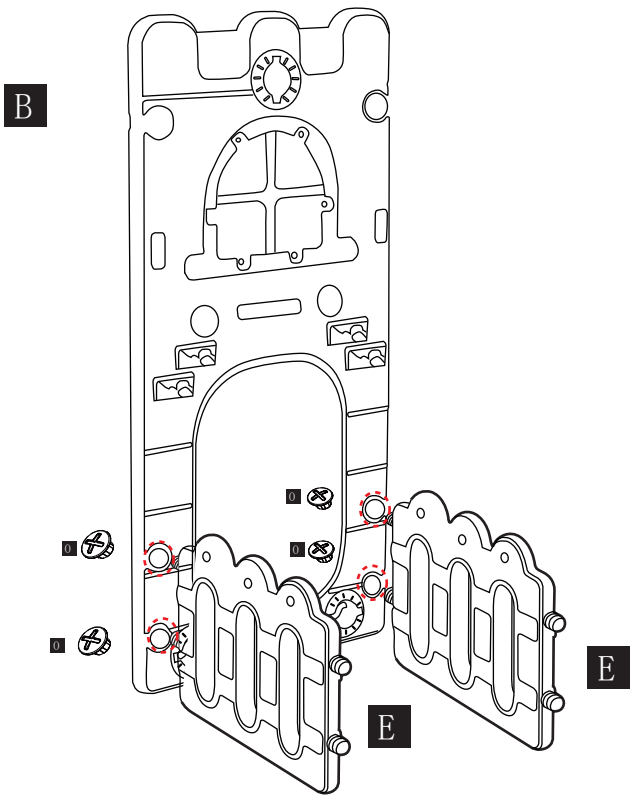


Place the railing on the bottom of side panel B,
and from the outside, align the holes to install and secure with nut O.

05

O X 5


Align and insert the balance board H with the corridor small door I, and secure them from the outside using nut O.


After assembling the balance board corridor, place it into the large side panel, align the holes, and secure with nut O on the outside.

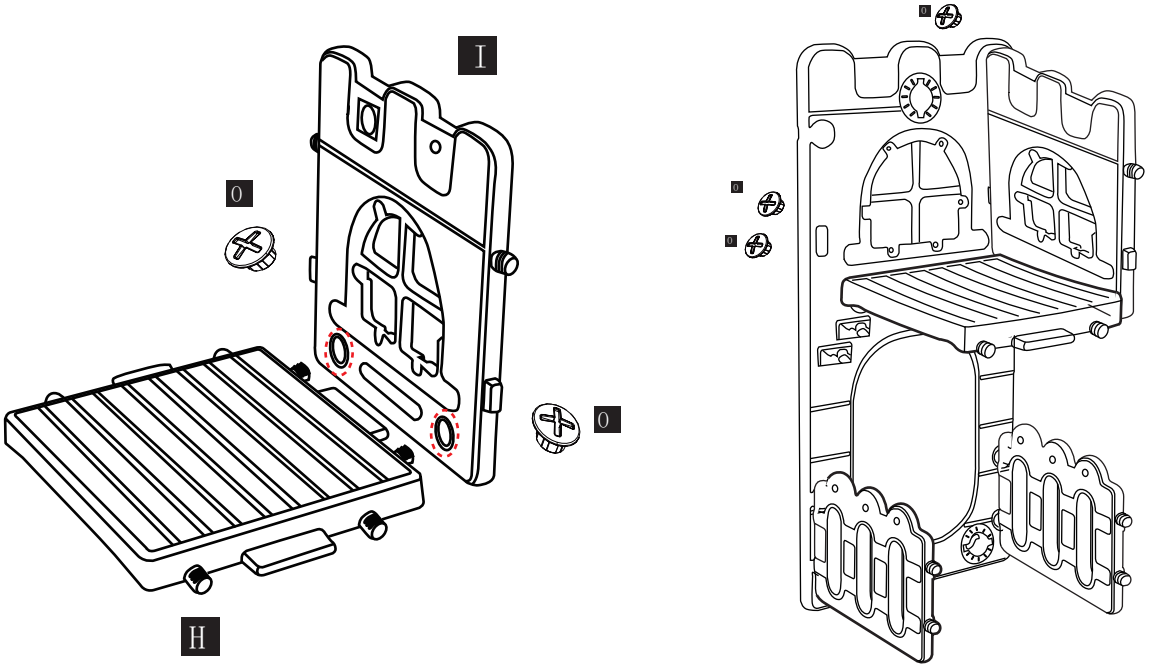

06

Z X 2	O X 7
	
b X 2	
	

Place the assembled slide into the side paneland secure it with the fixing nuts.

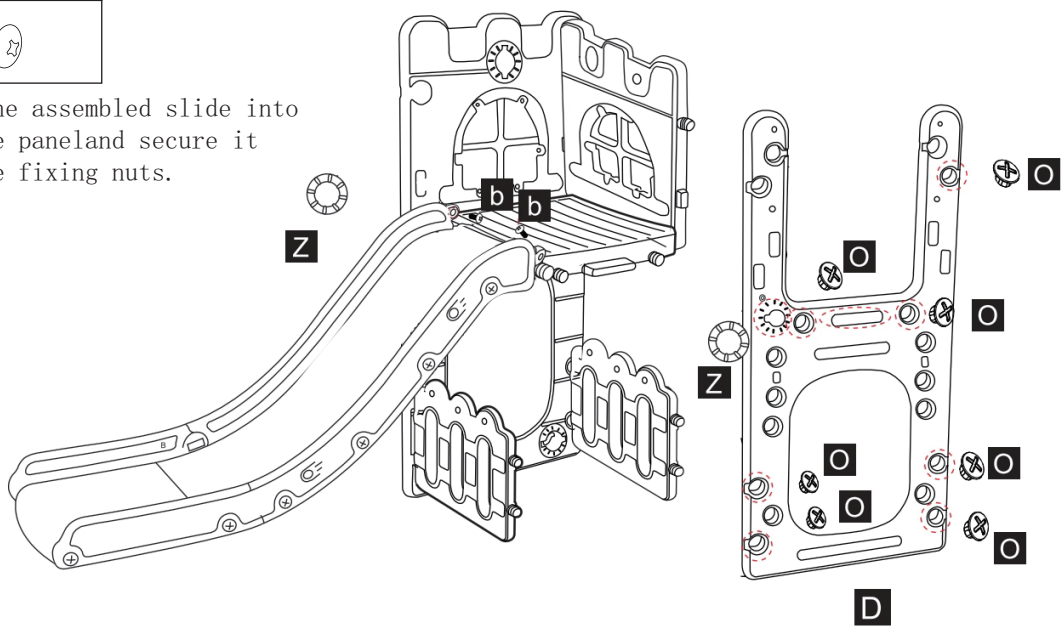

Install the half side panel D by aligning the holes from the outside and securing it with nuts.

07

W X 6	U X 2
	

Attach the anti-slip pad to the bottom of the handrail bracket.

Sequentially install and secure the step ladder side panel J by aligning the holes and fastening with nut W. Finally, attach and secure the ladder side panel with its fixing nuts.


08

O X 5

S X 1

T X 1


Insert into the designated position, align the holes, and install the iron nuts S and T into their respective slots.

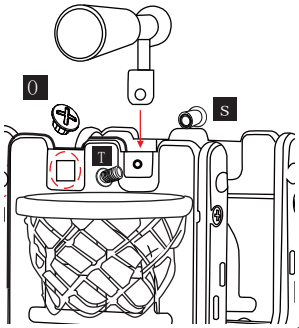

NOTE: The installation of the basketball net is shown below:

