















Assembly Instruction



①*1pc		A*4+1EXT	 M6*55MM+M6*14*1MM
②*1pc		B*1+1EXT	 M6*50MM
③*1pc		C*4+1EXT	 M6*20MM
④*1pc		G*1	 M6

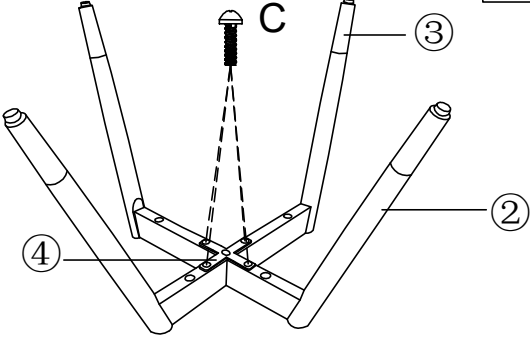
STEP 1  



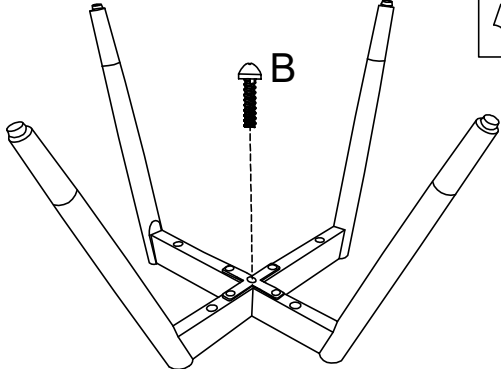


STEP 2  

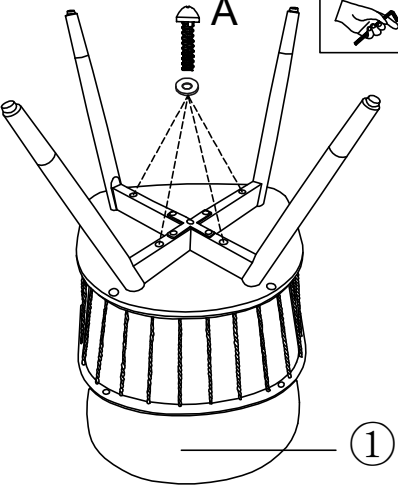

STEP 3  



STEP 4  

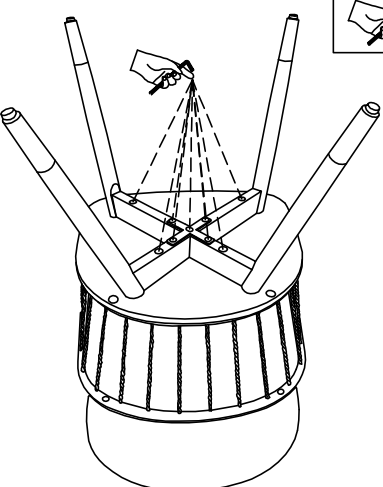

STEP 5

