








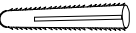
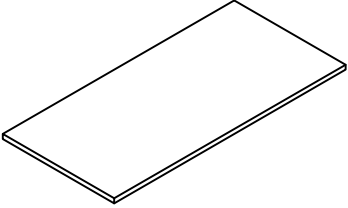
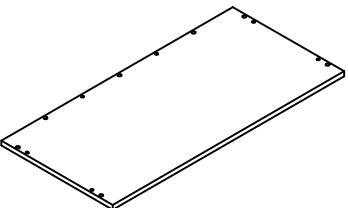
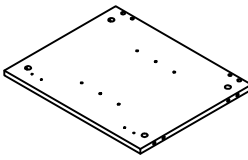
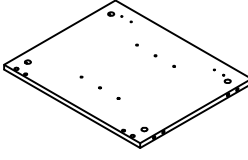
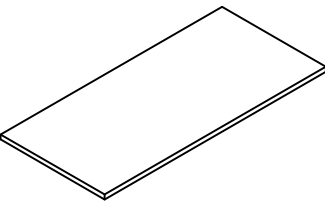
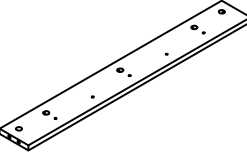
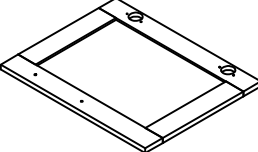
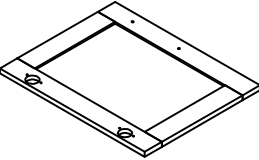


<p>A</p>  <p>18PCS</p>	<p>B</p>  <p>18PCS</p>	<p>C</p> <p>8*40</p>  <p>16PCS</p>	<p>D</p> <p>3.5*14</p>  <p>16PCS</p>	<p>E</p>  <p>4PCS</p>	<p>F</p>  <p>2PCS</p>	<p>G</p> <p>4*18</p>  <p>4PCS</p>	<p>H</p>  <p>4PCS</p>	<p>I</p> <p>4*50</p>  <p>10PCS</p>	<p>J</p> <p>8*40</p>  <p>10PCS</p>
--	---	---	---	---	--	--	--	---	---


1  800*385 1PS	2  800*385 1PS	3  470*385 1PS	4  470*385 1PS	5  765*395 1PS
6  768*100 2PS	7  500*399 1PS	8  500*399 1PS		




Hardware installation demonstration

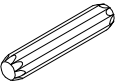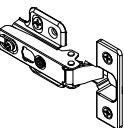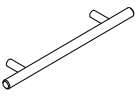NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

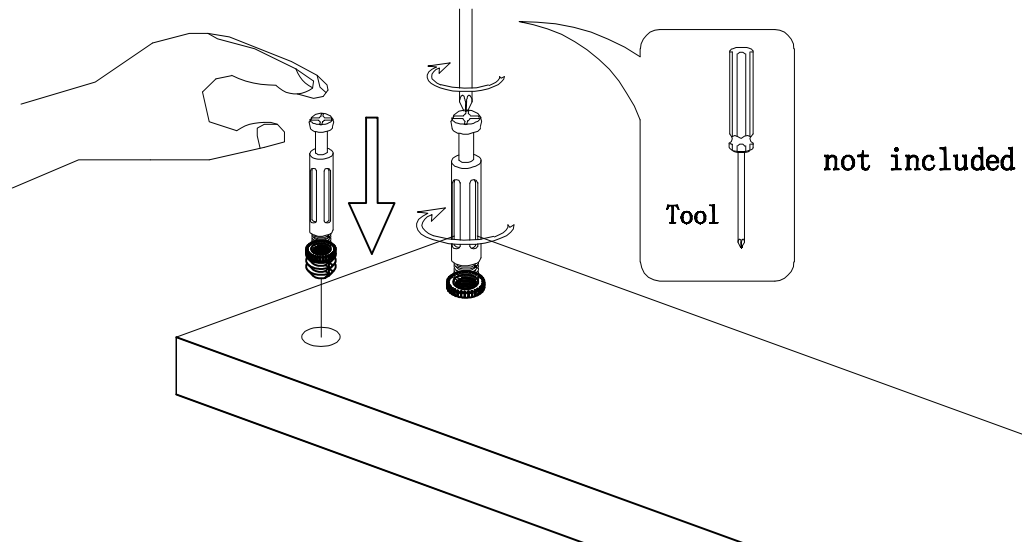

II

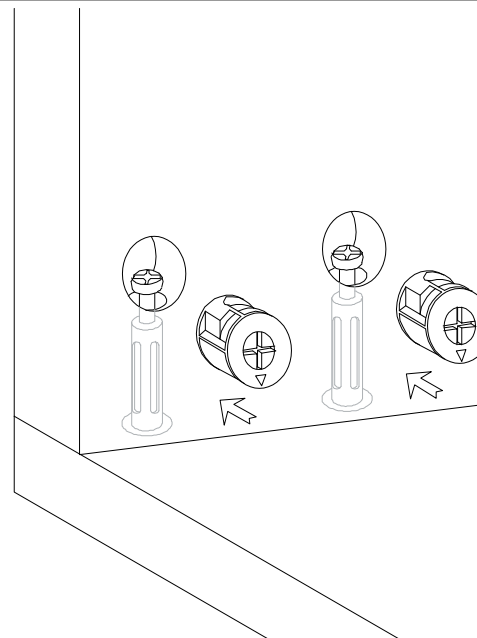

III

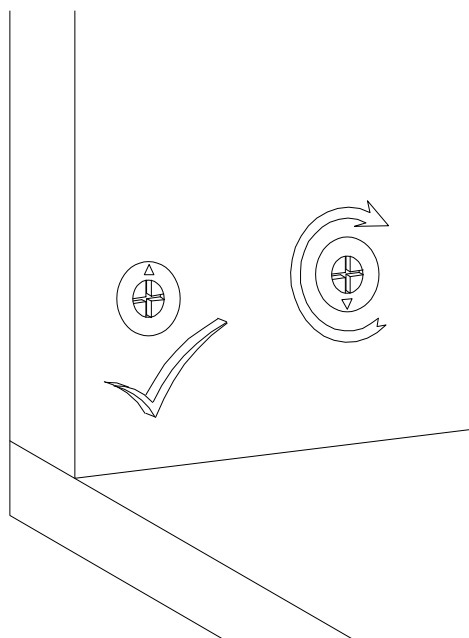


IV



Scan QR code for assembly video







①

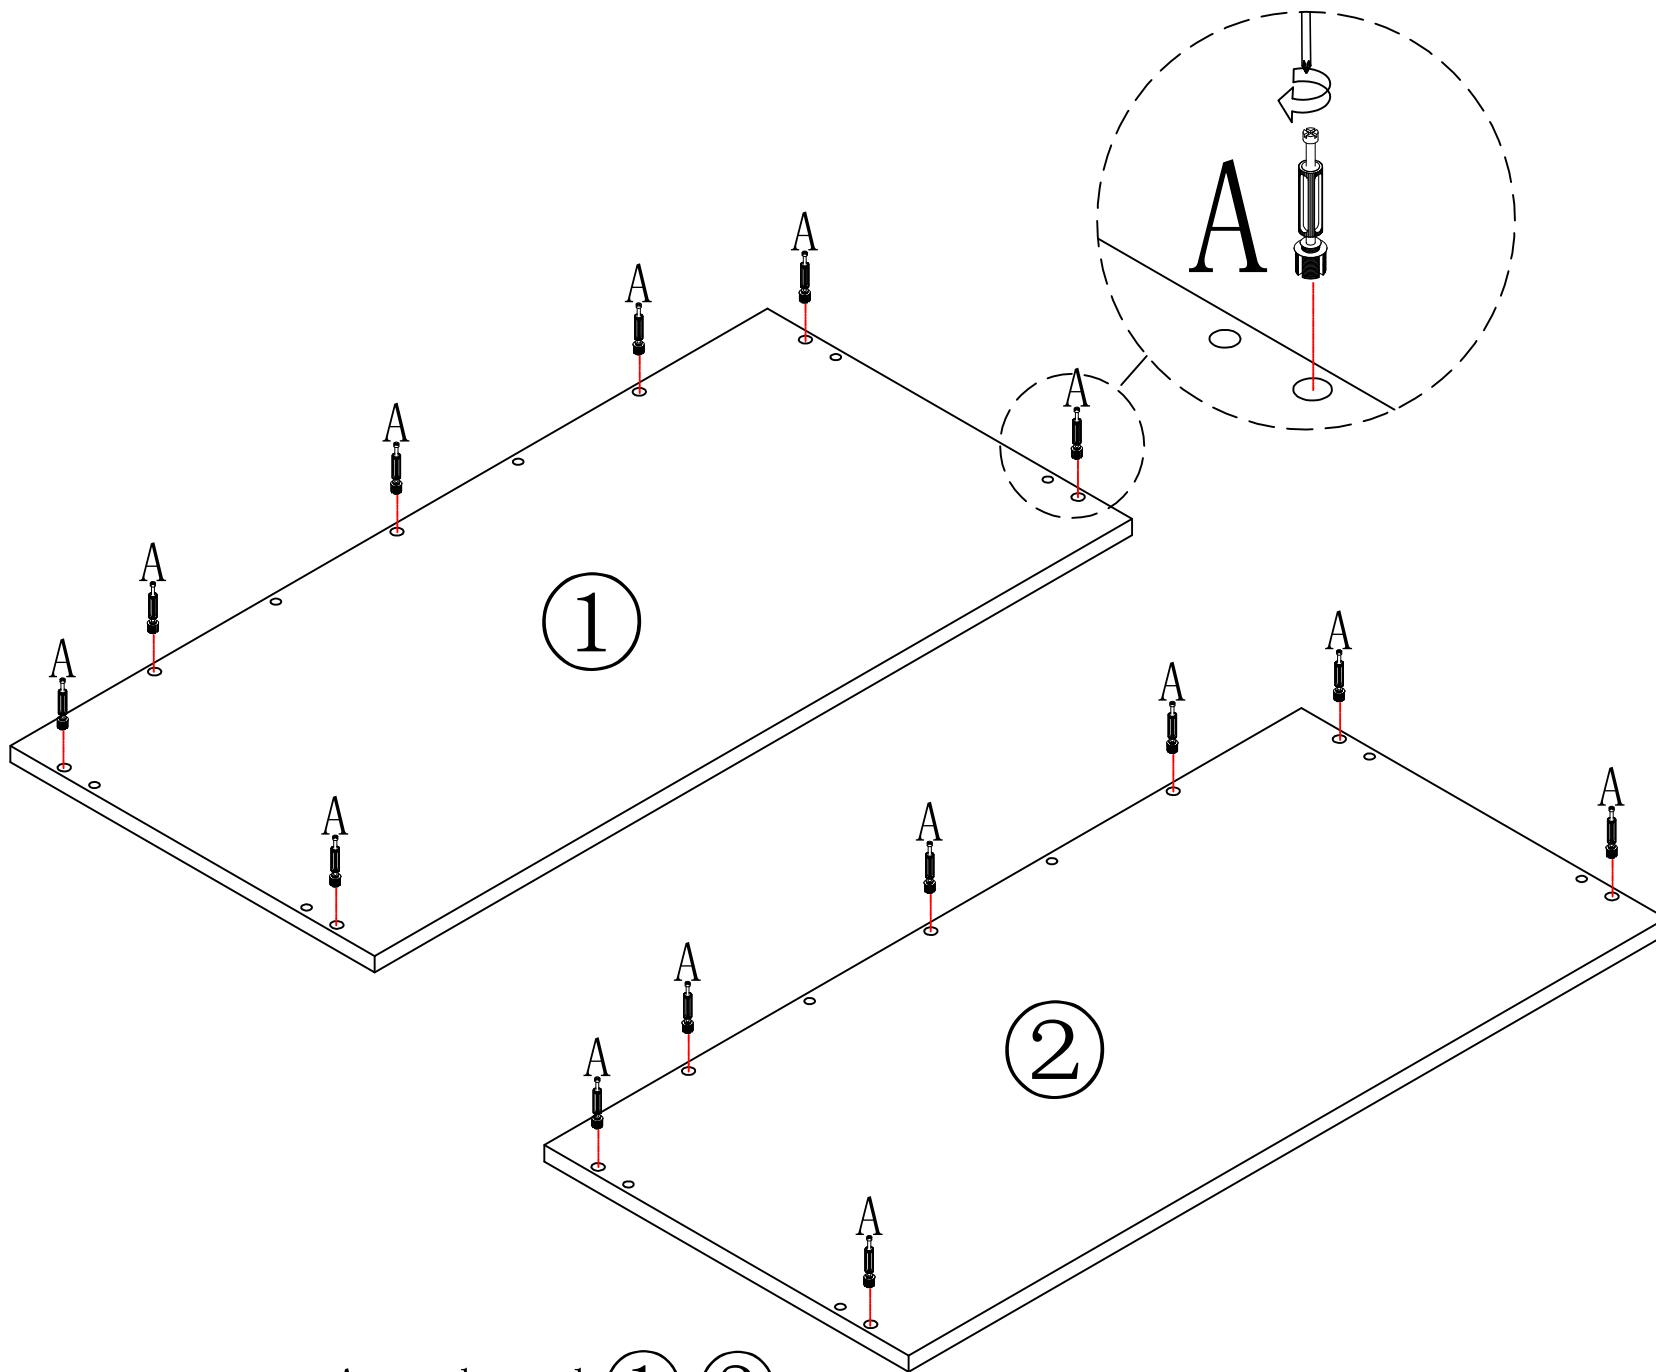

A*14

put A on board ① ②

②

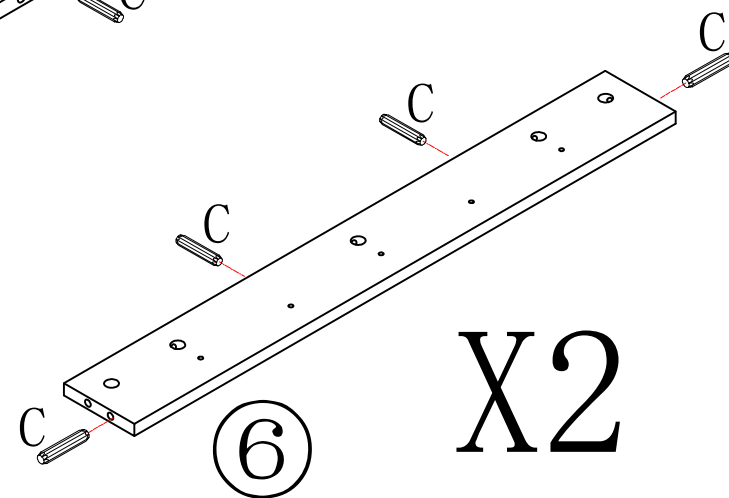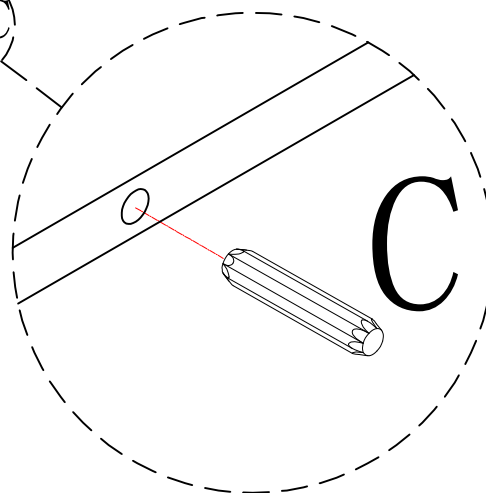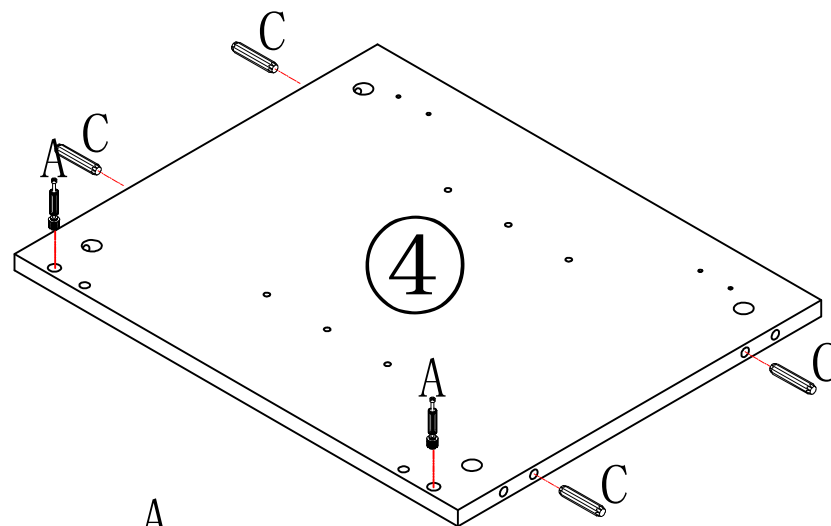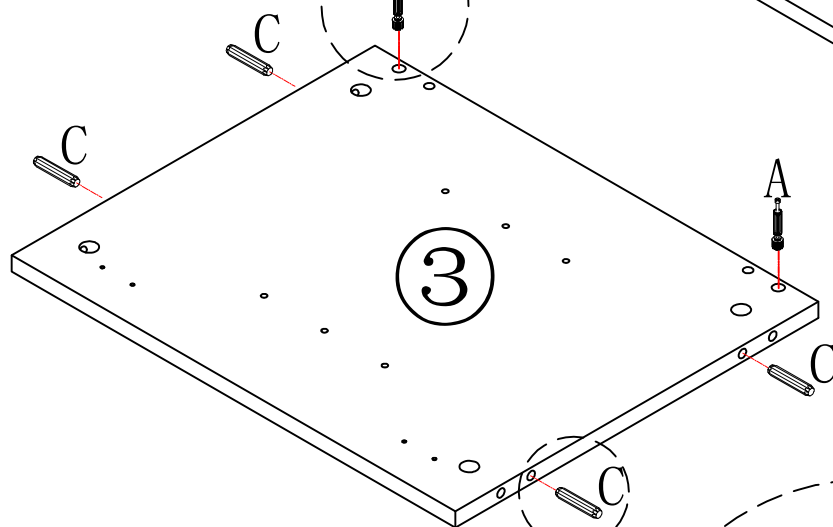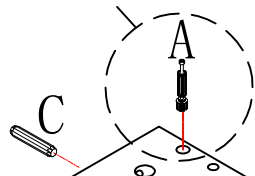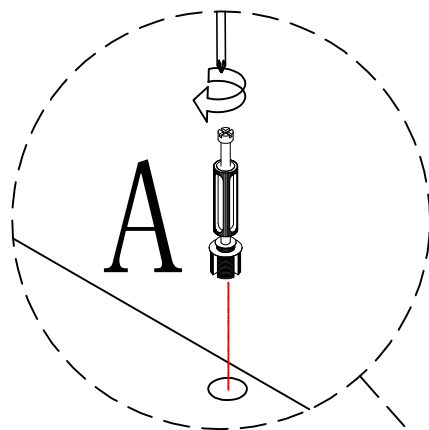

A*4





C*16

put A on board ③ ④
put C on board ③ ④ ⑥

3

Make sure the arrow on the screw align to the hole on the side

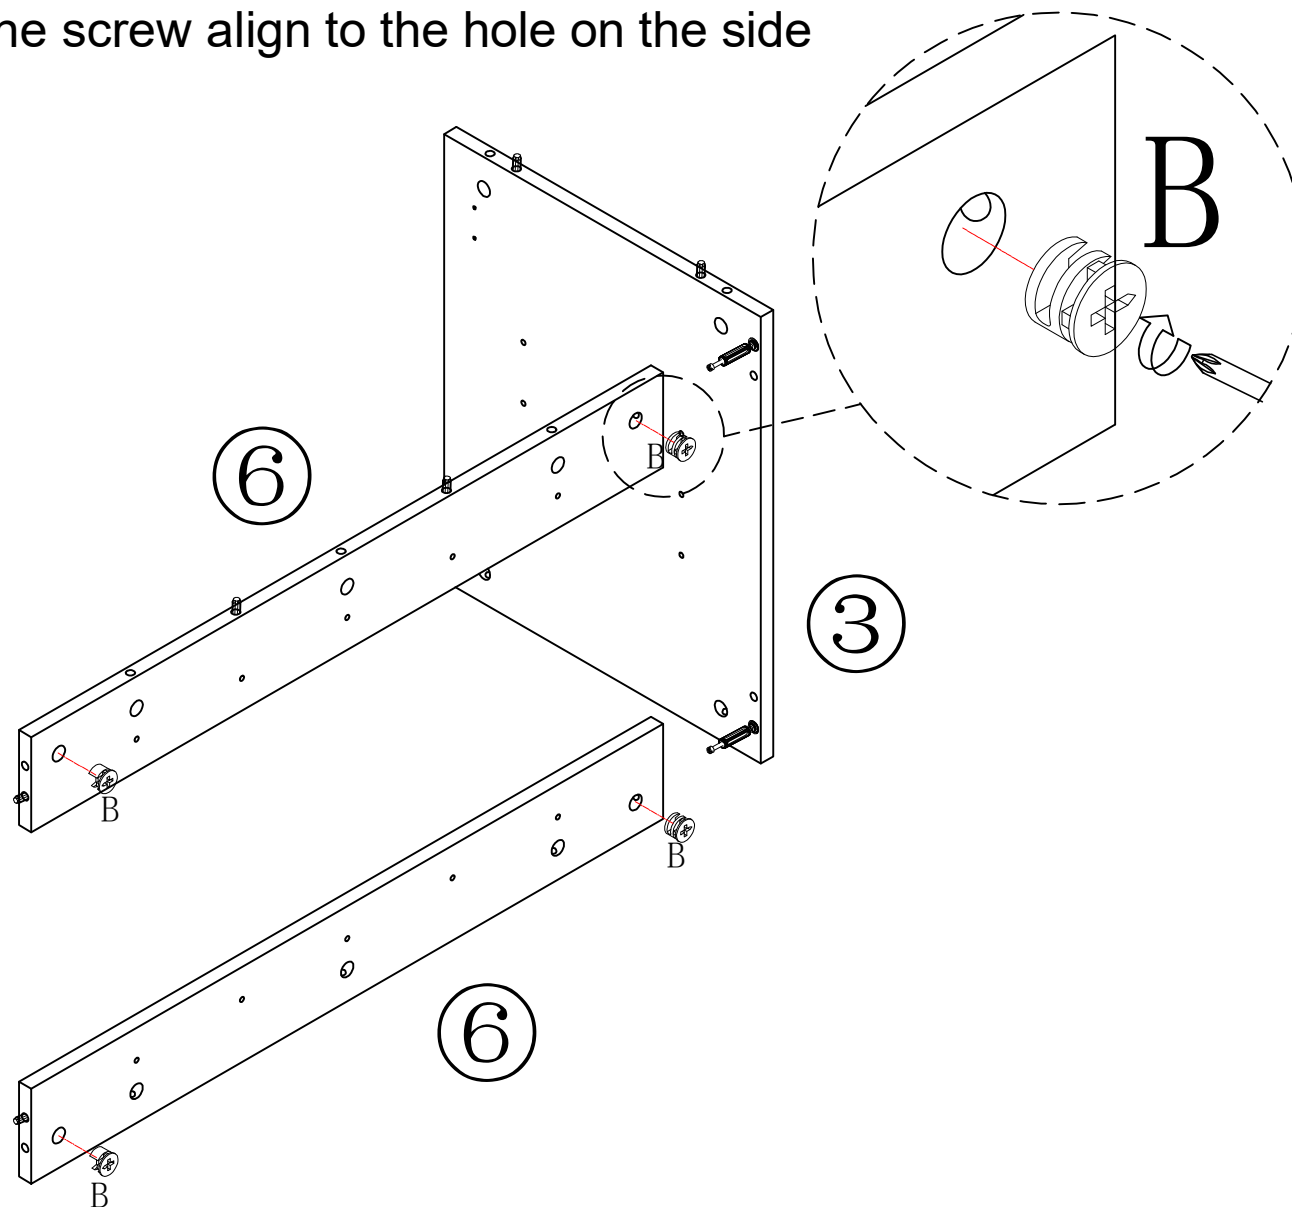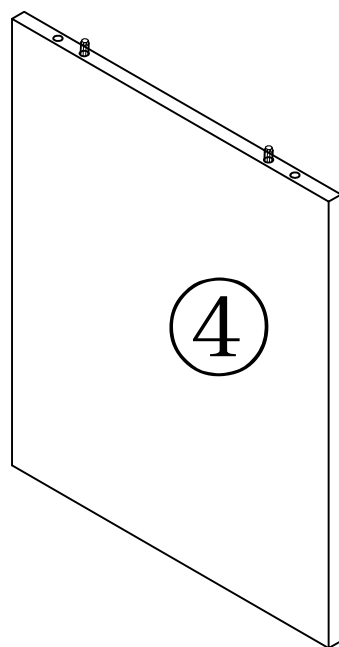


put B on board ⑥



B*4

④


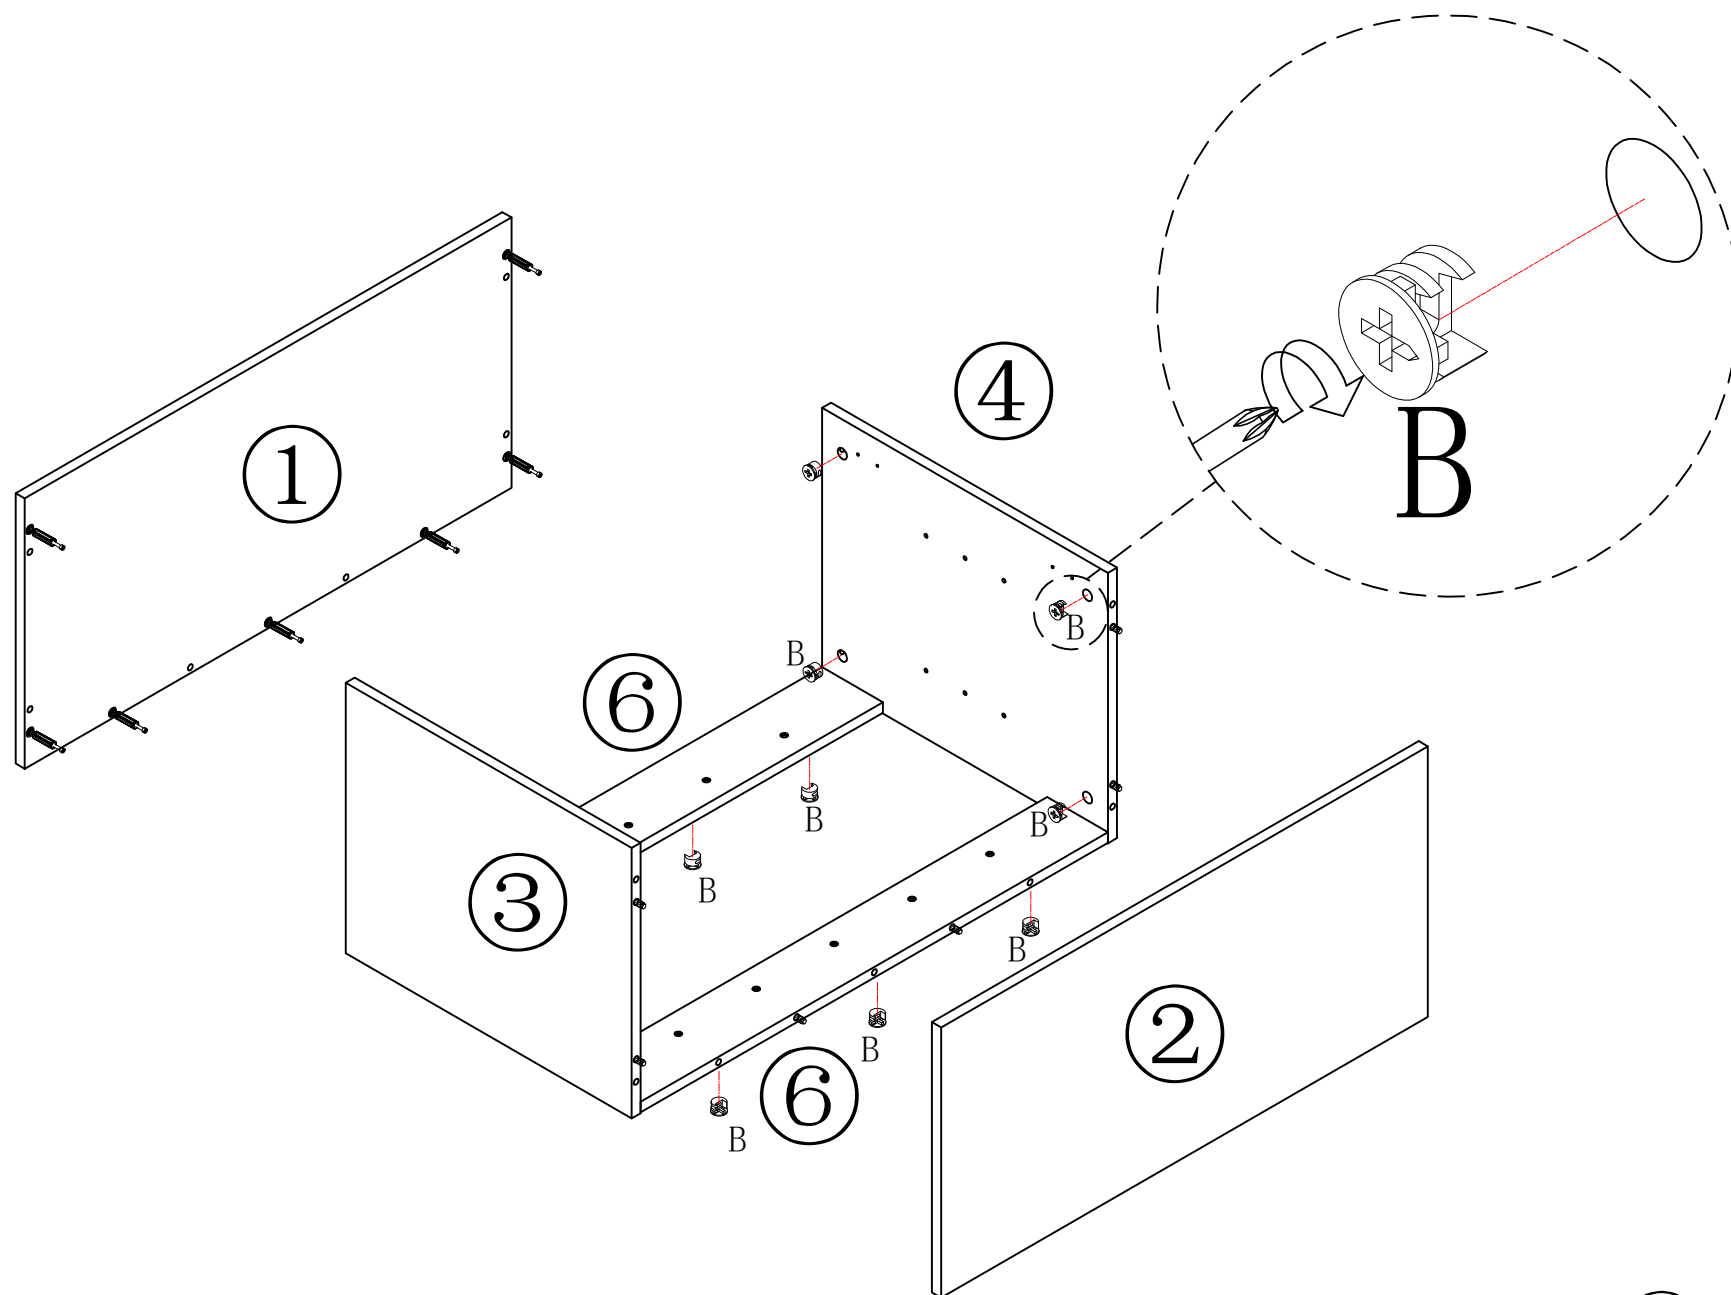


put B on board ③ ④ ⑥



B*14

5






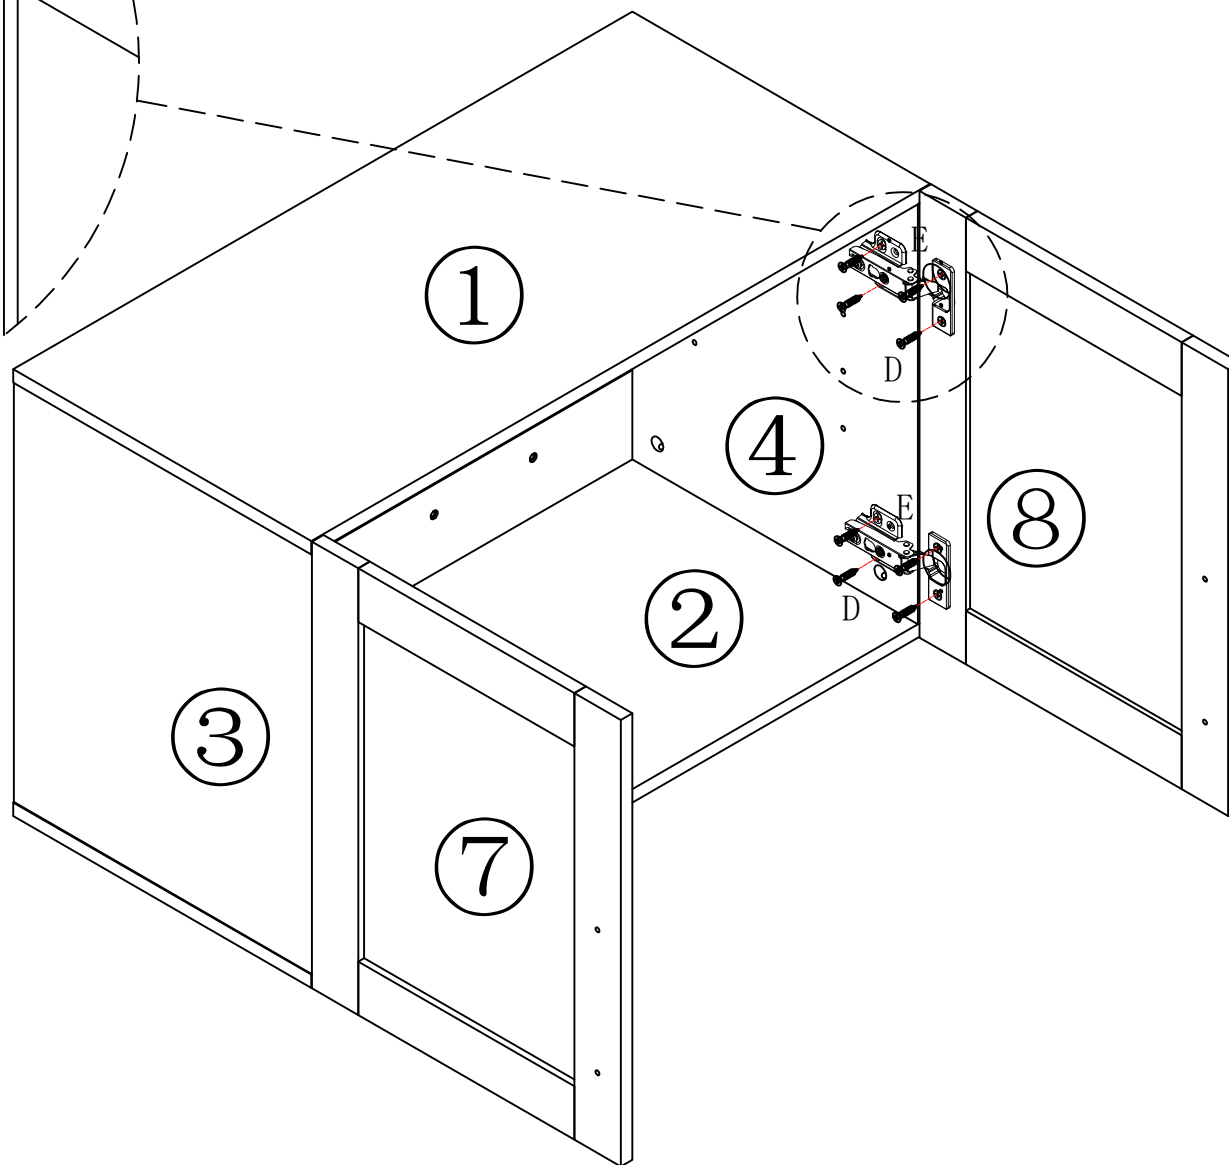
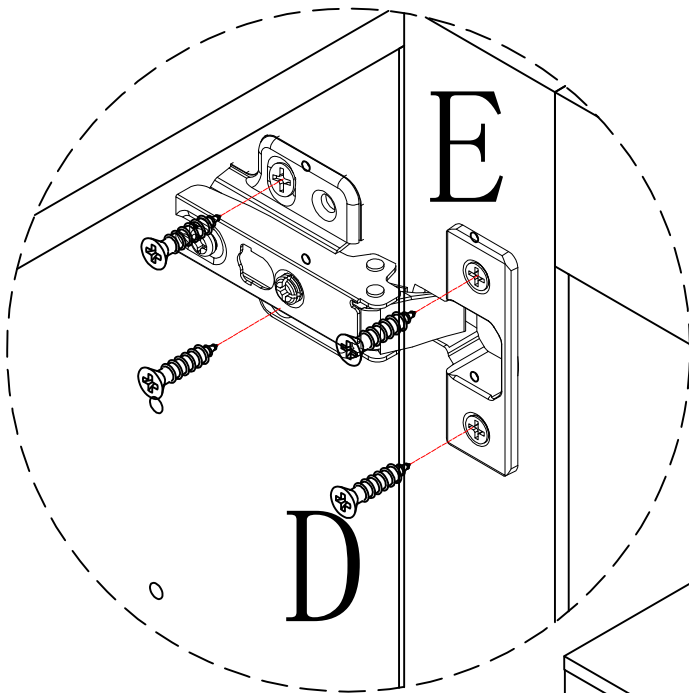


D*16




E*4

7

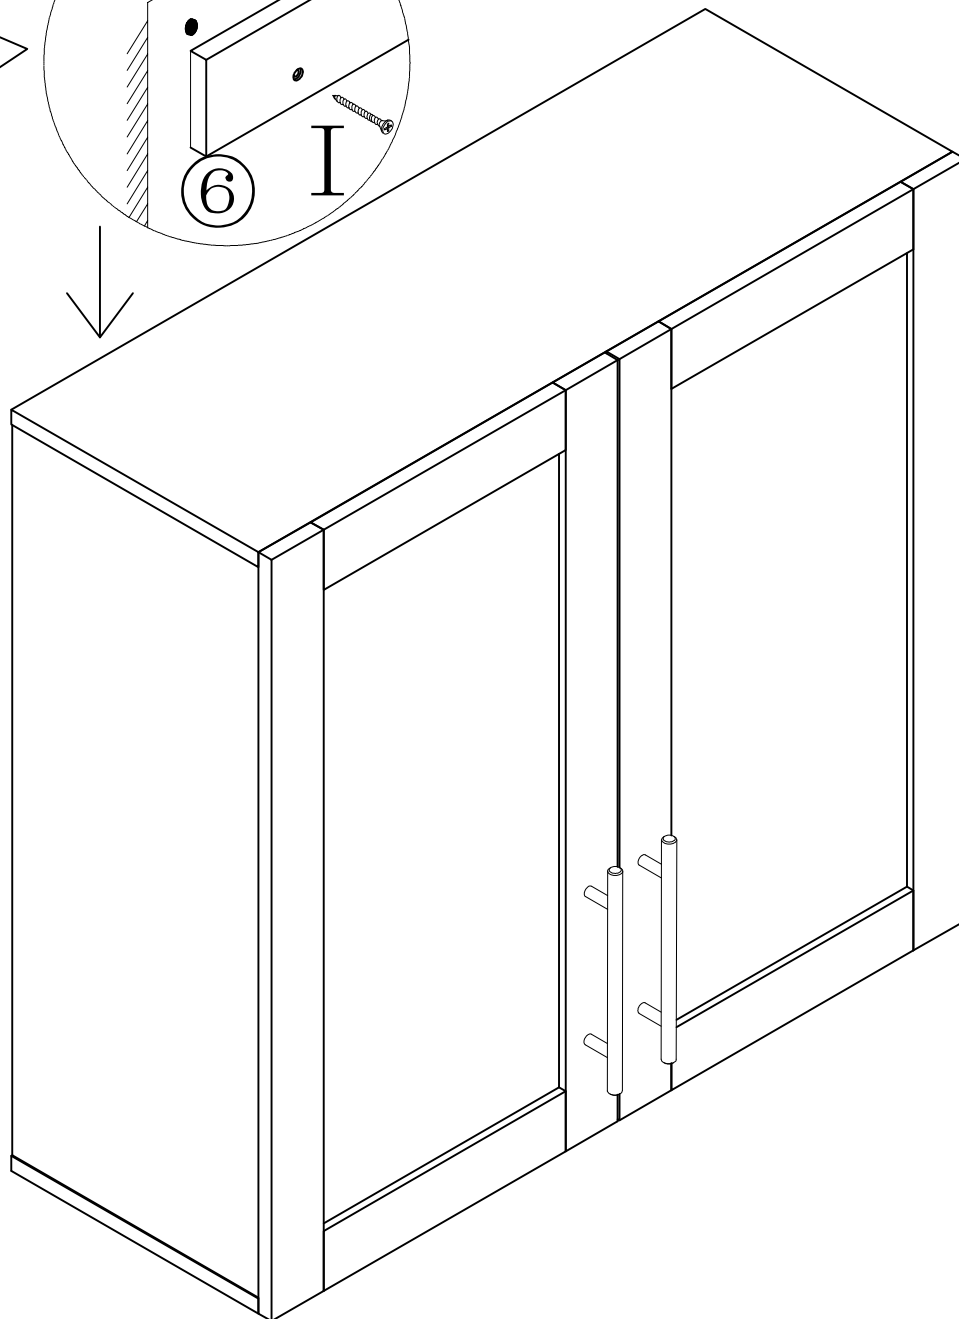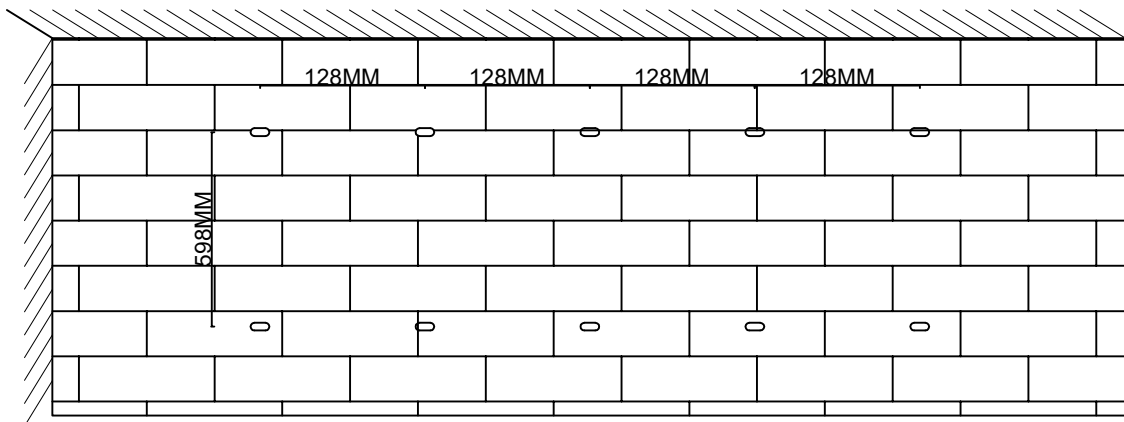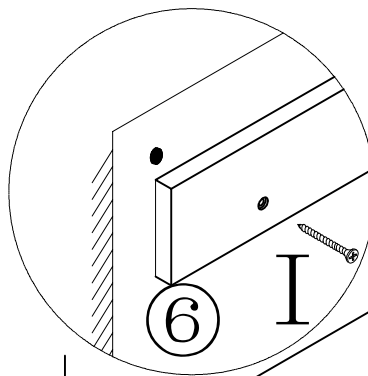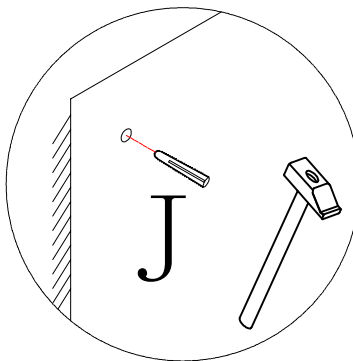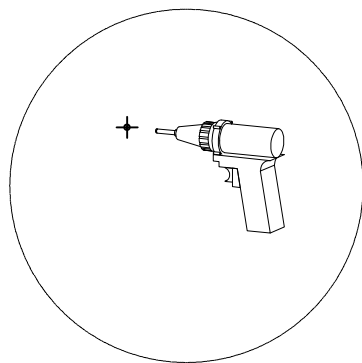


I*10



J*10

8

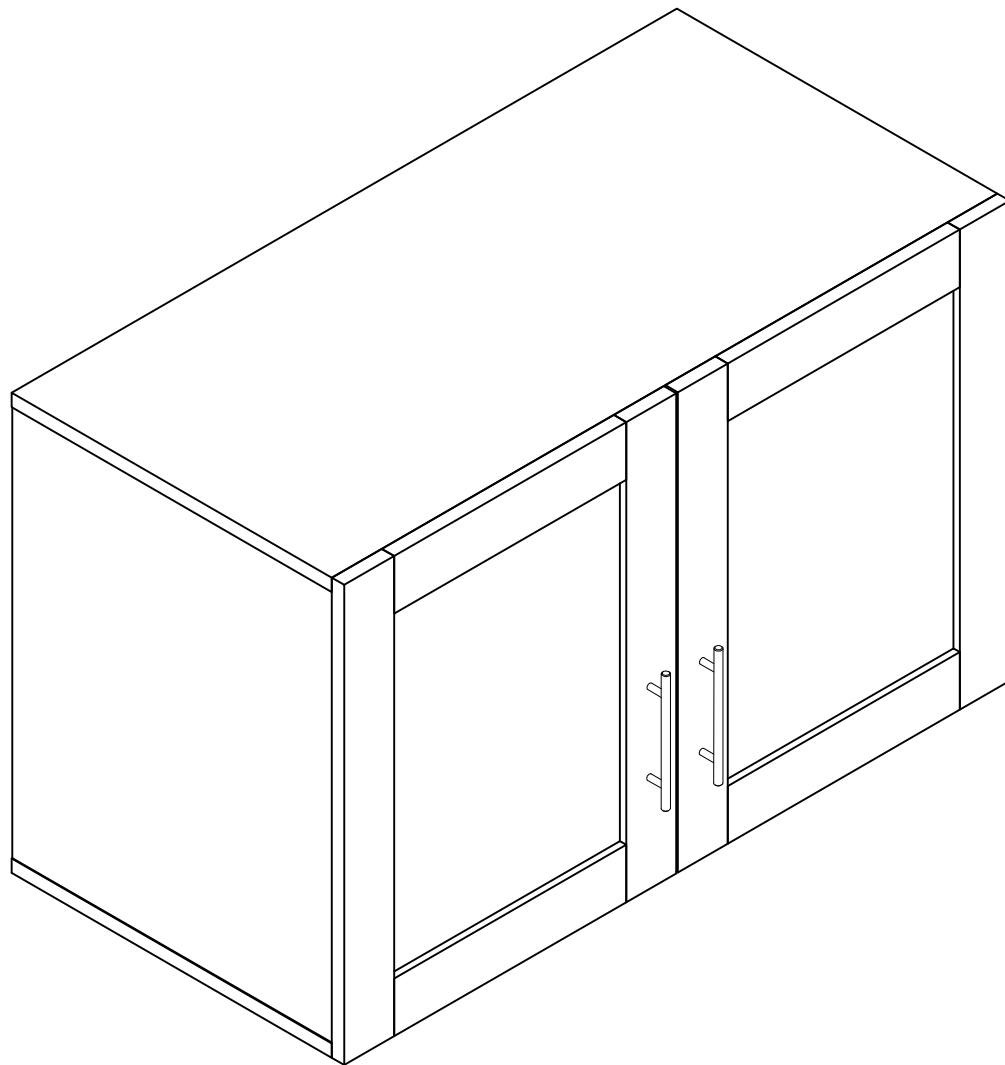

END