

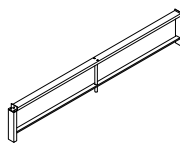







ASSEMBLY INSTRUCTION

UPHOLSTERED STORAGE PLATFORM QUEEN BED





A Headboard **B** Footboard **C** Center Support Bar **D** Rail Section - Front

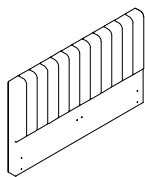





E 1PC Rail Section - Rear **F** 1PC Center Rail - Front / Rear **G** 1PC Center Support Leg **H** 2PCS Drawer Front Board

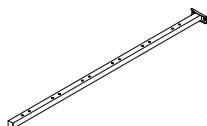


I 2PCS Drawer Side Board **J** 2PCS Drawer Back Board **K** 2PCS Drawer Bottom Frame **L** 4PCS Drawer Bottom Board

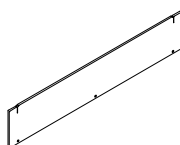


M 8PCS Fabric Cover **N** 4PCS Slat **O** 4PCS Side Slat Connector **P** 4PCS Center Slat Connector

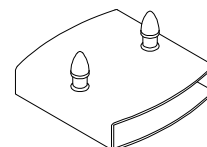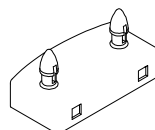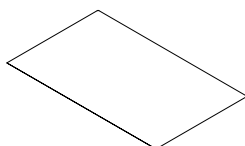









Q 1PC Drawer Board Connector **R** 24PCS Wheel **S** 24PCS Bracket 120*42*27*2mm **T** 12PCS Bracket 27*27*30*2mm




U 8PCS Bolt 1/4"*19mm **V** 20PCS Bolt 1/4"*17.5mm **W** 2PCS Bolt 1/4"*40mm **X** 8PCS Bolt 3/16"*19mm



6PCS 16PCS 10PCS 36PCS



Y Bolt 3/16"*8mm	Z Bolt 1/4"*13mm	AA Bolt 1/4"*19mm	AB Bolt 1/4"*34mm
			
48PCS	8PCS	4PCS	16PCS
AC Nut 3/16"*6.5mm	AD Washer Ø16mm	AE L-Allen Key 4mm	AF Ratchet Tool 4mm
			
8PCS	48PCS	1PC	1PC

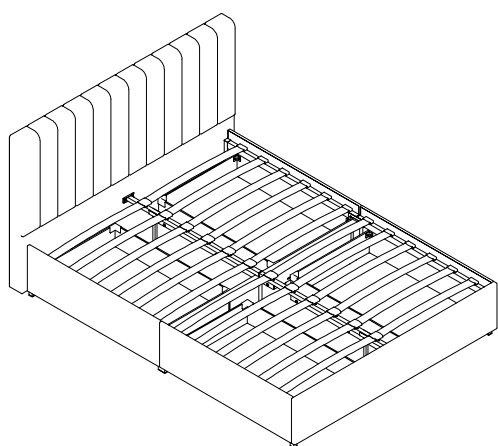

These pages list all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


How to Use the Ratchet Tool (AF)

1. Before assembling the furniture, please adjust the lock as needed.

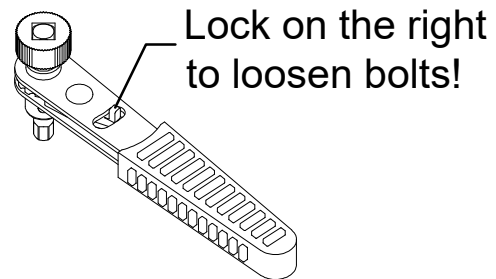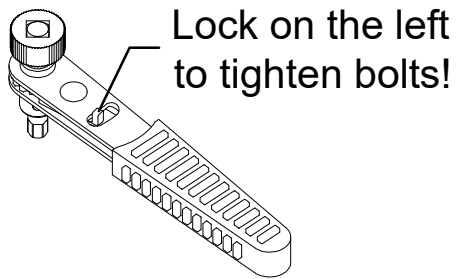


2. Tighten or loosen bolts.

- **Tighten bolts:** Locate the turncap and rotate it clockwise to screw the bolt quickly until it cannot be rotated any more. Then start rotating the handle clockwise to finalize tightening the bolt.

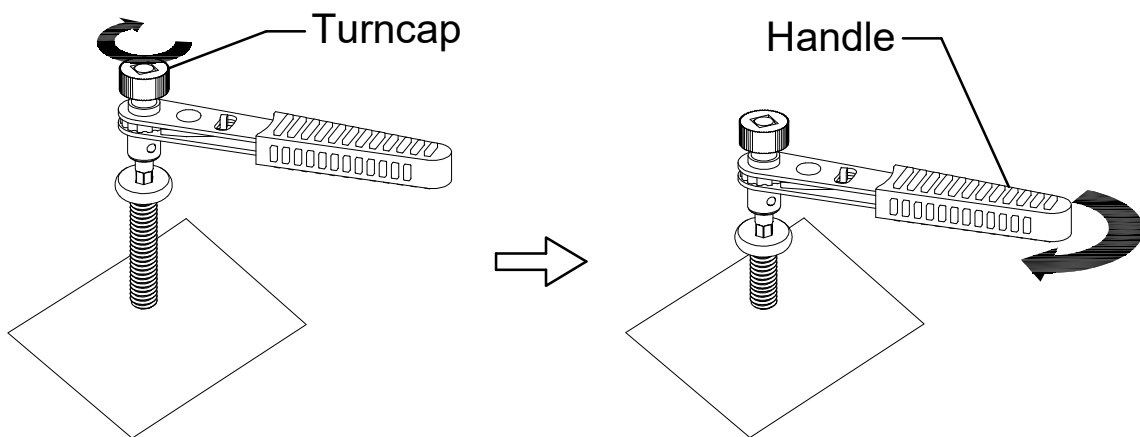


- **Loosen bolts:** Rotate the handle counterclockwise to loosen the bolt. Then continue rotating the turncap in the same direction to remove the bolt completely.

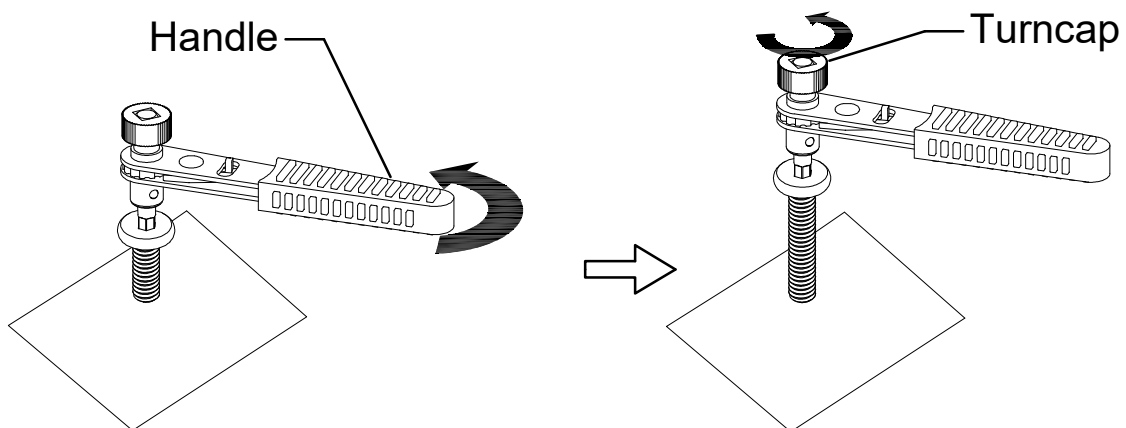


1

Attach the Bracket (S) to Center Support Bar (C), insert the Bolt (U), turn the Ratchet Tool (AF) to tighten them.

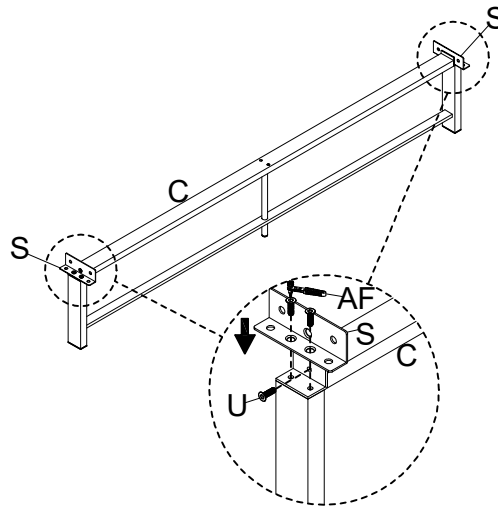


2

Attach the Bracket (S) to the Rail Section - Front (D) and Rail Section - Rear (E), insert the Bolt (V), turn the Ratchet Tool (AF) to tighten them.

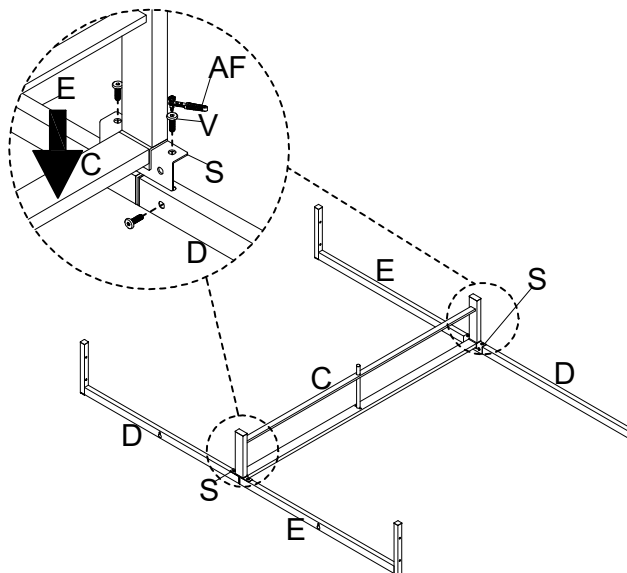


3

Cover the Fabric Cover (M) to the Headboard (A). Attach the Headboard (A) and the Footboard (B) to the assembled Rail Sections (D) & (E), insert the Bolt (W), turn the Ratchet Tool (AF) to tighten them.

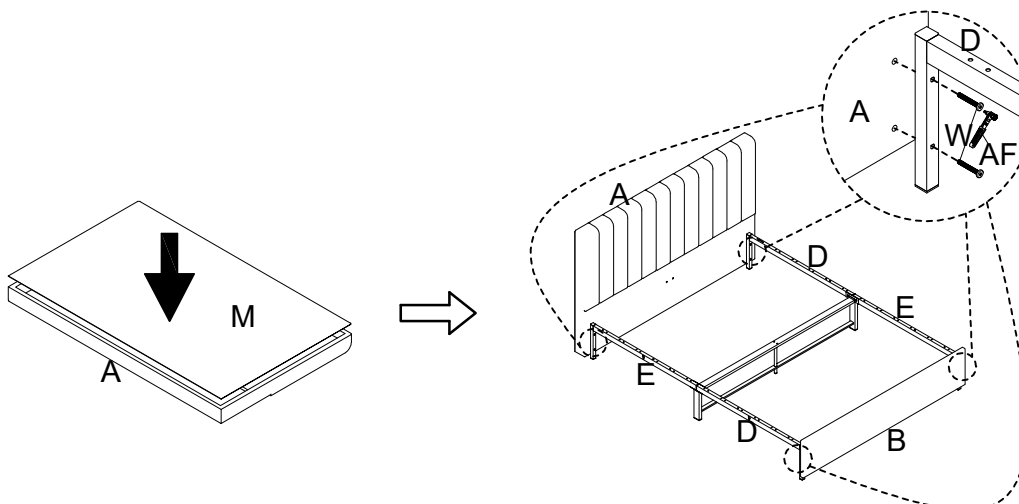


4

Attach the Center Support Leg (G) to the Center Rail - Front / Rear (F), insert the Bolt (V), turn the Ratchet Tool (AF) to tighten them.

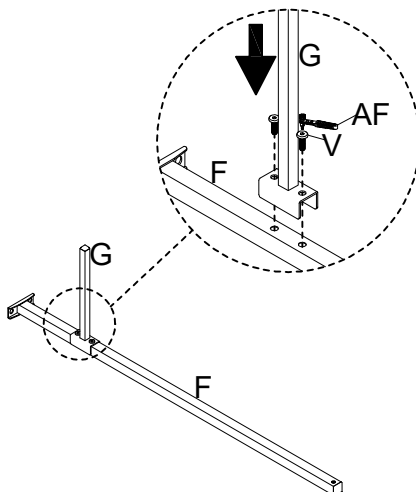


5

Attach the Center Rail - Front / Rear (F) to the Headboard (A) and the Footboard (B), insert the Bolt (V), turn the Ratchet Tool (AF) to tighten them. Then attach the Center Rail - Front / Rear (F) to the Center Support Bar (C), insert the Bolt (W), turn the Ratchet Tool (AF) to tighten them.

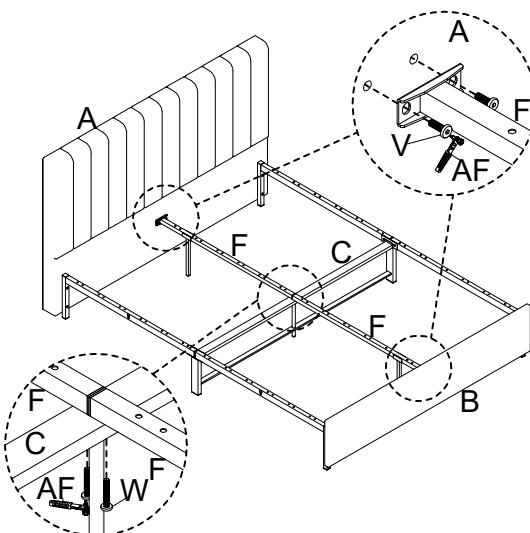


6

Insert the Side Slat Connector (O) to the Slat (N). Press the Side Slat Connector (O) to the holes of Rail Sections (D) & (E). Insert another side of Slat (N) to the Center Slat Connector (P), press the Center Slat Connector (P) to the holes of Center Rail - Front / Rear (F).

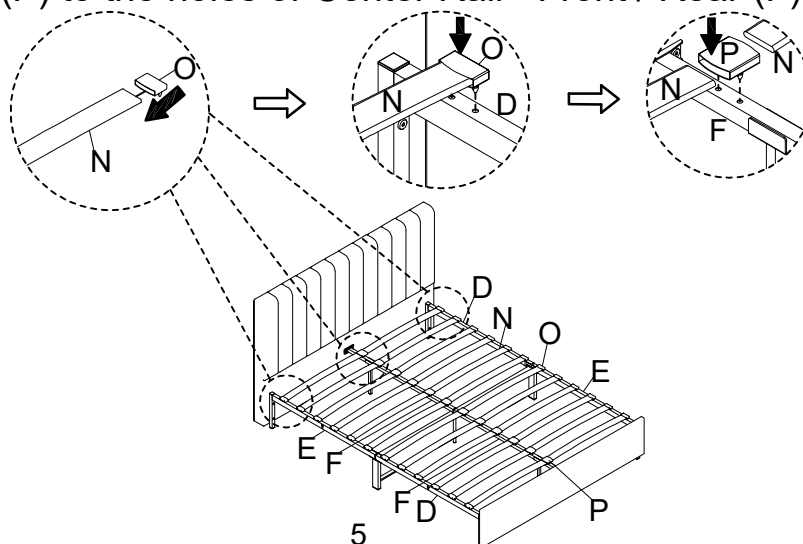


7

Attach the Wheel (R) to the Drawer Bottom Frame (K), insert the Bolt (Y), turn the Ratchet Tool (AF) to tighten them.

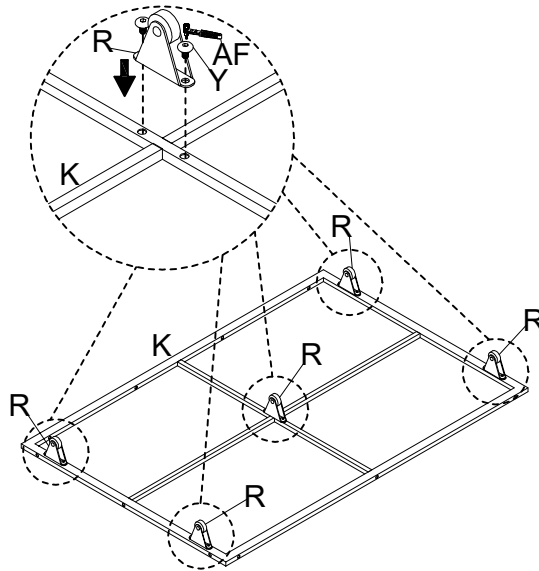


8

Attach the Drawer Front Board (H) to the Drawer Bottom Frame (K), insert the Bolt (AB), turn the Ratchet Tool (AF) to tighten them.

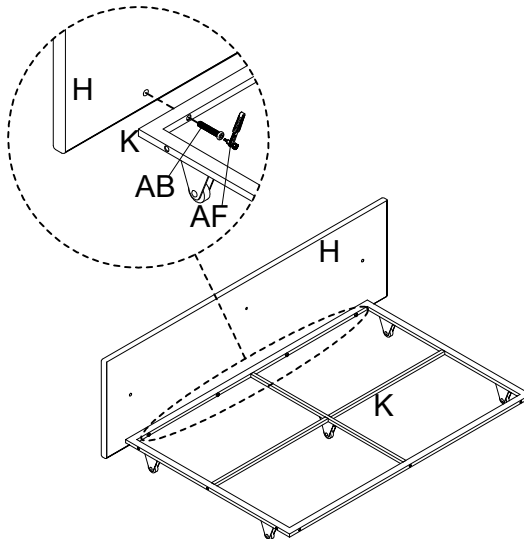


9

Attach one Drawer Side Board (I) to the Drawer Bottom Frame (K), insert the Bolt (X) and Washer (AD), turn the Ratchet Tool (AF) to tighten them.

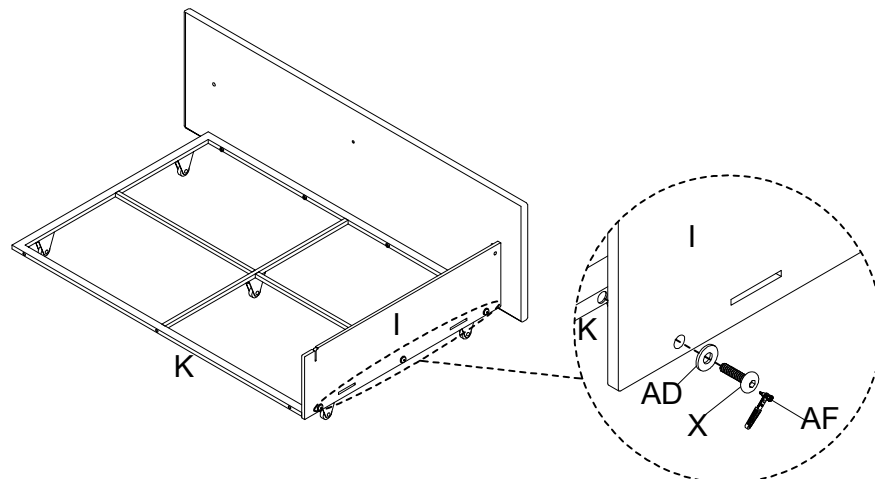


10


Insert the Drawer Bottom Board (L) to the assembled Drawer Side Board (I).

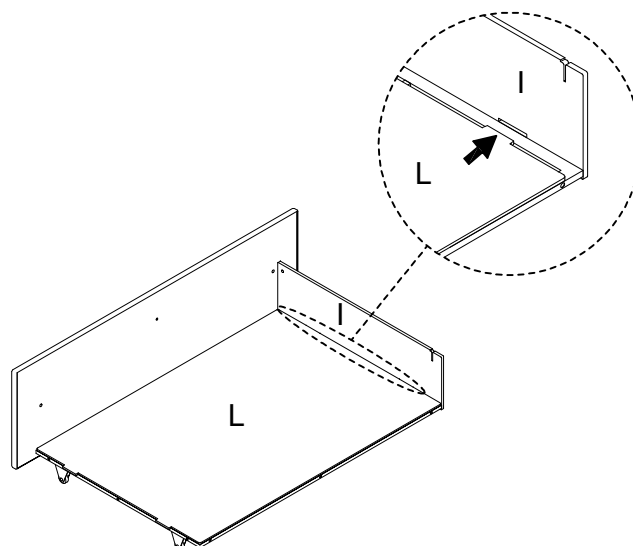**11**

Insert another Drawer Side Board (I) to the Drawer Bottom Board (L) first, and attach the Drawer Side Board (I) to the Drawer Bottom Frame (K), then insert the Bolt (X) and Washer (AD), turn the Ratchet Tool (AF) to tighten them.

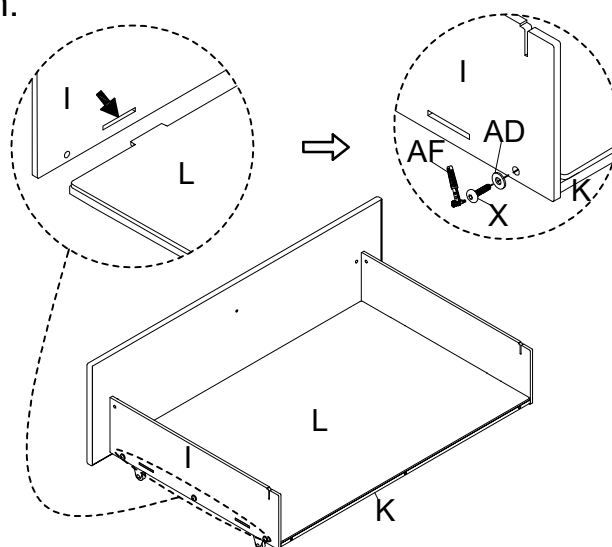
**12**

Attach the Drawer Back Board (J) to the Drawer Bottom Frame (K), insert the Bolt (X) and Washer (AD), turn the Ratchet Tool (AF) to tighten them. Attach the Drawer Board Connector (Q) to the assembled drawer, insert them into correct places.

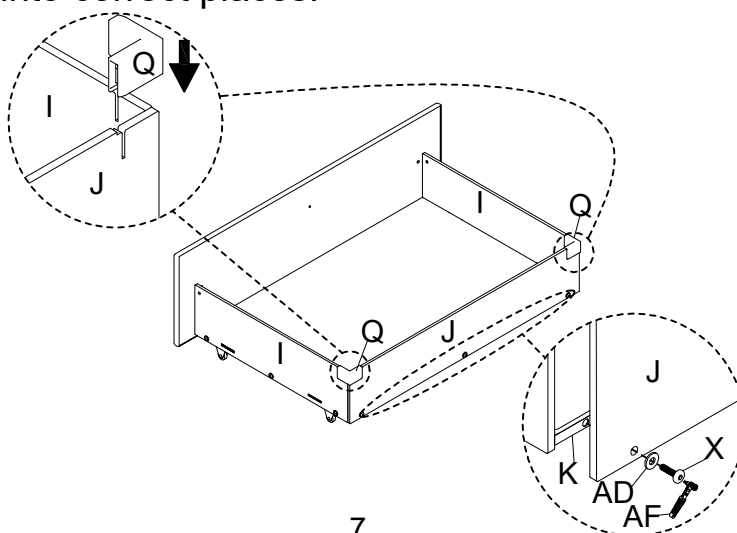


13

Attach the Bracket (T) to the assembled drawer, insert the Bolt (Z), turn the Ratchet Tool (AF) to tighten them. And insert the Bolt (Y), Washer (AD) and Nut (AC), turn the L-Allen Key (AE) and Ratchet Tool (AF) to tighten them.

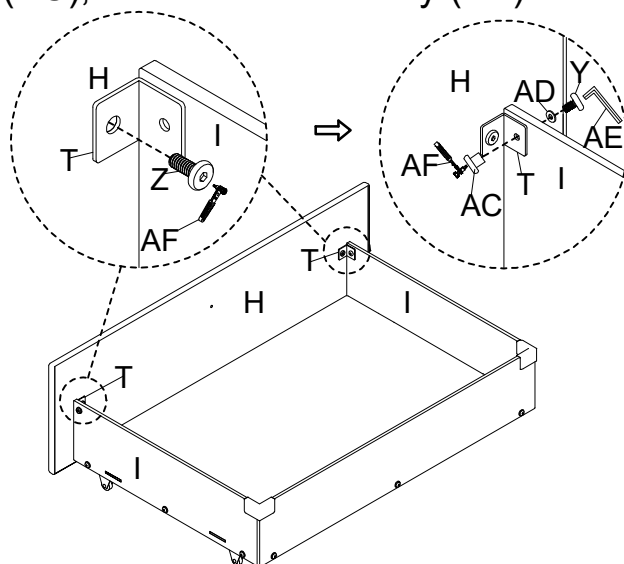


14

Insert the Bolt (AA) and Washer (AD) to the back of Drawer Front Board (H), turn the Ratchet Tool (AF) to tighten them.

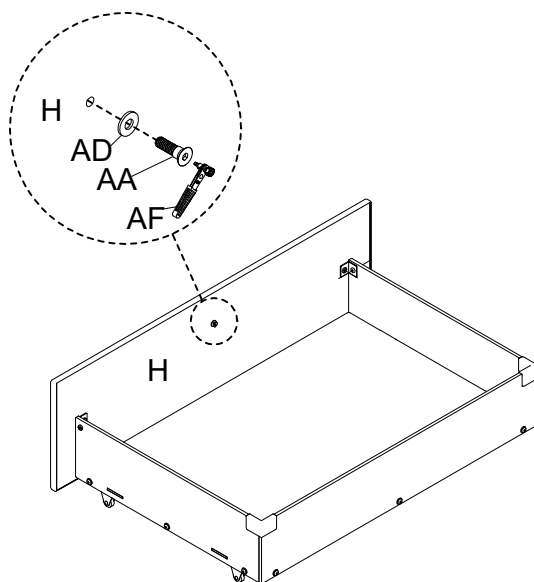


15

Align drawers with the bed frame and push them into the bed. Lock drawers by slightly lifting drawers and inserting the Pins that the heads of Bolts (AA) into the Slots.

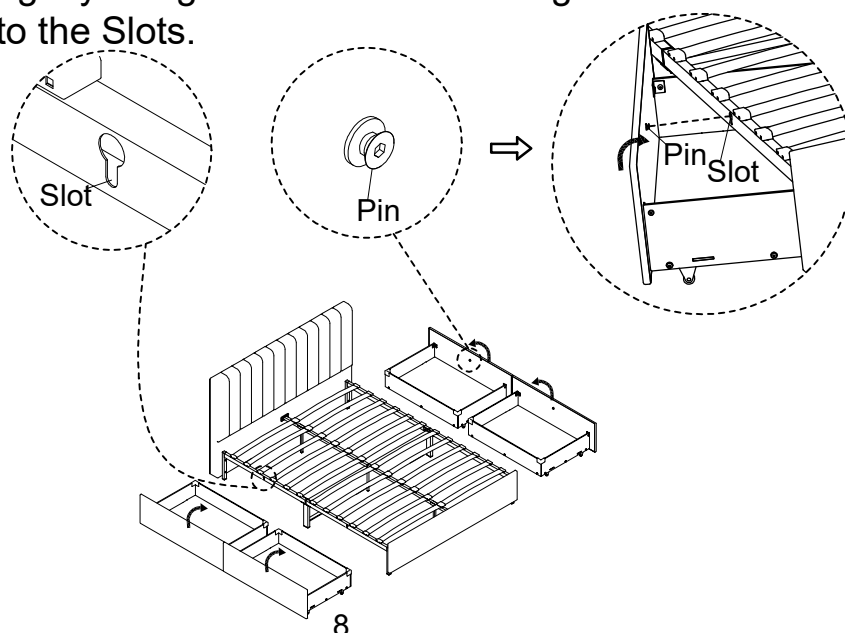

16

When pull out the drawers, lift the drawers first in order to make the Pins released from the Slots freely, then pull the drawers toward outside.
DO NOT PULL OUT THE DRAWERS DIRECTLY.

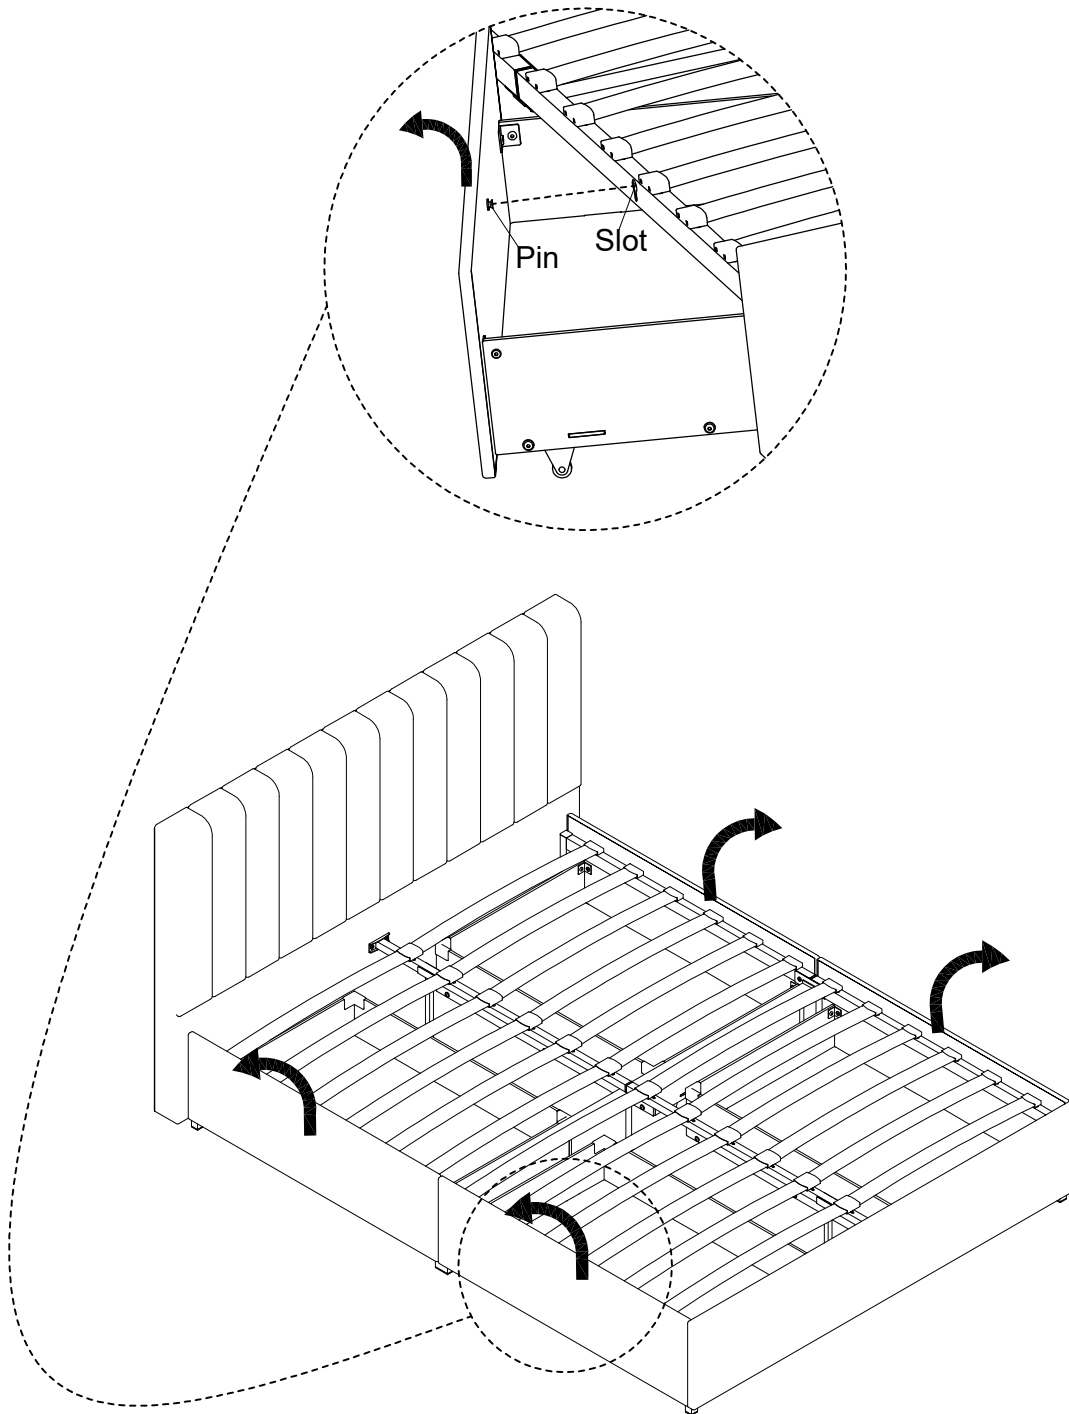

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.